
reference manual

# intelligent graphics

HEWLETT D PACKARD

# reference manual

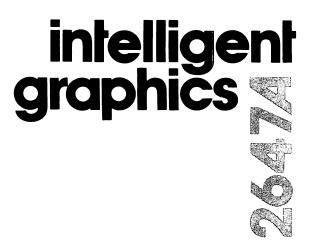



HEWLETT-PACKARD COMPANY 19400 HOMESTEAD ROAD, CUPERTINO, CALIFORNIA, 95014

#### **NOTICE**

The information contained in this document is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another program language without the prior written consent of Hewlett-Packard Company.

This manual provides detailed programming and accessory installation information for the HP 2647A Intelligent Graphics Terminal. It is written to provide a system programmer with the information needed to use the terminal in a variety of applications. Extensive information explaining the operation of the terminal's data communication function is provided in a separate section.

This manual assumes that you are already familiar with operating the terminal from the keyboard. Operating information is given in the *HP 2647A Intelligent Graphics Terminal User's Manual* (02647-90001). The *HP 2647A Service Manual* (02647-90003) provides a discussion of troubleshooting, repair, and theory of operation.

The HP 2647A Terminal is capable of executing BASIC programs directly without the need of a host computer system. A complete description of how to access BASIC is given in the HP 2647A User's Manual (part no. 02647-90001). A description of the BASIC language is contained in the Terminal BASIC Manual (part number 02647-90005).

#### **HOW TO USE THIS MANUAL**

This manual describes all of the terminal's programmable features. The various functional groups such as display control and communications are described in separate sections. If you have not used an HP terminal before, you should read Section I for a brief overview of the terminal and its capabilities. Information on the terminal's graphics functions is contained in Section III. If you are familiar with the HP 2645 series terminals you can use the index at the back of the manual to locate answers to specific questions.

This manual is made up of the following sections and appendices:

Section I. *General Description* — This section provides a brief description of the terminal, its architecture, and overall operation.

Section II. Display Memory and Terminal Control Functions — This section contains information for controlling the terminal's alphanumeric display. Included are cursor sensing and positioning, fields, edit operations, and display enhancements. This section also contains information for programmatically controlling the terminal's switch settings.

Section III. *Terminal Graphics Functions* — This section contains information for controlling the terminal's graphics modes and functions.

Section IV. *Device Control* — This section describes how to control operational input/output devices (cartridge tape drives, printers, etc.)

Section V. Data Communications — This section describes the terminal's communication function and gives procedures for configuring the terminal to meet various communication requirements.

Section VI. Status — This section describes how to obtain and interpret terminal status.

Section VII. *Installation* — This section contains step-by-step procedures for installing and configuring the terminal and its accessories.

Section VIII. HP-IB Configurations — This section describes how to configure terminal networks using the Hewlett-Packard Interface Bus.

Appendix A. Applications — This appendix contains examples of various terminal applications.

Appendix B. Reference Tables — This appendix contains condensed reference information for all of the terminal's features.

Appendix C. Communications Flowcharts — This appendix contains flowcharts of the communication function.

Appendix D. Cartridge Tape Rethreading Procedure — This appendix contains a procedure for rethreading cartridge tapes.

#### **TERMS AND CONVENTIONS**

The descriptions in this manual use the following text conventions:

[<>] — The right and left bracket, less than, and greater than characters are used to set off variable parameters in some escape code sequences. These characters are added for descriptive purposes and are not a part of the escape sequence. They should not be transmitted.

Example: <code>F & p [<"from" device code>s]</code>

<character>c or character> — When a character is shown followed by a superscript c or is shown preceded by the key, it indicates a control character. Control characters are normally generated from the keyboard by holding the key down while pressing the character.

Example:  $G^c$  = bell character = G.

Graphics control functions labeled on the sides of the graphics control keys are accessed by holding the key down while pressing the function key. Normally the symbols for the shifted graphics keys are shown as trapezoids. For example, to make a change in the graphics text size from the keyboard, hold the key down and press (1880). This would be shown as:

# **CONTENTS**

	age 1	Terminal Control Functions	. 2-13
GENERAL DESCRIPTION		Latching Keys	. 2-13
Introduction	1-1	Keyboard Interface Switches	. 2-14
Mainframe		Programmable Soft Keys	. 2-14
Microprocessor	1-1	Controlling the Soft Key Menu	. 2-14
Display		Defining Soft Keys	
Terminal Bus	1-3	Displaying the Soft Key Labels	. 2-16
Terminal Memory	1-3	Triggering Soft Keys	
Input/Output Modules	1-3	Soft Key Applications	
CRT Monitor		Additional Control Functions	
The Raster		Bell	. 2-17
Alphanumeric and Microvector Character Sets	1-4	Send Display	
Display Features and Alternate		Wait	
Character Sets	1-4	Keyboard Disable/Enable	
Keyboard		Reset Terminal	
The Firmware		Monitor Mode	
System Monitor		Self-Test	
Keyboard and I/O Subsystem		Modem Disconnect	
Cursor Movement		Program Down Load	
Display Memory Management		Display Message, Command or Soft Key	
Data Communications	1-5	Label Line	2-18
The Tape Units			
•			
	5	Section III	Page
Section II P.	age (	GRAPHICS CONTROL FUNCTIONS	
DISPLAY MEMORY FUNCTIONS		Introduction	3-1
Introduction	2-1	Graphics Display	3-1
Display Memory Functions		Keyboard Graphics Functions	3-1
Display Control	2-1	Programming Graphics Functions by	
Display Window Control	2-1	Escape Sequences	3-1
Display Workspace		Control Codes	3-3
Message, Command, Softkey Label Line		Commands	
Memory Addressing Scheme		Parameters	3-3
Cursor Sensing		Graphics Display Control	
Cursor Positioning	2-4	Graphics Cursor Control	3-4
Other Cursor Operations		Zoom	3-5
Tabs		Graphics Memory Control	3-5
Margins		Inserting Delays In Graphics Operations	3-6
Alphanumeric Display On/Off		Graphics Drawing Mode Parameters	3-6
Edit Operations		Drawing Modes	3-6
Insert Character With Wraparound		Drawing Patterns	3-8
Delete Character With Wraparound	2-7	Area Fill	. 3-12
Moving Text Blocks	2-8	Relocatable Origin	. 3-13
Forms Mode (Format Mode)		Rubber Band Line	. 3-14
Protected Fields		Selecting the Graphics Default Parameters	. 3-14
Unprotected Fields	2-8	Plotting Sequences	. 3-14
Transmit Only Fields	2-9	Pen Control	
Data Checking		Vectors	. 3-15
Tabbing	2-9	ASCII Formats	3-15
Editing		Binary Formats	. 3-16
Building the Form 2		Recording Graphics Functions	
Sending Data to the Computer 2		Raster Data Transfers	
Display Enhancements	2-10	Raster Output Format	
Alternate Character Sets	2-10	Sending Image Data from CPU to the 2647	. 3-20
Selecting Alternate Sets		Reading the Image Memory	
Using Alternate Sets	2-11	Summary of Commands	. 3-24

Section III (Continued) Page	Section V Page
Graphics Hardcopy Operations	DATA COMMUNICATIONS
Graphics Text	Introduction 5-1
Keyboard Control of Graphics Text 3-25	Connecting Terminals to a Computer5-1
Program Control of Graphics Text	Networks
Multiplot	Interfaces 5-1
Plotting Pie Charts	Interface Signals
Plotting Bar Charts	Modems
Plotting Linear Charts	Communication Protocols
Compatibility Mode	Character Protocols
Compatibility Mode Straps	Block Protocols
Graphics Data	Character Protocols
Graphics Data Format	Operating at High Speeds
Text	Character Mode
Compatibility Mode	Block Mode5-9
Compatibility Mode5-39	Full Duplex Operation
	Teletype Compatible Communications5-9
	Half Duplex Operation(202 Modem
Section IV	Compatibility)5-9
DEVICE CONTROL	Monitor Mode
Introduction 4-1	Configuration
Using the <sup>£</sup> , c Generalized Escape Sequence 4-1	Block Protocols with 13260C or 13260D
Assign	Communications Accessory
Bye 4-4	Character Mode Transfers
Close 4-4	Multi Character Transfers
Compare	Message Blocks
Condition	Block Operation
Copy 4-5	Block Protocol Control Sequences5-27
Enable/Disable (Edit Mode, Record Mode, or	Multipoint Communications5-34
Verify Mode 4-5	Control Sequences
Display	Configuration Procedure 5-38
Execute	Monitor Mode
Exit 4-6	Driver Mode 5-46
Find	
Hello 4-7	
Mark 4-7	
Report	Section VI Page
Resume	STATUS
Rewind 4-7	Introduction
Set	Interpreting Status         6-1           Terminal Status         6-1
Show	
Skip	Primary Terminal Status
Suspend4-8	Device Status
Tell	Graphics Status6-8
Transfer	Read Device I.D. 6-8
Using the tap Generalized Escape Sequence 4-10	Read Current Pen Position6-8
Selecting Input/Output Devices 4-11	Read Graphics Cursor Position6-9
Controlling the Devices	Read Cursor Position with Wait6-9
Cartridge Tapes	Read Display Size
Display	Read Device Capabilities6-9
Printer 4-12	Read Graphics Text Status6-10
Transferring Data From Device to Computer 4-12	Read Zoom Status 6-10
ASCII Transfers	Read Relocatable Origin 6-10
Binary Transfers 4-12	Read Reset Status 6-10
Transferring Data From Computer to Device 4-13	Read Area Shading Capability 6-11
Copying a Record	Read Graphic Modification Capabilities 6-11
Copying a File4-13	Any Other Parameters 6-11
Copying to End of Medium 4-14	Command Status
Fast Binary Read (Program Loading) 4-14	File System/User Interface Errors 6-12
Indicating Successful Completion of a	BASIC Interpreter Errors 6-17
Program-Controlled Function 4-14	AGL Errors

Section VII Page	Section VIII	Page
INSTALLATION	HP-IB CONFIGURATIONS	Ū
Introduction	Introduction	. 8-1
Opening the Terminal	Cabling Considerations	. 8-2
Grounding Requirements		. 8-3
Selecting Line Voltage	Operational Considerations	. 8-3
Accessory Installation Procedures	Local HP-IB Testing	. 8-8
HP 13231A Display Enhancements		
HP 13232 Cable Assemblies	Device Considerations	. 8-4
32K RAM Memory PCAs	Sample Configurations	. 8-4
32K Control Memory PCAs		
HP 13238A Terminal Duplex Register 7-12		
HP 13246A/B Printer Subsystem (9866) 7-12	Appendix A	Page
HP 13250B Serial Printer Interface		. A-1
HP 13254A Video Interface		
HP 13260A,B,C,D Data Communications	Multipoint Example	. A-:
Accessories		
13296A Shared Peripheral Interface 7-14	Forms Building	. A-4
HP 13349A Printer Subsystem (9871) 7-17		. A-4
Power Supply Adjustment		
Selecting Optional Operating Functions 7-17		
Data Communications Cabling		
Interface Signals		Page
Logic Levels	REFERENCE TABLES	. B-
Cable Types		
Point-to-Point Communications Cabling 7-29		
Multipoint Communications Cabling 7-29	Appendix C	Page
Power Down Protect Cabling	COMMUNICATIONS FLOWCHARTS	. C-
Fabricating Your Own Data Communica-		
tions Cable		
Self-Test	Appendix D	Page
Basic Self-Test		_
Cartridge Tape Unit Self-Test7-43		. D-
Data Communications Self-Test 7-43		
HP-IB Self-Test		

Terminal-to-Terminal Loop-Back Test ...........7-49

# **ILLUSTRATIONS**

Title	Page	Title	Page
Terminal Architecture	1-2	Sample Data Transfers Using	
Character Cell	1-3	Reverse Channel Protocol	5-18
System Monitor Basic Loop		Point-to-Point Data Communications	
Display Memory Linked List Structure		Configuration Flowchart	5-19
Display Features	2-2	Examples of Block Transmissions	
Three Examples of Display Memory Al	location	Operation of Block Protocol	
to the Four Display Workspaces		Control Characters	5-29
Row Addressing	2-4	Block Keyboard Data Communication	
Column Addressing		Switches	5-33
Character Delete With Margins	2-7	Terminal Addressing	5-36
Character Delete With Wraparound	2-7	Typical Configuration Status Request	
Character Set Locations	2-11	and Response Sequence	5-38
Example Using the Math Set	2-11	Configuration Status Byte Contents	
Example Using the Large Character Se	et 2-11	Multipoint Data Communications	
Math Set Elements	2-12	Configuration Flowchart	5-40
Large Character Set Elements	2-12	Communication Line Using a Monitor	
Line Drawing Set		Sample Data Transfers Displayed in	
Sample Form	2-13	Monitor Mode	5-45
Location of Graphics Keys	3-1	Character Distortion in Group Poll	
Examples of Drawing Modes	3-7	Data Overflow Indication	
Predefined Line Type Patterns	3-8	Driver Mode Configuration	
Using Area Patterns As Line Types	3-9	Sample Select Sequence Using Driver Mode	
Examples of User Defined Line Pattern	ns 3-9	Control Character Display On Driver Terminal	
Area Pattern Examples	3-11	Terminal Input	5-47
Relocatable Origin	3-13	Primary Terminal Status Example	
Current Pen Position and New End Po	int 3-15	Secondary Terminal Status Example	6-4
Recording Graphics Sequences		Device Status Example	6-6
Raster Data Format	3-20	Opening the Terminal	7-2
Raster Data X and Y Offsets	3-21	Mainframe Bottom Part Locations	7-3
Raster Data Positioning	3-22	Mainframe Top Part Locations	
Raster Data Windowing	3-23	Fuse Positions for 115 VAC and 230 VAC	
Graphics Text Characters		Line Voltage	7-5
Graphics Text Sizes		Sample Character Set Configuration	
Graphics Text Direction	3-26	Display Enhancement PCA Jumper and ROM	
Graphics Text Justification	3-28	Socket Locations	7-7
Blank Pie Chart Menu		Top Plane Assembly Removal	
Completed Pie Chart Menu		32K RAM PCA Jumper Settings	
Blank Bar Chart Menu	3-31	Control Memory PCA Jumper Settings	7-11
Completed Bar Chart Menu	3-32	Typical Memory Map	
Blank Linear Chart Menu		Terminal Duplex Register PCA	
Completed Linear Chart Menu	3-34	Jumper Configuration	7-12
Turning on Compatibility Mode	3-37	Control Memory PCA Data Comm Firmware	
Comparison of a Terminal With 1024 >	780 Display	IC Locations	7-14
and the HP 2648A	3-37	Installing Keyboard Overlays	7-15
Scaled Data	3-38	Typical Strapping Option Switch Assembly	7-18
Unscaled Data	3-38	Keyboard Interface PCA Strapping Options	
Terminal Network Configurations	5-2	Extended Asynchronous Communications	
Block Transfer Enabled by the ENTER	Key 5-8	PCA Strapping Options	7-22
Block Transfer Enabled by the Comput	er5-8	Asynchronous Multipoint Communications	
Block Mode Operation	5-10	PCA Strapping Options	7-26
Example of Format Mode with Page St	rapping 5-11	Synchronous Multipoint Communications	
Main Channel Protocol	5-15	PCA Strapping Options	
Sample Data Transfers Using Main		Point-to-Point Communications Cabling	7-29
Channel Protocol	5-16	Current Loop Cabling	
Reverse Channel Protocol	5-17	Modem By-Pass Cabling	

Title Page	Title Page
Asynchronous Multipoint Cabling	Shared Plotter/Line Printer Configuration 8-5 3-terminal, Shared Plotter/Printer Configuration 8-5 5-terminal, Multiple Plotter/Printer Configuration 8-5 Sample Form A-1 Soft Key Programming and Soft Key Labels for File 1 A-5 Soft Key Programming and Soft Key Labels for File 2 A-5 Soft Key Programming and Soft Key Labels for File 3 A-5
Basic Terminal Self-Test Flowchart 7-40 Basic Data Comm Self-Test Flowchart 7-45 Multipoint Data Comm Self-Test Flowchart 7-48 HP-IB Interconnecting Cable 8-1 HP-IB Interface Adapter 8-1 Selecting Additional Device Loads 8-3 Terminal-to-Plotter Configuration 8-4	

# **TABLES**

Title	Page	Title Page
Cursor/Display Operations	2-6	ASCII Status Characters 6-1
Edit Operations	2-7	Graphics Status Requests
Keyboard Interface Switch Summar	v2-14	Display Enhancement PCA Jumper Protocol 7-7
Graphics Control Keys		HP 13232 Cable Assemblies
Summary of Graphics Sequence Type	pes 3-3	Contents of HP 13260 Data Communications
Graphics Display Control Functions	3 3-4	Accessories
Graphics Mode Commands	3-6	HP-IB Interface Switch Settings
Graphics Parameter Default Values	3 3-14	Keyboard Interface PCA Strapping
Graphics Plotting Control Functions	s 3-14	Options for Point-to-Point7-19
Characters Used In Packed Data Fo	rmats 3-17	Keyboard Interface PCA Strapping
Absolute Format Addressing Bytes	3-18	Options for Multipoint7-21
Incremental (Short) Vector Bytes	3-19	Extended Asynchronous Communications
Graphics Control Sequences Used in	า	Interface Strapping Options 7-23
Record Operations	3-19	Asynchronous Multipoint Communications
Summary of Raster Dump Comman	ds 3-24	Interface Strapping Options
Graphics Text Keyboard Functions	3-25	Synchronous Multipoint Communications
Pie Chart Escape Sequences	3-31	Interface Strapping Options
Bar Chart Escape Sequences	3-33	EIA RS232C and CCITTV24 Interface
Linear Chart Escape Sequences	3-34	Data and Control Signals
Compatibility Mode Control Sequen	ces 3-35	Data Communications Signal Levels
Commands for Selecting Compatibil	ity Mode 3-36	Multipoint Data Communication Cables
Coding of Compatibility Mode Grapl	hics Data 3-40	Parts for Fabricating Your Custom
۴,c Generalized Escape Sequence S	yntax 4-2	Data Communications Cable 7-34
Command Syntax Abbreviations	4-4	13260 Series Data Communications PCA
Esp Device Control Escape Sequence	es 4-10	Signal Names
Data Communication Interfaces	5-1	Data Communications Self-Test Connectors 7-44
Data Communication Interface Capa	abilities5-3	Point-to-Point Data Communications
Keyboard Interface Switch Summar	y 5-3	Self-Test Procedure 7-44
Keyboard Communications Switches	5-4	Multipoint Data Communications
Modems	5-5	Self-Test Procedure 7-47
Protocol Characteristics	5-6	HP 9874A Digitizer Driver Using
Terminal Functions	5-7	Rubber Band Line
Keyboard Interface PCA Strapping	Options	Specifications B-2
for Point-to-Point	$\cdots \cdots 5$ -12	Programmer's Reference Table B-3
Parities Available with ASCII Data		Character Code Chart B-8
Block Protocol Control Characters	5-27	Options and Accessories B-9
Summary of Block Protocol Control	Unaracters 5-31	Coding the Large Character Set B-10
Keyboard Interface Straps for Block	Operation	ASCII Character Set
Using 13260C or 13260D Commun	nications	ASCII (7-Bit) Character Codes
Accessory Terminal Address Characters		EBCDIC Character Codes
reminal Address Characters	5-35	

# **GENERAL DESCRIPTION**

#### INTRODUCTION

The Graphics Terminal uses a microprocessor under firmware control. The terminal provides interactive graphics features available under user or program control. Program control may be either the local BASIC language (which may be loaded into the terminal from cartridge tape) or a program running in a remote computer. It operates in character or block mode, with full editing capability. The terminal is designed for such applications as data entry and preparation, information display and editing, interactive programming, data communications, and time-sharing operation.

In addition, an integrated mass storage capability of up to 220 kilobytes of data using two tape cartridges is provided. This allows the terminal to be used for either stand-alone or on-line operation. For example, forms designed at the terminal using the line drawing or other character sets can be stored on a tape cartridge and selectively retrieved from the keyboard or through commands from BASIC running in the terminal or from a remote computer.

Data communications accessories are also available to provide a choice of communications capability. The standard terminal is teletypewriter compatible (EIA RS232-C serial asynchronous, ASCII, half or full duplex). It operates at speeds up to 4800 bits per second, and transmits either character-by-character as a fully interactive terminal or operates on variable length blocks of information. Optional capabilities include 20mA current loop; and either asynchronous or synchronous polling for multipoint communications networks. Also, the terminal can be used with a wide selection of modems over dialed or leased lines.

A block diagram of the terminal is shown in figure 1-1. The terminal has three major and mechanically independent sections: keyboard, CRT monitor, and mainframe. The specific functional properties of the terminal are determined by firmware programs resident in ROM (read-only-memory). It is these programs that make it possible for the terminal to have many powerful features such as self test, dynamic memory allocation, transparent control codes, and off-screen storage.

#### **MAINFRAME**

The heart of the system is the mainframe section, which can be considered a microcomputer system. In the mainframe is the power supply and a bus-oriented logic system containing the microprocessor, program and alphanumeric memory, graphics control and graphics memory, video display subsystem, keyboard interface, and data communications interface. The basic terminal contains

one slot for options and accessories. All mainframe modules are functionally, mechanically, and electrically independent, giving a high degree of flexibility and reducing service time.

### Microprocessor

The terminal uses an 8-bit microprocessor to control most of the terminal's operation. The microprocessor executes code that may be in ROM or RAM memory. It controls the alphanumeric display, programmable functions, and I/O devices.

### **Display**

The terminal uses two separate display memories. An alphanumeric memory is used to hold up to 5,000 characters. Graphic data is stored in a separate graphics memory. The graphics data is stored as a dot pattern containing 259,200 points (720  $\times$  360). Both the alphanumeric and the graphic memories are accessed by the same display circuitry during the refresh cycle.

The display subsystem has two functions that use the bus. Cursor control is an output function and the DMA refresh is a bus requestor for memory read operations.

ALPHANUMERIC DISPLAY. The alphanumeric display is maintained by the Display Control module. It reads ASCII characters and display commands from the display memory. These characters are converted to dot patterns and passed to the display circuitry during the refresh cycle. The Display Timing module provides the timing signals for the display circuitry.

GRAPHICS DISPLAY. The graphic display is maintained by the Graphics Microcontroller and Graphics Display Memory PCA. Graphic data received from the keyboard, data communications interface, or cartridge tape is processed by the Graphics Microcontroller before being stored in the Graphics Memory. Input data is normally in the form of vector end points. The Microcontroller uses the previous vector end point together with the new end point to generate a line of display dots that approximate the line. These dots are then stored in the Graphics Memory.

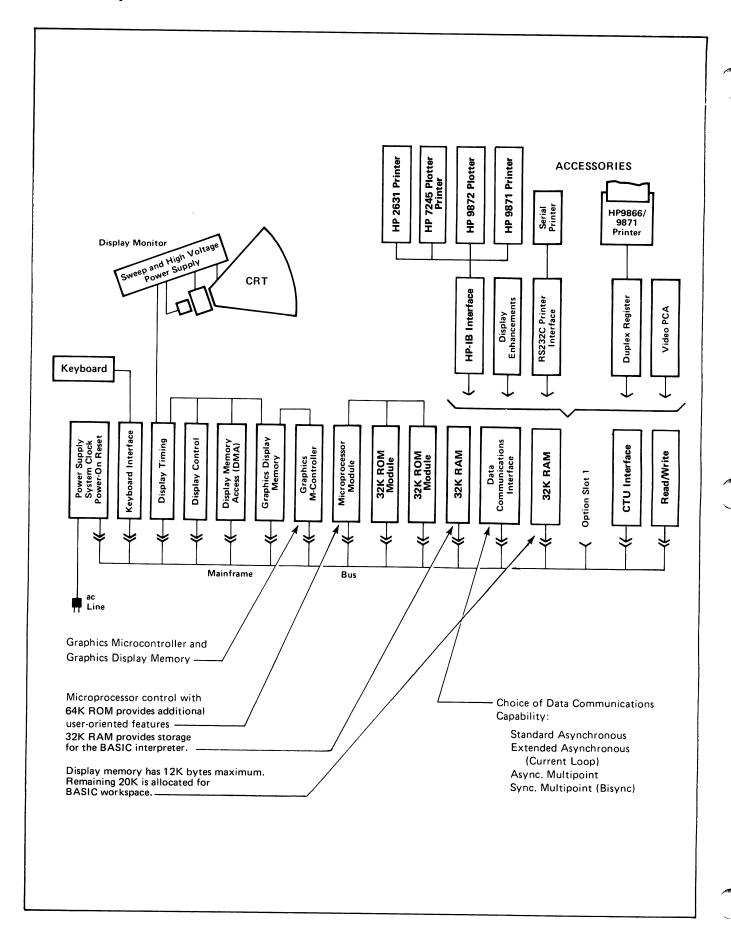


Figure 1-1. Terminal Architecture

#### **Terminal Bus**

A major element of the logic system is the terminal bus (a printed circuit board with connectors) which is attached to the bottom of the mainframe and to the power supply. The bus distributes power to the individual modules and provides data, address, and control lines for communication between the various logic functions. The terminal bus provides communication paths between processor, memory, input/output, and display refresh on a shared basis.

All modules are slot-independent and carry their own select code or memory address. The only requirements are that the four display modules must be grouped together, and that no empty slots be left between the power supply and the last module. However, the two cartridge tape modules can be plugged into the connectors on the far end, opposite the power supply.

A bus access cycle begins when a requesting module determines it needs the terminal bus for instruction or data fetch or input/output. If the terminal bus is busy, the requesting module must wait until it is available. To determine who gets the bus next, a priority chain has been incorporated. The modules nearest the power supply are first in the priority chain, and a module wanting the bus next breaks the chain for modules farther away from the power supply.

# **Terminal Memory**

Like any other computer system, the microcomputer module is useful only if it has a program to execute and memory in which to store data. This is the function of the terminal memory modules, which are two types, read/ write or random-access memory (RAM) and read-only memory (ROM). The RAM stores display characters and data; the ROM stores terminal programs (firmware). Also, the BASIC Interpreter and BASIC workspace resides in RAM. Terminal programs are called firmware because the ROM makes them more permanent than software but less permanent than hardware. In the terminal one-half of the available memory is dedicated to ROM or program memory and the remaining memory locations are RAM and can be used for data and BASIC. All of the terminal memory is MOS semiconductor memory. A separate RAM memory is used to store the 720 × 360 graphics data.

# Input/Output Modules

Also a part of the logic system are several terminal input/output modules: the keyboard interface PCA, Graphics Microcontroller PCA, Graphics Memory PCA, the data communications PCA, the optional eight-bit duplex register PCA (used for the HP 9866A/B and HP 9871A Printer interface), the optional serial printer interface PCA, and the HP-IB interface PCA (used for interfacing the HP 9871A-001 Printer, HP 2631A-046 Printer, HP 2631G Printer, HP 7245A-001 Plotter/Printer, HP 9872A Plotter, and other terminals).

These never request control of the bus, but all must respond to commands from the microcomputer and its programs.

The basic I/O commands output data or control codes from the microprocessor and input data or status from the interface module. Each of the I/O cards has different data and control formats, but all are controlled by the microcomputer. Each I/O module has a rear edge connector for the attachment of a connector hood and cable assembly to carry the signals out the back of the terminal.

#### **CRT MONITOR**

The CRT monitor section contains sweep and high voltage circuits, the high-resolution, low-profile cathode-ray tube, and fan.

#### The Raster

The terminal uses raster scan deflection method, similar to that used in television sets. In a raster scan display, the electron beam traverses the screen in a series of closely spaced horizontal lines, starting from the top. Characters are formed from line segments and dots produced by turning the beam intensity on and off at appropriate times.

There are  $720 \times 360$  dots on the screen. The alphanumeric display makes use of characters that fill an entire  $7 \times 9$  character cell while the graphics display allows you to access individual dots.

The terminal uses a low-profile CRT to keep overall height to a minimum while maintaining a screen capacity of 1920 characters, partitioned into 24 rows of 80 characters each. All of the character positions are fundamentally rectangles 7 dots wide by 9 scan lines high. Four additional scan lines beneath the  $7\times 9$  matrix are used for the descender areas of lower-case characters, for underlining, and for the blinking underscore cursor. One other dot is used on either side for character-to-character spacing, and one scan line is reserved at the top and bottom for row-to-row spacing. This results in a character cell of 9 dots by 15 scan lines replicated over the entire screen area (see figure 1-2).

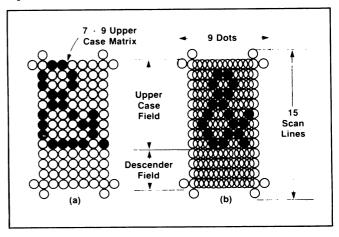


Figure 1-2. Character Cell

# Alphanumeric and Microvector Character Sets

Two types of character sets can be stored within the terminal: alphanumeric sets and microvector sets. Alphanumeric sets support the primary use of the terminal, displaying textual and numeric information. Characters are designed around a basic  $7\times 9$  dot matrix with provision for lower-case descenders. The characters are embellished by use of the half-shift. With this type of set the character-to-character spacing of two dots is hardwired. This prevents the design of characters that would form continuous horizontal lines. However, all 15 scan lines of the row are available so that vertically contiguous symbol segments can be designed. An example of this is the three-row-high integral sign found in the math symbol set.

Microvector sets use the entire 9-dot-by-15-scan-line character cell without the half-shift. This allows characters to be designed with both horizontal and vertical continuity. This type of set finds its greatest application where a minimal set of graphic kernels is needed to represent more complex pictorial information. The data entry forms shown in Section II illustrate the use of the line drawing set in representing a form.

# **Display Features and Alternate Character Sets**

The basic terminal uses 128 alphanumeric characters and one display feature, inverse video fields (black characters on white backgrounds). With the addition of the optional display enhancement board, up to three additional 128-character sets can be stored within the terminal. Three display features are also added: half-bright, underline, and blinking fields.

All sixteen possible combinations of the four display features can be applied to any character or characters on the screen. No displayable character positions are required to start, stop, or modify either the features or the character sets. Therefore, consecutive characters on the screen may be from different sets or have different display features.

#### **KEYBOARD**

The processor scans the keyboard at discrete intervals for a depressed key. Each key is assigned a position in a matrix of 14 columns and 8 rows. This matrix provides a reference to a look-up table that the firmware uses to display the character and/or send the character code over the data communications line.

#### THE FIRMWARE

The firmware contains the operating system or main terminal code modules and the various input/output, data communications, and utility routines that control the terminal. The firmware is stored in read-only memory (ROM) circuits on the Control Memory assemblies.

### **System Monitor**

The system monitor is a section of the firmware that dispatches data within the terminal. The processor normally executes a basic loop, in which it scans the keyboard and the data communications interface and waits for something to happen (see figure 1-3). When a character is received from either the keyboard or the data communications interface, a general character interpretation routine is executed to determine the action to be taken. The monitor then performs the specified functions, such as putting a character on the display, transmitting a character over the data communications interface, or moving the cursor. When this has been completed, the monitor returns to the basic scan loop to look for the next input.

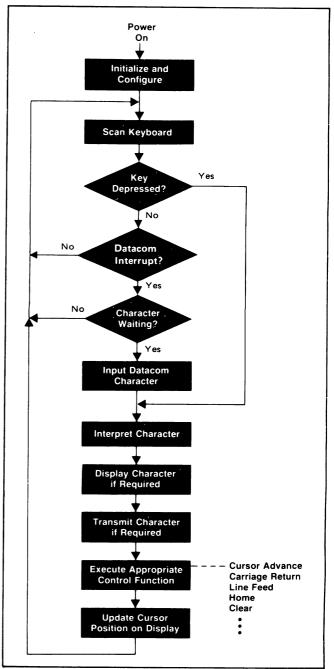


Figure 1-3. System Monitor Basic Loop

### Keyboard and I/O Subsystem

The I/O subsystem contains the firmware required for performing all input/output functions. The firmware operates using both scan and interrupt methods. The keyboard is scanned at regular intervals, while inputs from the devices such as the data communications interface and cartridge tape units are interrupt driven. If a new key depression is detected, the key number associated with this key is calculated and used as an index into a table that assigns a code to the key. If the key is one of the ASCII keys, the proper code is determined based on the state of the CNTL, SHIFT, and CAPS LOCK keys.

If the key in question is not one of the ASCII keys, the firmware may be required to generate a multiple character sequence consisting of an ASCII escape character followed by one or more characters that define the escape sequence. Keys in a third group do not generate codes at all, but simply perform internal terminal functions, such as BLOCK MODE, REMOTE, and CAPS LOCK.

I/O associated with the display is minimal because the display memory access module (DMA) causes the display to be refreshed without processor intervention. Display I/O control mainly involves transmitting the cursor coordinates to the display whenever necessary.

#### **Cursor Movement**

The terminal firmware contains many subroutines for moving the cursor on the display. All cursor movement is handled by the firmware. When a character is typed on the keyboard and appears on the display, the cursor moves to the next column position because a cursor advance subroutine has been executed and has calculated a new cursor position. Similar subroutines exist for moving the cursor up, down, right, left, and home. The tab function is also a firmware routine; it uses a one-bit-per-column table to determine the next tab stop.

A separate graphics cursor can be displayed. The graphics cursor can be controlled from the keyboard or from a program. It functions independent of the alphanumeric data and can be used to aid in the input of graphics data. A set of graphics cursor control keys (similar to those used for the alphanumeric cursor) can be used by the operator to position the graphics cursor.

#### **Display Memory Management**

A large part of the terminal firmware is devoted to management of the display memory. Most conventional terminals use a byte of display memory for every displayable position on the CRT screen. If there are many short lines, as is frequently the case, there is a substantial amount of unused memory. The terminal does not allocate memory for character positions to the right of the last character entered, so this memory is available for other purposes. Turn on and turn off of the various display enhancements

and character set selections, or start and end of unprotected fields between individual characters can be accomplished without an intermediate blank character position. With these features, the address of a character occupying a given row and column cannot be directly computed without some sort of scanning process.

The display memory consists basically of a linked list of fixed-sized blocks of RAM (see figure 1-4). This list is set up in such a way that the DMA can start at the first address on the screen and follow the list to produce an entire screen of information. All memory not currently allocated for display use is kept on a free-storage link list. Individual rows are linked with next and preceding rows, while blocks within a row are linked only in a forward direction. The storage allocated for a row may be as little as one block (16 bytes), or much larger than 80 characters, depending upon the number of displayable and non-displayable characters needed to create the row on the CRT.

The firmware finds the address corresponding to a given character position by starting at the last known position and moving through the list either backward or forward until it finds the new address. If the end of the list is found before the row in question has been found, blocks are removed from the free-storage list and used to create new rows. Once the correct row has been found, the firmware searches for the cursor column. If the end of the row is found before the column has been found, additional blocks are removed from the free-storage list and used to build the length of the row out to the column required. Whenever a block is required and free list is empty, an existing row must be released from display memory. This row is the first row of memory if the addition is at the end of memory, and is the last row of memory if a row other than the last row is being lengthened.

#### **DATA COMMUNICATIONS**

Data communications in the terminal is both a hardware and a firmware function. The data communications interface is a basic terminal module. This module has the necessary logic to interface the terminal bus to the communication line.

The communication interface accepts parallel data from the terminal, serializes it, and adds framing or synchronizing bits (start and stop). It performs the reverse process on incoming data, converting serial data to parallel and removing start and stop bits. The interface can generate and check parity and can also detect data overruns. A status word keeps the processor informed of the status of the interface.

The terminal firmware for communications has three main functions. First, the program reads the control settings on the keyboard, keyboard interface, and the data communications interface. Second, it processes input characters and transmits output characters. Many decisions are made on incoming characters, especially on control characters. The third function is modem control using

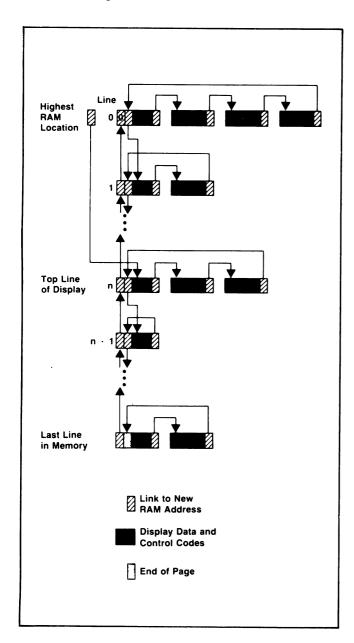


Figure 1-4. Display Memory Linked List Structure

control lines on the communications interface. Direct connections to a computer and Bell 103 type modems require a minimum of firmware control while Bell 202 type modems require more control. A more detailed description of the data communications operation is given in Section V.

#### THE TAPE UNITS

Cartridge tape operations are divided between the cartridge tape hardware and firmware. The hardware maintains constant speed and provides for selection of fast or slow speed and the direction of tape motion.

A line of data on the screen is recorded on the tape as a record. The information is stored serially on the tape at a recording density of 800 bits per inch and a read/write speed of 10 inches per second. Data is organized into files, records, bytes, and bits. Separating the files are file marks, special-length gaps (areas of unidirectional magnetization) with a file identification record between them.

Holes are punched at each end of the tape to provide reference for beginning of tape and end of tape. If a hole is detected in the tape, indicating tape location, tape motion is stopped until the firmware commands it to start again.

The hardware encodes and decodes data bytes into bit patterns on the tape and records interrecord gaps. The hardware reacts to commands given by the firmware and presents status information to the firmware.

The firmware controls all tape motion and maintains tape-position information. The firmware dictates whether the hardware is reading, recording, or writing gaps. It formats data into records and generates special tape marks that have significance in organizing the tape into records and files.

11

#### INTRODUCTION

This section contains information for using the display memory and terminal control functions. The display memory functions change the position of display data or assign special attributes to blocks or fields of display data within each display workspace. The special attributes alter the way data is displayed or transmitted. The terminal control functions allow you to programmatically set terminal straps or use the terminal's soft keys.

#### **DISPLAY MEMORY FUNCTIONS**

The following paragraphs describe the display memory functions. These functions consist of the following groups:

- Display Control
- Edit Operations
- Forms Mode
- Display Enhancements
- Alternate Character Sets

The following paragraphs describe how to control the alphanumeric display memory functions from a computer program. Each of the display functions can also be entered from the terminal keyboard or read from a cartridge tape. In addition to escape sequences, most of the display memory functions have been assigned to special keys on the keyboard. Refer to the *User's Manual* for a description of keyboard functions.

# **Display Control**

Cursor and display positioning operations can be programmed within each of four display workspaces. Only the alphanumeric display functions are described here. Refer to Section III for a description of the graphic display functions. The programmable functions available are as follows:

- Display Window Control Message Line Command Line Soft Key Label Line
- Cursor Sensing Absolute Relative
- Cursor Positioning Absolute Addressing

Screen Relative Addressing Cursor Relative Addressing Space Backspace Set Tab Clear Tab Tab Backtab

Set Margins Home Up Home Down

Display Positioning
 Roll Up
 Roll Down
 Next Page
 Previous Page
 Display Lock (Memory Lock)

Display Window Control. Alphanumeric display memory is shared by four dynamic display workspaces (window#1 through #4), a message line (window#5), a command line (window#6), and a soft key label line (window#7). These "windows" are controlled through the command channel. (Figure 2-1 shows the display features.)

t,cDIsplay Window#<n>% displays the selected window t,cCLOse Window#<n> removes selected window #5, #6. or #7

Display Workspace. Only one display workspace can be displayed at a time. Cursor and display positioning operations operate independently in each workspace (i.e., you can roll up, roll down, next page, previous page, set margins and tabs, and position the cursor independently in each workspace.) As data is entered into a display workspace, it uses some of the alphanumeric display memory. If needed, the present display workspace will "steal" lines from the other workspaces that are not memory locked. Therefore, to preserve information in another workspace, it must be memory locked. At power on or full reset, windows #2 through #4 are memory locked. (Figure 2-2 shows examples of memory allocation for the four display memory workspaces.)

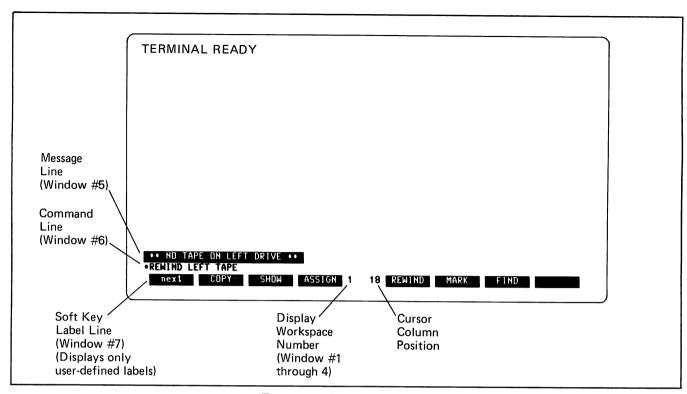


Figure 2-1. Display Features

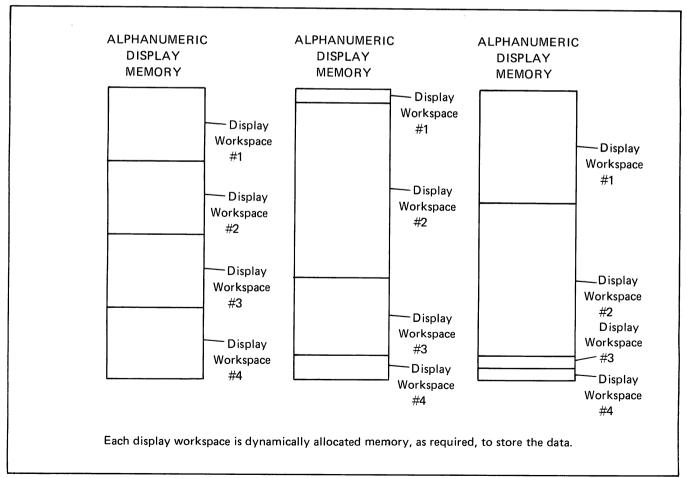


Figure 2-2. Three Examples of Display Memory Allocation to the Four Display Workspaces

Message Line. The message line (window#5) is automatically displayed when an incorrect operation is performed. All messages that the terminal generates are given in the *User's Manual*. You may use the message window in a program to instruct the user to perform an operation (such as, insert a tape, or enter some data from the keyboard) by sending:

€,cDIsplay Window#5% <message string>%

To remove the message:

**€,c CLOse Window#5**ዬ

Command Line. The command line is displayed to allow the user to enter commands into the command channel while under program control.

€,cDIsplay Window#6%

To remove the command line:

투,cCLOse Window#6%

Soft Key Label Line. The soft key label line displays the user-defined function labels for the soft keys (f1 through f8). Predefined user functions may be loaded into the soft keys under program control (see "Defining Soft Keys" explained later in this section). The labels may then be displayed to allow the user to select one of the predefined functions while running under program control:

€,cDIsplay Window#7%

To remove the soft key label line:

€,cCLOse Window#7%

MEMORY ADDRESSING SCHEME. Display workspace positions can be addressed using absolute or relative coordinate values. Each display workspace is made up of

80 columns (0-79) and a number of rows determined by the size of the workspace. There can be as many as 71 lines of 80 characters (3 screens). The types of addressing available are:

- Absolute
- Screen Relative
- Cursor Relative

Row Addressing. Figure 2-3 illustrates the way the three types of addressing affect row or line numbers. The cursor is shown positioned in the fourth row on the screen. Screen row 0 is currently at row 6 of display memory. In order to reposition the cursor to the first line of the screen the following three destination rows could be used:

a. Absolute: row 6

b. Screen Relative: row 0c. Cursor Relative: row −3

**Column Addressing.** Column addressing is accomplished in a manner similar to row addressing. There is no difference between screen and absolute column addressing. Figure 2-4 illustrates the difference between absolute and relative addressing. The cursor is shown in column 5.

Whenever the row or column addresses exceed those available, the largest possible value is substituted. In screen relative addressing, the cursor cannot be moved to a row position that is not currently displayed. For example, in figure 2-3c a relative row address of -10 would cause the cursor to be positioned at the top of the current screen (relative row -3). Column positions are limited to the available screen positions (0 to 79 in figure 2-4a and -5 to 74 in figure 2-4b). The cursor cannot be wrapped around from column 0 to column 79 by specifying large negative values for relative column positions.

Note the difference between this type of addressing (0-79) and the column indicator in the soft key label line (1-80).

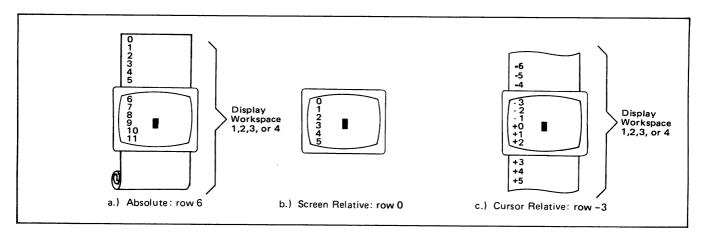


Figure 2-3. Row Addressing

CURSOR SENSING. The current position of the screen cursor can be sensed. The position returned can be the absolute position in display memory or the location relative to the current screen position. (Absolute and relative addresses are discussed under Memory Addressing.)

**Absolute Sensing:** 

۴a

**Example:** The cursor is at column 20, row 40.

computer: 5

terminal: % a 020c 040R

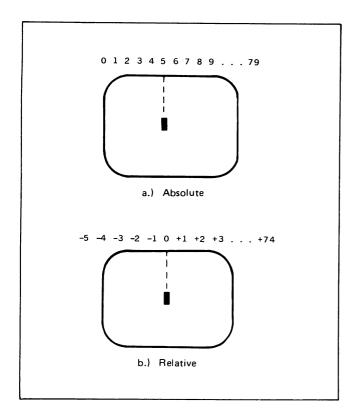


Figure 2-4. Column Addressing

Relative Sensing:

돈

**Example:** The cursor is again at column 20, row 40, but screen row 0 begins at row 35 of display memory.

CURSOR POSITIONING. The cursor can be positioned directly by giving memory or screen coordinates, or by sending the escape codes for any of the keyboard cursor positioning operations.

**Absolute Addressing.** The cursor can be positioned to any displayable position using absolute coordinates. Absolute cursor positioning is accomplished using the following sequence:

€ & a <row number> r <column number> C

where: row number is 0 to 255.

Example: Position the cursor at row 35, column 6.

ቴ & a 35r 6C or ቴ & a 6c 35R

Absolute addressing cannot be used while Memory Lock is on.

Screen Relative Addressing. The cursor can be positioned to any position currently displayed on the screen by using screen relative coordinates:

र & a <screen row number> y <column number> C

where: the top row of the screen is now 0.

**Example:** Position the cursor to screen relative row 15, column 53.

τ & a 15y 53C or τ & a 53c 15Y Cursor Relative Addressing. The cursor can be positioned to any displayable position by using cursor relative coordinates. (±row, ±column). Cursor relative addressing cannot be used while Memory Lock is on.

**Example:** The cursor is currently at row 7 and column 10 of the screen. Move the cursor to row 9 column 6.

Combinations of Absolute and Relative Addressing. Relative and absolute coordinates can be combined in the same sequence.

Example. Move cursor from its current row down 8 rows and to column 60.

Example: Move cursor from its current position 15 columns left, and to relative screen row 4.

Alphanumeric Cursor On/Off. The alphanumeric cursor is turned on or off whenever the alphanumeric display is turned on or off. The cursor can also be controlled separately using the following commands:

Turn Alphanumeric Cursor On:

Turn Alphanumeric Cursor Off:

OTHER CURSOR OPERATIONS. In addition to positioning the cursor using coordinates, you can use a variety of keyboard equivalent operations. These operations normally require only one or two characters to be sent to the terminal. Table 2-1 lists each of the operations together with its code and a brief description.

**TABS.** You can programmatically set tabs, tab, and clear tabs independently in each of the workspaces.

Setting Tabs. To set a tab, move the cursor to the desired column and send 1 Once a tab is set, the tab function or key can be used to move the cursor to the next tab setting. In Forms Mode, previously set tabs are ignored; however, when Forms Mode is turned off, previously set tabs are in effect.

Using Tabs. Once tab positions have been set you can tab in the same manner that you would on a typewriter. You can even tab backwards to the previous tab position by sending to. When you are at the first tab position in a line and you backtab, the cursor moves to the last tab position

in the previous line. Once the cursor has reached the first tab position in the first line of memory, no further backtabbing movement can be made.

Clearing Tabs. You can clear individual tabs by moving the cursor to the tab position and sending \( \frac{1}{2} \). All of the tabs in a workspace can be cleared at once without having to position the cursor by sending \( \frac{1}{2} \).

MARGINS. You can set the left and right margins in each workspace to make the entry of data easier. When the terminal is turned on or a full reset performed, the margins are set at columns 0 and 79 in each of the workspaces. This gives a full 80 character line. You can define new margins as follows:

Left Margin. Move the cursor to the desired left margin setting. Send §4.

Right Margin: Move the cursor to the desired right margin setting. Send 5.

The terminal will beep when you are eight characters from the right margin. When the right margin is reached, the cursor will move to the left margin of the next line.

**Example:** Set the margins for a 40 column page centered on the screen.

Move the cursor to column 20 and set the left margin. Move the cursor to column 59 and set the right margin. Place the cursor back at column 20 and begin sending data.

This is an example using margins to control data entry.

Margins are cleared or changed by setting new margins (or a full reset) or by entering forms mode, where the margins are reset to columns 0 and 79.

Alphanumeric Display On/Off. The entire alphanumeric display, including the alphanumeric cursor, can be turned on and off. The alphanumeric data is not lost when the display is turned off. The alphanumeric cursor can also be controlled independent of the display (refer to Alphanumeric Cursor).

Turn Alphanumeric Display On:



Turn Alphanumeric Display Off:



Table 2-1. Cursor/Display Operations

FUNCTION	CODE	DESCRIPTION
Cursor		
	€*dq	Turn cursor on.
	₹*dr	Turn cursor off.
Line Feed	LF (J <sup>c</sup> )	Move the cursor to the next line.
Return	CR (M <sup>c</sup> )	Return the cursor to the left margin, halt I/O operations, and clear messages.
	₹G	Move cursor to first column of current row.
Backspace	BS (H <sup>c</sup> )	Move the cursor one column to the left. If the cursor is in col- umn 0, it remains there.
Cursor Up	₹ A	Move the cursor up one row. If the cursor is in row 0, it wraps around to row 23.
Cursor Down	₹В	Move the cursor down one row. If the cursor is in row 23, it wraps around to row 0.
Cursor Right	₹ C	Move the cursor right one column. If the cursor is in column 79, it wraps around to column 0 of the next row. If the cursor is in row 23, column 79, it wraps around to row 0, column 0.
Cursor Left	€D	Move the cursor left one column. If the cursor is in column 0, it wraps around to column 79 of the previous row. If the cursor is in row 0, column 0, it wraps around to row 23, column 79.
Home Up	₹h	Move the cursor to the beginning of the first line of the current display workspace (excluding transmit-only fields in Format Mode.)
Home Up	ŧн	Move cursor to the beginning of the first line in the current display workspace (including transmit-only fields in Format Mode).
Home Down	ξF	Move the cursor to the beginning of the line following the last data in the current display workspace.
Tabs		-
Tab	HT (Ic) or F I	Move the cursor forward to the next tab position.
Back Tab	€.i	Move the cursor back to the previous tab position.
Set Tab	<b>٤</b> 1	Place a tab at the current cur-
Clear Tab	<b>€</b> 2	sor column. Clear the tab at the current cursor column.
Clear All Tabs	<b>€</b> 3	Clear all tabs in the current display workspace.

FUNCTION	CODE	DESCRIPTION
Margins		
Set Left	<b>₹</b> 4	Set the left margin at the current cursor column.
Set Right	<b>₹</b> 5	Set the right margin at the current cursor column.
Display	!	
	ቺ*de	Turn on current alphanumeric display workspace.
	੮*df	Turn off current alphanumeric display workspace.
Select Display Workspace, Message, Command, or Soft Key Label Line	モ,c DIsplay Win- dow# <n>c r</n>	Selects display workspace n (where n is 1, 2, 3, or 4), message line $(n\times5)$ , command line $(n\times6)$ , or soft key label line $(n\times7)$ .
Close Window 5, 6, or 7	ቺ,c CLOse Window # ዬ	Removes message, command, or soft key label line from display.
Clear Display	€J	Clear the current display work- space from the cursor position to the end of the workspace.
Clear to End of Line	₹K	Clear current line beginning at the column containing the cur- sor.
Roll Up	₹S	Roll the screen up one row (until the last row of memory is located at the top of the display). Cursor is stationary.
Roll Down	ŧΤ	Roll the screen down one row (until the first row of memory is located at the top of the display). Cursor is stationary.
Next Page	ŧυ	Display the next 24 rows of the current display workspace (until the last row of the cur- rent display workspace is lo- cated at the top of the display.) The cursor is moved to the first unprotected location on the new page when in forms mode.
Prev Page	₹c V	Displays the previous 24 rows of the current display workspace (until the first row of the current display workspace is located at the top of the display). The cursor is moved to the first unprotected location on the new page when in forms mode.
Memory Lock	₹ ]	Turn on memory lock (over- flow protect). Note that when Memory Lock is on, only screen relative addressing can be used.
	ŧт	Turn off memory lock. Refer to the <i>User Manual</i> for additional information on Memory Lock.

# **Edit Operations**

The terminal allows you to edit data displayed on the screen. This can be done by simply overstriking the old data. In addition, several edit operations are available. These edit operations are listed in table 2-2.

Table 2-2. Edit Operations

FUNCTION	CODE	DESCRIPTION
Insert Line	ŧL	The line containing the cursor and all lines below it are rolled down one line. A blank line is inserted where the line containing the cursor was. The cursor is moved to the left margin of the blank line.
Delete Line	€M	The line containing the cursor is deleted. The lines below the cursor are rolled up and the cursor is positioned at the left margin.
Insert Character	ŧQ	Turn on Insert Character Mode (and indicator). New characters will be inserted in the line at the current cursor position. Characters that are moved past the right margin are lost.
Insert Character with Wraparound	ŧΝ	Turn on Insert Character with Wrap- around (indicator blinks). Characters extending beyond the right margin are wrapped to the next line. Refer to the next line. Refer to the <i>User Manual</i> for additional information.
	₹R	Turn off Insert Character Mode (and indicator).
Delete Character	ξP	The character at the current cursor position is deleted. Characters to the right of the cursor are moved one column to the left (see figure 2-3).
Delete Character with Wraparound	۴O	The character at the cursor is deleted. Characters from the next lines are wrapped to the end of the current line (see figure 2-4).

INSERT CHARACTER WITH WRAPAROUND. You can insert characters with wraparound by sending EN. This will cause the indicator to blink. While in this mode characters that overflow a line due to insertion are moved to the next line. Sending ESC R returns the terminal to normal operation.

If the current line is full and additional characters are inserted, they will push characters from the end of the first line to the beginning of the next line. If the second line becomes full while the cursor is still in the first line, a blank line will be inserted between line one and two. The characters overflowing line one will then be entered on the new line.

DELETE CHARACTER WITH WRAP-AROUND. When characters are deleted using \$\frac{\pi}{\cdot}0\$, one character from the left margin on the next line is moved up to the right margin of the line containing the cursor. If the next line is blank, no wraparound is performed.

Delete Character with Wrap:

t 0

When margins are used together with the Delete Character and wraparound operations, the characters to the right of the cursor are moved as shown in figures 2-5 and 2-6.

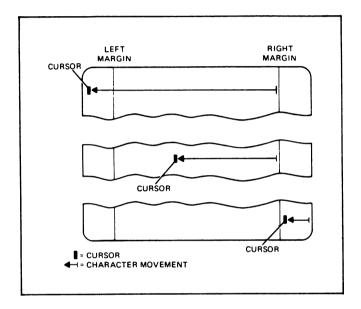


Figure 2-5. Character Delete With Margins

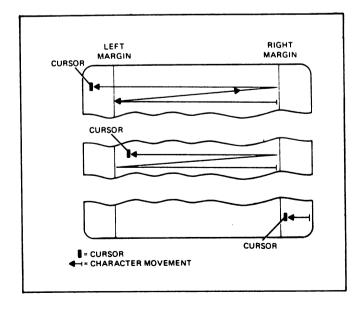


Figure 2-6. Character Delete With Wraparound

MOVING TEXT BLOCKS. You can move blocks of text or data in any of the display workspaces using Memory Lock.

**Example:** In the following text, move the paragraphs into the proper order. The current top of screen is row 1 of display memory.

Initial order:

(Top of screen)

3. This is paragraph 3. It should be last in the group.

2. This is paragraph 2. It should be second.

1. This is paragraph 1. It should be first (blank line)

**Step 1.** Position the cursor in the first line of paragraph 2.

Step 2. Turn on Memory Lock.

**Step 3.** Roll up the display until the remaining paragraphs have rolled up under the cursor position and off the screen (4 lines).

₹ & a 4R

Step 4. Turn off Memory Lock.

Step 5. Home the cursor.

The display should appear as follows:

Lock

(Top of screen) 2. This is paragraph 2. It should be second.

 This is paragraph 1. It should be first.

モ 1

This is paragraph 3. It should be last in the group.

Step 6. Now move paragraph 1 by positioning the cursor in the first line of paragraph 1 and turning on Memory Lock.

Step 7. Roll up the display until the cursor is in the first line of paragraph 3.

Step 8. Turn off Memory Lock and home the cursor. The paragraphs should now be in order.

# Forms Mode (Format Mode)

In Forms Mode the terminal prevents you from overwriting or transmitting data in protected fields. Forms Mode can be turned on in any of the four workspaces independently. Forms Mode is normally entered under control of the computer or through commands recorded on a cartridge tape. Forms Mode is turned on by sending  $\xi$  W (the cursor is homed to the beginning of the first unprotected field). Normal operation is returned with  $\xi$  X (the cursor remains in its present position).

PROTECTED FIELDS. Fields can be protected so that displayed data cannot be overwritten or sent to a computer. When the terminal is placed in "Forms Mode" (Format Mode) all character positions on the screen are protected except those fields that have been specifically defined as "unprotected" or "transmit only".

UNPROTECTED FIELDS. Data can be written into unprotected fields in the normal manner. After reaching the end of an unprotected field, the cursor moves to the beginning of the next unprotected field. The tab functions can be used to move from one unprotected field to the beginning of the next unprotected field. £ i causes the cursor to be positioned at the beginning of the previous unprotected field. Fields are defined as "unprotected" by using £ I at the start of the field. £ 1 or the end of the line is used to end the field.

In the following figure only the fields shown in white are protected or transmit only. Even if the operator moves the cursor to a protected field and types a character the cursor will move to the nearest unprotected field before displaying the character.

V-	ndor Har	n c	Address	1117	State	3.40
PACIFI	C TOOL	I HC	1273 CRECENT WAY	SAN JOSE	CALIFORNIA	95131
Vouche	r Date	Units	Purchase And A	ssembly Details	1051 Pet	fost
07, 1	6 1976	98	FINISHED STEEL CAS	TINGS	874738	65.88
03 1	9 1976	749	TAPE TRANSPORT BAC	875483	9753.88	
02 ;	8 1976	13	MILLED FLANGE ASSE	4BL Y	748563	877.44
	. 19				+	
	19				+	

**Example:** Define columns 1 through 9 of line 3 as "Unprotected".

Step 1. Position the cursor at column 1 in line 3.

Step 2. Send f [.

Step 3. Move the cursor to column 10 of line 3.

Step 4. Send \( \frac{1}{2} \) .

Now try turning on Forms Mode ( $\xi$  W) and sending data. Note that data can only be entered into the unprotected field. (Remember to turn off Forms Mode with  $\xi$  X.)

TRANSMIT ONLY FIELDS. It is often desirable to be able to return fixed data used as labels or headings to the computer. Transmit only fields are similar to protected fields except that they are sent to a computer along with the data that you enter. Normally data can only be entered in unprotected fields. But by positioning the cursor in the transmit only fields (using the cursor functions), you can also enter data into transmit only fields. The tab functions skip over transmit only fields. After reaching the end of the transmit only field the cursor moves to the beginning of the next unprotected field. Fields are defined as "transmit only" by using  $\frac{e}{h}$  ( at the beginning of the field.  $\frac{e}{h}$  1 or the end of the line will end the field.

**Example:** Continue the previous example and define column 11 through 14 of line 3 as transmit only.

Step 1. Turn forms mode off (EtX).

Step 2. Position the cursor at column 11 line 3.

Step 3. Send 5 [.

Step 4. Move the cursor to column 15 in line 3.

Step 5. Send 5 1.

Position the cursor in column 0 and turn on Forms Mode (ESC W). Try typing data. Note that the cursor moves over the Transmit Only field without entering data.


DATA CHECKING. While in Format Mode the terminal can test data in unprotected and transmit-only fields to make sure that it is numeric or alphabetic. If a field is defined as numeric and an alphabetic character is entered the terminal will beep and the keyboard will lock. This condition can be cleared by pressing . You can then continue entering data. Data checking fields are defined by beginning the field with one of the following sequences:

• 56 — begin alphabetic field (A thru Z, a thru z, space only).

• 5 7 — begin numeric field (space, 0 thru 9, -, +, ., and

• 5 8 — alphanumeric field (all keyboard characters)

**Example:** Define columns 1 through 5 on line 4 to be alphabetic and columns 6 through 9 to be alphanumeric.

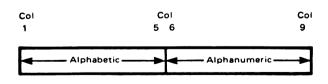

Step 1. Turn off forms mode (\xi \times \times).

Step 2. Position the cursor at column 1 of line 4.

Step 3. Send <sup>€</sup> t to define the beginning of an unprotected field.

Step 4. Send \( \xi \) 6 to define an alphabetic field.

Step 5. Move the cursor to column 6 of line 4.

Step 6. Send \( \xi \) 8 to define normal alphanumeric data.

Step 7. Move the cursor to column 10 of line 4.

Step 8. Send <sup>5</sup> 1 to end the unprotected field.

Step 9. Turn on forms mode ( W).

When a number is typed in the alphabetic field the keyboard is locked, the terminal beeps, and the cursor remains under the invalid character. Press the key to unlock the keyboard. The operator can then make the correct entry.

The numeric character may be left in the alphabetic field by moving the cursor to the next character position using the cursor control keys. This has the effect of overriding the data check.

#### **CAUTION**

Deleting characters while in Forms Mode can destroy the data checking field or alter the unprotected field length. Use (F J) (F K) to delete information.

**TABBING.** Tabs are automatically set at the beginning of each unprotected field when Forms Mode is turned on; any tabs set previously are ignored. When Forms Mode is turned off, any previously set tabs are reinstated. Tabs cannot be set within any unprotected field.

**EDITING.** While in Forms Mode, the unprotected fields can be edited (inserting and deleting characters). The INSERT LINE and DELETE LINE functions are disabled in Forms Mode.

Inserting Characters. Characters may be inserted in any unprotected field by turning on Insert Character Mode ( $^{\xi}$  Q). Characters received or typed are inserted at the cursor position. Characters moved out of the end of the unprotected field are lost.

Insert Character with Wraparound acts the same as insert character without wraparound explained above (the wraparound function has no effect).

Deleting Characters. Characters may be deleted in any unprotected field by the Delete Character function (FP). The character at the cursor position is deleted and all characters to the right of the deleted character in the field are moved left one column.

Delete Character with Wraparound acts the same as delete character without wraparound explained above (the wraparound function has no effect).

Display Memory and Terminal Control Functions

Characters may be deleted from the current cursor position to the end of the field by sending K (clear to end of line). Also, characters may be deleted from the current cursor position to the end of the last field by sending KJ (clear display).

BUILDING THE FORM. Appendix A contains a method for building forms using the cartridge tapes and soft keys.

SENDING DATA TO THE COMPUTER. Refer to "Block Mode", in Section V.

# **Display Enhancements**

The standard terminal can display data using inverse video (black on white). In addition, if your terminal has the 13231A Display Enhancement accessory you can also use half bright, underline, and blinking characters. Each character position on the screen can be displayed with various combinations of these features.

- Half Bright characters are displayed at half intensity (grey).
- Underline an underline is displayed below the normal character.
- Inverse Video the screen is white and characters are black.
- Blinking characters including the inverse video, underline, and half bright features blink.

#### NOTE

The 13231A Display Enhancement accessory is not normally present in graphics terminals because the two available PCA slots are used for data communications and peripheral interfacing. However, either the data communications PCA or the peripheral interface PCA may be removed to accommodate the display enhancement accessory.

The display enhancements are used by assigning one or more of them to a field. The selection sequence is:

#### ਿੱਚ d <enhancement character>

The enhancement character (@, A through O) is used to select the combination of display enhancements to be assigned to the field. The following table lists the enhancement character for each of the combinations. The field is ended by selecting another enhancement, the end of the current line, or by \(^{\xi}\_{\cup} \& d \@.

	ENHANCEMENT CHARACTER															
	@	A	В	С	D	Ε	F	G	Н	1	J	K	L	M	N	0
Half-Bright					L.				x	x	×	x	x	x	x	х
Underline					×	×	×	x					x	x	x	х
Inverse Video			x	x			x	x			x	x			x	x
Blinking		x		x		x		х		x		x		x		x
End Enhancement	x															

**Example:** Define columns 10 through 14 of line 5 to be inverse video and blinking.

- Step 1. Position the cursor at column 10 in line 5.
- Step 2. Send F & d C
- Step 3. Move the cursor to column 15 in line 5.
- Step 4. Send \( \xi \) & d \( \xi \) (this ends the enhancements). The field should be white.

**Step 5.** Send the word TERMINAL beginning in column 9 of line 5. It should appear as shown below. (If your terminal does not have the 13231A accessory installed the characters will not blink.)



#### **Alternate Character Sets**

The terminal can display up to four different character sets. Each character set can contain up to 128 characters or symbols. In addition to the Math, Line Drawing, and Large Character sets available as options, you can create character sets tailored for special applications. Contact your nearest Hewlett-Packard Sales Office for additional information on special character sets.

Switching from one character set to another can be done on a character-by-character basis. For example, a character from the Math Symbol set can be displayed next to characters from the Roman set. This is done by defining one or more character positions in a line to be from alternate character sets. (Each group of characters can be thought of as a field.)

#### NOTE

The following discussion assumes that the Math and Line Drawing character sets are present and are installed as alternate sets A and B respectively.

**SELECTING ALTERNATE SETS.** To use optional character sets, first select the character set to be used as the alternate. (With the terminal in its initial state, character set A is defined to be the alternate.) An alternate set is selected with the following sequence:

돈 ) <set>

where: set = @, A, B, or C

Note that if • is used, the Roman or basic terminal set would be selected as the alternate. To find out which character set corresponds to •, A, B, or C, generate the test pattern by pressing the key). This displays the order of the character sets as shown.

TEST PATTERN

C Character Set \_\_\_\_\_
(not installed)

B Character Set \_\_\_\_\_ FUR II \_\_\_\_\_ ARTITUM ARTITU

Figure 2-7. Character Set Locations

USING ALTERNATE SETS. Once the alternate character set is defined, you can switch from the Roman to the alternate set with a  $N^c$  ( $\delta$ ).

The terminal automatically returns to the base or Roman set at the end of a line. To return to the base set within a line, send a  $O^c$  ( $^{5}$ i). This means that you must send another  $N^c$  to turn on the alternate set if it extends to the next line.

**Example:** Define the Math Set as the alternate character set.

From the test pattern the Math Symbol Set is found to be the A alternate character set.

An alternate set is selected with the following sequence:

To display  $A\alpha B\beta$  send the following sequence:

The screen should display  $A\alpha B\beta$ :

#### AaBB

Once a field has been defined as from the alternate set the field moves with the display. To change to a different alternate character set another  $\frac{1}{5}$  > <set> sequence must be sent.

Once a field in display memory has been defined as an alternate character field, it will continue to display alternate characters whenever data is written in the field until the terminal is reset or the portion of the line containing the alternate character set control code  $(N^c)$  is deleted.

The Math Set is useful for applications requiring the use of equations or formulas. The elements of the optional Math Symbol Set are shown in figure 2-10. An example of the use of the Math Set is shown in figure 2-8.

$$\iiint_{0}^{\Psi} * \left[ \frac{-h}{2\pi i} \frac{\partial \Psi}{\partial t} \right] dv = \iiint_{0}^{\Psi} * E \Psi dv$$

Figure 2-8. Example Using the Math Set

The Large Character Set allows you to create alphabetic characters that are three times the size of normal characters. The elements of the Large Character Set are shown in figure 2-11. An example of how to use the Large Character Set to build the character "B" is shown in figure 2-9. Table B-3 in Appendix B shows the keys required to build each character. Appendix A gives a program to build each character.

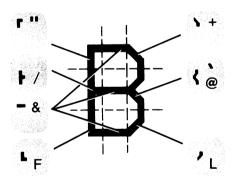


Figure 2-9. Example Using the Large Character Set

The Line Drawing Set provides a limited graphics capability. Simple line drawings and fairly complex forms for data entry applications can be generated. The elements of the optional Line Drawing Set are shown in figure 2-12. Figure 2-13 shows how the line drawing set can be used to build a data entry form.

Figure 2-10. Math Set Elements

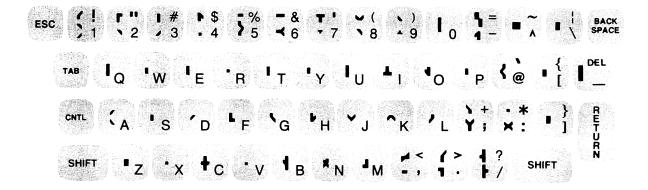


Figure 2-11. Large Character Set Elements

ESC 
$$= \frac{1}{4} \cdot \frac{1}{2} \cdot \frac{1}{4} \cdot \frac{1}{4} \cdot \frac{1}{5} \cdot \frac{1}{6} \cdot \frac{1}{7} \cdot \frac{1}{4} \cdot \frac{1}{8} = \frac{1}{9} \cdot \frac{1}{9}$$

Figure 2-12. Line Drawing Set

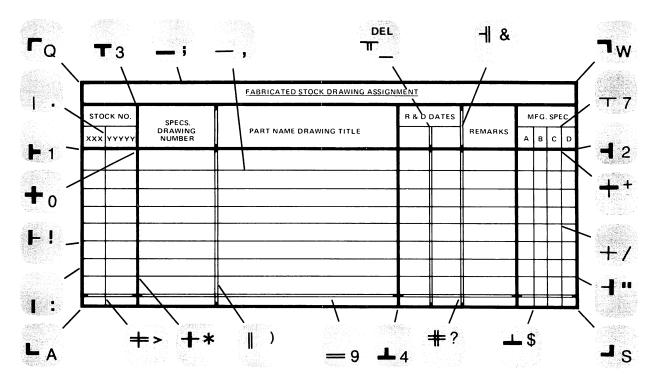


Figure 2-13. Sample Form

### **TERMINAL CONTROL FUNCTIONS**

The following paragraphs describe how to programmatically change most of the terminal's control settings and perform various other control functions. Refer to Section III, *Graphics Functions* for additional terminal settings. The settings consist of the following:

- Latching Keys AUTO, BLOCK , CAPS and REMOTE
- Keyboard Interface Switch Settings (A-Z)

When the terminal is powered on or reset, the states of the various keyboard and internal switches are stored in memory. Most of these stored settings can be changed programmatically without physically changing the switch setting. (Note that if the terminal is reset the terminal will return to the physical setting.)

You can select a specific operating configuration from within the application program. This eliminates the problem of requiring the terminal operator to make the settings before continuing with the application program. It also allows individual programs or even subroutines to change terminal configuration for a specific function and then return the terminal to the original state before passing control back to the main program.

#### Latching Keys

Four of the mechanically latching keys, who , who , who , who , who , and who can have their electronic state changed programmatically. The escape code sequence is as follows:

६ k <state> <key> . . .

The \( \xi \) & k is followed by one or more groups of state and key parameters. The state is a 0 or 1 to indicate that the key is to be up or down respectively. The key is a single letter a, b, c, or r. The groups can be in any order ( can come before ). The last key letter in the sequence must be capitalized to indicate the end of the sequence.

Example: Set wip and wind down.

**ૄ & k 0 a 1 C** 

An invalid character (any character other than 0, 1, a, b, c, or r) will cause the entire sequence to be ignored. An improper setting, (0 b when the terminal is operating in a multipoint configuration) will cause only the invalid setting to be ignored. The reset of the sequence will be accepted. If the terminal is initialized while configured for multipoint operation, the key will be read as down regardless of the switch's physical setting.

### **Keyboard Interface Switches**

The switches on the Keyboard Interface allow you to alter terminal operation for specific applications. Table 2-3 contains a summary of the switches and their function. A more complete description of the switches is given in Section VII.

The switch settings are made using the following sequence:

An invalid character in the sequence will cause the entire sequence to be ignored. The sequence must be terminated with an upper case switch character. A full reset will cause the terminal to return to the physical settings of the switches. Switches S and T cannot be changed if the terminal is configured for Main Channel protocol.

Example: Set switches A, B, and D open and switch C closed.

In certain operating configurations (i.e. multipoint), some switch settings cannot be changed. If attempted, the new setting for the switch will be ignored.

#### PROGRAMMABLE SOFT KEYS

Table 2-3. Keyboard Interface Switch Summary

SWITCH	POINT-TO-POINT FUNCTION	MULTIPOINT FUNCTION			
Α	Function key transmission	same			
В	Space overwrite latch	same			
С	Cursor end-of-line wraparound	same			
D	Block mode (Line/Page)	same			
E	Paper tape mode	same			
F	Fast binary read	(not used)			
G	Block transfer handshake	(not used)			
н	Inhibit DC2	(not used)			
J	Auto terminate	same			
к	Clear terminator	same			
L	Self-test inhibit	same			
М	Reverse CNTL key effect on INSERT CHAR and DELETE CHAR keys	same			
N	Escape code transfer to printer	same			
P	Compatibility Mode (scaled)	same			
Q	Compatibility Mode (unscaled)	same			
R	Circuit Assurance	Set trailing PAD			
s	Main Channel Protocol	(not used)			
Т	Main Channel Protocol	Output block size			
U	CPU break	Output block size			
V	Carrier Detect	Continuous carrier			
w	Data Comm self-test enable	same			
×	Data speed select	same			
Y	Transmit LED	same			
z	Parity	same			

tion. The keys can be used in application programs to create "menu" lists of special commands or in the case of to create a terminator for communications protocols.

# Controlling the Soft Key Menu

You can cause the current soft key assignments to be displayed using the following escape sequence:

Display soft keys menu: 🗲 j

This will also allow the terminal operator to enter new key assignments from the keyboard. Procedures for entering new soft key assignments by escape sequences are given next in this section. The soft key display is in the following format:

# F # type label string

where: "#" is the key number (0-8)

L (local only)

"type" is N (normal keyboard operation)

T (transmit only)

"label" is is any series of up to 8 characters in the base character set

"string" is any series of up to 80 characters

The soft key assignments are displayed in place of the normal screen display. Data in the display workspaces is not lost. (Note — if display memory is full, assigning characters to soft keys may cause some display data to be lost.) When the key assignment is completed and the terminal returned to normal operation, the old display is returned to the screen. Normal operation is restored using the following escape sequence:

Remove soft key menu:

モ k

# **Defining Soft Keys**

The key assignment operation displays the current key assignments in format mode. The attribute, label, and string fields are unprotected allowing the operator to enter new values. In addition, the values are tested during input to make sure that only valid parameter values are used. When the terminal is initialized the soft keys are assigned default values as follows:

#### NOTE

If the memory is full, adding characters to the soft key string may delete lines in normal display memory.

The soft keys can be loaded by the terminal operator (refer to the *User Manual*) or under program control. It is not necessary to display the current key assignments to enter new ones. Soft Key assignments can be made directly using the following escape sequence:

Soft key assignment sequence:

The label length parameter "d" specifies the number of characters at the beginning of the string that will be assigned to the key label. If incorrectly specified, characters will be added or deleted from the function string.

Example: Assign LOG-ON as a label for fs and HELLO USER.ACCOUNT as a function.

```
€&f 0a 5k 6d 19L LDG-ONHELLO USER.ACCOUNT%
```

The softkey loading for for would be:


fs N LOG-ON HELLO USER.ACCOUNT

If a carriage return (%) is included in the string portion of the soft key definition, the % will be translated to a %, if if the key is down. The % used in assigning values to keys f1—f8 is unaffected by the string assignment made to the % key. The % key will only generate the % character while the soft key assignments are displayed on the screen.


If the transmit only attribute (2) is used, the key will have no effect unless the terminal is set for remote operation.

Also, it may invoke a Block transfer handshake and append the appropriate terminator to the string. (See Appendix C, figure C-2, sheet 2.) The key assignment escape sequence must be terminated with an upper case character.

**Example:** Assign "HELLO-C905,PASWRD,3" to the key.

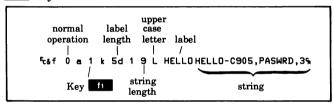

After the key assignment in the previous example has been made, a display of the key assignments would appear as follows:

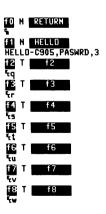

### CAUTION

Do not include line feeds (\*f) or block terminators (\*fs/fs) in soft key string (other than at the end of the string) if the soft key assignment is to be stored on cartridge tape from the soft key display.

# Displaying the Soft Key Labels

The assigned soft key labels may be displayed to allow the user to select one of the predefined functions while running under program control:

Display Soft Key Label Line:

६,cDIsplay Window#7%

Remove Soft Key Label Line:

€,cCLOse Window#7%

# **Triggering Soft Keys**

Soft keys can be triggered from a program. The escape sequence used can be alone or a part of a longer sequence.

Soft key trigger sequence:

€ & f <0−8> E

where: <0-8

< 0.8 > is the soft key number

= 0

 $f_1 = 1$   $f_5 = 5$ 

 $f_2 = 2$ 

 $f_6 = 6$ 

= 7

For example, to trigger the hard key the following sequence would be used:



# **Soft Key Applications**

There are many applications of the soft keys. One application is the creation of "menu" operations. For example, the keys can be loaded with the escape sequences to find and read various files on a tape cartridge.

**Example:** Program the soft keys to find a file on the left tape drive and copy the file to the display. This can be done using the following technique:


where: n =the number of the file to be read

To program the key to find and display file number 1 and label the key "FILECOPY":

The same procedure could be used for the remaining function keys.


Another application would be to change the control settings on the Keyboard Interface to configure the terminal for use with different computer systems.

Example: To program the 12 key to change the settings of Switches D, G, and H to open, closed, and open, the following sequence could be used (no label):

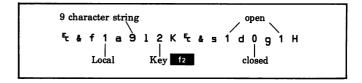


The soft keys can be used to hold log-on, program control, and log-off messages. This makes it easier for the terminal operator to use unfamiliar computer systems.


**Example:** A sample key assignment to log-on to the Hewlett-Packard 2000 Series Timeshare System might be as follows:

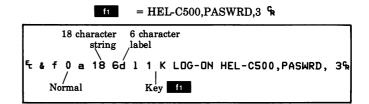

A second key could be used to call and execute a library program:

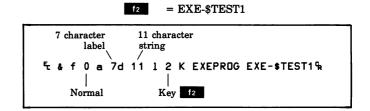

A third key could be used to log off of the system:

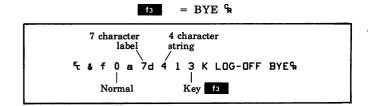

#### ADDITIONAL CONTROL FUNCTIONS

In addition to the control settings there are several control operations that can be controlled programmatically. These control functions are as follows:

- Bell G<sup>c</sup>
- Send Display ₹ d
- Wait € @
- Keyboard Disable € c
- Keyboard Enable <sup>Е</sup>ь
- Reset Terminal (Soft) ₹ g
- Reset Terminal (Full) ₹ E
- Turn On Monitor Mode ₹ v
- Terminal Self-Test ₹ z
- Data Comm Self-Test ₹ x
- Modem Disconnect ₹ f
- Program Down Loading է ձ ե or է ձ c
- Display message, command, or soft key label line ξ,c <command sequence>

#### Bell

The G<sup>c</sup> character causes the terminal to "beep". A beep is automatically generated at the end of each unprotected field in format mode and during normal operation as the cursor passes within eight positions of the right margin.

# **Send Display**

The fd sequence causes the terminal to send a block of the current workspace data to the computer. The data sent depends on the Line/Page setting of Keyboard Interface switch D and whether the terminal is in format mode or not.

Data is transmitted beginning at the current cursor position. If the terminal is strapped for page, data is transmitted until the end of the current display. If strapped for line, transmission stops at the end of the current line for non format mode or at the end of the current field if in format mode.

#### Wait

The terminal can be made to pause for approximately 1 second by sending it an  $\xi$ . Multiple commands can be used to obtain any desired time period.

# Keyboard Disable/Enable

The terminal keyboard can be locked by sending an  $\frac{1}{5}$  c. It must then be unlocked by sending an  $\frac{1}{5}$  b or by pressing the RESET TERMINAL key.

#### **Reset Terminal**

A programmatic "Soft Reset" can be made by sending an  $\epsilon$  to the terminal. A "Full Reset" can be made using  $\epsilon$  E.

Soft Reset ( g). A soft reset results in the following:

- Any error messages present are cleared, the normal display is returned and the keyboard is unlocked.
- 2. If DISPLAY FUNCTIONS is enabled, it is turned off.
- 3. Incomplete device selections are cleared. (Previous selections are retained.)
- 4. If the terminal is set for REMOTE, RECORD operations are ended.
- 5. Device operations (tape or printer) are stopped. If a tape drive was moving at the time the command was received, the tape will be rewound. In addition, if the tape drive was recording data, an end-of-data mark will be recorded before the tape is rewound.
- Current transmission of data stops. Data waiting to be sent to the computer is not sent. Partial messages from the computer are lost. The data communications facility is re-initialized.
- 7. All keyboard lights are turned on for 0.5 seconds.

Full Reset (E E). A full reset has the same effect as turning power on and consists of the following:

- The screen and memory are cleared, then TERMINAL READY is displayed in workspace 1. Format mode, display functions, and all programmable functions including the function keys (f0 — f8) are turned off or set to their default values.
- Device assignments are set to their default values, tapes (if present) are rewound to their load point. (An end-of-data mark is not written.)
- 3. All graphics functions are set to their default values.

#### NOTE

The CPU must wait one second after issuing & E before sending additional data.

#### **Monitor Mode**

Monitor Mode can be turned on by sending <sup>€</sup> y. Refer to Section V for a discussion of Monitor Mode.

#### **Self-Test**

The Terminal Self-Test can be executed by sending an  $\frac{\epsilon}{z}$ . The Data Comm Self-Test can be executed by sending an  $\frac{\epsilon}{z}$ . Descriptions of the self-tests are given in Section VII.

#### **Modem Disconnect**

The terminal can be directed to "hang up" the modem by sending an  $^{\xi}$  f. The terminal does this by lowering the CD (Data Terminal Ready) line for 1 second if 13260B data comm is used or 10 seconds if the terminal is configured for multipoint.

### **Program Down Load**

The <code>\frac{\xappa} & b</code> and <code>\frac{\xappa} & c</code> sequences allow special diagnostic programs to be loaded into the terminal and executed. The escape sequence must precede the program to be loaded. This function can be used by HP diagnostics only. The <code>\frac{\xappa} & c</code> functions the same as <code>\frac{\xappa} & b</code> except that the LOADER message is not displayed.

# Display Message, Command, or Soft Key Label Line

Any or all of the message, command, or soft key label lines may be displayed by sending <sup>E</sup>t, c DIsplay Window#<n>

where n 5 — message line

6 — command line

7 — soft key label line


# GRAPHICS CONTROL FUNCTIONS

#### INTRODUCTION

This section contains a description of the terminal's graphics functions and how they are used. The information and examples are intended for use in developing programs to control the graphics functions through escape sequences. Controlling the graphics functions through AGL (A Graphics Language) is described in *BASIC For Terminals Reference Manual*, part number 02647-90005. Additional information on how to use "stand alone" graphics features such as MULTIPLOT is contained in the User's Manual.

#### **GRAPHICS DISPLAY**

You can display graphics data by addressing points in a 720 by 360 array.

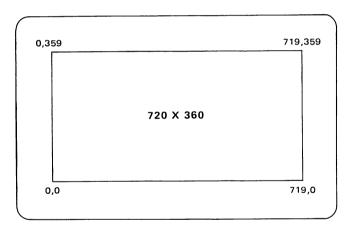

The graphics and alphanumeric data are displayed in the same area on the screen but are stored in separate RAM memories. This allows you to read or modify graphics and alphanumeric data separately.

#### NOTE

Display enhancements (blinking, inverse video, and half-bright) will affect the display of graphics data. The display enhancements affect alphanumeric character positions on the screen. Since the graphics data is displayed using the same screen dots as the alphanumeric data, it is also affected by the enhancements. The data in the graphics display memory is unchanged.



Figure 3-1. Location of Graphics Keys

#### **KEYBOARD GRAPHICS FUNCTIONS**

All of the graphics function commands can be entered from the terminal keyboard by the operator. Most of the functions are available through a special set of graphics control keys located to the right of the normal ASCII character set (see figure 3-1). Table 3-1 contains a list of the keys and a description of their functions. These keys can be used in both local and remote operation. This allows a combination of operator and program control of graphics functions to be used to make maximum use of the terminal's capabilities. Detailed information for using the graphics control keys is contained in the User's Manual.

Each key controls two functions. Pressing the key alone executes the command labeled on top of the key. Pressing both the function and shift keys executes the command labeled on the front of the key. The functions labeled on the front of the keys permanently alter the display (ie. ). These functions are selected by pressing the key and the function key. This makes a mistake less likely. The only graphics keys that repeat are those controlling zoom and the graphics cursor.

# PROGRAMMING GRAPHICS FUNCTIONS BY ESCAPE SEQUENCES

Graphics functions are controlled by parameterized escape sequences. All graphics escape sequences begin with ESC\*. The third character, always lower case, selects the type of graphics sequence. Table 3-2 lists the types of graphics sequences. For example, ESC\* p specifies a plotting sequence.


Table 3-1. Graphics Control Keys

KEY	DESCRIPTION	KEY	DESCRIPTION
MATI ROT	Turns multiplot on. If plot from display has been selected, or a point count specified, multiplot will turn itself off. Otherwise, the STOP key must be used to terminate multiplot.(See Multiplot.)	A DSP  CLEAR  SRAW	Toggles the alphanumeric display.  Erases the graphics image memory.  Draws a vector from the current pen postion to the graphics cursor. Only works if
G CURSOR	Toggles the graphics cursor on and off.		the cursor is on.
0000	Move the graphics cursor. More than one can be pressed for diagonal motion.	MOVE	Moves the pen to the graphics cursor without drawing a vector. The graphics cursor must be on.
CURSON FAST	Speeds up the graphics cursor if pressed in conjunction with the cursor keys. The rate returns to normal when released.	TEXT	Selects the graphics image memory as the destination for all text. Characters en- tering from the keyboard, datacomm, or
2002	Toggles zoom mode. When zoom is turned on, the area about the graphics cursor is magnified by the amount set by the / keys. Moving the cursor changes the zoomed area.		tape are drawn as vectors in the graphics memory, using the current size and angle as specified by the and and keys. If the terminal is not in Compatibility Mode the drawing mode is set to jam pattern to allow for backspacing and retyping of
ZOOM N ZOOM OUT	Increments the zoom magnification.  Decrements the zoom magnification.		characters. If the terminal is in Compati- bility Mode the drawing mode is un- changed. (Both Drawing Mode and Compatibility Mode are discussed later in
STOP	Turns multiplot and graphics text mode off. (See Multiplot.)		this section.)
SHIT	Key held down selects the alternate key functions.		The graphics cursor indicates the posi- tion of the next character. Moving the graphics cursor resets the start of line point. Carriage return, line feed, and
MES	Draws the axes, tic marks, and labels specified in the multiplot menu. (See Multiplot.)		backspace work as expected even on inverted text. The week terminates this mode.
MULTIPLOT MENU	Toggles the menu for multiplot parameters. (See Multiplot.)	T SZE	Increases the character size from 1 to 8X. The smallest character is a 5 by 7
Re UN	Toggles the rubber band line connecting the current pen position and the graphics cursor.		matrix in a 7 by 9 cell. Increasing the size makes the dots bigger; the character is still drawn as a 5 by 7 matrix.
G DSP	Toggles the graphics display, to inhibit the graphics image without erasing.	TANG	Sets the character orientation (multiples of 90 degrees) and turns slant on or off.

Table 3-2. Summary of Graphics Sequence Types

ESCAPE SEQUENCE	DESCRIPTION
₹ <b>*</b> p	Vector Plotting
€c + m	Vector Drawing Mode
<sup>€</sup> c + d	Display Control
<b>€</b> c + 1	Labeling
€ <b>+ t</b>	Compatibility Mode
<b>€ #</b> 5	Graphics Status
€c + r	Raster Dump (device control)
₹ <b>+</b> b	Raster Dump (data transfer)

Subsequent characters in the control sequence are read as either parameters or commands, depending on the location of the character in the ASCII table.

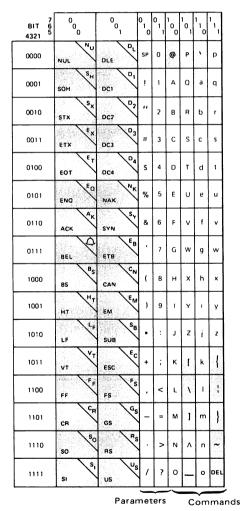

BIT 7654321

0	0	Control Code
0	1	Parameter
1	0	Command and Terminate Sequence
1	1	Command and Continue Sequence

### **Control Codes**

Control codes are generally ignored, with the exception of ESC. If an ESC character is detected and the previous graphics control sequence has not been properly terminated with a "Z" or some other valid capital character, the ESC will cause the execution of the previous sequence to be terminated. The new escape sequence will then be executed.

### Commands

Graphics commands come from columns 4-7 of the ASCII table, the upper and lower case letters (A-Z and ^). Both upper and lower case commands execute the same function. Upper case letters terminate the sequence and cause it to be executed. You can use more than one command in a sequence.

Graphics sequences can be any length. (The terminal ignores CR and LF characters in the middle of graphics sequences.) For example, to plot a figure containing 100 points the escape sequence could appear as follows:

This could cause problems if an error occurs and the system tries to report it in the middle of a long sequence. Since most systems use upper case characters for messages, the first character of the message would end any graphics sequence that might be in progress. Letters that have not been assigned a function for a particular graphics sequence are treated as NOPs and if the are lower case, are ignored. If upper case, they will end the sequence. The letter z has been defined as a NOP in all sequences so that a capital Z can always be used to end a graphics escape sequence.

### **Parameters**

Parameters come from columns 2 and 3 of the ASCII table (SPACE through?). Most parameters are simply the ASCII numeric characters used to represent data coordinates or to select one of several settings. Binary formatted data is generated by appending the bits 0 1 to five bits of binary data. Note that in binary formats, spaces are treated as data and are not ignored or used as delimiters. Both ASCII and binary data formats are described later in this section.

Parameters precede their associated commands (postfix notation). The most frequently used parameters are vector data. Refer to the discussion of Vectors for additional information on parameters used to define vector operations.

### **Examples:**

The programmable graphics functions are organized into five major groups.

- Graphics Display Control
- Plotting
- Graphics Text
- Multiplot
- Compatibility Mode
- Raster Dump

The remainder of this section contains descriptions of each of these functional groups.

### **GRAPHICS DISPLAY CONTROL**

Graphics display control is made up of the functions used to control the graphics cursor, the portion of the graphics memory that is currently being displayed, or the state of the graphics memory. These functions are as follows:

- Graphics Cursor Control
- Zoom
- Graphics Memory Control

Table 3-3 lists the escape sequences for each of the graphics display control functions.

Table 3-3. Graphics Display Control Functions

FUNCTION	CODE	DESCRIPTION				
Graphics Curso	or Control					
Cursor On Cursor Off Move Absolute Move Relative  Cursor On  Cursor Off  Curs		Turn on the graphics cursor. Turn off the graphics cursor. Position the graphics cursor. Position the graphics cursor.				
Zoom						
Zoom On Zoom Off Zoom Size Zoom Position  Zoom Position  Zoom Position  Zoom Position  Zoom Position  Zoom Position		Turn on the zoom function. Turn off the zoom function. Set the zoom size. Set the zoom position.				
Graphics Memo	ory Control					
Clear Memory   E+da Set Memory   E+db Display On   E+dc Display Off   E+dd		Turn off all dots in graphics memory. Turn on all dots in graphics memory. Enable the graphics display. Inhibit the graphics display.				

# **Graphics Cursor Control**

A separate graphics cursor is available for use in locating points in the graphics display. The graphics cursor is used by the terminal operator to input position data or to interact with a graphics application program.

**GRAPHICS CURSOR ON/OFF.** The graphics cursor is initially off (power on or full reset). Turning the cursor on or off does not effect the data in graphics memory. (The graphics cursor is also turned on when graphics text operation is enabled.)

Graphics Cursor On:

€\*dk

Graphics Cursor Off:

€\*d1

**GRAPHICS CURSOR POSITIONING.** The graphics cursor is initially at position (0,0) after power on or a full reset. The cursor can be positioned (even if it is not turned on) using either absolute or relative coordinates. In the following sequences X and Y give the new cursor position. Refer to Vectors for a discussion of absolute and relative coordinates.


Position Graphics Cursor Absolute:

€\*d<X,Y>o

Position Graphics Cursor Relative:

₠∗d<Х,Ү>р

**Example:** The cursor is currently at position 100,100 and off. Move it 50 units to the right and 20 units down from its current position and turn it on.

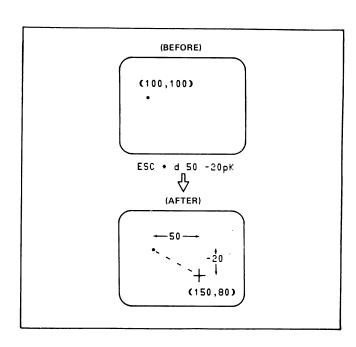

### Zoom

You can display a portion of the graphics memory data at increased size. The zoom size (magnification) settings are from 1 to 16 times. The data in the graphics memory is not lost or changed. As much of the graphics memory as will fit on the screen at the new size is displayed. The effect is similar to "windowing". The portion of the graphics memory to be centered on the screen can be changed allowing you to "pan" through the entire graphics memory at the magnified setting.

**ZOOM SIZE.** The zoom size is initially set to 1 after power on or a full reset. The size can be set to one of sixteen sizes (1-16). The magnified data is not displayed until the zoom function is turned on.

Set Zoom Size:

€\*d<size>i

where:

<size> is 1-16

**ZOOM POSITION.** The zoom position is initially the graphics cursor position. It can be set to any position in graphics memory using ASCII absolute coordinates. The selected data is not displayed until the zoom function is turned on.

Set Zoom Position:

€\*d<X,Y>j


If multiple images are being displayed by changing the zoom position to display only a portion of the screen at a time, it is possible to insert a delay of approximately 16 ms between the images (frames) by inserting the "zoom on" command between positioning commands. (Refer to Inserting Delays In Graphics Operations.)

**Example:** Step the zoom position between (50,50), (50,250), (250,250), and (250,50) at 16 ms intervals.

₹ \* d 50,50j g 50,250j g 250,250j g 250,50j g 50,50J

**ZOOM ON/OFF.** Once a zoom size and position are selected the data is displayed be turning on the zoom function. If the cursor is outside of the zoom window, turning on the zoom function causes the graphics cursor to be moved to the zoom position.

Data displayed on the screen while the zoom function is on can be modified using the graphics memory set and clear commands. Most of the data in the graphics memory that is not being displayed is unaffected by the set and clear memory commands (see the note in the following example) but can be modified using the plotting commands described later in this section (refer to Plotting Commands). Moving the graphics cursor while zoom is turned on will cause the display to "pan" across the data in the graphics memory. If the graphics cursor is moved beyond the edge of the "zoom window" the window will move with the cursor. This causes the zoom position to change accordingly.

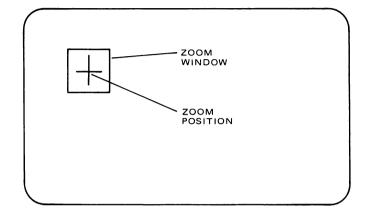

Note: Up to 16 points to the left and right of data displayed in the zoom window may be affected by the set or clear commands.

**Example:** Set the zoom size to 8, center the zoom window at 100,200 and turn on the zoom function.

€ \* d 8i 100 200jg

# **Graphics Memory Control**

The graphics display can be turned on or off or the entire memory can be set to all ones (dots on) or all zeros (dots off).

**GRAPHICS DISPLAY ON/OFF.** The graphics display and graphics cursor can be turned on or off. The data in the graphics memory is unaffected.

Graphics Display On:

€\*dc

Graphics Display Off:

€∗dd

GRAPHICS DISPLAY SET/CLEAR. The graphics data currently displayed on the screen can be set to all ones or cleared to all zeros. When used together with the zoom function this function can be used to clear or set blocks of the graphics memory.


Clear Graphics Memory:


€∗da

Set Graphics Memory:

€\*db

**Example:** Clear the lower left portion of the graphics display.

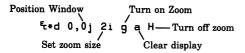

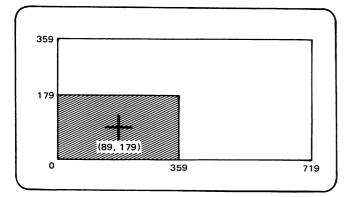

# Inserting Delays In Graphics Operations

Certain graphics operations are executed only at the end of a frame (drawing of the display). These operations take approximately 16 ms and can be used as delays to slow down or synchronize changes in the display. Refer to Set Zoom Position for an example.

OPERATION	CODE
Graphics Display On	€r+dc
Graphics Display Off	+dd+
Alphanumeric Display On	€∗de
Alphanumeric Display Off	€*df
Zoom On	€+dq
Zoom Off	€∗dȟ
Set Zoom Size	€c∗di
Set Zoom Position	€+di

# GRAPHICS DRAWING MODE PARAMETERS

There are several drawing parameters that can be set to allow a wide variety of drawing capabilities. These parameters select whether data will be stored in the graphics memory as 1's or 0's, define line or area patterns to be used when drawing vectors, position the relocatable origin, and define graphics text settings.

Graphics drawing control sequences begin with <sup>E</sup>t \* m followed by one or more of the drawing parameters. Table 3-4 lists the mode control commands.

# **Drawing Modes**

Vectors can be drawn by setting, clearing, or complementing the data in the graphics memory. Normally the memory is cleared and vectors are drawn by setting selected bits to make white lines on a dark screen. If instead you want black vectors on a white screen, you can begin by

setting memory (refer to the Set Memory command), select a clear or complement line type and draw dark vectors (refer to the example that follows). Figure 3-2 illustrates the various drawing modes.

Table 3-4. Graphics Mode Commands

र * m <parameters></parameters>						
PARAMETERS	DESCRIPTION					
а	select drawing mode					
b	select line type					
С	define line pattern					
d	define area pattern					
е	area fill, absolute					
f	area fill, relocatable					
j	set relocatable origin					
k	set relocatable origin to pen position					
I	set relocatable origin to cursor position					
m	set graphics text size					
n	set graphics text direction					
0	turn on character slant					
р	turn off character slant					
q	set text origin					
r	set graphics defaults					
z	NOP					

Set Drawing Mode:

€ \* m <parameter> a

- 0 Graphics memory not changed.
- 1 Clear (turn off graphics bits).
- 2 Set (turn on graphics bits).
- 3 Complement (toggle the graphics bits).
- 4 Jam (turn bits on or off according to the data).

CLEAR MODE. Clear mode causes selected display bits to be turned off. The "selected bits" are those that are "on" in the line pattern. If a solid line type (the default) has been selected, all of the bits in a vector will be selected. In clear mode this means that all of the dots making up a vector will be turned off. This allows you to draw dark vectors on a white background. Only those bits that are on in the pattern are cleared. Bits that are off in the pattern do not affect the display.

**SET MODE.** Set mode is similar to clear mode except that the selected bits are turned on instead of off. Only the bits that are on in the line type are affected.

**COMPLEMENT MODE.** Complement mode causes the selected display bits to change state (on to off, off to on). Again only those bits that are on in the line type or pattern are affected.

**JAM MODE.** Jam mode differs from the other modes in that both the bits that are on in the line type or pattern and the bits in the pattern that are off affect the display. Jam mode has the effect of overlaying the display with the pattern.

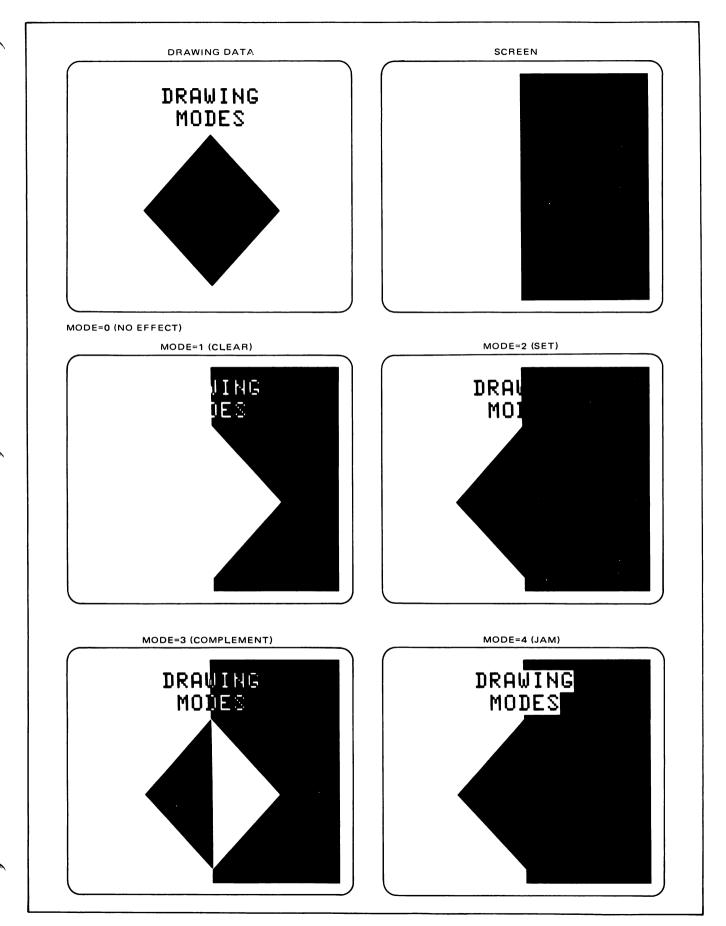


Figure 3-2. Examples Of Drawing Modes

### **Graphics Control Functions**

Selective Erase. A vector drawn in set mode can be selectively erased by redrawing it in clear mode. This will cause gaps to occur if the erased line is intersected by other lines. This problem can be overcome by initially drawing the line in complement mode and then redrawing it in complement mode to erase the line. This technique will preserve the original display. Complement mode is useful for drawing and erasing temporary figures.

**Example:** Select complement mode, draw a vector, and then erase the vector by redrawing.

```
€ * m 3A (select complement mode)

€ * p a f 100,300 300,300Z (draw vector)

€ * p a f 100,300 300,300Z (erase vector)
```

# **Drawing Patterns**

You can select the dot pattern used when drawing vectors or filling rectangular areas. Dotted and dashed lines can be drawn by selecting one of nine predefined line patterns or a user defined line or area pattern. This allows you to use different line patterns to distinguish between groups of plotted data or easily generate shading and cross hatching for use in engineering drawings, graphs or fabric patterns.

LINE TYPE. One of eleven line types can be selected. Once a line type has been selected all drawing vectors are drawn using that line type. The patterns for the predefined line types are shown in figure 3-3. Refer to the Define Line Pattern command for additional information.

Select Line Type:

두 \* m <line type> b

where: line

line type> is


- 1 Solid line (default)
- 2 User defined line pattern
- 3 User defined area pattern
- 4 Predefined pattern #1
- 5 Predefined pattern #2
- 6 Predefined pattern #3
- 7 Predefined pattern #4
- 8 Predefined pattern #5
- 9 Predefined pattern #6
- 10 Predefined pattern #7
- 11 Point plot

Figure 3-3. Predefined Line Type Patterns

Point plot causes a single point to be plotted at the coordinates specified by the data. This line type is useful for generating "scattergram" type graphs. If user defined area shading is selected (type = 3) the line patterns used are selected from the eight lines making up the area fill pattern (refer to Define Area Pattern). The display is divided into groups of eight rows and eight columns. Horizontal and vertical lines are drawn using the appropriate row or column from the area pattern. Diagonal lines are drawn using a solid vector.

**Example:** Select line type 9 and draw a figure using the new line type.

```
ኈ * m 9 B
ኈ * p a 0,0 200,0 200,100 0,100 0,0Z
```

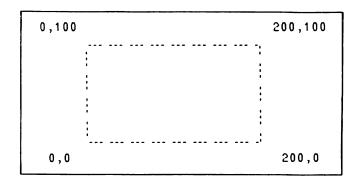

**Example:** Select the area pattern as the line type.

₹ \* m 3 B

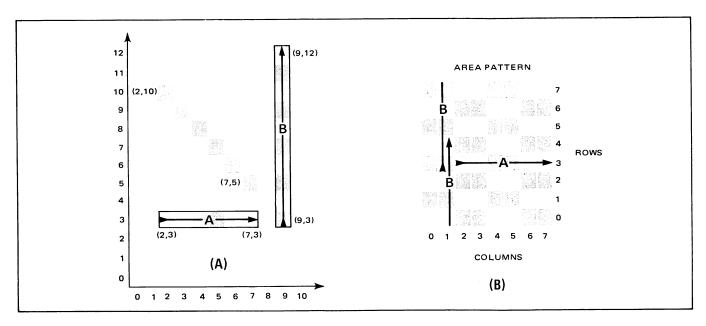


Figure 3-4. Using Area Patterns As Line Types

Drawing vectors (2,3)-(7,3), (9,3)-(9,12), and (3,7)-(7,3) using the area pattern shown in figure 3-4b would result in the drawing shown in figure 3-4a.

Adjacent horizontal or vertical lines using the user defined line type (type = 2) can be used to create patterns more complicated than those available in an  $8\times8$  area pattern. User defined line and area patterns are described in the following paragraphs.

**DEFINE LINE PATTERN.** The dot pattern used to draw vectors can be defined programmatically. Once a pattern is defined you must select the user defined line type (type = 2) using the Select Line Type command. Figure 3-5 gives examples of line patterns.

Define Line Pattern:

ዲ \* m «pattern» (scale» c

where: <pattern> is

the decimal value 0 to 255) defining an 8-bit binary pattern. For example,

 $\dots$  = 10101010 = 170.

<scale> is

a scale factor (1 to 16) to be applied to the pattern. For example, with a scale factor of 3 the pattern defined above would be as follows: ... ... ... ...

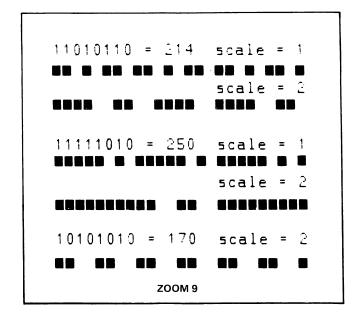


Figure 3-5. Examples of User Defined Line Patterns

Line patterns too complex to be obtained from an  $8\times8$  area pattern can be generated by plotting a series of lines and varying the patterns used for successive lines. Complex patterns such as those used in weaving can be generated easily using this technique.

**Example:** Define a pattern to generate the following vector:

**DEFINE AREA PATTERN.** An  $8\times8$  pattern can be defined for use in filling rectangular areas. The pattern can also be used to provide line patterns for horizontal or vertical lines when the area pattern is selected as a line type (type = 3). (Refer to Define Line Type.) Irregular shapes can also be built up by selecting the area shading pattern and then using successive lines.


The area pattern is defined using 8 parameters, one for each of the rows in the pattern. Each parameter is a decimal number (0 to 255) representing an 8-bit binary pattern. Refer to Define Line Pattern for additional information. The display is divided up into 8×8 cells. Every point on the display is mapped to a corresponding bit in the pattern. Drawing horizontal or vertical lines causes the corresponding row or column of the pattern to be used as the line pattern. Diagonal vectors will always be drawn using a solid line. Figure 3-6 contains sample area fill patterns.

Define Area Pattern:

where: <rew 0> is the 8-bit pattern for row 0
:

<row 7> is the 8-bit pattern for row 7

A simple checkerboard pattern would be defined as follows:

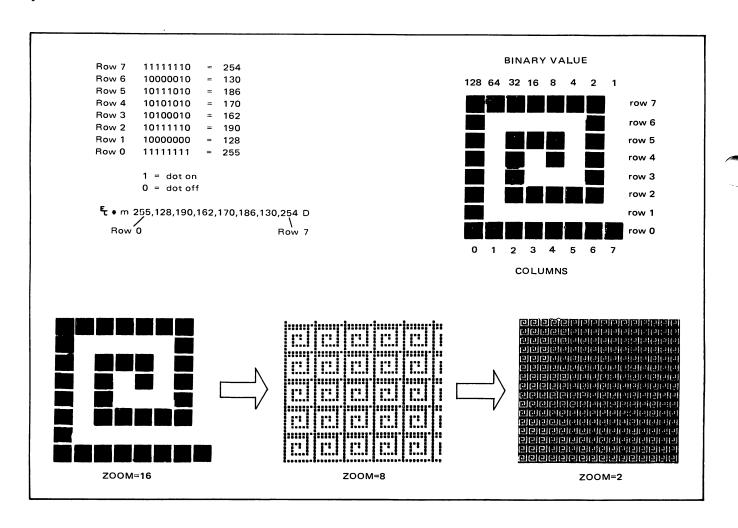

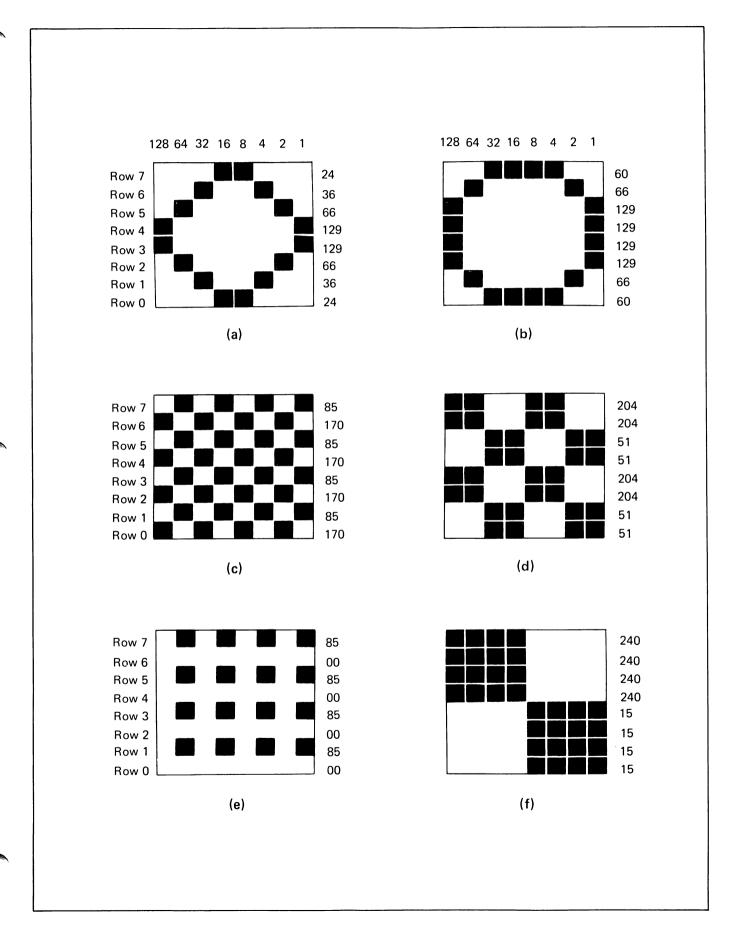


Figure 3-6. Area Pattern Examples

### Area Fill

A rectangular area can be filled with a pattern by simply sending the lower left (LL) and upper right (UR) coordinates of the rectangle. The coordinates can be in either absolute or relocatable format. The pattern used is selected by the Line Type command. This allows a choice of predefined and user defined line patterns as well as an  $8\times8$  bit area pattern (refer to Define Area Pattern).

An easy way to selectively erase a portion of the graphics display would be to set the drawing mode to clear, select the solid vector line type (type = 1), and then use the area fill command to select the area to be cleared. Area fill is also useful for shading bar graphs or engineering drawings. The soft keys can be loaded with the proper escape sequences and then triggered to generate area patterns locally using either the current cursor or pen position as a coordinates.

AREA FILL, ABSOLUTE. The absolute area fill command uses the absolute coordinates of the area.


Area Fill, Absolute:

ቼ ∗ m «XLL,YLL» «XUR,YLR» e


where: <XLL,YLL> and <XUR,YUR> are the absolute coordinates of the lower left and upper right corners of the area to be filled.

Example: Draw a box and then complement the entire graphics display. Note that repeating the \* m sequence would restore the original display.


€\*p a f 150 150 200 150 200 200 150 200 150 150 Z

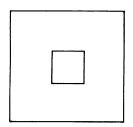

E \* m 3 a 1 b 0 0 719 359 E

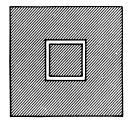


**Example:** Clear the display area with lower left (LL) coordinates 0,0 and upper right (UR) coordinates 100,100.

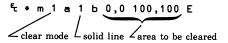

If a predefined or user defined line pattern is selected, the area fill command can be used to provide area shading or complex patterns. If the user defined area pattern is selected, the area will be filled with the 8x8 area pattern (refer to Define Area Pattern).

**Example:** Using the area fill pattern shown in figure 3-6a, shade the area with XLL,YLL = 50,50 and XUR,YUR = 100,100.

5 + m 2 a 3 b 24 36 66 129 129 66 36 24 d 50 50 100 100 E

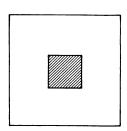

AREA FILL, RELOCATABLE. The relocatable area fill command uses area coordinates in relocatable ASCII format.


Area Fill, Relocatable: Ft \* m < XLL, Y

t \* m <XLL,YLL> <XUR,YUR> f

where: <XLL,YLL> and <XUR,YUR> are the relocatable coordinates for the lower left and upper right corners of the area to be filled.

**Example:** Using the area fill pattern shown in figure 3-6c, shade a  $50 \times 50$  unit area with the lower left corner at the current cursor position.

% \* m 2 a 3 b 85 170 85 170 85 170 85 170 d 1 0 0 50 50 F

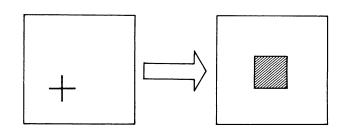

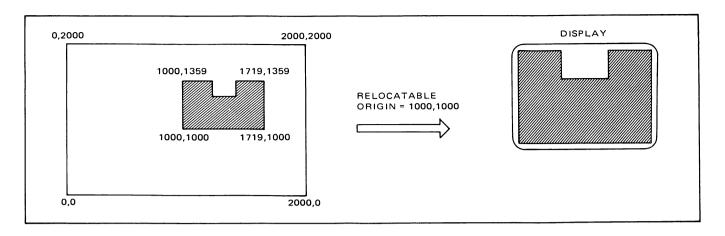


Figure 3-7. Relocatable Origin

### Relocatable Origin

The relocatable origin allows you to use one set of data and drawing commands to display a figure at several different positions on the screen. (See the resistor example under ASCII Relocatable Format.)

You can also display portions of a figure that is too large to fit on the screen. You can create a "window" that can be positioned to display any 720 by 360 unit portion of the figure. The value of the relocatable origin is added to the relocatable data to obtain the coordinates used to draw the data. Figure 3-7 illustrates the effect of a Relocatable Origin on the display.

This technique eliminates the need to check boundary conditions or compute new data in order to display the desired portion of the figure. Simply set the relocatable origin to the proper value to display the desired portion of the figure and then send the unchanged figure data to the terminal. The terminal will then automatically select and adjust the "window" data.


SET RELOCATABLE ORIGIN ABSOLUTE. The relocatable origin can be set to any absolute coordinates using ASCII absolute format (-16384 to 16383).

Set Relocatable
Origin Absolute:

• m (X,Y) j

where: <x, y> are the x and y coordinates in ASCII absolute format.

**Example:** Set the relocatable origin to display the box in the figure so that the box is positioned at the lower left corner of the display.

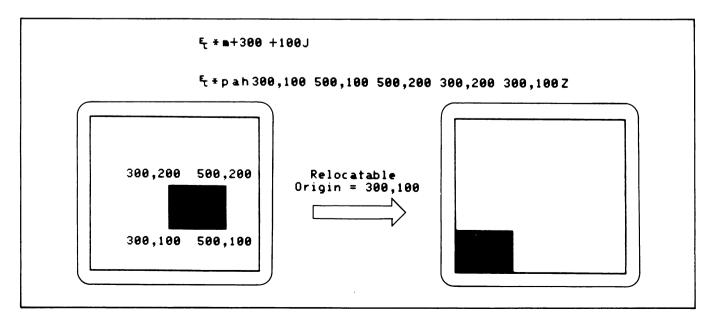

SET RELOCATABLE ORIGIN TO CURRENT PEN POSITION. The relocatable origin can be set to the current pen position.

Set Relocatable Origin To Current Pen Position: € \* m k

SET RELOCATABLE ORIGIN TO GRAPHICS CURSOR POSITION. The relocatable origin can be set to the current graphics cursor position.

Set Relocatable Origin To Graphics Cursor Position:



### **Rubber Band Line**

The "rubber band" feature can be used to preview vectors before they are stored in the graphics memory or sent to the computer. This feature is normally used by the operator when inputing graphics data from the keyboard. When the rubber band feature is enabled, a temporary line is displayed in the current line type (refer to Line Type). The line is shown extending from the current pen position to the graphics cursor. The line is dynamic and will follow the cursor as it is moved. The line is not stored until a draw command is entered.

Rubber Band Line On:

€ \* d m

Rubber Band Line Off:

**ૄ** \* d n

# Selecting The Graphics Default Parameters

Graphics parameters can be set to their default (power on or full reset) values. Table 3-5 lists the various parameters and their default values. Additional information can be found under the discussions of the individual parameters.

Set Graphics
Default Parameters:

€ \* m r

The current graphics mode and settings can be obtained with graphics status requests. Graphics status requests are described in Section VI, Status. It may be desirable to reselect graphics settings before you send graphics data to the terminal.

Table 3-5. Graphics Parameter Default Values

PARAMETER	DEFAULT VALUE
Pen Condition Line Type Drawing Mode Relocatable Origin Text Size Text Direction Text Origin Text Slant Graphics Text Graphics Video Alphanumeric Video Graphics Cursor Alphanumeric Cursor Rubber Band Line Zoom Zoom Size Compatibility Mode Page Full Strap GIN Strap	up 0 set 0,0 1 1 1 (left, bottom justified) 0 (off) off on on off on off off 1 1 (in) 0 (CR only)

### **PLOTTING SEQUENCES**

All vector plotting sequences are initated by ESC  $^{*}$  p. Table 3-6 lists the commands that can be used within a plotting sequence.

Table 3-6. Graphics Plotting Control Functions

ਦ * p <parameters and="" data=""></parameters>						
PARAMETER	DESCRIPTION					
а	lift the pen					
b	lower the pen					
С	use graphics cursor position as new point					
d	draw a single dot at the current pen position					
е	set relocatable origin = current pen position					
f	use ASCII absolute format					
g	use ASCII incremental format					
h	use ASCII relocatable format					
i	use binary absolute format					
j	use binary short incremental format					
k	use binary incremental format					
1	use binary relocatable format					
z	NOP/synch					

After ESC \* p has been sent, the drawing format is normally specified before data is sent.

If no format is specified, ASCII absolute is assumed. There is no explicit draw vector command. When enough parameter bytes to specify a single end point have been received (the number depends on the format used), the pen is moved from its current position to the new end point. (See figure 3-8.) If the pen is down, a vector will be drawn. If

the pen is up, the pen is moved to the new point (without drawing a vector) and lowered. The new end point becomes the current pen position.

Note that if a parameter byte is lost or garbled in transmission, all following end points will be improperly read. To minimize data errors caused by the loss of a data byte, any command can be used to reset the parameter count and restore synchronization. Nops (z), redundant format, or pen down commands can also be inserted to insure synchronization if necessary.

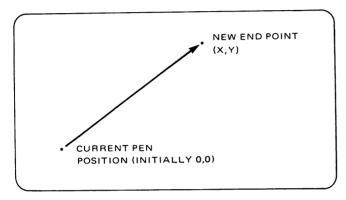


Figure 3-8. Current Pen Position And New End Point

Graphics sequences can extend indefinitely. In general, longer sequences are preferred as they minimize the overhead necessary for a plot sequence. ESC \* p <format> must be sent for each series of vectors. As the sequence length decreases, the percentage of preamble characters increases, and the vector drawing rate goes down. The worst possible case would be to send ESC \* p <format> for each vector; approximately 50% of the characters sent would be overhead, reducing vector speed by a factor of 2.

The general format for an absolute plotting sequence is:

% \* p i a <byte1> <byte2> <byte3> <byte4>(z)
<byte1> <byte2> <byte3> <byte4> ...
...<byte1> <byte2> <byte3> <byte4>Z (or any capital command)

Each block of 4 bytes specifies a single point. The "i" indicates that absolute format is to be used. The "a" raises the pen before it is moved to the point specified by the next four bytes and lowered. A NOP (z) can be added to insure synchronization, if necessary. The lowered pen draws a vector as it moves to the next point, and so on. The capital "Z" terminates the plotting sequence.

The vector end point formats allow the pen to be moved completely off the screen (an absolute coordinate of 1000, for example). The actual range of the pen position can be from -16384 to 16383. Vectors that extend beyond the screen are clipped so that they will not wrap around.

#### Pen Control

The terminal uses the concept of a "pen" in drawing vector data. The pen can be lifted or lowered as well as be positioned using absolute or relative coordinates. For example, the pen is lifted, moved to a starting coordinate, lowered and moved to an endpoint to draw a line. The pen is initially in the up state and positioned at absolute coordinates 0,0 following power up or a full reset. If the pen is raised and coordinates given, the pen is moved to the coordinates and then lowered. The pen is normally left in the down position.

Raise Pen: Fig. 8

Lower Pen: Fig. 9 b

### **Vectors**

Graphic data is made up of vectors. Each vector is specified by the current graphic starting point and an end point. The current graphic starting point is one of the following:

0,0 Initial starting point

Last point defined by the user with the MOVE key
Last point defined by the user with the DRAW key
Last point defined by the graphics cursor (ESC \* p c)
Last point defined by data in a draw or move command
(ESC \* p f/g/h/i/j/k/l)

Graphic points are specified in one of following formats:

- ASCII Absolute
- ASCII Incremental
- ASCII Relocatable
- Binary Absolute
- Binary IncrementalBinary Short Incremental
- Binary Relocatable

If no format is specified in the graphic command, ASCII absolute format is assumed. More than one point can be given in a command. This minimizes communications overhead. Tables 3-7, 3-8 and 3-9 provide a reference for computing data bytes used in the various vector formats.


### **ASCII Formats**

In the ASCII formats, coordinates are specified with ASCII characters 0 through 9. This means that numeric characters generated by a simple print statement can be used to specify X,Y pairs. The first value is used as the X coordinate, and the second as the Y coordinate.

Spaces or commas must be used to delimit the X and Y values. Excess delimiters are ignored. Digits following a decimal point are ignored (i.e. 123.456 is read as 123).


Exponential notation cannot be used. Consequently, the values must be in integer form. The number of bytes necessary to specify a single end point depends on the magnitude of the values.

ASCII ABSOLUTE FORMAT. The values used in the ASCII absolute format can range between -16384 and 16383. Note that only points where X is in the range 0 to 719 and Y is in the range 0 to 359 will be visible on the screen. The following example draws vectors around the perimeter of the screen:

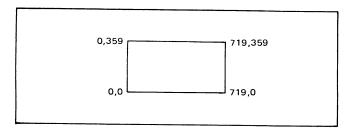

Since no format is indicated, ASCII absolute is assumed. The "a" raises the pen, which is moved to (0,0) and lowered. Vectors are then drawn to (719,0), (719,359), (0,359), and back to (0,0). (Note that the values are delimited by spaces or commas. The capital Z (a nop) terminates the sequence. Imbedded carriage return and line feed characters are ignored.


ASCII INCREMENTAL FORMAT. In the ASCII incremental format you can specify a delta X and a delta Y. These values are added to the current pen position to obtain a new end point. The first value is read as delta X and the second as delta Y. For example to draw a square 100 units on a side, the following sequence could be used:

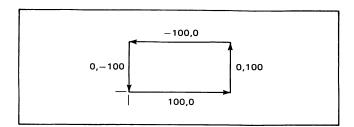

Beginning at the current pen position, a series of vectors is drawn by moving the pen 100 units to the right, up 100 units, left 100 units, and finally down 100 units. The same figure could have been drawn at any screen location by first positioning the pen to the desired starting point before sending the drawing sequence.

ASCII RELOCATABLE FORMAT. The ASCII relocatable format allows you to use a relocatable origin to be added to the incoming X and Y coordinate values. The resultant values are then treated as absolute coordinates by the terminal. The relocatable format allows you to use absolute data as if it were incremental by merely changing the relocatable origin. For example, symbol elements specified in absolute coordinates can be drawn in different locations as shown in the following example.

**Example:** Draw a resistor symbol stored in absolute coordinates at screen locations 50,100 and 200,100.

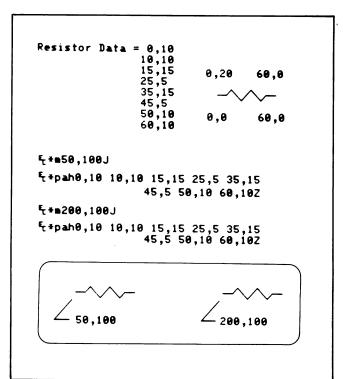

### **Binary Formats**

In binary format all points are sent in a packed binary format. The coordinate values are sent using the bit patterns of the ASCII characters listed in table 3-7. The number of characters required to specify a coordinate depends on the format used. The values for X and Y coordinates can be from -16384 to 16383.

BINARY ABSOLUTE FORMAT. Binary absolute data is plotted with respect an origin at 0,0. Four bytes are required to specify a single end point. A 10 bit coordinate in the range 0-1023, is sent for both x and y.

The bytes are ordered as follows:

BII	/	6	5	4	3	2	1	
BYTE 1	0	1	хэ	X8	X7	Х6	X5	ні х
BYTE 2	0	1	X4	ΧЗ	X2	X 1	ΧO	LOW X
BYTE 3	0	1	Y9	Y8	Y7	Y6	Y5	HI Y
BYTE 4	0	1	Y4	Υ3	Y2	Y1	Υ0	LOW Y

Although it is possible to send coordinates in the range 0 to 1023, only points in the range 0-719 for X, and 0-359 for Y are visible on the screen. Vectors going off the screen are clipped. If the data requires scaling, this must be done before the data is sent to the terminal.

The following example shows how the 4 data bytes are computed. The numbers are converted to the 10 bit binary equivalent. Bits 7 and 6 are set to 01 to indicate a parameter.

```
0 = 00000 00000
X = 0 = 00000 00000
                                  HIY LOWY
       HI X LOW X
            BYTE 1 = 01 00000 = SPACE HI X
            BYTE 2 = 01 00000 = SPACE LOW X
            BYTE 3 = 01 00000 = SPACE HI Y
            BYTE 4 = 01 00000 = SPACE LOW Y
X = 360 = 01011 01000
                          Y = 180 = 00101 10100
          HIX LOW X
                                    HIY LOW Y
              BYTE 1 = 01 01011 = +
                                      HI X
              BYTE 2 = 01 \ 01000 = (
                                      LOW X
              BYTE 3 = 01 00101 = %
                                      HI Y
                                      LOW Y
               BYTE 4 = 01 \ 10100 = 4
```

An escape sequence to draw a vector from 0,0 to 360,180 is as follows:

ESC\* p selects a plotting sequence. The "i" specifies absolute format. The "a" raises the pen up. The first 4 bytes (all spaces) move the raised pen to 0,0, where it is lowered. The next 4 bytes specify the point 360,180. After the 4th byte is received, the pen is moved to that point, drawing a vector. The capital "Z" terminates the escape sequence. Note that if spaces are used in the data sequence they are interpreted as data resulting in an improper plot.

BINARY SHORT INCREMENTAL FORMAT. The short incremental format uses two bytes to specify a delta X and a delta Y in the range -16 to +15. The five least significant bits are interpreted as a signed, two's complement number. This number is added to the current pen position to obtain the new end point. The data bytes are ordered as follows:

```
BIT 7 6 5 4 3 2 1
BYTE 1 0 1 < DELTA X >
BYTE 2 0 1 < DELTA Y >
```

The following example illustrates the computation and use of the short incremental format:

```
DELTA X = -12 = 10100 DELTA Y = 6 = 00110
BYTE1 = 01 10100 = 4 DELTA X
BYTE2 = 01 00110 = & DELTA Y
```

The following sequence moves the pen to 360,180 in absolute format, then draws a vector to X = 360-12 = 350, y = 180+6 = 186.

```
E * p i a + ( % 4 j 4 4 \text{ Short Incremental Short Incremental Short Incremental vectors
```

BINARY INCREMENTAL FORMAT. Incremental is similar to short incremental, but with a larger range. Using six bytes, delta X and Y can range from -16384 to +16383.

```
BIT 7 6
                     3
                          2
BYTE1 0 1 DX14 DX13 DX12 DX11 DX10 HI DELTA X
                                   MID DELTA X
BYTE2 0 1 DX9 DX8 DX7
                         DX6
                              DX5
BYTE3 0 1 DX4
              DX3
                   DX2
                         DX1
                              DXO
                                   LOW DELTA X
BYTE4 0 1 DY14 DY13 DY12 DY11
                              DY10 HI DELTA Y
BYTES 0 1 DY9 DY8 DY7
                        DY6
                              DY5
                                  MID DELTA Y
BYTE6 0 1 DY4
                   DY2 DY1
                              DY0
                                   LOW DELTA Y
              DY3
```

The following example shows how incremental data bytes are generated.

```
DELTA X = -400 = 11111
                         10011
                                  10000
                 HI DX
                         MID DX
                                 LO DX
           100 = 00000
                                  00100
                         00011
DELTA Y =
                         MID DY
                                 LO DY
                  HI DY
                            HI DELTA X
BYTE 1 = 01 11111 = ?
BYTE 2 = 01 10011 = 3
                            MID DELTA X
BYTE 3 = 01 \ 10000 = 0
                            LO DELTA X
                            HI DELTAY
BYTE 4 = 01 00000 = space
BYTE 5 = 01 01001 = #
                            MID DELTA Y
                            LO DELTAY
BYTE 6 = 01 \ 00100 = $
```

Table 3-7. Characters Used in Packed Data Formats

ASCII Character	Bit Pattern	ASCII Character	Bit Pattern
SP	01 0 0000	0	01 1 0000
!	01 0 0001	1	01 1 0001
"	01 0 0010	2	01 1 0010
#	01 0 0011	3	01 1 0011
\$	01 0 0100	4	01 1 0100
%	01 0 0101	5	01 1 0101
&	01 0 0110	6	01 1 0110
,	01 0 0111	7	01 1 0111
(	01 0 1000	8	01 1 1000
j j	01 0 1001	9	01 1 1001
*	01 0 1010	:	01 1 1010
+	01 0 1011	;	01 1 1011
,	01 0 1100	<	01 1 1100
-	01 0 1101	=	01 1 1101
	01 0 1110	>	01 1 1110
/	01 0 1111	?	01 1 1111

BINARY RELOCATABLE FORMAT. Binary relocatable format specifies absolute X and Y coordinates in the range -16384 to +16383 using 6 bytes. The value specified in the relocatable origin command is taken to be the 0,0 point. The actual screen address is computed by the terminal by adding the relocatable origin to the X,Y pair.

	1	2	3	4	5	6	7	BIT
ні 🔾	X 1 0	X11	X12	X13	X14	1	0	BYTE 1
MID )	X5	Х6	X7	Х8	Х9	1	0	BYTE 2
LOM >	X 0	X 1	Х2	ХЗ	X 4	1	0	BYTE 3
ні ч	Y10	Y11	Y12	Y13	Y14	1	0	BYTE 4
MID Y	Y5	Y6	Y7	Y8	Υ9	1	0	BYTE 5
LOW Y	Υ0	Y1	Y2	Υ3	Y4	1	0	BYTE 6

The following example shows how relocatable data bytes are computed.

```
RELOC X = -600 = 11111 01101 01000
                 HI X MID X LOW X
RELOC Y = 200 = 00000 00110 01000
                 HI Y MID Y LOW Y
BYTE 1 = 01 11111 = ?
                           HI X
BYTE 2 = 01 01101 = -
                           MID X
BYTE 3 = 01 \ 01000 = (
                           LOW X
BYTE 4 = 01 00000 = space
                           HI Y
BYTE 5 = 01 00110 = &
                           MID Y
BYTE 6 = 01 \ 01000 = (
                           LOW Y
```

Table 3-8. Absolute Format Addressing Bytes

	0	1	2	3	4	5	6	7	8	9
0 10 20 30 40	## #+ #4 #> !(	#! #+ #5 #?	#, #6 !#	#- #7 !!	#\$ #8 !"	#% #/ #9 !#	# & # O # : ! \$ ! .	#1 #1 #; !%	#( #2 #< !&	#) #3 #= !'
50 60 70 80 90	!2 !< "& "0	!3 !* "1	!4 !> "( "2	!5 !? ") "3	!6 "# "+	!7 "! "+ "5	!8 ", "6	!9 "# "7	!: "\$ ".	!; "% "/ "9
100 110 120 130 140	#\$ #. #8 \$" \$,	#% #/ #9 \$# \$-	# & # O # : \$ \$ \$ \$ .	#1 #; \$%	#( #2 #< \$& \$0	#) #3 #= \$'	#4 #> \$( \$2	#+ #5 #? \$)	#, #6 \$# \$+	#- #7 \$! \$+ \$5
150 160 170 180 190	\$6 %# %* %4 %>	\$7 %! %+ %5 %?	\$8 %" %, %6 &#	\$9 %# %- %7 &!	\$: %\$ %. %8	\$; %% %/ %9	\$ < % & % & % & % & % & % & % & % & % & %	\$ = % ' % 1 % ; & % %	\$> %( %2 %< &&	\$? %) %3 %=
200 210 220 230 240	&( &2 &< '&	&) &3 &= ,,	&+ &4 &> '(	&+ &5 &? ')	&, &6 /# /+	&- &7 '! '+	4. 48 ,,	4/ 49 	& 0 & : '\$ '.	&1 &; *%
250 260 270 280 290	/: (\$ (. (8 )"	′; (% (/ (9 )#	' < (& (0) (: )\$	(' (1 (; )%	() (2 ((	(? () (3 (= )'	(# (+ (4 () )(	(! (+ (5 (?	(" (, (6 )# )+	(# (- (7 )! )+
300 310 320 330 340	), )6 •# ••	)- )7 +! ++ +5	). )8 •" •,	)/ )9 •# •-	)0 ): +\$ +.	)1 ); +% +/ +9	)2 )< *& *0 *:	)3 )= +' +1 +;	)4 )> +( +2 +(	)5 )? +) +3 +=

Note: # indicates a "space" character; every coordinate address must consist of the two characters shown in the table.

	0	1	2	3	4	5	6	7	8	9
350 360 370 380 390	*> +( +2 +< ,&	*? +) +3 += ,'	+# ++ +4 +> ,(	+! ++ +5 +?	*** *, *6 ,#	+# +- +7 ,• , •	+\$ +. +8 ,"	+% +/ +9 ,*	+& +0 +: ,\$	+ ' + 1 + ; , %
400 410 420 430 440	, 0 , : - <b>\$</b> 	,1 ,; -% -/ -9	, 2 , <b>&lt;</b> - & - 0 - :	,3 ,= -, -1 -;	,4 ,> -( -2 -<	,5 ,? -) -3	,6 -# -+ -4 ->	,7 -! -+ -5 -?	,8 -, -, -6	,9 -#  -7
450 460 470 480 490	., .6 /# /•	.ø  .7 /! /+	.\$  .8 /" /,	.% ./ .9 /*	.& .0 .: /\$	.1 .; /%	.( .2 .< /& /0	.) .3 .= //	.* .4 .> /(	.+ .5 .? /)
500 510 520 530 540	/4 /> 0( 02 <=	/5 /? 0) 03 0=	/6 0# 0* 04 0>	/7 0! 0+ 05 0?	/8 0" 0, 06 1	/9 0# 0- 07 1!	/: 0\$ 0. 08 1"	/; 0% 0/ 09 1#	/ < 0 & 0 0 0 : 1 \$	/= 0' 01 0; 1%
550 560 570 580 590	1 & 1 0 1: 2\$ 2.	1' 11 1; 2% 2/	1 ( 12 1 < 2 & 20	1) 13 1= 2' 21	1 + 14 1 > 2 ( 22	1+ 15 1? 2) 23	1, 16 2# 2* 24	1- 17 2! 2+ 25	1. 18 2" 2, 26	1/ 19 2# 2- 27
600 610 620 630 640	28 3" 3, 36 4	29 3# 3- 37 4!	2: 3\$ 3. 38 4"	2; 3% 3/ 39 4#	2< 3& 30 3: 4\$	2= 3' 31 3; 4%	2> 3( 32 3< 44	2? 3) 33 3* 4'	3# 3+ 34 3> 4(	3! 3+ 35 3? 4)
650 660 670 680 690	4+ 44 4> 50 52	4+ 45 4? 5) 53	4, 46 5# 5+ 54	4- 47 5! 5+ 55	4. 48 5" 5, 56	4/ 49 5# 5- 57	40 4: 5\$ 5.	41 4; 5% 5/ 59	42 4< 5& 50 5:	43 4= 5' 51 5;
700 710	5 < 6 &	5 <b>=</b> 6′	5> 6(	5? 6)	6 <b>#</b> 6•	6! 6+	6 <b>"</b> 6,	6# 6-	6 <b>\$</b> 6.	6% 6/

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
	į	**	#	\$	*	8	,	(	)	*	+	,	-		/
-16	-15	-14	-13	-12	-11	-10	-9	-8	-7	-6	-5	- 4	- 3	- 2	- 1
^	1	2	3	4	_	6	7	Ω	a				ı	>	?

Table 3-9. Incremental (Short) Vector Bytes

# RECORDING GRAPHICS FUNCTIONS

The key can be used to display and record the graphics escape sequences or the action of graphics control keys. The control sequences are entered into the alphanumeric display each time a command is executed. The sequences can then be stored on cartridge tape using Edit Mode or a Record or Copy command. Table 3-10 lists the graphics control sequences that are generated when DISPLAY FUNCTIONS is on. Additional information on recording graphics functions is given in the User's Manual.

Table 3-10. Graphics Control Sequences Used In Record Operations

	-	
Key	Sequence	Description
CUREDA FAST SHIT ROLN	none none 돈 * dM 돈 * dN	Graphics cursor controls Graphics cursor fast
STOP	ቺ * aƁ ቺ * dT	
ZOOM IN	ዲ + dnI	"n" is the new zoom size
ZOOM OUT	ዲ + dnI	"n" is the new zoom size
<b>ZOOM</b>	ቺ * dH ቺ * dG	
G CURSOR	ቺ # dL ቺ # dK	
SHIFT 0 DSP	€ + dC € + dD	
SHIFT	€ + dA	
SHFT	ቺ * dF ቺ * dE	
SHIT	ቺ * dS ቺ * dK ቺ * m4A	Tums on cursor, jam pat- tern (if not in scaled Com- patibility Mode), and turns on Graphics Text Mode.
SHIFT T SZE	ቺ # mnM	"n" is the text size
SMA.T TANS	돈 * mnN 돈 * mO 돈 * mnN 돈 * mP	"n" is the text angle

Note that the DRAW and MOVE commands do not execute unless the graphics cursor is on.

Figure 3-9 shows the sequences generated when drawing a simple box. The graphics cursor is initially on and positioned at 0,0.

### **RASTER DATA TRANSFERS**

Image data can be transferred directly from the graphics memory to cartridge tape, compatible printer (such as the HP 2631G or HP 7245A) or datacomm. In addition, a cartridge tape or a remote CPU can transfer image data directly to the graphics memory. The following paragraphs discuss the data format for such transfers, as well as additional escape sequences that can be used to control the placement of image data on the 2647's display.

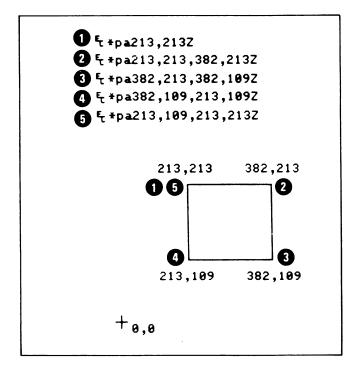


Figure 3-9. Recording Graphics Sequences

### **Raster Output Format**

The 2647 always outputs raster data in the same format, regardless of the destination. This format consists of a start record, 360 data records, and an ending record. The start record initializes the transfer and may dimension the display. Data records consist of a byte count followed by the proper number of binary data bytes. The data bytes contain the data for one image line, 720 dots, scanned left to right. (See figure 3-10.) The display is scanned top to bottom, so that the first data record represents the topmost raster line of the display. A data record will either contain 90 bytes (720 dots) or, in the case of a blank raster line, will not contain any data. The ending record terminates the transfer. Escape sequence preambles are used to differentiate the different types of records.

When transferring the raster data into the graphics memory, the current drawing mode is used. Jam mode copies the data exactly, complement mode complements the memory, etc.

The S and T parameters inform the receiving device of the size of the picture. Some devices can use this information to center the picture. If the destination device is the datacom, and the G and H straps on the keyboard are closed (DC1 handshake with standard datacom), a DC1 control character must be sent by the receiving device on a record by record basis to initiate the transfer of each record. That is, each time the receiving CPU sends DC1, one raster record will be sent. If this handshake is not enabled, the entire display is sent without stopping.

# Sending Image Data from CPU to the 2647

Using a format similar to the example above, a remote CPU can send image data to the 2647. • r A is first sent to initialize the terminal for a raster transfer. Before the binary data for each data record is sent, an ENQ/ACK handshake must be performed as follows, to allow time for the terminal to go into binary mode.

- 1. Send 5 \* b 90 W 5.
- 2. When the terminal sends back 4, send the 90 data bytes.

This handshake is similar to that used when writing binary data to tape. If no data is sent (5 b 0 W for a blank line) the ENQ/ACK handshake need not be done. Fewer than 90 bytes can be sent. As each line is sent, it is drawn below the previous line, so the data must be sent left to right, top to bottom. Commands described in the next paragraph can be used to position the image anywhere on the screen.

POSITIONING COMMANDS. When the 2647 copies the graphics memory to tape or other destination, the entire graphics memory is always transferred. When sending data to the terminal, however, it is possible to transfer less than a full screen. The data sent can be positioned anywhere on the CRT. It is also possible to select and display only a subset of the data sent to the terminal ("windowing"). (See figure 3-13.)

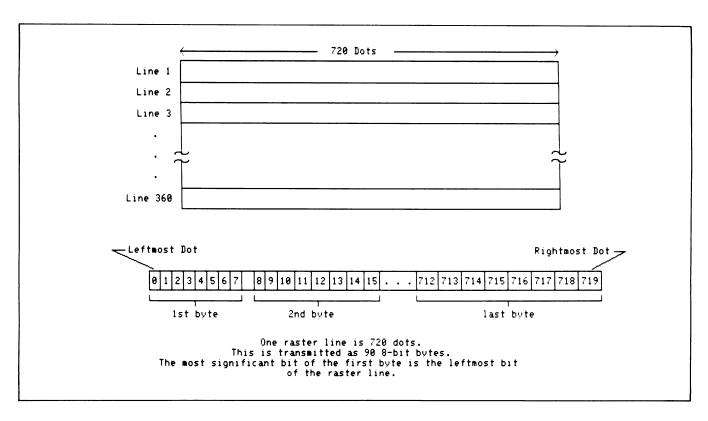


Figure 3-10. Raster Data Format

X and Y Offsets. Ordinarily, the starting point for drawing raster data is the upper left corner of the screen. That is, when f r A is received, the pen position is initialized to that point. It is possible to offset that point as follows:

For example, if it was desired to move the starting point down 100 dots from the top, and in 40 dots from the left side (see figure 3-11), then the following sequence would be used to initialize the transfer:


Note that the 'A' command must follow these or any other windowing commands. Also, the X offset is truncated to a multiple of 8 dots. An X offset of 50, for example, would be interpreted as an offset of 48.

If 90 bytes (720 dots) were sent in the above example, each raster line would exceed the right side of the screen by 40 dots. This overflow is ignored.

An example to illustrate the transfer of a small raster image to a specific point on the screen is shown in figure 3-12.

**Windowing Commands.** It is possible to set up the terminal to ignore specific raster lines and data bytes before a transfer is initiated. This allows the user to window out a selected portion of the data.

These escape sequences can be entered locally or can be sent before the raster transfer begins. The commands are as follows:

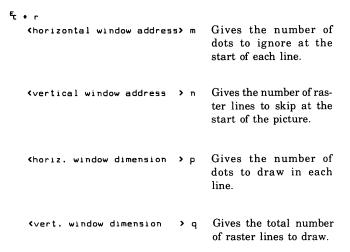

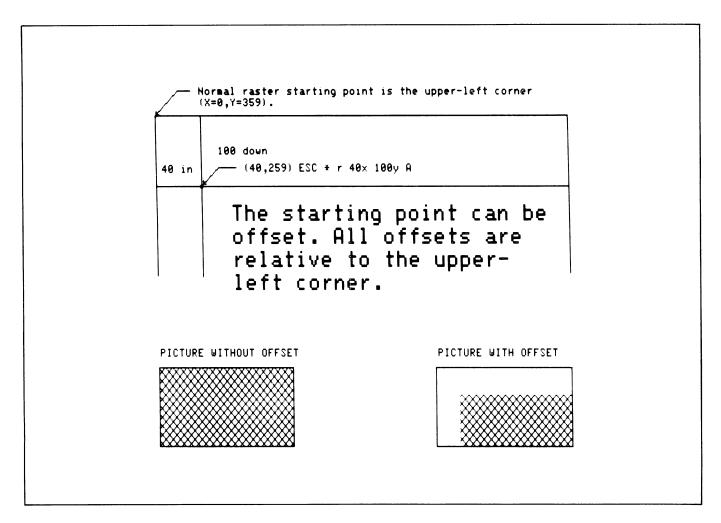


Figure 3-11. Raster Data X and Y Offsets

# A smaller than full screen image can be positioned anywhere on the display.

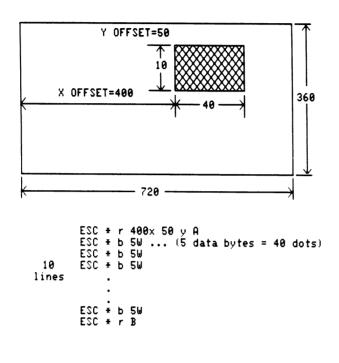


Figure 3-12. Raster Data Positioning

These commands will be explained by the use of an example (see figure 3-13). The escape sequence to a 10m 10m 400p 1000Q would be interpreted as follows:

- 1. The first 10 raster lines would be ignored (10N).
- 2. Only the next 100 raster lines would be displayed (1000). Any succeeding data would be ignored until the next raster dump started, as signaled by \* \* \* \* A.
- 3. On the 100 raster lines which would be drawn, the first 40 dots (40M) would be ignored.
- 4. After the first 40 dots are skipped, only the next 400 dots are drawn (400P). Any data on the raster line after that is ignored.

The result of this would be to display a 400 by 100 dot subset of the original 720 by 360 picture. The P and Q commands select the size of the subset, and the M and N commands determine where the subset is located in the original data.

As with the X offset parameter, the X window address (M) and the X window size (P) are truncated to the nearest multiple of  $8\ dots$ .

Offset and window parameters stay in effect for succeeding pictures until they are explicitly changed or the terminal is (hard) reset.

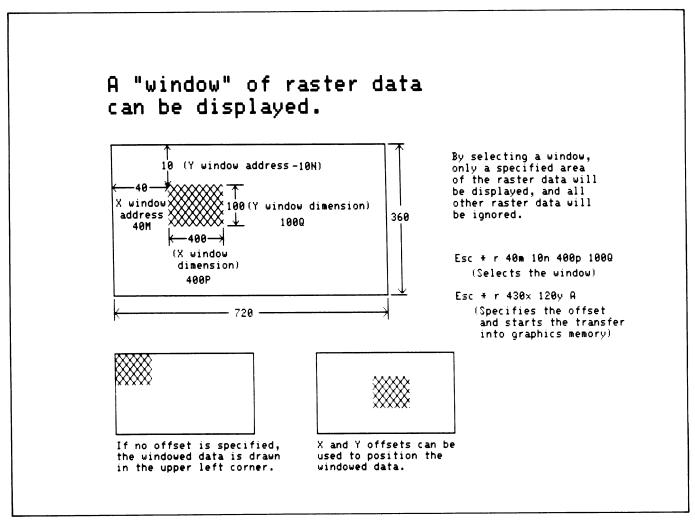


Figure 3-13. Raster Data Windowing

# Reading the Image Memory

A remote CPU can read the data stored in the 2647A's graphics memory. To read the entire display, the command sequence 'TRANSFER ALL FROM GRAPHICS TO DATACOMM' can be used, as previously described. It is also possible to read subset of the display, as follows:

- An X and a Y offset are specified to select the upper left corner of the area to be read.
- 2. The sequence for A is sent to initialize the terminal for reading.
- 3. The sequence to count R (DC1) is sent to read the desired number of data bytes in each scan line.

### **Example:**

The CPU sends F \* r 80x 100y A to select the area to be read.

The CPU sends 5 \* b 10 R to read 10 bytes (80 dots).

The terminal sends back 10 bytes.

The CPU sends  $\frac{1}{2}$  \* b 10 R to read 10 bytes in the next (lower) scan line, etc.

# **Summary of Commands**

As with all parameterized sequences, as many lower case commands as desired can be concentrated together. An upper case command terminates the sequence. All of the commands in table 3-11 begin with f \* r.

Any raster formatting parameters should be placed before the "A" in the sequence; otherwise, the current parameters will be in effect when the "A" (prepare for raster dump) is executed.

THIS

NOT THIS

### **GRAPHICS HARDCOPY OPERATIONS**

An HP 2631G Printer or HP 7245A Plotter Printer can print the contents of graphics memory. The printer is interfaced to the terminal using the HP 13296A Shared Peripheral Interface accessory. Procedures for configuring and installing this accessory are contained in Section VII, Installation. The printer must be assigned as the "Destination" device (refer to Section IV), then the raster data is transferred as described previously (refer to "Raster Data Transfers").

A video hardcopy subsystem is also available to make printed copies of the graphics display. The video hardcopy subsystem uses the HP 13254A Video Interface. Instructions for installing and configuring the interface are given in Section VII, Installation. Procedures for making video copies are given in Section IV, Device Control. If the interface is configured as address 04 (refer to Section VII and the 13254A Installation and Service Manual, part no. 13254-90001), a PRINT command (Mark File Header on External printer) can be entered locally at the terminal or sent from a computer. Copies can also be initiated manually from the hard copy unit itself.

Table 3-11. Summary of Raster Dump Commands

੮ ∗ r Sequence	Description
Α	Prepare for raster dump.
В	End of raster dump.
С	Erase screen.
D	Turn video on.
E	Return raster status. Upon receipt of DC1 (if G and H closed), the terminal returns one byte of status, interpreted as follows:
ena ERROF	Q/ACK handshake 1 = Terminal has been reset
	REPEAT  1 = Repeat the transfer
F	Not used.
G	Not used.
н	Not used.
I	Set all parameters to default value.
J	Return raster size status. The terminal returns the string '720,360'.
K	Return model number. The string '2647A' is returned.
L	Not used.
M	Horizontal window address.
N	Vertical window address.
0	Not used.
Р	Window horizontal dimension.
Q	Window vertical dimension.
R	Not used.
S	Horizontal size of picture.
T	Vertical size of picture.
U	Not used.
V	Not used.
W	Not used.
X	X offset.
Y	Y offset.
Z	NOP.

### **GRAPHICS TEXT**

Text strings can be written directly into the graphics image memory. An internal character generator converts the ASCII codes into a dot matrix representation which is drawn as vectors. The character set includes upper and lower case (96 characters) and will be drawn as a 5 by 7 matrix in a 7 by 10 cell, with descenders for lower case. This character set is in addition to the normal alphanumeric character set. While this character set may seem redundant, it offers the following advantages:

- Characters can be drawn at any dot position, rather than the 24 by 80 alphanumeric character positions.
- Characters can be rotated in multiples of 90 degrees.
- Characters can be scaled in size, from 1 to 8 times.
- Characters can be slanted 45 degrees for an italics-like effect.
- Lines of characters can be right, left, or center justified.
- In zoom mode, characters in the graphics memory are magnified.

Figure 3-14 shows the graphics character set.

# **Keyboard Control Of Graphics Text**

Graphics text can be entered directly from the keyboard. The backspace, carriage return, and line feed functions work as expected (even on inverted text), making it easy to add or edit titles and labels. A summary of keyboard operations affecting Graphics Text Mode is given in table 3-12. Additional information on keyboard text entry is contained in the User's Manual.

Table 3-12. Graphics Text Keyboard Functions

Key	Description
ma	Selects the graphics image memory as the destination for all text. Characters entering from the keyboard, datacom, or tape are drawn as vectors in the graphics memory using the current text size and angle (see the and angle keys). The drawing mode is initially set to jam pattern to allow for backspacing and retyping of characters. The graphics cursor indicates the position of the next character. Moving the graphics cursor will cause the next text line to begin at the new cursor position. The carriage return, line feed, and backspace functions work normally.
STOP	Terminates Text Mode.
191	Increases the character size from 1 to 8X. The smallest character is a 5 by 7 matrix in a 7 by 10 cell. Increasing the size makes the dots bigger while the character is still drawn as a 5 by 7 matrix.
AT AND	Sets the character orientation (multiples of 90 degrees) and turns slant on or off.
Î TAB	Spaces one graphics text character to the right. (The actual direction of movement will depend on the text orientation.)
смп. К	(Vertical Tab). Spaces one graphics text line up. (The actual direction of movement will depend on the text orientation.)
for alphanu	the following keys function in the same manner as meric text characters:

abcdefghijklmnopqrstuvwxyz ABCDEFGHIJKLMNOPQRSTUVWXYZ

!"#\$%&'()\*+,-./0123456789:

;<=>?@[\]^\_\{\}^

Figure 3-14. Graphics Text Characters

# **Program Control of Graphics Text**

All of the parameters for graphics text can be set programmatically. Commands are of the form: ESC\* m <parameter> <command>. The command can be alone or part of another ESC \* m sequence.

**SIZE.** The ASCII characters 1 through 8 specify the character size for graphics text. A "1" indicates the smallest character, a 5 by 7 dot matrix character in a 7 by 10 cell. Increasing the size increases the size of the dots. If a text size of 1 is specified, each dot in the cell is one dot on the screen. A size of 2 uses 4 screen dots for each character dot (2 X 2), and so on (see figure 3-15). A size of "1" is the default.

Set Graphics Text Size:

も \* m <size> m

**TEXT DIRECTION.** This command uses the ASCII characters 1 through 4 to specify the text orientation (see figure 3-16). This also changes the direction of line feed, carriage return, and backspace.

- 1 Normal (upright, the default)
- 2 Rotated 90 degrees counter clockwise
- 3 Rotated 180 degrees counterclockwise (inverted)
- 4 Rotated 270 degrees counter clockwise

Set Graphics
Text Orientation:

€ \* m <orientation> n

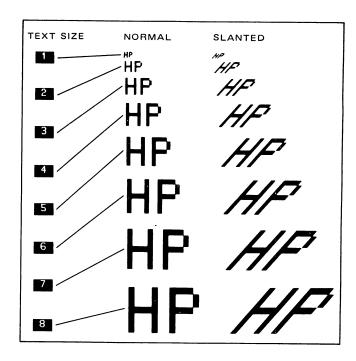


Figure 3-15. Graphics Text Sizes

**SLANT.** The graphics text characters can be slanted 45 degrees for an italics effect.

Turn On Graphics
Text Slant:

Ft \* m o

Turn Off Graphics
Text Slant:

Ft \* m p

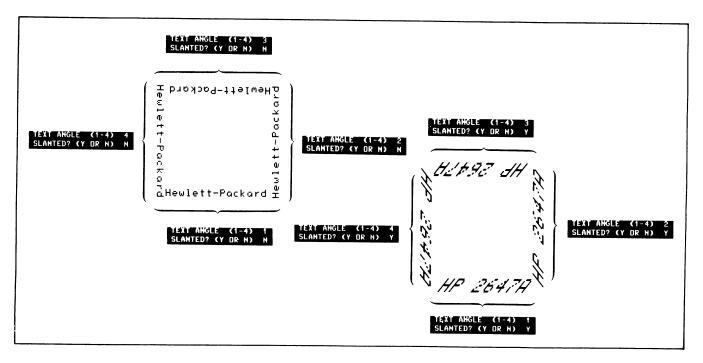



Figure 3-16. Graphics Text Direction

JUSTIFICATION/ORIGIN. Text strings can be automatically right or left justified, or centered about a specified point. An ASCII character 0 through 9 indicates the origin (justification and base line) for characters with respect to the current pen position. This function is useful when drawing labels. (Refer to the Label command.)

Set Graphics Text Justification:

た \* m <origin> q

If text is left justified, the current pen position is the left margin. Center causes the label to be centered on the pen position. Right justify selects the pen position as the right margin. Bottom, middle, and top select the base line for the line of text.

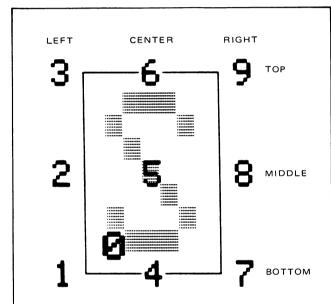

The numbers 1-9 represent the cursor position with respect to the character cell used for graphics text characters. The number 0 represents the cursor position with respect to the character (not this cell).

For example, if text was to be right justified and set with a base line on top of the normal character position, the number "9" would be used. Figure 3-17 illustrates the various text positions.

When centering or right justification is used, the text strings are buffered (stored) until all of the characters in the string have been received. The string end is detected by a CR or LF. The string is not displayed until the CR or LF is received. This may be confusing when entering text from the keyboard. The maximum length of a string when center or right justifying is 80 characters (not including the CR(LF)). In all cases, data written beyond the edge of the screen is lost. There is no automatic RETURN when the screen boundry is reached.

TURNING GRAPHICS TEXT ON AND OFF. Graphics text mode can be turned on or off from a program. These two commands use the ESC \* d sequence but are discussed here under graphics text for completeness.

On. This command will cause Graphics Text Mode to be turned on. All displayable characters will be stored in the graphics memory. If the command is entered from the keyboard using the was keys the graphics cursor is turned on to indicate the position where the next character will be displayed. The drawing mode is initially set to jam mode to permit overstrike replacement of characters. A different mode, such as set or complement, can be selected at any time.

Text is drawn using the current text assignments for size and orientation. Graphics text mode accepts CR, LF, BS, HT, and VT as control characters. The , , , , and keys can be used to position the graphics cursor in character increments.

Turn On Graphics
Text Mode:

モ \* d :

If the graphics cursor is moved or a DRAW or MOVE command is executed, the graphics text margin is moved to the new cursor or pen position.

Characters are drawn using the current drawing mode (set, clear, or jam). If set mode is used, entering a character, backspacing, and entering a second character causes an overstrike. If jam mode is used, the new character will replace the old character.

If a lower case "s" is used, additional escape parameters can be appended to the sequence. Otherwise the next characters will be routed to the graphics memory.

### **Examples:**

E \* d s k 100,100 o B — set graphics memory

position cursor at 100,100

turn on cursor

Off. This sequence turns off graphics text mode and restores normal alphanumeric operation.

This is a text string&

Turn Off Graphics Text Mode:

€ + d t

**GRAPHICS TEXT STATUS.** You can check the current text settings with a graphics text status request. Refer to Section VI, Status for additional information.

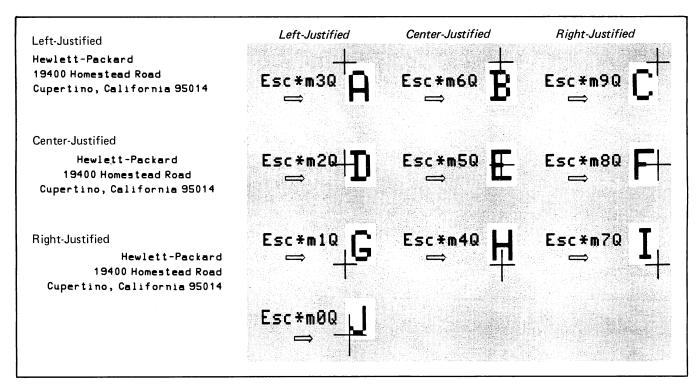


Figure 3-17. Graphics Text Justification

**LABEL.** This sequence is used to send a single record of graphics text to the terminal. The characters are stored in the graphics memory using the current text size, angle, slant, and justification. The label is drawn beginning at the current pen position.

Graphics
Text Label:

Ft \* 1 <text string> % (LF)

The record must end with a CR, LF, or both. A CR moves the pen to its original position when the label command was first received. An LF moves the pen down one line (character spacing). Note that the actual directions moved following a CR or LF depend on the text orientation selected.

The maximum record length is 80 characters, not including the ESC  $^{\ast}$  l preamble or the CR(LF).

Example: 5\*1This is a sample label%15

### **MULTIPLOT**

MULTIPLOT is a set of three menu-driven graphics plotting programs that allow you to quickly and easily plot numeric data in the form of Pie charts, Bar charts, Linear charts, or Logarithmic charts. The MULTIPLOT programs, which execute within the terminal itself under control of 2647A BASIC, all reside on a single data cartridge (HP part no. 02647-13301). Once the data cartridge is inserted in the left tape slot of the terminal, the MULTIPLOT programs can be run either locally by the terminal user or remotely by a program executing in a host computer.

Instructions for running the MULTIPLOT programs locally are presented in Section 7, Using MULTIPLOT In Your Terminal, of the HP 2647A Intelligent Graphics Terminal User's Manual.

In order for a program executing in a host computer to run any of the MULTIPLOT programs remotely, the MULTIPLOT data cartridge must be inserted in the left tape slot of the terminal (your program should display a message on the terminal's screen asking the terminal user to do so). Also, the keyboard DUPLEX switch must be set to HALF. Your program then loads the terminal's softkeys

from the tape by issuing the following escape sequence:

ጚ,c COPY FILE FROM LEFT TAPE TO DISPLAY ቈ or ෑ.c C F L DI ቈ

Wait 10 seconds, then you are ready to run the MULTI-PLOT programs remotely.

# **Plotting Pie Charts**

To load the Pie chart program from the data cartridge into the terminal, issue the following escape sequence:

### E&f1E &

When loaded, the Pie chart program displays the Pie chart menu in window #2 of the terminal's screen and waits. Figure 3-18 shows a blank Pie chart menu. At this point your program transmits the menu data in order line-byline, left to right within each line. If a particular data item does not entirely fill the associated menu field, transmit a Horizontal Tab code ("t) to cause the next data item to be directed to the next menu field. Similarly, to leave a particular field blank and skip to the next menu field, transmit a Tab code ("t).

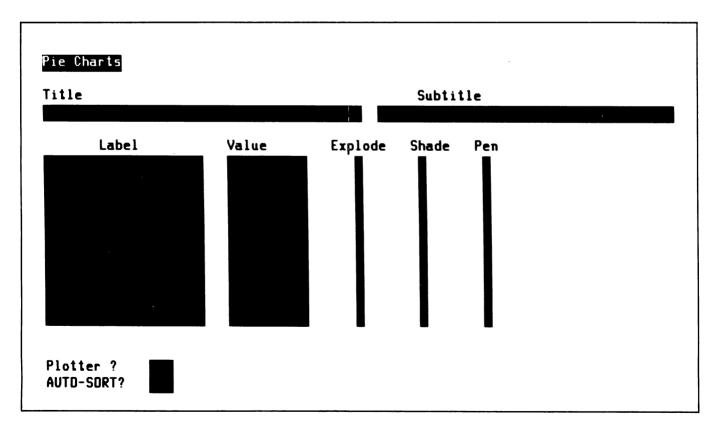


Figure 3-18. Blank Pie Chart Menu

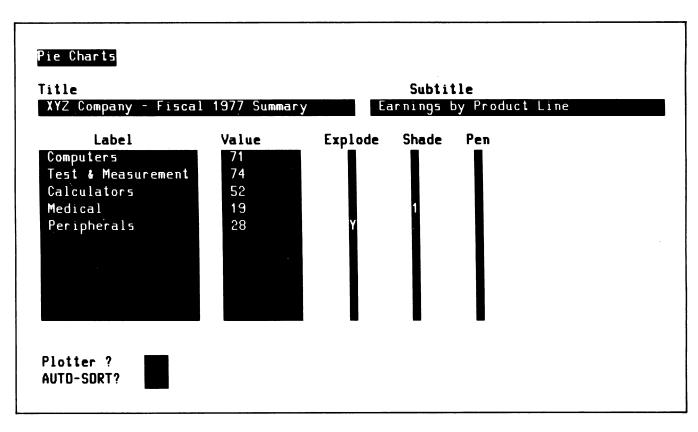


Figure 3-19. Completed Pie Chart Menu

The following sequence fills in a Pie chart menu with the data shown in figure 3-19:

ጚ,c DI W#2 ፍ 투ሠ ጚ J XYZ Company - Fiscal 1977 Summary ፟ Earnings by Product Line ፟ Computers ነ 71 ፟ች ች ች Test & Measurement ፟ች 74 ች ች ች Calculators ፟ች 52 ፟ች ች ች ች Medical ፟ች 19 ች ች 1 ች Peripherals ፟ች 28 ፟ች ሃ ፟፟ ጚልf8E

Once the Pie chart menu has been filled in, the following sequence plots the Pie chart:

### €&f8E

To alter the content of a selected field in a completed Pie chart menu, your program first homes the cursor ( $^{\xi}H$ ) and then moves the cursor to the start of the desired field using any combination of the following:

- 1. Cursor relative addressing escape sequences (such as ft&a+7r+23C).
- 2. Cursor control escape sequences (₹ A for ♠, ₹ B for ♥ € C for ♠, and ₹ D for ♣).
- 3. Tab codes (4) and Back Tab escape sequences (E i).

For example, to alter the content of the "Value" field associated with the fifth "Label" in a completed Pie chart menu, you would do as follows:

- 1. Home the cursor using an <sup>E</sup> H sequence.
- 2. Move the cursor down seven lines (using either seven to B sequences or an tobat + 7 r 0 C sequence).
- Tab the cursor to the second field of the line using a <sup>h</sup> code.
- 4. Transmit the new "Value" field data.

The entire escape sequence for the above example would be as follows:

투 H 투&a+7r0C 나 ...new data...

Note that whenever you fill in a menu field completely the cursor automatically tabs to the start of the next subsequent field (this will always happen when you fill in a single-character field). When the cursor automatically advances in this manner, you must remember not to transmit the Tab code unless you wish to skip over that field.

Table 3-13 summarizes the various escape sequences that apply to Pie charts.

Table 3-13. Pie Chart Escape Sequences

KEY	SEQUENCE	FUNCTION		
MULTI PLOT	€&f8E	Turn MULTIPLOT on.		
SHIFT MULTIPLOT MENU	€,c DI ₩#2 %	Turn menu on.		
SHIFT MULTIPLOT MENU	੮,c DI W#1 ਨਿ	Turn menu off.		
	툰,c DI ₩#2 유 툰 W 툰 J	Clear the menu.		

# **Plotting Bar Charts**

To load the Bar chart program from the data cartridge into the terminal, issue the following escape sequence:

### €&f2E %

When loaded, the Bar chart program displays the Bar chart menu in window #2 of the terminal's screen and waits. Figure 3-20 shows a blank Bar chart menu. At this point your program transmits the menu data in order line-by-line, left to right within each line. If a particular data item does not entirely fill the associated menu field, transmit a Horizontal Tab code (4) to cause the next data item to be directed to the next menu field. Similarly, to leave a particular field blank and skip to the next menu field, transmit a Tab code (4).

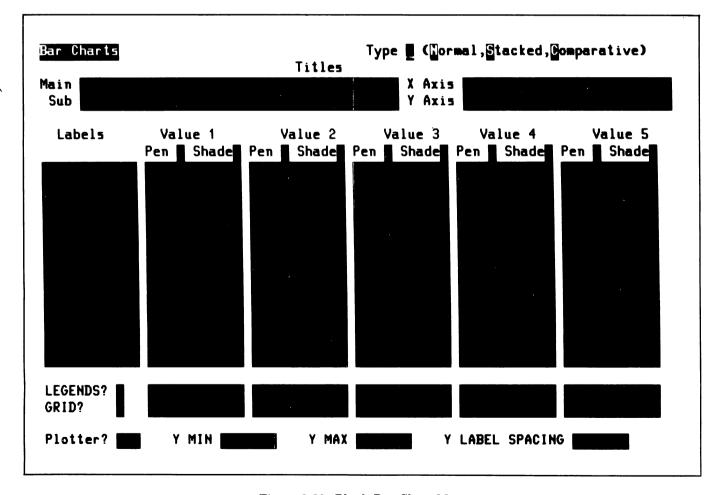


Figure 3-20. Blank Bar Chart Menu

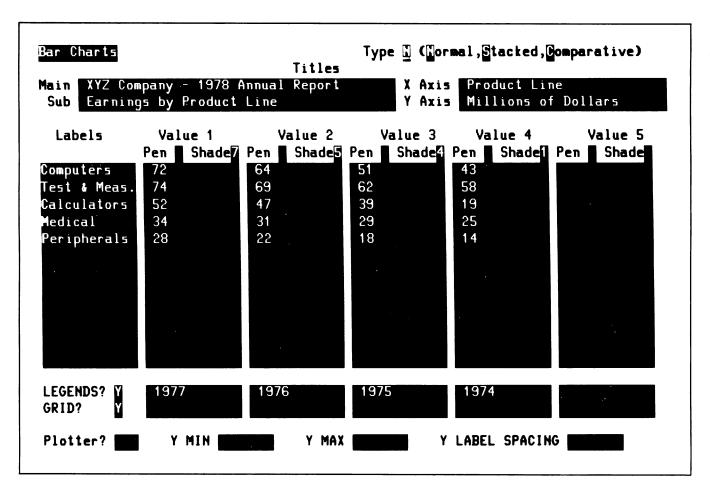


Figure 3-21. Completed Bar Chart Menu

The following sequence fills in a Bar chart menu with the data shown in figure 3-21:

Once the Bar chart menu has been filled in, the following sequence plots the Bar chart:

### €&f8E

To alter the content of a selected field in a completed Bar chart menu, your program first homes the cursor ( $\xi H$ ) and then moves the cursor to the start of the desired field using any combination of the following:

1. Cursor relative addressing escape sequences (such as <code>fc&a+7r+23C</code>).

- 2. Cursor control escape sequences (₹ A for ♠, ₹ B for ₹ C for ♣, and ₹ D for €).
- 3. Tab codes (4) and Back Tab escape sequences (£ i).

For example, to alter the content of the "Shade" field associated with the "Value 2" column in a completed Pie chart menu, you would do as follows:

- 1. Home the cursor using an E H sequence.
- 3. Back Tab the cursor twice using two £ i sequences.
- 4. Transmit the new "Shade" field data.

The entire escape sequence for the above example would be as follows:

₹ H €&a+7R € i € i...new data...

Table 3-14 summarizes the various escape sequences that apply to Bar charts.

### Table 3-14. Bar Chart Escape Sequences

KEY	SEQUENCE	FUNCTION		
MULTI PLOT	€&f8E	Turn MULTIPLOT on.		
SHIFT MULTIPLOT MENU	€,c DI W#2 <sup>૧</sup> સ	Turn menu on.		
SHIFT MULTIPLOT MENU	ნ,c DI W#1 <sup>9</sup> გ	Turn menu off.		
	ቺ,c DI W#2 ƙ ቺ ዘ ቺ J	Clear the menu.		

# **Plotting Linear Charts**

To load the Linear chart program from the data cartridge into the terminal, issue the following escape sequence:

### €&f3E %

When loaded, the Linear chart program displays the Linear chart menu in window #2 of the terminal's screen and waits. Figure 3-22 shows a blank Linear chart menu. At this point your program transmits the menu data in order line-by-line, left to right within each line. If a particular data item does not entirely fill the associated menu field, transmit a Horizontal Tab code (\(^{\text{h}}\)) to cause the next data item to be directed to the next menu field. Similarly, to leave a particular field blank and skip to the next menu field, transmit a Tab code (\(^{\text{h}}\)).

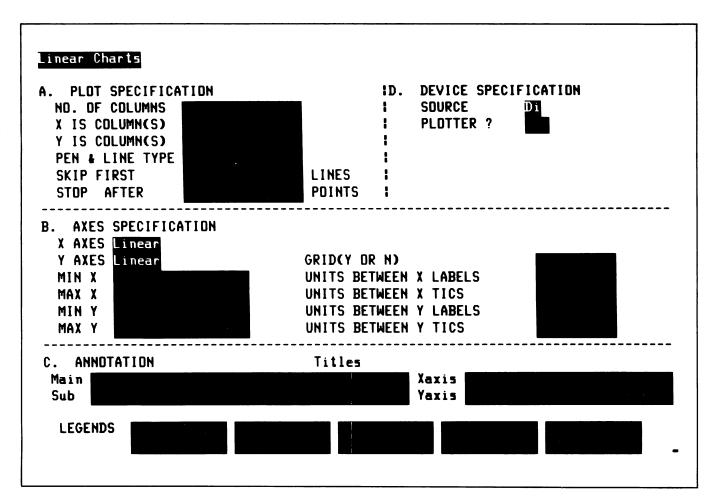


Figure 3-22. Blank Linear Chart Menu

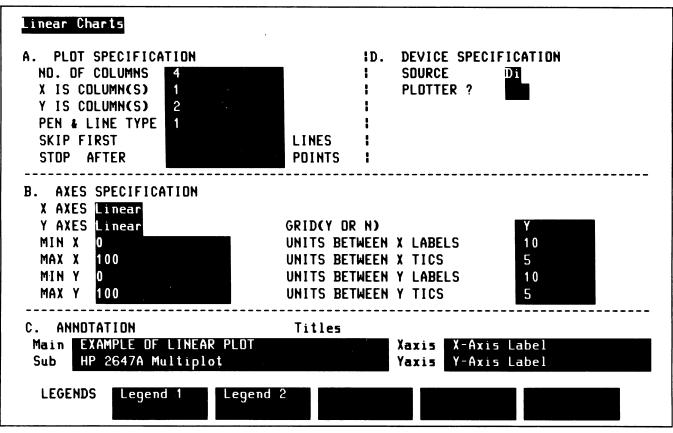


Figure 3-23. Completed Linear Chart Menu

The following sequence fills in a Linear chart menu with the data shown in figure 3-23:

Once the Linear chart menu has been filled in, the following sequences draw the chart axes and plot the chart, respectively:

F&f7E (Note that this sequence may need to be followed by a time-delay depending upon the complexity of the axes to be drawn.)

₹&f8E

To alter the content of a selected field in a completed Linear chart menu, your program first homes the cursor (Et H) and then moves the cursor to the start of the desired field using any combination of the following:

- 1. Cursor relative addressing escape sequences (such as <code>fc&a+7r+23C)</code>.
- 2. Cursor control escape sequences (₹ A for ♠, ₹ B for ₹ C for ♠, and ₹ D for ♠).
- 3. Tab codes (4) and Back Tab escape sequences (5 i).

For example, to alter the content of the "MAX Y" field in a completed Linear chart menu, you would do as follows:

- 1. Home the cursor using an H sequence.
- 2. Move the cursor down 13 lines (using either 13 F B sequences or an Faa+13R sequence).
- 3. Back tab the cursor once using an fi sequence.
- 4. Transmit the new "MAX Y" field data.

The entire escape sequence for the above example would be as follows:

Table 3-15 summarizes the various escape sequences that apply to Linear charts.

Table 3-15. Linear Chart Escape Sequences

KEY	SEQUENCE	FUNCTION
MULTI PLOT.	₹&f8E	Tum MULTIPLOT on.
SHIFT	€&f7E	Draw MULTIPLOT axes.
SHIFT MULTIPLOT MENU	ნ,c DI W#2 ዓ	Turn menu on.
SHIFT MULTIPLOT MENU	툰,c DI ₩#1 %	Turn menu off.
	툰,c DI ₩#2 st 툰 W 툰 J	Clear the menu.

### COMPATIBILITY MODE

Compatibility Mode allows the terminal to plot data intended for a terminal using a display with 1024 by 1024 addressable points. This mode makes it possible to use graphics programs developed for use with other graphics terminals with a minimum of reprogramming.

The terminal operates in two submodes while in Compatibility Mode. In Alphanumeric mode the terminal simply displays alphanumeric data on the screen as in normal operation. In Graphics mode the terminal responds to alphanumeric data as vector coordinates. Normally the terminal will be switched between these modes to display messages, plot graphics figures, and then display additional messages. These modes are controlled with several control sequences. (These sequences are ignored or acted on differently if the terminal is not set for Compatibility Mode.) Table 3-16 lists the terminal's responses to Compatibility Mode control sequences.

If delays are required, the baud rate can be lowered or fill characters added to prevent data loss when operating the terminal at high speeds. Refer to Section V, Data Communications.

Vectors are drawn using the current line type and line drawing mode. This gives you the capability of drawing dotted and dashed lines, etc. by changing the program to send the additional escape sequences. In general, all of the normal features of the terminal (display enhancements, tape control, etc.) are available only in the Alphanumeric mode.

Compatibility Mode is turned on by selecting either scaled or unscaled operation. Escape sequences controlling Compatibility Mode begin with <code>f+\*t</code>. This preamble is then followed with one or more commands. These commands are listed in table 3-17 As in all other escape sequences, a capital letter ends the sequence. Figure 3-24 contains examples of typical escape sequences.

Table 3-16. Compatibility Mode Control Sequences

CONTROL SEQUENCE	DESCRIPTION	RESPONSE			
€ €	Read status and alpha cursor position	<status byte=""><hi x=""><lo x=""> <hi y=""><lo y=""><terminator></terminator></lo></hi></lo></hi></status>			
	Hard Copy Unit 0 = not ready 1 = ready Linear Interpolation (off)	Auxiliary Device (inactive) Margin 1 = margin 1 0 = margin 2  bhics Mode ia Mode			
The terminal will	return one of the following characters as the status byte:	1 - Margin 2, Graphics Mode 3 - Margin 1, Graphics Mode 5 - Margin 2, Alpha Mode 7 - Margin 1, Alpha Mode			
투 팀 (20 ms delay)	Read graphics cursor position	<hi x=""><lo x=""><hi y=""><lo y=""><terminator></terminator></lo></hi></lo></hi>			
<b>፟</b> ፟					
ቴቴ ቴቼ	Read graphics cursor position when key struck	<pre><key><hi x=""><lo x=""><hi y=""><lo y=""><terminator< pre=""></terminator<></lo></hi></lo></hi></key></pre>			
	Read graphics cursor position when key struck  Make hardcopy	<key><hi x=""><lo x=""><hi y=""><lo y=""><terminator< td=""></terminator<></lo></hi></lo></hi></key>			
£ §		<key><hi x=""><lo x=""><hi y=""><lo y=""><terminator< td=""></terminator<></lo></hi></lo></hi></key>			
도 됨 도 팀	Make hardcopy	<key><hi x=""><lo x=""><hi y=""><lo y=""><terminator< td=""></terminator<></lo></hi></lo></hi></key>			
돈 됨 돈 팀 돈 F	Make hardcopy End graphics mode, clear screen, and home cursor	<key><hi x=""><lo x=""><hi y=""><lo y=""><terminator< td=""></terminator<></lo></hi></lo></hi></key>			
년 됨 단 팀 단 F 및	Make hardcopy End graphics mode, clear screen, and home cursor Go into graphics mode (draw vectors)	<key><hi x=""><lo x=""><hi y=""><lo y=""><terminator< td=""></terminator<></lo></hi></lo></hi></key>			
탄 됨 탄 팀 탄 Fr 덬 닉	Make hardcopy End graphics mode, clear screen, and home cursor Go into graphics mode (draw vectors) Go into alpha mode	<key><hi x=""><lo x=""><hi y=""><lo y=""><terminator< td=""></terminator<></lo></hi></lo></hi></key>			
. [편] 단 [편] 단 [편] 단 [편]	Make hardcopy End graphics mode, clear screen, and home cursor Go into graphics mode (draw vectors) Go into alpha mode Backspace (H <sup>c</sup> ). Moves 1 space left (14 units)	<key><hi x=""><lo x=""><hi y=""><lo y=""><terminator< td=""></terminator<></lo></hi></lo></hi></key>			
€ 됨	Make hardcopy End graphics mode, clear screen, and home cursor Go into graphics mode (draw vectors) Go into alpha mode Backspace (Hc). Moves 1 space left (14 units) Horizontal Tab (lc). Moves 1 space right (14 units)	<key><hi x=""><lo x=""><hi y=""><lo y=""><terminator< td=""></terminator<></lo></hi></lo></hi></key>			

### **NOTES**

The terminal will normally respond with an % character when an % character is received. Compatibility Mode disables the terminal's %/% handshake. Compatibility Mode causes most control codes to be ignored.

The Read Status, alpha cursor position, and graphic cursor position cause block transfers to the computer system. If the computer system does not use the DC1/DC2 handshake, straps G and H on the Keyboard Interface PCA must be OPEN for these transfers to occur. (Refer to "Multicharacter Transfers" in Section V.)

# **Compatibility Mode Straps**

Compatibility Mode operation is controlled by Keyboard Interface switches P and Q. These switches can be set manually or programmatically using the "Fas..." sequence described in Section II. The P and Q switches determine the terminal's mode of operation after being initialized (power up or full reset). The switches are interpreted as follows:

SWIT	CHES	DESCRIPTION					
	(Open=1, Closed=0)						
Р	Q						
0	0	Normal graphics operation					
0	1	Unscaled Compatibility Mode (expanded data comm buffer) <sup>1</sup>					
1	0	Scaled Compatibility Mode (expanded data comm buffer) <sup>1</sup>					
1	1	Normal graphics operation (expanded data comm buffer) <sup>1</sup>					

<sup>&</sup>lt;sup>1</sup> To obtain the larger buffer, the P and Q switches must be set physically. Refer to Section V.

In addition, when in Compatibility Mode, you can select the following optional capabilities: **GRAPHIC INPUT TERMINATOR.** You can select the terminator sent by the terminal following the input of cursor address information. The terminator can be a CR, CR and EOT, or no terminator.

PAGE FULL BUSY. When this strap is in, the keyboard will be locked after the 35th line of text is received from the computer. The terminal can be cleared by pressing the . This strap is ignored in Unscaled Mode.

**PAGE FULL BREAK.** When this strap is in, the terminal will send a 200ms break signal to the computer after the 35th line of text is displayed. The terminal may also be set to BUSY (see Page Full Busy). When out, the strap will cause the cursor to home and the next 35 lines of text to be set with a left margin at x = 256. This strap is ignored in Unscaled Mode.

The commands to control these strap options are listed in table 3-17 Refer to the manual for the replaced graphics terminal for additional information on the operation of these straps and how they should be set.

# **Graphic Data**

There are differences in display size  $(720 \times 360 \text{ for the HP} 2648\text{A versus } 1024 \times 780 \text{ for other terminals})$  and line length (24 lines of 80 characters for the HP 2648A versus 35 lines of 74 characters for other terminals). See figure 3-25.

Table 3-17. Commands for Selecting Compatibility Mode

COMMAND	CODE
TURN SCALED COMPATIBILITY MODE ON (P open)	€ & s 1 p 0 Q
TURN UNSCALED COMPATIBILITY MODE ON (Q open)	€ & s 0 p 1 Q
TURN COMPATIBILITY MODE OFF (P,Q closed)	€ & s 0 p 0 Q
The following commands simulate straps used on other grap	hics terminals:
SET GRAPHICS INPUT TERMINATOR STRAP  0 — Carriage return only (Normal position)  1 — Carriage return and EOT  2 — No carriage return, no EOT	€ * t <byte1> a</byte1>
SET PAGE FULL BREAK STRAP 0 — Out (Normal position) 1 — In	€ * t <byte1> b</byte1>
SET PAGE FULL BUSY STRAP 0 — Out 1 — In (Normal position) NOP	ቲ * t <byte1> c</byte1>

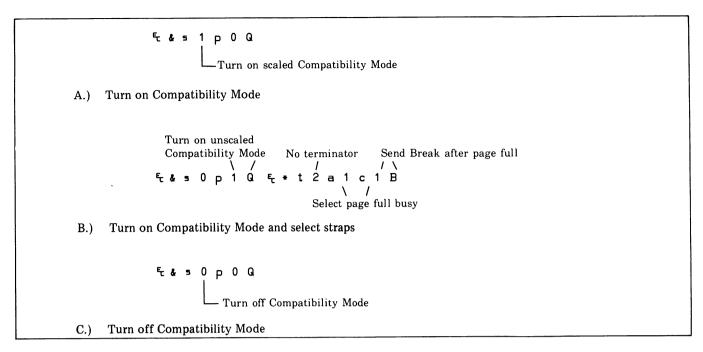


Figure 3-24. Turning on Compatibility Mode

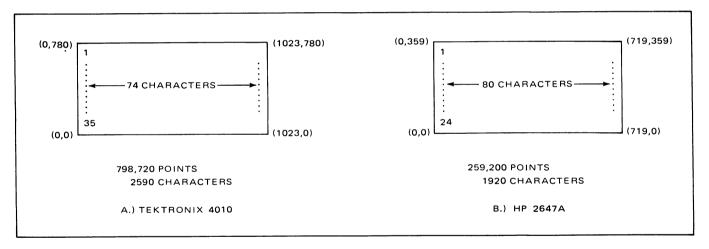


Figure 3-25. Comparison of a Terminal with  $1024 \times 780$  Display and the HP 2647A

Graphic data can be drawn either scaled or unscaled. Scaling divides X coordinates by 2, and Y coordinates by 128/59. This maps the  $1024 \times 780$  display into 512 by 360. This allows a program written for the  $1024 \times 780$  terminal to run unchanged, and still display the entire picture (with some loss in resolution). The image doesn't cover the entire screen (only going to X=512). The remainder can be used as a dialog area for alphanumeric text (see figure 3-26).

Unscaled mode shows a 720 by 360 subset of the  $1024 \times 780$  picture. The area this covers can be changed by modifing the value of the relocatable origin (and redrawing the picture). The relocatable origin is subtracted from all incoming coordinates in unscaled mode. If this is set to 0,0 (the default) the range X=0 to 719, Y=0 to 359 will be displayed (see figure 3-27).

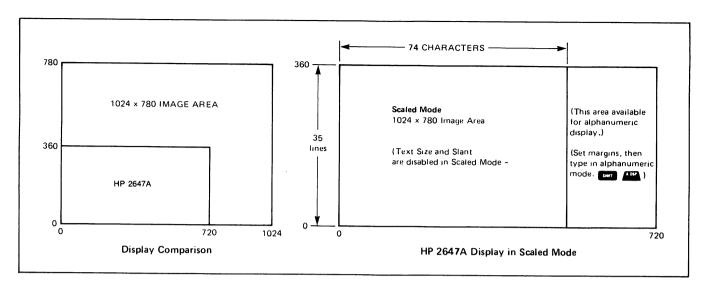


Figure 3-26. Scaled Data

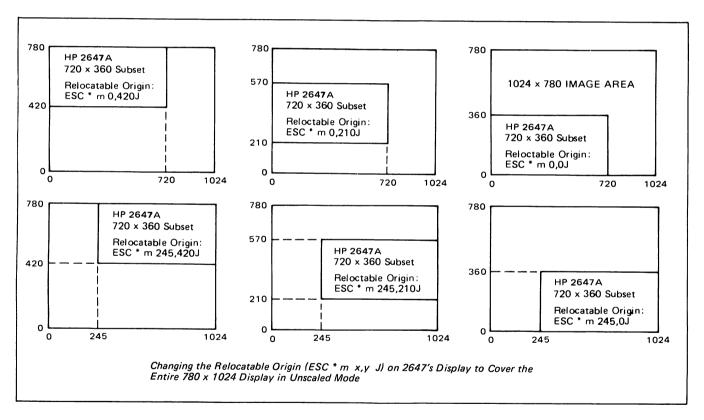


Figure 3-27. Unscaled Data

Setting the origin to 0,360 would cover the area X=0 to 719, Y=360 to 719. To display an area larger than  $720\times360$ , you must change the scaling statements in the program. The advantage of unscaled mode over scaled mode is that unscaled allows you to use the entire available display area (see figure 3-27).

#### **Graphics Data Format**

In Compatibility mode the graphics data is formatted as two-byte coordinate values. The lower five bits of each byte are used to make a 10 bit (0-1023) coordinate. Data sent to the terminal must have the "Y" coordinate sent first; <Upper Y> <Lower Y> <Upper X> <Lower X>.

When data is returned to the computer (cursor position, etc.), the X coordinate is returned first; <Upper X> <Lower X> <Upper Y> <Lower Y>.


Data bytes sent to the terminal use bits 6 and 7 to indicate the byte is an Upper byte, a lower Y, or a lower X. Bit 8 (parity) is not used.

```
Bits
7 6
0 0 Upper X or Y byte
0 1 Lower X byte
1 1 Lower Y byte
```

These identifying bits allow you to send only the changed portion of a four byte address. The following data bytes must always be sent:

- Lower X byte
- Any changed byte
- Lower Y byte if the Upper X byte has changed

Table 3-18 can be used to determine address bytes. For example, to plot the points (0,0), (0,31), (256,31), (256,0) the following sequence would be used:

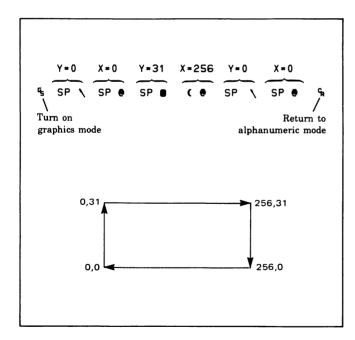

#### **Text**

Text can be placed in either the alphanumeric memory or in the graphics memory. If the terminal is set for alphanumeric text, the text will be sent to the alphanumeric memory. This is generally the most useful, as text can be scrolled, edited, erased, etc. without affecting the graphics image. If you select graphics text (<code>Ft\*ds</code>), text will go into the graphics memory. Text to be written to the graphics memory can be scaled or rotated. (Refer to Graphics Text for additional information.)

When text is written to the graphics memory, the graphics cursor is moved to indicate where the next character will be stored. (The alphanumeric cursor is only used when data is stored in the alphanumeric memory.) This differs from terminals that have only one mode for text and display the graphics cursor only when waiting for graphic input from the user.

SCALED MODE GRAPHICS TEXT. In Scaled Mode, text is initially written into the graphics memory, the size is fixed to allow for 35 lines of text. The text angle is set at 0 degrees and unslanted. The text origin is set to the left and bottom. These settings allow the "Page Full" feature to work properly and existing software to run without changes. If you do not require the Page Full feature, you can not change the text settings. You can redirect the text to the alphanumeric memory.

UNSCALED MODE GRAPHICS TEXT. In Unscaled Mode, the text size is unchanged and graphics text mode is not initially turned on. Text is stored in the alphanumeric memory unless the graphics text mode is specifically enabled.

# Cartridge Tape Operation In Compatibility Mode

When operating in Compatibility Mode, local cartridge tape READ operations do not automatically append a CR(LF) at the end of each record. This prevents this extra CR from turning off graphics mode while reading graphics data. CR(LF) characters actually recorded on the cartridge tape are read normally. When operating in remote a CR(LF) is appended (if needed) at the end of each record read.

Table 3-18. Coding of Compatibility Mode Graphics Data

							X or Y C									Low O	rder Y	Low O	rder X
							X 01 T C	Joordinat	е							DEC.	ASCII	DEC.	ASCI
0	32	64	96	128	160	192	224	256	288	320	352	384	416	448	480	96	\	64	
1	33	65	97	129	161	193	225	257	289	321	353	385	417	449	481	97	a	65	^
2	34 35	66 67	98 99	130 131	162 163	194 195	226 227	258	290 291	322 323	354 355	386 387	418	450	482	98	Ь	66	В
4	36	68	100	132	164	196	228	259 260	292	324	356	388	419 <b>420</b>	451 452	483 484	99 100	d	67	C
5	37	69	101	133	165	197	229	261	293	325	357	389	421	453	485	100	e	68 69	E
6	38	70	102	134	166	198	230	262	294	326	358	390	422	454	486	102	f	70	F
7	39	71	103	135	167	199	231	263	295	327	359	391	423	455	487	103	9	71	G
8	40	72	104	136	168	200	232	264	296	328	360	392	424	456	488	104	h	72	Н
9	41	73	105	137	169	201	233	265	297	329	361	393	425	457	489	105	i	73	1
10	42	74	106	138	170	202	234	266	298	330	362	394	426	458	490	106	j	74	J
11 12	43 44	75 76	107 108	139 140	171 172	203 204	235 236	267 268	299 300	331 332	363 <b>364</b>	395 396	427 428	459 460	491 492	107	k ,	75	K
13	45	76 77	109	141	172	204	237	269	301	333	365	397	429	461	492	108 109	l m	76 77	L
14	46	78	110	142	174	206	238	270	302	334	366	398	430	462	494	110	n n	78	N
15	47	79	111	143	175	207	239	271	303	335	367	399	431	463	495	111	0	79	0
16	48	80	112	144	176	208	240	272	304	336	368	400	432	464	496	112	Р	80	Р
17	49	81	113	145	177	209	241	273	305	337	369	401	433	465	497	113	9	81	G
18	50	82	114	146	178	210	242	274	306	338	370	402	434	466	498	114	r	82	R
19	51 50	83	115	147	179	211	243	275	307	339	371	403	435	467	499	115	5	83	5
20 21	52 53	84 85	116 117	148 149	180 181	212 21	244 245	276 277	308 309	340 341	372 373	404 405	436 437	468 469	500 501	116 117	t u	84 85	U
22	54	86	118	150	182	214	245 246	278	310	341	373 374	405	437	469 470	502	118	v	86	l v
23	55	87	119	151	183	215	247	279	311	343	375	407	439	471	503	119	w	87	W
24	56	88	120	152	184	216	248	280	312	344	376	408	440	472	504	120	×	88	X
25	57	89	121	153	185	217	249	281	313	345	377	409	441	473	505	121	У	89	Y
26	58	90	122	154	186	218	250	282	314	346	378	410	442	474	506	122	z	90	Z
27	59	91	123	155	187	219	251	283	315	347	379	411	443	475	507	123	(	91	1
28 29	60 61	92 93	124 125	156	188	220	252	284	316	348	380	412	444	476	508	124	!	92	1
30	62	94	126	157 158	189 190	221 222	253 254	285 286	317 318	349 350	381 382	413 414	445 446	477 478	509 510	125 126	) ~	93 94	]
31	63	95	127	159	191	223	255	287	319	351	383	415	447	479	511	127		95	
32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	-	- DEC.		
32 SP	33	34 	35 #	36 \$	37 %	38 &	39	40 (	41 )	42	43 +	44	45 	46	<b>47</b> /	-	DEC. ASCII		
32 SP	33					&	39 High Ord	(	)	42			45 	46					
	33					&	•	(	)	42			45 -			Low C	- ASCII	Low	and an V
	33					&	•	( ler X & Y	,	42			45 - 			Low C	- ASCII	<del> </del>	order X
SP			#	\$	%	&	High Ord	ler X & Y	) , e		+				/	DEC.	ASCII	DEC.	ASC
SP i12	544	576	608	\$ 640	672	704	High Ord X or Y C	ler X & Y coordinate	800	832	864	896	928	960	992	<b>DEC</b> . 96	ASCII	DEC. 64	
SP			#	\$	% 672 673	704 705	X or Y C	ler X & Y	) , e	832 833	+	896 897		960 961	/	DEC.	ASCII	DEC.	ASC
12 13 14	544 545	576 577	# 608 609	\$ 640 641	672	704	High Ord X or Y C	(ler X & Y coordinate 768 769	800 801	832	+ 864 865	896	928 929	960	992 993	<b>DEC</b> . 96 97	ASCII ASCII	<b>DEC</b> . 64 65	ASC ®
12 13 14	544 545 546	576 577 578	# 608 609 610	640 641 642	% 672 673 674	704 705 706	X or Y C	768 769	800 801 802	832 833 834	864 865 866	896 897 898	928 929 930	960 961 962	992 993 954	96 97 98	ASCII ASCII  ASCII  ABCII  ABC	<b>DEC</b> . 64 65 66	ASC B C D
12 13 14 15 16	544 545 546 547 548 549	576 577 578 579 580 581	608 609 610 611 612 613	640 641 642 643 644 645	672 673 674 675 676 677	704 705 706 707 708 709	High Ord  X or Y C  736  737  738  739  740  741	768 769 770 771 772	800 801 802 803 804 805	832 833 834 835 836 837	864 865 866 867 868 869	896 897 898 899 900 901	928 929 930 931 932 933	960 961 962 963 964 965	992 993 954 995 996 997	96 97 98 99	ASCII ASCII A C C C C C C C C C C C C C C C C C	64 65 66 67	ASC B C D
12 13 14 15 16 17	544 545 546 547 548 549 550	576 577 578 579 580 581 582	608 609 610 611 612 613 614	640 641 642 643 644 645 646	% 672 673 674 675 676 677 678	704 705 706 707 708 709 710	X or Y C  736 737 738 739 740 741 742	768 769 770 771 772 773	800 801 802 803 804 805 806	832 833 834 835 836 837 838	864 865 866 867 868 869 870	896 897 898 899 900 901	928 929 930 931 932 933 934	960 961 962 963 964 965 966	992 993 954 995 996 997 998	96 97 98 99 100 101 102	ASCII ASCII A C C C C C C C C C C C C C C C C C	64 65 66 67 68 69 70	B C D E F
12 13 14 15 16 17 18 19	544 545 546 547 548 549 550 551	576 577 578 579 580 581 582 583	608 609 610 611 612 613 614 615	640 641 642 643 644 645 646 647	% 672 673 674 675 676 677 678 679	704 705 706 707 708 709 710 711	X or Y C 736 737 738 739 740 741 742 743	768 769 770 771 772 773 774	800 801 802 803 804 805 806 807	832 833 834 835 836 837 838 839	864 865 866 867 868 869 870 871	896 897 898 899 900 901 902 903	928 929 930 931 932 933 934 935	960 961 962 963 964 965 966 967	992 993 954 995 996 997 998 999	96 97 98 99 100 101 102 103	ASCII  ASCII  ASCII  C  C  C  C  G  G  G  G  G  G  G  G  G	64 65 66 67 68 69 70 71	ASC B C D E F
12 13 14 15 16 17 18 19 20	544 545 546 547 548 549 550 551 552	576 577 578 579 580 581 582 583 584	# 608 609 610 611 612 613 614 615 616	640 641 642 643 644 645 646 647 648	% 672 673 674 675 676 677 678 679 680	704 705 706 707 708 709 710 711 712	High Ord  X or Y C  736 737 738 739 740 741 742 743 744	768 769 770 771 772 773 774 775	800 801 802 803 804 805 806 807 808	832 833 834 835 836 837 838 839	# 864 865 866 867 868 869 870 871 872	896 897 898 899 900 901 902 903 904	928 929 930 931 932 933 934 935 936	960 961 962 963 964 965 966 967	992 993 954 995 996 997 998 999	96 97 98 99 100 101 102 103 104	ASCII ASCII ASCII C C C C C C C C C C C C C C C C C C	DEC. 64 65 66 67 68 69 70 71 72	B C D E F G H
12 13 14 15 16 17 18 19 20 21	544 545 546 547 548 549 550 551	576 577 578 579 580 581 582 583 584 585	# 608 609 610 611 612 613 614 615 616 617	640 641 642 643 644 645 646 647 648 649	% 672 673 674 675 676 677 678 679 680 681	704 705 706 707 708 709 710 711 712 713	X or Y C 736 737 738 739 740 741 742 743 744 745	768 769 770 771 772 773 774 775 776	800 801 802 803 804 805 806 807 808 809	832 833 834 835 836 837 838 839 840 841	# 864 865 866 867 868 869 870 871 872 873	896 897 898 899 900 901 902 903 904 905	928 929 930 931 932 933 934 935 936 937	960 961 962 963 964 965 966 967 968 969	992 993 954 995 996 997 998 999 1000 1001	96 97 98 99 100 101 102 103 104 105	ASCII  ASCII  ASCII  C  C  C  C  G  G  G  G  G  G  G  G  G	DEC. 64 65 66 67 68 69 70 71 72 73	ASC B C D E F
12 13 14 15 16 17 18 19 20 21	544 545 546 547 548 549 550 551 552 553	576 577 578 579 580 581 582 583 584	# 608 609 610 611 612 613 614 615 616	640 641 642 643 644 645 646 647 648	% 672 673 674 675 676 677 678 679 680	704 705 706 707 708 709 710 711 712	High Ord  X or Y C  736 737 738 739 740 741 742 743 744	768 769 770 771 772 773 774 775	800 801 802 803 804 805 806 807 808	832 833 834 835 836 837 838 839	# 864 865 866 867 868 869 870 871 872	896 897 898 899 900 901 902 903 904	928 929 930 931 932 933 934 935 936	960 961 962 963 964 965 966 967	992 993 954 995 996 997 998 999	96 97 98 99 100 101 102 103 104	ASCII ASCII ASCII C C C C C C C C C C C C C C C C C C	DEC. 64 65 66 67 68 69 70 71 72	B C D E F G H
112 113 114 115 116 117 118 119 220 221 222 223	544 545 546 547 548 549 550 551 552 553 554	576 577 578 579 580 581 582 583 584 585 586	# 608 609 610 611 612 613 614 615 616 617 618	640 641 642 643 644 645 646 647 648 649 650	% 672 673 674 675 676 677 678 679 680 681 682	704 705 706 707 708 709 710 711 712 713 714	736 737 738 739 740 741 742 743 744 745 746	768 769 770 771 772 773 774 775 776 777	800 801 802 803 804 805 806 807 808 809 810	832 833 834 835 836 837 838 839 840 841	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906	928 929 930 931 932 933 934 935 936 937 938	960 961 962 963 964 965 966 967 968 969 970	992 993 954 995 996 997 998 1000 1001 1002	96 97 98 99 100 101 102 103 104 105 106	ASCII ASCII ASCII A GENERAL CONTRACTOR CONTR	DEC. 64 65 66 67 68 69 70 71 72 73 74	ASC B C D E F G H I
12 13 14 15 16 17 18 19 20 21 22 22 23	544 545 546 547 548 549 550 551 552 553 554 555	576 577 578 579 580 581 582 583 584 585 586 587	# 608 609 610 611 612 613 614 615 616 617 618 619	640 641 642 643 644 645 646 647 648 649 650 651	% 672 673 674 675 676 677 678 679 680 681 682 683	704 705 706 707 708 709 710 711 712 713 714 715	X or Y C  736 737 738 739 740 741 742 743 744 745 746 747	768 769 770 771 772 773 774 775 776 777 778	800 801 802 803 804 805 806 807 808 809 810 811	832 833 834 835 836 837 838 839 840 841 842	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907	928 929 930 931 932 933 934 935 936 937 938 939	960 961 962 963 964 965 966 967 968 969 970	992 993 954 995 996 997 998 999 1000 1001 1002 1003	96 97 98 99 100 101 102 103 104 105 106 107	ASCII  ASCII  ASCII  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75	ASC B C D E F G H I J
112 113 114 115 116 117 118 119 20 21 22 22 23 24 25 26	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558	576 577 578 579 580 581 582 583 584 585 586 587 588 589 590	# 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622	\$ 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654	% 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686	704 705 706 707 708 709 711 712 713 714 715 716 717 718	736 737 738 739 740 741 742 743 744 745 746 747 748 749 750	768 769 770 771 772 773 774 775 776 777 778 779 780 781 782	800 801 802 803 804 805 806 807 808 809 810 811 812 813	832 833 834 835 836 837 838 840 841 842 843 844 845	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 909	928 929 930 931 932 933 934 935 936 937 938 939 940 941	960 961 962 963 964 965 966 967 968 969 970 971 972 973 973	992 993 954 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110	ASCII  ASCII  ASCII  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77	ASC BCDEFGHIJKLM
12 13 14 15 16 17 18 19 20 22 22 23 24 25 26 27	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559	576 577 578 579 580 581 582 583 584 585 586 586 587 588 589 590 591	# 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623	\$ 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655	% 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719	High Ord  X or Y C  736  737  738  739  740  741  742  743  744  745  746  747  748  750  751	768 769 770 771 772 773 774 775 776 777 788 779 780 781 782 783	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814	832 833 834 835 836 837 838 839 840 841 842 843 844 845 846 847	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 909 910	928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943	960 961 962 963 964 965 966 967 970 971 972 973 974	992 993 954 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111	ASCII  ASCII  ASCII  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78	ASC BCDEFGHIJKLM
112 113 114 115 116 117 118 119 220 221 222 223 224 225 226 227 228	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560	576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591	# 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624	\$ 640 641 642 643 644 645 646 647 648 650 651 652 653 654 655	% 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720	High Ord  X or Y C  736  737  738  740  741  742  743  744  745  746  747  748  749  750  751	768 769 770 771 772 773 774 775 776 777 778 779 780 781 782 783 784	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816	832 833 834 835 836 837 838 839 840 841 842 843 844 845 846 847	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911	928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943	960 961 962 963 964 965 966 967 970 971 972 973 974 975 976	992 993 954 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111	ASCII  ASCII  ASCII  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80	ASC BCDEFGHIJKLMNDP
112 113 114 115 116 117 118 119 220 221 222 223 224 225 226 227 228 229	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561	576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591 592 593	# 608 609 610 611 612 613 614 615 616 617 618 620 621 622 623 624 625	\$ 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656	% 672 673 674 675 676 677 678 680 681 682 683 684 685 686 687 688	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721	736 737 738 739 740 741 742 743 744 745 746 747 748 749 750 751 752 753	768 769 770 771 772 773 774 775 776 777 780 781 782 783 784 785	800 801 802 803 804 805 806 807 808 810 811 812 813 814 815 816 817	832 833 834 835 836 837 838 840 841 842 843 844 845 846 847 848	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 912	928 929 930 931 932 933 934 935 936 937 938 940 941 942 943 944	960 961 962 963 964 965 966 967 968 969 970 971 972 973 974 975 976	992 993 954 995 996 997 1000 1001 1002 1003 1004 1005 1006 1007	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 111 112	ASCII  ASCII  ASCII  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81	ASC BCDEFGHIJKLMNOPQ
3P 112 113 114 115 116 117 118 119 220 221 222 223 224 225 226 227 228 229 330	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562	576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591 592 593 594	# 608 609 610 611 612 613 614 615 616 617 618 620 621 622 623 624 625 626	\$ 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656	% 672 673 674 675 676 677 678 680 681 682 683 684 685 686 687 688	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722	X or Y C 736 737 738 739 740 741 742 743 744 745 746 747 748 749 750 751 752 753 754	768 769 770 771 772 773 774 775 776 777 788 779 780 781 782 783 784 785 786	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818	832 833 834 835 836 837 839 840 841 842 843 844 845 846 847 848	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 912 913 914	928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946	960 961 962 963 964 965 966 969 970 971 972 973 974 975 976 977	992 993 995 996 997 998 1000 1001 1002 1003 1004 1005 1006 1007 1008	96 97 98 99 100 101 102 103 104 105 106 107 108 109 111 112 113 114	ASCII  ASCII  ASCII  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 80 81 82	ASC BCDEFGHIJKLMNOPQR
12 13 14 15 16 17 18 19 22 22 22 23 24 25 26 27 28 29 30 31	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563	576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591 592 593 594 595	# 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627	\$ 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 657 658 659	% 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688 689 690 691	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723	High Ord  X or Y C  736  737  738  739  740  741  742  743  744  745  746  747  748  749  750  751  752  753  754  755	768 769 770 771 772 773 774 775 776 777 788 779 780 781 782 783 784 785 786 787	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818	832 833 834 835 836 837 838 840 841 842 843 844 845 846 847 848 849 850 851	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 911 913 914 915	928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946 947	960 961 962 963 964 965 966 967 968 969 970 971 972 973 974 975 976 977	992 993 954 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007 1008 1009 1010	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115	ASCII  ASCII  ASCII  AB  C  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 88 79 80 81 82 83	ASC  B C C D E F G H I J K L M N D Q R S
12 13 14 15 16 17 18 19 22 22 22 22 22 22 22 22 22 23 30 31	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562	576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591 592 593 594	# 608 609 610 611 612 613 614 615 616 617 618 620 621 622 623 624 625 626	\$ 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656	% 672 673 674 675 676 677 678 680 681 682 683 684 685 686 687 688	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722	X or Y C 736 737 738 739 740 741 742 743 744 745 746 747 748 749 750 751 752 753 754	768 769 770 771 772 773 774 775 776 777 788 779 780 781 782 783 784 785 786	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818	832 833 834 835 836 837 839 840 841 842 843 844 845 846 847 848	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 912 913 914	928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946	960 961 962 963 964 965 966 969 970 971 972 973 974 975 976 977	992 993 995 996 997 998 1000 1001 1002 1003 1004 1005 1006 1007 1008	96 97 98 99 100 101 102 103 104 105 106 107 108 109 111 112 113 114	ASCII  ASCII  ASCII  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 80 81 82	ASC BCDEFGHIJKLMNOPQR
12 113 114 115 116 117 118 119 220 221 222 223 224 225 226 227 228 229 330 331 332	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563 564	576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591 592 593 594 595 596	# 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628	\$ 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 657 658 659	% 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688 689 690 691	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724	High Ord  X or Y C  736  737  738  739  740  741  742  743  744  745  746  747  748  750  751  752  753	768 769 771 772 773 774 775 776 777 788 779 780 781 782 783 784 785 786 787	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818	832 833 834 835 836 837 838 839 840 841 842 843 844 845 846 847 848 849 850 851	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 910 911 912 913 914 915	928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946 947	960 961 962 963 964 965 966 967 970 971 972 973 974 975 976 977 978	992 993 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007 1008 1009 1010 1011	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116	ASCII  ASCII  ASCII  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84	BCCDDEFGGHIJKLMMNDGRRSTUV
12 13 14 15 16 17 18 22 22 23 24 25 26 27 28 29 30 31 32 33 33	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563 564 565	576 577 578 579 580 581 582 583 584 585 586 587 588 590 591 592 593 594 595 595 596 597	# 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629	\$ 640 641 642 643 644 645 646 647 648 650 651 652 653 654 655 656 657 658 659 660 661	% 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688 689 690 691 692 693	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725	High Ord  X or Y C  736  737  738  740  741  742  743  744  745  746  747  748  749  750  751  752  753  754  755  756  757	768 769 770 771 772 773 774 775 776 777 788 779 780 781 782 783 784 785 786 787 788 789 790 791	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823	832 833 834 835 836 837 838 849 840 841 842 843 844 845 846 847 848 849 851 852 853	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 912 913 914 915 916 917 918 919	928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946 947 948 949 950 951	960 961 962 963 964 965 966 967 971 972 973 974 975 976 977 978 979 980 981	992 993 9954 995 996 997 998 1000 1001 1002 1003 1004 1005 1006 1007 1008 1010 1011 1012 1013 1014 1015	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117	ASCII  ASCII  ASCII  AB  C  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84	ASCC DD EF G G H I J K L M M D D Q R S T U V W
112 113 114 115 116 117 118 119 220 221 222 223 224 225 226 227 228 229 330 331 333 334 335 336	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563 564 565 566 567 568	576 577 578 579 580 581 582 583 584 585 586 587 588 590 591 592 593 594 595 596 597 598	# 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629 630 631 632	\$ 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 657 658 659 660 661 662 663 664	672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688 690 691 692 693 694 695 696	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728	High Ord  X or Y C  736  737  738  739  740  741  742  743  745  746  747  748  749  750  751  752  753  754  755  756  757  758  759  760	768 769 770 771 772 773 774 775 776 777 788 779 780 781 782 783 784 785 786 787 788 789 790 791	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824	832 833 834 835 836 837 838 839 840 841 842 843 844 845 846 847 848 849 850 851 852 853 854	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 912 913 914 915 916 917 918 919	928 929 930 931 932 933 934 935 936 937 938 940 941 942 943 944 945 946 947 948 949 950 951	960 961 962 963 964 965 966 967 970 971 972 973 974 975 977 978 979 980 981 982 983	992 993 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007 1008 1009 1010 1011 1012 1013 1014 1015 1016	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120	ASCII  ASCII  ASCII  AB  C  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 88 79 80 81 82 83 84 85 86 87 88	ASCC DE F G G H I J J K L M N N D D R S S T U V W X
112 113 114 115 116 117 118 119 201 221 222 223 224 225 226 227 228 229 331 332 333 334 335 336 337	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563 564 565 566 567 568 569	576 577 578 579 580 581 582 583 584 585 586 587 588 590 591 592 593 594 595 596 597 598 600 601	# 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629 630 631 632 633	\$ 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 657 658 660 661 662 663 664 665	672 673 674 675 676 677 678 680 681 682 683 684 685 686 687 688 689 690 691 692 693 694 695 696 697	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728 729	High Ord  X or Y C  736 737 738 739 740 741 742 743 744 745 746 747 748 750 751 752 753 754 755 756 757 758 759 760 761	768 769 770 771 772 773 774 775 776 777 788 779 780 781 782 783 784 785 786 787 788 789 790 791 792 793	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824 825	832 833 834 835 836 837 838 840 841 842 843 844 845 846 847 848 850 851 852 863 854 855 856 857	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 910 911 912 913 914 915 916 917 918 919 920 921	928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946 947 948 949 950 951	960 961 962 963 964 965 966 967 970 971 972 973 974 975 976 977 978 979 980 981 982 983 984 985	992 993 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007 1008 1009 1010 1011 1012 1013 1014 1015 1016 1017	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121	ASCII  ASCII  ASCII  AB  C  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 80 81 82 83 84 85 86 87 88	ASCC DEF GGHIJK
12 13 14 15 16 17 18 19 20 22 22 22 23 24 25 26 27 28 29 30 31 33 33 33 33 33 33 33 33 33 33 33 33	544 545 546 547 548 549 550 551 552 553 554 555 556 557 560 561 562 563 564 565 566 567 568 569 570	576 577 578 579 580 581 582 583 584 585 586 587 588 590 591 592 593 594 595 596 597 598 599 600 601 602	# 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629 630 631 632 633 634	\$ 640 641 642 643 644 645 646 647 648 650 651 652 656 657 658 659 660 661 662 663 664 665 666	% 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688 689 690 691 692 693 694 695 696 697 698	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728 729 730	High Ord  X or Y C  736 737 738 739 740 741 742 743 744 745 746 747 748 749 750 751 752 753 754 755 756 757 758 759 760 761 762	768 769 770 771 772 773 774 775 776 777 780 781 782 783 784 785 786 787 788 789 790 791 792 793 794	800 801 802 803 804 805 806 807 808 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824 825 826	832 833 834 835 836 837 838 849 841 842 843 844 845 846 847 848 851 852 853 854 855 856 857 858	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 909 911 912 913 914 915 916 917 918 919 920 921	928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946 947 948 949 950 951 952 953 954	960 961 962 963 964 965 966 967 968 969 971 972 973 974 975 976 977 980 981 982 983 984 985 986	992 993 9954 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007 1010 1011 1012 1013 1014 1015 1016	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122	ASCII  ASCII  ASCII  ABB C  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 80 81 82 83 84 85 86 87 88	ASCC DEFGGHIJKLMMNDPQRRSTUVWXYZ
12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 33 33 34 35 36 37 38 39 39 39 39 39 39 39 39 39 39 39 39 39	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563 564 565 566 567 568 569 570 571	576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591 592 593 594 595 596 597 598 599 600 601 602 603	608 609 610 611 612 613 614 615 616 617 618 620 621 622 623 624 625 626 627 628 629 630 631 632 633 634 635	\$ 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 657 658 659 660 661 662 663 664 665	672 673 674 675 676 677 678 680 681 682 683 684 685 686 687 690 691 692 693 694 695 696 697 698 699	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728 729 730 731	High Ord  736 737 738 739 740 741 742 743 744 745 746 747 750 751 752 753 754 755 756 757 758 759 760 761 762 763	768 769 770 771 772 773 774 775 776 777 780 781 782 783 784 785 786 787 788 789 790 791 792 793 794 795	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824 825 826 827	832 833 834 835 836 837 838 840 841 842 843 844 845 846 847 848 850 851 852 853 854 855 856 857 858 859	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 912 913 914 915 916 917 918 919 920 921 922	928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946 947 948 949 950 951 952 953 954 955	960 961 962 963 964 965 966 967 971 972 973 974 975 976 977 978 979 980 981 982 983 984 985 986 987	992 993 9954 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007 1010 1011 1012 1013 1014 1015 1016 1017 1018 1019	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123	ASCII  ASCII  ASCII  ASCII  ABB C  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 80 81 82 83 84 85 86 87 88 89 90 91	ASCC DEF G H I J K L M N D P Q Q R R S T U V W X Y Z [
5P 112 113 114 115 116 117 118 119 20 21 223 224 225 227 228 229 331 332 333 334 335 336 337 338 339 440	544 545 546 547 548 549 550 551 552 553 554 555 556 557 568 560 561 562 563 564 565 566 567 568 569 570 571 572	576 577 578 579 580 581 582 583 584 585 586 587 588 599 590 591 592 593 594 595 596 597 598 599 600 601 602 603 604	# 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629 630 631 632 634 635 636	\$ 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 667 658 669 661 662 663 664 665 666	672 673 674 675 676 677 678 680 681 682 683 684 685 686 687 689 690 691 692 693 694 695 696 697 698	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728 729 730 731 732	High Ord  736 737 738 739 740 741 742 743 744 745 746 747 748 749 750 751 752 753 754 755 756 757 758 759 760 761 762 763 764	( ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( (	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824 825 826 827 828	832 833 834 835 836 837 838 840 841 842 843 844 845 846 847 848 850 851 852 853 854 855 856 857 858	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 918 919 913 914 915 916 917 918 919 920 921 922 923 924	928 929 930 931 932 933 934 935 936 937 938 939 941 942 943 944 945 946 947 948 949 950 951 952 953 954 955 956	960 961 962 963 964 965 966 967 970 971 972 973 974 975 976 977 978 979 980 981 982 983 984 985 986 987	992 993 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007 1010 1011 1012 1013 1014 1015 1016 1017 1018 1019 1020	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124	ASCII  ASCII  ASCII  AB  C  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 80 81 82 83 84 85 86 87 88 89 90 91	BCCDDEFGGHIJKLMMNDPQRRSTUVWXYZC
12 113 114 115 116 117 118 119 220 221 222 223 224 225 229 331 323 334 335 336 337 339 340 441	544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563 564 565 566 567 568 569 571 572 573	576 577 578 579 580 581 582 583 584 585 586 587 590 591 592 593 594 595 596 597 598 599 600 601 602 603 604 605	# 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629 630 631 632 633 634 635 636 637	\$ 640 641 642 643 644 645 646 647 650 651 652 653 654 655 656 657 658 659 660 661 662 663 664 665 666 667 668	672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688 690 691 692 693 694 695 696 697 698	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728 729 730 731 732 733	High Ord  X or Y C  736 737 738 739 740 741 742 743 745 746 747 748 749 750 751 752 753 754 755 756 757 758 759 760 761 762 763 764 765	768 769 770 771 772 773 774 775 776 777 788 779 780 781 782 783 784 785 786 787 788 789 790 791 792 793 794 795 796 797	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824 825 826 827 828 829	832 833 834 835 836 837 838 840 841 842 843 844 845 846 847 848 849 850 851 852 853 854 855 856 857 858 859 860 861	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 910 911 912 913 914 915 916 917 918 919 920 921 922 923 924 925	928 929 930 931 932 933 934 935 936 937 938 940 941 942 943 944 945 946 947 948 949 950 951 952 953 955 956 957	960 961 962 963 964 965 966 967 970 971 972 973 974 975 979 980 981 982 983 984 985 988 989	992 993 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007 1008 1009 1010 1011 1012 1013 1014 1015 1016 1017 1016 1017 1018 1019 1020 1020 1021	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 125	ASCII  ASCII  ASCII  AB  C  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93	ASCC DEF GHIJK LMM NO PP QQ RS TUVWXYZ [
5P 112 133 114 115 116 117 118 119 122 123 124 125 126 127 128 129 130 131 133 134 135 136 137 138 139 140	544 545 546 547 548 549 550 551 552 553 554 555 556 557 568 560 561 562 563 564 565 566 567 568 569 570 571 572	576 577 578 579 580 581 582 583 584 585 586 587 588 599 590 591 592 593 594 595 596 597 598 599 600 601 602 603 604	# 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629 630 631 632 634 635 636	\$ 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 667 658 669 661 662 663 664 665 666	672 673 674 675 676 677 678 680 681 682 683 684 685 686 687 689 690 691 692 693 694 695 696 697 698	704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728 729 730 731 732	High Ord  736 737 738 739 740 741 742 743 744 745 746 747 748 749 750 751 752 753 754 755 756 757 758 759 760 761 762 763 764	( ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( ( (	800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824 825 826 827 828	832 833 834 835 836 837 838 840 841 842 843 844 845 846 847 848 850 851 852 853 854 855 856 857 858	# # # # # # # # # # # # # # # # # # #	896 897 898 899 900 901 902 903 904 905 906 907 918 919 913 914 915 916 917 918 919 920 921 922 923 924	928 929 930 931 932 933 934 935 936 937 938 939 941 942 943 944 945 946 947 948 949 950 951 952 953 954 955 956	960 961 962 963 964 965 966 967 970 971 972 973 974 975 976 977 978 979 980 981 982 983 984 985 986 987	992 993 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007 1010 1011 1012 1013 1014 1015 1016 1017 1018 1019 1020	96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124	ASCII  ASCII  ASCII  AB  C  C  C  C  C  C  C  C  C  C  C  C  C	DEC. 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 80 81 82 83 84 85 86 87 88 89 90 91	ASCC DD E F G G H I J J K L M M N D D R S T T U V W W X Y Y Z Z [ • • • • • • • • • • • • • • • • •

Example: 340Y,70X is found as follows:

340Y = 42 (upper Y) 116 (Lower Y) 70X = 34 (Upper X) 70 (Lower X)

High Order X & Y

340Y,70X  $\rightarrow$  \* t " F

## IV

## **DEVICE CONTROL**

#### INTRODUCTION

The terminal's I/O devices (display, cartridge tape units, printer, and devices connected to the HP-IB) can be program-controlled from the user-defined softkeys, cartridge tapes, or a computer through the use of two types of generalized escape sequences.

- €,c <command sequence>%
- ₹&p <parameter sequence>

The <code>f,c</code> method allows English-like commands to be used in the command sequence to perform a given function. It is recommended that you use <code>f,c</code> sequences, unless backward compatibility to HP 2645 or HP 2648 terminals is required.

The F&p method uses special codes of numerical and alphabetical characters to perform a given function. This method is compatible with HP 2645 and HP 2648 terminals.

The following are examples of the escape sequences used to control a device and/or transfer information.

ዲ,c Copy All from Right tape to Displayዬ or ዲቆp 2s 3d M

t,c REwind Left tape ዩ or

£&p 1u C

f&p 1^
(no equivalent f, c sequence)

%p 2d 25W
(no equivalent %, c sequence)

Transfer all information stored on the right cartridge tape unit to the display.

Rewind the left cartridge tape unit.

Fetch the status of the left cartridge tape unit.

Write the next 25 bytes sent from the computer on the right cartridge tape unit.

#### NOTE

Data can be sent directly from cartridge tape to a computer by the READ key. Also, data can be sent directly from a computer to cartridge tape, printer or HP-IB device by the key. (See Section 11 of the HP 2647A User's Manual for a description of these features.)

# USING THE &,c GENERALIZED ESCAPE SEQUENCE

The command syntax is given in table 4-1. An abbreviated form of the command syntax may be used by sending only the uppercase characters given in the command sequence. Also, words in braces "{ }" may be omitted from the syntax. All escape sequences must be terminated by a %.

Table 4-2 lists the command syntax abbreviations (and their meanings) in alphabetical order. (You may find this table helpful when debugging programs that contain the abbreviated syntax.)

Example: Assign the right tape as the source device.

From the Assign command syntax given in table 4-1:

€,cAssign Source to Right tape%

Using only the uppercase characters in the syntax: <code>\fambraceta,cA S R %</code>

A cross-reference list of command functions using either  $\mathbf{\xi}$ ,  $\mathbf{c}$  or  $\mathbf{\xi}_{\mathbf{k}}\mathbf{p}$  is given in the programmer's reference table in Appendix B.

Table 4-1. 4,c Generalized Escape Sequence Syntax

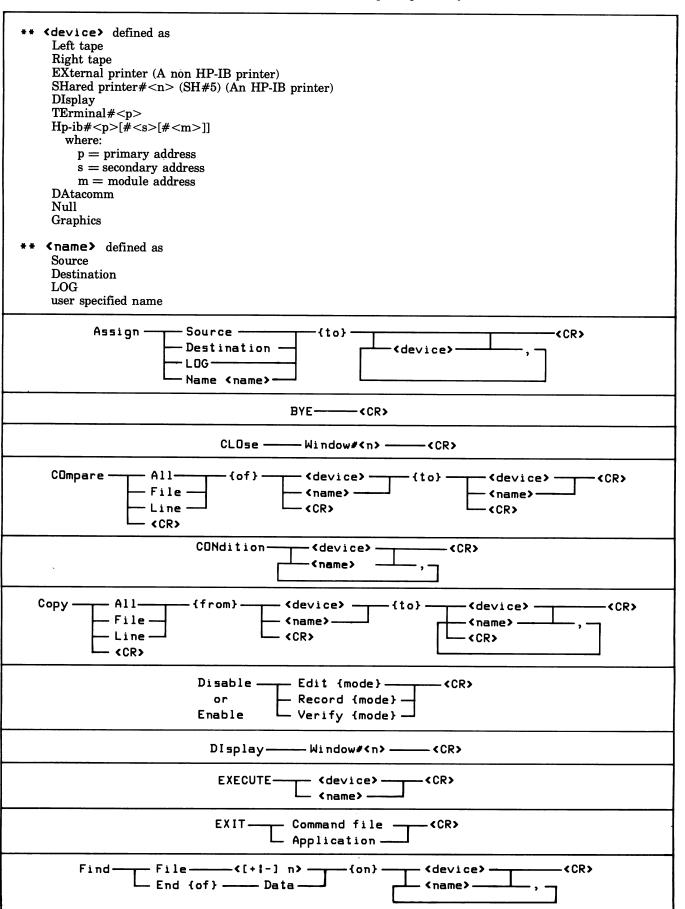


Table 4-1. f., c Generalized Escape Sequence Syntax (Continued)

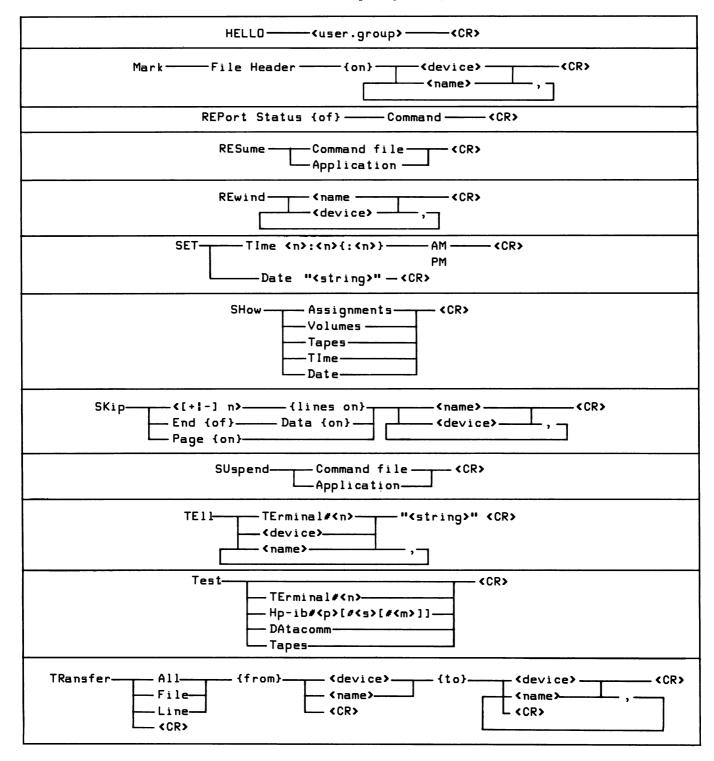


Table 4-2. Command Syntax Abbreviations

A11	Destination	LOG	SHow
AM	Disable	Mark	SKip
Application	Edit	Name	Source
Assign	Enable	Null	Status
Assignments	End	Page	SUspend
CLOse	EXecute	PM	Tapes
Command File	EXIT	Record	TE'l l
COmpare	EXternal printer	REPort	TErminal#
CONdition	File	RESume	Test
Сору	Find	Rewind	TIme
Display	Graphics	Right tape	Window# <n></n>
Data	Hp-ib#[# <s>[#<m>]]</m></s>	SEŤ	Verify
DAtacomm	Left tape	SHared printer# <n></n>	Volumes
Date	Line	, =::==:	

#### **Assign**

The Assign command sequence specifies which device(s) will be assigned to the logical filenames Source, Destination, LOG, or your own filename. The default values are:

Source = Left tape Destination = Right tape LOG = DIsplay

Multiple devices may be assigned to Destination and LOG; a comma and a space is required to separate the device names. Your own filename may be up to 11 characters. These may be alphabetic, numeric, single quote, or underscore.

**Example:** Assign the left tape and local printer as the Destination devices.

₹.c Assign Destination {to} Right tape, EXternal printer  $^{\rm th}$ 

€,cA D R EX%

**Example:** Assign the display workspaces as the Source device.

ዲ,c Assign Source {to} DIsplay % ዲ,cA S DI%

**Example:** Assign the graphics memory as the source device.

ቲ,c Assign Source {to} Graphics ዬ ቲ.cA S Gዬ

**Example:** Assign the data communications line to the host computer as the destination for data.

€,c Assign Destination {to} DAtacomm % €,cA D DA% **Example:** Assign "PLOT" as a user-assigned name to the left tape.

탄,c Assign Name PLOT (to) Left tape 육 탄,cA N PLOT L육

**Example:** Assign "PLOTTER" as a user-assigned name to the HP 7245 Plotter Printer connected to the HP-IB (device#4).

፟ጚ,c Assign Name PLOTTER {to} Hp-ib#4 ዬ ጚ,cA N PLOTTER H#4ዬ

#### Bye

The BYE command sequence terminates use of the current user.group assigned by the HELLO command sequence on the shared printer listings.

Example: ዲ,c BYE%

#### **CLOse**

The CLOse command turns off any of the terminal display lines (message, command, or softkey labels) on the screen. (For turn-on, see DIsplay command.)

**Example:** Turn off the message line on the display.

토,c CLOse Window#5 유 토,cCLO W#5유

Example: Turn off the command line on the display.

€,c CLOse Window#6 ዩ €,cCLO W#6ዩ

Example: Turn off the softkey label line on the display.

ቺ,c CLOse Window#7 ዩ ቺ,cCLO W#7ዩ

### **COmpare**

The COmpare command sequence compares records between two devices. If a compare is not successful in any record, a message will appear on the message line, giving the byte number in the record that did not compare. Nothing is sent to the computer system to indicate successful or unsuccessful comparison.

The defaults are: File, Source, Destination.

**Example:** Compare all of the data on the left cartridge tape to the data on the right cartridge tape.

ዲ,c COmpare All {of} Left tape {to} Right tape ዩ ዲ,cCO A L Rዬ

**Example:** Compare the current file of the source device to the destination device. (The defaults are: File, Source, Destination.)

€,c COmpare ዬ €,cCOዬ

**Example:** Compare the current line of the device with a user-assigned name of "INPUT" to the device with a user-assigned name of "OUTPUT".

€,c COmpare Line {of} INPUT {to} OUTPUT ૧ ૬,cCO L INPUT OUTPUT૧

#### **CONdition**

The condition command sequence causes either the left tape or right tape to run forward to EOT (end-of-tape) then run the tape backware to BOT (beginning-of-tape). (For more information on tape conditioning, see the *User's Manual*.)

**Example:** Condition the left cartridge tape.

€,c CONdition Left tape ƙ €,cCON Lƙ

#### Copy

The Copy command sequence copies 7--bit ASCII data (a line, a file, or all) from the specified source to the specified destination. The defaults are Source, Destination, and File. If the computer system sent <code>f.c</code> Copy a, a file would be copied from Source to Destination. Multiple devices may be specified as destinations by separating the device names with a comma and a space, or by equating the devices to Destination in the Assign command sequence.

#### NOTE

To copy 8-bit binary data (e.g., graphics memory), the TRansfer command sequence must be used.

**Example:** Copy a file from the Source device to the Destination device.

ŧ,c Copy ƙ ቴ,cCƙ

**Example:** Copy all data on the Source device (assume the display) to the local printer and the right tape.

**Example:** Copy the contents of the left tape to the HP-IB device#4 (e.g., HP 7245A Plotter Printer). Data must be ASCII to use the COPY command sequence.

t,c Copy File (from) Left tape (to) Hp-ib#4 % ቴ.cC F L H#4%

# Enable/Disable (Edit Mode, Record Mode, or Verify Mode)

The Enable and Disable command sequences turn on and off Edit Mode, Record Mode, and Verify Mode.

Edit Mode. In local mode (Record key up), the assigned Source and Destination devices are the source and destination for data, respectively. The display workspace presently on the screen displays the data read from Source. The READ and RECORD keys operate normally. (See the User's Manual for a description of Edit Mode.)

In remote mode (Record key down), Data Logging Mode is enabled. (See the *User's Manual* for a description of Data Logging Mode.)

Example: Turn on Edit Mode.

ቴ,c Enable Edit {mode} ዬ ቴ,cE Eዬ

**Record Mode.** Enabling Record Mode has the same effect as pressing the key.

Example: Turn off Record Mode.

ෑ,c Disable Record {mode} ዬ ෑ,cD Rዬ

Verify Mode: The Enable/Disable Verify command sequence turns the write-backspace-read function on and off. This function assures the integrity of data sent to a cartridge tape unit.

Example: Turn on Verify Mode.

ቺ,c Enable Verify {mode} ዩ ቺ,cE Vዬ

#### **Display**

The DIsplay command sequence controls the four display workspaces and the three terminal control lines (message, command, and softkeys). Also, the DIsplay command sequence may be used to specify the display workspace (1, 2, 3, or 4), message line (5), or command line (6) as the destination for data that is to follow.

**Example:** Send "Change Left tape to Right tape in the command line" to the message line. (To turn off the message line, use the CLOse command described previously.)

ર્દ,c DIsplay Window#5 % Change Left tape to Right tape in the command line %

卡,cDI W#5%Change Left tape to Right tape in the command line%

**Example:** Turn on memory lock in workspace 3, clear workspace 1, and display workspace 2 on the screen.

E,c DIsplay Window#3 ዬ €1 E,c DIsplay Window#1 ዬ €HEJ E,c DIsplay Window#2 ዬ E,cDI W#3ዬ€1 E,cDI W#1ዬ€H€J E,cDI W#2ዬ

Example: Display the command line.

ቺ,c DIsplay Window#6 ዬ ቺ,cDI W#6ዬ

#### **EXecute**

The EXecute command sequence allows command sequences to be executed from a device rather than from the computer system. Each command sequence must be on a separate line or record. If user intervention is required at any point in the execution (such as inserting a tape), the SUspend command sequence may be used. (Also see "EXIT" and "REsume".)

**Example:** Execute a list of commands stored in display workspace 3.

ቺ,c DIsplay Window#3 ዬ or ቺ,cDI W#3ዬ ቺ,c EXecute DIsplay ዬ ቺ,cEX DIዬ

The commands to be executed do the following:

• Read file 2 on the right cartridge tape to the display workspace 1.

- Suspend execution for user editing of the displayed data.
- Copy the edited data on the display to the printer.

The commands are:

Find File 2 (on) Right tape
DIsplay Window #1
Copy File (from) Right tape (to) DIsplay
SUspend Command file

(The user would use the RESUME command here to continue execution.)

Copy File <from> DIsplay <to> EXternal printer EXIT Command file

or in abbreviated form:

F F 2 R
DI W.. #1
C F R DI
SU C
(User uses RESUME command here.)
C F DI EX
EXIT

#### **EXIT**

The EXIT command sequence terminates execution from a file or application program. (See "EXecute" above.)

#### **Find**

The Find command sequence positions the device to an absolute or relative (+, -) file number, or to the end-of-data mark. Some printers position to top-of-form when a Find file command is sent. Also, some printers do not respond to line positioning.

**Example:** Find file 4 on the left cartridge tape, then position the left tape forward 6 lines.

E,c Find File 4 (on) Left tape %
E,c SKip +6 {lines} {on} Left tape %
or
E,cF F 4 L%
E,cSK +6 L%

Example: Find the end-of-data mark on the right tape.

t,c Find End {of} Data {on} Right tape ૧

or 독,cF E D R도

#### **HELLO**

The HELLO command sequence allows the user to assign a "user.group" to the listings printed by the shared printer. Up to eight characters may be assigned to each field.

**Example:** Specify "PROJECT3.CHEMLAB" to be printed on all shared printer listings.

€.c HELLO PROJECT3.CHEMLAB %

#### Mark

The Mark command sequence writes file marks on the specified device. Some printers position to top-of-form when a Mark command is sent.

Example: Write a file mark on the right cartridge tape.

ዲ,c Mark File Header {on} Right tape ዬ or

€,cM F H R%

#### **REPort**

The REPort command sequence sends the successful/unsuccessful completion status of the previous command execution to the datacomm line. The status consists of a 5-digit number; the meaning of this number is given in a table at the end of section 6, Status.

#### Example:

t,cREPort Status (of) Command ƙaor t,cREP S C%

#### **RESume**

The RESume command sequence returns control to the command file or the application if it had been suspended. (Also see SUspend and EXecute.)

#### Example:

է,c RESume Command file ዬ or է,cRES Cዬ

#### **REwind**

The REwind command sequence rewinds the specified tape to BOT (beginning of tape). A user-assigned device name may be used.

Example: Rewind the left tape. f, c REwind Left tape  $f_R$ 

or

€,cRE L%

**Example:** Rewind the tape unit with the user-assigned device name "BILLING".

ጚ,c REwind BILLING ዬ or ጚ,cRE BILLINGዬ

#### SET

The SET command sequence allows the user to set the current time in hours, minutes, and seconds (optional) and to set the current date in the terminal. When power is turned on, or a hard reset is performed, the time is set to 8:00:00 AM and the date string is set to 30 asterisks (\*). Once the time is set, it will not require resetting until the terminal is turned off or a hard reset is performed. However, the date will require resetting each day. To set the date, the user may select any data string up to 30 characters.

**Example:** Set the terminal time to 10 hours, 15 minutes, 23 seconds AM.

ዲ,c SET TIme 10:15:23 AM ዬ or ዲ,cSET TI 10:15:23 AMዬ

Example: Set the terminal date to "FRIDAY, JULY 14, 1978".

€,c SET Date "FRIDAY, JULY 14, 1978" ዬ or €,cSET D "FRIDAY, JULY 14, 1978"ዬ

#### **SHow**

The SHow command sequence lists the device assignments, current file number and space remaining on each tape, current terminal time, or current terminal date string on the LOG device.

**Example:** Show the current device assignments for Source, Destination, LOG, and user-defined assignments.

```
€,c SHow Assignments ዬ
or
€,cSH Aዬ
```

**Example:** Show the current file number and space remaining for each tape unit on the display.

```
t,c Assign LOG (to) Display ዩ

t,c Show Tapes ዩ

or

t,cA LOG Diዩ

t,cSH Tዩ
```

**Example:** Show the current terminal time.

```
ŧ,c SHow TIme ዬ
or
ŧ,cSH TIዬ
```

Example: Example: Show current terminal date string.

```
€,c SHow Date ዬ
or
€,cSH Dዬ
```

#### SKip

The SKip command sequence positions a device to a relative line, top-of-form, or beyond an end-of-data mark.

**Example:** Position the tape with the user-assigned name of "MEMO" backward six lines.

```
ዲ,c SKIP -6 {lines} {on} MEMO ዬ
or
ዲ,cSK -6 MEMOዬ
```

**Example:** Position the shared printer to next top-of-form.

```
ዲ,c SKip Page {on} SHared#5 ዬ
or
ዲ,cSK P SH#5ዬ
```

**Example:** Position the left tape beyond the end-of-data mark. (The tape must be positioned to the end-of-data mark, first.)

```
է,c SKip End (of) Data (on) Left tape ƙ
or
է,cSK E D L%
```

#### **SUspend**

The SUspend command sequence allows user intervention when executing command sequences from a file or application. A RESume command sequence returns control to the file containing the command sequences. An EXIT command sequence terminates execution. (See EXecute command.)

#### TEII

The TEll command sequence sends up to 80 characters to the specified device or a terminal in a network. The character string must be enclosed in quotes.

**Example:** Send "This is Display Workspace 3" to workspace 3.

```
t,c Display Window#3 ዬ
t,c TEll Display "This is Display Workspace 3" ዬ
or
t,cDI W#3ዬ
t,cTE DI "This is Display Workspace 3"ዬ
```

**Example:** Send "Insert GAS LAW CURVE DATA into left tape slot" to LOG device and terminals 3, 5, and 7 in the terminal network.

```
ft,c TEll LOG,TErminal#3,TErminal#5,TErmi-
nal#7 "Insert GAS LAW CURVE DATA into left tape
slot" %
    or
ft,cTE LOG,TE#3,TE#5,TE#7 &Insert GAS LAW CURVE
```

DATA into left tape slot"%

#### **Test**

The Test command sequence tests the following:

- terminal (excluding tape units and data paths)
- left and right cartridge tape units.
- datacomm line (the test connector must be installed see section 7.)
- Data path to a specified HP-IB device.
- Data path to a specified terminal in a network.

Further explanation of self tests, interpretation of results, and appropriate action is given in "Self Test" contained in section 7.

**Terminal.** The terminal test verifies the operation of the terminal (such as the display, ROM, character sets, etc.).

```
Example: Test the terminal.

t,c Test %
or

t,cT%
```

Tape Units. The tape unit test writes a worst case data pattern ("%Z") repeated 128 times to form a 256-character record) on the left tape unit, backspaces to the beginning of the record, reads and verifies the record, and writes and verifies a file mark. A worst case test pattern and file mark are written on the right tape unit and verified. Another terminal test is performed.

If a fault is detected during the Tape Test, the test will stop and one of the following error messages will be displayed:

NO TAPE, RUNOFF, DATA PROTECTED, FAIL, WRITE FAIL, STALL, or END OF TAPE.

(See the *User's Manual* for further information on tape test.)

Example: Test the tape units.

€,c Test Tapes ዬ or €,cT Tዬ

**Datacomm:** The datacomm test verifies the data communications PCA in the terminal. The test connector, part no. 02645-60002, must be installed on the PCA to run the test. (See "Self Test" in section 7 for further information.)

**Example:** Test the data communications PCA.

ቴ,c Test DAtacomm ፍ or ቴ,cT DA%

Terminal#<n>. The data path between terminals in a network may be tested by specifying the assigned terminal number (its primary address).

Example: Test terminal #5.

ጚ,c Test TErminal#5 ዩ or ቲ,cT TE#5ዬ **HP-IB.** The HP-IB printed circuit assembly in the terminal may be tested. (See "Self Test" in section 7 for further information.

**Example:** Test the HP-IB printed circuit assembly at module address 4.

```
€,c Test Hp-ib ዬ
or
€.cT Hዬ
```

#### **TRansfer**

The TRansfer command sequence copies 8-bit binary data (a line, a file, or all) from the specified source to the specified destination. The defaults are Source, Destination, and File. If the computer system sent £,c TRansfer <CR>, a file would be copied from Source to Destination. Multiple devices may be specified as destinations by separating the device names with a comma and a space, or by equating the devices to Destination in the Assign command sequence. (The TRansfer command sequence is useful for copying graphics memory data.)

**Example:** Copy a file from the Source device to the Destination device (e.g., left tape is the Source and Graphics is the Destination).

```
モ,c TRansfer ዬ
or
モ,c TRansfer File {from} Source {to} Destination ዬ
```

**Example:** Copy all data on the Source device (assume the right tape) to the HP-IB device #6 (e.g., HP 7245A Plotter/Printer).

```
ቲ,c TRansfer All (from) Source (to) Hp-ib#6 %
or
ቲ.c TRASH#6%
```

Example: Copy the contents of graphics memory to the HP-IB device#7 (e.g., HP 2631G Printer).

```
ጚ,c TRansfer File {from} Graphics {to} Hp-ib#7 ዬ
or
ጚ,cTR F G H#7ዬ
```

# USING THE F&P GENERALIZED ESCAPE SEQUENCE.

The generalized escape sequence for I/O device control is as shown in table 4-3. Items in angle brackets (< >) are replaced by an appropriate numerical value. Items in square brackets ([]) are optional.

The device control escape sequence is initiated by the characters fap and terminated by an upper case character (B, C, D, F, M, P, R, S, U, W, or ^).

The characters b, c, f, m, r, w, and ~ (lower case ^) indicate a command is to be performed. All other letters define parameters for the commands. For a given escape sequence, only one command character may be specified. Also, a device operation (other than a status request) should not be initiated before the previous device opera-

tion has been completed. For example, after initiating a read command, the data record must be read by the CPU before another device operation is initiated. Otherwise, the read operation may not be executed properly.

During the execution of a command, input from the data communications interface is ignored and the keyboard is locked out except for the key during device-to-device transfer and read file operations. Pressing the key will terminate the operation in progress, set a flag to indicate user interrupt to the CPU, and unlock the keyboard. Other operations (such as rewind, condition tape, etc.), cannot be terminated by the return key.

Any errors in the escape sequence will cause the entire sequence to be ignored by the terminal. This may cause the CPU to go into a wait loop if a response is expected from the escape sequence. A programmed time-out can be used to counteract this problem.

Table 4-3. Fap Device Control Escape Sequences

S = Source Device Assignment  D = Destination Device Assignment  P,U,C = Device Command  Status  R = Read  W = Write  B = Copy (Compare) Record  F = Copy (Compare) File  M = Copy (Compare) All	commands [<"from" device code>s] [<"to" device code>d] [ <control parameter="">p][<device code="">u]<control code="">c [<device code="">]^ [<read byte="" control="">]r [<byte count="">]w [<control bit="">]b [<control bit="">]f [<control bit="">]m</control></control></control></byte></read></device></control></device></control>
where:	control parameter (p) is:
where:  device codes (s, d, u) are:  1 = left cartridge tape unit 2 = right cartridge tape unit 3 = display 4 = external printer (If no value is specified, previous device assignments are in effect.)  control code (c) is:  Control Default Code (c) Device Function  0 "from" Rewind 1 "from" Space "p" records 2 "from" Space "p" files 3 "from" Locate end-of-data mark 4 "from" Condition tape 5 "to" Record file mark 6 "to" Record end-of-data mark 7 "to" Test cartridge tape unit 8 "to" Skip "p" records immediately with-	control parameter (p) is:  a positive (+n), negative (-n), or (unsigned) (n) integer, specifying the number of records or files for (c) control codes 1 and 2.  (If no value is specified, +1 is assumed.)  read control byte (r) is:  0 = transmit next record 1 = retransmit last record only 2 = send byte count before transmitting next record = send byte count before retransmitting last record read 4 = transmit file 6 = transmit file with byte count before each record (If no value is specified, 0 is assumed.)  byte count (w) is:  if no value is specified, ASCII is assumed. Data is received until a Line Feed (Lip) character or 256 characters (maximum) are received.  if a value is specified, binary data is assumed.
out recording end-of-data mark Turn on write-backspace-read mode 1 0 Turn off write-backspace-read mode	<ul> <li>control bits (b, f, m) are:</li> <li>0 or no integer = copy record (b), file (f), or all (m) from source device to destination device.</li> <li>1 = compare record (b), file (f), or all (m) on source and</li> </ul>
(If no value is specified, 0 is assumed.)	destination devices.

#### **SELECTING INPUT/OUTPUT DEVICES**

The devices to be controlled are selected by the following escape sequence format:

₹&p	[<"from"	device	code>s]
•	[<"to" de	evice co	ode>d]

where device codes are:

1 = left cartridge tape unit2 = right cartridge tape unit

3 = display

4 = external printer

#### Example:

(Specifies the right cartridge tape unit as the source of the information, and the left cartridge tape unit and printer as destinations for the information).

Only one "from" device may be specified for a given escape sequence. Multiple "to" devices may be specified.

At power on or hard reset, the "preset" assignments are left tape unit for "from" device and right tape unit for "to" device.

#### **CONTROLLING THE DEVICES**

The device functions are controlled by escape sequences in the following format:

€&p	<pre>[&lt;"from" device code&gt;s]</pre>
•	<pre>[&lt;"to" device code&gt;d]</pre>
	[ <control parameter="">p][<device< td=""></device<></control>
	code>u1
	[ <control code="">c]</control>

#### **Examples:**

<sup>ε</sup> τ&ρ 2u 0C	Rewind the right cartridge tape unit.
€c&p 2u - 1p 1C	Backspace one record on the right cartridge tape unit.
<b>ե₄</b> թ 1ս + 3թ 20	Forward space three files on the left cartridge tape unit.
<b>ե≗</b> թ 1ս 6թ 2C	Find the sixth file on the left cartridge tape unit.
₹&p 2u 3C	Locate end-of-data mark on the right cartridge tape unit.
<b>€&amp;ρ 1</b> α 4C	Condition the tape on the left car-

tridge tape unit.

₹&p 2u 5C	Record a file mark on the right cartridge tape unit.
<b>ե</b> ֆթ 2ս 6C	Record end-of-data mark on the right cartridge tape unit.
€&p 1u 7C	Perform a cartridge tape test on the left cartridge tape unit.
₹&p -5p 8C	Backspace five records immediately without recording end- of-data mark on the "to" device.
€&p 90	Turn on write-backspace-read mode.
€&p 10C	Turn off write-backspace-read

If the (p) parameter is omitted (control code 1, 2, or 8) or zero is specified, a default value of +1 is assumed.

mode.

## **Cartridge Tapes**

For the skip record functions (1 or 8), all movements are relative. Backspacing is indicated with a minus (-) sign preceding the p parameter number, while forward spacing is indicated by a plus (+) sign or no sign preceding the number. If a file mark is the last record encountered while backspacing, the tape is spaced forward so that the tape is positioned immediately after the file mark (i.e., just before the first record of the file). Also, the end-of-file mark status bit is set (bit 4 of cartridge tape unit status byte 0). In order to backspace past a file mark, you must specify at least 2 records.

For the locate file function (2), the (p) parameter may be either an absolute file number, or a relative file count indicated by a plus (+) or minus (-) sign preceding the number. The tape is positioned before the first record of the specified file (i.e., after the file mark of the previous file). Files are numbered from 1 to 255.

Skip/locate functions (1, 2, 3, or 8) are limited to the bounds of load point and end-of-data (or end of tape). Any attempt to exceed these bounds will cause the command to be aborted, and the appropriate bits in the device status will be set. To append a new file on a cartridge, first find the end-of-data mark (3), then record a file mark (5) to terminate the last file before starting a new file. If a file mark is not written, the new data will be appended to the end of the last file.

Unless the "skip p records immediately" function (8) is used, an end-of-data mark will be written before a skip, locate, rewind, or condition tape operation (0-4) is performed, if the last function performed on the cartridge was a record operation. "Skip p records immediately" inhibits the writing of the end-of-data mark and is intended primarily for write verification in a write-backspace-read

operation sequence. After using the "skip p records immediately" function, a file mark must be written on the tape before rewinding the tape. This function should not be used to skip forward on a cartridge on which a record function was the last operation.

#### **Display**

The display ignores all control functions. Any control functions applied to the display will be flagged as executing successfully.

#### **Printer**

All functions, except the skip lines functions (1), cause one ASCII Form Feed character (octal 14) to be sent to the The Form Feed character will cause some printers to skip to the top of the next page. The skip lines function will cause the printer to skip p lines using the absolute value of p.

Generally, the terminator sent by the terminal in response to the I/O control escape sequence may be a CR(LF), RS, or GS depending on the communications protocol and terminal configuration (refer to section V). Whenever the terminator is specified, the characters CR(LF)/RS/GS will be used to denote the above conditions.

# TRANSFERRING DATA FROM DEVICE TO COMPUTER

Data may be transferred from the cartridge tape units or display to the computer by the following escape sequence.

t&p [<"from" device code>s] [<read control byte>]r

#### **Examples:**

F&p 2s 2R Right tape unit is selected as the new

"from" device; send byte count before

sending next record

Send next record from the "from" device

The read control byte has the following meanings:

0 = Transmit next record with no byte count

1 = Retransmit last record only

2 = Send byte count before transmitting next record

3 = Send byte count before retransmitting last record read

4 = Transmit file

6 = Transmit file with byte count before each record

#### **ASCII Transfers**

An ASCII transfer is specified by a read without byte

count. For reads without byte count (0R, 1R, 4R) an enabling multicharacter transfer trigger (DC1) from your program (following the escape sequence) causes one record to be read and transmitted to the computer.

For reads without byte count (0R, 1R), an enabling block transfer from your program (following the escape sequence) causes one record to be read and transmitted to the computer. A CR(LF)/RS/GS terminator is appended to the end of the record. Any Line Feed characters in a record will not be transmitted if the key is not latched down. When a file mark is read, the terminal sends an RS (Record Separator) or GS (Group Separator) followed by CR(LF). If the terminal is in BLOCK MODE strapped for page, only RS or GS is sent. The escape sequence must be repeated to read each record from a device.

If a byte count is specified in the escape sequence (2R, 3R, or 6R), the information is sent in two steps:


STEP 1. When your program issues a block transfer enable (following the escape sequence), the byte count (the number of bytes in the record to be sent) will be transmitted to the computer.

STEP 2. When your program enables the next block transfer from the terminal, the record will be sent to the computer. All characters within the record will be sent (including LFs). No record terminator will be appended to the record. (After the record has been sent, the Request to Send (CA) line from the terminal will be dropped for about 5 milliseconds. This may be used as an interrupt condition for the computer.)

#### **Binary Transfers**

The byte count is sent in binary as four bytes followed by a CR(LF), or an RS/GS if the terminal is in BLOCK MODE, strapped for page.

If retransmit is specified (1R or 3R), the previous record read is transmitted. Only the previous record can be retransmitted. Intervening read or write operations are not allowed.

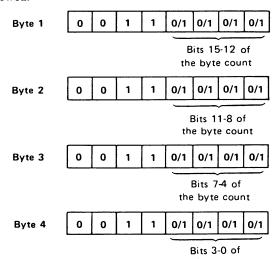

To transfer binary data, the read control byte in the escape sequence must specify a byte count (2R or 3R), and the PARITY switch on the terminal must be set to NONE. If a non-recoverable error occurs, the terminal will send an RS/GS as if a file mark were detected. The type of error can be determined by inspecting the device status.

#### TRANSFERRING DATA FROM COMPUTER TO DEVICE

A record of data may be transferred from the computer to the cartridge tape units, display, and optional printer by the following sequence:

[<"to" device code>d] €&p [<byte count>]w

#### Example:

₹&p 15W Send the next 15 data bytes from the

computer to all "to" devices

The byte count must consist of ASCII numerals. The maximum value is 256. If no byte count is specified, data is accepted by the terminal until a Line Feed character is received or a maximum of 256 characters are received. If a byte count is specified, an ENQuiry character (octal 5) must be sent after the escape sequence in point-to-point operation, but before the data bytes. When the terminal responds with an ACKnowledge character (octal 6), then the data bytes may be sent. For multipoint operation, refer to section V.

During the transmission of the data byte, nulls and rubouts will not be stripped out of the data byte stream, and the terminal will not respond to an ENQuiry character from the computer with an ACKnowledge character.

To use all eight bits of each byte for binary data, no parity (NONE) should be selected for both terminal and the computer.

The keyboard will be locked out until the record has been transferred to all destination devices. Upon successful completion of the operation, the terminal will respond with an S followed by CR(LF)/RS/GS after receiving a block transfer enable. Any non-recoverable write errors terminate the escape sequence immediately, and the terminal will respond with an F followed by CR(LF)/RS/GS instead.

#### **COPYING A RECORD**

A record may be copied from one terminal device to

another. The escape sequence format is as follows:

[<"from" device codes>s1 £&p [<"to" device code>d]

Example:

€&p B Copy one record from the "from" device

to all "to" devices.

Any file or end-of-data marks on the "from" device are copied to the "to" devices and count as one record each. (No file marks are transferred where the display is the "from" device.)

An error condition results if an attempt is made to copy a record beyond the available data space of a "to" device (for example, end of tape). Also an error condition results if the "from" device is located at end-of-data.

Upon successful completion of the transfer, the terminal sends an S followed by CR(LF)/RS/GS after receiving a block transfer enable. If an error occurred during the transfer, an F followed by CR(LF)/RS/GS is sent instead.

#### **COPYING A FILE**

A file may be copied from one terminal device to another. The escape sequence format is as follows:

₹&p [<"from"device code>s] [<"to" device code>d]

Example:

€&p 2s 4d F Copy one file from the right cartridge

tape unit to the printer. The right cartridge tape unit is selected as the new "from" device; and the printer is selected

as the new "to" device.

The file copy operation starts from the current position on the from device and copies one record at a time until a file or end-of-data mark is detected. Upon completion, the mark is sent to all "to" devices. If the data space is exceeded on a "to" device (for example, end of tape), the transfer is terminated and an error condition results.

Upon successful completion of the transfer, the terminal sends an S followed by CR(LF)/RS/GS after receiving a block transfer enable. If an error occurred during the transfer, an F followed by CR(LF)/RS/GS is sent instead.

The terminal operator may interrupt this operation by pressing the key. In this case, the termination response is U followed by CR(LF)/RS/GS.

#### COPYING TO END OF MEDIUM

All files on a from device may be copied to one or more to devices by using the following escape sequence format:

t&p [<"from" device code>s]

[<"to"device code>d]

m

Example:

Copy all data from the left tape unit to

the printer.

The end of medium copy operation starts from the current position on the "from" device to the end of medium (end-of-data mark on the cartridge tape unit, or end of display memory). If the data space is exceeded on the "to" device, the copy operation is terminated and an error condition results.

Upon successful completion of the transfer, the terminal sends an S followed by CR(LF)/RS/GS after receiving a block transfer enable. If an error occurred during the transfer, an F followed by CR(LF)/RS/GS is sent instead. The terminal operator may interrupt this operation by pressing the key. In this case, the termination response is U followed by CR(LF)/RS/GS.

# FAST BINARY READ (PROGRAM LOADING)

Binary data can be read directly into the computer without the normal handshake process by using:

۴e

The principal use of this escape sequence is for loading of binary data. When the sequence is issued to the terminal, parity is turned off, and transmission begins immediately without waiting for a block transfer enable from the computer. Transmission continues until a file mark is read. Data is transmitted as read from the source device. No terminators (that is, CR, LF, RS, GS) are appended to the end of record. The mark does not cause an RS (Record Separator) to be transmitted; it serves only to terminate transmission. Instead, the reading of a file mark or end-of-data mark causes two null bytes (all zeros) to be transmitted. If an I/O error occurs, the binary read operation is terminated. Two "all ones" bytes will be sent if the tape is already positioned past the end-of-data mark when the fast binary read operation is invoked. If the Fast Binary Read Strapping Option is set (see page 5-12), the baud rate of the 2647 will automatically switch to 9600 baud. This is valid only if the CPU is capable of receiving at 9600 baud and the CPU's interface is clocked by the 2647.

# INDICATING SUCCESSFUL COMPLETION OF A PROGRAM-CONTROLLED FUNCTION

Completion of a device control or transfer of information should be tested by your program as follows:

- Initiate a block transfer from the terminal. (The manner of initiating this block transfer from the terminal varies according to the data communications protocol—see section V.)
- After the terminal has successfully completed the function, it responds to the computer program with an S character followed by a CR(LF)/RS/GS. If the function was a data read operation, (Ftep R) successful completion is the data.
- If the operation failed, or an error occurred in the process, the terminal responds with an F character followed by CR(LF)/RS/GS. If the function was a data read operation, an I/O failure or end-of-file is indicated by a response of RS, CR(LF), GS.
- If a device-to-device operation was interrupted by you (by pressing ), the terminal responds with a U character followed by CR(LF/RS/GS.

## **DATA COMMUNICATIONS**

V

#### INTRODUCTION

This section describes the terminal's data communications capabilities and operating requirements. The topics include interface specifications, network considerations, point-to-point operation, multipoint operation, and communication configuration status.

- Connected to a computer through a modem (figure 5-1C).
- Connected through other terminals to a modem (figure 5-1D).

# CONNECTING TERMINALS TO A COMPUTER

The terminal can be configured to work in a variety of computer applications. Your communication needs can be met by selecting a particular interface, modem, and protocol (communication control program). Refer to the remainder of this section for configuration information.

#### **Networks**

The terminal can be connected in a variety of network configurations. Figure 5-1 illustrates the following configurations:

- Hardwired to a computer (figure 5-1A).
- Hardwired through other terminals to a computer (figure 5-1B).

#### **Interfaces**

The terminal can be used with a variety of communication interfaces. A list of available interfaces and a brief description of each is given in table 5-1. The interfaces are the 13260A Asynchronous, 13260B Extended Asynchronous, 13260C Multipoint Asynchronous, and the 13260D Multipoint Synchronous. A list of some of the capabilities of these interfaces is given in table 5-2.

Once the interface has been selected, the terminal can be configured to operate with a variety of protocols, parities, and data formats. This is done by setting switches or jumpers on the interfaces.

Section VII, Installation, contains complete lists of the possible switch settings for each of the interfaces together with brief descriptions of the switches. Also included in the Installation section are procedures for setting these switches.

Table 5-1. Data Communication Interfaces

Basic Comm	Basic Communications (Point-to-Point)					
13260A	Standard Asynchronous Communications Interface Standard RS232C communications interface.					
13260B	Extended Asynchronous Communications Interface provides either standard RS232C or 20 mA current loop communications. It allows split speed and custom baud rates.					
Multipoint C	ommunications					
13260C	Asynchronous Multipoint Communications Interface provides asynchronous multipoint communications. It allows several terminals to share the same communication line.					
13260D	Synchronous Multipoint Communications interface provides synchronous multipoint communications. It allows several terminals to share the same communication line.					

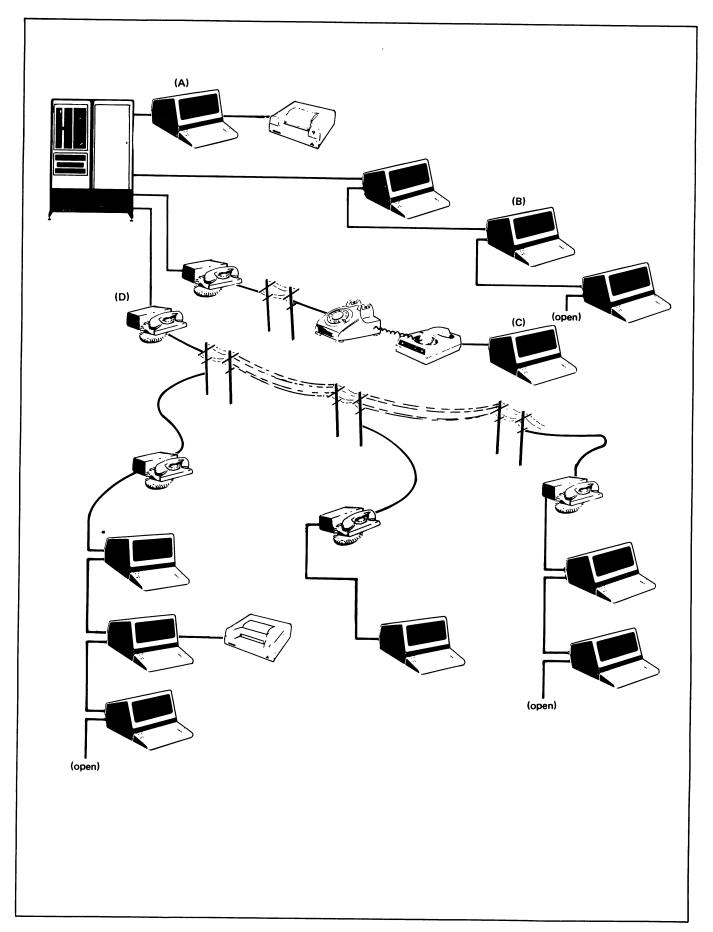


Figure 5-1. Terminal Network Configurations

Table 5-2. Data Communication Interface Capabilities

		132	60	
DATA COMMUNICATIONS FEATURES	A	В	С	D
Transfer Rate: 110, 150, 300, 1200, 2400, 4800, 9600 bits per second and external clocking (110-9600) 300, 600, 1200, 1800, 3600, 4800, 7200, 9600	x	x	x	
bits per second 2400, 4800, 9600 bits per second and external clocking (300-9600) Custom transfer rates within 1% from 37.5 to 2400 bits per second		X		X
Split speed transmit/receive capability	х	X	×	x
EIA RS 232-C		x	^	^
Teletypewriter compatible	X			×
ASCII	X	X	×	^
EBCDIC		,	^	^
20mA DC Current Loop		×		
Transmission Modes: Character Transfer Block Transfer Half-duplex Full-duplex	X X X	X X X	X	×
Asynchronous Synchronous	x	x	×	×
Hardwired to computer; dialed (switched) or leased line	×	×	×	×
Modem Compatibility: Bell 103A, 202D, 202C, 202S, 202T	×	×	x	
(Asynchronous) Vadic 3400 (Asynchronous/Synchronous) Bell 201A, 201B, 201C, 208A, 208B, 209A (Synchronous)	×	×	×	X
Choice of main channel or reverse channel line turnaround for 202 modems	×	×		
Auto-Answer/Disconnect		×	×	x
Transparency	x	×	×	x
Data Comm. Self-Test	×	x	×	×
Error Checking: VRC, choice of parity generation/checking LRC CRC-16	×	x	X X X	×××
Additional polling protocol features:  Daisy-chained/multipoint line and modem sharing			x	×
(up to 32 terminals/line) Synchronous polling (IBM Binary Synchronous Multipoint Communication, Bisync)				>
Asynchronous polling (modeled after IBM Bisync) Group and device addressing; group poll	;		X	,
broadcast Variable I/O buffer sizes Configuration status Monitor Mode Driver Mode (option)	×	×	X X X	)

Some of the communication features can be selected from the Keyboard and the Keyboard Interface PCA. Tables 5-3 and 5-4 provide lists of these switches together with brief descriptions.


Table 5-3. Keyboard Interface (PCA) Switch Summary

SWITCH	CHARACTER PROTOCOL	BLOCK PROTOCOL
Α	Function key transmission	(not used)
В	Space overwrite latch	same
С	Cursor end-of-line wraparound	same
D	Line/Page mode	same
E	Paper tape mode	same
F	Fast binary read	(not used)
G	Block transfer handshake	(not used)
н	Inhibit DC2	(not used)
J	Auto terminate	same
κ	Clear terminator	same
L	Self-test inhibit	same
М	Reverse action of CNTL key with INSERT CHAR and DELETE CHAR keys (wrap function)	same
N	Escape code transfer to printer	same
Р	Compatibility Mode (scaled)	same
Q	Compatibility Mode (unscaled)	same
R	Circuit Assurance	Internal Data Set Ready
s	Main/Reverse Channel config-	Space
Т	uration. Switches S and T can- not be modified programmat- ically.	Compression Output block size. (Switches T and U cannot be modified
U	CPU break	programmatically.)
V	Carrier detect	Synch Mode for Asynchronous Operation
w	Data Comm self-test enable	same
x	Data speed select	same
Υ	Transmit LED	same
z	Force Parity	Transparency

## **Interface Signals**

The signals available on each of the communication interfaces are listed in the Installation section. This information can be used to verify interface compatibility or to fabricate special interface cables.

Table 5-4 Keyboard Communications Switches

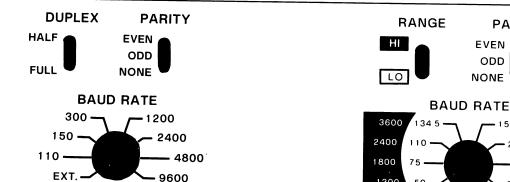

#### **BASIC COMMUNICATIONS DATA COMM SWITCHES**

**DUPLEX Switch.** HALF: Typed characters are processed by the terminal and transmitted to the computer. FULL: Typed characters are transmitted to the computer and not processed by the terminal until returned from the computer. (This function is ignored in Block Mode.) Not present on terminals with multipoint interfaces.

RANGE Switch. This switch is used to select ranges for the BAUD RATE switch (multipoint only).

PARITY Switch. When set to EVEN/ODD/NONE, even/odd/no parity is transmitted for each character. Incorrect parity: a "S" is displayed.

BAUD RATE Switch. Selects data transmission rate of 110, 150, 300, 1200, 2400, 4800, or 9600 baud. EXT: any rate between 110 and 9600 can be selected from an external source. The 110 baud rate uses two stop bits per character; all others use one stop bit. In Multipoint configurations, the following additional speeds are available: 600, 1800, 3600, and 7200.

> When down, the terminal is in Remote (on-line) operation. Otherwise, the terminal is in local (offline) operation.

> When the terminal is in Block Mode, typed data is sponded. Otherwise, the terminal is in Character Mode and data is transmitted as typed. (See "Block Mode". In multipoint configurations the terminal is

#### MULTIPOINT **DATA COMM SWITCHES**

In basic communications, transmits a BREAK signal to interrupt computer operation. (Transmits a 200 ms space on the asynchronous data communication line and sets secondary channel low for 200

PARITY

200

4800

300 9600

7200

In multipoint an RVI is transmitted instead of ACKO or ACK1 if BREAK is pressed while the terminal is receiving text (Text-In). In other multipoint modes the key clears the data comm output buffers and sends a CN (Cancel) to the computer. (Refer to the BREAK KEY description under multipoint.)

The indicator will be lighted when a data link exists for transmission between the terminal and the computer.

#### **On-Line Mode**

0

TRANSMIT

1200

- Character Mode, Format Off. The entire line containing the cursor is transmitted as a block.
- Character Mode, Format On. Unprotected characters from the cursor position to the end of the unprotected field are block transmitted. The cursor is left at the first character position after the end of the field.
- Block Mode, Format Off. After receiving a DC1 from the computer, the terminal informs the computer by transmitting a DC2 control character (or DC2 CR(LF) with Line Strapping - see "Strapping Options") that the terminal is ready to transmit characters from the cursor to the end of the line of memory (dependent on Line or Page strapping).1
- Block Mode, Format On. After receiving a DC1 from the computer, informs the computer by transmitting a DC2 (or DC2 CR(LF) with Line Strapping) that the terminal is ready to transmit the current field, or all unprotected fields from the cursor to the end of memory, each delimited by a unit separator, US (dependent on Line/ Page strapping).1

displayed but not transmitted to the computer until requested by the computer or until after the key has been pressed and the computer has re-

always in Block Mode, regardless of key position.

<sup>1</sup>Basic Data Communications only

REMOTE

BLOCK MODE

#### **Modems**

The terminal can be used with a variety of modems depending on the requirements of the given configuration or network. Table 5-5 contains a list of modems and the configurations in which they can be used.

Table 5-5. Modems

MODEM	DATA RATE (BITS/SEC)	LINE TYPE: DIALED/LEASED	DUPLEX FULL/HALF	WIRES 2/4	REV. CHAN.
Asynchronous					
Bell 103A	300	D/L	H/F	2	No
Bell 202S Bell 202C ITT GH 2052 Nokia DS 9320	1200	D	н	2	Option
Bell 202T Bell 202D	1200 (3)	L	H/F	2/4	Option
Vadic VA3400	1200	D	F	2	No
Synchronous (1)					
Vadic VA3400	1200	D	F	2	No
Bell 201C Bell 201A Milgo 2200 Milgo 2400	2400	D/L (2)	H/F	2/4	No
Bell 208A	4800	L (2)	H/F	4	No
Bell 208B	4800	D	н	2	No
Bell 209A	9600	L (2) (4)	F	4	No

#### Notes:

- 1. Synchronous modems require the internal clock modem option.
- 2. Synchronous operation on a leased line requires the switched carrier modem option.
- 3. C2 line conditioning allows operation at 1800 bits/sec.
- 4. Requires D2 line conditioning.

#### **COMMUNICATION PROTOCOLS**

Control of computer-terminal communications is required for the orderly transfer of data. This control is provided in the form of a protocol or a set of rules and procedures. The protocol used determines who sends and who receives during each phase of communication. In addition the protocol normally provides for an orderly recovery from communication errors.

The protocols available with the terminal allow operation ranging from simple full duplex teleprinter compatibility to bisynchronous multipoint communications. The various protocols can be selected by installing the proper interface and ROM modules. The terminal and the interface can then be configured to meet your specific requirements.

The major characteristics of the available protocols are listed in table 5-6. The following paragraphs discuss each of these protocols.

#### **Character Protocols**

Character protocols transmit a single character at a time. Data checking, if present, is done on individual characters only (parity). Some configurations allow the transmission of multicharacter groups but no block checks are made. These is no automatic retransmission of data following the detection of a data error. Currently available character mode protocols are Standard, Main Channel, and Reverse Channel.

Standard Communications is a term used to refer to point-to-point or single terminal communications. The terminal can be connected directly to a computer (hardwired) or through a modem. In most block applications the terminal can use a simple "handshake" protocol with the ASCII DC1 character. This protocol can be used with Bell 103 or equivalent modems (full-duplex operation). There are two additional protocols available, Main Channel and Reverse Channel. These protocols are normally only used with Bell 202 or equivalent modems (half-duplex operation).

#### **Block Protocols**

Block protocols transmit a block of characters at a time. Data checking is performed on an entire block of data. A separate block check character (BCC) is generated for each block. If a data error is detected, a retry of the data transmission is made automatically. The currently available block protocol is Multipoint.

Multipoint communications is the use of several terminals sharing a single communication line. The terminals can be directly connected to the computer or can be connected through modems. Multipoint communications require a special multipoint protocol. Additional information on multipoint operation is given later in this section.

Table 5-6. Protocol Characteristics

Single Terminal (	Character Mode Protocols)
Standard	Standard communication protocol is teletype compatible or can use the DC1 character to trigger multicharacter transfers.
Main Channel	Communication protocol uses special framing characters to control line turn-around.
Reverse Channel	Uses secondary channel signals to trigger line turn-around.
Multiple Terminal	(Block Mode Protocols)
Multipoint	Uses a polling protocol similar to IBM Bisync to serve multiple terminals on the same line.

The remainder of this section provides descriptions and samples of control and data transfer sequences for various protocols. Included are examples of typical single terminal and multiple terminal organizations together with sample communication programs. Detailed flowcharts of the various protocols are given in Appendix C.

#### CHARACTER PROTOCOLS

The terminal can operate character-by-character as a completely interactive terminal or on a block of data at a time. Block transfers allow data to be composed and edited at the terminal allowing the user to verify and correct data before sending it to the computer.

## **Operating at High Speeds**

If the number of characters sent to the terminal in one sequence exceeds 80, the required terminal processing time may cause some of the characters to be lost. (This usually does not occur at data rates of 4800 baud or less.) The symptom of this problem is the appearance of the "  $\blacksquare$ " (delete) or " $\_$ " characters. (These characters do not appear if the terminal is in Graphics Text Mode.)

There are three ways of insuring that this problem will not arise:

• It is possible to use a call-and-answer procedure between the terminal and the computer. If the computer sends an ENQ (octal 5) character after sending 80 characters, the terminal will respond with the ACK (octal 6) after it has processed the characters. The computer can then send the next block of characters. This is the recommended technique. The ENQ/ACK handshake cannot be used when the terminal is in Compatibility Mode (refer to Section III, Compatibility Mode). Compatibility Mode automatically selects a larger data communications buffer in non-multipoint operation. (Refer to the description of alternate buffer size that follows.

- Delays can be inserted in the application or system software after each 80 character transfer from the computer to the terminal. Transmitting NULL characters (octal 0) is one way to accomplish this. Each NULL character has the effect of 4 millisecond delay when operating at 2400 baud, and 2 milliseconds at 4800 baud. As an aid in calculating needed time delays, a list of processing times for various terminal functions is provided in table 5-7. The times listed are typical and can vary greatly depending on such factors as the number of characters in the terminal memory or on the display, and the current operating mode.
- A larger data communications buffer can be selected using the P and Q switches on the Keyboard Interface PCA. The larger buffer must be selected by physically setting the switches. Programmatically setting the switches will not work. Opening either P or Q will allocate a 2048 byte communications buffer when the terminal is initialized (power on or a full reset). This will help to eliminate data overruns due to character bursts. The additional buffer space is taken from the available display memory space. This will result in a loss of display storage. (With the 2048 byte buffer, the standard terminal can store 37 lines of 80 characters.) Note that the P and Q switches are also used to select Compatibility Mode for graphics operation. (Refer to table 5-8.) Compatibility Mode is discussed in detail in Section III, Graphics Control Functions.

Table 5-7. Terminal Functions

TERMINAL FUNCTION	TYPICAL REQUIRED TIME (MILLISECONDS)*
Text Character	0.7
Cursor Up/Down/Left/Right	1.4
Line Feed	1.4
Insert Char	4.5
Delete Char	7.0
Insert Char w/wrap	12.0
Delete Char w/wrap	19.0
Soft Reset (Tapes Stationary)	130
Hard Reset (No Tapes)	800
Forms Mode On	12.0
Forms Mode:	
Home	8.0
Tab	8.0
Back Tab	10.0
Erase to End-of-Line	10.0
(40 characters)	

#### Character Mode

In Character Mode operation (BLOCK MODE key up), the terminal sends characters to the computer as they are typed. This mode of operation can be used for conversational exchanges with the computer.

#### Example:

Computer: Please type your company name

User types:

Computer: What file number would you like from

the AJAX library?

User types: 12345

and so on

#### **Multicharacter Transfers**

There are certain functions that always result in multicharacter (block) data transfers.

- device input/output and control operations, including tape transfers.
- special function keys
- status requests
- cursor sensing
- all transfers while in Block Mode

In order for the terminal to make a block transfer, it must first be enabled and then triggered by the computer. Transfers are enabled by the ENTER or special function keys while the terminal is in Block Mode (see figure 5-2). When a transfer is enabled from the keyboard, the terminal sends a DC2 character to the computer to indicate that a data block is ready for transmission. (This process can be modified by strap settings on the Keyboard Interface, refer to Section VII.) A transfer can also be enabled from the computer by an escape sequence requesting status (ESC • ), cursor sensing (ESC a), or device control (ESC&p. . .) as shown in figure 5-3.

When the transfer is enabled the keyboard is locked out until the transfer is complete. Enabling sequences should not be entered from the keyboard or cartridge tapes because they will cause the keyboard to be locked until the computer responds with a DC1 character. (If the computer does not respond, a soft reset will cancel the transfer and re-enable the keyboard.)

Once a block transfer has been enabled, it must be triggered by the computer before the block of data is actually sent. The computer triggers the transfer by sending a DC1 character when it is ready to receive the data. The terminal also assumes that it has received the trigger when it is first powered up or fully reset, or when the REMOTE key is pressed (down).

The computer software must support the handshaking process used in multiple character transfers. The DC2 character must be recognized as a request to send data and

the DC1 character must then be sent to trigger the transfer after buffers have been allocated to receive the data. Additional software support may be needed depending on your need for terminal or device control. There are straps on the Keyboard Interface that can be used to modify the handshaking process. These are discussed later in this section.

#### NOTE

The computer should not be allowed to echo back information that has been transmitted as a block from the terminal.

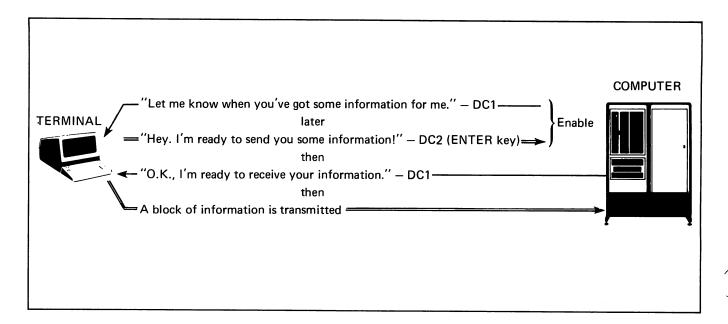


Figure 5-2. Block Transfer Enabled By The ENTER Key

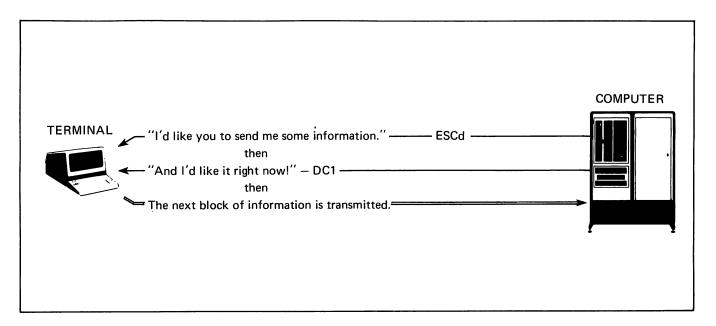


Figure 5-3. Block Transfer Enabled By The Computer

#### **Block Mode**

When the terminal is in Block Mode (BLOCK MODE key down), characters are not transmitted as they are typed. Instead, the user can input data to the terminal, then edit and correct the data before sending it to the computer using the key. The data can be grouped into convenient blocks, either lines or pages (refer to the configuration procedures later in this section). Block Mode operation allows you to efficiently utilize computer and communication facilities.

The G and H switches on the Keyboard Interface PCA are used to control the terminal's response to block transfer requests (refer to table 5-8).

Swi		Setting H	Block Operation
Clos	sed	Closed	Data transfers used DC1/DC2 handshake. Other transfers are triggered by the receipt of a DC1 character.
Clo	sed	Open	Data is sent when the key is pressed. Other block transfers are triggered by the receipt of a DC1 character.
Ор	en	Closed	All block transfers require a DC1/DC2 handshake.
Ор	en	Open	No DC1/DC2 handshake is required for any block transfer.
Note: In half duplex operation, a line turnaround is substituted for a DC1 character.			

Note: In half duplex operation, a line turnaround is substituted for a DC1 character.

The size of the block of information transferred in BLOCK MODE, and the control characters used to separate fields and to terminate blocks differ somewhat, depending on the Line/Page Strapping of the terminal and whether or not the terminal is operating in FORMAT MODE. Figure 5-4 illustrates these differences.

In the example in figure 5-5, the user has an application in which order data is to be entered in the same format as a standard company form.

#### **Full Duplex Operation**

In full duplex operation, the characters which are typed at the keyboard are transmitted to the computer and are not displayed unless they are returned by the computer. This setting is ignored when in Block Mode.

## **Teletype Compatible Communications**

In teletype compatible (full duplex, character mode) applications, the terminal can be quickly configured for use by following the instructions given in the Installation section. Note that if block data transfers are used the computer should be programmed to use the simple DC1/DC2 protocol described under Multicharacter Transfers.

# Half Duplex Operation (202 Modem Compatibility)

In half duplex operation, data is sent in only one direction at a time. In order to change the direction of data flow, a line turn around must occur. This means that the sender becomes the receiver and the receiver becomes the sender. Line turn arounds are controlled by half duplex line protocols. Both the computer and the terminal must use the same protocol otherwise malfunction and loss of data will result. The Main Channel and Reverse Channel protocols are examples of half duplex operation.

Initially the terminal is in the transmit state. While in this state the terminal will ignore data sent from the computer. The terminal will remain in the transmit state until one or more of the following occur:

- An ON to OFF transition on the SB (CCITT 122) line (Reverse Channel)
- An end of data character (ETX or EOT) is sent (Main Channel)

In the example in figure 5-5, the user has an application in which order data is to be entered in the same format as a standard company form.

 The user tries to send an end of data character from the keyboard (control-C, control-D)

The above conditions cause the terminal to switch to the receive state.


The terminal then receives the processed data until one of the following occurs:

- An ON to OFF transition of the CF (CCITT 109) line (Reverse Channel)
- An end of data character (ETX or EOT) is received (Main Channel)

The terminal then requests the computer or modem for permission to transmit. The computer or modem responds with transitions of the CB (CCITT 106) and SB (CCITT 122) lines. (If the computer or modem does not respond within 2.6 seconds the terminal will return to the receive state.) If the computer is ready the terminal will begin to send any data present in its output buffer.

The terminal provides a range of half duplex line protocols, including Bell 202 modem compatible protocols. These protocols are selected by switch settings on the Keyboard Interface PCA. Table 5-8 contains a list of the communication switches that are used to select half-duplex protocols.

Half-duplex operation can be controlled either by RS232C signal lines or by control characters in the data being transferred or by a combination of characters and signals. The Main Channel protocol uses control characters while the Reverse Channel protocol uses control signal lines.

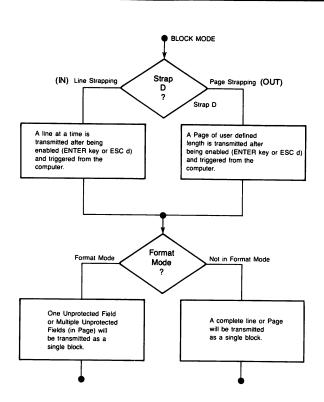

#### STRAPPED FOR LINE

## non-FORMAT • MODE

- data is transferred from the current cursor position to the end of the line or to a Record Separator (RS) control character, whichever occurs first.
- imbedded control characters are transmitted. If present, the RS character is sent.
- the Block is terminated by the transmission of a CR(LF), a Carriage Return and Line Feed if AUTO LF is depressed. (A local CR(LF) is executed to reposition the cursor; if no more information is present at or beyond the cursor the transmission consists of RS CR(LF).)

#### FORMAT MODE

- only information in Unprotected Fields is transmitted. If the cursor is not in an Unprotected Field it will be forwarded to the next one or RS CR(LF) will be transmitted if no such field exists. Data is transmitted from the cursor position to the end of the Field or an RS, whichever occurs first. Thus the Unprotected Field to be transferred could no be longer than one line in length.
- imbedded display control characters are not transmitted. If present, the RS character is sent.
- the Block is terminated by the transmission of a CR(LF) and the cursor is forwarded one character position.


#### STRAPPED FOR PAGE

- data is transferred from the current cursor position to the end of the terminal's allocated memory or to the next RS, whichever occurs first. Thus the Block to be transferred could be several lines of information
- imbedded control characters are transmitted. If present, the RS character is sent.
- if multiple lines are in the Block, they are separated by CR LF in the transfer. The Block is terminated by the transmission of an RS.
- only information in Unprotected Fields is transmitted. If the cursor is not in an Unprotected Field it will be forwarded to the next one or RS will be transmitted if no such fields exist. Data found in Unprotected Fields is transmitted from the cursor until an RS or the end of memory is encountered.
- imbedded display control characters are not transmitted. If present the RS character is sent.
- a Unit Separator (US) control character (or RS character for multipoint) is transmitted between each Unprotected or Transmit Only field. The Block is terminated by the transmission of an RS.


Note: In Multipoint configuration the Group Separator character (GS) is used in place of RS.

STEP 1. The user presses the Special Function key, which he has previously programmed in a remote computer routine to both automatically display the form shown and turn on FORMAT MODE. (REMOTE and BLOCK MODE are depressed.)

STEP 2. All areas of the display have been programmed to be protected except for the dark fields within the form itself. Thus, as data is typed at the keyboard only these dark areas can be written into. The cursor automatically will tab from one field to the next when a field boundary is encountered or by use of the key. The user now inputs data from the keyboard.

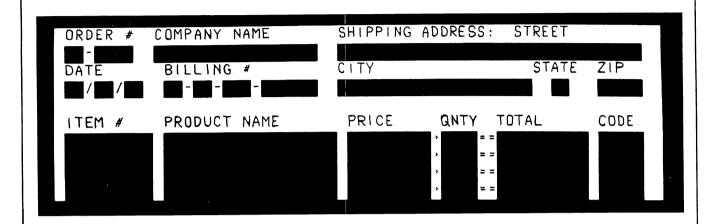

The complete form would look as follows:

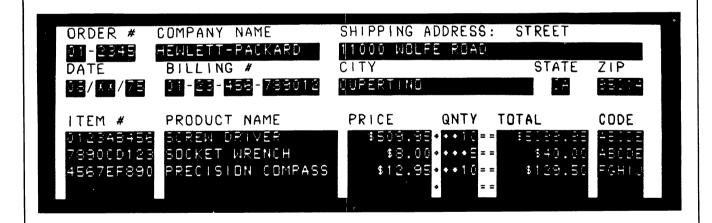

**STEP 3.** After filling out the form and correcting any noticed errors, the key is pressed once. The following sequence of events would then occurs:

- Having received a DC1 from the computer, the terminal transmits a DC2.
- Computer software recognizes the DC2 and responds with a second DC1.
- The terminal receives the DC1 and transmits all data as one Block, fields separated by US's and the Block terminated by an RS.

STEP 4. The form full of data has been transmitted to the computer. The user could then Home the cursor, hit to clear only the data from the form in FORMAT MODE, and enter a second set of data inputs — repeating the sequence and reusing the form.

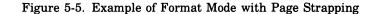


Table 5-8. Keyboard Interface PCA Strapping Options for Point-to-Point

STRAP	STRAPPING OPTION	NORMAL OPERATION (SWITCH CLOSED)	OPERATION WITH STRAPPING OPTION (SWITCH OPEN)
A	Function Key Transmission	The escape code sequence generated by the major function keys (such as, ROLL UP, ROLL DOWN, etc.) are executed locally, but not transmitted to the computer.	The escape code sequences generated by all keys are transmitted to the computer. If operating in half duplex, the function is also executed locally.
В	Space Overwrite (SPOW) Latch Enable	Spaces typed will overwrite existing characters.	When the SPOW latch is off, overwriting occurs as normal. When the SPOW latch is on, spaces cause the cursor to move forward but not overwrite any existing characters. The SPOW latch is turned on by a Carriage Return, and off by a Line Feed, Home or Tab.
С	Cursor End-of-Line Wraparound	At the end of each line, a local Carriage Return and Line Feed are generated; the cursor moves to the beginning of the next line.	A Carriage Return and Line Feed are not generated at the end of each line. The cursor remains in and overwrites column 80.
D	Line/Page	The terminal is set to transfer a line at a time in Block Mode.	Entire pages of information are transferred in Block Mode.
E	Paper Tape Mode	When the key is pressed with who key latched down, each tape record begins with an he and is terminated by by a fa.	Each tape record is terminated by %+.
F	Fast Binary Read	The transmission rate is determined by the BAUD RATE switch on the keyboard.	When an te (Fast Binary Read) is issued by the computer, the baud rate is switched automatically to 9600 baud (if the terminal is equipped with cartridge tape units).
G	Block Transfer Handshake	In Block Mode, all data transfers to the computer are sent upon receipt of a DC1 from the computer.	All Block Mode transfers (i.e., cursor sense, terminal and device status, device I/O responses, display memory, and function keys) are preceded by a DC2. The terminal sends the DC2 upon receipt of a DC1 from the computer. After the CPU receives the DC2 from the terminal, another DC1 is required to trigger transmission of data from the terminal.
Н	Inhibit DC2	During Block Mode Handshake transfers, the terminal sends a DC2 in response to a DC1 prior to sending data. (See Block Transfer Handshake strapping above.)	A DC1 from the computer is not required to trigger data transfers to the computer. Also, the DC2 from the terminal is not sent during Block Mode Transfer handshakes. (See Block Transfer Handshake strapping above.) Additionally, when the the transfer key is pressed in Block Mode the cursor will be placed in the first column before transmission occurs if operating in Line/Field Mode (switch D closed) or Home'd if operating in Page Mode (switch D open.) Opening both switches G and H eliminate the terminal's use of the Handshake protocol entirely.
J	Auto Terminate	No effect.	When in BLOCK mode and the ENTER key is pressed, places a non-displaying terminator before the cursor position.
K	Clear Terminator	No effect	Clear terminator caused by Strapping Option J or €—.
L	key or issuing to zo message. TAPE TEST		Self Test function is inhibited. Pressing TEST key or issuing to z displays the NO TEST message. TAPE TEST and DATA COMM SELF TEST functions are not affected.
М	INSERT and DELETE CHAR with wrap (Reverse Sense)	No effect.	Reverses effect of key on INSERT CHAR and DELETE CHAR keys (i.e., when key is pressed, line wrap around is in effect without having to press CNTL key. When either key is pressed while pressing CNTL, normal insert character and delete character functions are in effect.)

Table 5-8. Keyboard Interface PCA Strapping Options for Point-to-Point (Continued)

STRAP	STRAPPING OPTION	NORMAL OPERATION (SWITCH CLOSED)	OPERATION WITH STRAPPING OPTION (SWITCH OPEN)
N	Escape Code Transfer to Printer	No effect.	Escape codes relating to the display (e.g., display enhancements, alternate character sets, formal mode, fields, etc.) are sent to printer if it is selected as a destination device.
P,Q	Compatibility Mode	These switches set the terminal to be compatible (power on or full reset).	with Tektronix control commands when initialized
		P-closed, Q-closed	Normal operation
		P-closed, Q-open	Unscaled Compatibility Mode and 2048 byte dat comm buffer.
		P-open, Q-closed	Scaled Compatibility Mode and 2048 byte dat comm buffer.
		P-open, Q-open	2048 byte data comm buffer.
R	Circuit Assurance	The transition from receive state to transmit state occurs after both CB (106) (Clear to Send) and SB (122) (Secondary Receive Data) go on within 2.6 seconds. Otherwise, the terminal returns to the receive state.	The transition from receive state to transmit state occurs after CB (106) (Clear to Send) goes of
S,T	Main Channel Protocol	Reverse Channel protocol (both switches closed).	S-closed, T-open: Main channel with STX/ET as Start of Data and End of Data.
			S-open, T-closed: Main channel with EOT and of Data.
			S-open, T-open: Main channel with ETX as Er of Data.
U	CPU Break	The CPU can interrupt the terminal while it is in the transmit state. The CPU initiates an ON to OFF transition of the SB(122) (Secondary Receive Data) line. The terminal responds by turning off CA (106) (Request to Send) and going to the receive state.	The terminal ingores all transitions on the S (122) (Secondary Receive Data) line from the modem in the transmit state.
V	Carrier Detect	When the terminal is in the receive state, an ON to OFF transition of CF (109) (Carrier Detect) line from the modem causes the terminal to go into the transmit state. Transitions of CF have no effect while the terminal is in the transmit state.	Transitions of CF (109) (Carrier Detect) line have no effect on the terminal.
w	Data Comm Self Test Enable	Enables DATA COMM SELF TEST from either the keyboard or escape sequence.	Disables DATA COMM SELF TEST. If self test attempted (by either the keyboard or esca sequence), the test will be aborted and ERROF will appear on the display.
х	Data Speed Select	Holds data speed signal low (CH (111) = 0).	Sets data speed signal high (CH (111) = 1).
Y	Transmit LED	The TRANSMIT light on the keyboard is turned on when CB (106) (Clear to Send) line from the modem is high. It is turned off when the CB (106) line goes low.	The TRANSMIT light on the keyboard is turn on when the CC (107) (Data Set Ready) line for the modem is high and the 13260B Extend Asynchronous Communications Interface PCA used. It is turned off when the CC line goes to
Z	Parity	The PARITY switch on the terminal keyboard is aff	fected as follows:
		No Parity: Send 8 bits and receive 8 bits. Force bit 8 to zero. Check for parity error.	No Parity: Send 8 bits and receive 8 bits. For bit 8 to one on send. No check for parity err
		Odd Parity: Send 7 data bits + odd parity.  Receive 7 data bits + odd parity. Check for parity error.	Odd Parity: Send 7 bits + odd parity. Rece 7 bits. No check for parity error.
		Even Parity: Send 7 data bits + even parity. Receive 7 data bits + even parity. Check for parity error.	Even Parity: Send 7 data bits + even par Receive 7 data bits. No check for parity en

MAIN CHANNEL (CHARACTER CONTROL) PROTOCOL. The Main Channel protocol is for use in half-duplex or Bell 202 modem equivalent networks where secondary channel signals are not available. The Main Channel protocol uses control characters to "frame" each data transmission. These framing characters indicate to the receiving station that a data transmission has begun or ended.

An ASCII STX (octal 002) character can be used to indicate the start of a data transmission. An ASCII ETX (octal 003) or EOT (octal 004) character is used to indicate the end of a data transmission. When these characters are received they are used to perform a line turn-around.

The following switch settings should be made on the Keyboard Interface PCA to operate using the Main Channel protocol:

SWITCH	SETTING	DESCRIPTION
R	Open	
S,T	Closed,Open Open,Closed Open,Open	<stx>data<etx> data<eot> data<etx></etx></eot></etx></stx>

Note that at least one of the S or T switches must be open to select Main Channel protocol.

#### Example:

U,V,W,X,Y,Z

All Open — Variations of the Main Channel Protocol are discussed under Other Protocols and in Appendix C.

The operation of the Main Channel protocol is shown in figure 5-6. Sample data transfers are shown in figure 5-7. Figures 5-7a and 5-7b illustrate the line turn-arounds that occur during a log-on sequence when in character mode. Figures 5-7c and 5-7d illustrate the transfers that occur during block mode operation.

REVERSE CHANNEL (SIGNAL LINE CONTROL) PROTOCOL. The Reverse Channel protocol is for use in half-duplex or Bell 202 modem equivalent networks where secondary channel signals are available. The Reverse Channel protocol uses changes on secondary channel lines SA (CCITT 120) and SB (CCITT 122) to control line turn-arounds.

The following settings should be made on the Keyboard Interface PCA to operate using the Reverse Channel protocol:

SWITCH	SETTING	DESCRIPTION
R	Closed	Monitor the CB line
S,T	Closed,Closed	Reverse Channel (no framing characters)
U	Closed	Watch for computer interrupts (SB>0)
V	Closed	Watch for Carrier (CF) transitions

#### Example:

W,X,Y,Z

All Open — Variations of the Reverse Channel protocol are discussed under Other Protocols and in Appendix C.

The operation of the Reverse Channel protocol is shown in figure 5-8. Sample data transfers are shown in figure 5-9.

OTHER PROTOCOLS. In addition to the Main and Reverse Channel protocols you can select various features of both to configure a custom protocol to suit your own requirements. A flowchart of the overall Basic Communications function including the Half-Duplex settings is given in Appendix C. You can create a custom protocol using this flowchart and the switch descriptions in table 5-8. When more than one terminal must share a modem or hardwired communication line, the Multipoint protocol must be used. Refer to the description of Block Protocols.

#### Monitor Mode

Monitor Mode is an added feature available with the 13260A and 13260B interfaces. Refer to Multipoint Monitor Mode for a description.

#### Configuration

A procedure for configuring the terminal for point-to-point operation is given in figure 5-10.

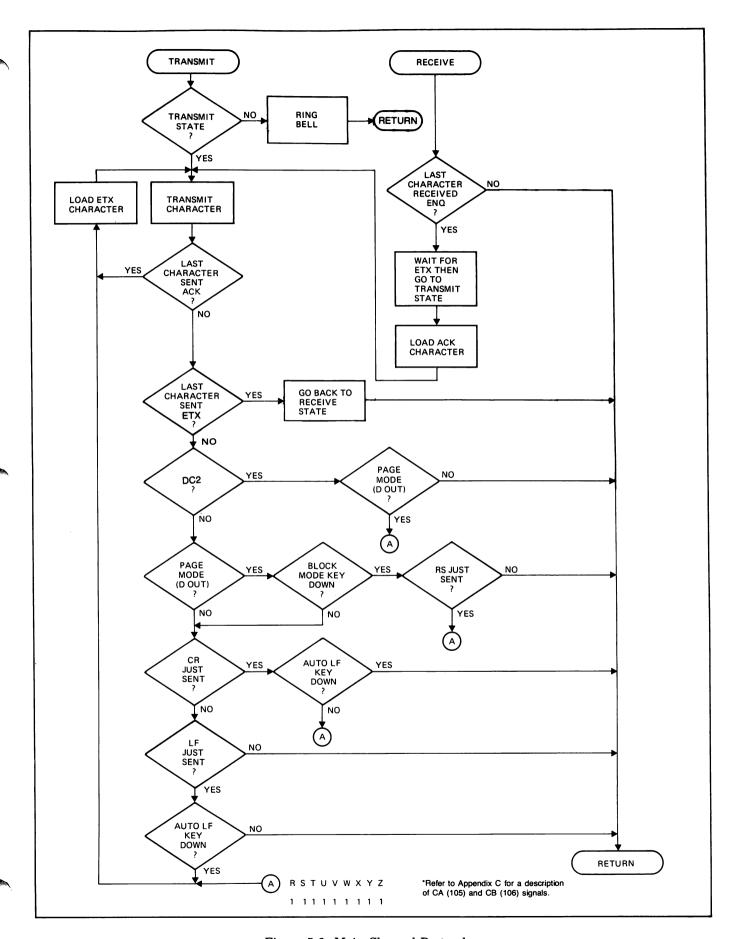


Figure 5-6. Main Channel Protocol

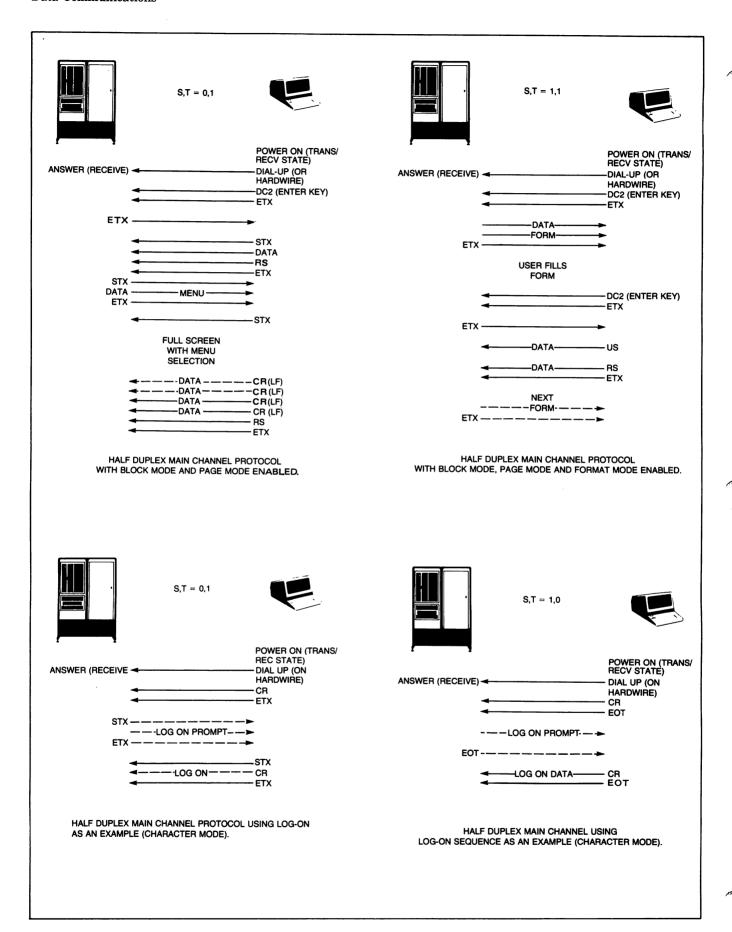


Figure 5-7. Sample Data Transfers Using Main Channel Protocol

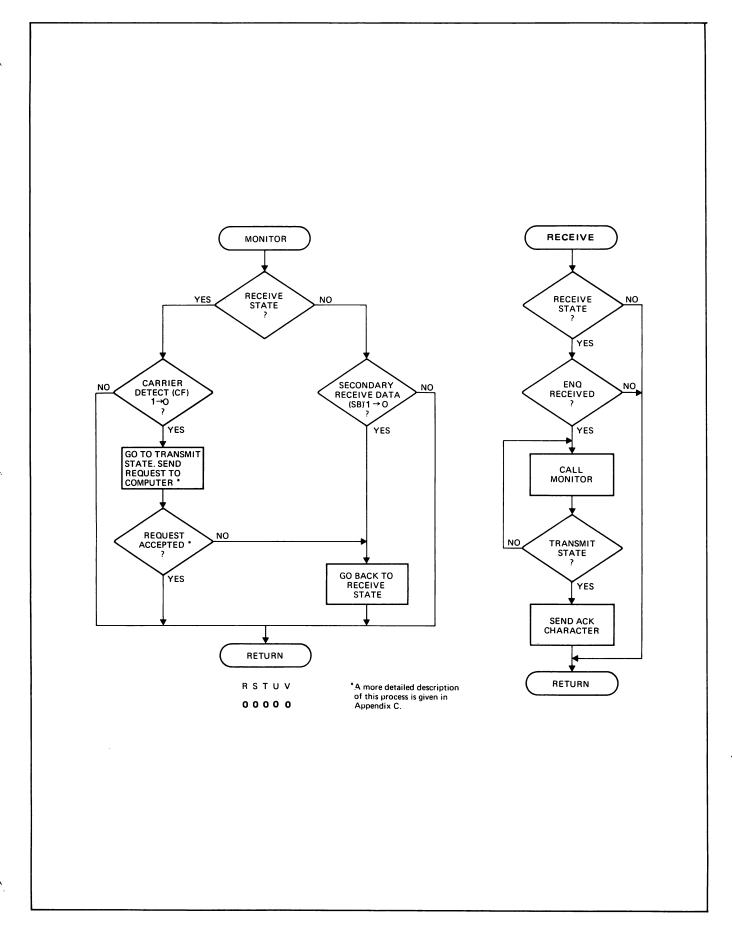


Figure 5-8. Reverse Channel Protocol

## CHARACTER MODE HALF-DUPLEX REVERSE CHANNEL POWER ON (TRANS/RECV STATE) POWER ON (TRANS/RECV STATE) ANSWER (RECEIVE) DIAL UP (OR HARDWIRE) (CA HIGH, SA LOW) CA LOW, SA HIGH DROP SA, WAIT FOR -► TERMINAL SEES SB DROP AND - DROPS CA, RAISES SA GOES TO CF TO DROP RECEIVE STATE CF DROPS, RAISE CA. AND WAIT FOR CB (SB) - PROMPT (:) -AND SEND DATA DROP CA, RAISE SA - - -TERMINAL SEES OF DROP AND RAISES CA, DROPS SA AND GOES TO TRANSMIT STATE WHEN CB (SB) TURNS ON. DROP SA, WAIT FOR -CR CF TO DROP -TERMINAL SEES SB DROP AND DROPS CA. RAISES SA AND GOES - TO THE RECEIVE STATE CF DROPS, RAISE CA AND WAIT FOR CB (SB) AND SEND DATA -LOG ON MESSAGE-DROP CA, RAISE SA - - - - - TERMINAL SEES CF DROP AND RAISES CA, DROPS SA AND GOES TO TRANSMIT STATE WHEN CB (SB) TURNS ON. DROP SA, WAIT FOR CF TO DROP TERMINAL SEES SB DROP AND DROPS CA, RAISES SA AND GOES TO THE RECEIVE STATE CF DROPS, RAISE CA AND WAIT FOR CB (SB) 4 USER HITS BREAK KEY AND SEND DATA SA DROPS FOR 200 MS BA SPACES FOR 200 MS CPU SEES SB DROP AND STOPS TRANSMISSION DROPS CA, RAISES SA — → CONTROL LINES → DATA LINES

Figure 5-9. Sample Data Transfers Using Reverse Channel Protocol

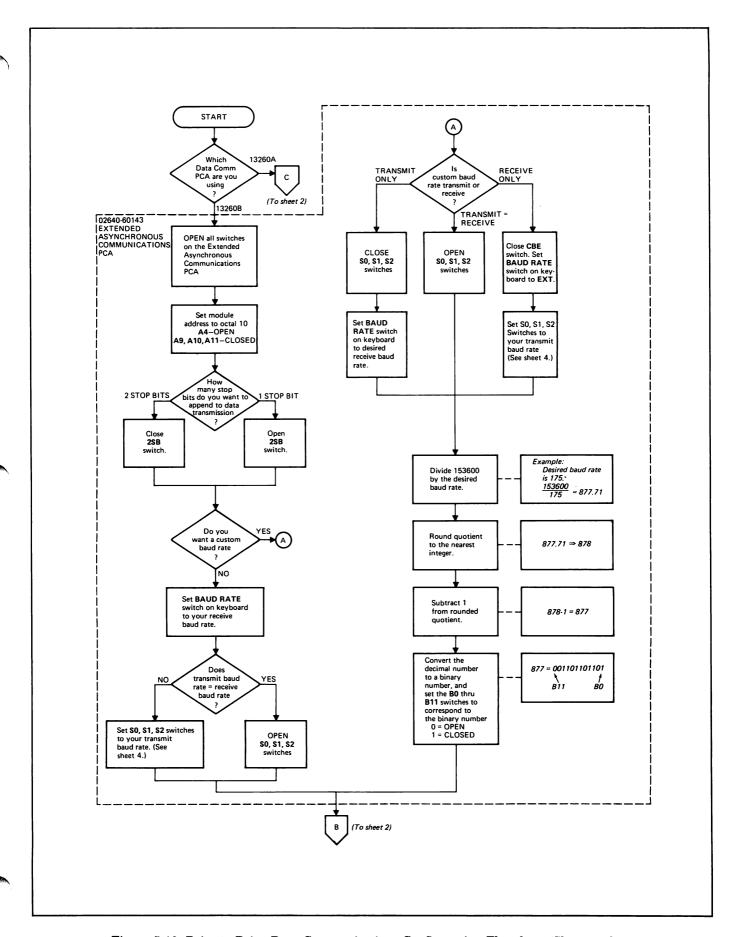


Figure 5-10. Point-to-Point Data Communications Configuration Flowchart (Sheet 1 of 4)

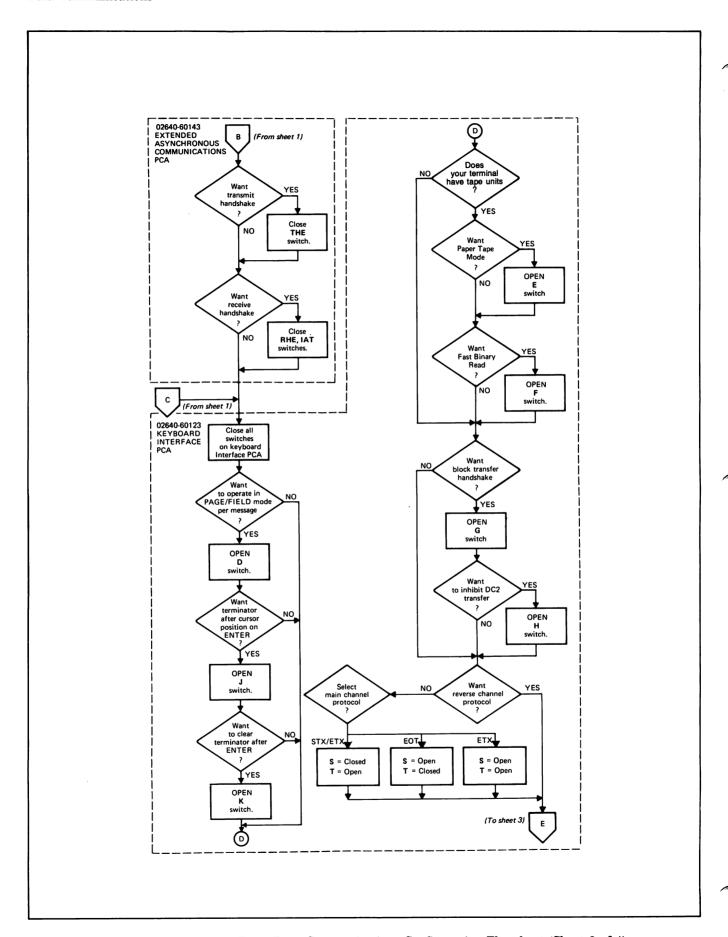


Figure 5-10. Point-to-Point Data Communications Configuration Flowchart (Sheet 2 of 4)

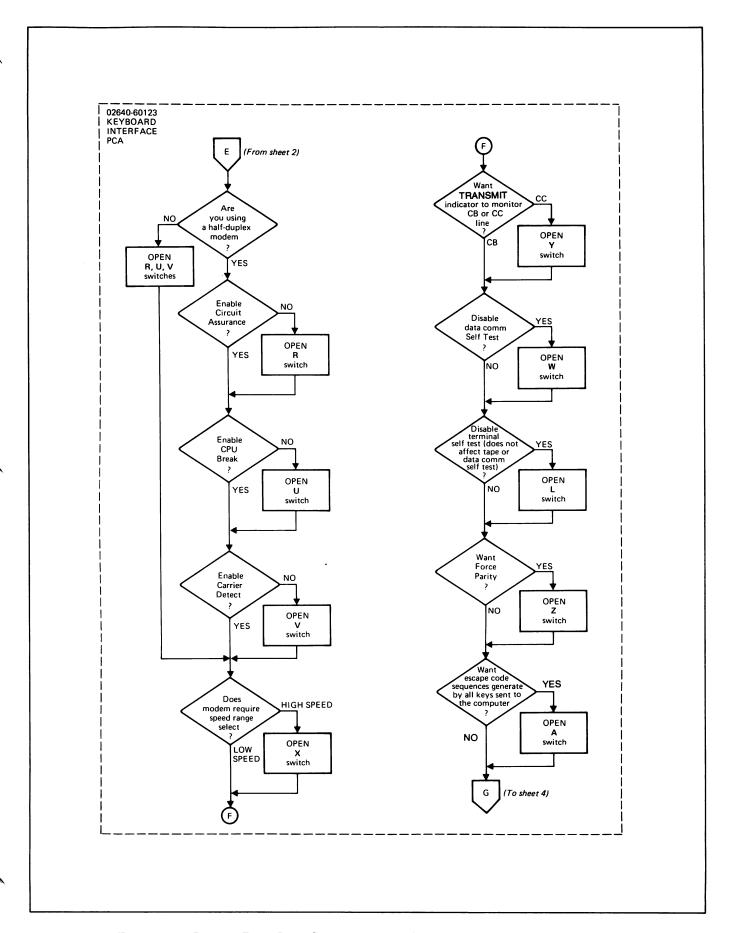


Figure 5-10. Point-to-Point Data Communications Configuration Flowchart (Sheet 3 of 4)

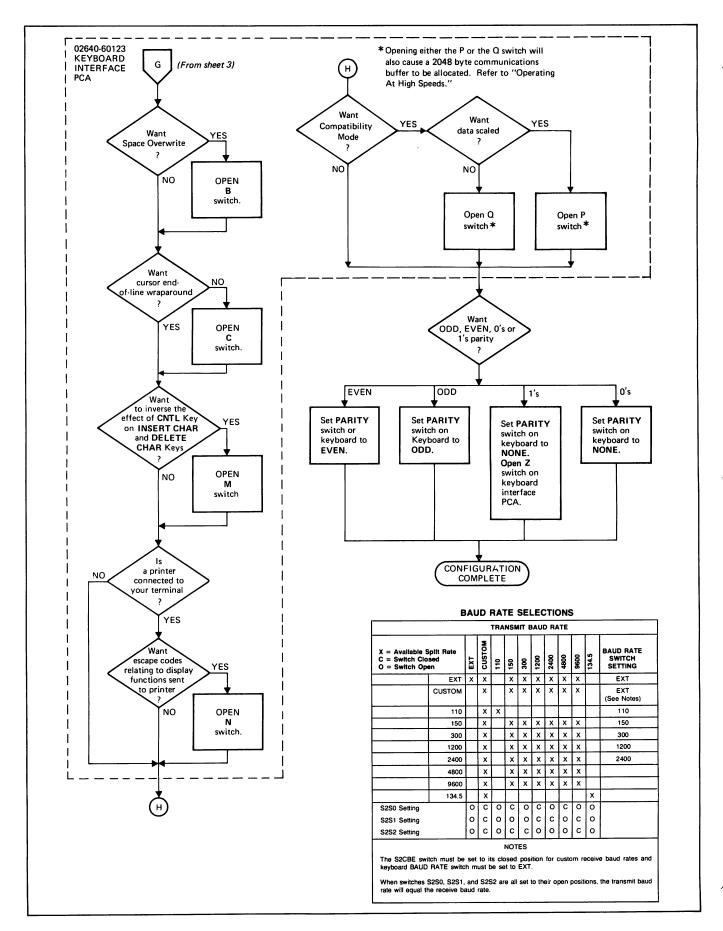


Figure 5-10. Point-to-Point Data Communications Configuration Flowchart (Sheet 4 of 4)

# BLOCK PROTOCOLS WITH 13260C OR 13260D COMMUNICATIONS ACCESSORY

Block protocols transfer data in blocks. The blocks are made up of three parts:

- Block framing characters
- Text (1 to n characters, where n depends on terminal configuration).
- Block check character(s)

This data format is always present in block protocols. In addition, block protocols use special character sequences to control all data transfers.

A block check character is included at the end of each data block. If a data error is detected the protocol will normally automatically attempt a retransmission of the block.

#### **Character Mode Transfers**

Character mode transfers are not permitted with block protocols. All data transfers are implemented using a block data structure.

#### **Multi Character Transfers**

When the terminal makes a multi character response of fixed length to the computer (status etc.), the data sent will be in the form of a block with framing characters and one or two block check characters.

#### Message Blocks

A message consists of one or more blocks of text data. The use of blocks enables the terminal to efficiently buffer data, respond to transmission errors and guarantee data integrity. Maximum block size is strap selectable and permits you to use the size best suited to computer requirements. (Refer to Buffer Size.)

#### **Block Operation**

The block protocol is designed to operate using either synchronous or asynchronous communications. Data transmission is done in multiple character blocks. The block size used is limited by the terminal's communications buffer (refer to Configuration).

The input buffer size limits the size of the data block that can be sent to the terminal. For example, if the input buffer size is 500 bytes, sending a block of data larger than 500 bytes will result in a loss of data. If this happens an EOT character will be sent to the computer.

Two forms of text blocks are shown in figure 5-11. The first is a block received from a computer. Note that no ID characters are used since the terminal or terminals to receive the data have already been identified by a select sequence. The second block is one sent from a terminal. In multipoint configurations, since more than one terminal may have been polled, the first text block sent from each terminal must have the terminal ID included. The ID characters are not repeated (as in poll and select sequences) since they are included in the block check character.

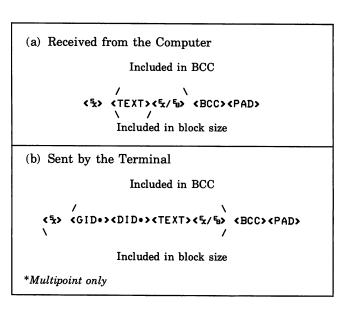


Figure 5-11. Examples of Block Transmission

TEXT TERMINATION. When the terminal is receiving text (Text-In mode) it will accept only ETB (octal 27), ETX (octal 3), or ENQ (octal 5) as a text block terminator. An ETB indicates the end of a block with one or more blocks to follow. An ETX indicates the end of the current block and the end of the text transfer. An ENQ character indicates that the current block has been aborted. The terminal will respond to the ENQ with an NAK to request the retransmission of the aborted text block. When the terminal is sending data (Text-Out mode), it will terminate text blocks with either an ETB or an ETX character.

All characters sent or received between the STX character and the terminating character must not be more than 40 milliseconds apart for asynchronous operation (13260C). Synchronous operation requires SYN characters to be sent as fill characters if no text characters are ready for transmission.

The terminal may send a STX ENQ as a Temporary Text Delay (TTD) notification. This indicates that there is more text to come but that it is not ready to be transmitted (i.e., it is still being read from a cartridge tape). A TTD should be answered with a NAK to request the transmission of the text block, or an EOT to reset the terminal to control mode.

DATA CHECKING. There are two types of data checking used with the multipoint protocol. The first is a check of each character as it is received and is called a vertical redundancy check (VRC). This check is only used for ASCII coded characters. The second is a check of an entire block of data and is called a block check. Two types of block check are available. The first is a longitudinal redundancy check (LRC). You can also choose a more complex block check called a cyclic redundancy check (CRC).

Character Checking. The vertical redundancy check is also known as a parity check. When an ASCII character is transmitted by the computer or the terminal, the high order (eighth bit of each character is set to a "1" or a "0" to make the number of "1" bits in the character either even (EVEN parity) or odd (ODD parity). The parity must be the same for both the computer and the terminal. For example, if even parity is used the high order bit of each character would be set to cause the number of "1" bits in the character to be even.

Character checking is not done when EBCDIC code is used or when operating in transparency mode. The parities available are listed in table 5-9.

Table 5-9. Parities Available with ASCII Data

ODD PARITY	Input characters are checked for odd parity. Output characters are supplied with odd parity.
EVEN PARITY	Input characters are checked for even parity. Output characters are supplied with even parity.
NONE PARITY	Input characters are checked for a "0" parity bit. Output characters are supplied with a "0" bit for parity.

Block Checking. Each block includes a block check character (BCC). The BCC character(s) is in addition to the parity bit set for each character transmitted. This BCC can be a one (LRC) or a two (CRC16) character check sum. The type of BCC and parity desired can be set to match almost any communications requirements.

LRC. The LRC check character is a 7 bit check sum obtained by exclusive "OR"ing the low order 7 bits of each character included in the text block. A parity bit (VRC) is then added to this character when it is transmitted. For EBCDIC, all 8 bits are "OR'ed" together and no parity bit is added.

CRC16. The CRC16 check is a 16 bit (two character) check sum calculated using the following formula:

$$X^{16} + X^{15} + X^2 = 1$$

This is compatible with the CRC16 check sum used by IBM

STRAP SELECTABLE OPTIONS. The following options are strap selectable on the interfaces used by the block protocols:

- Code Selection (ASCII/EBCDIC)
- Block Check Character (LRC/CRC16)
- Data Comm Buffer Size
- Space Compression
- Transparent Transmission
- Synch Characters

Code Selection (ASCII/EBCDIC). The terminal can be set to use either ASCII or EBCDIC data codes. All data and most control characters translate directly from one code to the other (map to the same graphic). A list of the characters and their codes is given in Appendix C. Control characters that do not translate directly between the two codes are:

	ASCII			
	graphic	octal		
ACK0 ACK1	ዒ o ዒ 1	020 060 020 061		
WACK RVI	ዒ ; ዒ <b>‹</b>	020 073 020 074		
	EBCDIC			
	graphic octal			
ACK0 ACK1	૧ (no graphic equivalent) ૧	020 160 020 141		
WACK RVI	ዒ , ዒ @	020 153 020 174		
	IC characters that have no equivalent e converted to a "?" character.	ASCII charac-		

All terminals on the same communication line must use the same code type.

The J07 switch is used to select the code to be used to represent data. The codes available are as follows:

Jo	)7			
0	(closed) (open)	ASCII EBCDIC		

Block Check Character (BCC). The Block Check Character is used to verify the accuracy of transmitted data. Switch J06 allows you to select the type of test used. The terminal will then automatically perform the proper test and generate the same type of check character sent to the computer. The types of check character available are as follows:

```
J06

0 (closed) = Longitudinal redundancy check (LRC)
1 (open) = Cyclic Redundancy Check (CRC 16)
```

**EXTENDED TEXT FEATURE.** The Extended Test Feature is selected by setting the J05 switch on the multipoint interface to the 1 (open) position.

```
J05
1 (open) = Extended features
0 (closed) = No effect
```

The Extended Text feature can be used to generate and delete three special characters used with an IBM 3270 terminal. After the computer has selected the terminal to receive data, the first text block will have the following form:

```
3 leading characters
/ \
첫 등 1 WCC TEXT 첫
```

Note that the characters follow STX and precede the text block. Since these characters are not used by the terminal, they would normally be accepted as a part of the text block. Selecting the Extended Text feature will cause the terminal to discard these three characters before processing the text.

When the first block of text is sent to the computer in response to a POLL sequence, the computer expects to see the following:

```
₹ GID DID AID CCA CCA TEXT ₹ / / / 3 leading characters
```

The leading characters that are sent by the terminal are as follows:

AID — attention I.D. This character will normally be an apostrophe (') 47 octal ('047'). If you use the PA or PF functions refer to their descriptions elsewhere in this section.

CCA — Current Cursor Address. This is a two character address and will always be SP,SP ('040 040'). This is the cursor home position (0,0).

Note that if you have configured the terminal for text mode compatibility and are not operating with such a system, the first three characters in the first text block received by the terminal will be ignored. Also, the three leading characters (AID, CCA, CCA) will be embedded in the transmitted text block.

Buffer Size. You must set the amount of terminal memory allocated for use as input and output communication buffers. When the terminal is inputting data it uses this space for a single input buffer. When the terminal is outputting data the buffer space is divided into two or more output buffers. The basic terminal configuration uses a 500 byte input buffer or two 250 byte output buffers.

When the terminal is selected, any data waiting in the output buffers is lost. The output buffers then become an input buffer to hold data sent from the computer until the terminal can process the characters.

The terminal will respond to select sequences with a WACK when there are fewer than 250 bytes available in the input buffer. The terminal will respond with an ACK as soon as 250 bytes of buffer space becomes available. Note that if too large a block is sent to the terminal following the ACK it may result in a buffer overflow and an EOT will be returned.

It is often desirable to increase the size of the communication buffers to optimize use of the computer. The size of the terminal's input buffer can be set on the communication interface. The input buffer size can range from 500 to 4000 bytes.

Memory is allocated from the terminal's display memory so that the larger the buffer size, the smaller the amount available to display memory.

Input buffer size is set by switches J17 and J16 as follows:

```
Input Buffer
   J17
          J16
                   500 bytes
    0
           0
    0
           1
                  1000 bytes
    1
           0
                  2000 bytes
                  4000 bytes
    1
           1
where 1 = open
      0 = closed
```

Output buffer size can range from 250 to 2000 bytes. Output buffer sizes are limited to a maximum of one half the input buffer size. Output buffer sizes are set with switches T and U on the Keyboard Interface as follows:

```
\mathbf{T}
        U
        0
             2 buffers, each one half the size of the input buffer
   0
             (2000 max)
   1
        0
              250 bytes
              500 bytes
        1
            1000 bytes
   1
       1
where 1 = open
       0 = closed
```

#### **Data Communications**

Note that if the output buffer is inadvertently set larger than one half of the input buffer size the terminal will default to the 0,0 setting of the T and U switches.

Between 4 and 10 additional header and framing characters will be added to the output buffers depending on other configuration operations selected. Note that if the output buffer is inadvertantly set larger than one half of the input buffer size the terminal will default to the 0,0 setting of the T and U switches.

**Space Compression.** The terminal can be configured to compress multiple space characters within a text block into a single space.

This can reduce the time needed to transmit a given block of data.

Example:

#### **Initial Text**

AJAX Corp. 110 N. Sea Road New York, NY 11011

Uncompressed (59 bytes)  $\Delta = \text{space}$ 

ΔΔΑJΑΧΔΔ CorpΔΔΔΔΔΔ 110ΔΝ.Δ SeaΔ RoadΔΔΔ ΔΔNewΔYork,ΔΝΥΔΔΔΔ11011

Compressed (45 bytes)  $\Delta = \text{space}$ 

 ΔΑJΑΧΔ Corp<br/>Δ110 Δ Ν.ΔSea Δ Road Δ New Δ York, Δ NYΔ 11011

Space Compression is selected by opening the S switch on the Keyboard Interface PCA.

S
0 (closed) = No effect
1 (open) = Space Compression

**Synch Characters.** In asynchronous configurations Opening Switch V on the Keyboard Interface PCA causes SYN characters to be inserted at the beginning of each transmission and at 1 second intervals until the end of the

transmission. This allows the use of a single generalized data communication driver for both synchronous and asynchronous operation.

TRANSPARENCY MODE (BINARY OPERATION). Transparency mode allows you to send and receive 8 bit binary data. This allows the sending of data bit patterns that might otherwise be interpreted as control characters.

This mode is controlled with the following character sequences:

DLE STX Starts transparency.

DLE ETX Ends transparency.

DLE ETB

DLE DLE Allows one DLE character to be sent. Note that this will vary with the parity used.

DLE SYN Allows one SYN character to be sent (for synchronous operation). Not included in

text or BCC.

DLE ENQ Aborts current transmission. A BCC character is not expected.

Once in transparency mode, in order to send control characters and have them interpreted as control characters rather than binary data, the control character must be preceded with a single DLE character. Single DLE characters are seen as the beginning of control sequences rather than data. The first DLE character of the above sequences is never included in the block check.

#### Example:

The terminal will always accept transparent data. Escape sequences can be used to cause the terminal to send transparent data. The Z strap can also be used to cause the terminal to send transparent data at all times.

Note that whenever control character sequences are used in transparent mode they must have proper parity or they will not be interpreted as control characters. Figure 5-12 illustrates the operation of the various control characters used in the block protocol.

# **Block Protocol Control Sequences**

Block protocols require specific control sequences to acknowledge text block transfers, terminate text transfers or to inform the sender or receiver of status changes. These sequences consist of one or more data link control characters. A list of these control characters are given in table 5-10. A summary of the uses of these characters is given in table 5-11.

**KEYBOARD INTERFACE STRAPS.** The Keyboard Interface straps permit you to select various communication features. A list of the selectable features is given in table 5-12.

**KEYBOARD DATA COMM SWITCHES.** The keyboard data comm switches are shown in figure 5-13.

Table 5-10. Block Protocol Control Characters

CONTROL CHARACTER	ASCII CODE (OCTAL)	DESCRIPTION			
Data link control ch text blocks. They a	aracters. These chare also used to co	paracters are used to frame messages and acknowledgements for both transmitted and received control all communications in an orderly fashion.			
DLE	020	Data Link Escape. This is the first character in two byte control characters. It is used to indicate that the second character is to be interpreted as a control rather than a data character. The DLE character has no meaning when used alone.			
ACK0 (DLE 0)	020 060	Acknowledge 0. These control characters are sent by the terminal after being select tell the computer that the terminal is ready to accept a text block. They are also sent to receiving station (computer or terminal) after even text blocks (2, 4, etc.) to tell the se station (terminal or computer) that the block was received properly (see ACK 1) alternating ACK0/ACK1 sequence is initialized to ACK0 following a select sequence ACK1 after a poll sequence.			
ACK1 (DLE 1)	020 061	Acknowledge 1. These control characters are sent by the receiving station (computer or terminal) after odd text blocks (1, 3, 5, etc.) to tell the sending station (terminal or computer that the block was received properly (see ACK 0).			
WACK (DLE ;)	020 073	Wait Before Transmit. These characters are sent by the receiving station to indicate that the last block was properly received but that the receiving station requests that the sende wait before sending the next block. The sending station should then send an ENQ. The receiving station will then return an ACK0/1 if it is ready to receive data or a WACK is order to continue waiting.			
NAK	025	Negative Acknowledge. This character is returned in response to a text block to indicate that the block was rejected because of a bad block check or because of improper framing characters. When received by the terminal after it has sent a text block, the terminal will retransmit the block.			
ENQ	005	Enquiry. This character is always used as to terminate a POLL or SELECT sequence. It is also used by the sending station to request a retransmission of the acknowledgement for the previous text block. When used as a block terminator, ENQ indicates that the compute has aborted the block (forward abort or TTD). The terminal will respond with a NAK to acknowledge the abort command.			
STX	002	Start of Text. This character must be the first character in every text block. It tells the receiving station to begin accumulating a block check character. The STX character is no included in the block check.			

Table 5-10. Block Protocol Control Characters (Continued)

CONTROL CHARACTER	ASCII CODE (OCTAL)	DESCRIPTION			
ЕТВ	027	End of Transmission Block. This character is used to tell the receiving station to stop accumulating a block check character and that the next character transmitted will be the block check character. When used the ETB character must always follow the last character in the text block. The ETB character is included in the block check character accumulation. (See the ETX character.)			
ETX	003	End of Text. This character must be the last character of the last (or only) text block in a message. It tells the receiving station to stop accumulating a block check character. The ETX character is included in the block check character. (See the ETB character.)			
EOT	004	The ETX character is included in the block check character. (See the ETB character End of Transmission. When this character is sent or received by the terminal, it causes the terminal to switch to Control Mode. It is sent by the terminal when it detects a data over flow condition while receiving text (buffer full), after sending the last text block of a message to the computer, or in response to a POLL sequence when it has no data to send. A EOT is sent by the computer following the last text block in a message to indicate the the computer has no more data to send or when the computer wants to abort the communication sequence.			
RVI (DLE <)	020 074	Reverse Interrupt. This character is sent by the computer to acknowledge that the last block was properly received (see ACK0 and ACK1) and at the same time to request that terminal stop sending as soon as possible. When this character is received by the term the terminal will immediately send an EOT to the computer. The terminal sends the sequence when in Text-In mode and the key is held down. This indicates that terminal properly received the last text block but requests the computer to stop sentext as soon as possible.			
TTD (STX ENQ)	002 005	Temporary Text Delay. This character is sent to inform the receiving station that the sender is temporarily out of text but that there is more to follow. The receiver must respond with a NAK for the sender to continue. This sequence will continue until the sender has more data to send. This sequence might be used in transferring data to and from the CTU's.			
Transmission contr	rol characters. These	characters are used to initialize, synchronize, and terminate data without affecting data integrity.			
SYN	026	Synchronous Idle. This character is used only in synchronous communications to establis and maintain character timing between sending and receiving stations. At the beginning of each transmission a minimum of three SYN characters are required. During transmission two pair of SYN characters are inserted at one second intervals.			
PAD	377	PAD. This character is used to ensure that the last character of every transmission has tin to be properly received before the receiving station begins transmitting. All transmission must be terminated with a trailing PAD. In addition a trailing PAD must always be use after an EOT when it is used in a POLL or SELECT sequence. (Note that accuracy of the PAD character cannot be guaranteed.) If the trailing PAD character is not used, the communications interface will wait 40 msec before continuing to allow all data to be properly received. This may significantly slow communications.			
DLE EOT	020 004	Disconnect. When this sequence is received by the terminal instead of a normal response or text block, the terminal will attempt to disconnect the modern attached to the communication line. This sequence is only used on switched lines.			

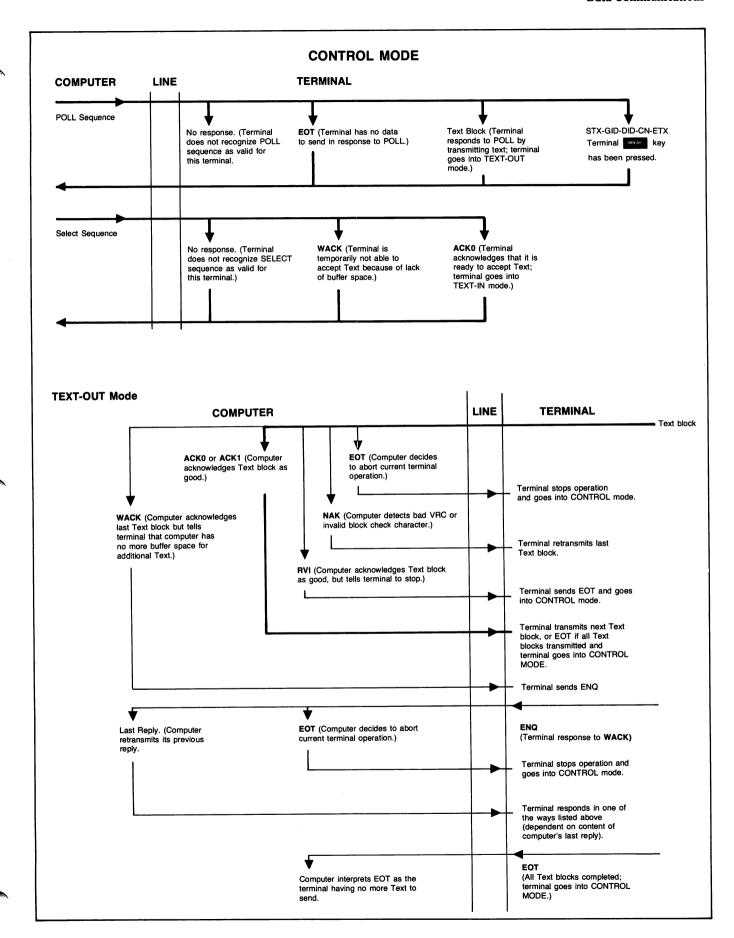


Figure 5-12. Operation of Block Protocol Control Characters (Sheet 1 of 2)

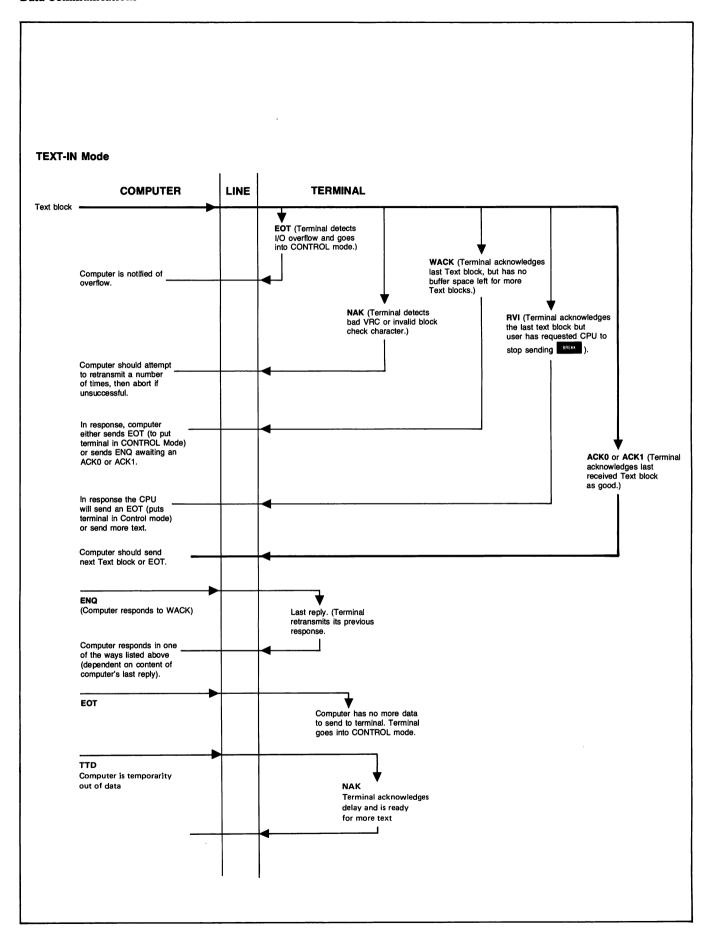


Figure 5-12. Operation of Block Protocol Control Characters (Sheet 2 of 2)

Table 5-11. Summary of Block Protocol Control Characters

	CONT	ROL	TEXT-IN		TEXT-OUT	
	POLL RESPONSE	SELECT RESPONSE	RECEIVED	TRANSMITTED	RECEIVED	TRANSMITTED
STX-"TEXT"-ETB-ETX	Positive response to POLL.		Sent by CPU as a response to an ACK received from terminal.			Sent by terminal as a response to an ACK received from CPU.
"EOT"	Negative response to POLL. Termi- nal has no TEXT to xmit.		CPU has no more TEXT to xmit to terminal.	Terminal has detected data overflow.	CPU has decided to abort terminal xmission.	Term has no more TEXT to send to CPU or has just received an "RVI".
"ENQ"			CPU requests ter- minal send last TEXT acknow- ledgement.	·		Term requests CPU retransmit last acknow- ledgement to TEXT.
"RVI"				Terminal acknow-ledges last text block and requests the CPU to stop sending (	CPU acknow- ledges last TEXT block & requests term send "EOT".	
"ACK0/ACK1"		Terminal tells CPU that it is ready to accept TEXT (ACK0).		Terminal tells CPU that last TEXT block was received OK.	CPU tells term that last TEXT that term sent was OK.	
"WACK"		Term is temporar- ily busy (term has no available buf- fers). Cannot ac- cept TEXT.	,	Term acknow- ledges last TEXT block received.OK but now term has no more buffers & cannot accept more TEXT.	CPU acknow- ledges last TEXT block sent by term but tell term to wait because CPU does not have any- more buffs.	
"NAK"				Term detected er- ror in last TEXT block CPU sent. Invalid VRC/BCC or frame chars.	CPU detected er- ror in last TEXT block term sent. Invalid VRC/BCC or frame chars.	
STX-GID-DID-CN-ETX	pressed. Any data that is waiting to be sent to the CPU is lost.					
STX-ENQ ("TTD")			CPU is temporarily out of data. The terminal must respond with a NAK.			Terminal is temporarily out of data.

Table 5-12: Keyboard Interface Straps for Block Operation Using 13260C or 13260D Communications Accessory

STRAP	STRAPPING OPTION	NORMAL OPERATION (SWITCH CLOSED)	OPERATION WITH STRAPPING OPTION (SWITCH OPEN)	
A	Function Key Transmission	The escape code sequence generated by the major function keys (such as, ROLL UP, ROLL DOWN, etc.) are executed locally, but not transmitted to the computer.	(Same as switch closed.)	
В	Space Overwrite (SPOW) Latch Enable	Spaces typed will overwrite existing characters.	When the SPOW latch is off, overwriting occurs as normal. When the SPOW latch is on, spaces cause the cursor to forward but not overwrite any existing characters. The SPOW latch is turned on by a Carriage Return, and turned off by a Line Feed, Home, or Tab.	
С	Cursor End-of-Line Wrap Around	At the end of each line, a local Carriage Return and Line Feed are generated; the cursor moves to the beginning of the next line.	A Carriage Return and Line Feed are not generated at the end of each line. The cursor remains in and overwrites column 80.	
D	Line/Page	The terminal is set to transfer a line at a time from display memory, an unprotected field in format mode, or a record from the tape cartridge.	Transfers the entire contents of display memory (a "page"), all unprotected fields in format mode, or a file from the tape cartridge.	
Ε	Paper Tape Mode	When the READ key is pressed with the AUTO LF down, each tape record begins with an LF if the AUTO LF key is down and is ended with a CR.	Each tape record is terminated by CR(LF).	
F	(Not Used)			
G	Block Transfer Handshake	No effect.	No effect.	
н	Inhibit DC2	No effect.	No effect.	
J	Auto Terminate	No effect.	When the ENTER key is pressed a non-displayir terminator is placed after cursor position.	
к	Clear Terminator	No effect.	Clear terminator caused by strapping option J above.	
L	Self Test Inhibit	No effect.	Self Test function is inhibited. Pressing TEST key or issuing ESC z has no effect. TAPE TEST and DATA COMM SELF TEST functions are not affected.	
М	Reverse Sense of INSERT and DELETE CHAR with Wrap.	No effect.	Reverses control function of INSERT CHAR and DELETE CHAR keys (i.e., when key is pressed, line wrap around is in effect without having to press CNTL key. When either key is pressed while pressing CNTL, normal insert character and delete character functions are in effect.)	
N	Escape Code Transfer To Printer	No effect.	Escape codes relating to the display (e.g., display enhancements, alternate character sets, format mode, fields, etc.) are sent to printer if it is selected as a destination device.	
P,Q	Compatibility Mode	These switches set the terminal to be compatible with (power on or full reset). Refer to Section III for additional P-closed, Q-closed Normal operation P-closed, Q-open Unscaled Compatibility Mode P-open, Q-closed Scaled Compatibility Mode P-open, Q-open Normal operation	Tektronix control commands when initialized all information on Compatibility Mode.	
R	Data Set Ready	No effect.	Provides an internal Data Set Ready (CC) signal to the terminal. (Used in applications with the HP 30037A Asynchronous Repeater, and the Group Poll feature.)	

Table 5-12. Keyboard Interface Straps for Block Operation Using 13260C or 13260D Communications Accessory (Continued)

STRAP	STRAPPING OPTION	NORMAL OPERATION (SWITCH CLOSED)	OPERATION WITH STRAPPING OPTION (SWITCH OPEN)
s	Space Compression	Space characters are sent normally.	Space characters are compressed.
T,U	Output Block Size	T U	BLOCK SIZE (BYTES)
		C C O C C O O O	1/2 Data Comm Buffer (refer to switches J16, J17 on multipoint PCA). 250 max 500 max 1000 max
		C = closed, O = open	
٧	Synch Characters	Asynchronous operation without SYN characters.	SYN characters are inserted during Asynchronous operation.
w	Data Comm Self Test	Enables DATA COMM SELF TEST from either the keyboard or escape sequence.	Disables DATA COMM SELF TEST. If self test is attempted (by either the keyboard or escape sequence), the test will be aborted and ERROR 0 will appear on the display.
χ	Data Speed Select	Holds data speed signal low (CH = off).	Sets data speed signal high (CH = on).
Y	Transmit Indicator	Lights TRANSMIT indicator on keyboard when terminal is communicating with the computer.	Lights TRANSMIT indicator on keyboard when Data Set Ready (CC) is on, and it goes out when CC goes off.
Z	Transparency	No effect.	Causes all data sent from the terminal to be transparent.

Parity Switch. This switch is used only with ASCII code and is ignored when EBCDIC code is used. The settings are as follows:

ODD = Odd parity required. EVEN = Even parity required.

NONE = "0"s required.

**Speed Switches.** Block protocols can be used at speeds from 300 to 9600 baud. Speed selections outside this range are ignored. Keyboard speed settings can only be made for asynchronous operation. Synchronous communications speeds are selected on the Synchronous Communications Interface or are supplied by the modem.

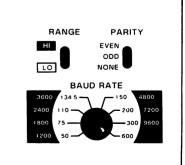


Figure 5-13. Block Keyboard Data Communication Switches

# **Multipoint Communications**

The terminal is capable of operating in a polled multipoint environment. This means that one or more terminals can share the same communication line. The terminal can be used in networks using asynchronous or synchronous communications. Operation is similar to IBM Bisynchronous communications. Multipoint operation requires the following:

- All communications follow a strict protocol.
- Each terminal must have an address that is unique within its communication line.
- Data is transmitted in blocks.
- All data transfers are initiated by the computer.
- All terminals on the same communication line must use the same code (ASCII/EBCDIC) and parity.

MULTIPOINT PROTOCOL. The terminal uses a multipoint protocol that is similar to IBM Bisync. The protocol is made up of sequences of one or two control characters. Table 5-10 contains a list of the control characters used along with a short description.

BREAK Key Operations. The key allows the user to tell the CPU or application program that he wants to abort the current operation. (Long text transfers from the CPU can be stopped by holding down .) When the terminal is in Text-In mode and the beak key is held down, an RVI (DLE <) is sent to the CPU instead of an ACKO or ACK1 after the current text block is received. The CPU software must then respond to the RVI in an appropriate manner.

If the terminal is in the Text-Out or Control mode and the key is pressed, the terminal will clear all data in the data comm output buffers (the data is lost) and then it will send %GID DID % % in response to the next poll from the CPU. The CPU software must then respond in an appropriate manner.

PA and PF Key Functions. Multipoint operation allows you to enter an escape sequence to select operation comparable to the CLEAR, PA, and PF keys on the IBM 3270 terminal. The escape sequence can be entered from the keyboard or a tape unit or datacomm. The PA and PF functions allow you to send a single character to the computer or preface the data with a special character. Then depending on how the computer is programmed, it can use this character to branch to various data handling routines.

The escape sequence is as follows:

where:

### is the octal code of the character to be transmitted. It can be made up of 0 to 3 octal digits. This character must have an octal code in the range 040 to 176. Note that the DELETE character (octal 177) cannot be used. If no character is defined, the default value returned will be an octal 047 (27 hex) if Extended Text Mode is selected.

The softkeys ( fi - fa ) can be loaded with the escape sequences. Refer to the description of "soft keys" elsewhere in this manual. Note that the soft keys are cleared by a full reset.

PA Operation. If the last character of the escape sequence is an A, it will cause the single character indicated by the octal code to be sent to the computer the next time the terminal is polled. This is done by creating a new text block in the output buffer.

f = g + 122A (Note: R = 122 octal) Example:

This would cause the following text block to be sent to the computer:

#### <\$><GID><DID><R><\$><BCC><PAD>

PF Operation. If the last character in the escape sequence is an F, it will cause the defined character together with the data currently displayed on the terminal screen to be sent to the computer the next time the terminal is polled.

f = g + 120F (Note: P = 120 octal) Example:

This would cause the following text block to be sent to the computer.

#### <\\\$> <GID> <DID> <P> <screen data> <\\\\$> <BCC> <PAD>

Note that if the screen data exceeded the terminal block size the transmission would use the normal multiblock format.

When in Extended Text mode the PF escape sequence will cause the character coded in the sequence to be sent as the AID character. (Refer to Extended Text Feature.)

F & G 120F (Note: P = 120 Octal) Example:

This would result in the following text block:

<%><GID><DID><P><CCA><CCA><screen text><%><BCC><PAD>

Typical Applications of the PA and PF Functions. Use of the PA and PF functions allow the computer to use a general poll to find out more than just which terminals have data ready to send. If the PA and PF functions are used the character returned from each terminal can be used to determine whether the terminal has data, no data, a large amount of data, or high priority data. For example the terminal's programmable function keys (f1—f8) can be programmed with the following sequences:

F1 = & g 110F (H = high priority, text follows)

F2 = £ & g 114A (L = one line of text ready)
F3 = £ & g 116A (N = no data ready)
F4 = £ & g 120A (P = full page of text is ready)

The computer can then respond by polling the individual terminals in a logical order after allocating the necessary resources required for each transfer.

TERMINAL ADDRESSES. Each terminal on a communications line must have an address that is unique on that line. (The same address can be used on a different line). An address is made up of a one character group ID

Table 5-13. Terminal Address Characters

	*GRO	COLUMN USED FO DEVICE UP ID FO TURN AL	R: ID R POLL		COLUMN USED FO P ID FOR	R:
GROUP OR DEVICE NUMBER	ASCII VO CHAR	ASCII HEX	ASCII OCTAL	ASCII I/O CHAR	ASCII HEX	ASCII OCTAL
0	@	40	100		60	140
/////////	X/// <b>A</b> //	41	101	a	61	141
	X/// <b>P</b> 4//.	42	102	ь	62	142
(	NII <b>V</b> II	43	103	С	63	143
	XIIIAII	44	104	d	64	144
	X///#//	45	105	е	65	145
	X/// <del>k</del> //,	46	106	f	66	146
////// <del>/</del> #///	X/// <b>\$</b> 4//	47	107	g	67	147
(	X// <del>//</del> //	48	110	h	68	150
(	X///¥//;	49	111	i	69	151
111116411	XIIIXII.	4A	112	j	6A	152
111111111111	XIIII.	4B	113	k	6B	153
(	X// <b>/</b> X//,	4C	114	1	6C	154
(	XIIM)	4D	115	m	6D	155
111114411.	XII <b>X</b> II	4E	116	n	6E	156
(((()	N/IØI.	4F	117	0	6F	157
(	N/IX	50	120	р	70	160
	XIIIAII	51	121	q	71	161
	X  \ <del>  </del>	52	122	r	72	162
	X    <b>\$</b>	53	123	s	73	163
20	T	54	124	t	74	164
21	U	55	125	u	75	165
22	V	56	126	V	76	166
23	w	57	127	w	77	167
24	X	58	130	×	78	170
25	Y	59	131	у	79	171
26	z	5A	132	z	7A	172
(	\\\\ <b>\\\\\\\</b>	<b>             </b>	//// <b>/</b> /###/////	KIIIHIII	//// <b>/</b> ##	

#### **EXAMPLES:**

POLL DEVICE 6 in GROUP 20

GROUP ADDR TO DEVICE ADDR FI

SELECT DEVICE 6 in GROUP 20

GROUP ADDR tt
DEVICE ADDR F

and a one character device ID. This address is set on the data comm interface during installation. The characters that can be used are @, A through Z, and SPACE. This allows for 28 groups of up to 28 terminals each.

The terminal ID characters are listed in table 5-13. The characters in column 1 are used for group and device IDs in polling sequences and for device IDs in select sequences. Characters in column 2 are used for group IDs in select sequences. The lower case group IDs let the terminal tell a poll sequence from a select sequence. Figure 5-14 gives an example of terminal address assignments.

The first 'group' shown in figure 5-14 contains three terminals. Two of the terminals have the same group ID character. Terminals with the same group ID can be controlled by group function commands sent from the computer. Group functions allow you to address all terminals having the same group ID simultaneously. In this way a single command can be used to send a message to up to 28 terminals. Similarly, all of the terminals in a group can be requested to send data to the computer. The terminals send data according to their position in the group, the terminal closest to the communication line being first.

Note that all terminals in the same group must be connected to the same modem.

Additional information on terminal addresses is given under Polling and Selection. Procedures for installing multipoint networks are given in Section VII, *Installation*.

Terminal I.D. Number. Each terminal in a multipoint network must be assigned a unique identification number. The identification number is made up of a Group I.D. number (GID) and a Device I.D. number (DID). The terminal I.D. number is set by switches on the data communications interface printed circuit assemblies (02640-60106 or 02640-60107).

**Device I.D. Number.** The Device I.D. number may be 0 to 27 and is set with switches J14 through J10. Each bit corresponds to a power of 2. If the number is set to a number greater than 27, the terminal will set the number to 27. For example, Device 6 would be set with the following switch configuration:

Group I.D. Number. The Group I.D. number may be 0 to 27 and is set with switches J04 through J00. Each bit corresponds to a power of 2. In order to use group functions, all terminals in a group must be "daisy chained" together (connected to the same modem if a modem is used).

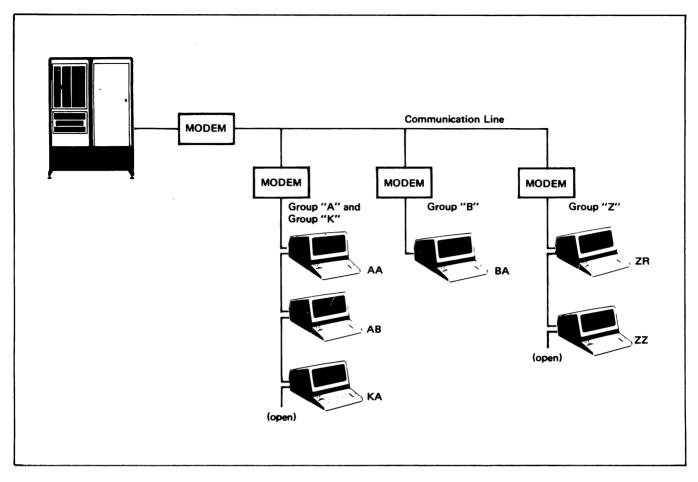


Figure 5-14. Terminal Addressing

If the I.D. is set to a number greater than 27, the terminal will set the I.D. to 27. For example, Group 20 would be set with the following switch configuration:

Group ID = 20  

$$J04 \text{ (open)}$$
 =  $2^4$  = 16  
 $J03 \text{ (closed)}$   
 $J02 \text{ (open)}$  =  $2^2$  = 4  
 $J01 \text{ (closed)}$   
 $J00 \text{ (closed)}$ 

INITIATION OF A DATA TRANSFER. All data transfers are initiated by the computer in one of two ways, Polling or Selection. In both cases, device addresses are used to call a specific terminal or group of terminals.

#### CONTROL SEQUENCES.

Polling. The computer requests terminals with data ready for transmission to begin sending by "polling" the terminals. The terminals can then respond in order according to their position on the communication line. Those at the far end of the communication line being held off until all terminals ahead of them on the string have completed their data transfers.

For example, a poll of terminal D in group A would consist of the following character sequences:

Asynchronous

<\f><PAD>†<GROUP ID><GROUP ID><DEV ID><\d>> ID><\d>> ID><\d>> CPAD></d>

Synchronous

<\$+><\f><PAD>†<\f+><GROUP ID><GROUP ID><DEV ID><\DEV ID><\f>><PAD>

\*3 or more SYN characters.

†These PAD characters must have the correct ASCII parity.

Group Polling. In order to reduce the time and programming required to poll each terminal on a communication line you can perform a group poll. This will allow all of the terminals in a group (terminals having the same group ID) with data ready to send, to respond to a single poll sequence. When the last terminal in the group with data to transfer is through sending it will send an EOT to indicate that the group has finished.

The group poll sequence is similar to the normal poll sequence. The \*\* character (042 octal) is used in place of the device ID characters. For example, to poll all of the terminals in group A you can use the following sequence:

**ASYNCHRONOUS** 

Group Poll Characters
/ \

/ \ ጙ PAD A A " " ጜ PAD


**SYNCHRONOUS** 

ችችች ች PAD<sup>\*</sup> ችችች A A " " ጜ PAD

\* Optional PAD character





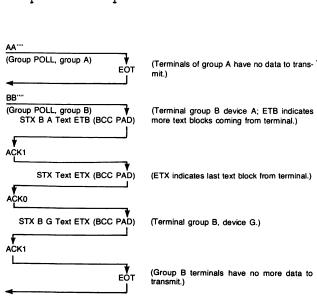

Selection. "Selection" occurs when the computer directs a specific terminal or group of terminals to accept a data transmission. The character sequences used in selection are the same as those used in polling. The only difference is that the lower case ID characters are used. This is to tell the terminals that a selection is being sent instead of a poll. For example, to address the same device as in the polling example, the sequence would be as follows:

#### **ASYNCHRONOUS**

FPADaaDD & PAD

#### **SYNCHRONOUS**

ችችች ች PAD ችችች a a D D ጜ PAD

Note that both the group ID and device ID characters are transmitted twice to eliminate line errors during Poll and Select sequences. (These transmissions do not use Block Check characters.) The two group ID characters must be the same and the two device ID characters must be the same for a terminal to accept a poll or select sequence. Then, if the group and device IDs are the same as the terminal's, the terminal will respond with an ACKO. After receiving the first block of data the terminal will respond with an ACK1.

**Group Select.** A "group select" sequence can be used to send data to all of the terminals in a group. The terminals will not send any response to group select. (Since there is no response there is no guarantee that the terminals will receive the text.) The text transmission is appended directly to the end of the group select sequence. The group select is the same as a device select sequence except that the device ID character is replaced with a tilde ( $\sim$ ) (octal 176). For example, to send data to all of the terminals in group C the following sequences would be used:

# Lower case for select Group select characters F, PAD c c ~ ~ % TEXT % BCC PAD

**ASYNCHRONOUS** 

#### **SYNCHRONOUS**

Lower case for select - Group select characters

\$ 5 5 6 PAD \$ 5 5 c c ~ ~ \$ TEXT \$ BCC PAD

Included in block check

Line Select. A "line select" allows you to select all of the terminals on a communication line. This is also known as "Broadcast" mode. Both the group and device id characters are replaced with tildes ( $\sim$ ).

ASYNCHRONOUS Line select characters F PAD ~ ~ ~ % TEXT % BCC PAD Included in block check **SYNCHRONOUS** Line select characters ጓጓጓ ዓ PAD ዓጓጓ ~ ~ ~ ፟ጷ TEXT ፟ጜ BCC PAD Included in block check

(WRU). The Who Are You (WRU) control sequence is a status request from the computer to a terminal group. It is similar to a group poll except that the terminals respond

CONFIGURATION STATUS - WHO ARE YOU

with status information instead of the normal text data. All terminals in the group that are turned on will send in their status. The status sequence is shown below. The right brace character (175 octal) is used in place of the device id. This tells the terminal that a status request is being made.

# **ASYNCHRONOUS** <F><PAD><GROUP ID><GROUP ID><}><5><5><5><PAD> **SYNCHRONOUS** <5+><5><PAD><5+><GROUP ID> <GROUP ID><}><5><5><PAD> \* 3 or more SYN characters

Three bytes of status information are returned for each responding terminal. Figure 5-15 shows a typical status request and responses from a terminal group.

The status bytes contain terminal hardware and firmware configuration information. The content of each of the status bytes is explained in figure 5-16.

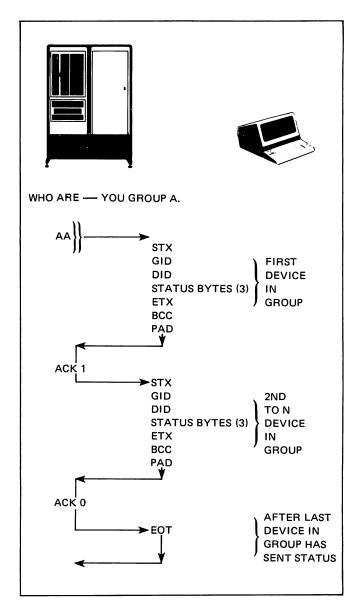


Figure 5-15. Typical Configuration Status Request and Response Sequence

# **Configuration Procedure**

After you have determined the required multipoint settings for your application follow the flowchart given in figure 5-17.

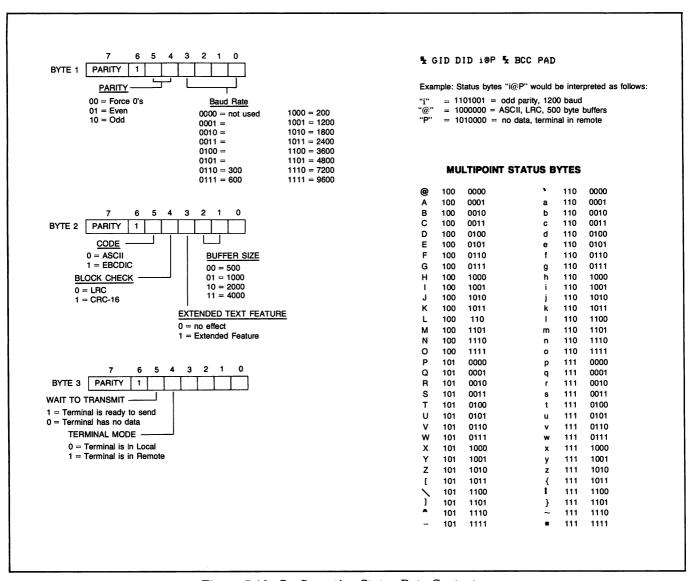


Figure 5-16. Configuration Status Byte Contents

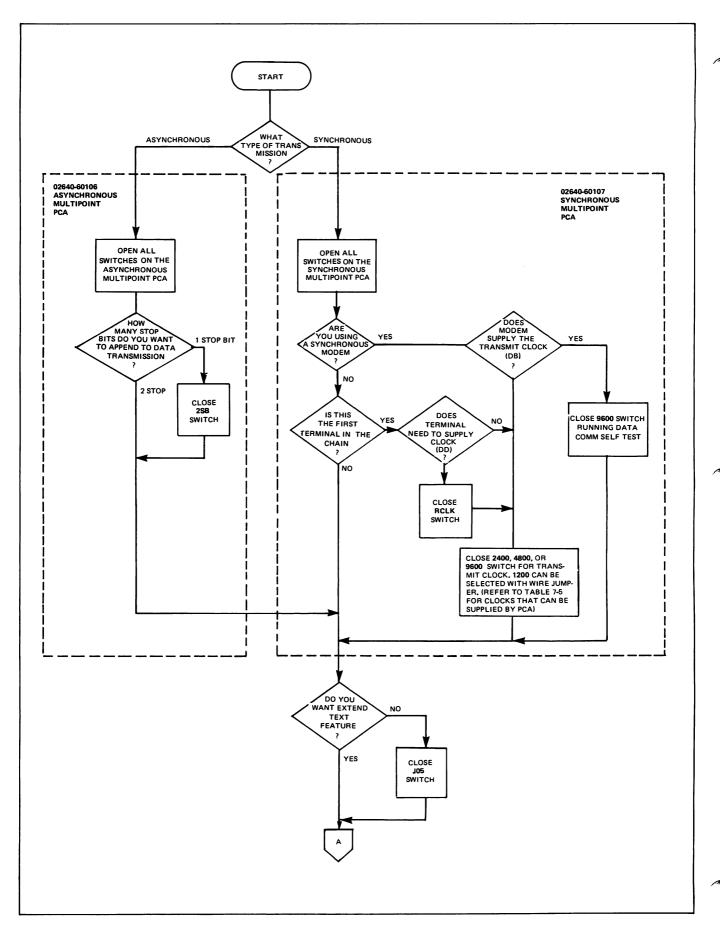


Figure 5-17. Multipoint Data Communications Configuration (Sheet 1 of 4)

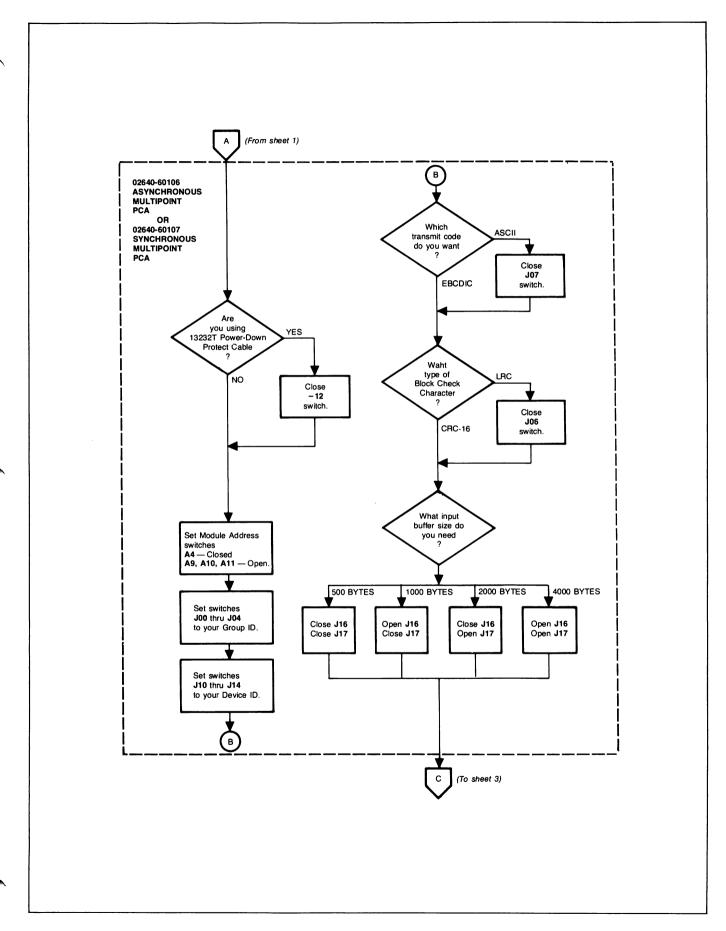


Figure 5-17. Multipoint Data Communications Configuration (Sheet 2 of 4)

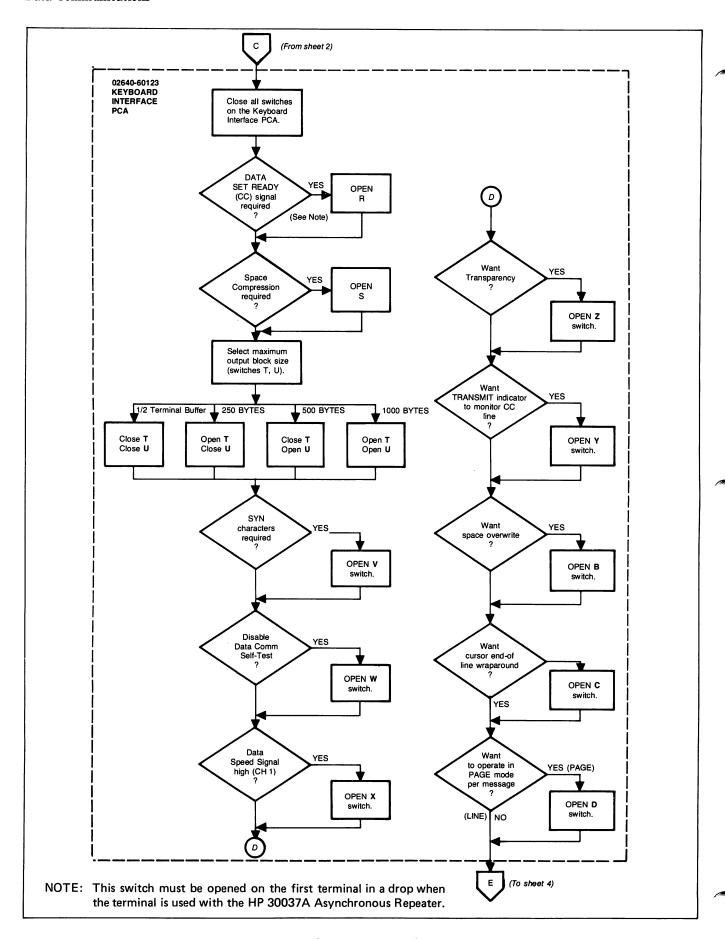


Figure 5-17. Multipoint Data Communications Configuration (Sheet 3 of 4)

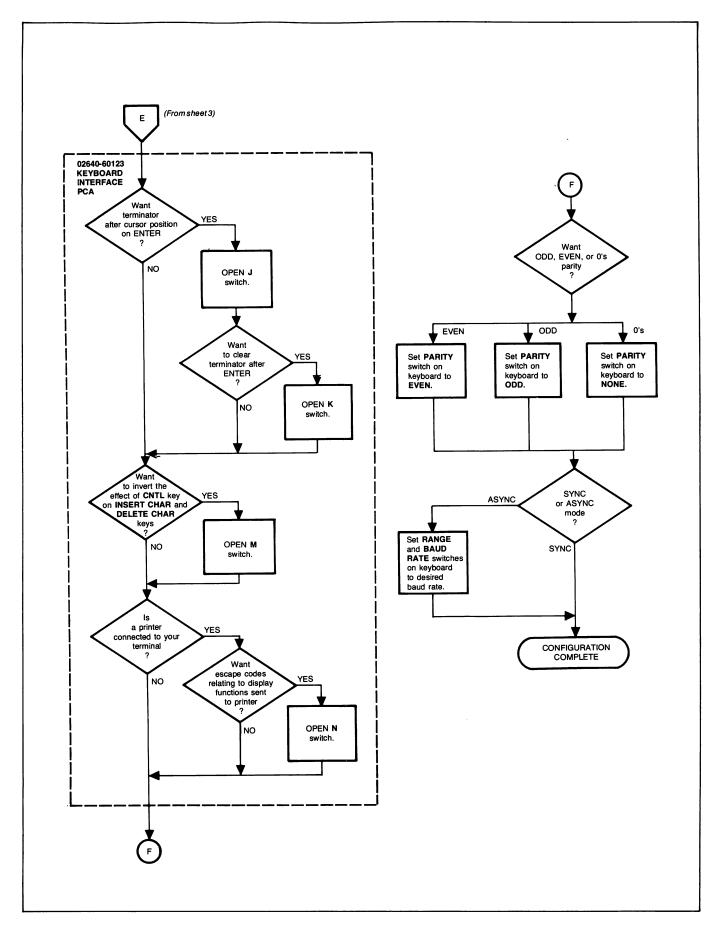


Figure 5-17. Multipoint Data Communications Configuration (Sheet 4 of 4)

#### **Monitor Mode**

Monitor mode is an added multipoint feature available as an option to the 13260C and 13260D interfaces. It allows a terminal to monitor the data transfers between the computer or driver terminal (refer to Driver Mode) and other multipoint terminals on the same communication line. This is a useful technique when developing communications programs or testing multipoint networks.

The monitor must be placed in the line between the computer and the other terminals in order to monitor both sides of the communication exchanges. Figure 5-18 shows a sample communication line using a terminal in monitor mode. (Note that the monitor cannot detect data sent from terminal AA to the computer.)

Note that the monitor will not respond to poll or select sequences addressed to it while in Monitor Mode.

Once the Monitor option has been installed (refer to Section VII, *Installation*, for procedures), Monitor mode is selected by the following:

Step 1. RESET , RESET ( REMOTE key down).

Pressing the DISPLAY FUNCTIONS key again will turn off the indicator and return the terminal to normal operation.

While in Monitor mode data communications between the computer and "downstream" terminals will be displayed on the monitor. Data from terminals will be framed in left and right arrows (<data>) and will include control and block check characters (see figure 5-19). All untranslatable EBCDIC characters will be displayed as "?" characters.

In group poll operations the last three characters of the poll sequence (second ", ENQ,PAD) may be distorted due to the response of polled terminals (see figure 5-20). Once a terminal detects the first double quote character ("), it begins its response with a transition on the Request to Send Line (CA). This causes the monitor to begin watching for data from the terminal instead of the computer. This distortion occurs only within the monitor and does not affect the operation of either the computer or the other terminals.

If the monitor terminal is configured with a communications buffer that is smaller than either the computer or responding terminals, a data overflow may occur. A cancel character (octal 030) will be displayed at the point where the data overflow occurred (see figure 5-21). To prevent data overflow, make sure that the buffer used in the monitor is at least as large as the largest buffer used by any responding terminal. (Refer to the Installation section for buffer configuration information.)

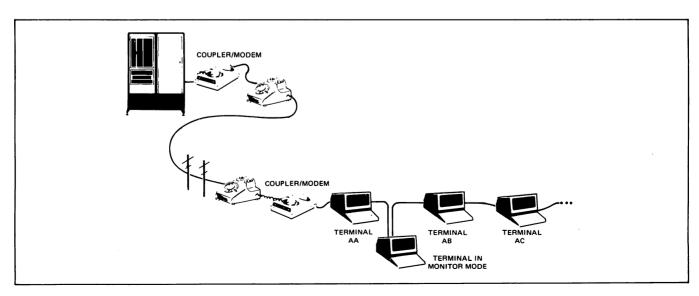


Figure 5-18. Communication Line Using a Monitor

```
Computer: >58TTFF58<
Terminal:
         >5#TTFF%<
Computer:
Terminal:
          #%TFThis is a block of text to be sent to a computer%%%%Xz
Computer:
          >41#4
Terminal:
Monitor
           >5@TTFF5@<5@>5@TTFF5@<5TFThis is a block of text to be sent to a computer%
Display
          a) From Terminal
Computer:
          >5#TTFF5#<
Terminal:
Computer:
          >5BttFF6B<
Terminal:
          90
Computer:
          >%This is a message to be sent to a terminal%%%%%X#<
Terminal:
Computer:
          >5858TTFF58<
Terminal:
Monitor
          >5BTTFF58<58>5BTTFF5<6858>5BttFF58<908>5This is a message to be sent to a termina
Display
          <u>|</u>|$\$$$X#<Q:1#>$#$#TTFF$<#$>$#TTFF$#<$#>$#TTFF$#<$#$$#$##TFF$#<$#$$##TFF$#
          FSB<SB
                                          b) From Computer
```

Figure 5-19. Sample Data Transfers Displayed in Monitor Mode

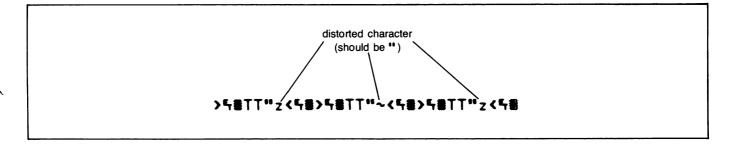


Figure 5-20. Character Distortion in Group Poll

```
≒Section V Data Communications. - This section describes the terminal's%
becommunication function and gives procedures for configuring the terminals
yto meet various c%{$#>%;#<%#>%;#<%#>%;#<%#>%;#<%#>%;#<%#>%;#<%#>%;#<%#>%;#<%#>%;#<%#>%
;据《忘报》气;推《忘报》气;《题忘报》气;据《忘报》气;报《忘报》气;报《忘报》气;报《忘报》气;报《忘报》气;报《忘报》气;报《忘报》气;报《忘报》气;报《
$#>Q;#<$#>Q;#<$#>Q;#<$#>Q;#<$#>Q;#<$#>Q;#<$#>Q;#<$#>Q;#<$#>Q;#<$#>
凡;最く后曲>凡;最く后曲>凡;最く后曲>凡;最く后曲>凡;最く后曲>凡;《最后曲>凡;最く后曲>凡;最く后曲>凡;最く后曲>凡;最く后曲>凡;最く后。>
 <$8.70 \ $2.50 \quad \qu
《者后妻》气;曹《后妻》气;《君后妻》气;曹《后妻》气;曹《后妻》气;曹《后妻》气;曹《后妻》气;曹《后妻》气;曹《后妻》气;曹《后妻》气;曹《后妻》气;曹《后妻》
 #>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q;#<5#>Q
 ;据《伤事》见;据《伤事》见;据《伤事》见;据《伤事》见;据《伤事》见;据《伤事》见;据《伤事》见;据《伤事》见;据《伤事》见;据《伤事》见;据《伤事》见;据《
 ጜቜ>ዺ;ቜ<ጜቜ>ዺ;ቜ<ጜቜ>ዺ;ቜ<ጜቜ>ዺ;ቜ<ጜቜ>ዺ;ቜ<ጜቜ>ዺ0ቜ<‱formunication requirements。%
 	ilde{	au}Section VI Status. - This section describes how to obtain and interpret	ilde{	au}
 4Section VII Installation. - This section contains step-by-step procedures%
 For installing and configuring the termi(%)%
 ha procedure for rethreading cartridge tapes &
 \negThe descriptions in this manual use the following text conventions:
 ጐጜይJ?#>ጙ#ጙ#TTFFጜ#<ጜTFommunication requirements.ዓ
                                                                                                                                            Cancel Character
                                                                                                                                            indicates data overflow
```

Figure 5-21. Data Overflow Indication

#### **Driver Mode**

Driver Mode is an additional multipoint feature available with the Monitor Mode option to the 13260C and 13260D interfaces. It allows you to use a terminal to control a multipoint communication line. This technique is very useful in developing communication drivers or testing networks without the need of a computer or modem.

Figure 5-22 shows two typical networks using the driver mode option. The network in figure 5-22a is the simplest case. A more useful network is shown in figure 5-22b. Here a multiterminal network is being driven while a terminal in monitor mode is used to display or record all communication transactions. All data from the downstream terminals as well as the driver terminal is displayed.

Once the Monitor/Driver Mode option has been installed (refer to Section VII, *Installation*, for installation procedures), Driver mode is selected as follows:

Step 1. RESET TERMINAL , RESET TERMINAL , ST. , CLEAR OSPLY

Step 2. Type DVR-<GID DID><gid DID>

where: GID DID = the group and device IDs to be used in poll sequences.

gid DID = the group and device IDs to be used in select sequences.

#### **Examples:**

DVR-ABaB (uses terminal B in group A for

both poll and select)

DVR-A<sup>••</sup>aB (polls all terminals in group A but selects only terminal B)

Step 3. English

The Driver will begin sending out the polling sequence at 4 to 5 second intervals using the poll ID characters loaded with the ENTER key. You can also type in test to be sent to the terminal identified for select operations. Block transfers are triggered by the ENTER key.

Example: This is a block of text to be sent to a terminal.

This line would be sent to and displayed on the destination terminal just as it was typed. Note that if a monitor terminal were in the network between the driver terminal and the destination terminal it would display all of the framing characters as well as the block check character. Figure 5-23 shows the way this transfer would appear.

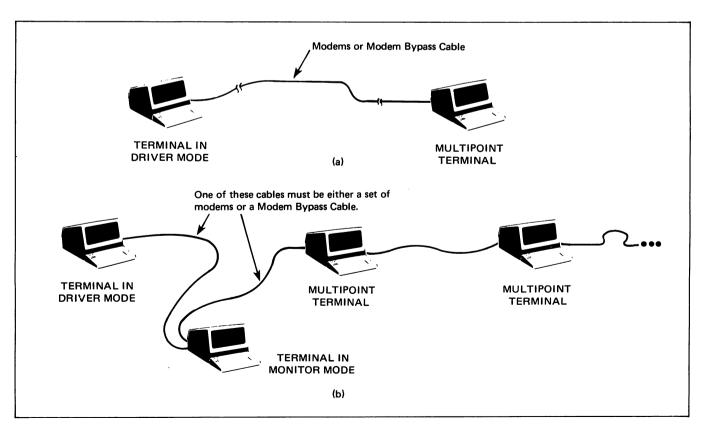


Figure 5-22. Driver Mode Configurations

Driver: >58ttFF%8<
Terminal: 08
Driver: >5This is a message to be sent to a terminal%+%%%%%
18
Driver: >585TTFF%8<
Terminal: 58

a.) Conversation

>58TTTFF%8<58>58TTFF%8<08>58TTFF%8<08>58TTFF%8

b.) Display

Figure 5-23. Sample Select Sequence Using Driver Mode

Normally all 128 ASCII characters are displayed on the screen of the driver terminal. You can press the DISPLAY FUNCTIONS key (indicator goes out) and still remain in driver mode. This will prevent control characters from being displayed (see figure 5-24).

A full reset returns the driver terminal to normal operation.

Data can be transferred from a multipoint terminal to the driver terminal by entering the data and pressing the ENTER key. The terminal will then respond to a poll sequence by sending the data the same as it would in normal multipoint operation (see figure 5-25).

All multipoint group functions except broadcast can be used in driver mode. Note that you can poll an entire group but can only address one terminal with a select sequence.

```
TFThe complete text is normally sent with a short summary.%
FThis allows the editor to scan the material inorder to%
Fassign it to a field of interest.%

a) Display Functions On


TFThe complete text is normally sent with a short summary.
This allows the editor to scan the material inorder to assign it to a field of interest.

b) Display Functions Off
```

Figure 5-24. Control Character Display On Driver Terminal

Driver: >5#TTFF5#< Terminal: 48 Driver: >5#TTFF%< #ጟTFThis is a block of text to be sent to a computer%፦§§Xz# Terminal: >ቢ1#< Driver: Terminal: 4 a.) Conversation >5##TTFF%#<5##>F#TTFF%#<5#TFThis is a block of text to be sent to a computer% **└%%Xz#>%1#<%#>%#TTFF%#<%#** b.) Display

 Figure 5-25. Terminal Input



#### INTRODUCTION

This section contains information on how to obtain and interpret terminal status information. In addition to normal terminal status, you can also obtain status information on graphics operations and input/output devices used with the terminal.

Status requests are made by sending an escape code sequence to the terminal to select the desired status information. All status requests are treated as block transfers. (Refer to Multicharacter Transfers in Section V). The examples that follow use the DC1 character to trigger the status transfer (Basic Communication Protocol). Only one status request at a time can be enabled. The last status block requested will be returned when the DC1 is received.

# **INTERPRETING STATUS**

In response to status requests the terminal returns an escape code sequence followed by one or more bytes. The status bytes are followed by a terminator. The terminator received may be a CR(LF), RS or GS depending on the communications protocol and terminal configuration (refer to Section V). The examples that follow use the CR character as a terminator.

The status information is normally contained in the lower four bits of each status byte. The upper five bits of the bytes are set so that the byte will have the value of an ASCII character. Each byte can be interpreted as one of 32 characters as shown in table 6-1.

Some graphics status requests return numeric data such as x and y coordinate values. The terminal returns actual numeric values using ASCII characters for these requests. Refer to the detailed descriptions of the individual graphics status requests for additional information.

#### **TERMINAL STATUS**

Terminal status is made up of 14 status bytes (bytes 0-13) containing information such as display memory size, switch settings, keyboard interface configuration, and terminal errors. These fourteen status bytes are displayed below the terminal Self-Test pattern when the key is pressed. (Refer to Section VII for a discussion of Self-Test.) There are two terminal status requests, primary and secondary. Each returns a set of 7 status bytes. The terminal status bytes are shown on pages 6-3 and 6-5.

Table 6-1. ASCII Status Characters

ASCII CHARACTER	BINARY	ASCII CHARACTER	BINARY
SPACE	0010 0000	0	0011 0000
JEAGE	0010 0001	1	0011 0001
!	0010 0010	2	0011 0010
#	0010 0011	3	0011 0011
\$	0010 0100	4	0011 0100
Ψ %	0010 0101	5	0011 0101
&	0010 0110	6	0011 0110
,	0010 0111	7	0011 0111
1	0010 1000	8	0011 1000
,	0010 1001	9	0011 1001
) *	0010 1010	:	0011 1010
+	0010 1011	;	0011 1011
	0010 1100	<	0011 1100
,	0010 1101	=	0011 1101
_	0010 1110	>	0011 1110
•	0010 1111	?	0011 1111
,	1 00.0 1111		

# **Primary Terminal Status**

The first block of terminal status (bytes 0-6) is requested by sending the following escape sequence:

Ę ^

Primary Terminal Status Request:

The terminal will respond with an  $\mathbb{L} \setminus$  and 7 status bytes followed by a terminator. A typical primary terminal status request and response is shown in figure 6-1. The example is for a configuration requiring the DC1 character to trigger block transfers.


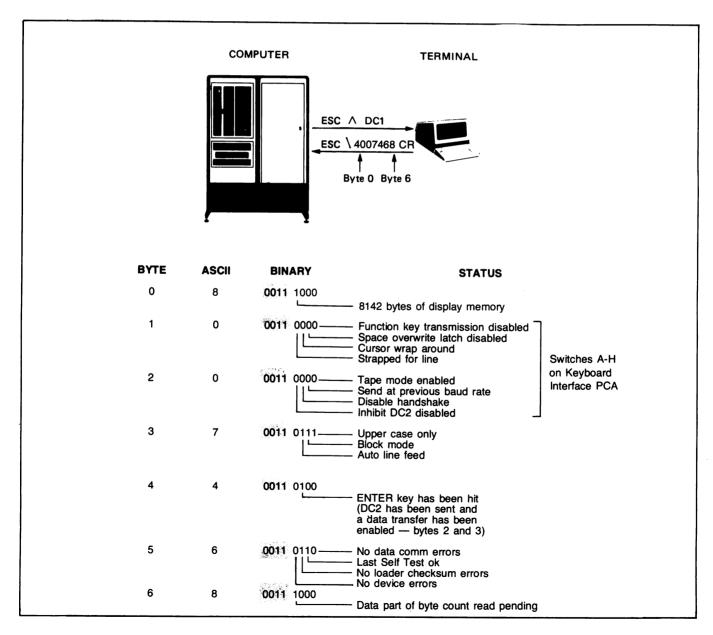


Figure 6-1. Primary Terminal Status Example


#### PRIMARY TERMINAL STATUS

#### DISPLAY MEMORY SIZE BYTE 0

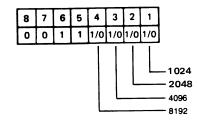


The amount of display memory (blocks of 1K) available in the terminal is returned. The amount can range from 1K to 9K bytes. The actual number of displayable characters is less than the returned figure by at least 12% minus another 500 bytes for system use.

#### LATCHING KEYS BYTE 3

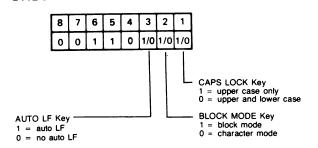


#### **KEYBOARD INTERFACE SWITCHES (A-D)** BYTE 1

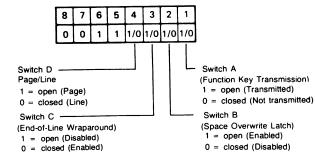


Refer to Section V for a detailed description of Keyboard Interface switches.


#### BYTE 4 TRANSFER PENDING FLAGS

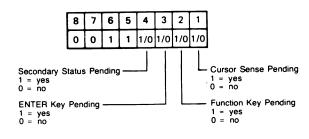


#### BYTE 2 **KEYBOARD INTERFACE SWITCHES (E-H)**

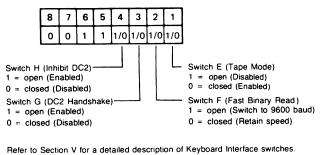

#### **ERROR FLAGS** BYTE 5

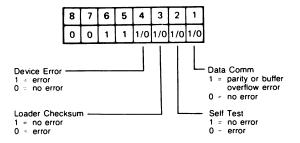

#### DEVICE TRANSFER PENDING FLAGS BYTE 6

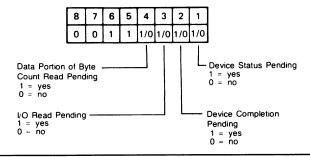

# **Secondary Terminal Status**

The second block of terminal status (bytes 7-13) is requested by sending the following escape sequence:

The terminal will respond with an **£!** and 7 status bytes followed by a terminator. A typical secondary terminal status request and response are shown in figure 6-2.


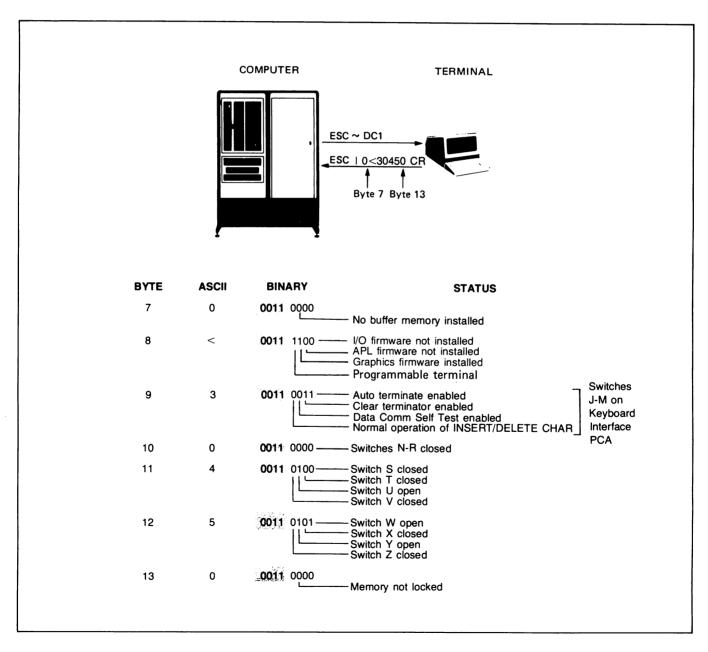


Figure 6-2. Secondary Terminal Status Example

#### **SECONDARY STATUS BYTES**


#### BYTE 7

#### **BUFFER MEMORY**

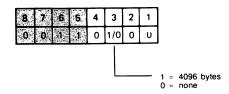


Memory installed in addition to display memory that is available for use as data buffers.

#### BYTE 8 TERMINAL FIRMWARE CONFIGURATION

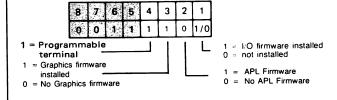


The device support firmware is required before tape units or printers can be used with the terminal.

### BYTE 9 KEYBOARD INTERFACE SWITCHES (J-M)

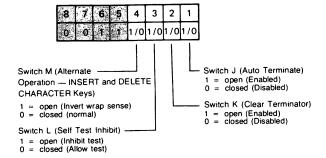


Refer to Section V for a detailed description of Keyboard Interface switches.

#### BYTE 10 KEYBOARD INTERFACE KEYS (N-R)

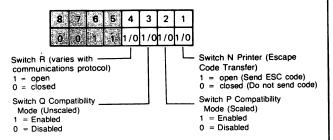


Note that if either or both of the P or Q switches is enabled an extended data comm buffer is selected. Refer to Section V for detailed descriptions of these switches.

#### BYTE 11 KEYBOARD INTERFACE KEYS (S-V)

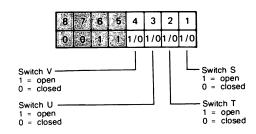


The use switches S to V varies depending on the communication protocol used. Refer to Section V for detailed descriptions of their functions.

#### BYTE 12 KEYBOARD INTERFACE SWITCHES (W-Z)

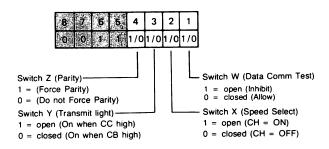

The use switches W to Z varies depending on the communication protocol used. Refer to Section V for detailed descriptions of their functions.

## BYTE 13 MEMORY LOCK/BI-LINGUAL MODE

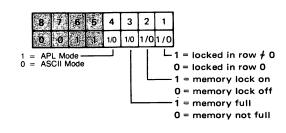

#### **DEVICE STATUS**

The status of a tape unit or printer can be obtained by a device status request. This request would typically be made following an input/output operation or as a result of testing bytes 5 and 6 of the terminal status. The device status bytes are shown on the following page.

Device status is requested by sending the following escape sequence:

Device Status Request:

€ & p <device code> ^

where: <device> is 1, 2, or 4 and

1 = left tape

2 = right tape

4 = external printer

Note: The printer designated by device code 4 is an 8-bit duplex or serial printer (NOT an HP-IB printer connected by way of an HP 13296A Shared Peripheral Interface).

The terminal will return an type (device code) and 3 bytes of device status followed by a terminator. A typical device status request and response are shown in figure 6-3. A status request from device 3 (display) will be ignored.


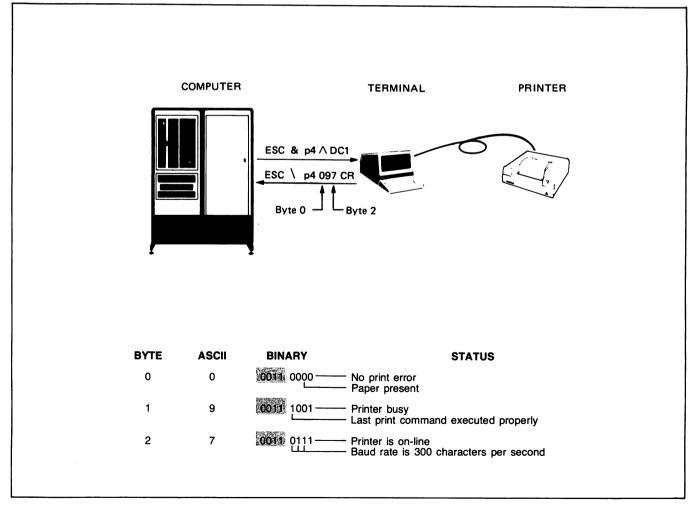


Figure 6-3. Device Status Example

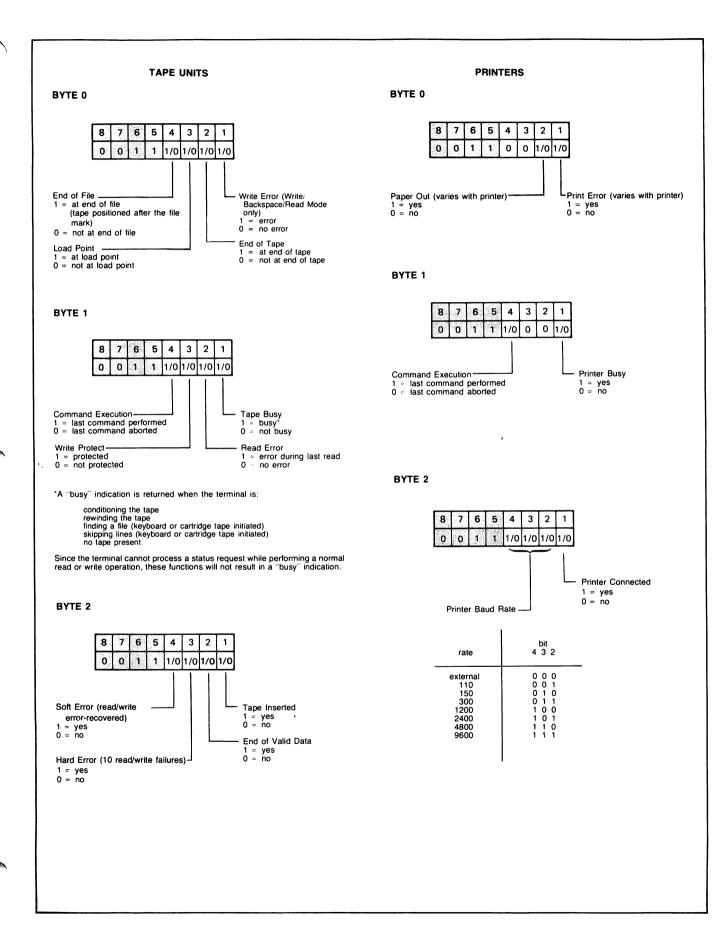

#### **GRAPHICS STATUS**

In addition to normal terminal status you can request graphics status information. All graphics status requests are initiated by sending an 5 \* 5 followed by a single parameter (1 through 13) followed by a \*. The single parameter selects the particular status block desired. If an invalid parameter is used, the terminal will simply return its I.D. (see Device I.D. Request, parameter = 1).

Graphics Status Request:

ዲ \* s <parameter> ^

where: F \* 5 is the graphics status escape sequence.

<parameter> is 1-12 and selects one of twelve
 blocks of graphics status infor mation.

The graphics status blocks that can be requested are listed in table 6-2 together with the format of the terminal's response. Detailed descriptions of each of the status requests are contained in the following paragraphs.

The terminal will respond with one or more bytes of status information followed by a block terminator. All status information is returned in ASCII format, separated by commas. Coordinates are returned in a fixed format, consisting of a sign and five digits. Leading zeros are used as required to provide a fixed number of digits (i.e. +00100, -01234). This allows you to use simple input statements without the need to mask or shift bits.

If the DC1 handshake protocol is enabled (keyboard straps G and H, refer to Section V), the status block is not actually sent until receipt of a DC1 character. If the DC1 character is used, only one status request can be enabled while the terminal is waiting for a DC1. When the DC1 is received, the last status block requested will be sent.

The terminal expects the status information to be echoed and uses the terminating control character to turn off the suppress echo mode. If the computer does not echo the status back, a suitable control character must be returned to the terminal to turn off the echo suppress mode.

The graphics status blocks that can be requested are:

# Read Device I.D. (Parameter=1)

When you request a device I.D. the terminal responds with its Hewlett-Packard model number, 2647A.

Device I.D. Request:

£ \* s 1 \*

The terminal responds: 2647A <terminator>

# Read Current Pen Position (Parameter=2)

The pen position and status are returned as a string of ASCII characters.

Pen Position Request:

ቺ \* s 2 ^

The terminal responds: <X>,<Y>,<Pen>,<terminator>

Table 6-2. Graphics Status Requests

Parameter	Request	Response
1	Read device I.D.	2647A
2	Read current pen position	<x>,<y>,<pen></pen></y></x>
3	Read graphics cursor position	<x>,<y></y></x>
4	Read graphics cursor position with wait	<x>,<y>,<key></key></y></x>
5	Read display size	<llx>,<lly>,<urx>,<ury>,<mmx>,<mmy></mmy></mmx></ury></urx></lly></llx>
6	Read device capabilities	<b1>,<b2>,<b15>,<b16></b16></b15></b2></b1>
6 7	Read graphics text status	<x size="">,<y size="">,<origin>,<angle>,<slant></slant></angle></origin></y></x>
8	Read zoom status	<size>,<on off=""></on></size>
9	Read relocatable origin	<x>,<y></y></x>
10	Read Reset status	<reset>,<b1><b6>,<b7></b7></b6></b1></reset>
11	Read graphics memory	<b1>,<b2><bn></bn></b2></b1>
12	Read area shading capability	1,8,8
13	Read dynamics capability	1,1

where: <X> = X coordinate = Y coordinate

<Pen> = Pen state, 0=pen up, 1=pen down

For example, assume that the pen is at 360, 80, the pen is up, and the terminal is set for the DC1 handshake, with CR as the terminator:

The computer sends: 5 \* 5 2 \* <terminator> DC1

X coordinate Pen state

The terminal responds: +00360,+00080,0%

Y coordinate

# **Read Graphics Cursor Position** (Parameter=3)

The graphics cursor position is returned as a string of ASCII characters.

Read Graphics Cursor Request:

£ \* 5 3 ^

The terminal responds: <X>,<Y> <terminator>

where:  $\langle X \rangle = X$  coordinate <y> = Y coordinate

# **Read Cursor Position with Wait** (Parameter=4)

This request allows the user to position the cursor, then strike a key to return the position. The ASCII decimal code for the key struck is also returned (not the actual character). The code is returned as three digits. For example, striking an uppercase A would return 065. Only ASCII character keys will generate a response (i.e. ROLL UP, ROLL DOWN, etc. are ignored). The graphics cursor is turned on, if not already on. If an escape sequence is received by the terminal after it has received the READ CURSOR with WAIT command and before a key is struck, the READ CURSOR command will be aborted. The new sequence will be executed instead.

Read Graphics Cursor with Wait Request:

The terminal responds: <X>,<Y>,<key code>

<terminator>

where:  $\langle X \rangle = X$  coordinate  $\langle Y \rangle = Y$  coordinate

<key code> = Decimal value of key struck

The position bytes are ordered as in the read pen request.

# Read Display Size (Parameter=5)

This request returns the number of displayable units in the X and Y axes. It also returns the number of units per millimeter in the display. This request allows you to scale data for use on graphic devices with varying display areas.

Read Display Size Request:

€ \* 5 5 ^

The terminal responds: <LLX>, <LLY>, <URX>, <URY>, <MMX>, <MMY><terminator>

where:  $\langle LLX \rangle$ ,  $\langle URX \rangle$  = Lower left and upper right x coordinates

<LLY>, <URY> = Lower left and upper right y

coordinates

<MMX>, <MMY> = number of units per millimeter in the x and y axes, (five digits

and a decimal point)

The terminal will always return a fixed response. The lower left corner has coordinates of 0,0. The upper right corner has coordinates of 719,359. There are approximately 3 units per millimeter in each axes.

Terminal response: +00000,+00000,+00719,+00359, 00003.,00003.<terminator>

# Read Device Capabilities (Parameter=6)

The device capabilities request returns a list of graphic and plotting features available in the terminal. This allows you to use one program for a variety of graphic devices. Not all of the features listed are available in the terminal. The absence of a feature is indicated by a 0. If a feature is present, it may be necessary to send an additional request to determine the exact capabilities present. Where multiple response values are possible the terminal's standard response is shaded.

**Device Capability** Request:

돈 \* 5 6 ^

The terminal responds:

<b1>, <b2>, <b3>, <b4>, <b5>, <b6>, <b7>, <b8>,<b9>,<b10>,<b11>,<b12>,<b13>,<b14>, <b15>, <b16><terminator>

where:

<br/>
<br/>
thi> = Clear Display

0 = no clear1 = paper advance

2 = clear (total erase)3 = partial clear by area

<br/> **\*b2>** = Number of Pens (1)

 $\langle b3 \rangle, \langle b4 \rangle = \text{Not Used } (0,0)$ 

<bs> = Area Shading

0 = no

1 = yes (see Read Area Shading Capability) **<b6>, <b7>** = Not Used (0,0)

**<b8> =** Dynamic Modification

0 = no

1 = yes (see Read Modification Capability)

**<b9> =** Graphics Character Size

0 = fixed

1 = integer multiples of the basic cell size

2 = any size

<br/> **(b10)** = Graphics Character Angles

0 = fixed

 $1 = \text{multiples of } 90^{\circ}$ 

2 = multiples of 45°

3 = any angle

<ь11> = Graphics Character Slant

0 = fixed

 $1 = 45^{\circ}$ 

2 = any angle

<b12> = Dot-Dash Line Patterns

0 = none

1 = predefined only

2 = user defined and pre-

defined

**<b13>-<b16>** = Not Used (0,0,0,0)

The terminal will always respond:

3,1,0,0,1,0,0,1,1,1,1,2,0,0,0,0<terminator>

# Read Graphics Text Status (Parameter=7)

The terminal returns the current text size, orientation, slant, and type of justification. Refer to Section III, Graphics Functions for a description of graphics text characteristics.

Read Graphics Text Request: € \* 5 7 ^

where: <X size> = X dimension of the character cell (three digits)

<Y size> = Y dimension of the character cell
 (three digits)

<slant> = 00000. or 00045. degrees

# Read Zoom Status (Parameter=8)

This request returns the terminal's zoom setting.

Read Zoom

Status Request:

£ \* 58 **^** 

The terminal responds:

<zoom size>,<zoom on/off><terminator>

where: <zoom size> = zoom setting, 1-16 (three digits and a decimal point)

<zoom on/off> = 0 for Off, 1 for On

# Read Relocatable Origin (Parameter=9)

The position of the relocatable origin is returned as x and y coordinates.

Read Relocatable Origin Request:

£ + 5 9 ^

The terminal responds:

<X coordinate>,<Y coordinate><terminator>

# Read Reset Status (Parameter=10)

You can determine whether or not the terminal has executed a full reset (or Power On) since the last time reset status was checked. This will tell you whether or not you need to reestablish terminal settings or images before resuming terminal functions. An additional seven bytes are returned but are not used.

Read Reset

Status Request:

t \* s 10 ^

The terminal responds: <reset>, <b1>, <b2>, <b3>, <b4>, <b5>, <b6>, <b6>,

<b7><terminator>

where: <reset status> = 0 No full reset since last check

or

1 Terminal has been reset

 $\langle b1 \rangle - \langle b7 \rangle = 0 \text{ (not used)}$ 

# Read Area Shading Capability (Parameter=11)

The area shading capability of the terminal can be read. These are fixed for the terminal.

Read Area Shading Request: t e s 11 ↑

The terminal will always respond: 1,8,8 <terminator>

The "1" indicates that the area shaded must be rectangular. The first "8" indicates that the shading pattern is 8 units wide. The second "8" indicates that the shading pattern is 8 units high.

# Read Graphics Modification Capabilities (Parameter=12)

You can read the terminal's dynamic graphics capabilities. This is the ability of the terminal to change selected portions of the display. These are fixed for the terminal.

Read Graphic Modification Capabilities Request:

t • s 12 °...

The terminal will always respond: 1,1 <terminator>

These two bytes indicate that the terminal has selective erase and compliment capabilities.

# **Any Other Parameter**

Any other parameter which has not been assigned causes the terminal I.D. to be returned. This is to prevent an invalid status request from tying up the requesting computer while waiting for a response.

2647A <terminator>

## **COMMAND STATUS**


A program executing in a host computer can obtain BA-SIC, AGL, and command execution error messages from the terminal by sending the following escape sequence:

Command Status Request:

₹,c REPORT STATUS OF COMMAND %

In response the terminal returns a five-digit decimal value. A value of 00000 indicates that no error occurred. To extract the error code from a non-zero value, you convert the value to a 16-bit binary number, as follows:

Decimal Value: 00309 Hexadecimal Value: 0135 16-bit Binary Representation:

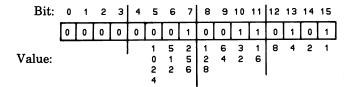

# FileSystem/User Interface Errors

Errors detected by the terminal's file system or user interface have decimal error codes within the range 257-1023 (inclusive). Below is a list of all the file system/user interface error codes. For each possible error, two error codes are shown. The first is the error's five-digit decimal code and the second (in parentheses) is the hexadecimal code for the 16-bit binary representation of that code.

#### FILE SYSTEM INTRINSIC ERROR MESSAGES

CODE	MESSAGE	EXPLANATION
00257 (0101)	INVALID DEVICE SPECIFIED	Incorrectly spelling a device name; correct spelling.
00258 (0102)	INVALID FILE-ID	File-id passed to F/S intrinsics is incorrect; program error.
00259 (0103)	INVALID FILE ACCESS	Reading a write only file or writing to read only file.
00260 (0104)	ACTIVE FILE TABLE FULL	No more files can be opened until another file is closed first.
00261 (0105)	DUPLICATE DEVICES SPECIFIED	More than one of the same device name in multiple device string specification; delete one.
00262 (0106)	"SOURCE" = "DESTINATION"	Trying to read and write to the same device; change one of them.
00263 (0107)	TOO MANY DEVICES SPECIFIED	Can't have more than one source device; can't have more than one destination device for a compare operation.
00264 (0108)	CONFLICTING I/O	A write to display from I/O buffer is occurring during a GET operation.

#### **COMPARE COMMAND ERROR MESSAGES**

CODE	MESSAGE	EXPLANATION
00265 (0109)	DIFF. LENGTH RECORDS	Record lengths on source and destination devices are different on a compare operation.
00266 (010A)	DIFF. IN BYTE x RECORD y FILE z	A mismatch on a byte on a compare operation.
00267 (010B)	DIFFERENCE IN RECORD TYPE	Record types did not agree from source and destination devices.

## **COMMAND HANDLER ERROR MESSAGES**

CODE	MESSAGE	EXPLANATION
00268 (010C)	ILLEGAL PARAMETER IN COMMAND	Unrecognized keyword in command parameter list.
00269 (010D)	EXTRANEOUS PARAMETER IN	Too many keywords in command parameter list.
00270 (010E)	MISSING PARAMETER IN COMMAND	Expected keyword in command parameter list not found.
00271 (010F)	NON-NUMERIC PARAMETER IN	Illegal numeric digit found in command parameter list.
00272 (0110)	EXCESSIVE NUMERIC PARAMETER IN COMMAND	Numeric digit too large in command parameter list.

## **ASSIGN INTRINSIC ERROR MESSAGES**

CODE	MESSAGE	EXPLANATION
00273 (0111)	ASSIGN TABLE FULL	Can't fit new assignment into assign table; delete another entry to make room.
00274 (0112)	NAME NOT IN ASSIGN TABLE	Name requested wasn't found in assign table.
00275 (0113)	RE-ASSIGNMENT NOT ALLOWED	Devices cannot be reassigned in Edit Mode or Data Logging Mode. To reassign devices, disable Edit or Data Logging Mode, reassign, then enable the mode.
00276 (0114)	ILLEGAL ASSIGN NAME	Incorrect character used in assign name. Names are truncated to 11 characters.

# COMMAND INTERPRETER ERROR MESSAGES

CODE	MESSAGE	EXPLANATION
00277 (0115)	PROGRAM NOT FOUND	Unable to find program with name specified in command channel.
00278 (0116)	UNRECOGNIZED COMMAND	Unable to find command to match command specified in command channel.
00279 (0117)	APPLICATION NOT FOUND	Unable to find a running application program.
00280 (0118)	EXECUTE FILE NOT FOUND	Unable to find an active execute file.
00281 (0119)	VOLUME TABLE FULL	Too many devices currently active. De-activate one of the devices.

# **CARTRIDGE TAPE ERROR MESSAGES**

CODE	MESSAGE	EXPLANATION
00288 (0120)	RUNOFF _ ON LEFT DRIVE	Tape ran off; remove tape and rethread it.
00304 (0130)	RUNOFF _ ON RIGHT DRIVE	Tape ran off; remove tape and rethread it.
00289 (0121)	ABORTED ON LEFT DRIVE	Tape operation aborted; remove tape.
00305 (0131)	ABORTED ON RIGHT DRIVE	Tape operation aborted; remove tape.
00290 (0122)	END OF TAPE ON LEFT DRIVE	No more room on tape.
00306 (0132)	END OF TAPE ON RIGHT DRIVE	No more room on tape.
00291 (0123)	END OF DATA ON LEFT DRIVE	End of valid data found on tape.
00307 (0133)	END OF DATA ON RIGHT DRIVE	End of valid data found on tape.
00292 (0124)	PROTECTED ON LEFT DRIVE	Tape write protected; replace write enable tab.
00308 (0134)	PROTECTED ON RIGHT DRIVE	Tape write protected; replace write enable tab.
00293 (0125)	NO TAPE ON LEFT DRIVE	Tape not inserted.
00309 (0135)	NO TAPE ON RIGHT DRIVE	Tape not inserted.
00294 (0126)	STALL ON LEFT DRIVE	Tape stalled; remove tape.
00310 (0136)	STALL ON RIGHT DRIVE	Tape stalled; remove tape.
00295 (0127)	READ FAIL ON LEFT DRIVE	Unable to read record from tape after nine retries.
00311 (0137)	READ FAIL ON RIGHT DRIVE	Unable to read record from tape after nine retries.
00296 (0128)	WRITE FAIL ON LEFT DRIVE	Unable to write to tape while in verify mode.
00312 (0138)	WRITE FAIL ON RIGHT DRIVE	Unable to write to tape while in verify mode.
00297 (0129)	FAIL ON LEFT DRIVE	Tape failed during a CTU test.
00313 (0139)	FAIL ON RIGHT DRIVE	Tape failed during a CTU test.
00298 (012A)	END OF FILE ON LEFT DRIVE	End of file reached on tape during file compare operation.
00314 (013A)	END OF FILE ON RIGHT DRIVE	End of file reached on tape during file compare operation.
00299 (012B)	FILE MISSING ON LEFT DRIVE	Missing file mark found during a SKIP or FIND file command.
00315 (013B)	FILE MISSING ON RIGHT DRIVE	Missing file mark found during SKIP or FIND file command.

# **EXTERNAL PRINTER ERROR MESSAGES**

CODE	MESSAGE	EXPLANATION
00336 (0150)	PRINT FAIL	General external printer fail; unspecific.
00337 (0151)	NO PAPER ON EXTERNAL PRINTER	Paper out; resupply paper.
00338 (0152)	NO EXTERNAL PRINTER	No printer connected, or no PCA board.

## **DATACOMM ERROR MESSAGES**

CODE	MESSAGE	EXPLANATION
00352 (0160)	TERMINAL NOT IN REMOTE	Terminal remote switch not down.
00353 (0161)	DATACOMM ERROR	Unspecific datacomm transmit or receive error.

## SHARED PRINTER ERROR MESSAGES

CODE	MESSAGE	EXPLANATION
00368 (0170)	NO SHARED PRINTER	No shared printer connected to HP-IB.
00369 (0171)	PRINTER IS BUSY, RETRY	Shared printer is currently being used; wait until free.
00370 (0172)	NO READ FROM PRINTER	Can't read from shared printer.
00371 (0173)	NO PP	Printer did not respond in time.

# **HP-IB ERROR MESSAGES**

CODE	MESSAGE	EXPLANATION
00384 (0180)	HP-IB TIME-OUT	Data transfer didn't complete before allotted time.
00385 (0181)	NO HP-IB PCA	No HP-IB PCA in terminal.
00386 (0182)	ILLEGAL HP-IB ADDR	HP-IB address specified did not exist.
00397 (0183)	HP-IB DEV BUSY, RETRY COMMAND WHEN FREE	Shared HP-IB device currently busy; wait until free.
00388 (0184)	NO HP-IB CONTROLLER	No terminal on the HP-IB has responded to a request for control.
00389 (0185)	HP-IB TEST FAIL xx	Self test of HP-IB failed.
00390 (0186)	HP-IB TEST NOT ATTEMPTED, ADDR=x, SYSCTL=YES or NO, CIC=YES or NO	Self-test of HP-IB cannot be performed under current conditions or configuration.
00391 (0187)	NOT HP-IB TALKER in BASIC.	Terminal not addressed to talk during a SENDBUS command
00392 (0188)	NOT HP-IB SYSTEM CONTROLLER	HP-IB protocol violated; REN and IFC control lines may only be accessed by system controller.

## **TERMINAL ERROR MESSAGES**

CODE	MESSAGE	EXPLANATION
00400 (0190)	HPIB TE#x TO TE#y TEST FAIL	Transfer from terminal to terminal failed over HP-IB.

# **BASIC Interpreter Errors**

Errors detected by the Terminal BASIC Interpreter have decimal error codes within the range 1025-1279 (inclusive). Below is a list of all the BASIC Interpreter error codes. For each possible error, two error codes are shown. The first is the error's five-digit decimal code and the second (in parentheses) is the hexadecimal code for the 16-bit binary representation of that code.

## BASIC INTERPRETER ERROR MESSAGES

CODE	MESSAGE	EXPLANATION
01026 (0402)	CHECKSUM ERROR IN BASIC	Something has caused the BASIC interpreter code to be altered. Reload the BASIC interpreter.
01027 (0403)	NEXT WITHOUT FOR	A NEXT statement is encountered and the corresponding FOR statement is missing or some intervening loop used the same loop variable. Add the appropriate FOR statement or change the loop variable in the intervening loop.
01028 (0404)	LOOP VARIABLE CAN'T BE LONG	A FOR statement must specify a simple variable of type INTEGER or SHORT. Declare the loop variable to be of type INTEGER or SHORT.
01029 (0405)	RETURN WITHOUT GOSUB	A RETURN statement is encountered and no GOSUB is currently active. Change the program to avoid accidentally falling into a subroutine or remove the offending RETURN.
01030 (0406)	NO RETURN	The end of program text is encountered while executing a subroutine. Add a RETURN statement.
01031 (0407)	RESUME WITHOUT ERROR	A RESUME statement is encountered while no error handling routine is being executed. Remove the RESUME statement.
01032 (0408)	NO RESUME	The end of program text is encountered while executing the error handling routine (see ON ERROR. Add a RESUME statement.
01033 (0409)	SUB WITHOUT SUBEND	Two SUB statements exist with no intervening SUBEND statement; or a SUB statement exists with no SUBEND statement prior to the end of program text. Add an appropriate SUBEND statement.
01034 (040A)	SUBEND WITHOUT SUB	A SUBEND statement occurs prior to any SUB statement.  Add the appropriate SUB statement.
01035 (040B)	SUBPROGRAM NOT FOUND	A subprogram is referenced in a CALL statement but no corresponding SUB statement is found. Change the CALL or supply the subprogram text.
01036 (040C)	MISMATCHED QUOTES	A statement or input response or data record for READ # contains a quoted string which is not enclosed in matched quotes. Re-enter the statement or input response; or correct the data record.
01037 (040D)	MISMATCHED ELSE	More ELSE's occur in a statement than IFTHEN's. Correct the program logic.
01038 (040E)	SYNTAX ERROR	The statement syntax does not match the program text. Typically, the error occurs because a keyword is mispelled, a comma (or some other punctuation) is inappropriately used or omitted, parentheses are mismatched in an expression, a function call contains extra parameters, etc. Check the manual for the specific syntax for the statement.

CODE	MESSAGE	EXPLANATION
01039 (040F)	MISSING OPERAND	A function or subprogram call requires more parameters; or an expression terminates with an operator; or a READ # statement has no semicolon and/or variable list; or a PRINT # statement has a semicolon and no print list. Correct the syntax in the statement with the error.
01040 (0410)	NUMERIC OVERFLOW	A hex or octal constant exceeds the integer value range; or the results of an arithmetic calculation exceed the allowed value range. Correct the hex or octal constant; or change the program logic to prevent exceeding the appropriate value range.
01041 (0411)	DIVISION BY ZERO	A division operation has a zero divisor. Change program logic to prevent zero divisors.
01042 (0412)	UNDEFINED LINE NUMBER	A RESTORE, GOTO, GOSUB, or RESUME statement references a line number which does not exist in the current program unit. The GOTO or GOSUB may be invoked by the ON END, ON ERROR or ON KEY statements. Supply the missing line number or correct an erroneous line number specification.
01043 (0413)	LINE ALREADY EXISTS	The AUTO command is attempting to overwrite a program line which already exists. Specify the AUTO command so that it does not overwrite already existent program text, or delete the program lines which would be overwritten prior to initiating the AUTO command.
01044 (0414)	STATEMENT MUST HAVE LINE	A statement which can be executed only as part of a program has been attempted as an unnumbered command. Execute that statement only as part of a program.
01045 (0415)	STATEMENT MUST BE DIRECT	Execution of a command which is disallowed in a program has been attempted. Remove the command from the program text.
01046 (0416)	SUBSCRIPT OUT OF RANGE	A subscript value exceeds the limits of an array dimension (which were established upon first reference to that array). Explicitly declare the array with appropriate dimensions, or change the array declaration, or change program logic to avoid exceeding the dimension limits.
01047 (0417)	DIMENSION MISMATCH	The number of dimensions in an array reference does not match the number of dimensions specified in the first reference to that array; or the number of dimensions in an array passed to a subprogram as an actual parameter does not match the number of dimensions for the corresponding formal parameter. Change any array references which specify an incorrect number of dimensions.
01048 (0418)	REDECLARED VARIABLE	A declaration statement (DIM, INTEGER, SHORT or LONG) is executed more than once; or a variable occurs in more than one declaration statement. Change program logic to avoid executing declaration statements more than once; or remove extraneous declarations or a variable.
01049 (0419)	TYPE MISMATCH	An attempt is made to assign a string value to a numeric variable or a numeric value to a string variable; or the value or variable passed to a function or subprogram is not of the required type. Change the variable specification; or change the program to pass the correct type of value or variable to a function or subprogram.
01050 (041A)	STRING TOO LONG	A string expression results in a string longer than 255 characters. Change program logic.

CODE	MESSAGE	EXPLANATION
01051 (041B)	STRING FORMULA TOO COMPLEX	The evaluation of a string expression requires more intermediate results than the BASIC Interpreter allows. Break the string expression evaluation down so that you provide your own intermediate results.
01052 (041C)	NONCONTIGUOUS STRING	The character position preceding a substring (to which a value is being assigned by a LET statement or a function) is undefined. Prevent assignments to substrings which are not immediately preceded by defined characters.
01053 (041D)	SUBSTRING DESIGNATOR ERROR	The last character position in a substring specification precedes the first character position; or the last character position in a substring specification exceeds 255. Change the substring specification.
01054 (041E)	VALUE OUT OF RANGE	A value specified for a command or function parameter lies outside the permitted range, or an octal constant digit is greater than 7. The value may be a line number, a specific type of character (e.g., letter as versus punctuation mark), an integer (frequently positive and less than 256), have a required relationship to another value, etc. For example, the NUM function returns this error if the string argument is null; and the DELETE command returns this error if the last line in the line number range precedes the first line number. Correct the command or function parameter.
01055 (041F)	VARIABLE/NAME REQUIRED	The syntax requires a variable name (as versus a constant) in a function call; or a statement must start with a variable name if it does not start with some recognized statement initiator (ie., an implied LET statement is the default statement type); or a subprogram name must follow CALL or SUB. Change the statement to provide variable or subprogram names as required.
01056 (0420)	FUNCTION USAGE ERROR	A function invocation occurs in a disallowed context; eg., as the first action in a statement, or a cursor movement function in a PRINT # statement, or a GETKBD function call prior to executing GETKBD ON. See the manual for the proper context for the function usage and correct the context.
01057 (0421)	BUFFER NOT AVAILABLE	Two different files are being accessed by READ # or ENTER statements which have not used all the contents of the last record read for each file and an attempt is made to access a third file through a READ # or ENTER statement. Restructure the file contents of the input files or change the program so that no more than two input files are actively using buffers at the same time.
01058 (0422)	BUFFER OVERFLOW	The maximum record size of 255 characters in a PRINT # statement was exceeded. Change program logic to prevent records containing more than 255 characters.
01059 (0423)	LOADER FORMAT ERROR	A record which is supposed to be in the format for the terminal's binary loader fails to match that format. Recreate the file in the binary loader format.
01060 (0424)	UNASSIGNED/DISALLOWED FILE NUMBER	A READ #, LINPUT #, or PRINT # statement is attempted for a file which has not been specified in an ASSIGN statement; or the file number in an ASSIGN statement is less than 1 or greater than 255. Add an ASSIGN statement for the file number; or change the file number.

CODE	MESSAGE	EXPLANATION
01061 (0425)	DATA INPUT MISSING	A READ, READ # or ENTER statement encounters consecutive commas in the DATA statement or the input data or the DATA statement or input data record ends with a comma. Correct the DATA statement or the input data record so that they do not end in commas and that consecutive commas do not occur.
01062 (0426)	DATA ERROR	The data in a DATA statement or in an input buffer does not match the requirements of an item in the read list of a READ, READ #, or ENTER statement. Change the data or change the read list so that the data requirements match.
01063 (0427)	OUT OF DATA	A READ is executed and all DATA statements have already been used; or a READ # statement is executed and end of file is encountered for a file for which no ON END statement was executed in the current program unit. Supply the appropriate DATA or ON END statement.
01064 (0428)	OUT OF MEMORY	Insufficient memory exists to store the program text and all variables. Use SET SIZE to obtain more BASIC workspace or shorten the program or change the program structure to require less variable storage.
01065 (0429)	FORMAT ERROR	A format specification is non-existent, or an edit symbol is undefined, or a simple replicator is used with an invalid edit symbol, or a simple replicator exceeds 255, or parentheses are mismatched, or parentheses contain no edit symbols, or a disallowed combination of edit symbols is used for one print list item. Check the edit symbol specifications in the manual and correct any misuses.
01066 (042A)	NOT IN PROGRAM BREAK	GO is attempted when program execution was not halted by a STOP statement or a CONTROL break (default CONTROL-A) or when the program text was altered after being halted by a STOP statement or a CONTROL break. Restart the program.
01067 (042B)	MULTIPLE STATEMENTS DISALLOWED	The initial entry (ie., not through GET or MERGE) of a line containing multiple statements is attempted after the SET SINGLE command has disallowed multiple statements per line. Enter the line as separate lines or specify SET MULTIPLE.
01068 (042C)	FEATURE NOT PRESENT	A statement, command, or function is referenced and the current version of BASIC does not support that operation. This may occur when trying to run a program which was saved by one version of BASIC (eg., a version of BASIC for which REMOVE STDX has not been specified) with a different version of BASIC (eg., a version of BASIC for which REMOVE STDX has been specified) which does not support the statement, command, or function referenced. Load the appropriate version of BASIC prior to loading and/or executing any BASIC operations.
01069 (042D)	NO MESSAGE FOR ERROR CODE	The error message routine is invoked (probably by the ERROR statement) and no error message text exists for the specified error code. Issue the direct statement PRINT ERRN, ERRL to determine which error code and program line caused this error message to be displayed. Add custom error message text to the ERROR statement or change the error code which is specified.

CODE	MESSAGE	EXPLANATION
1070 (042E)	NESTING EXCEEDS LIMIT	More than 255 levels of subprograms are active.
1071 (042F)	NOT ALLOWED W/SECURE PGM	Secured programs cannot be listed without the SECURE option.

# **AGL Errors**

Errors detected by AGL have decimal error codes within the range 1281-1535 (inclusive). Below is a list of all the AGL error codes. For each possible error, two codes are shown. The first is the error's five-digit decimal error code and the second (in parentheses) is the hexadecimal code for the 16-bit binary representation of that code.

#### **AGL ERROR MESSAGES**

CODE	MESSAGE	EXPLANATION
01281 (0501)	AGL ERROR 1281	Syntax error.
01282 (0502)	AGL ERROR 1282	Too many parameters.
01283 (0503)	AGL ERROR 1283	Cannot default parameter.
01284 (0504)	AGL ERROR 1284	Driver not present.
01285 (0505)	AGL ERROR 1285	Parameter out of range.
01286 (0506)	AGL ERROR 1286	Illegal action request.
01287 (0507)	AGL ERROR 1287	Cannot open new device without closing old device.
01288 (0508)	AGL ERROR 1288	No devices on.
01289 (0509)	AGL ERROR 1289	Wrong number of parameters.
01290 (050A)	AGL ERROR 1290	Null area specified.
01291 (050B)	AGL ERROR 1291	Scaling values are equal.

## **2647 DRIVER ERROR**

CODE	MESSAGE	EXPLANATION
01292 (050C)	2647 DRIVER ERROR 1292	Attempt to plot beyond limits of logical address space.

# **PLOTTER DRIVER ERRORS**

CODE	MESSAGE	EXPLANATION
01293 (050D)	PLOTTER DRIVER ERROR 1293	Instruction not recognized.
01294 (050E)	PLOTTER DRIVER ERROR 1294	Wrong number of parameters.
01295 (050F)	PLOTTER DRIVER ERROR 1295	Bad parameter.
01296 (0510)	PLOTTER DRIVER ERROR 1296	Illegal character.
01297 (0511)	PLOTTER DRIVERERROR 1297	Unknown character set.
01298 (0512)	PLOTTER DRIVER ERROR 1298	Position overflow.

# **INSTALLATION**

VII

### INTRODUCTION

This section contains installation instructions for the terminal. Also included are instructions for selecting optional ac operating voltages (115 or 230V), selecting optional operating functions, and installing terminal add-on accessories.



#### WARNING



Hazardous voltages are present inside equipment. The procedures contained in this section shall be performed only by qualified service personnel.



#### **VORSICHT**



Innerhalb des Geräts bestehen gefährliche Spannungen. Die in diesem Abschnitt enthaltenen Arbeiten dürfen nur durch Betriebsfachpersonal durchgeführt werden.



#### **ATTENTION**



Des tensions dangereuses sont présentes à l'intérieur du matériel. Les opérations décrites dans cette section ne devront être effectuées que par un personnel qualifié.



#### **AVVISO**



Pericolo: Alta tensione presente in questa apparecchiatura. Le procedure contenute in questa sezione debbono essere effettuate soltanto da qualificato personale di servizio.



## **ADVERTENCIA**



Hay voltaje peligroso en el interior de este equipo. Los procedimientos expuestos en esta sección sólo deberá llevarlos a cabo el personal de servicio calificado.



# 高圧危険



内部装置に危険な高電圧かきています。この章にある処置や手続に関しては、専門のサービスマンによってのみ行なって下さい

## **OPENING THE TERMINAL**

To gain access to the terminal internal components, open the terminal as follows (also see figure 7-1):

 Set mainframe rear panel ~ LINE switch to OFF and disconnect power cord from ~ LINE connector.

#### NOTE

Mainframe top cover is unlocked by inserting access key supplied with terminal in each of the keyways located on right and left sides of top cover. Inserting keys into keyways unlock top cover. No key rotation is required.

- b. From front of terminal, insert access key into right keyway and unlock right side of terminal by slightly raising right side of top cover. (figure 7-1, A and B).
- c. While maintaining upward pressure to keep right side of terminal unlocked, insert access key into left keyway and raise top cover until both right and left sides of terminal are unlocked. (figure 7-1, C).

d. Using both hands, carefully swing top cover up until it latches into the half open position. (figure 7-1, D).


#### NOTE

The half open position provides adequate room for performing most service routines. However, if extensive repairs are to be made or if components contained in the top cover are to be serviced, fully open mainframe in accordance with step e.


#### **CAUTION**

Mainframe top hinges are open hinge type. When fully opening terminals do not allow top hinges to slip off hinge pins.


e. Firmly grasp top cover in one hand and release safety latch (see figure 7-2) by pressing it inboard with other hand. Then, using both hands, swing top cover up and over to a full open position (resting on its top).

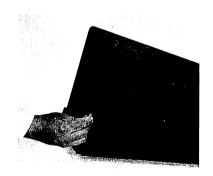

A. INSERTING ACCESS KEY INTO KEYWAY

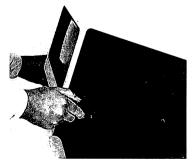


C. INSERTING ACCESS KEY INTO LEFT KEYWAY WHILE HOLDING RIGHT SIDE OPEN

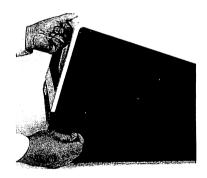

B. UNLOCKING RIGHT SIDE OF TERMINAL



D. OPENING TOP COVER TO HALF-OPEN POSITION

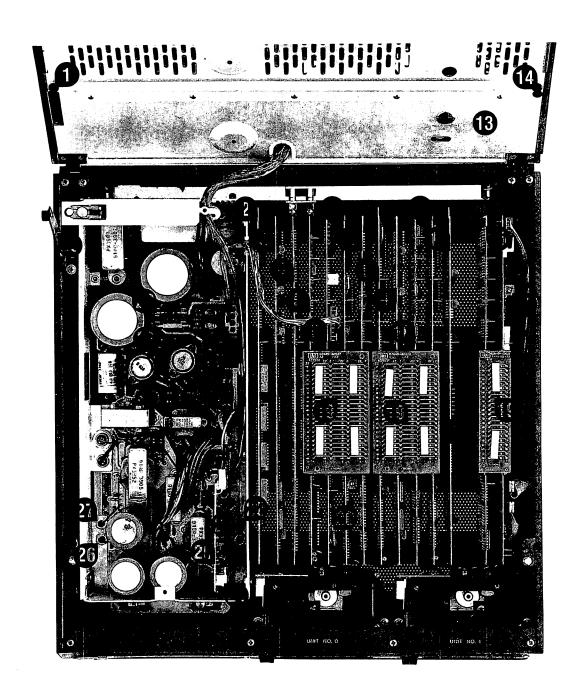

- 1 SHIELD SNAP FASTENER
  2 KEYBOARD INTERFACE PCA
  3 32K UNIVERSAL MEMORY PCA
  4 GRAPHICS MICROCONTROLLER PCA
  5 GRAPHICS DISPLAY MEMORY PCA
  6 GP DISPLAY TIMING PCA
  7 DISPLAY MEMORY ACCESS PCA
  8 DISPLAY CONTROL PCA
  9 CONTROL MEMORY PCAS
  10 PROCESSOR PCA

- 11 32K UNIVERSAL MEMORY PCA (CONNECTED TO TOP PLANE CONNECTOR)
  12 ASYNCHRONOUS DATA COMM PCA

- 12 ASTNO-HONOUS DATA C 13 CRT SHIELD 14 SHIELD SNAP FASTENER 15 CTU INTERFACE PCA 16 READ/WRITE PCA

- 17 SPEED ADJUSTMENT
- 18 OPTION SLOT
  19 TOP PLANE CONNECTORS
- 20 CRYSTAL Y1

- 21 CTU TRANSPORT ASSYS 22 -42V TEST POINT 23 +12V TEST POINT

- 24 +5V ADJUSTMENT
  25 POWER SUPPLY CONTROL PCA
  26 -12V TEST POINT
  27 +5V TEST POINT
  28 POWER SUPPLY FUSES

- 29 SAFETY LATCH

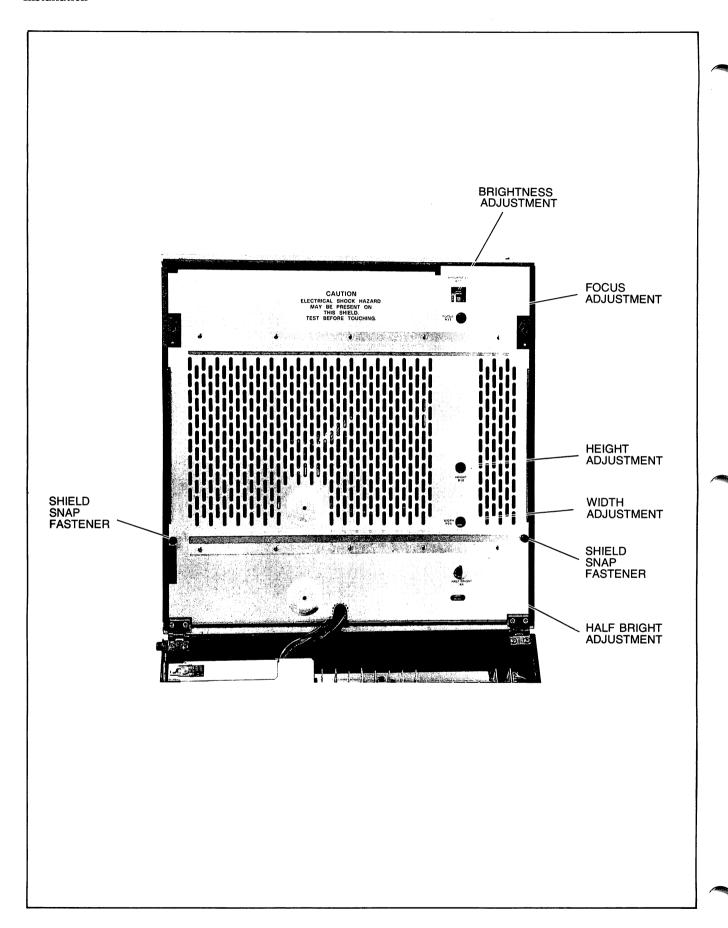


Figure 7-3. Mainframe Top Part Locations

#### **GROUNDING REQUIREMENTS**

To protect operating personnel, the National Electrical Manufacturers' Association (NEMA) recommends that the terminal's frame be grounded. The terminal is equipped with a three-conductor power cable which, when connected to an appropriate power receptacle, grounds the frame of the terminal. To preserve this protection feature, do not operate the terminal from an ac power outlet with no ground connection.

# **SELECTING LINE VOLTAGE**

The terminal can be operated from either 115 or 230V, 60 Hz line voltage (230V, 50 Hz optional). When shipped from the factory, the line voltage for which the terminal is configured is stamped on the mainframe rear panel identification label. If it is necessary to change the operating line voltage, ensure that power cord is disconnected and proceed as follows:

1.() Open terminal to its half open position in accordance with "Opening the Terminal" paragraph.

- 2. () Remove power supply cover by removing the screw at the front of the cover and pulling the cover up and out of the mainframe.
- 3. ( ) Select the operating voltage by inserting the proper fuses into the appropriate locations shown in figure 7-4. For 115 volts, use a 0.5A, SB, 250V fuse and a 4A, SB, 250V fuse. For 230 volts, use a 0.20A, SB, 250V fuse and a 2A, SB, 250V fuse.
- 4. ( ) If changing from 60 Hz to 50 Hz operation or vice versa, ensure that crystal Y1 on the Display Timing PCA (figure 7-2) is changed. For 60 Hz operation, use a 21.06 MHz crystal (part no. 0410-0647) and for 50 Hz operation, use a 17.55 MHz crystal (part no. 0410-0646).
- 5. ( ) Check and, if necessary, adjust power supply in accordance with "Power Supply Adjustment".
- 6. ( ) Replace power supply cover, and secure in place with the screw.
- 7.() Firmly grasp mainframe top cover in one hand and release safety latch by pressing it inboard with other hand. Then, using both hands, carefully lower top cover to its closed position.
- 8. ( ) Perform terminal self-test (refer to "Self-Test").

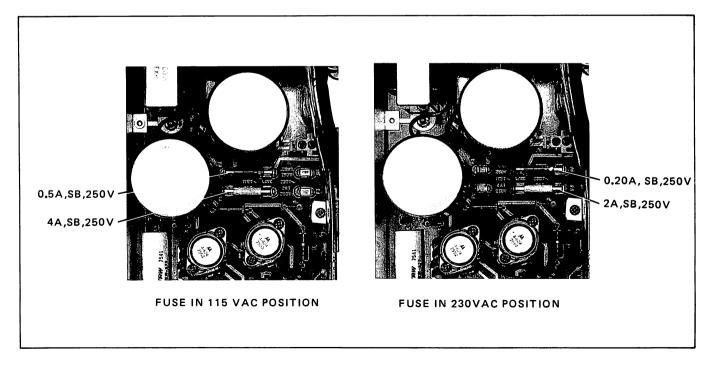


Figure 7-4. Fuse Positions for 115 VAC and 230 VAC Line Voltage

# ACCESSORY INSTALLATION PROCEDURES

Instructions for installing add-on accessories to the standard model terminal are contained in the following paragraphs. Refer to figures 1-1 and 7-2 for typical PCA configurations.

#### NOTE

After installing any accessory, always use the terminal self-test feature (refer to "Self-Test") to ensure proper operation.

# **HP 13231A Display Enhancements**

These instructions apply to the HP 13231A-201, HP 13231A-203 accessories as well as the HP 13231A accessory. The HP 13231A accessory consists of a Display Enhancement PCA, part no. 02640-60024; a four-wide Top Plane Connector Assembly, part no. 02640-60022; a five-wide Top Plane Connector Assembly, part no. 02640-60016; a Line Drawing set ROM IC, part no. 1816-0641; and a Connector Removal Tool, part no. 02640-00029. The HP 13231A-201 and -203 accessories consist of the same five items with the applicable ROM IC's mounted on the Display Expansion PCA. Install any of these accessories as follows:

The alternate character sets are configured with jumpers located on the upper right corner of the Display Enhancement PCA. There are six jumpers, two for each of the three possible alternate character sets. Jumpers 1 and 2 are for alternate character set 1 (referred to as set A in the User's Manual), jumpers 3 and 4 are for alternate character set 2 (set B in the User's Manual), jumpers 5 and 6 are for alternate character set 3 (set C in the User's Manual).

The first jumper for each set (jumpers 1, 3, and 5) indicates whether the set is composed of 128 (jumper in) or 64 (jumper out) characters. The second jumper for each set (jumpers 2, 4, and 6) indicates whether the character set data is in alphanumeric (jumper in) or microvector (jumper out) format. A detailed description of data formats for alternate character sets is given in the application note: 2640 Series Character Set Generation (part number 13245-90001).

When using the three standard alternate character sets (Math Set, Line Set and Large Character Set) the jumpers would normally be configured as follows:

Math Set (placed in the first socket of set 1)

Jumper 1 = Out, since only 64 characters are used.

Jumper 2 = In, since character data is in alphanumeric format.

Line Set (placed in the first socket of set 2)

Jumper 3 = Out, since only 64 characters are used.

Jumper 4 = Out, since character data is in microvector form.

Large Character Set (placed in the first select of set 3)

Jumper 5 = Out, since only 64 characters are used.

Jumper 6 = Out, since character data is in microvector form.

Note that the Math Set has been shown as alternate character set 1 (A in the User's Manual), the Line Set as alternate 2 (B in the User's Manual), and the Large Character Set as alternate 3 (C in the User's Manual). They could have been configured as any combination of the three possible alternate sets. There is no requirement that the sets be configured in any order.

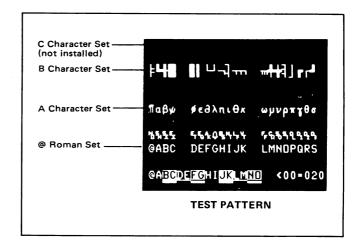


Figure 7-5. Sample Character Set Configuration

#### NOTE

Do not confuse the 128/64 character jumpers for alternate character sets with the 128 character jumper for the standard character set.

#### EFFECT OF IMPROPER JUMPER PLACEMENT.

128 Characters Strapped for 64. When a 128 character set is used and is jumpered for 64 characters, only the first 64 characters in the set will be accessed. This will cause the "q" character for example to access the same display character as the "Q" character.

64 Characters Strapped for 128. Any attempt to access one of the lower case 64 characters ("a", "q", etc.) will result in a blank being displayed.

ALTERNATE 128/64 (JUMPER IN/JUMPER OUT) SET CHARACTERS		ALPHANUMERIC/MICROVECTOR (JUMPER IN/JUMPER OU CHARACTER DATA				
Α	JUMPER 1	JUMPER 2				
В	JUMPER 3	JUMPER 4				
С	JUMPER 5	JUMPER 6				

Table 7-1. Display Expansion PCA Jumper Protocol

Alphanumeric Data Strapped as Microvector. Alphanumeric data strapped as microvector will normally result in characters that are skewed or fuzzy.

Microvector Data Strapped as Alphanumeric. Microvector data strapped as alphanumeric will display blanks for the microvector characters.

#### INSTALLATION PROCEDURE

 Using figure 7-6 and table 7-1 as a guide, check that Display Expansion PCA jumpers are arranged correctly for the ROM character set configuration. If there are no alternate character set ROM's installed (HP 13231A), all jumpers should be in the jumper socket.

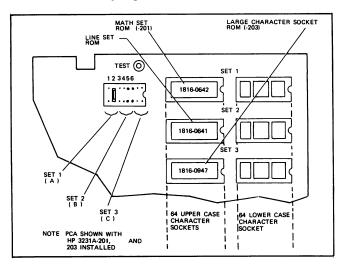


Figure 7-6. Display Enhancement PCA Jumper and ROM Socket Locations

- 2. ( ) Open terminal to its half open position (refer to "Opening the Terminal").
- 3. ( ) Insert connector removal tool under the Top Plane Assembly which connects the display PCA's together (see figure 7-2) as shown in figure 7-7.
- () Remove Top Plane Assembly by pressing down on connector removal tool handle. Retain Top Plane Assembly for possible future use.

5. () Rearrange the PCA's in the Backplane Assembly so that the Display Enhancement PCA is adjacent to the Display Memory Access (DMA), Display Control, Display Timing, and Graphics Display PCA's.

#### NOTE

The 13231A Display Enhancement accessory is not normally present in graphics terminals because the two available PCA slots are used for data communications and peripheral interfacing. However, either the data communications PCA or the peripheral interface PCA may be removed to accommodate the display enchancement accessory.

PCA arrangement can be in any configuration with the following exceptions. The Keyboard Interface and data communications PCA's should be installed in one of the first three Backplane Assembly connectors closest to the power supply.

The Display Enhancement, DMA, Display Control, Display Timing, and Graphics Display PCA's must always be installed as a group in adjacent connectors. No Backplane Assembly connectors can be left vacant between any PCA's. In addition, the Processor PCA must be installed adjacent to the display PCA's described previously.

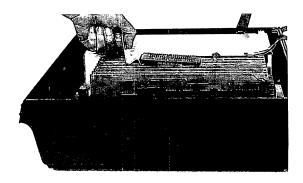


Figure 7-7. Top Plane Assembly Removal

#### Installation

- 6. ( ) Install five-wide Top Plane Connector Assembly, part no. 02640-60016 on Display Enhancement, DMA, Display Control, Display Timing, and Graphics Display PCA connectors.
- 7. () Check and, if necessary, adjust power supply (refer to "Power Supply Adjustment").
- 8. ( ) Depress TEST key and observe last line of test pattern for correct display enhancement (inverse video, half-bright, underline, etc.). If enhancements are correct skip to step 10. If adjustment is necessary, perform step 9.
- 9. ( ) Perform brightness, half bright, focus, and field adjustments in accordance with the *HP Terminal* Service Manual.
- 10. () Firmly grasp mainframe top cover in one hand and release safety latch by pressing it inboard with other hand. Then, using both hands, carefully lower top cover to its closed position.

#### **HP 13232 Cable Assemblies**

The HP 13232 cable assemblies provide interface connections between the terminal and modems, printers, and computers. Table 7-2 below lists the particulars of each cable.

CONNECTORS CABLE HOOKUP **FUNCTION** C LENGTH RS232 13232A Connects data commu-Hood 4.57 Metres В nications interface PCA (male) 15 feet 13232A modem 103/202 (Cable part no. 02640-60043.) 13232B Connects 12531/12880 Hood Hood 15.25 Metres В teleprinter interface 50 feet 13232B PCA to terminal. (Cable part no. 02640-60058.) 13232C Connects data commu-RS232C 1.52 Metres Hood nications interface PCA (female) 5 feet 13232C to RS232 connector. (Cable part no. 02640-60059.) 13232F 1.52 Metres Provides current loop 4 terminal Hood connections for 13260B 5 feet lugs 13232F data communications interface. (Cable part no. 02640-60097.) 13232G Connects 13250A Serial RS232C 4.57 Metres Hood Printer Interface to RS232 15 feet (male) compatible printers. (Cable part no. 02640-13232G/H 60098. PRINTER

4.57 Metres

15 feet

Table 7-2. 13232 Cable Assemblies

13232H

Same

60099.)

as

(Cable part no. 02640-

13232G.

RS232C

(female)

Hood

Table 7-2. 13232 Cable Assemblies (Continued)

	CONNECTORS				nes (Continued)	
CABLE	FUNCTION	A	B	С	LENGTH	ноокир
13232J	Connects 13238A Duplex Register PCA to 9871A Printer. (Cable part no. 02640-60116.)	9871A printer (female)	Hood	_	1.83 Metres 6 feet	9871A PRINTER A 13232J
13232K	Connects 13254A Video Interface PCA to Tek- tronix 4632/7 Video Copier. (Cable part no. 02640-60120.)	RS232 (male)	Hood	-	4.57 Metres 15 feet	TEKTRONIX 4632/7 B
13232L	Connects 13254A Video Interface PCA to Conrac Monitor. (Cable part no. 02640-60121.)	BNC	Hood	_	7.61 Metres 2.5 feet	CONRAC MONITOR A 13232L
13232N	Connects data communications interface PCA to modem. (Cable part no. 02640-60131.)	RS232C (male)	Hood	_	4.57 Metres 15 feet	MODEM 13232N B
13232P	Connects 13260C or 13260D data communication interface PCA to modem in multipoint configurations. (Cable part no. 02640-60132.)	RS232C (male)	Hood	Multipoint (female)	4.57 Metres 15 feet (each leg)	MODEM 13232P B
13232Q	Connects 13260C or 13260D data communications interface PCA to other terminals in downstream multipoint configuration. (Cable part no. 02640-60133.)	Multipoint (male)	Hood	Multipoint (female)	4.57 Metres 15 feet (each leg)	TO TERMINAL UPSTREAM  TO TO TERMINAL TO TERMINAL
13232R	Provides 100-foot extension to 13232P, Q, T, multipoint cables. (Cable part no. 02640-60134.)	Multipoint (male)	Multipoint (female)	Multipoint (female)	30.5 Metres 100 feet	DOWNSTREAM  13232P, Q or T  13232P, Q or T
13232\$	Connects 13238A Duplex Register PCA to 9866A/B Printer. (Cable part no. 02640-60135.)	9866 printer (female)	Hood	_	1.83 Metres 6 feet	9866A B PRINTER B
13232T	Provides power-down protection for a terminal in multipoint configuration. (Cable part no. 02640-60151.)	Multipoint (male)	Hood	Multipoint (female)	4.57 Metres 15 feet (each leg)	TO TERMINAL UPSTREAM  C TO TERMINAL DOWNSTREAM
13232U	Provides direct connection to a computer by replacing the modem connections. (Cable part no. 5060-2403.)	RS232C (female)	RS232C (female)	_	1.52 Metres 5 feet	13232N

# 32K RAM Memory PCAs

The HP 2647A in its standard configuration includes two 32K RAM memory PCAs, one (used for BASIC program storage) is accessed via the top plane and the other (used for display memory) via the bottom plane. Figure 7-8 illustrates how these two PCAs should be strapped.

# 32K Control Memory PCAs

Figure 7-9 illustrates how the two Control Memory PCAs should be strapped and figure 7-10 illustrates a typical memory map for the HP 2647A terminal.

#### NOTE

All straps on the Processor PCA must be closed for the terminal to function properly.

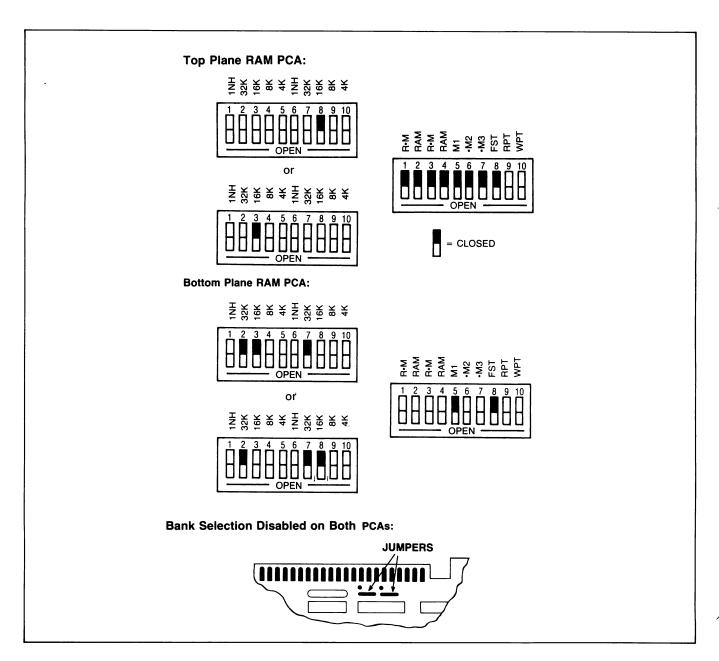


Figure 7-8. 32K RAM PCA Jumper Settings

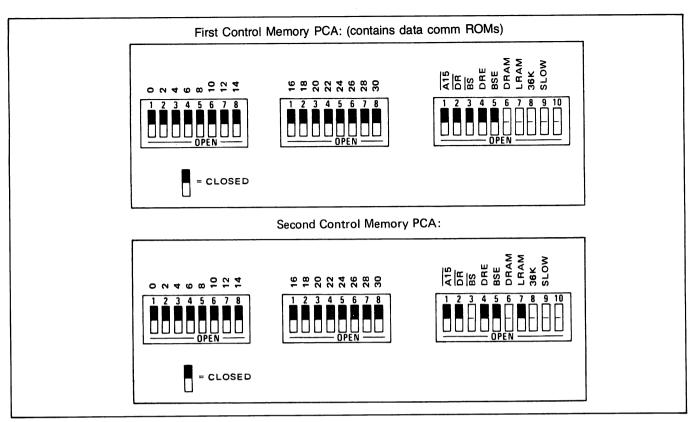


Figure 7-9. Control Memory PCA Jumper Settings

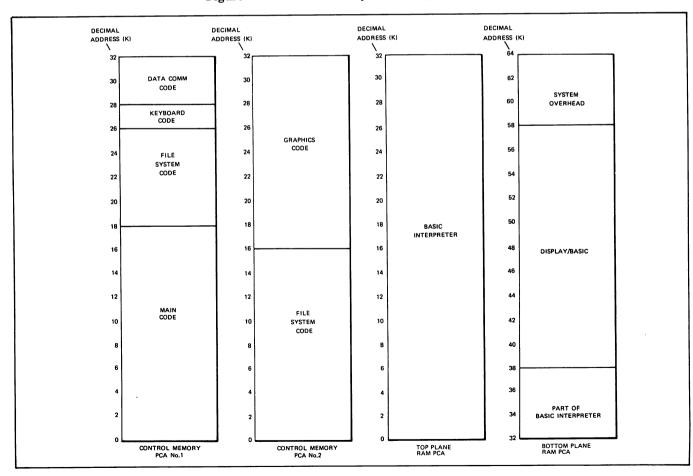


Figure 7-10. Typical Memory Map

# **HP 13238A Terminal Duplex Register**

The HP 13238A Terminal Duplex Register accessory provides 8-bit parallel interface to external printers (such as the HP 9866A/B Printer and the HP 9871A Printer). (For peripheral sharing networks, refer to the "HP 13296A Shared Peripheral Interface".)

To install the HP 13238A accessory, perform all the following steps except steps 4 and 5.

- 1. ( ) Open terminal to its half open position (refer to "Opening the Terminal").
- 2. ( ) Configure jumpers in Terminal Duplex Register PCA jumper sockets as shown in figure 7-11.
- 3. ( ) Install Terminal Duplex Register PCA in first vacant Backplane Assembly connector adjacent to existing PCA's.

#### NOTE

To ensure proper terminal operation, all PCA's must be installed in adjacent Backplane Assembly connectors. There should never be vacant connectors between PCA's except for the two CTU PCA's (Read/Write PCA and CTU Interface PCA) which can be separated from the others.

- 4. ( ) Open mainframe rear door by twisting two lock extrusions.
- 5. ( ) Holding Terminal Duplex Register PCA firmly in place, carefully connect hood connector of the cable assembly, supplied with the printer subsystem, to PCA connector P2.

#### NOTE

The hood connector and PCA connector P2 are identically keyed to prevent inadvertant erroneous connections. Connecting the two together requires minimal hand pressure. If excessive resistance is encountered, an incorrect connection is being attempted.

For printer interfacing information refer to the HP 9866A/B Printer Operator's Manual, part no. 09866-90901, or the HP 13349A Printer Subsystem Operating Manual, part no. 13349-90901.

- 6. ( ) Check and, if necessary, adjust power supply (refer to "Power Supply Adjustment").
- 7. () Firmly grasp mainframe top cover in one hand and release safety latch by pressing it inboard with other hand. Then, using both hands, carefully lower top cover to its closed position.

# HP 13246A/B Printer Subsystem (9866)

This accessory provides alphanumeric output and consists of a Terminal Duplex Register PCA, part no. 02640-60031; a 13232S Cable Assembly, part no. 02640-60135; and an HP 9866A or B Printer. To install this accessory, first perform the HP 13238A Terminal Duplex Register installation instructions steps 1 through 7. After the PCA and cable assembly have been installed, install the printer in accordance with the instructions contained in the HP 9866A/B Printer Operator's Manual, part no. 09866-90901.

## **HP 13250B Serial Printer Interface**

The HP 13250B provides an RS232C interface to serial printers for alphanumeric output. You can configure the 13250B to be compatible with many RS232 serial printers requiring handshake or full-character protocol. For details on configuring and installing the interface, refer to the HP 13250 accessory manual, part no. 02640-90042.

#### **HP 13254A Video Interface**

The 13254A consists of a Video Interface PCA, part no. 02640-60019, and a Sweep Extender Cable, part no. 02640-60122. This accessory is used to link the terminal to a compatible video monitor or hard copy device. The accessory requires one option slot. Detailed installation and operating information is contained in the 13254A Accessory Manual, part no. 13254-90001.

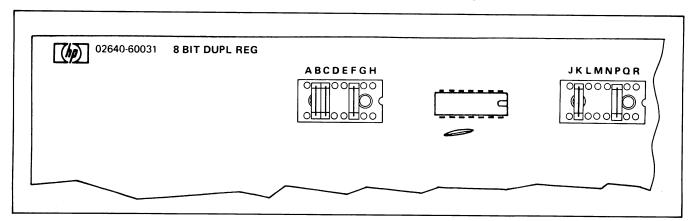


Figure 7-11. Terminal Duplex Register PCA Jumper Configuration

# **HP 13260A,B,C,D Data Communications Accessories**

The HP 13260A,B,C,D Data Communications Accessories provide various types of data communications from teletypewriter compatible data communications to asynchronous or synchronous multipoint polling. (Refer to Section V for details of these accessories.) Only one data

communications interface may be installed in the terminal at any time. Each accessory consists of the items listed in table 7-3.

#### CAUTION

MOS integrated circuits can be damaged by electrostatic discharge. Use the following precautions:

Table 7-3. Contents of 13260 Data Communications Accessories

		PART NUMBERS				
ITEM	13260A-006 13260B-006		13260C-006	13260D-006		
Interface Printed Circuit Assembly	02640-60086	02640-60143	-02640-60106	02640-60107		
ROM IC's	1818-0600	1818-0600	1818-0628 (std only) 1818-0614 (opt 007 only) 1818-0629	1818-0628 (std only) 1818-0614 (opt 007 only) 1818-0629		
Baudrate Label	7120-6388	7120-6388	7120-6386	7120-6386		
Cable		02640-60083	02640-60083	02640-60083		
Switch Cover			4040-1356	4040-1356		

DO NOT wear clothing subject to static charge buildup, such as wool or synthetic materials.

DO NOT handle MOS circuits in carpeted areas.

DO NOT remove the circuit from its conductive foam pad until you are ready to install it.

AVOID touching the circuit leads. Handle by the plastic package only.

ENSURE that the circuit, work surface (table, desk, etc.) and PCA are all at the same ground potential. This can be done by touching the foam pad to the PCA and then touch the foam pad, circuit, and PCA to the work surface.

- 1. ( ) Perform complete terminal SELF TEST (refer to "Self-Test") to verify proper terminal operation before installing the accessory.
- Turn off ~ LINE switch at rear of terminal and disconnect power cord.

- 3. ( ) Open terminal as described in "Opening the Terminal."
- 4. ( ) The two Control Memory PCAs (part no. 02640-60221) look identical except for their jumper settings. Using figure 7-9 as a guide, locate the first Control Memory PCA.
- 5. ( ) Insert connector removal tool under Top Plane Assembly as shown in figure 7-7, and remove Top Plane Assembly by pressing down on connector removal tool handle.
- 6. ( ) Remove the first Control Memory PCA.
- 7. () Remove IC's, if present, from DATA COMM sockets A28 and A30 of Control Memory PCA (see figure 7-12).
- 8. ( ) Carefully unpack and inventory 13260 accessory parts per table 7-3 above.
- 9. ( ) Carefully insert ROM(s) contained in accessory package into DATA COMM socket(s) so that ROM pin 1 is at upper right corner of socket (see figure 7-12). Also, be sure that the switches on the PCA are set to the positions shown in figure 7-9.

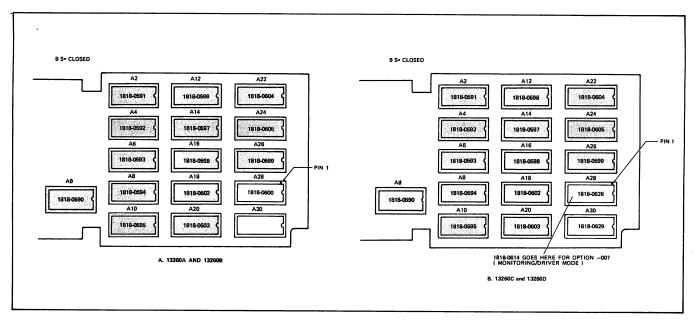


Figure 7-12. Control Memory PCA Data Comm Firmware IC Locations

- 10. ( ) Reinstall Control Memory PCA into backplane assembly connector from which it was removed.
- 11. ( ) Reinstall Top Plane Assembly on Processor and Control Memory PCA's top connectors.
- 12. ( ) Configure the 13260B,C, or D Interface PCA's for your particular application by setting the switches on the PCA. (Refer to "Selecting Optional Operating Functions", page 7-17.)
- 13. ( ) Install the Interface PCA in the first vacant backplane assembly connector adjacent to existing PCA's. For 13260C/D installation, connect ground cable assembly (part no. 02640-60083) between power supply chassis ground and PCA ground connector lug.

#### NOTE

To ensure proper terminal operation, all PCA's must be installed in adjacent Backplane Assembly connectors. There should never be vacant connectors between PCA's except for the two CTU PCA's (Read/Write PCA and CTU Interface PCA) which can be separated from the others.

- 14. ( ) Open mainframe rear door by twisting the two lock extrusions.
- 15. () Holding the communications interface PCA firmly in place, carefully connect Test Connector Assembly, part no. 02645-60002 (supplied with the terminal) to PCA, and perform the DATA COMM SELF-TEST to verify proper operation of the PCA (refer to "Data Communications Self-Test"). After self test is performed, remove the Test Connector Assembly.

16. () Holding the communications interface PCA firmly in place, carefully connect hood connector of a 13232C, F,N,P,Q, or T Cable Assembly to PCA. For cabling information, refer to "HP 13232 Cable Assemblies" and "Data Communications Cabling."

#### NOTE

The hood connector and PCA connector P2 are identically keyed to prevent inadvertant erroneous connections. Connecting the two together requires minimal hand pressure. If excessive resistance is encountered, an incorrect connection is being attempted.

- 17. ( ) Install baudrate switch overlay and keyboard overlay as shown in figure 7-13.
- 18. ( ) Firmly grasp top cover in one hand, and release safety catch by pressing it inboard with your other hand. Then, using both hands, carefully lower top cover to its closed position.

# HP 13296A Shared Peripheral Interface

This accessory provides the means of communicating between your terminal and various external devices using the Hewlett-Packard Interface Bus (HP-IB) as prescribed in the IEEE Standard Document 488-1975.

The HP 13296A accessory includes the following items:

- 1. An HP-IB Interface PCA (part no. 02640-60128).
- 2. An HP-IB Interface Adapter (part no. 02640-60215).
- A 2-meter HP-IB interconnecting cable (part no. 8120-1834).

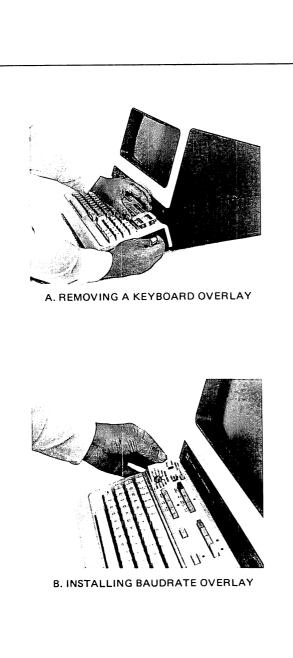




Figure 7-13. Installing Keyboard Overlays

To configure and install this accessory, proceed as follows:

- 1. ( ) Using table 7-4 as a guide, set the switches on the interface PCA to the appropriate positions.
- 2. ( ) Open the terminal to its half open position (refer to "Opening the Terminal").
- 3. () Install the PCA in the third slot from the power supply to allow room for installing the HP-IB Interface Adapter. This will require you to move all existing PCA's (in the third through twelfth slots) one slot position to the right to make room for the HP-IB PCA.
- 4. ( ) Holding the HP-IB Interface PCA firmly in place, carefully connect the hood connector of the HP-IB Interface Adapter to PCA connector P2.

#### Note

The hood connector and PCA connector P2 are identically keyed to prevent inadvertent erroneous connections. Connecting the two together requires minimal hand pressure. If excessive resistance is encountered, an incorrect connection is being attempted.

5. ( ) Firmly grasp mainframe top cover in one hand and release safety latch by pressing it inboard with your other hand. Then, using both hands, carefully lower top cover to its closed position.

To configure the HP-IB compatible devices (such printers, plotters, etc.) in the network, refer to section VIII, "HP-IB Configurations".

Table 7-4. HP-IB Interface Switch Settings

SWITCH(ES)	SETTING(S)	SWITCH(ES)	SETTING(S)					
A4, A11, A10, A9	These four switches specify the PCA module address and must be set as follows:		Decimal Address	B4	В3	B2	В1	ВО
	A4 A11 A10 A9		8 9	C	0	C	C	С О
	Closed Open Closed Closed		10 11	C	0	C	0	C O
PL6 through PL0	These seven switches are reserved for future use. PL6 should be set to the closed position and switches PL5 through PL0 should be set to the open position.		12 13 14 15	C C C C O	0 0 0 0 0	00000	00000	C O C O C
ATN, ATN2	These switches are reserved for future use and should be set to the open position.		17 18 19 20 21	0000	00000	00000	C O O C C	0 0 0 0
FC, and TA	These two switches are reserved for future use and should be set to the closed position.		22 23 24 25	0 0 0	C C O O	0 0 0 0	0 0 0 0	C O C O
LA	This switch should be set to the open position to indicate the presence of the HP-IB Interface PCA.		26 27 28 29	0 0 0	0 0 0	C C O O	0 0 0	C O C O
B4 through B0	These five switches specify the HP-IB address of your terminal. The device addresses 0-7 are reserved for peripheral devices (plotters and prin-		wł	nere O C	= sw = sw			
	ters) while the device addresses 8-29 may be assigned to terminals. Toachieve the most efficient operation, it is recommended that the addresses for a terminal cluster start at 29 and work their way down sequentially. The terminal which is assigned as the System Controller of the HP-IB (see switch SC below) must, however, be assigned the lowest device address of all the terminals in the shared peripheral configuration. The switch settings for the various terminal HP-IB addresses are as follows:	SC	This switch determines whether or nyour terminal will be the System Cotroller of the HP-IB (remember that the System Controller must have the lovest device address of all the termina in the shared peripheral configuration. One, and only one, terminal in the shared peripheral configuration must be assigned as the System Controller.				Con- at the low- inals tion). the must	

# HP 13349A Printer Subsystem (9871)

This accessory provides alphanumeric output and consists of a Terminal Duplex Register PCA, part no. 02640-60031; an Interface Cable Assembly, part no. 02640-60116; and an HP 9871A Printer. To install this accessory, first perform the HP 13238A Terminal Duplex Register installation instructions steps 1 through 7. After the PCA and cable assembly have been installed, install the printer in accordance with the instructions contained in the HP 13349A Printer Subsystem Operating Manual, part no. 13349-90901.

# **Power Supply Adjustment**

After installing or removing accessories, you should adjust the +5 volt output of the terminal's power supply. Only this voltage need be adjusted because the +5 volts provides reference for the other supply voltages. The adjustment requires a 20,000 ohms/volt voltmeter.

To adjust the +5V, proceed as follows:


- Open the terminal, and remove power supply cover.
- 2. ( ) Turn on ac power to terminal, and ensure that neither cartridge tape transport motor is running (if installed).
- 3. () Check the voltages at the following points with the multimeter. (See figure 7-2.)

TEST POINT	VOLTAGE TOLERANCE
+ 5V diode	+4.85V to +5.25V
-42V diode	-40V to -46V
+12V diode	+11.8V to +12.6V
-12V diode	-11.8V to -12.6V


- 4. ( ) Adjust +5 volt potentiometer until all voltages are within tolerance.
- 5. ( ) When all voltages are within tolerance, turn off power, disconnect multimeter, and replace power supply cover.

# SELECTING OPTIONAL OPERATING FUNCTIONS


The terminal is equipped with jumper and switch selectable options that can be used to alter some of its operating functions (see figure 7-14). These options and their effects on terminal operation are discussed in tables 7-5 through 7-9. To select an operating function, proceed as follows:

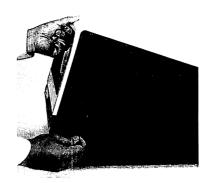


1. ( ) Open the terminal to its half open position (refer to "Opening the Terminal").

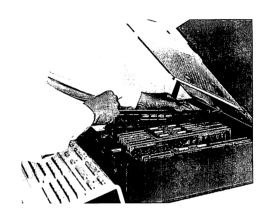


- 2. ( ) Locate the particular PCA, and remove the cable hood connector from the PCA. Then, remove the PCA from the Backplane Assembly connector.
- 3. () Using figure 7-15, 7-16, 7-17, or 7-18 (as applicable) and table 7-5, 7-6, 7-7, 7-8, or 7-9 (as applicable), select the desired operating functions, and set the switches to the appropriate positions. (More information on configuration is given in Section V.)

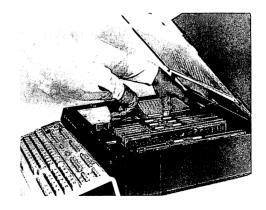

4. () Reinstall the PCA into the vacated Backplane Assembly connector.

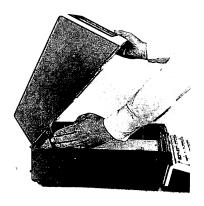

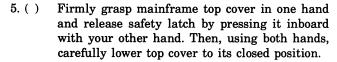



6. ( ) Perform SELF-TEST (refer to "Self-Test").

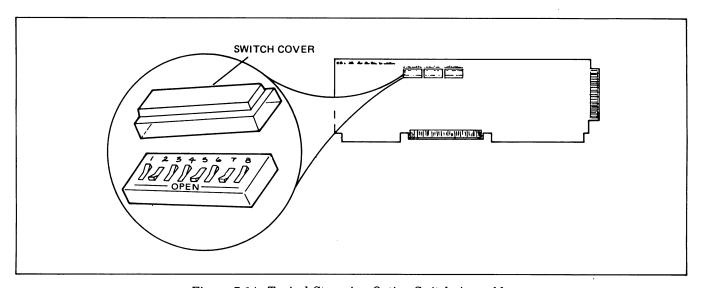


Figure 7-14. Typical Strapping Option Switch Assembly

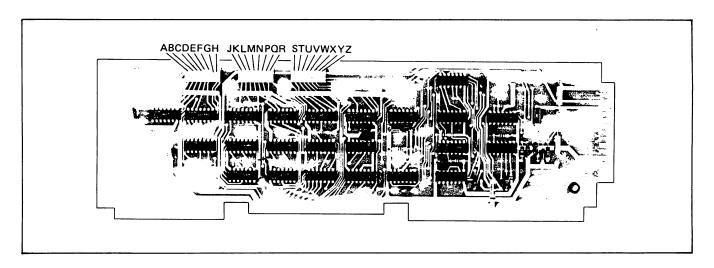


Figure 7-15. Keyboard Interface PCA Strapping Options

Table 7-5. Keyboard Interface PCA Strapping Options for Point-to-Point

STRAP	STRAPPING OPTION	NORMAL OPERATION (SWITCH CLOSED)	OPERATION WITH STRAPPING OPTION (SWITCH OPEN)
Α	Function Key Transmission	The escape code sequence generated by the major function keys (such as, ROLL UP, ROLL DOWN, etc.) are executed locally, but not transmitted to the computer.	The escape code sequences generated by all keys are transmitted to the computer. If operating in half duplex, the function is also executed locally.
В	Space Overwrite (SPOW) Latch Enable	Spaces typed will overwrite existing characters.	When the SPOW latch is off, overwriting occurs as normal. When the SPOW latch is on, spaces cause the cursor to move forward but not overwrite any existing characters. The SPOW latch is turned on by a Carriage Return, and off by a Line Feed, Home or Tab.
С	Cursor End-of-Line Wraparound	At the end of each line, a local Carriage Return and Line Feed are generated; the cursor moves to the beginning of the next line.	A Carriage Return and Line Feed are not generated at the end of each line. The cursor remains in and overwrites column 80.
D	Line/Page	The terminal is set to transfer a line at a time in Block Mode.	Entire pages of information are transferred in Block Mode.
E	Paper Tape Mode	When the key is pressed with key latched down, each tape record begins with an le and is terminated by by a sa.	Each tape record is terminated by %-1.
F	Fast Binary Read	The transmission rate is determined by the BAUD RATE switch on the keyboard.	When an te (Fast Binary Read) is issued by the computer, the baud rate is switched automatically to 9600 baud (if the terminal is equipped with cartridge tape units).
G	Block Transfer Handshake	In Block Mode, all data transfers to the computer are sent upon receipt of a DC1 from the computer.	All Block Mode transfers (i.e., cursor sense, terminal and device status, device I/O responses, display memory, and function keys) are preceded by a DC2. The terminal sends the DC2 upon receipt of a DC1 from the computer. After the CPU receives the DC2 from the terminal, another DC1 is required to trigger transmission of data from the terminal.
н .	Inhibit DC2	During Block, Mode Handshake transfers, the terminal sends a DC2 in response to a DC1 prior to sending data. (See Block Transfer Handshake strapping above.)	A DC1 from the computer is not required to trigger data transfers to the computer. Also, the DC2 from the terminal is not sent during Block Mode Transfer handshakes. (See Block Transfer Handshake strapping above.) Additionally, when the Guille key is pressed in Block Mode the cursor will be placed in the first column before transmission occurs if operating in Line/Field Mode (switch D closed) or Home'd if operating in Page Mode (switch D open.) Opening both switches G and H eliminate the terminal's use of the Handshake protocol entirely.
J	Auto Terminate	No effect.	When in BLOCK mode and the ENTER key is pressed, places a non-displaying terminator before the cursor position.
К	Clear Terminator	No effect	Clear terminator caused by Strapping Option J or
L	Self Test Inhibit	No effect.	Self Test function is inhibited. Pressing TEST key or issuing & z displays the NO TEST message. TAPE TEST and DATA COMM SELF TEST functions are not affected.
М	INSERT and DELETE CHAR with wrap (Reverse Sense)	No effect.	Reverses effect of key on INSERT CHAR and DELETE CHAR keys (i.e., when key is pressed, line wrap around is in effect without having to press CNTL key. When either key is pressed while pressing CNTL, normal insert character and delete character functions are in effect.)

Table 7-5. Keyboard Interface PCA Strapping Operations for Point-to-Point (Continued)

STRAP	STRAPPING OPTION	NORMAL OPERATION (SWITCH CLOSED)	OPERATION WITH STRAPPING OPTION (SWITCH OPEN)
N	Escape Code Transfer to Printer	No effect.	Escape codes relating to the display (e.g., display enhancements, alternate character sets, format mode, fields, etc.) are sent to printer if it is selected as a destination device.
P,Q	Compatibility Mode	These switches set the terminal to be compatible with Tektronix control commands when initialize (power on or full reset).	
		P-closed, Q-closed	Normal operation
		P-closed, Q-open	Unscaled Compatibility Mode and 2048 byte data comm buffer.
		P-open, Q-closed	Scaled Compatibility Mode and 2048 byte data comm buffer.
		P-open, Q-open	2048 byte data comm buffer.
R	Circuit Assurance	The transition from receive state to transmit state occurs after both CB (106) (Clear to Send) and SB (122) (Secondary Receive Data) go on within 2.6 seconds. Otherwise, the terminal returns to the receive state.	The transition from receive state to transmit state occurs after CB (106) (Clear to Send) goes on.
S,T Main Channel Pr	Main Channel Protocol	Reverse Channel protocol (both switches closed).	S-closed, T-open: Main channel with STX/ETX as Start of Data and End of Data.
			S-open, T-closed: Main channel with EOT as End of Data.
			S-open, T-open: Main channel with ETX as End of Data.
U	CPU Break	The CPU can interrupt the terminal while it is in the transmit state. The CPU initiates an ON to OFF transition of the SB(122) (Secondary Receive Data) line. The terminal responds by turning off CA (106) (Request to Send) and going to the receive state.	The terminal ingores all transitions on the SB (122) (Secondary Receive Data) line from the modem in the transmit state.
V	Carrier Detect	When the terminal is in the receive state, an ON to OFF transition of CF (109) (Carrier Detect) line from the modem causes the terminal to go into the transmit state. Transitions of CF have no effect while the terminal is in the transmit state.	Transitions of CF (109) (Carrier Detect) line have no effect on the terminal.
w	Data Comm Self Test Enable	Enables DATA COMM SELF TEST from either the keyboard or escape sequence.	Disables DATA COMM SELF TEST. If self test is attempted (by either the keyboard or escape sequence), the test will be aborted and ERROR 0 will appear on the display.
х	Data Speed Select	Holds data speed signal low (CH (111) = 0).	Sets data speed signal high (CH (111) = 1).
Y	Transmit LED	The TRANSMIT light on the keyboard is turned on when CB (106) (Clear to Send) line from the modem is high. It is turned off when the CB (106) line goes low.	The TRANSMIT light on the keyboard is turned on when the CC (107) (Data Set Ready) line from the modem is high and the 13260B Extended Asynchronous Communications Interface PCA is used. It is turned off when the CC line goes low.
Z	Parity	The PARITY switch on the terminal keyboard is affected as follows:	
		No Parity: Send 8 bits and receive 8 bits. Force bit 8 to zero. Check for parity error.	No Parity: Send 8 bits and receive 8 bits. Force bit 8 to one on send. No check for parity error.
		<b>Odd Parity:</b> Send 7 data bits + odd parity. Receive 7 data bits + odd parity. Check for parity error.	Odd Parity: Send 7 bits + odd parity. Receive 7 bits. No check for parity error.
		Even Parity: Send 7 data bits + even parity. Receive 7 data bits + even parity. Check for parity error.	Even Parity: Send 7 data bits + even parity. Receive 7 data bits. No check for parity error.

Table 7-6. Keyboard Interface PCA Strapping Options for Multipoint

STRAP	STRAPPING OPTION	NORMAL OPERATION (SWITCH CLOSED)	OPERATION WITH STRAPPING OPTION (SWITCH OPEN)
Α	Function Key Transmission	The escape code sequence generated by the major function keys (such as, ROLL UP, ROLL DOWN, etc.) are executed locally, but not transmitted to the computer.	(Same as switch closed.)
В	Space Overwrite (SPOW) Latch Enable	Spaces typed will overwrite existing characters.	When the SPOW latch is off, overwriting occurs as normal. When the SPOW latch is on, spaces cause the cursor to forward but not overwrite any existing characters. The SPOW latch is turned on by a Carriage Return, and turned off by a Line Feed, Home, or Tab.
С	Cursor End-of-Line Wrap Around	At the end of each line, a local Carriage Return and Line Feed are generated; the cursor moves to the beginning of the next line.	A Carriage Return and Line Feed are not generated at the end of each line. The cursor remains in and overwrites column 80.
D	Line/Page	The terminal is set to transfer a line at a time from display memory, an unprotected field in format mode, or a record from the tape cartridge.	Transfers the entire contents of display memory (a "page"), all unprotected fields in format mode, or a file from the tape cartridge.
E	Paper Tape Mode	When the READ key is pressed with the AUTO LF down, each tape record begins with an LF if the AUTO LF key is down and is ended with a CR.	Each tape record is terminated by CR(LF).
F	(Not Used)		
G	Block Transfer Handshake	No effect.	No effect.
Н	Inhibit DC2	No effect.	No effect.
J	Auto Terminate	No effect.	When the ENTER key is pressed a non-displaying terminator is placed after cursor position.
К	Clear Terminator	No effect.	Clear terminator caused by strapping option J above.
L	Self Test Inhibit	No effect.	Self Test function is inhibited. Pressing TEST key or issuing ESC z has no effect. TAPE TEST and DATA COMM SELF TEST functions are not affected.
М	Reverse Sense of INSERT and DELETE CHAR with Wrap.	No effect.	Reverses control function of INSERT CHAR and DELETE CHAR keys (i.e., when key is pressed, line wrap around is in effect without having to press CNTL key. When either key is pressed while pressing CNTL, normal insert character and delete character functions are in effect.)
N	Escape Code Transfer To Printer	No effect.	Escape codes relating to the display (e.g., display enhancements, alternate character sets, format mode, fields, etc.) are sent to printer if it is selected as a destination device.
P,Q	Compatibility Mode	These switches set the terminal to be compatible with Tektronix control commands when initialized (power on or full reset). Refer to Section III for additional information on Compatibility Mode.  P-closed, Q-closed Normal operation P-closed, Q-open Unscaled Compatibility Mode P-open, Q-closed Scaled Compatibility Mode P-open, Q-open Normal operation	
R	Data Set Ready	No effect.	Provides an internal Data Set Ready (CC) signato the terminal. (Used in applications with the HF 30037A Asynchronous Repeater, and the Group Poll feature.)

Table 7-6. Keyboard Interface Straps for Block Operation Using 13260C or 13260D Communications Accessory (Continued)

STRAP	STRAPPING OPTION	NORMAL OPERATION (SWITCH CLOSED)	OPERATION WITH STRAPPING OPTION (SWITCH OPEN)
s	Space Compression	Space characters are sent normally.	Space characters are compressed.
T,U	Output Block Size	T U	BLOCK SIZE (BYTES)
		C C O C C O O O C = closed, O = open	1/2 Data Comm Buffer (refer to switches J16, J17 on multipoint PCA). 250 max 500 max 1000 max
v	Synch Characters	Asynchronous operation without SYN characters.	SYN characters are inserted during Asynchronous operation.
w	Data Comm Self Test	Enables DATA COMM SELF TEST from either the keyboard or escape sequence.	Disables DATA COMM SELF TEST. If self test is attempted (by either the keyboard or escape sequence), the test will be aborted and ERROR 0 will appear on the display.
X	Data Speed Select	Holds data speed signal low (CH = off).	Sets data speed signal high (CH = on).
Y	Transmit Indicator	Lights TRANSMIT indicator on keyboard when terminal is communicating with the computer.	Lights TRANSMIT indicator on keyboard when Data Set Ready (CC) is on, and it goes out when CC goes off.
Z	Transparency	No effect.	Causes all data sent from the terminal to be transparent.

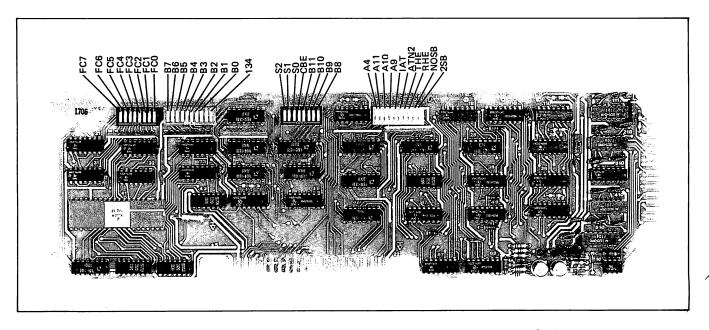


Figure 7-16. Extended Asynchronous Communications PCA Strapping Options

Table 7-7. Extended Asynchronous Communications Interface Strapping Options

STRAP	STRAPPING OPTION		DESCRIPTION		
FC0 thru FC7	(Not Used)	(This switch should always be open.)			
B0 thru B7	Custom Baud Rate Select	The switches are set to the binary equivalent of a number determined by the formula: $INT \left( \frac{153600}{\text{baud rate}} \right) - 1$ (See example in figure 5-10.)			
134	134.5 Baud	(This switch should always be open.)			
S0 thru	Transmit Baud Rate	SWITCH SETTING SO S1 S2	TRANSMIT BAUD RATE		
S2		O O O O O O O O O O O O O O O O O O O	Transmit baud rate = receive baud rate.  110 150 300 1200 2400 Custom		
CBE	Custom Baud	Closed: Enables custom receive baud rates. (The keyboard BAUD RATE switch must be set to EXT.)  Open: Receive baud rate is set by keyboard BAUD RATE switch.			
B8 thru B11	Custom Baud Rate Select	The switches are set to the binary equivalent of a number determined by the formula: $INT  (\frac{153600}{\text{baud rate}}) - 1$			
A4,A9 thru A11	Module Address	Provides PCA address so that firmware can address the PCA. These switches should always be set to 10, (A4 open, A9 thru A11 closed).			
IAT	Inhibit Attention	(This switch must be closed when receive handshake is used.)			
ATN2	Enable Attention Two	(This switch should always be open.)			
THE	Transmit Handshake Enable	Closed: Permits the associated external device (a or computer) to signal a "busy" condition on CB (Clear to Send) or SCF (Secondary Carrier) control lines and temporarily stop data transmission from the terminal.  Open: Transmit Handshake disabled.			
RHE	Receive Handshake Enable	Closed: Permits the terminal to signal a "busy" condition on the CD (Data Terminal Ready) control line and temporarily stop data transmission from the associated external device (a computer).  Open: Receive Handshake Disabled.			
NOSB	SCF Inhibit	Closed: Inhibits RS232 SCF (Secondary Ca			
2SB	Stop Bit Select	Selects the number of stop bits to be appen  Closed: Selects 2 stop bits.  Open: Selects 1 stop bit.	ded to the data bits during transmission.		

Table 7-7. Asynchronous Multipoint Communications Interface Strapping Options

STRAP	STRAPPING OPTION		DESCRIPTION			
J10 thru J14	Device ID	D Selects device ID code (0-27) which identifies one terminal from another on a particular common For example: to set an ID code of 6, set switches J14 through J10 to 00110 respectively. (See Number" and "Configuration Procedure" in Section V.)				
		0 = closed, 1 = open				
J15	(not used)					
J16,	Input Buffer Size	J17	J16	BUFFER SIZE		
J17		C C O O	с о с о	500 bytes 1000 bytes 2000 bytes 4000 bytes		
			C = closed, O = open			
J00 thru J04	Group ID	Selects group ID code (0-27) which identifies the communications line that the terminal is on. For example to set an ID code of 20, set switches J04 thru J00 to 10100 respectively. (See "Device I.D. Number" and "Configuration Procedure" in Section V.)				
		0 = closed, 1 = open				
J05	Extended Text Mode	Open: Enable Extended Text features. See "Extended Text Mode", Section V. Closed: Disable Extended Text features.				
J06	BCC (Block Check Character)	Determines which type of parity check will be used for an entire block of data in Block Mode.  Closed = 0: LRC (longitudinal redundancy check)  Open = 1: CRC — 16 (cyclic redundancy check)				
J07	Code Select	Selects data character and control character code format.  Open = 1: EBCDIC  Closed = 0: ASCII				
INT	Firmware Interrupt	This switch should always be open.				
PL0 thru PL6	Poll Bits	These switches should always be open.				
A4, A9 thru A11	Module Address	Provides PCA address so that the firm to 7 (A4 closed, A9 thru A11 open).	nware can address the PCA.	These switches should always be set		
-12	13232T Accessory Power	Closed: Provides -12 volts for operation of the Closed: Provides -12 volts for	on of relays in the 13232T Pow	ver Protect Multipoint Cable.		
2SB	Stop Bit Select	Selects the number of stop bits to be appropriate of the stop bits.  Closed: Selects 1 stop bit (normal positions)		transmission.		

Table 7-8. Synchronous Multipoint Communications Interface Strapping Options

STRAP	STRAPPING OPTION	DESCRIPTION				
J10 thru J14	Device ID	Selects device ID code (0-27) which identifies one terminal from another on a particular communication line. For example: to set an ID code of 6, set switches J14 thru J10 to 00110 respectively. (See "Device I.D. Number" and "Configuration Procedure" in Section V.)  0 = closed, 1 = open				
J15	(not used)					
J16,	Input Buffer Size	J17	J16	BUFFER SIZE		
J17		с с о о	с о с о	500 bytes 1000 bytes 2000 bytes 4000 bytes		
		C = closed, O = open				
J00 thru J04	Group ID	Selects group ID code (0-27) which identifies the communications line that the terminal is on. For example: to set an ID code of 20, set switches J04 thru J00 to 10100 respectively. (See 'Device I.D. Number" and "Configuration Procedure" in Section V.)  0 = closed, 1 = open				
J05	Extended Text Mode	Open: Enable Extended Text features. See "Extended Text Mode", Section V.  Closed: Disable Extended Text features.				
J06	BCC (Block Check Character)	Determines which type of block check will be used for an entire block of data.  Closed = 0: LRC (longitudinal redundancy check)  Open = 1: CRC — 16 (cyclic redundancy check)				
J07	Code Select	Selects data character and control character code format.  Open = 1: EBCDIC  Closed = 0: ASCII				
-12	13232T Accessory Power	Closed: Provides -12 volts for operation of relays in the 13232T Power Protect Multipoint Cable.  Open: No power supplied.				
A4, A9 thru A11	Module Address	Provides PCA address so that the firm to 7 (A4 closed, A9 thru A11 open).	nware can address the PC	A. These switches should always be set		
RCLK	Receive Data Clock	<u> </u>	• •	m) by using the 13232U Modem Bypass this switch. (This applies only to the first		
		Normally, this switch is open. One of the transmit data clock switches (see below) must be selected for this function.				
2400 4800 9600	Transmit Data Clock					
	If using the 13232U Modern Bypass Cable, select the desired rate.					
		9600 must be closed for the DATA CO	MM SELF TEST.			
			CAUTION			
		Close only one st	vitch, otherwise damage to t	the PCA may result.		

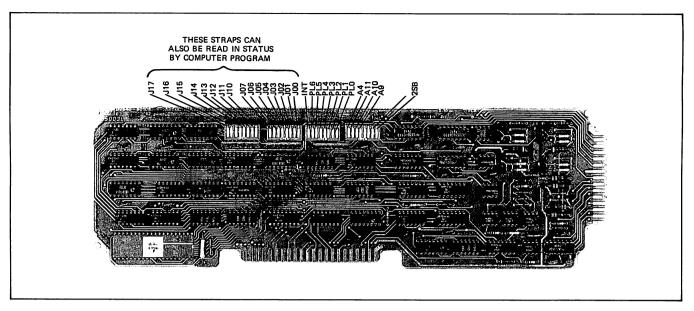


Figure 7-17. Asynchronous Multipoint Communications PCA Strapping Options

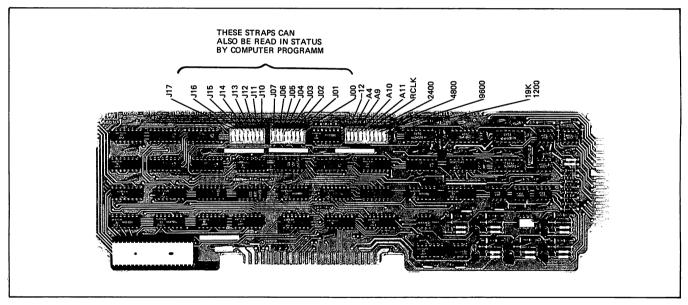


Figure 7-18. Synchronous Multipoint Communications PCA Strapping Options

#### DATA COMMUNICATIONS CABLING

### **Interface Signals**

The RS232 signals available on each of the communication interfaces are listed in table 7-10. This information can be used to verify interface capability or to fabricate special interface cables. Refer to "Fabricating Your Own Data Communications Cable" for additional cabling information.

### **Logic Levels**

Table 7-11 gives the logic levels of signals used by the 13260 series data communications accessories.

# **Cable Types**

There are five cable types that are available for use in multipoint networks. These cables are described in table 7-12.


Table 7-10. EIA RS232C and CCITT V24 Interface Data and Control Signals

	CONN	ECTO	R		CIRC	UIT							
R S 2 3 2		P 132			R S 2 3	C C IV		MC	DEM			CON-	
3 2	Α	В	С	D	3 2	T 2 T 4	DESCRIPTION	то	FROM	GND	DATA	TROL	TIMING
7	A H	A H	A H	A H	AA AB	_ 102	Protective Ground Signal Ground/Common Return			X			
2	B C	ВС	B C	ВС	BA BB	103 104	Transmitted Data Received Data	X	х		X X		
4 5 6 20 22 8 — 23 —	D E F P   J	D E F P   J   R	D E F P 14 J   R   0	D E F P 14 J   R	CA CB CC CD CE CF CG CH	105 106 107 108.2 125 109 110 111 112	Request to Send Clear to Send Data Set Ready Data Terminal Ready Ring Indicator Received Line Signal Detector Signal Quality Detector Data Rate Selector (DTE Source) Data Rate Selector (DCE Source)	x x x	x x x			X X X X X X	x
24 15 17	  -  -		s - -	S 12 13	DA DB DD	113 114 115	Transmitter Timing (DTE Source) Transmitter Timing (DCE Source) Receiver Timing	^	×				x
_	_	_	_ _	_	SBB SBB	118 119	Secondary Transmitted Data Secondary Received Data	×	×		×		
19 — 12	M N	<u>м</u> N	<u>М</u> N	<u>м</u> N	SCA SCB SCF	120 121 122	Secondary Request to Send Secondary Clear to Send Secondary Received Line Detector	×	×			X X X	

Table 7-11. Data Communications Signal Levels

DATA:		
Name Logic Voltage	Space 0 >+3V but <+25V	Mark 1 <-3V but >-25V
CONTROL:	ON (true)	OFF (false)
CLOCK SIGNALS:	0 = ground	1 = +5V

Table 7-12. Multipoint Data Communication Cables

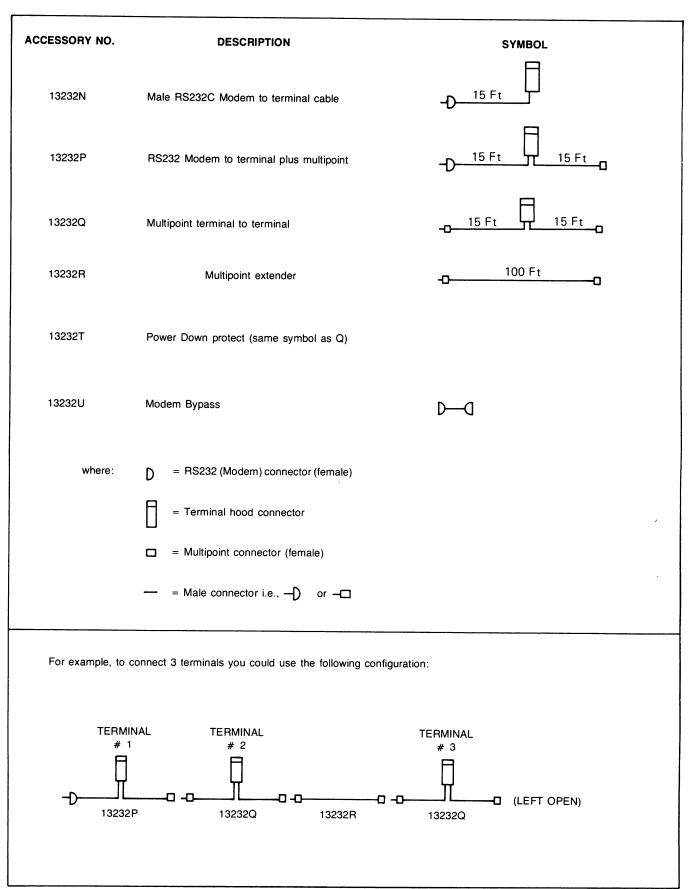

### Point-To-Point Communications Cabling

Figures 7-19 through 7-21 show the cable connections and signals used by the 13260A/B/C/D and 13250A/B accessories.

### **Multipoint Communications Cabling**

Figures 7-22 and 7-23 show the cable connections and signals used by the 13260C/D accessories in the multipoint configuration.

### **Power Down Protect Cabling**

Figure 7-24 and 7-25 show the cable configuration and effects of signal switching during power-down.

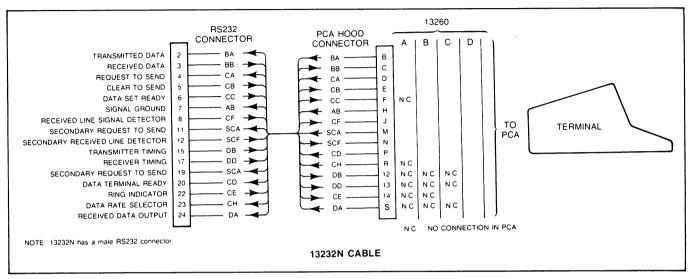


Figure 7-19. Point-to-Point Communications Cabling

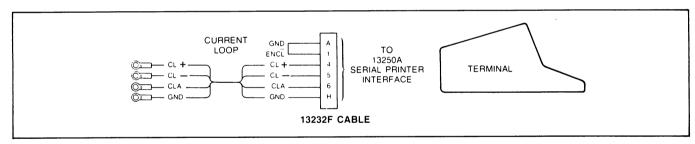


Figure 7-20. Current Loop Cabling

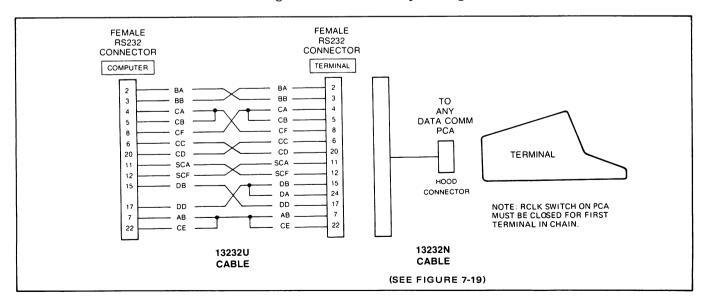


Figure 7-21. Modem By-Pass Cabling

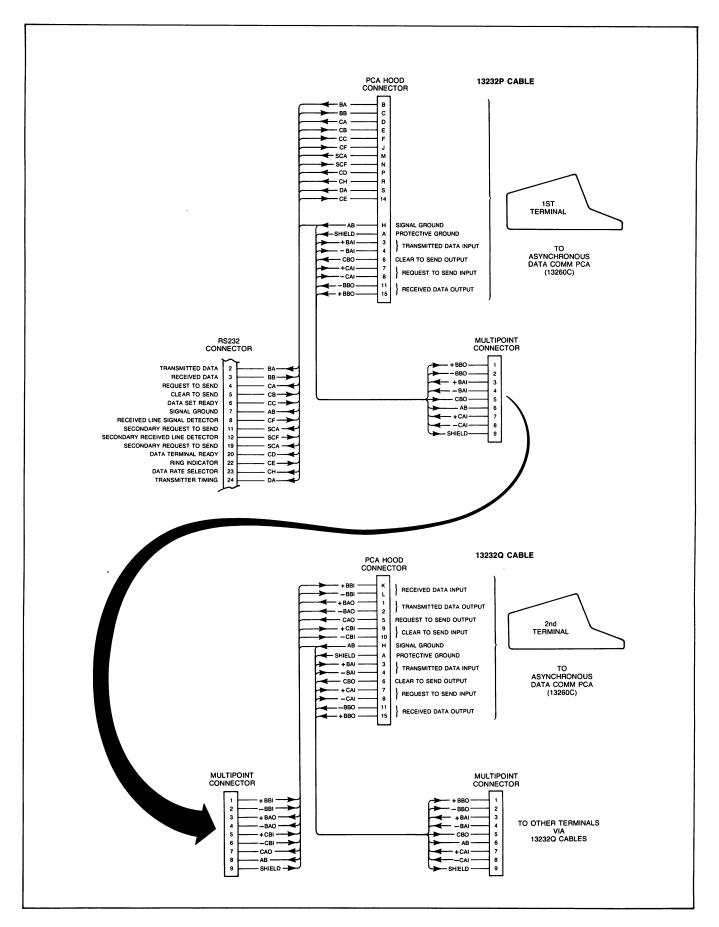


Figure 7-22. Asynchronous Multipoint Cabling

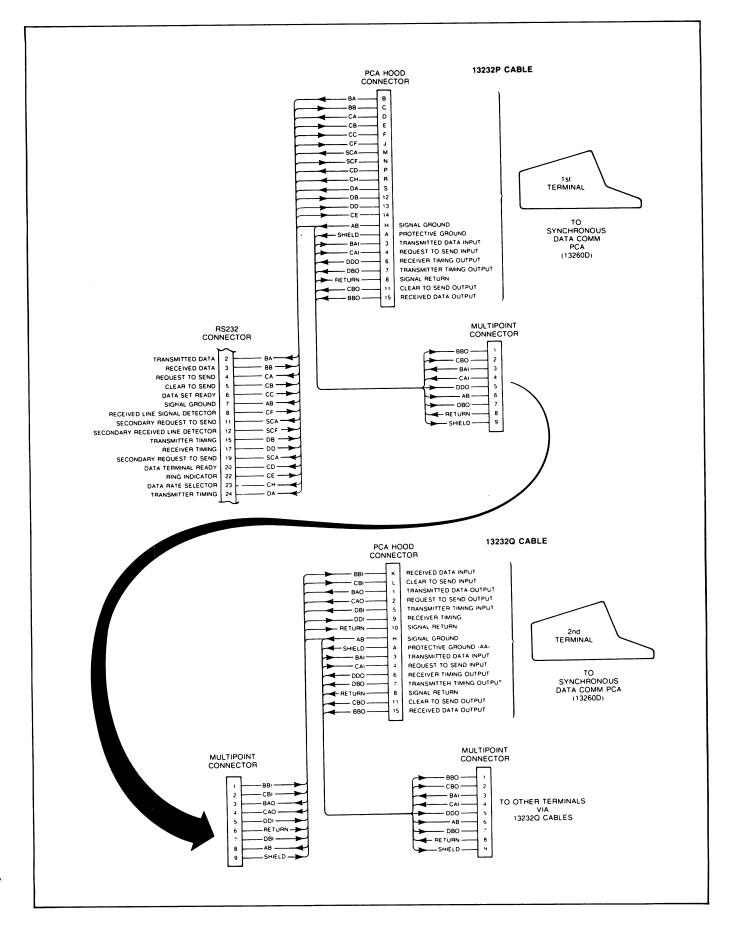


Figure 7-23. Synchronous Multipoint Cabling

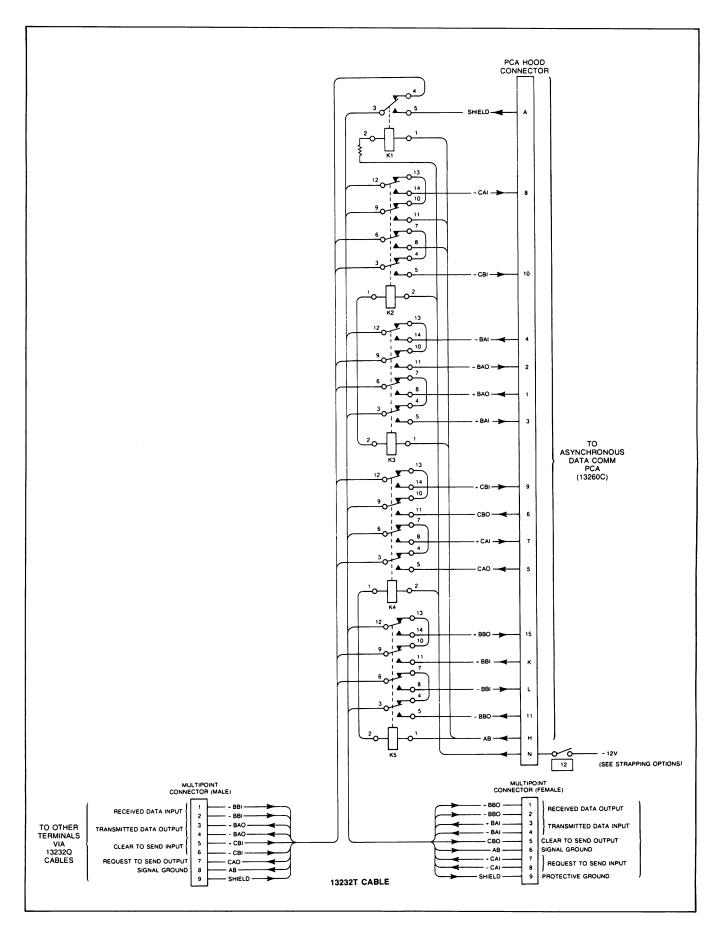


Figure 7-24. Power-Down-Protect Cabling for Asynchronous Multipoint Configuration

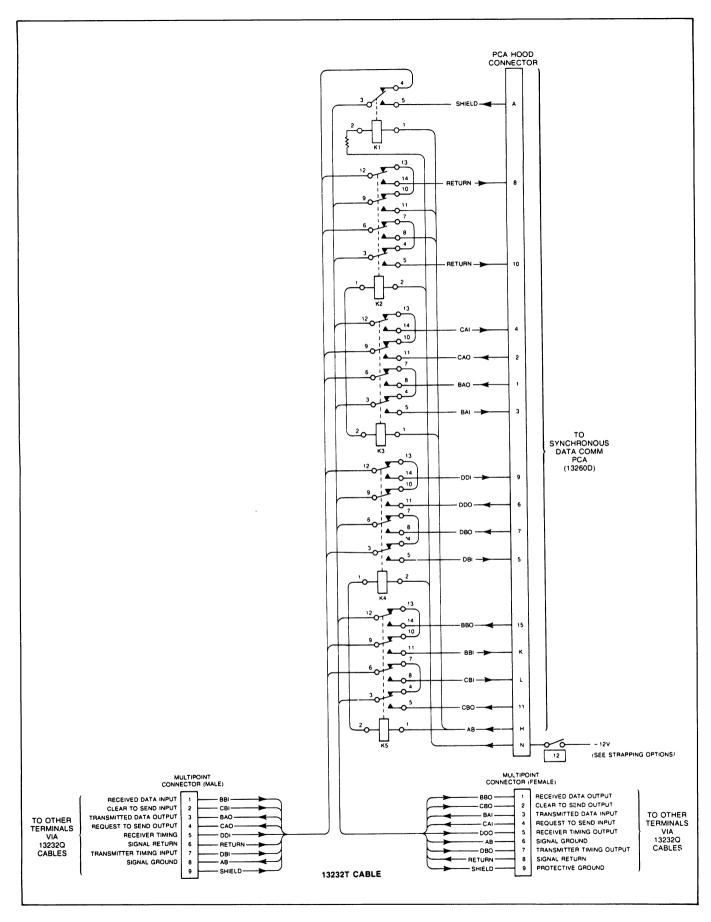


Figure 7-25. Power-Down-Protect Cabling for Synchronous Multipoint Configuration

# Fabricating Your Own Data Communications Cable

PCA hood connectors, RS232C connectors, multipoint connectors, and cables are available should you need to fabricate your own data communications cable. Part numbers of the items are given in table 7-13.

Figures 7-26 through 7-28 show the details of assembling each type of connector. Table 7-14 lists the interface signals on each of the data communications PCA's. Also, the illustrations of the HP cables (figures 7-19 through 7-25) may be used as a guide.

There are maximum length limitations on each type of cable. The following may be used as a guide for length considerations.

#### **Maximum Distances:**

Modem/Computer to first terminal: 50 feet (RS232-C standard)

Modem/Computer to terminal: 1000 feet (current loop on 13260B)

Terminal to terminal —

Note: Maximum total distance 16,000 feet.

Asynchronous (13260C) @ 300 to 9600 bits per second: up to 2000 feet between terminals with up to 32 terminals per line.

Synchronous (13260D) (2000 feet maximum between terminals):

\	Bits/ Sec.		
Terminals/ Line	2400	4800	9600
4	2000 ft	2000 ft	2000 ft
8	2000 ft	2000 ft	1200 ft
16	2000 ft	1200 ft	480 ft
32	1200 ft	480 ft	120 ft

Table 7-13. Parts for Fabricating Your Custom Data Communications Cable


ITEM	HP PART NO.	ALTERNATE SOURCE	DESCRIPTION
RS232 Connector	5061-2405		(See figure 7-29.)
PCA Hood Connector	5061-1340		(See figure 7-28.)
Multipoint Connector	5061-2401		(See figure 7-30.)
PCA Hood to RS232 Connector Cable	8120-1903 or 8120-1930		26 AWG (or greater) Low Voltage Computer Cable.
Multipoint Cable	8120-2305	Brand Rex POSS4P22	22 AWG, 4 twisted pairs, overall shield, 75 ohm differential mode characteristic impedance

Note: All connectors include contacts.

Table 7-14. 13260 Series Data Communications PCA Signal Names

	SIGNAL NAMES					
P2 PIN	13260A	13260B	13260C	13260D		
1	(no connection)	ENCL (see note)	+BAO	BAO		
2	(no connection)	INI	-BAO	CAO		
3	(no connection)	CL+12	+BAI	BAI		
4	(no connection)	CL+ (see note)	-BAI	CAI		
5	(no connection)	CL- (see note)	CAO	DBI		
6	(no connection)	CLA (see note)	СВО	DDO		
7	(no connection)	CLP	+CAI	DBO		
8	(no connection)	INO	-CAI	RET-D		
9	(no connection)	PON	+CBI	DDI		
10	(no connection)	ISB	-CBI	RET-U		
11	(no connection)	XECL	-BBO	СВО		
12	(no connection)	TTY IN	(no connection)	DB		
13	(no connection)	+5V	(no connection)	DB		
14	(no connection)	CE	ČE ,	CE		
15	TEST	TEST	+BBO	BBO		
A	AB	GND	AA	AA		
В	ВА	ВА	ВА	BA		
C	ВВ	ВВ	ВВ	BB		
D	CA	CA	CA	CA		
E	СВ	СВ	СВ	СВ		
F	(no connection)	cc	cc	cc		
, Н	AB	AB (see note)	AB (GND)	AB (GND)		
J	CF	CF (CF	CF ´	CF `		
ĸ	XBOUT	XBOUT	+BBI	ВВІ		
È	X16OUT	X16OUT	-BBI	СВІ		
M	SCA	SCA	SCA	SCA		
N	SCF	SCF	SCF	SCF		
P	CD	CD	CD	CD		
R	(no connection)	CH	CH	СН		
S	X16IN	X16IN	(no connection)	DA		


NOTE: Used in current loop mode.

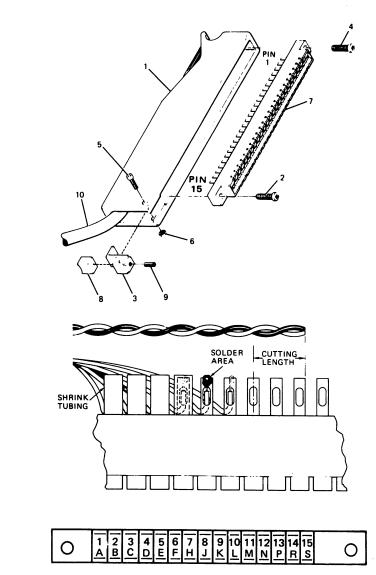


**VIEWED FROM SOLDER SIDE** 

#### Assembly Procedures:

- ( ) Insert approximately 10 inches of cable (item 10) into the connector hood (item 1).
- 2. ( ) Strip the outer jacket of the cable back 5 inches.
- 3. ( ) Remove approximately 1/4-inch of insulation from each signal wire.
- () Starting at the end of the 30-pin connector (item 7) nearest pins S and 15, solder the signal wires to the appropriate pins on the connector, and insulate each pin with tubing as shown at left.
- () Install the 30-pin connector in the connector hood using the two self-tapping screws (items 2 and 4).
- () Install the cable clamp (items 3 and 8), and tighten it in place with the screw and nut (items 5 and 6).
- 7. ( ) Tighten the cable clamp on the cable with the setscrew (item 9).

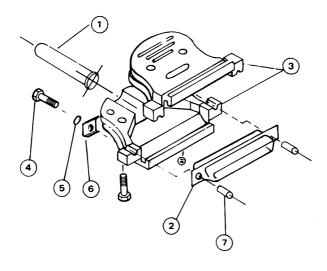

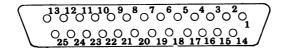


VIEWED FROM SOLDER SIDE


#### Assembly Procedure:

- 1. ( ) Slide rubber bushing (item 1) over end of cable, leaving about 6 inches of cable end exposed for wire stripping, etc.
- 2. ( ) Strip back the cable jacket 1-inch.
- 3. ( ) Clip the unused conductor wires to the edge of the cable jacket.
- 4. ( ) Remove 1/4-inch of insulation from the ends of the conductor wires to be used.
- 5. ( ) Solder the conductor wires onto the contacts of the contact assembly (item 2). (Select either the male or female contact assembly provided for your particular application.)

- Slide the rubber bushing to the end of the cable such that the rubber bushing flange is flush with the stripped end of the cable jacket.
- () Assemble the two halves of the connector (item 3) onto the contact assembly (item 2). (Use the screws and nuts provided.)
- 8. ( ) Mount the two screws, threaded spacers, and other hardware (items 4 thru 7) onto the contact assembly.

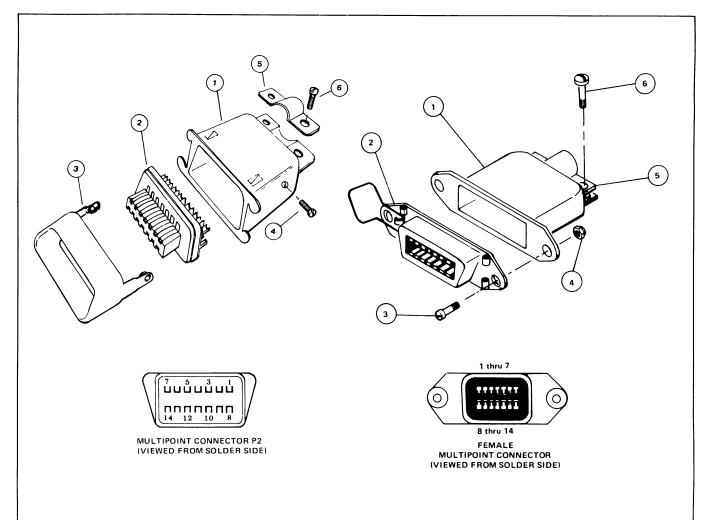

### MULTIPOINT CONNECTOR CABLING

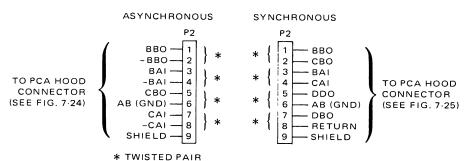

### Assembly Procedure:

- 1. ( ) Insert cable through the outer housing (item 1).
- 2. ( ) Strip back the cable jacket 1-inch.
- 3. ( ) Clip any unused conductor wires to the edge of the cable jacket.
- Remove 1/4-inch of insulation from the ends of the conductor wires to be used.

- 5. ( ) Solder the conductor wires onto the contacts of the contact assembly (item 2).
- 6. ( ) Assemble the multipoint connector by sliding the inner housing (item 3) over the contact assembly (item 2). Slide the outer housing over items 2 and 3 until the screw holes are aligned. Secure the entire assembly with the two screws (item 4).
- Mount the cable clamp (item 5), and secure with the two screws (item 6).

Figure 7-28. Assembling the Multipoint Connector

#### **SELF-TEST**

The terminal tests itself. Should you suspect a malfunction while operating the terminal, you can perform the SELF-TEST function to checkout the terminal. Also, after installing any accessory, the terminal's self-test function should be performed to ensure that the terminal is functioning properly. There are three types of self-test, each testing a specific function of the terminal.

### **Basic Self-Test**

Pressing to the terminal, except for the cartridge tape units (if installed) and the data communications. The following is performed when the test key is pressed (also see the flowchart in figure 7-30):

#### NOTE

The test pattern cannot be recorded because of imbedded Record Separators (RS).

- The light-emitting diodes (indicators) on the keyboard are turned on briefly as an indication that the power supply and microprocessor board are functioning.
- A checksum test is done on the read-only memory (ROM). This verifies that the firmware is working properly. An error here causes a ROM ERROR message to be displayed. (See flowchart, figure 7-30.) Note that this checksum test is also performed as part of the power-on sequence.
- A RAM TEST appears on the display while checkerboard test is performed on the random access memory.
   An error here causes a RAM ERROR message to be displayed. (See flowchart, figure 7-30).

- A graphics test is performed. The test checks both the vector generating function as well as the graphics memory. This is done by drawing a series of vertical and horizontal lines. If the graphics memory test fails, a message indicating the failing graphics memory component is displayed (see the flowchart in figure 7-30).
- The bell is beeped indicating success up to this point. If the key is held down to cause the self-test to be repeated, the bell beeps only for the first self-test.
- The entire character set contained in the terminal is displayed.
- If the BASIC Interpreter was active at the time the key was pressed, BASIC performs its checksum routine.
- A line of characters, @ABCDEFGHIJKLMNO, is displayed. If the Display Enhancement option is installed, then Underline, Half-Bright, and Blinking will be displayed with Inverse Video in all of the possible Display Enhancement combinations by this line of characters.
- The 14 bytes of status information are displayed. (See Section VI "Status" for an explanation of the status bytes.)

Generally, if the terminal beeps and the display shows a pattern similar to those shown in figure 7-29 then the terminal is functioning properly (only those character sets actually present in the terminal will be displayed in the test pattern and consequently the actual test pattern displayed will be dependent on which features are present in each terminal).

must be pressed to resume operation if any error occurred. However, the station's operation will not be reliable if the Self-Test failed.

5584 !"# <=>? **'**ነ፟፟ችች **፯**፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟፟ \$%&'()++ -./0123 456789:; LMNDPQRS \]^\_'abc !}~# **@**ABC **DEFGHIJK** TUVWXYZ[ defqhijk lmnopqrs tuvwxyz{ @ABCDEFGHIUKLMND 900=020 4=100000 Test Pattern for the standard terminal. v±a[÷≃II [ -J † Σ +T+↓¶aβy **∮ε∂**ληιθκ ωμυρπγθσ τξΔδχυζί +T+1 ¶αβψ **∮**ε∂ληιθκ ωμνρπγθσ τξΔδχνζ1 <=>? **ጜ**፟ጜ፞ጜ **፯** ሂች ፍዬ ፍ .-./0123 456789:; tuvwxyz{ LMNDPQRS lmnopqrs **:**}~**: @ABC** DEFGHIJK TUVWXYZ[ \]**^\_**`abc defahijk **QABCDEFGHIUKLMND** 900=020 4=100000 Test Pattern for terminals containing Display Enhancements, Math Symbol Set, and Line Drawing Set.

Figure 7-29. Basic Self-Test Patterns

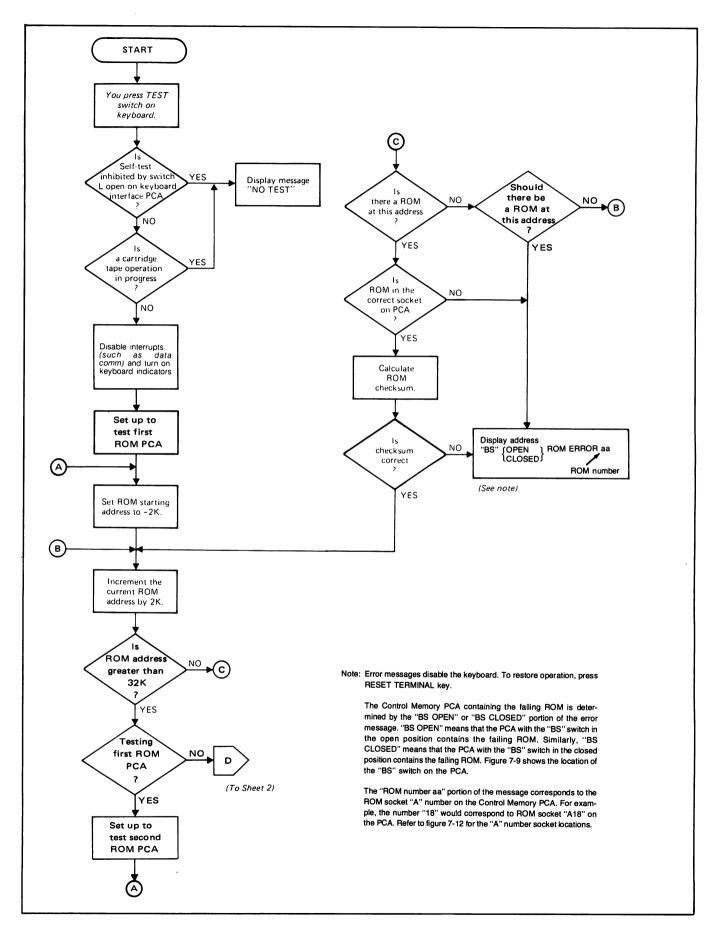


Figure 7-30. Basic Terminal Self-Test Flowchart (Sheet 1 of 3)

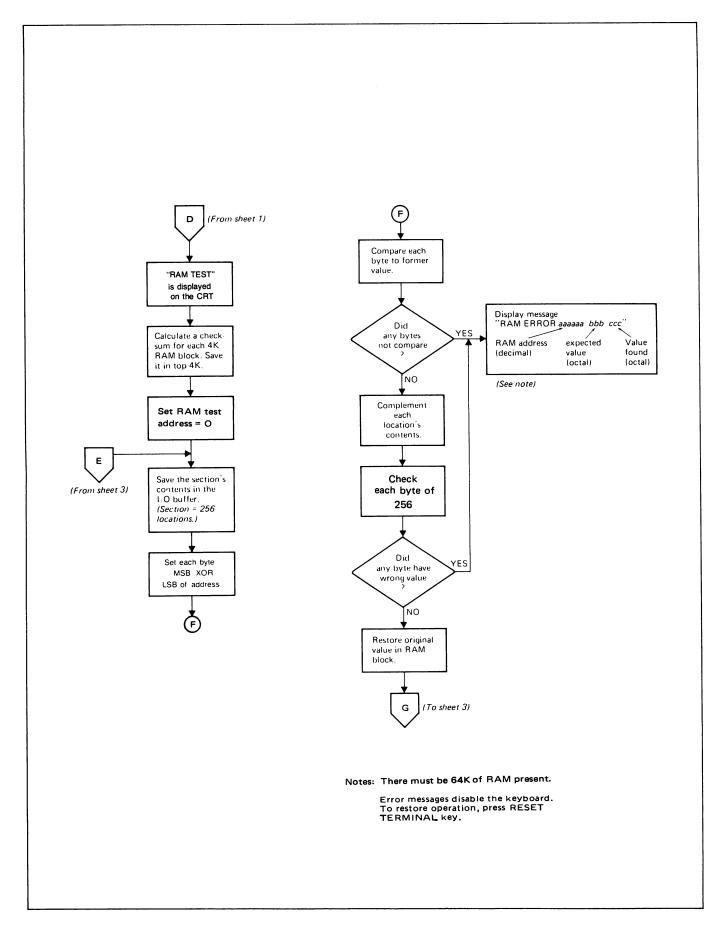


Figure 7-30. Basic Terminal Self-Test Flowchart (Sheet 2 of 3)

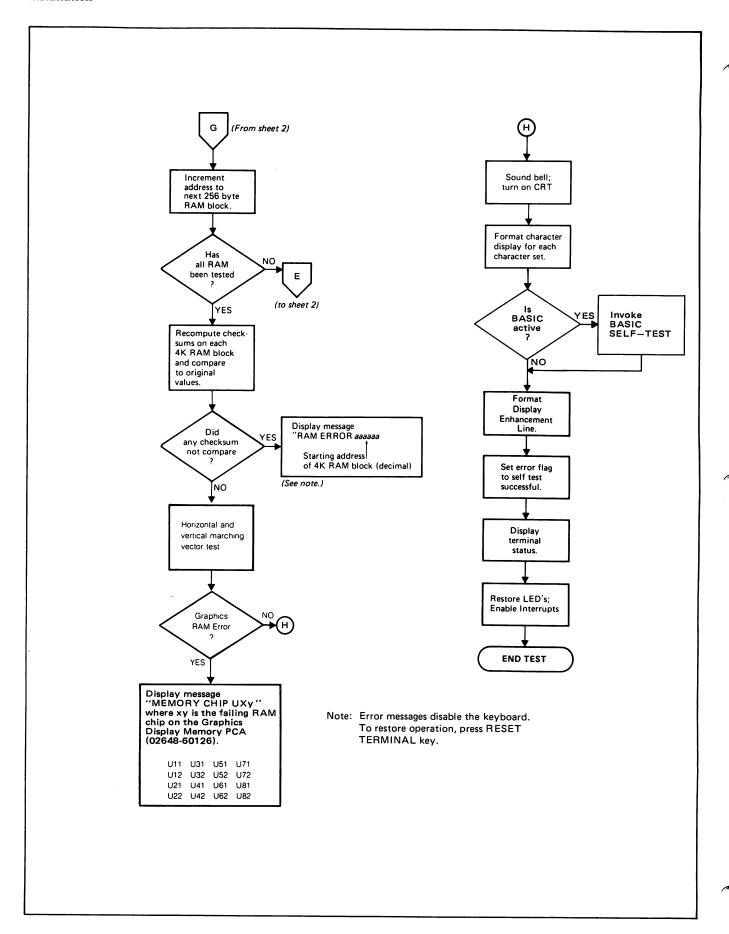


Figure 7-30. Basic Terminal Self-Test Flowchart (Sheet 3 of 3)

## Cartridge Tape Unit Self-Test

#### **CAUTION**

The following self-test is performed with two unprotected tape cartridges. Make sure that any data on these tapes need not be saved.

FROM THE KEYBOARD. The following is performed when you type TEST TAPES in the command channel (you can also do this using the TEST and TAPES softkeys) and then press :

- A test is performed on the left tape unit:
  - A worst case data pattern ("%Z" repeated 128 times to form a 256 character record) is recorded on the tape cartridge.
  - The tape is backspaced over the record to the beginning of the test pattern.
  - The test pattern is read and verified.
  - A file mark is recorded.
- Two basic self-tests are performed as described previously.
- A test is performed on the right tape unit (same as the left tape unit).
- Another basic self-test is performed.

If a fault is detected during the tape transport test, the eject button will be lit on the transport being tested, the test will not proceed any further, and one of the error messages shown below will be displayed.

NO TAPE, RUNOFF, DATA PROTECTED, FAIL WRITE FAIL, STALL, or END OF TAPE

These messages are explained in the User's Manual.

If a hardware failure has occurred during the self-test, the reliability of the terminal cannot be assured. If any error occurred, press to restore normal operation. Try replacing the tape cartridge and running the self-test again to make sure that the error is a hardware malfunction. Servicing procedures are contained in the Service Manual.

You may verify that the tapes you record may be used by other terminals as follows:

- Perform the tape transport test.
- Rewind the tapes.
- Exchange tape between the left and right transports.
- Read each tape, and check that a line of "%Z" appears on the screen. If this does not happen, a hardware malfunction may exist in one of the transports.

**FROM COMPUTER.** The tape transports may be tested from your program by coding:

ESC & p 1u 7C (for the left tape transport) ESC & p 2u 7C (for the right tape transport)

After the test is performed, the terminal will respond with an "S" CR(LF) if the test was successful or an "F" CR(LF) if the test failed. The status of the tested tape unit may be interrogated to determine the reason for the failure. (See Section VI, "Status".)

#### **Data Communications Self-Test**

This self-test checks the data communications PCA (13260A, B, C or D) and the associated network cabling. Test connectors are used with the self-test function to provide signal loop-back while the internal diagnostic is being run. A description of the test connectors is provided in table 7-15. To run the self-test, follow the instructions in table 7-16 or 7-17, whichever is applicable. Flowcharts of the self-test are contained in figures 7-31 and 7-32.

Table 7-15. Data Communications Self-Test Connectors

SELF-TEST CONNECTORS	HP PART NO.	USED FOR
пинининий	02645-60002	Checks RS232 circuits on 13260A, B, C, D accessory PCA's. (Does not check multipoint circuits on PCA; use 02645-60004 test connector below.) This connector is supplied with the terminal.
	02645-60003	Checks current loop circuits on 13260B accessory PCA. This connector is supplied with the 13232F Current Loop Cable.
	02645-60004	Provides loop-back of RS232 signals at RS232 connector end of cable. Used during self-test of multipoint configurations. This connector is supplied with the 13232P Multipoint/Modem Cable.

Table 7-16. Point-to-Point Data Communications Self-Test Procedure

#### STEP 1. a. Ensure power is off, and disconnect cable data communications b. Connect PCA Test Connector, part no. 02645-60002, to data TEST CONNECTOR 02645-60002 communications PCA. 13232C or N c. Turn on power, type TEST DATACOMM in the command chan-TERMINAL CABLE ASSEMBLY nel (you can also do this using the TEST and DATACOMM 13260A softkeys), and then press RETURN 13260B TEST CONNECTOR OR d. Refer to data comm self-test flowcharts for diagnosing possible 02645-60003 13232F CABLE 13260B error messages. (CURRENT LOOP) **TERMINAL** e. If operating in current loop, turn power off and use test connector part no. 02645-60003 to connect to the 13260B Data Com-CHECKS DATA COMM PCA munications PCA. Turn on power, and type characters on the keyboard. The characters should be echoed back (two characters displayed if the terminal is set for Half Duplex). This verifies proper operation of current loop send and receive circuits. STEP 2. a. Turn off power, and connect 13232C or N Cable Assembly to 13260A, B, C, or D data communications PCA. (If operating in current loop, connect 13232F cable to 13260B data communications PCA.) TEST CONNECTOR b. Connect RS232 Test Connector, part no. 02645-60004, to 02645-60004 RS232 connector on 13232C or N cable. MODEM TERMINAL c. Turn on power, set the terminal to REMOTE, type TEST DATACOMM in the command channel (you can also do this 13232C, N, OR U using the TEST and DATACOMM softkeys), and then press CABLE ASSEMBLY

CHECKS CABLE ASSEMBLY

error messages.

d. Refer to data comm self-test flowcharts for diagnosing possible

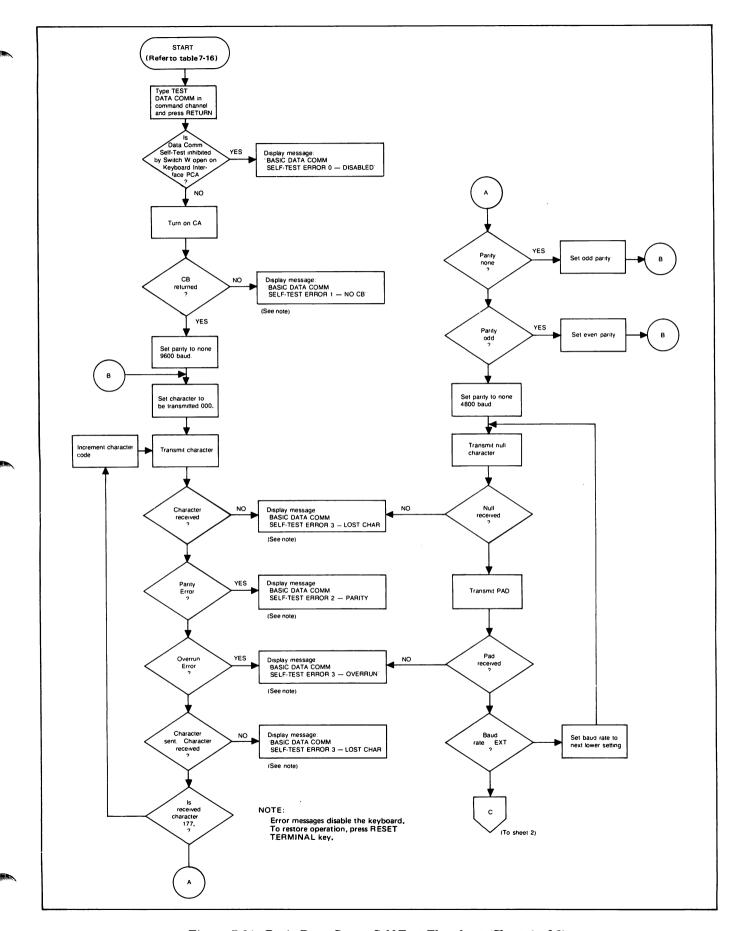


Figure 7-31. Basic Data Comm Self-Test Flowchart (Sheet 1 of 2)


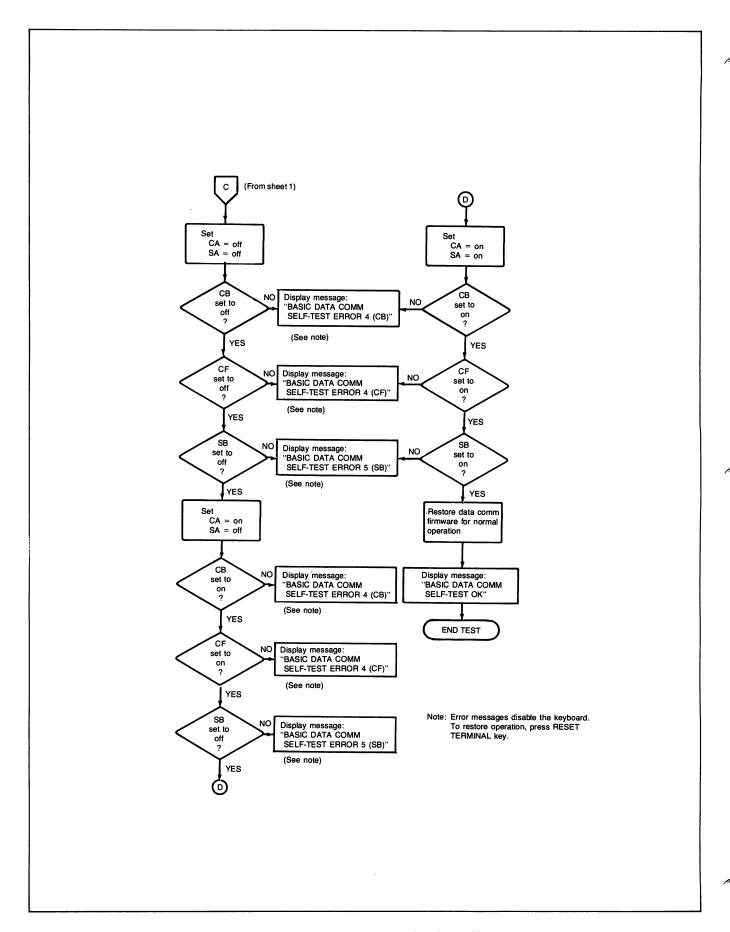


Figure 7-31. Basic Data Comm Self-Test Flowchart (Sheet 2 of 2)

Table 7-17. Multipoint Data Communications Self-Test Procedure


#### STEP 1.

- Ensure power is off, and disconnect cable from 13260C or D communications PCA.
- b. Connect PCA Test Connector, part no. 02645-60002, to 13260C or D data communications PCA.
- c. Turn on power, type TEST DATACOMM in the command channel (you can also do this using the TEST and DATACOMM softkeys), and then press
- Refer to multipoint data comm self-test flowchart for diagnosing possible error messages.

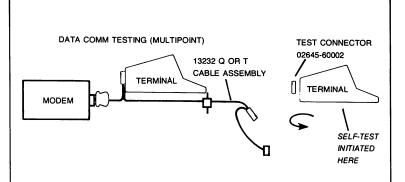


#### STEP 2.

- a. Turn off power, and reconnect cable to 13260C or D data communications PCA.
- b. Connect RS232 Test Connector, part no. 02645-60004, to RS232 connector on 13232P cable.
- c. Turn on power, type TEST DATACOMM in the command channel (you can also do this using the TEST and DATACOMM softkeys), and then press
- Refer to multipoint data comm self-test flowchart for diagnosing possible error messages.

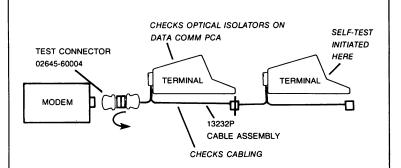


#### STEP 3.

- a. Turn off power, and connect 13232P cable to modem.
- b. Switch modern to loop-back mode (if possible).
- c. Turn on power, type TEST DATACOMM in the command channel (you can also do this using the TEST and DATACOMM softkeys), and then press
- d. If self-test did not pass, the modern may be malfunctioning.
   Refer to multipoint data comm self-test flowchart for diagnosing possible error messages.

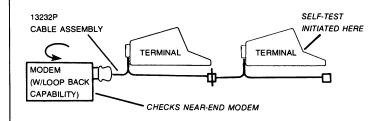

#### STEP 4.

- a. Switch modem back to normal operation.
- b. Switch far-end modem to loop-back mode (if possible).
- c. Turn on power, type TEST DATACOMM in the command channel (you can also do this using the TEST and DATACOMM softkeys), and then press
- d. If self-test did not pass, the modern may be malfunctioning.
   Refer to multipoint data comm self-test flowchart for diagnosing possible error messages.

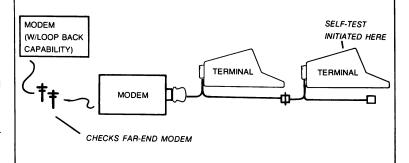

NOTE: For terminals without cartridge tapes, use ESC x to perform data comm self-test.


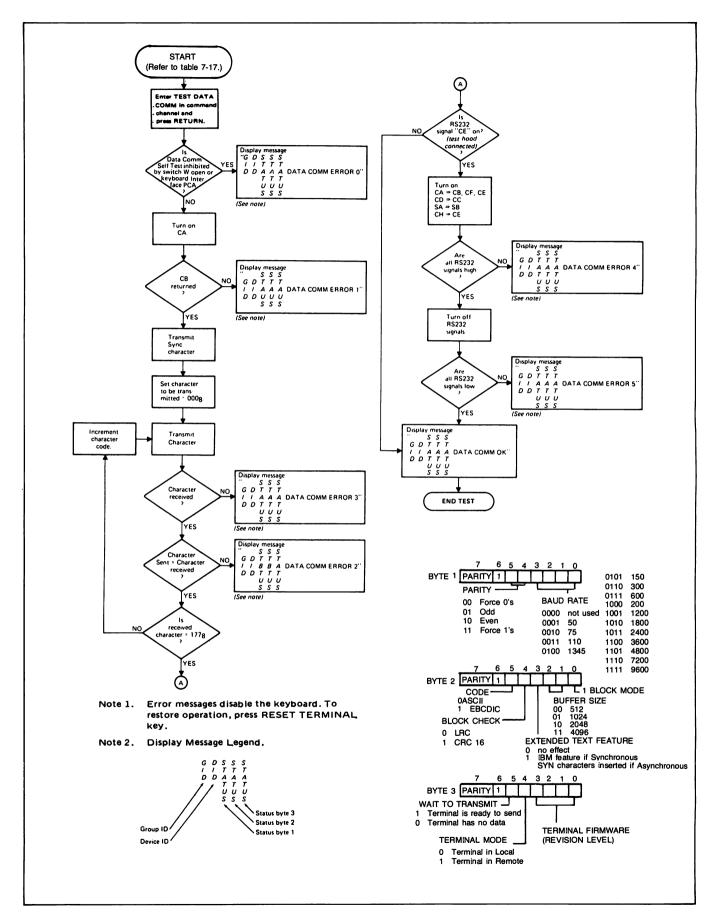


Figure 7-32. Multipoint Data Comm Self-Test Flowchart

### **HP-IB Self-Test**

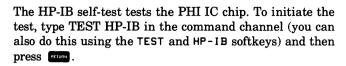

If the HP-IB test fails, the following message is displayed:

where x is a number from 0 to 2 whose meaning is as follows:

- 0 indicates no HP-IB interface PCA is installed (or the PCA, if present, is strapped incorrectly).
- 1 or 2 indicates a PHI IC chip error.

If the test is successful, the following message is displayed:

The above message indicates the HP-IB PCA's current strapping and functional configuration. xx is an address, from 8 to 29, which uniquely identifies your terminal's HP-IB PCA and differentiates it from all other HP-IB devices connected to the HP-IB bus. The SYSCTL parameter indicates whether or not your terminal is configured as the System Controller of the HP-IB. The CIC parameter indicates whether or not your terminal is currently the Controller in Charge (CIC) of the HP-IB bus. CIC=YES merely means that your terminal was the terminal which most recently issued a command over the HP-IB.

In order for the HP-IB self-test to be performed, your terminal must be:

- 1. Both the System Controller and the CIC; or
- 2. Neither the System Controller nor the CIC.

If neither of the above is true (that is, if SYSCTL=NO,CIC=YES or SYSCTL=YES,CIC=NO) then the test cannot be performed and the following message is displayed:

In such a case, it is most convenient to manipulate the CIC function (manipulating whether or not your terminal is the System Controller requires reconfiguring the entire HP-IB configuration). To make your terminal the CIC, type SHOW TIME in the command channel and then press. To make it so that your terminal is not the CIC, type SHOW TIME in the command channel (followed by ) of another terminal in the configuration. Then retry the HP-IB self-test.

### **Terminal-to-Terminal Loop-Back Test**

To test the communication capabilities between two terminals in an HP 13296A Shared Peripheral Interface configuration, enter TEST TERMINAL#x in the command channel, where x is the HP-IB device address of the target terminal, and then press This initiates a loop-back test in which a 256-byte data block is sent from your terminal to the target terminal and is then sent back to your terminal for comparison.

If the test fails, then the following message is displayed:

where: x is the HP-IB device address of your terminal.

- y is the HP-IB device address of the target terminal.
- z is the error number, as follows:
  - 1 indicates no HP-IB interface PCA
  - 2 indicates no control of HP-IB
  - 3 indicates target terminal did not receive entire data block
  - 4 indicates target terminal did not send back entire data block
  - 5 indicates returned data block did not match the one originally transmitted

#### INTRODUCTION

The HP 13296A Shared Peripheral Interface includes the following items:

- 1. An HP-IB Interface PCA (part no. 02640-60128).
- 2. A standard 2 meter HP-IB interconnecting cable (figure 8-1). This cable has a double-sided male/female connector on both ends to allow for stacked interconnection of multiple cables.
- 3. An HP-IB Interface Adapter (part no. 02640-60215). (See figure 8-2.) This item serves two purposes. First, it provides a means of connecting an HP-IB cable to the interface PCA. Second, it provides you with a means of increasing the maximum combined amount of interconnecting cable permitted in your HP-IB configuration.

HP-IB interconnecting cables are available in three lengths:

HP 10631A HP-IB Cable, 1 meter (3.3 feet), part no. 8120-1833

HP 10631B HP-IB Cable, 2 meters (6.6 feet), part no. 8120-1834

HP 10631C HP-IB Cable, 4 meters (13.2 feet), part no. 8120-1835

HP 10631D HP-IB Cable,  $\frac{1}{2}$  meter (1.5 feet), part no. 8120-2237

Each of these cables has a double-sided male/female connector on both ends so that multiple cables can conveniently be stacked for parallel connection. To order any of the above three cables, contact your nearby HP Sales and Service Office.

The installation procedure for the HP 13296A Shared Peripheral Interface accessory is presented in Section VII, *Installation*. The various commands for interacting with other devices in the HP 13296A Shared Peripheral configuration are described in Section IV, *Device Control*.

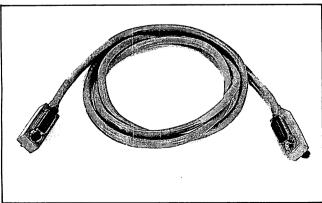


Figure 8-1. HP-IB Interconnecting Cable

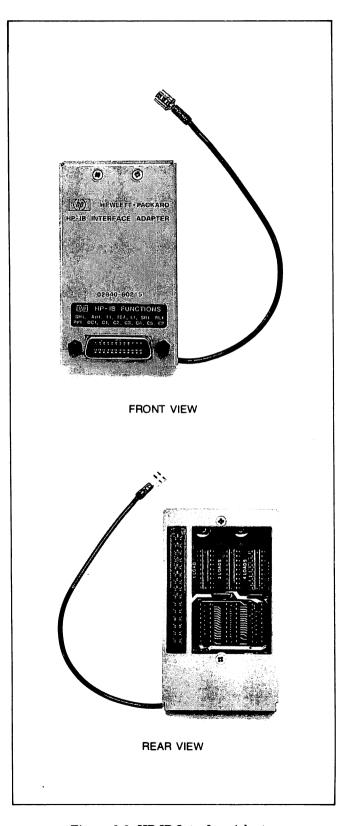


Figure 8-2. HP-IB Interface Adapter

#### **CABLING CONSIDERATIONS**

Your HP-IB configuration is limited to a maximum combined amount of interconnecting cable that averages two meters of cable per device. The HP-IB Interface Adapter allows you to select 0-7 additional device loads (the terminal itself always counts as one device load). These simulated device loads make it appear as though the selected number of devices have actually been connected to the HP-IB configuration, thereby permitting you to use more meters of interconnecting cable. Additional cable availability obtained in this manner may be used anywhere within your HP-IB configuration. This adapter should be used for selecting additional device loads only when connected to the System Controller terminal; the adapters for all other terminals should be set to "0".

The number of additional device loads is selected by moving the three IC chips (located inside the HP-IB Interface Adapter) back and forth between the upper and lower sockets. The upper sockets are inactive and the lower sockets are active. The lower left socket has the value "1", the lower middle socket has the value "2", and the lower right socket has the value "4". The number of additional device loads being simulated by the adapter is equal to the combined value of all filled sockets in the lower row.


## **CAUTION**

The three IC chips are not interchangeable. The IC chip for selecting one additional device load must always be in either the upper or lower "1 LOAD" socket, the IC chip for selecting two additional device loads must always be in either the upper or lower "2 LOADS" socket, and the IC chip for selecting four additional device loads must always be in either the upper or lower "4 LOADS" socket. The part numbers of the three IC chips are as follows:


1810-0408 (1 LOAD) 1810-0410 (2 LOADS) 1810-0409 (4 LOADS)

The IC chips must be installed in the sockets with the notched edge at the top. The ground cable from the adapter should be connected to the terminal only for the System Controller terminal. On all other terminals in the configuration it should be left unconnected. The ground cable connects to the terminal at the ground plug adjacent to the power cord plug at the rear of the terminal.

Figure 8-3 illustrates several possible configurations. An IC chip extractor tool is included with the HP-IB Interface Adapter. For example, if you are connecting your terminal to an HP 9872A Plotter and the HP-IB Interface Adapter is set to "0", you would be limited to a total cable length of 4 meters are illustrated below:

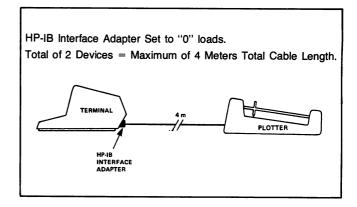

By setting the HP-IB Interface Adapter to "7" instead, you could have up to 18 meters of cable between the two devices as illustrated below:

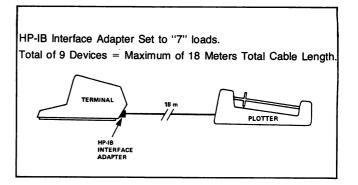

As you can see from the above examples, should you need extra cable length at some point within your configuration you can obtain it by simulating extra device "loads" with the HP-IB Interface Adapter. Your configuration is, however, always limited to a combined total of 20 meters of interconnecting cable or a total of 15 devices (actual plus simulated).

If you have a known combined length of HP-IB interconnecting cable and you want to know how many dummy device loads you must simulate in order to make use of all the available cable, use the following formula:

# of dummy loads = (total cable length/2) - # of actual devices

If this formula yields a fractional result, round the result up to the next higher integer value.

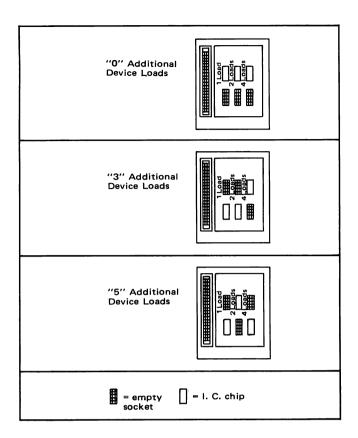


Figure 8-3. Selecting Additional Device Loads

#### CABLING LIMITATIONS

Certain types of devices which can be included in an HP-IB configuration require that the maximum combined amount of interconnecting cable average one meter per device (instead of two, as described above). Such devices will have a label at their HP-IB connector which calls your attention to this limitation. When one of these devices is included in your HP 13296A Shared Peripheral configuration, each additional device load provided by the HP-IB Interface Adapter allows you one extra meter of cable in your configuration (not two). In this case, the formula for determining the required number of dummy device loads is as follows:

# of dummy loads = total cable length - # of actual devices

#### **OPERATIONAL CONSIDERATIONS**

Any terminal in the configuration can be designated as the System Controller. This is accomplished by setting switch SC on the terminal's HP-IB Interface PCA to the "open" position. Only one terminal, however, should be assigned that role. An HP-IB configuration cannot function if it includes two or more System Controllers.

At any given time one of the terminals in the configuration is designated as the "Controller in Charge" (or CIC). Note that this is completely independent of the System Controller function. It merely means that the particular terminal was the one which most recently issued a command over the HP-IB. Whenever a terminal is currently the CIC its yellow LED (above the 4 key) is lit.

If power is removed from the terminal which is currently designated as the CIC, the entire configuration becomes inoperative. To recover from such an event, you must do a hard reset on the System Controller terminal (note that the terminal which was powered off need not be turned back on unless it also happens to be the System Controller terminal).

If power is removed from any terminal which is not currently designated as the CIC, the configuration is unaffected

## **CAUTION**

Doing a hard reset on the CIC halts any operation currently in progress. To resume operation you must then do a hard reset on the System Controller terminal.

Doing a hard reset on the System Controller terminal reconfigures the HP-IB configuration.

### **Local HP-IB Testing**

You can test the HP-IB Interface of any terminal in the configuration locally at any time by entering the following in the command channel of the particular terminal:

where \* is the command channel prompt.

This test and its resultant messages are described fully at the end of Section VII, *Installation*, of this manual.

Of particular interest at this point is that you can use this test to find out if your terminal is the System Controller and/or currently the CIC (the message displayed if this test is successful tells you this information as well as your terminal's HP-IB device address).

### **Remote HP-IB Testing**

When a configuration includes multiple terminals, you can test the cable connections by performing terminal loop-back tests. With this test, data is sent from one terminal to another and the data is then sent back for comparison. You invoke this test by issuing the following command:

#### \*TEST TERMINAL#n

where \* is the command channel prompt and n is the address of the remote terminal with which the cable connection is to be tested.

This test and its resultant message are described fully at the end of Section VII, *Installation*, of this manual.

#### **DEVICE CONSIDERATIONS**

When using the HP 13296A Shared Peripheral Interface, your overall configuration may include up to ten devices. The HP 13296A supports the following five peripheral devices:

- HP 2631A/G-046 Printer
- HP 9871A-001 Printer
- HP 7245A-001 Plotter/Printer
- HP 9872A Plotter
- HP 7225A Plotter

Note that the HP 2631A/G and 9871A Printers are devices which limit the combined amount of interconnecting cable to an average of one meter per device (see Cabling Limitations, above).

#### SAMPLE CONFIGURATIONS

Figure 8-4 illustrates an HP 13296A Shared Peripheral Interface configuration containing only two devices: an HP 2647A Intelligent Graphics Terminal and an HP 9872A Plotter.

The terminal is designated as the System Controller with an HP-IB device address of 29. To configure the terminal in that manner, switches B4 through B0 and SC on the HP-IB Interface PCA (part no. 02640-60128) are set as follows:

LSB MSB	B0: B1: B2: B3: B4:	Open Closed Open Open Open	These switch settings specify the terminal's HP-IB device address as 29.
	SC:	Open	This switch setting indicates that the terminal is the System Con- troller

Since the plotter is located adjacent to the terminal in this sample configuration, the standard 2 meter HP-IB interconnecting cable is adequate and the HP-IB Interface Adapter of the terminal is set to "0" additional device loads.

The plotter is assigned HP-IB device address 5 by setting the address switches A1 through A5 on the back panel as follows:

LSB A1: 1 (on)
A2: 0 (off)
A3: 1 (on)
A4: 0 (off)
MSB A5: 0 (off)

Once the configuration is established as described above, you may specify the plotter as the output device for plots

produced by an AGL program by including the following statement at the start of your AGL program:

#### PLOTR (5,1)

where the "5" specifies the plotter's HP-IB device address.

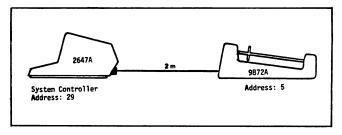


Figure 8-4. Terminal-to-Plotter Configuration

Figure 8-5 illustrates an HP 13296A Shared Peripheral Interface configuration containing four devices: two HP 2647A Intelligent Graphics Terminals, one HP 7245A Plotter/Printer, and one HP 2631A/G Printer.

The terminals are assigned HP-IB device addresses 29 and 28, the latter also being designated as the System Controller. To configure the terminals in that manner, switches B4 through B0 and SC on their HP-IB Interface PCAs are set as follows:

MSB	B0: B1: B2: B3: B4:	Closed Open Open Open	These switch settings specify the terminal's HP-IB device address as 29.
	SC:	Closed	This switch setting indicates that the terminal is not the System Controller.
LSB MSB	B0: B1: B2: B3: B4:	Closed Closed Open Open Open	These switch settings specify the terminal's HP-IB device address as 28.
	SC:	Open	This switch setting indicates that the terminal is the System Con- troller.

The HP 7245A Plotter/Printer is assigned HP-IB device address 5 by setting the address switches A1 through A5 on the back panel as follows:

LSB A1: 1 A2: 0 A3: 1 A4: 0 MSB A5: 0

TOR

RΛ.

Note: Address 5 is assigned to the Plotter function of the HP 7245A; address 6 is automatically assigned to the Printer function of the HP 7245A.

The HP 2631A/G Printer is assigned HP-IB device address 7 by setting the address switches 1 through 5 on the back panel as follows:

LSB 5: 1 (closed)

4: 1 (closed)

3: 1 (closed)

2: 0 (open)

MSB 1: 0 (open)

Note that switches 6 and 7 on the back panel of the HP 2631A/G should both be set to the open position.

The HP 2631A/G Printer is one of those devices which limits the overall amount of HP-IB interconnecting cable to an average of one meter per device load. With four actual devices plus seven additional device loads simulated by the HP-IB Interface Adapter of the System Controller terminal, we can therefore have up to 11 meters of HP-IB interconnecting cable in our sample configuration.

Once the configuration is established as described above, you may specify the HP 7245A Plotter/Printer as the output device for plots produced by an AGL program by including the following statement at the start of your AGL program:

#### PLOTR (5,1)

where the "5" specifies the HP 7245A plotter function HP-IB device address.

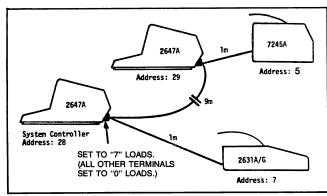


Figure 8-5. Shared Plotter/Line Printer Configuration

You may also copy the content of the terminal's graphics display memory to the HP 7245A printer function by entering the following in the terminal's command channel and then pressing

### TRANSFER ALL FROM GRAPHICS TO HP-IB#6

Note that if the HP 2631 Printer is the G version, you may do the same with that device by specifying HP-IB#7 in the above command.

You may also copy the content of the terminal's alphanumeric display memory to either of the printers by entering the following in the terminal's command channel and then pressing

#### COPY ALL FROM DISPLAY TO HP-IB#n

where n is the HP-IB device address of the target printer (6 or 7 in our sample configuration).

You may also copy the content of one terminal's alphanumeric display memory to that of the other terminal by entering the following in the command channel and then pressing ...:

#### COPY ALL FROM DISPLAY TO HP-IB#n

where n is the HP-IB device address of the target terminal.

Figures 8-6 and 8-7 illustrate larger HP 13296A Shared Peripheral Interface configurations. The commands for interacting between your HP 2647A Intelligent Graphics Terminal and the other devices in the configuration are as described in the previous two examples.

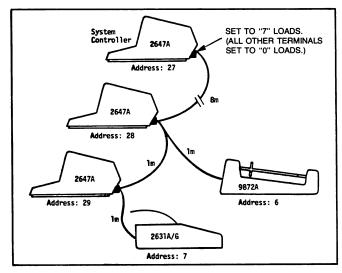


Figure 8-6. 3-Terminal, Shared Plotter/Printer Configuration


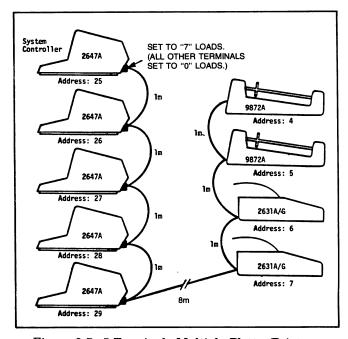


Figure 8-7. 5-Terminal, Multiple Plotter/Printer Configuration

 

# **APPLICATIONS**

APPENDIX

A

#### INTRODUCTION

This appendix contains sample applications using the terminal's unique features. They can be used as a guide in developing your own applications.


#### **MULTIPOINT EXAMPLE**

Suppose we have a group of terminals set up in a synchronous multipoint configuration. We wish to determine status of the left cartridge of the terminal with group ID D and device ID A.

We wish to send the printer status query escape sequence to terminal DA. In multipoint, this requires selecting that terminal first. Send the select sequence

Note the sync characters present before and after the EOT PAD (there must be at least 3 in both places). Turn the line around to receive (multipoint is half duplex) and the terminal will send an ACKO to indicate it is ready to receive:

Turn around the line again and give the terminal the cartridge status request embedded in the appropriate protocol characters:

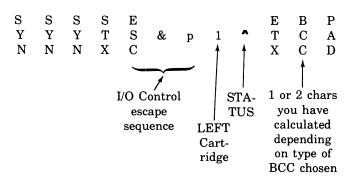

The terminal returns an ACK1 after the next turnaround


if the data was OK and a NAK

if not. In the latter case retransmit the escape sequence above; either a parity error occurred or the BCC is wrong. Check that the proper parity is selected on the keyboard switch and the proper BCC is strapped on the data comm card.

To receive the printer status, poll terminal DA: send

After turnaround, you may receive from the terminal

This means the terminal is not yet ready to send status. Poll again until you receive it:

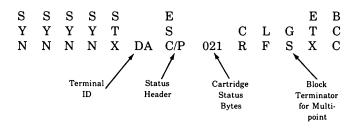

You should check the BCC the terminal sends to assure the integrity of the data.

If it checks and no parity errors were detected, send the terminal an ACK1 after you turn the line around:

After flipping to receive mode, the program will get:

from the terminal indicating it has no more data to send for the moment. Now the program may examine the status byte to glean whatever information it desires from them.

### **Applications**

If the data comm had been asynchronous, the procedure would be identical except that the sync characters are not required to be sent to the terminal (although doing so is harmless) and no sync headers would be sent by the terminal (unless strap J05 were open). So except for hardware considerations, the process flows in much the same fashion in both communication methods.

Incidentally, the programmer would not normally need to perform such tasks as turning the communication lines from send to receive and vice versa, placing the STX, ETX framing characters on the messages, calculating BCC or sending select and poll sequences. At the higher level, the program simply makes output and input statements. However, this example indicates the complete process that occurs for such a two-way communication as a status request. Transactions like cursor sensing would follow exactly the same lines; only escape sequences specific to the operation differ.

# **DIGITIZER PROGRAM EXAMPLE**

Table A-1 gives a sample program to drive an HP 9874A Digitizer.

Table A-1. HP 9874A Digitizer Driver Using Rubber Band Line

```
1000 PEM ********************************
1010 REM *
1020 REM * 9874 DIGITIZER DRIVER USING 2647A RUBBER BAND LINE
1030 REM *
1040 REM * SETUP: 9874 MUST USE HP-IB ADDRESS 15
1050 REM *
1060 REM * OPERATION: MOVING DIGITIZER CURSOR WILL MOVE 2647 CURSOR
                      PRESSING DIGITIZE SWITCH WILL:
1070 REM *
                        MOVE 2647 PEN TO CURSOR POSITION
1080 REM *
                      PRESSING DIGITIZE SWITCH IN DRAW MODE WILL
1090 REM *
1100 REM *
                        DRAW A LINE FROM PEN POSITION TO CURSOR
                        POSITION AND THEN CHANGE PEN TO CURSOR
1110 REM *
1120 REM *
                        POSITION
                      SPECIAL FUNCTION KEYS:
1130 REM *
                        fa = MOVE MODE
1140 REM *
                        fb = DRAW MODE
1150 REM *
                        fc = STOP PROGRAM
1160 REM *
                        fd, fe = NOT USED
1170 REM *
1180 REM *
                      WORKS IN BOTH SINGLE AND CONTINIOUS MODES
1190 REM *
1210 REM
1220 INTEGER X,Y,Z,A,St,Pn
1230 ASSIGN "H#15" TO #1
1240 REM * INITIALIZE 9874, SET SINGLE MODE, SET AIR TOGGLE MODE,
1250 REM * BEEP AND TURN ON fa LED
1240 PRINT #1; "IN; SG; AT; BP; SK 1"
1270 REM * SET PEN CONTROL FOR MOVE MODE
1280 Pn=-2
1290 REM * INITIALIZE PLOTTING DEVICE (2647)
1300 PLOTE
1310 REM * SET ASPECT RATIO AND SCALE TO ACCOMMODATE 9874
1320 SETAR (1,29)
1330 SCALE (0,17400,0,13500)
1340 REM * CLEAR GRAPHICS MEMORY, TURN ON GRAHICS CURSOR AND
             RUBBER BAND LINE
1350 REM *
1360 PRINT CHR$(27)&"*dfakM"
1370 REM * REQUEST DIGITIZER STATUS AND READ IT
1380 PRINT #1; "OS"
1390 READ #1;St
1400 REM * HAS A KEY BEEN PRESSED?
1410 IF St AND 128 THEN 1540
1420 REM * IS A DATA POINT READY?
1430 IF St AND 4 THEN 1650
1440 REM * REQUEST 9874 CURSOR POSITION AND READ IT
1450 PRINT #1:"OC"
1460 READ #1;X,Y,Z,A
1470 REM * PRINT X AND Y VALUES ON 9874 DISPLAY
1480 PRINT #1 USING 1710;X,Y
1490 REM * MOVE 2647 CURSOR TO CORRESPOND TO 9874 CURSOR
1500 POINT (X,Y)
1510 REM * LOOK AT STATUS AGAIN
1520 GOTO 1380
 1530 REM * REQUEST KEY CODE AND READ IT
 1540 PRINT #1; "OK"
 1550 READ #1;Ky
 1560 REM * IF fo KEY CHANGE TO MOVE MODE
 1570 IF Ky AND 1 THEN Pn=-2
 1580 REM * IF fb KEY CHANGE TO DRAW MODE
 1590 IF Ky AND 2 THEN Pn=-1
 1600 REM * IF fc KEY STOP PROGRAM
 1610 IF Ky AND 4 THEN STOP
 1620 REM * GO UPDATE CURSOR
 1630 GOTO 1450
 1640 REM * REQUEST DATA POINT AND READ IT
 1650 PRINT #1; "OD"
1660 READ #1; X, Y, Z, A
 1670 REM * MÓVÉ PEN OR DRAW LINE
1680 PLOT (X,Y,Pn)
 1690 REM * GO UPDATE CURSOR
 1700 GOTO 1450
 1710 IMAGE "LB", XX, DDDDD, X, DDDDD, XX
 1720 END
```

•

# REFERENCE TABLES

# INTRODUCTION

This appendix contains the following reference information for each model terminal covered by this manual:

- List of Specifications
- Programmer's Reference Table

- Character Code Chart
- List of Options and Accessories

A Large Character Set coding table for forming characters is included at the end of this appendix.

#### Table B-1. Specifications

**GENERAL** 

Screen Size: 127 mm (5 inches) X 254 mm (10 inches)
Screen Capacity: 24 lines X 80 columns (alphanumeric)

720 dots X 360 rows (graphics)

Character Generation: 7 X 9 enhanced (alphanumeric)

9 X 15 dot character cell Non-interlaced raster scan

Character Size: 2.46 mm (.097 inches) X 3.175 mm

(.125 inches) (alphanumeric)5 X 7 dot character cell (graphics)

Character Set: 128 character upper and lower case (alphanumeric)
Cursor: Blinking-underline (alphanumeric) Crosshair (graphics)
Display Modes: White on Black; Black on White (Inverse video).
Optional half-bright, underline and blinking.

Refresh Rate: 60 Hz or 50 Hz (2647-015 for 50 Hz)

Tube Phospor: P4

Implosion Protection: Bonded implosion panel

Memory:

Alphanumeric: 75 lines of 80 characters maximum (less

enhancements)

Graphics: 720 dots by 360 rows of displayable points

Basic Workspace: approximately 500 BASIC statements in a

maximum of 16K bytes BASIC workspace, actual number of lines depends on program

complexity.

Option Slots: 1 available

Keyboard: Detachable, bit pairing; User-defined soft keys, 18 control and editing keys; Graphics pad; cursor pad; auto-repeat, n-key rollover; 1.2 m (4 foot) cable.

Cartridge Tape; two mechanisms Read/Write Speed: 10 ips Search/Rewind Speed: 60 ips

Recording: 800 bpi

Mini Cartridge: 110 kilobyte capacity (maximum per cartridge)

#### **DATA COMMUNICATIONS**

Data Rate: 110, 150, 300, 1200, 2400, 4800, 9600 baud, and exexternal. Switch selectable. (110 selects two stop bits). Operation above 1200 baud may require nulls or handshake protocol to insure data integrity. Basic language control in the 2647A requires handshaking protocol to a host CPU. External clocking requires a TTL signal 16X bps.

Shared peripheral support limited to a maximum of 4 devices at a maximum of one meter between each device. Compatible with the following devices: 2631A-046, 9872A, 7245-001. Maximum of three printers.

Maximum baud rate of on-line BASIC programs utilizing multipoint will typically be lower than point to point protocol.

Vector Drawing Time (9600 baud, typical):

7ms — half screen 10ms — full screen

Standard Asynchronous Communications Interface: EIA standard RS232C; fully compatible with Bell 103A modems; compatible with Bell 202C/D/S/T modems,

Choice of main channel or reverse channel line turnaround for half duplex operation.

Optional Communications Interfaces (see 13260A/B/C/D Communications data sheet for details):

• Current loop, split speed, custom baud rates

Asynchronous Multipoint Communications

Synchronous Multipoint Communications

Transmission Modes; full or half duplex, asynchronous

Operating Modes: On-Line; Off-Line; Character, Block

Parity: Switch selectable; Even, Odd, None

**ENVIRONMENTAL CONDITIONS** 

Temperature, Free Space Ambient

Non-Operating: -10 to  $60^{\circ}$ C (-15 to  $+140^{\circ}$ F) Operating: 5 to  $40^{\circ}$ C(+41 to  $+104^{\circ}$ F)

Humidity: 20 to 80% (non-condensing)

Altitude:

Non-Operating: Sea level to 7620 metres (25,000 feet) Operating: Sea level to 4572 metres (15,000 feet)

Vibration and Shock (Type testing to qualify for normal ship-

ping and handling in original shipping carton):

Vibration: .37 mm (0.015") pp, 10 to 55 Hz, 3 axis

Shock: 30g, 11 ms, 1/2 sine

PHYSICAL SPECIFICATIONS

Display Monitor Weight: 21.9 kg (48 pounds)

Keyboard Weight: 3.2kg (7 pounds)

Display Monitor Dimensions: 444 mmW X 457 mmD X 342 mmH (17.5"W X 18"D X 13.5"H) (648 mmD (25.5"D) including

keyboard)

Keyboard Dimensions: 444 mmW X 216 mmD X 90 mmH (17.5"

W X 8.5"D X 3.5"H)

POWER REQUIREMENTS

Input Voltage: 115 (+10% -23%) at 50/60 Hz (±0.2%)

230 (+10% -23%) at 50 Hz (±0.2%)

Power Consumption: 115W to 150W max

**PRODUCT SAFETY** 

Product meets:

UL Requirements for: EDP equipment, office appliances,

teaching equipment

CSA Requirements for: EDP equipment

SEV Switzerland FTZ (RFI) Germany

FTZ (DATA COMM) Germany GPO (DATA COMM) U.K.

U.L. and CSA labels are applied to equipment shipped to the U.S. and Canada.

SEV, FTZ (RFI), FTZ (DATACOMM). Labels are applied to equipment shipped to Europe. (Units with Option 015)

PRODUCT SUPPORT

HP SYSTEMS SUPPORT

Refer to appropriate HP system data sheet for use and support of 2647A in these systems. When this product is used in a customer-assembled system, the overall operational responsibility of the system rests with the customer.

INSTALLATION

All product preparation can be performed by the owner/user.

Refer to reference manual supplied with unit for detailed instructions. HP assistance is provided for installation upon request and at prevailing rates,

HARDWARE SUPPLIED

2647A Intelligent Graphics Terminal 2 Blank Tape Cartridges 1 System Tape Cartridge

DOCUMENTATION SUPPLIED

2647A User's Manual (02647-90001) 2647A Reference Manual (02647-90002) 2647A Terminal BASIC Manual (02647-90005)

Table B-2. Programmer's Reference Table

KE	Y CODE	FUNCTION	KEY	CODE	FUNCTION
	ALPHANUMERIC DISPL	AY CONTROL		ESC 6	Alphabetic only field
1	ESC A	Cursor up		ESC 7	Numeric only field
William Willia	ESC B	Cursor down		ESC 8	Alphanumeric field
	ESC C	Cursor right			
•	ESC D	Cursor left		EDITING	
BACK SPACE	BS (H <sup>c</sup> )	Cursor left one space	NSERT UNE	ESC L	Insert a blank line
CNR CNR	ESC F	Cursor home down	OCLUTE AING	ESC M	Delete line containing cursor
	ESC G	Cursor return	OELETE CHAR	ESC P	Delete character at cursor
S	ESC h	Cursor home (excluding transmit- only fields)	CNIL CRAFT	ESC O	Delete character with wraparound from next line
	ESC H	Home cursor (including transmit- only fields)	CHAR & indicator	ESC Q (on) ESC R (off)	Insert succeeding inputs at cursor
RETURN	CR (M <sup>c</sup> )	Move cursor to left margin	CNR. PASERT, CHAR.	ESC N (on) ESC R (off)	Character Wraparound Mode. Insert succeeding inputs at cursor with wraparound to next line.
THE ACT OF STREET	LF (J <sup>c</sup> )	Move cursor down one line			
rae Historia	HT (I <sup>C</sup> ) ESC I	Forward cursor to next tab position			
CNIL TAB	ESC i	Back tab		TERMINAL CONTRO	
OF  ONTE BACK SPACE			ESC		Leads off an ASCII escape sequence
SET TAB	ESC 1	Set tab at the current cursor column	CNI		Used to generate ASCII control codes and alternate key functions
CLEAR TAB	ESC 2	Clear the tab at the current cursor column	COX	ESC&k0C(off) ESC&k1C(on)	Upper-case alphabetical lock
CNIL GLEAR TAB	ESC 3	Clear all tabs	MEMORY & indicator	ESC I (on) ESC m (off)	Memory overflow protect; display lock
ORL C	ESC 4	Set left margin	ut ut	ESC&k0A(off) ESC&k1A(on)	Line Feed with each terminal car- riage return
CNIL ->	ESC 5	Set right margin	REMOTE	ESC&k0R(off) ESC&k1R(on)	Remote (on-line) operations; otherwise, off-line operation
CLEAR DS-43	ESC J	Clear memory from cursor position to end of memory	BLOCK MODE	ESC&k0B(off) ESC&k1B(on)	Block Mode: data displayed but not transmitted until requested; other-
CHIL CLEAR DSPLY	ESC K	Clear line from the cursor to end of line			wise, terminal is in Character Mode and data transmitted as typed
ROUL UP	ESC S	Scroll the display up one line	Esitin		Enables block transfers
ROLL	ESC T	Scroll the display down one line	BHEAK	1	Transmits BREAK signal to inter- rupt computer
MEXT PAGE	ESC U	Display the next 24 lines of memory	TRANSMIT indicator		Data link exists
PAGE	ESC V	Display the previous 24 lines of memory	FUNCTIONS & Indicator	ESC Y (on) ESC Z (off)	Control functions disabled and displayed
CONT. PREV PAGE		Display the next display-workspace	ONTE DISPLAY FUNCTIONS	ESC y (on) ESC Z (off)	Monitor Mode: display all codes re- ceived from data comm lines
CNR 11	ESC & d	Turn on display enhance	REGET TERMULAL	ESC g	(First press): frees the keyboard and clears I/O operations
CNIL f2	ESC [	Start an unprotected field	RESET TERMINAL	ESC E	(Second press): sets the terminal to power-on state
CNTL f3	ESC ]	End an unprotected field or transmit- only field	TAPE TEST	ESC z	Terminal Self-Test (no tape test)
CNIL f4	ESC V (of)	Turn format mode on. Only unprotected fields can be modified.			
GVIL f5	ESC X (off)				
cate f6	ESC {	Start transmit-only field			

Table B-2. Programmer's Reference Table (Continued)

KEY	CODE	FUNCTION	KEY	CODE	FUNCTION
	ADDITIONAL FUN	CTIONS			
_	ENQ (E <sup>c</sup> )	Enquiry from the computer		ESC & f <parameters></parameters>	Define soft keys
	ACK (F <sup>c</sup> )	Acknowledge — response to ENQ	where:		
	BEL (G <sup>c</sup> )	Bell	$<$ parameters $>$ = $\{0-8\}$ k 1		{1-80}L <label string=""> <text string<="" td=""></text></label>
	ESC)	Define alternate character set:		2 (transmit only)	%" to the 11 key. The key sho
	SO (N <sup>C</sup> )	Turn on alternate character set	function as no	ormal keyboard input.	N HELLO-MYACNT&
	SI (O <sup>c</sup> )	Turn off alternate character set			Execute the soft key.
	DC1 (Q <sup>c</sup> )	Block transfer trigger		200 til \key # / 2	Key # = 0-8
	DC2 (R <sup>c</sup> )	Block transfer enable from terminal			
	RS ( <mark>"</mark> °)	Record separator	KEY	DEFAULT	PROGRAMMABLE
	US (_°)	Unit separator	RETURN CONTROL OF THE	CR	
	ESC @	Delay one second	f1	ESC p to computer	
	ESC '	Cursor sensing (screen relative)	f2	ESC q to	
	ESC a	Cursor sensing (absolute)		computer	
	ESC b ESC c	Keyboard enable Keyboard disable	f3	ESC r to computer	
	ESC d	Block transfer enable from computer (See DC2)	<b>f4</b>	ESC s to computer	Up to 80-character sequence to each key (local, transmit or bo
	ESC e	Fast binary read	<b>f</b> 5	ESC t to	
	ESC f	Modem hang-up		computer	
	ESC j (on) ESC k (off)	Display user-defined soft keys		ESC u to computer	
	ESC A	Terminal status		ESC v to computer	
	ESC ~	Extended status request	f8	ESC w to computer	
	ESC & a	Cursor addressing	KEY	CODE	FUNCTION
	<pre><parameters></parameters></pre>			ESC & g	Simulate BA DE hous (see Ba
ole: Cursor to	12th row 35th column (+	, - for relative addressing)		<pre><parameters></parameters></pre>	Simulate PA, PF keys (see Re erence Manual)
	12r 35c				
	12r 35c		and the second second	ESC & k	Define latching keys
	12r 35c ESC & b	HP diagnostics ONLY			Define latching keys
	ESC & b <pre>parameters&gt; or</pre>	HP diagnostics ONLY	where:	ESC & k <parameters></parameters>	
	ESC & b <pre>parameters&gt;</pre>	HP diagnostics ONLY	where:	ESC & k <parameters>  a (Auto 0 (up) b (Blood</parameters>	o LF) ok Mode)
E a a 1	ESC & b <pre>parameters&gt; or ESC &amp; c</pre>	HP diagnostics ONLY  Turn on display enhancement		ESC & k <parameters>  a (Auto 0 (up) b (Blood</parameters>	o LF) ck Mode) os Lock)
taai	ESC & b <pre></pre>	Turn on display enhancement	<pre><parameter> =</parameter></pre>	ESC & k <parameters>  a (Aut  0 (up) b (Bloo 1 (down) c (Cap r (Rem</parameters>	o LF) ck Mode) os Lock) note)
E & a 1	ESC & b <pre> <pre></pre></pre>	Turn on display enhancement	<pre><pre><pre><pre><pre><pre><pre><pre></pre></pre></pre></pre></pre></pre></pre></pre>	ESC & k <pre><pre><pre><pre></pre></pre></pre></pre>	o LF) ck Mode) os Lock)
fi , hrough O > : enhancements	ESC & b <pre> <pre></pre></pre>	Turn on display enhancement	<pre><parameter> =  Example: Block Mode up</parameter></pre>	ESC & k <parameters>  a (Automorphic (Automo</parameters>	o LF) ck Mode) ss Lock) note) - down Caps Lock down
fi , hrough O >	ESC & b <pre></pre>	Turn on display enhancement	<pre><pre><pre><pre><pre><pre><pre><pre></pre></pre></pre></pre></pre></pre></pre></pre>	ESC & k <pre></pre>	o LF) ck Mode) ss Lock) note)  F down Caps Lock down  In REMOTE, transfers data fro source device to computer. In LOCAL, transfers one file fro
fi , through ② > e: enhancements ple: Select half 도요d M	ESC & b <pre></pre>	Turn on display enhancement erline.	<pre><parameter> = Example: Block Mode up</parameter></pre>	ESC & k <pre></pre>	o LF) ck Mode) ss Lock) note)  F down Caps Lock down  In REMOTE, transfers data fro source device to computer.
fi , nrough O > : enhancements : ble: Select half	ESC & b <pre> <pre></pre></pre>	Turn on display enhancement erline.	<pre><parameter> =  Example: Block Mode up</parameter></pre>	ESC & k <pre></pre>	o LF) ck Mode) ss Lock) sotoe)  F down Caps Lock down  In REMOTE, transfers data fro source device to computer. In LOCAL, transfers one file fro source device to DISPLAY.  In REMOTE, transfers data fro computer to destination device.
fi , hrough O > :: enhancements a ple: Select half fc & d M  Half- Bright Under-	ESC & b <pre> <pre></pre></pre>	Turn on display enhancement  erline.  erline.	<pre><parameter> = Example: Block Mode up</parameter></pre>	ESC & k <pre></pre>	o LF) ck Mode) ss Lock) sotoe)  F down Caps Lock down  In REMOTE, transfers data fro source device to computer. In LOCAL, transfers one file fro source device to DISPLAY.  In REMOTE, transfers data from computer to destination device.
fi , hrough O > : enhancements - ple: Select half- Fc & d M  Half- Bright	ESC & b <pre> <pre></pre></pre>	Turn on display enhancement  erline.  aracter  i J K L M N O  x x x x x x x  x x x x	<pre><parameter> = Example: Block Mode up</parameter></pre>	ESC & k <pre></pre>	o LF)  ck Mode)  ss Lock)  so Lock)  fown Caps Lock down  In REMOTE, transfers data fro source device to computer.  In LOCAL, transfers one file fro source device to DISPLAY.  In REMOTE, transfers data from computer to destination device.  In LOCAL, transfers one file from DISPLAY to destination device.  In REMOTE, enables block transfers one file from DISPLAY to destination device.
fi , hrough O > : enhancements = ple: Select half Ft. & d M  Half- Bright Under- line Inverse Video	ESC & b <pre> <pre></pre></pre>	Turn on display enhancement  aracter  i J K L M N O  x x x x x x x  x x x x x	<pre><pre><pre><pre><pre><pre>Example: Block Mode up</pre></pre></pre></pre></pre></pre>	ESC & k <pre></pre>	o LF)  ck Mode)  ss Lock)  so Lock)  fown Caps Lock down  In REMOTE, transfers data fro source device to computer.  In LOCAL, transfers one file fro source device to DISPLAY.  In REMOTE, transfers data from computer to destination device.  In LOCAL, transfers one file from DISPLAY to destination device.  In REMOTE, enables block transfers one file from DISPLAY to destination device.
fi ,  rrough O >  : enhancements =  cle: Select half	ESC & b <pre> <pre></pre></pre>	Turn on display enhancement  erline.  aracter  i J K L M N O  x x x x x x x  x x x x	<pre><pre><pre><pre><pre><pre>Example: Block Mode up</pre></pre></pre></pre></pre></pre>	ESC & k <pre><pre><pre></pre></pre></pre>	o LF) ck Mode) ss Lock) ss Lock) note)  F down Caps Lock down  In REMOTE, transfers data fro source device to computer. In LOCAL, transfers one file fro source device to DISPLAY.  In REMOTE, transfers data fror computer to destination device. In LOCAL, transfers one file from DISPLAY to destination device.  In REMOTE, enables block transfers. In LOCAL, operates same as

Table B-2. Programmer's Reference Table (Continued)

	KEY COL	DE FUNCTION		KEY	C	ODE	FUNCTION
	GRAPHICS CONTROL	L SEQUENCES				VECTOR	DRAWING MODE
	ESC + <control< td=""><td>I sequence&gt;</td><td></td><td></td><td></td><td>ESC *</td><td>m <parameters></parameters></td></control<>	I sequence>				ESC *	m <parameters></parameters>
	aster dump			<u> </u>		<mode> a</mode>	Select drawing mode (0-4)*
	splay control raphics text label					<li>type&gt; b</li>	Select line type (1-11)**
	ode control ot control					<pattern> c</pattern>	Define line pattern (1 byte)
r = R	aster dump atus		- 109 - 400), silva - <u>140</u>	in the second of		<pattern> d</pattern>	
	ompatibility mode						
				**************************************	************************************	x1,y1,x2,y2> e	Fill area, absolute
KE	Y CODE	FUNCTION			<	x1,y1,x2,y2> f	Fill area, relocatable
	DISPLAY C	ONTROL				<x,y> j</x,y>	Set relocatable origin
	ESC • d <pa< td=""><td>arameters&gt;</td><td></td><td></td><td></td><td>k</td><td>그래 그는 사람 사람 하였습니다. 그는 그는 사람들은 사람들이 하는 그 때문에 되었다. 그 그 없는 그 없는 그 없는 것이다.</td></pa<>	arameters>				k	그래 그는 사람 사람 하였습니다. 그는 그는 사람들은 사람들이 하는 그 때문에 되었다. 그 그 없는 그 없는 그 없는 것이다.
SHEFT		a Clear graphics memory					position
		b Set graphics memory					Set relocatable origin to graphics cursor position
SHITT G DSP		c Turn on graphics display	SH	T SZE		<size> n</size>	n Set graphics text size (1-8)
3+6f4 \(\sigma \) 0 02P		d Turn off graphics display	\$14	FT T ANG		<rotation> n</rotation>	• Set graphics text orientation (1-4)
Sent A DSP		e Turn on alphanumeric displa	y s	FT ANG		o	Turn on text slant
SHEET A DSP		f Turn off alphanumeric displa	у 5+	FT T ANG		,	Turn off text slant
ZOOM ET		g Turn on zoom	<u> </u>			<0-9> c	Set graphics text origin
			1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1				Set graphics defaults
Z00M		h Turn off zoom					: NOP
zoow or zoow	<size></size>	i Set zoom size (1-16)	• 0	(no effect), 1 (cle	ar), 2 (set), 3	(complement),	4 (jam)
77 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	<x,y></x,y>	L Cot room position					
		j Set zoom position	2	(solid line) (user line pattern)	) 6	(line #2) (line #3)	9 (line #6) 10 (line #7)
CURSON AND ADDRESS OF THE COURSON		k Turn on graphics cursor	2 3		) 6 n) 7		
Cunton Cunton	egg Sig in	k Turn on graphics cursor	2 3	(user line pattern) (user area pattern	) 6 n) 7	(line #3) (line #4)	10 (line #7)
CONSOR		k Turn on graphics cursor	2 3 4	(user line pattern) (user area pattern) (line #1)	) 6 n) 7 8	(line #3) (line #4)	10 (fine #7) 11 (point plot)  Stext size
Conson Conson		k Turn on graphics cursor	2 3 4	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #5) mode, a graphi	10 (fine #7) 11 (point plot) es text size  r justified.
Conson  Seri		k Turn on graphics cursor  I Turn off graphics cursor	2 3 4	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #5) mode, a graphic e text to be cente	10 (fine #7) 11 (point plot)  ss text size or justified.  ### ANDS
Curron  Sur 1  Final Curron  F		k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line	2 3 4 Exar	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #5)  mode, a graphic text to be cente  DTTING CON  SC * p < paran	10 (fine #7) 11 (point plot)  ss text size or justified.  ### ANDS
Seri Para	<x,y></x,y>	k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line	2 3 4 Exar	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #5)  mode, a graphic text to be cente  DTTING CON  SC * p < paran	10 (fine #7) 11 (point plot)  es text size for m 1 a 2 m o 4 Q  iMANDS  neters>
CORPORT  G CHISON  SHIFT  FIRST  FIRST  A 1		k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line  Move graphics cursor absol	2 3 4 Exar	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #5) mode, a graphic etext to be cente DTTING CON SC * p < paran	10 (fine #7) 11 (point plot)  es text size for m 1 a 2m o 4Q  IMANDS  neters> a Lift the pen  b Lower the pen
Seri (***)	<x.y></x.y>	k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line  Move graphics cursor absol	2 3 4 Exar	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #5)  mode, a graphic text to be cente  DTTING COM  SC * p < paran	10 (fine #7) 11 (point plot)  Se text size
Control  Sert Free  Sert A ,	<x.y></x.y>	k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line  Move graphics cursor absol  Move graphics cursor incre	2 3 4 Exar	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #5)  mode, a graphic text to be cente  DTTING CON  SC * p < paran	10 (fine #7) 11 (point plot)  cs text size
Seri Free	<x.y></x.y>	k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line  Move graphics cursor absol  p Move graphics cursor incre q Turn on alphanumeric cursor	2 3 4  Exar  ute amental or or	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #4) (line #5)  mode, a graphic text to be cente  DTTING CON  GC * p < paran	10 (fine #7) 11 (point plot)  Se text size
Currich Currich Sur 1	<x.y></x.y>	k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line  Move graphics cursor absol  p Move graphics cursor incre q Turn on alphanumeric cursor  r Turn off alphanumeric cursor	2 3 4  Exar  ute   amental   or	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #5)  mode, a graphic text to be cente  DTTING CON  SC * p < paran	10 (fine #7) 11 (point plot)  Stream 12 mo 4Q  MANDS  The term 12 mo 4Q  Lift the pen  Lower the pen  Use graphics cursor as new point  Draw a point at the current pen position and lift the pen  Set relocatable origin to the current pen position
Consci.	<x.y></x.y>	k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line  Move graphics cursor absol  p Move graphics cursor incre q Turn on alphanumeric cursor  r Turn off alphanumeric curso  s Turn on graphics text mode  t Turn off graphics text mode	2 3 4  Exar  ute   amental   or	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #5)  mode, a graphic text to be cente  DTTING CON  SC * p < paran	10 (fine #7) 11 (point plot)  Se text size
Curicular Start St	<x.y></x.y>	k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line  Move graphics cursor absol  p Move graphics cursor incre q Turn on alphanumeric cursor  r Turn off alphanumeric curso  s Turn on graphics text mode	2 3 4  Exar  ute   amental   or	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #5)  mode, a graphic text to be cente  OTTING CON  SC * p < paran	10 (fine #7) 11 (point plot)  cs text size
Curson  Curson	<x,y> <x,y> <indextolor <="" td="">   Clear the graphics display, pos</indextolor></x,y></x,y>	k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line  o Move graphics cursor absol  p Move graphics cursor incre q Turn on alphanumeric curso  r Turn off alphanumeric curso  s Turn on graphics text mode  t Turn off graphics text mode  v NOP	Exar  ute  amental  or	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #5)  mode, a graphic text to be cente  OTTING CON  SC * p < paran	10 (fine #7) 11 (point plot)  cs text size
50°	<x.y></x.y>	k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line  o Move graphics cursor absol  p Move graphics cursor incre q Turn on alphanumeric curso  r Turn off alphanumeric curso  s Turn on graphics text mode  t Turn off graphics text mode  v NOP  sition the cursor at x=100, y=100, s.	Exar  ute  amental  or	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #5)  mode, a graphic text to be cente  DTTING CON  SC * p < paran	10 (fine #7) 11 (point plot)  Statext size r   1
Stop Stop	Clear the graphics display, pos cursor on, and zoom to 4 times Et a d a 100,100 o k 41 G	k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line  Nove graphics cursor absol  Move graphics cursor incre q Turn on alphanumeric cursor  Turn off alphanumeric cursor  Turn off graphics text mode  t Turn off graphics text mode  v NOP  intinition the cursor at x=100, y=100, 3.	Exar  ute  amental  or	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #4) (line #5)  mode, a graphic text to be cente  DTTING CON  GC * p < paran	10 (fine #7) 11 (point plot)  Se text size
Stop Stop	Clear the graphics display, pos cursor on, and zoom to 4 times Et and a 100,1000 k 41 G	k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line  Nove graphics cursor absol  Move graphics cursor incre q Turn on alphanumeric cursor  Turn off alphanumeric cursor  Turn on graphics text mode  t Turn off graphics text mode  v NOP  ittion the cursor at x=100, y=100, 3.	Exar  ute  amental  or	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #4) (line #5)  mode, a graphic text to be cente  DTTING CON  GC * p < paran	10 (fine #7) 11 (point plot)  Sestext size
Stop Stop	Clear the graphics display, pos cursor on, and zoom to 4 times Et a d a 100,100 o k 41 G	k Turn on graphics cursor  I Turn off graphics cursor  m Turn on rubber band line  n Turn off rubber band line  o Move graphics cursor absol  p Move graphics cursor incre q Turn on alphanumeric cursor  r Turn off alphanumeric cursor  s Turn on graphics text mode  t Turn off graphics text mode  z NOP  ditton the cursor at x=100, y=100,  d.  LABEL  ch, the, teth, or te>	Exar  ute  amental  or	(user line pattern) (user area pattern) (line #1)	) 6 h) 7 8 e set drawing slanted. Set the	(line #3) (line #4) (line #4) (line #5)  mode, a graphik text to be cente  DTTING CON  GC * p < paran	10 (fine #7) 11 (point plot)  Se text size

Example: Draw a box 25 units wide and 10 units high, beginning at x=100, y=50. ጚ \* p a f 100 50 g 25,0 0,10 -25,0 0,-10Z

Table B-2. Programmer's Reference Table (Continued)

	CODE	FUNCTION		KEY		CODE	FUNC	TION
	RASTER DUM				COMPA	TIBILITY N	ODE	5.5
	ESC * r <paramete< td=""><td>1&gt;</td><td></td><td></td><td>ESC 4</td><td>t <paramete< td=""><td>r&gt;</td><td></td></paramete<></td></paramete<>	1>			ESC 4	t <paramete< td=""><td>r&gt;</td><td></td></paramete<>	r>	
	a	Start transfer	<u></u>			<0/1/2> a	Set graphics	input terminato
Trible 1	b	End transfer						R EOT, 2=non
	Ċ	Erase screen				<0/1> b	Set Page Ful (0=out, 1=in)	
	<b>d</b>	Turn on video	- 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1			<0/1> c	Set Page Full 0=out, 1=in)	
	•	Return raster status						
	10 mg/mg/80	Set all parameters to default values.				Z	NOP	
		Return raster size status ("720,360")	Keyboard I		aled comp	atibility mode.		
	k .	Return model number ("2647A")	Example:			The Reserve	e. the Page Full	Bucy etran
	<no. dots="" of=""> m</no.>	Window horizontal address		Et + t 0a 1		nator and set	uie rage ruii	ousy suap.
	<no. dots="" of=""> m</no.>	Window vertical address						
	<no. dots="" of=""> p</no.>	Window horizontal dimension						
	<no. dots="" of=""> q</no.>	Window vertical dimension						
	<no. dots="" of=""> s</no.>	Horizontal size of picture						
	<no. dots="" of=""> t</no.>	Vertical size of picture						
	<no. dots="" of=""> x</no.>	X offset						
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	<no. dots="" of=""> y</no.>	Y offset						
	<b>Z</b>	NOP						
	ESC • b <paramete< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td></paramete<>							
	<no. data="" of="" r<br="">bytes&gt;</no.>	Read specified number of data bytes (scan line) to datacomm.						
	<no. data="" of="" w<br="">bytes&gt;</no.>	Write specified number of bytes into graphics memory scan line.						
		graphics monory count into:						
	GRAPHICS STAT							
	ESC * s <parameter:< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td></parameter:<>							
	1	Read device I.D.						
-	2	Read pen position						
	3.000	Read graphics cursor position						
		Read cursor position and wait for						
	5	Read display size						
	6	Read graphics capabilities						
	7	Read graphics text status						
	8	Read zoom status						
	9 10	Read relocatable origin Read reset status						
	11	Read area shading						
	12	Read dynamics						

#### **DEVICE CONTROL**

NOTE 1: Uppercase characters in the command syntax are acceptable abbreviations (see "Abbreviated Command Sequence"). Characters in braces "{ }" are optional.

NOTE 2: Shaded escape sequences are compatible with HP 2641A, HP 2645A and HP 2648A terminals; however, it is recommended that the ESC,c command se-

NOTE 3: When using the ESC & p format, the <x> and <y> values refer to source device and destination device numbers:

2 = Right tape 3 = Display

4 = Printer

#### LEGEND

<device> defined as:

Left tape Right tape

EXternal printer

SHared printer#<n> (where n>4 i.e., SH#5)

Display TErminal#

Hp-ib#[#<s>[#<m>]]
where p = primary address
s = secondary address

m = module address

DAtacomm Null

Graphics

<name> defined as:

Source (only one may be selected)

Destination

LOG

user specified name


### **COMMAND SYNTAX** <command sequence>

ESC,c<abbreviated command sequence> %

ESC &p <parameters>

DESCRIPTION

#### **DEVICE CONTROL**

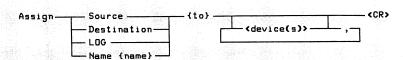

Example: Assign "Plotter" to Hp-ib device number 4. Assign Name PLOTTER to Hp-ib#4 <CR>

Assign Source (to) Left tape 9

ESC,cA S L % ESC &p 1S

Assigns left tape as source device.

Assign Source {to} Right tape %

ESC,cA S R %

Assigns right tape as Source device.

ESC,&p 2S

Assign Source (to) Display 9

ESC,cA S DI % ESC &p 3S

Assigns display as source device.

Assign Source {to} Hp-ib# %

ESC,cA S H# %

Assigns an HP-IB device as source device.

Assign Source (to) Graphics %

ESC,cA S G %

Assigns graphics memory as source device.

Assign Destination (to) Left tape %

ESC,cA D L %

Assigns left tape as Destination device.

Assign Destination (to) Right tape 9a

ESC,&p 1D ESC,cA D R %

Assigns right tape as Destination device.

ESC &p 2D

Assign Destination (to) Display %

ESC,cA D DI %

Assigns display as Destination device.

Assign Jestination (to) EXternal printer %

ESC &p 3D

ESC,cA D EX ESC &p 4D

Assigns local printer as Destination device.

Table B-2. Programmer's Reference Table (Continued)

ESC,c<abbreviated command sequence> % COMMAND SYNTAX or ESC &p <parameters> DESCRIPTION **DEVICE CONTROL (Continued)** Assign Destination (to) SHared printer#5 % ESC,cA D SH#5€ Assigns shared printer as Destination device. Assign Destination {to} Hp-ib#<n>#<n>#<n> % ESC,cA D H#<n> % Assigns an HP-IB device(s) as Destination device(s). Assign Destination (to) Graphics & ESC,cA D G S Assigns graphics memory as Destination device. Assign LOG (to) <device> % ESC,cA LOG <device> % Assigns any device as LOG device. Assign Name <user-defined name> {to} <device> % ESC,cA N <name> <device> % Assigns a user-specified name to any device. BYE -- (CR) ESC,cBYE % Defaults user.group name to "user.group" on shared printer listings. Window#(n>-CLOse Window#5 % ESC.cCLO W#5 % Removes the Message Line on the display. CLOse Window#6 % ESC,cCLO W#6 % Removes the Command Line on the display. CLOse Window#7 % ESC,cCLO W#7 % Removes the Soft Key Label Line on the display. COmpare A11 {of} <device> (device) -File <name> <name> Line <CR> <CR> <CR> Example: Compare a file on the display with a file on a device with a user name of COmpare File of Display to SALES <CR> COmpare All {of} <device> {to} <device> % ESC,cCO A <device> <device> % Compare data between devices. (All) ESC &p xs yd 1M COmpare File {of} <device> {to} <device> % ESC,cCO F <device> <device> % Compare data between devices. (File) ESC &p xs yd 1F COmpare Line {of} <device> {to} <device> % ESC,cCO L <device> <device> % Compare data between devices. (Line) ESC &p xs yd 1B COmpare All % ESC,cCO A % Compare data between previously-assigned Source and Destination devices. (All) ESC &p 1M COmpare File % ESC,cCO F % Compare data between previously-assigned Source and Destination devices, (File) or ESC &p 1F COmpare Line % ESC,cCO L % Compare data between previously-assigned Source and Destination devices. (Line) ESC &p 1B COmpare All or File or Line {of}<name> ESC,cCO <A or F or L> <name> <name> % Compares data between user-specified device names. {to}<name> % CONdition -<device> CR <name> Example: Assume the left tape is assigned the user name: "DATA".

Condition left tape with a user name of "DATA" and the right tape. CONdition DATA, Right tape <CR> ESC,cCON L or R CONdition Left tape or Right tape % Conditions left tape or right tape

ESC &p 1u or 2u 4C

Table B-2. Programmer's Reference Table (Continued)


COMMAND SYNTAX <command sequence>

ESC,c<abbreviated command sequence> % or

ESC &p <parameters>

DESCRIPTION

#### **DEVICE CONTROL (Continued)**

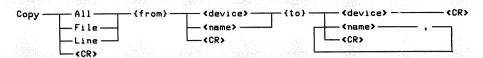

Example: Copy the entire contents of the left tape to the shared printer.

Copy All from Left tape to SHared printer#5 <CR>

NOTE: If you want to copy graphics data (i.e. binary), the TRANSFER command sequence must be used.

Copy File {from} Source {to} Display % ESC,c C F S DI Transfers one file from Source device to display. ESC,c C F DI D Transfers all data from display workspace to Destina-Copy File (from) Display (to) Destination % tion device. ESC,cC A S All files (current position) from previously-assigned Source device are transferred to previously-assigned Copy All S ESC &p M Destination device. ESC,cC % One file (current position) from previously-assigned Source device is transferred to previously-assigned Copy % ESC &p xs yd F Destination device. ESC,cC L % One line (current position) from previously-assigned Source device is transferred to previously-assigned Copy Line 9 ESC &p xs yd B ESC,cC A <device> <device> % All files (current position) from a specified device are Copy All {from} <device> {to} <device(s)> CR transferred to one or more specified device(s). ESC &p xs yd M Copy File {from} <device> {to} <device(s)> % ESC,cC F <device> <device> % One file (current position) from a specified device is transferred to one or more specified device(s). ESC &p xs yd F Copy Line  $\{from\} < device > \{to\} < device(s) > {}^{c}k$ ESC,c C L <device> <device> 9 One line (current position) from a specified device is transferred to one or more specified device(s). ESC &p xs yd B Copy All {from} <name> {to} <name> % ESC,cC A <name> <name> % All files (current position) from user-assigned device name are transferred to user-assigned device name(s). One file (current position) from user-assigned device name is transferred to user-assigned device name(s). Copy File {from} <name> {to} <name> CR ESC,cC F <name> <name> % One line (current position) from user-assigned device Copy Line {from} <name> {to} <name> % ESC,cC L <name> <name> % name is transferred to user-assigned device name(s).

Display ----- Window#<n> ----- <CR:

Example: Display the message "Insert the tape into the left slot."

Display Window#5<CR>

Insert the tape into the left slot <CR>

Display Window#<n> %

ESC,cDI W#<n> %

Display workspace 1, 2, 3, or 4, Message Line (5), Command Line (6), or Soft Key Label Line (7).

Disable — Edit {mode} — <CR>
or — Record {mode} — Enable — Verify {mode} —

Enable/Disable Edit % ESC,cE or D E % ESC,cE or D V % ESC,cE or D V %

Turns Edit Mode on/off.

ESC,cE or D V R ESC &p 10C (on) ESC &p 9C (off)

Toggles Verify Mode. (Reads each record transferred and compares it with the original.

Enable/Disable Record % ESC,cE or D R %

In REMOTE, transfers data from computer to destination device. In LOCAL, transfers one file from DIS-PLAY to destination device.

Table B-2. Programmer's Reference Table (Continued)

ESC,c<abbreviated command sequence> % **COMMAND SYNTAX** or ESC &p <parameters> <command sequence> DESCRIPTION **DEVICE CONTROL (Continued)** <device> (name) Example: Execute the list of commands in the present file on the right tape. EXecute Right tape <CR> EXecute <device or name> % ESC,cEX <device or name> % Executes commands stored on the specified device Command file Application EXIT Command File S ESC.cEXIT C % Terminates a command file. EXIT Application % ESC,cEXIT A % Terminates a subsystem (e.g., BASIC). -{on} «CR» <device> Example: Find the seventh file on the left tape. Find File 7 on Left tape <CR>> Example: Position the right tape forward 3 files. Find File +3 on Right tape <CR> Example: Find end-of-data on tape with user name "MEMO". Find End of Data on MEMO <CR> Find File<+, -n> {on} Left Tape % ESC,cF F <+, -n> L % Positions left tape to a relative (+, -n) or absolute (n) file. ESC &p (+, -n)p 1u 2C ESC,cF F <+,-n> R % Find File <+, -n> {on} Right tape  $^{C}$ R Positions right tape to a relative (+, -n) or absolute (n) file. ESC &p (+, -n)p 2u 2C Find End (of) Data (on) Left tape %3 ESC,cF E D L % Finds end-of-data on left tape. or ESC &p 1u 3C ESC,cF E D R % Find End {of} Data {on} Right tape % Finds end-of-data on right tape. or ESC &p 2u 3C HELLO -- (CR) ESC,cHELLO <user.group> % HELLO <user.group> % Enters user group name to be used on shared printer listing. User and group are each limited to 8 char-File Header -- <device> <name> Mark File Header (on) Left tape % ESC,cM F H L % Write a file mark on left tape. Mark File Header (on) Right tape % ESC,cM F H R % Writes a file mark on right tape. Mark File Header (on) EXternal printer %

ESC.cM F H EX %

ESC,cM F H SH#5 %

ESC,cM F H <name> %

Causes a Form Feed on external printer.

Causes a Form Feed on shared printer.

that has a user-assigned name.

Writes a file mark or causes a Form Feed on device

Mark File Header (on) SHared printer#5 %

Mark File Header {on} <name> %

COMMAND SYNTAX <command sequence>

ESC,c<abbreviated command sequence>  $^{\rm G}{\rm R}$  or

ESC &p <parameters>

DESCRIPTION

**DEVICE CONTROL (Continued)** 

REPort Status (of) ---- Command ---- <CR>

REPort Status (of) Command %

ESC,cREP S C %

Sends result of last command executed or current device state to the datacomm, if in remote. If last command was EXecute, REPort will be returned after EXecute terminates.

RESume — Command file — <CR>

RESume Command file %

ESC,cRES C %

Resumes execution of the command file after a


SUspend command is encountered.

RESume Application %

ESC, CRES A %

Resume operation of the subsystem after a SUspend

command is encountered.

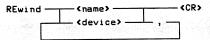

REwind Left tape %

ESC,cRE L %

Rewinds left tape.

or ESC &p 1u 0C

ESC,cRE R

Rewinds right tape.


or ESC &p 2u 0C

REwind <name> %

REwind Right tape c

ESC,cRE <name> %

Rewinds tape that has a user-assigned name.

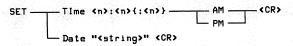

Example: Set time to 2:15:45 PM.

SET Time 2:15:45 PM <CR>

Example: Set date to Tuesday, August 8, 1978.

SET Date "Tuesday, August 8, 1978" <CR>

SET TIme <n>:<n>{:<n>} AM (or PM) %

ESC,cSET TI <n>:<n>{:<n>} AM or PM  $^{\mathbf{G}_{\mathbf{R}}}$ 


Sets time on terminal.

SET Date "<date string>" %

ESC,cSET D "<date string>" %

Sets data on terminal. (Maximum length of date string

is 30 characters.

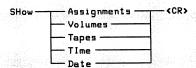

SHow Assignments 9

ESC,cSH A %

Lists current Source, Destination, and Log device

assignments on Log device.

SHow Volumes &

ESC,cSH V %

Lists HP-IB device addresses on log device.

SHow Tapes &

ESC,cSH T %

Lists current tape file and remaining tape space on log device.

og device.

Table B-2. Programmer's Reference Table (Continued)

ESC,c<abbreviated command sequence> % COMMAND SYNTAY ESC &p <parameters> <command sequence> DESCRIPTION **DEVICE CONTROL (Continued)** SHow Time & ESC,cSH TI % Lists current time on log device. SHow Date G ESC.cSH D % Lists current date on log device. SKip -{lines} {on} Data <device> SKip <+, -n> {lines} {on} Right tape % ESC,cSK <+, -n> R % Positions right tape to a relative (+, -n) line or ESC &p (+, -n)p 2u 1C SKip <+, -n> {lines} {on} EXternal printer  ${}^{c}$ R ESC,cSK <+, -n> EX % Positions external printer to a relative (+, -n) line. ESC &p (+, -n)p 4u 1C SKip <+, -n> {lines} {on} SHared printer #5 % ESC,cSK <+, -n> SH#5 % Positions SHared printer#5 to a relative (+, -n) line. SKip <+, -n> {lines} {on} <name> qESC,cSK <+, -n> <name> % Positions device that has user-assigned device name to a relative (+, -n) line. SKip Page {on} EXternal printer % ESC,cSK P EX % Positions external printer to a top-of-form. ESC &p (n)p 4u 2C SKip Page {on} SHared printer#5 % ESC,cSK P SH#5 Positions shared printer to a top-of-form. SKip End {of} Data {on} Left tape % ESC.cSK E D L % Positions left tape beyond end-of-data mark. SKip End {of} Data {on} Right tape % ESC,cSK E D R % Positions right tape beyond end-of-data mark Command file -SUspend Application SUspend Command file % ESC,cSU C % Suspends execution of a command file. SUspend Application & ESC.cSU A 9 Suspends operation of the subsystem. TE11-TErminal# "<string>" <CR> <device> <name> Note: Single quotes or double quotes may be used. Example: Tell the right tape: "End of program." TELL Right tape "End of Program" (CR) TEII <device> "<string>" % ESC,cTE <device> "<string>" % Transfers data string to the specified device. TEII TErminal# "<string>" % ESC,cTE TE# "<string>" % Transfers data string to the specified terminal in network. Test: <CR> TErminal # Hp-ib#<m>-DAtacomm -Tapes Test % ESC,cT % Tests terminal or ESC z ESC,cT DA % Test DAtacomm & Tests terminal datacomm. (Hood connector must be used.) or ESC x Test Tapes % ESC,cT T % Tests terminal cartridge tape units. ESC &p (1 or 2)u 7C

Table B-2. Programmer's Reference Table (Continued)

COMMAND SYNTAX <command sequence>

ESC,c<abbreviated command sequence>  $^{\rm Q}_{\rm k}$  or ESC &p cparameters>

DESCRIPTION

# **DEVICE CONTROL (Continued)**

Test TErminal #<n> % ESC,cT TE#<math><p> % Tests data path to other terminal in network.

Test Hp-ib#<math><n> % Tests a specific HP-IB interface PCA in terminal.

TRansfer — All — (from) — (device) — (to) — (device) — (CR) — (name) — (name) — (CR) — (CR)

Example: Copy the contents of graphics memory to the left tape.

TRansfer File from Graphics to Left tape <CR>

NOTE: The TRANSFER command sequence copies data in 8-bit binary form. For 7-bit ASCII transfers, use the COPY command sequence.

	Transfer File {from} Source {to} Display %	ESC,cTR F S DI %	Transfers one file from Source device to display.
	TRansfer File {from}Display {to} Destination %	ESC,cTR F DI D %	Transfers all data from display workspace to Destination device.
	TRansfer All %	ESC,cTR A %	All files (current position) from previously-assigned Source device are transferred to previously-assigned Destination device.
	TRansfer File %	ESC,cTR F %	One file (current position) from previously-assigned Source device is transferred to previously-assigned Destination device.
/i.o.	TRansfer Line <sup>9</sup> k	ESC,cTR L %	One line (current position) from previously-assigned Source device is transferred to previously-assigned Destination device.
	TRansfer All {from} <device>{to}<device(s)> %</device(s)></device>	ESC,cTR A <device> <device> <sup>q</sup>a</device></device>	All files (current position) from a specified device are transferred to one or more specified device(s).
	TRansfer File {from} <device>{to}<device(s)> %</device(s)></device>	ESC,cTR F <device> <device> <sup>q</sup>a</device></device>	One file (current position) from a specified device is transferred to one or more specified device(s).
	TRansfer Line {from} < device> {to} < device(s) > %	ESC,cTR L <device> <device> <sup>q</sup>a</device></device>	One line (current position) from a specified device is transferred to one or more specified device(s).
	TRansfer All {from} <name>{to}<name> %</name></name>	ESC,cTR A <name> <name> %</name></name>	All files (current position) from user-assigned device name are transferred to user-assigned device name(s).
	TRansfer File {from} <name>{to}<name> %</name></name>	ESC,cTR F <name> <name> %</name></name>	One file (current position) from user-assigned device name is transferred to user-assigned device name(s).
	TRansfer Line {from} <name>{to}<name> %</name></name>	ESC,cTR L <name> <name> %</name></name>	One line (current position) from user-assigned device name is transferred to user-assigned device name(s).

Table B-3. Character Code Chart Reference Tables

	CONTRO CHARA	L (CNTL) CTERS			SPLA ARA						ESCAPE S	ENT FIRST		
BIT 6	0	001	010	0 1	100	<sup>1</sup> 0,	1,0	1,	. 10	0 1 1	100	101	1 1 0	1 1
0000	@ 0 NU	DLE	SP	0	@	Р	`	Р	SP	0	DELAY 1 SEC	DELETE CHAR	CURSOR RELATIVE SENSE	f <sub>1</sub> p
0001	A 1 S <sub>H</sub>	Q 17 D1	!	1	А	a	а	q	1	SET TAB	† CURSOR	INSERT CHAR	CURSOR ABSOLUTE SENSE	f <sub>2</sub> q
0010	B 2 S <sub>X</sub>	R 18 D <sub>2</sub>	"	2	В	R	b	r	,"	CLEAR TAB	CURSOR DOWN	INSERT R CHAR OFF	KEYBOARD ENABLE	f <sub>3</sub>
0011	C 3 EX	S 19 D <sub>3</sub>	#	3	С	s	С	s	#	CLEAR ALL TABS	CURSOR → RIGHT	ROLL UP	C KEYBOARD DISABLE	f <sub>4</sub>
0100	D 4 E <sub>T</sub>	T 20 D4	\$	4	D	т	d	t	s	SET LEFT MARGIN	CURSOR LEFT	ROLL DOWN	d	f <sub>5</sub>
0101	E 5 EQ	U 21 N <sub>K</sub>	%	5	Е	ט	е	J	%	SET RIGHT MARGIN	RESET TERMINAL	NEXT PAGE	BINARY READ	f <sub>6</sub>
0110	F 6 A <sub>K</sub>	V 22 Sy SYN	&	6	F	>	f	٧	PARA: METER SEQUENCE	START 6 ALPHA FIELD	CURSOR HOME DOWN	PREV PAGE	MODEM DIS-	f <sub>7</sub>
0111	G 7 BEL	W 23 E <sub>B</sub>	•	7	G	w	g	w		START 7 NUMERIC FIELD	CURSOR RETURN	FORMAT MODE ON	SOFT RESET	f <sub>8</sub>
1000	H 8 BS	X 24 CN	(	8	н	×	h	×	7	START 8 ALPHNUM FIELD	HOME CURSOR (SEE NOTE 3)	FORMAT X MODE OFF	HOME h CURSOR (SEE NOTE 3)	DATA COM
1001	НТ 9 НТ	Y 25 EM	)	9	1	Y	i	y	DEFINE CHAR SET	9	HORI- ZONTAL TAB	DISPLAY FUNCTIONS ON	BACK TAB	MONITOR MODE ON
1010	J 10 LF	Z 26 S <sub>B</sub>	*	:	J	Z	j	z	# GRAPHICS SEQUENCE	"/	CLEAR DSPLY	DISPLAY FUNCTIONS OFF	SOFT KEY DISPLAY ON	Z TERMINAL SELF TEST
1011	K 11 V <sub>T</sub>	1 27 E <sub>C</sub>	+	;	κ	ı	k	{	<u></u>	.:	ERASE TO END OF LINE	START UNPROTECT FIELD	SOFT K KEY DISPLAY OFF	START XMIT ONLY FIELD
1100	L 12 FF	28 Fs		<	L	\	_	:	COMMAND SEQUENCE	<	INSERT LINE	1	MEMORY LOCK ON	
1101	M 13 C <sub>R</sub>	GS GS	-	-	м	J	m	}		a	DELETE LINE	UNPROTECT	MEMORY LOCK OFF	7
1110	N 14 S <sub>0</sub>	30 Rs	·	>	Ν	^	n	~	\.	,	INSERT N CHAR W/WRAP ON	TERM APRIMARY STATUS	c	SEND SECOND- ARY STATUS
1111	0 15 S <sub>1</sub>	US US	/	?	0	-	۰	•	/	3	DELETE O	INSERT _ NON-DISP TERMINATR	· °	DEL


Example: J is bits 1001010; Control J is LF line feed; Escape (ESC) followed by J is CLEAR DISPLAY

# **LEGEND**

### NOTES:

- LOWER CASE LETTER, LOWER CASE SYMBOL, AND CONTROL CHARACTER CODES ARE GENERATED BY STANDARD TERMINAL, BUT ASSOCIATED CHARACTERS ARE NOT DISPLAYED ON THE SCREEN. PRESS TAPE TEST KEY FOR DISPLAYABLE CHARACTER SET.
- SINGLE CHARACTER ESCAPE SEQUENCES AND CONTROL CODES NOT LISTED WITH A FUNCTION ARE NEITHER ACTED UPON NOR DISPLAYED.
- ESC H HOMES CURSOR INCLUDING TRANSMIT-ONLY FIELDS. ESC h HOMES CURSOR EXCLUDING TRANSMIT-ONLY FIELDS.

#### **Control Character Legend:**

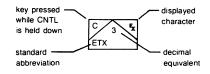

Φ — BELL - BACKSPACE - CANCEL LINE - CARRIAGE RETURN - DATA LINK ESCAPE Di - DEVICE CONTROL 1 - DEVICE CONTROL 2 - DEVICE CONTROL 3 D, - DEVICE CONTROL 4 - DELETE - END OF MEDIUM - ENQUIRY - END OF TRANSMISSION 돈 - ESCAPE ■ - END OF TRANSMISSION BLOCK

- ACKNOWLEDGE

₹ — END OF TEXT F - FORM FEED Fs - FILE SEPARATOR - GROUP SEPARATOR ት — HORIZONTAL TABULATION - LINE FEED - NEGATIVE ACKNOWLEDGE - RECORD SEPARATOR - SHIFT IN - SHIFT OUT SP - SPACE - START OF HEADING - START OF TEXT - SUBSTITUTE - SYNCHRONOUS IDLE - UNIT SEPARATOR

- VERTICAL TABULATION

# **ORDERING EXAMPLE**

This is an example of ordering four 2647A Intelligent Graphics Terminals, a shared 7245 Printer/Plotter and used remotely over a modem.

4 – 2647A In 4 – 13296A S

Intelligent Graphics Terminal Shared Peripheral Interface (includes cable)

4 – 13232N 1 – 7245A

-001

RS232 cable to modem

Printer Plotter Graphics Option


Table B-4. Options and Accessories


PRODUCT NUMBER	DESCRIPTION	PRICE
2647A	INTELLIGENT GRAPHICS TERMINAL 720 × 360 Dot Graphics Image Memory and random access alphanumeric memory, Basic interpreter with graphic commands, multiple automatic plotting, 128 character Roman, inverse video, 8 user defined soft keys, 75 lines of display memory, RS232C communica- tions, integrated dual cartridge tapes, 1 option slot.	\$8,300
-013	5 mini cartridges	90
015 016	50 Hz, 230V 50 Hz, 115V	00
_030	Delete Standard Asynchronous Communications  Note: One of the 13260 data communications accessories must be ordered when option 030 is ordered, also deletes keyboard overlay and data communications firmware.	-160
13231A	DISPLAY ENHANCEMENTS  Adds blinking, half-bright and underline; and provides for addition of three 128 character sets.  (Requires 1 option slot).	250
-201 -203	64 Character Math Symbol Set: Adds display of integral signs, Greek letters, etc.  Large Character Set	100
ACCESSORIES		
13250B	SERIAL PRINTER INTERFACE Adds interface for connecting RS232C printing devices (requires 1 option slot). No interface cable included (local only, not shared).	275
13254A	VIDEO OUTPUT INTERFACE Provides video signal for a compatible monitor or hardcopy unit. (Requires 1 option slot.)	150
13296A	SHARED PERIPHERAL INTERFACE Provides shared interface for compatible devices, includes cable. (Requires 1 option slot.)	500
13260A-006	STANDARD ASYNCHRONOUS COMMUNICATIONS Provides standard RS232C communications interface for the 2647A. Note: This is identical to the capability deleted by 2647A-030.	160
13260B-006	EXTENDED ASYNCRHONOUS COMMUNICATIONS  Upgrade which provides either RS232C or 20mA current loop communications for the 2647A. Has split speed and custom baud rates.	325
13260C-006	ASYNCHRONOUS MULTIPOINT COMMUNICATIONS Provides asynchronous multipoint communications interface for the 2647A allowing daisy chained line sharing. Note: 2647A-030 must be ordered to delete the Standard Asynchronous Interface.	435
<b>–</b> 001	Add Monitor Mode capability.	50
13260D-006	SYNCHRONOUS MULTIPOINT COMMUNICATIONS Provides synchronous multipoint communications interface for the 2647A allowing daisy chained line sharing.  Note: 2647A-030 must be ordered to delete the Standard Asynchronous Interface.	450
<b>–</b> 001	Add Monitor Mode capability.	50
9162-0061	Mini-Cartridge (available in boxes of fives).	50
13232A 13232B	103/202 Modem (male, 15 ft) To 12880A/12531D (50 ft)	100
13232C	RS232 Connector (female, 5 ft)	50
13232F 13232G	Current Loop Connector Kit (5 ft) 13250 to RS232C Printer (male, 15 ft)	65
13232H	13250 to RS232C Printer (female, 25 ft)	65
13232J 13232K	13238 to 9871 Printer (6 ft) 13254 to video hardcopy printer (15 ft)	55
13232K 13232L	13254 to video hardcopy printer (15 it) 13254 to compatible TV monitor (15 ft)	75
13232M	13250B to European modems	75
13232N 13232P	103/202/201/208/209 modem (male 15 ft) Modem/Multipoint Cable, male RS232C, male multipoint connector, 30 ft. total	115
13232Q	Multipoint Cable, male multipoint, female multipoint connector, 30 ft. total	90
13232R 13232S	Multipoint Extension Cable, male multipoint/female multipoint connector, 100 ft. 13238 to 9866 line printer (6 ft)	75
13232T	Power Protect Multipoint Cable, male multipoint connector with relays /female multipoint connector, 30 ft. total	185
13232U	Modem bypass (5 ft)	50

Table B-5. Coding the Large Character Set

The elements of the Large Character Set are associated with the keyboard as pictured below:

Each large character is actually made up of nine character segments. An example of constructing the letter "B" using the Large Character Set follows:

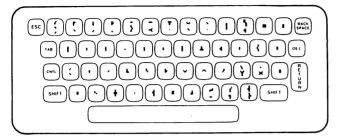

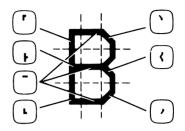

!	0 S		X4,	9	!&+ G&? G&L	E	"&, /& F&,	Q	!&+ 0 0 G&N	]	%. 0 %M	i	• • E	Ц	## FM
11	"		Z		Z Z	F	"&, /& E	R	"&+ /&@ E E	^	9 K	j	GL	V	GL
#	ექ ეე	÷	78, 4	;	Y L	G	! & + 0 . G & L	S	! & + G & + G & L		^^^	k	/e EE	u	но
\$	!C+ GC+ GCL	0	!#+ 0 0 G#L	<	3 2	Н	/4? E E	T	%', 0 E	`	+		0 E	X	5 <b>e</b> EE
7.	P P 3 <d Y Y</d 	1	- 0 E	=	74, 74,	I	, 0 I	U	0 0 G&L	a	!. GM	М	\$- EE	Ч	G?
৳	!+ 5IC G&L	2	!&+ !&L F&,	>	) D	J	0 L	Ų	0 0 2 JD	Ь	/+ FL	n	"+ EE	2	%. F,
•	•	3	!&+ &@ G&L	٠-	!#+ >D S	К	/6A E E	Ш	090 HKD	c	!, G,	0	!+ GL	{	!, € G,
(	!, 0 G,	4	F&C E	9	!4+ !.0 GIL	L	0 F&,	X	1:A E E	d	# !? GM	P	"+ /L	1	Q U
)	7 + 0 7 L	5	"&, F&+ G&L	A	!&+ /&? E E	M	\$(- 070 E E	Y	2;D E	c	!+ G,	q	!. G?	}	%+ 5 %L
×	1:A	6	!&+ /&+ G&L	В	"&+ /40 F&L	N	\$)# 08B E E	Z	"&. 3 <d F&amp;M</d 	f	! + C E	۲	! , E	ہم	!&L
+	*C,	7	%&. >D E	С	!&+ 0 G&L		**&. 0 0 F&M		•• , 0 F ,	q	!. G?	s	!, %L	*	***
,	L	8	!4+ 54 <b>0</b> G&L	D	"&+ 0 0 F&L	Р	"&+ /&L E	4	2:) E	h	# /+ EE	t	° C GL		

**APPENDIX** 

# **COMMUNICATIONS FLOWCHARTS**

C

This appendix contains reference information on terminal communication functions. This material consists of the following flowcharts and tables:

- ASCII code table
- ASCII to EBCDIC code conversion tables
- Overall point-to-point communications flowchart
- Keyboard communication switches

Table C-1 is a list of the ASCII characters and their decimal equivalents. Tables C-2 and C-3 contain information for converting data between the ASCII and EBCDIC character sets.

The flowchart in figure C-1 illustrates the overall point-to-point communication function. The various configuration parameters (switches) are included in the diagram. Detailed descriptions of the switches are given in Sections V and VII. Figure C-2 illustrates the way the terminal responds to various Keyboard Interface PCA switches.

Table C-1. ASCII Character Set

DECIMAL VALUE	GRAPHIC	COMMENTS	ALTERNATE CHARACTER		GRAPHIC	COMMENTS
0	ሌ	Null	@°	64	(ä	Commercial at
1	5 <sub>4</sub>	Start of heading	°	65	À	Uppercase A
$\overline{2}$	5 <u>.</u>	Start of text	B <sup>c</sup>	66	В	Uppercase B
3	Ę,	End of text	Č,	67	c	Uppercase C
4	Ę	End of transmission	D <sub>c</sub>		1	
	5		_	68	D	Uppercase D
5	k	Enquiry	E,	69	E	Uppercase E
6		Acknowledge	F°	70	F	Uppercase F
7	4	Bell	G <sup>c</sup>	71	G	Uppercase G
8	ą,	Backspace	H <sup>c</sup>	72	Н	Uppercase H
9	4	Horizontal tabulation	Ιc	73	I	Uppercase I
10	L <sub>F</sub>	Line feed	Jr	74	J	Uppercase J
11	4	Vertical tabulation	K <sup>c</sup>	75	ĸ	Uppercase K
12	F	Form feed	L°	76	L	
13	G <sub>R</sub>					Uppercase L
	5	Carriage return	M°	77	M	Uppercase M
14	5 <sub>1</sub>	Shift out	N°	78	N	Uppercase N
15		Shift in	Oc	79	0	Uppercase O
16	٩	Data link escape	P°	80	P	Uppercase P
17	D <sub>1</sub>	Device control 1 (X-ON)	Q°	81	Q	Uppercase Q
18	ъ,	Device control 2	R°	82	Ř	Uppercase R
19	ο,	Device control 3 (X-OFF)	S°	83	S	Uppercase S
20	O <sub>4</sub>	Device control 4	T'			
20	ų,		_	84	T	Uppercase T
	S <sub>Y</sub>	Negative acknowledge	Ü۲	85	U	Uppercase U
22	۲ ق	Synchronous idle	V°	86	v	Uppercase V
23	G <sub>i</sub>	End of transmission block	W٩	87	w	Uppercase W
24		Cancel	Χ°	88	X	Uppercase X
25	ħ	End of medium	Υ°	89	Y	Uppercase Y
26	<b>%</b>	Substitute	Z°	90	Z	Uppercase Z
27	£	Escape	ľ	1 91	ĺ	Opening bracket
28	Fs	File separator	\°	<sup>2</sup> 92	-	
29	G,				` `	Reverse slant
1	ą,	Group separator	J.c	1 93	]	Closing bracket
30	_	Record separator	٧,	<sup>1</sup> 94	^	Circumflex
31	ų,	Unit separator	<b>–</b> '	<sup>2</sup> 95		Underscore
32		Space (Blank)		96	`	Grave accent
133	!	Exclamation point		97	а	Lowercase a
34	"	Quotation mark		98	b	Lowercase b
35	#	Number sign		99	c	Lowercase c
36	\$	Dollar sign			_	
37	ж %			100	d	Lowercase d
		Percent sign		101	е	Lowercase e
38	&	Ampersand		102	f	Lowercase f
39	'	Apostrophe		103	g	Lowercase g
40	(	Opening parenthesis		104	h	Lowercase h
41	)	Closing parenthesis		105	i	Lowercase i
42	*	Asterisk		106	j	Lowercase j
43	_	Plus				· .
44	· I			107	k 1	Lowercase k
45	,	Comma		108	l	Lowercase l
	-	Hyphen (Minus)		109	m	Lowercase m
46		Period (Decimal)		110	n	Lowercase n
47	/	Slant		111	0	Lowercase o
48	0	Zero		112	р	Lowercase p
49	1	One		113	q	Lowercase q
50	2	Two		114	r	Lowercase r
51	3	Three	İ	115	8	Lowercase s
52	4	Four	į			
		· ·		116	t	Lowercase t
53	5	Five		117	u	Lowercase u
54	6	Six		118	v	Lowercase v
55	7.	Seven		119	w	Lowercase w
56	8	Eight		120	x	Lowercase x
57	9	Nine		121	y	Lowercase y
58		Colon		122	z z	Lowercase z
59	: I	Semicolon			"	
	;			<sup>2</sup> 123	·	Opening (left) brace
60	<	Less than		<sup>2</sup> 124	ļ ļ	Vertical line
61	=	Equals		<sup>2</sup> 125	}	Closing (right) brace
62	>	Greater than		<sup>2</sup> 126	~	Tilde
63	?	Question mark		127		Delete

 The equivalent EBCDIC character uses a different graphic.
 No equivalent character exists in EBCDIC. Notes:

Table C-2. ASCII (7-Bit) Character Codes

GRAPHIC	DEC	ОСТ	HEX
NUL SOH	0	0	0
STX	2	2	2
ETX		3	3
EOT ENG	4	4 5	4
ACK	6	6	6
BEL	7	. 7	7
BS	8	10	9
HT	9	11	
LF	10	12	A
VT	11	13	B
FF	12	14	C
CR	13	15	D
SO	14	16	E
SI	15	17	<b>F</b>
DLE	16	20	10
DC1	17	21	11
DC2	18	22	12
DC3	19	23	13
DC4	20	24	14
NAK	21	25	15
SYN	22	26	16
	23	27	17
CAN	24	30	18
EM	25	31	19
SUB	26	32	1A
ESC	27	33	1B
FS	28	34	1C
GS	29	35	1D
RS	30	36	1E
US SP	31 32	37 40	1E 1F 20
!	33	41	21
	34	42	22
	35	43	23
	- <b>36</b>	44	<b>24</b>
Julia	37	45	25
Linear Company	38	46	26
	40 41	47 50 51	2 <b>7</b> 28 29
*	42	52	2A
	43	53	2B
	44	54	2C
	45	55	2D
	46	56	2E
	47	57	2F
0 1	48 49 50	60 61 62	30 31 32
2 3 4	51 <b>52</b>	63 64	33 34
5	53	65	35
6	54	66	36
7	<b>55</b>	67	37
8	56	70	38
9	57 58	71 72 73	39 3A 3B
	59 60 61	74 74 75	3D 3C
	62	76	3E
	63	77	3F

GRAPHIC	DEC	ОСТ	HEX
e A B C D E F	64 65 66 67 68 69	100 101 102 103 104 105	40 41 42 43 44 45
G H I J K L	71 72 73 74 75 76 77 78 79	107 110 111 112 113 114 115 116	47 48 49 4A 4B 4C 4D 4E 4F
P Q R S T U	80 81 82 83 84 85 86 87 88	120 121 122 123 124 125 126 127 130	50 51 52 53 54 55 56 57 58
Y Z [	89 90 91 92 93 94 95 96 97	131 132 133 134 135 136 136 137 140	59 5A 5B 5C 5D 5E 5F 60 61
- b c d e - f f - 9 h	98 99 100 101 102 103 104 105 106	142 143 144 145 146 147 150 151	62 63 64 65 66 67 68 69 6A
, 1 m n o P q	107 108 109 110 111 112 113 114	153 154 155 156 157 160 161 162	6B 6C 6D 6E 6F 70 71 72
x y y z	115 116 117 118 119 120 121	163 164 165 166 167 170 171 172	73 74 75 76 77 78 79 7A
	123 124 125 126 127	173 174 175 176 177	7B 7C 7D 7E 7F

Table C-3. EBCDIC Character Codes

GRAPHIC	DEC	ОСТ	HEX
NUL SOH	0	0 1	0
STX	2	2	2
ETX PF	4	3 4	<b>3</b>
HT	5	5	5
	6	6	6
DEL	7 8	10	
	9	11	9
	10	12	A
VT	11	13	B
EF	12	14	C
CR	13	15	D
SO	14	16	E
SI Sign	15 16	17 20	F
DC1	17	21	10 11
DC2	18	22	12
TM	19	23	13
RES	20	24	.14
NL	21	25	15
BS IL	22	26	16
	23	27	17
CAN	24	30	18
EM	25	31	19
CC	26	32	1 A
CU1	27	33	1 B
IFS	28	34	1 C
IGS	29	35	1D
IRS	30	36	1E
IUS	31	37	1F
DS	32	40	20
SOS	33	41	21
FS	34	42	22
ВҮР	35	43	23
	<b>36</b>	44	<b>24</b>
LF	37	45	25
ETB!	38	46	
ESC	39	47	26 27
	40	50	28
	41	51	29
SM	42	52	2A
CU2	43	53	2B
ENQ	44 45	54 55	2C
ACK	46	56	2E
BEL	47	57	2F
	48	60	30
SYN	49	61	31
	50	62	32
PN	51	63	33
	<b>52</b>	64	/ 34
RS	53	65	35
UC	54	66	36
EOT	<b>55</b>	6 <b>7</b>	37
	56	70	38
	57	71	39
	58	72	3A
CU3	59	73	3B
DC4	60	74	3C
NAK	61	75	- 3D
SUB	62	76	3E
	63	77	3F

GRAPHIC	DEC	ост	HEX
SP	64 65 66 67	100 101 102 103	40 41 42 43
	68 69 70 71 72 73	104 105 106 107 110 111	44 45 46 47 48 49
866 6 6 7	74 75 76 77 78 79 80	112 113 114 115 116 117 120	4A 4B 4C 4D 4E 4F 50
	81 82 83 84 85 86 87 88	121 122 123 124 125 126 127 130	51 52 53 54 55 56 57 58
! \$ * ) - 1	89 90 91 92 93 94 95 96	131 132 133 134 135 136 137 140	59 5A 5B 5C 5D 5E 5F 60
	97 98 99 100 101 102 103	141 142 143 144 145 146 147	61 62 63 64 65 66 67 68
i 2 3	105 106 107 108 109 110 111	151 152 153 154 155 156 156 157	69 6A 6B 6C 6D 6E 6F 70
	113 114 115 116 117 118 119	161 162 163 164 165 166 167	71 72 73 74 75 76
•	120 121 122 123 124 125 126 127	170 171 172 173 174 175 176	78 79 7A 7B 7C 7D 7E

Table C-3. EBCDIC Character Codes (Continued)

GRAPHIC	DEC	ОСТ	HEX
abcdef 9h	128 129 130 131 132 133 134 135 136 137	200 201 202 203 204 205 206 207 210	80 81 82 83 84 85 86 87 88 89
i j k	137 138 139 140 141 142 143 144 145 146	212 213 214 215 216 217 220 221 222	8A 8B 8C 8D 8E 8F 90 91
1 m n o p	147 148 149 150 151 152 153 154	223 224 225 226 227 230 231 232	93 94 95 96 97 98 99
2 - 10 - 10 - 10 - 10 - 10 - 10 - 10 - 1	155 156 157 158 159 160 161 162	233 234 235 236 237 240 241 242	9B 9C 9D 9E 9F A0 A1 A2
t u year v water v w y y z	163 164 165 166 167 168 169 170	243 244 245 246 247 250 251 252	A3 A4 A5 A6 A7 A8 A9 AA
<b>L</b> :	171 172 173 174 175 176 177 178	253 254 255 256 257 260 261 262	AB AC AD AE AF B0 B1 B2
	179 180 181 182 183 184 185 186	263 264 265 266 267 270 271 272	B3 B4 B5 B6 B7 B8 B9
	187 188 189 190 191	273 274 275 276 277	BB BC BD BE BF

GRAPHIC	DEC	ОСТ	HEX
{ A B C D E F G H I	192 193 194 195 196 197 198 199 200 201 202	300 301 302 303 304 305 306 307 310 311	C0 C1 C2 C3 C4 C5 C6 C7 C8 C9
} J K	202 203 204 205 206 207 208 209 210	313 314 315 316 317 320 321 322	CB CC CD CE CF D0 D1 D2
L M N D P	211 212 213 214 215 216 217 218	323 324 325 326 327 330 331 332	D3 D4 D5 D6 D7 D8 D9 DA
\ S	219 220 221 222 223 224 225 226	333 334 335 336 337 340 341 342	DB DC DD DE DF E0 E1
T U V W X Y Z	227 228 229 230 231 232 233 234 235	343 344 345 346 347 350 351 352 353	E3 E4 E5 E6 E7 E8 E9 EA EB
0 1 2 3	236 237 238 239 240 241 242 243	354 355 356 357 360 361 362 363	EC ED EE EF F0 F1 F2 F3
2 3 4 5 6 7 8 9	244 245 246 247 248 249 250 251	364 365 366 367 370 371 372 373	F4 F5 F6 F7 F8 F9 FA FB
	252 253 254 255	374 375 376 377	FC FD FE FF

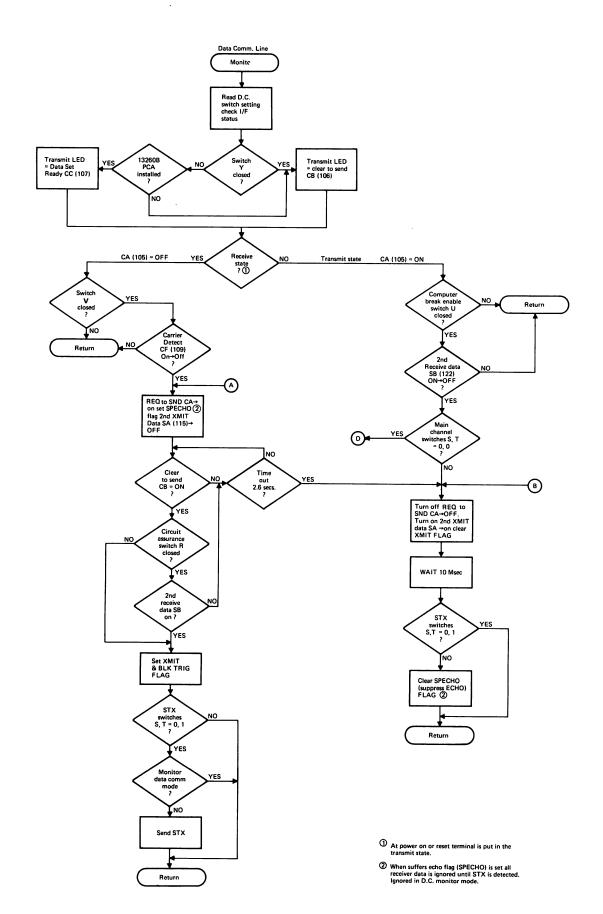


Figure C-1. Point-to-Point Communication Flowcharts (Sheet 1 of 3)

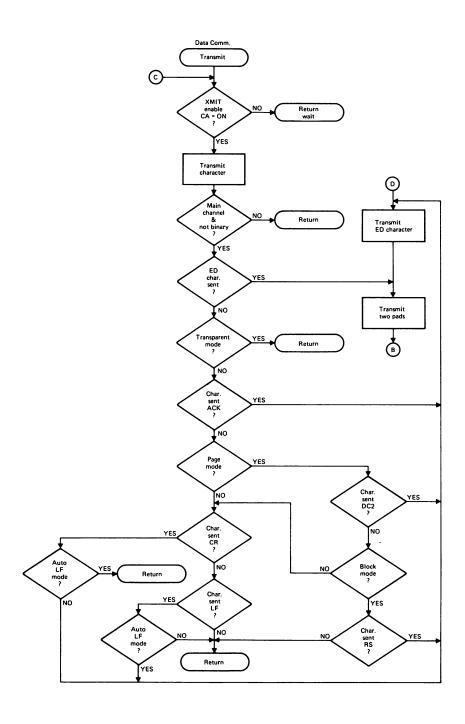


Figure C-1. Point-to-Point Communication Flowcharts (Sheet 2 of 3)

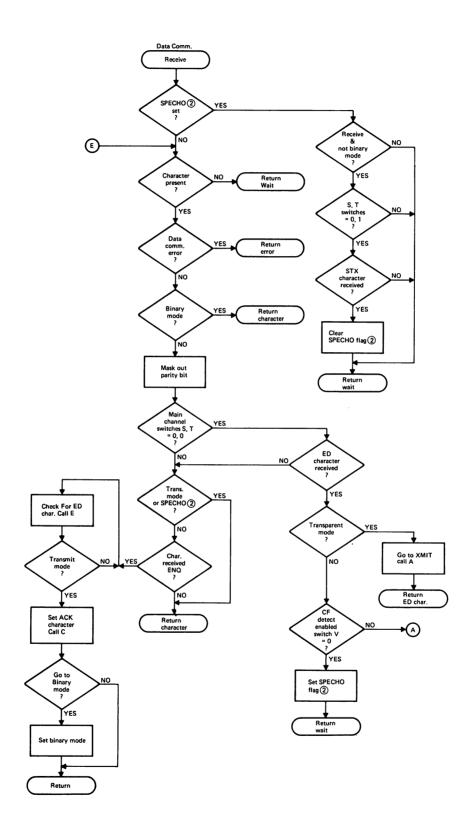
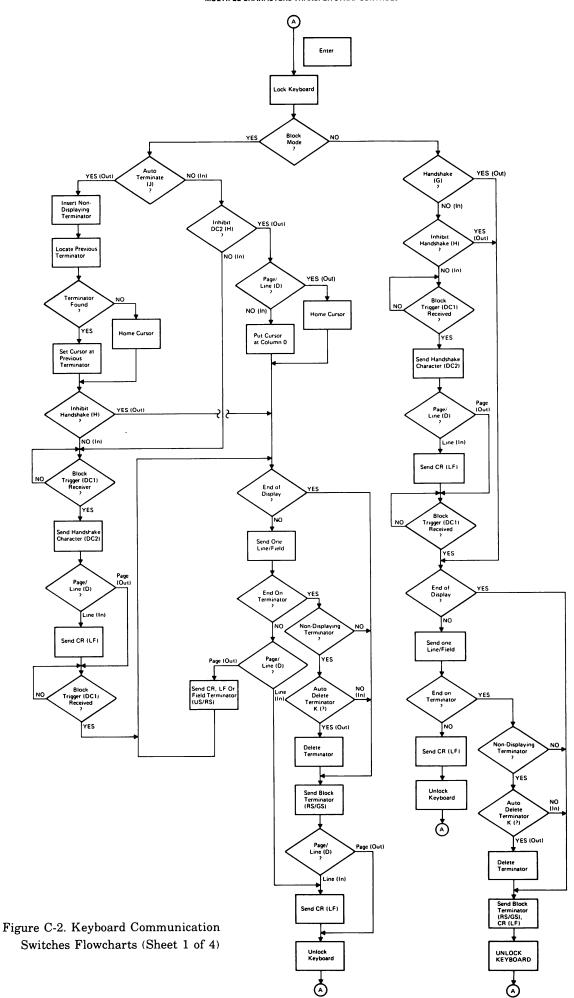
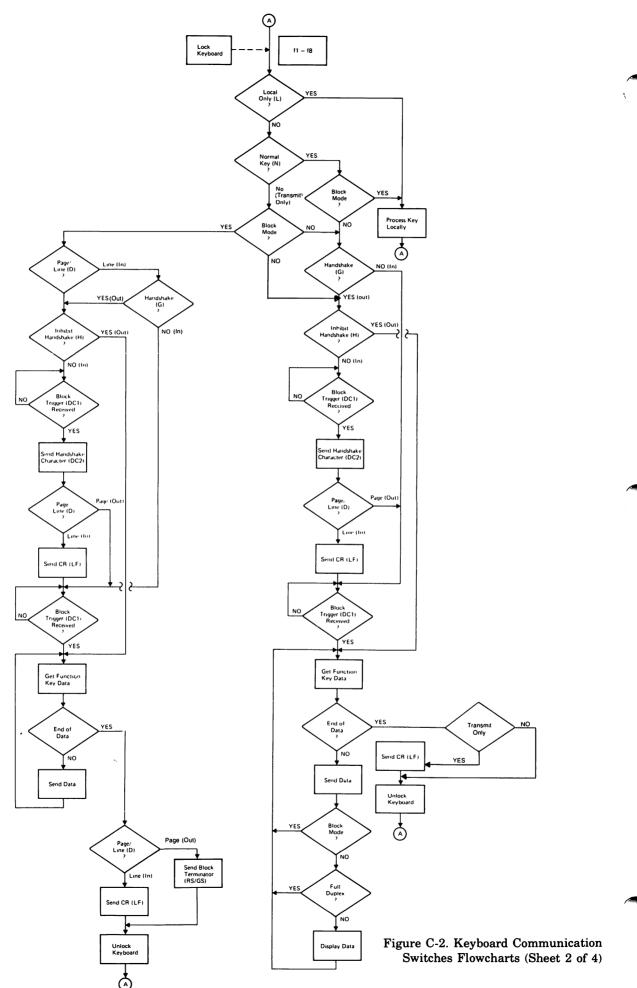


Figure C-1. Point-to-Point Communication Flowcharts (Sheet 3 of 3)





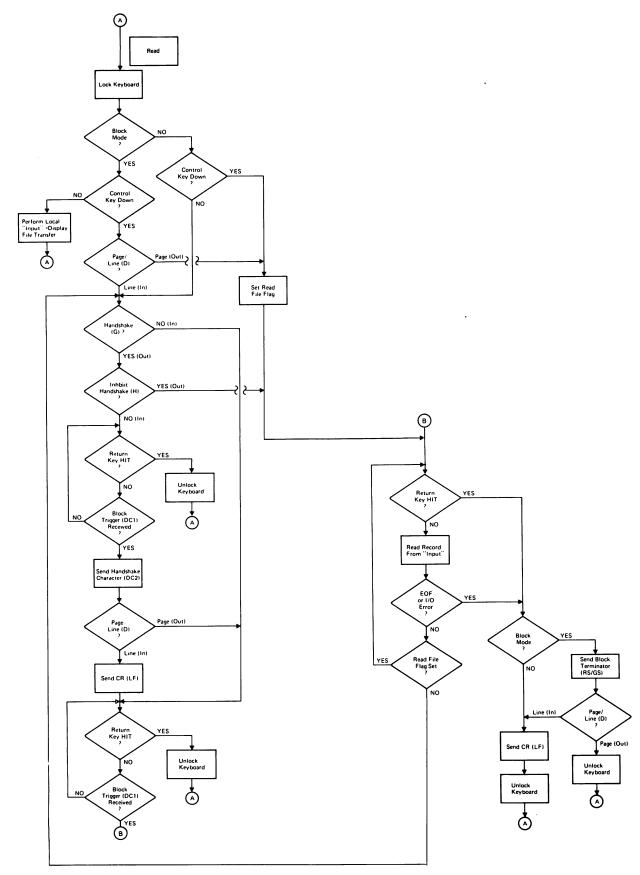


Figure C-2. Keyboard Communication Switches Flowcharts (Sheet 3 of 4)

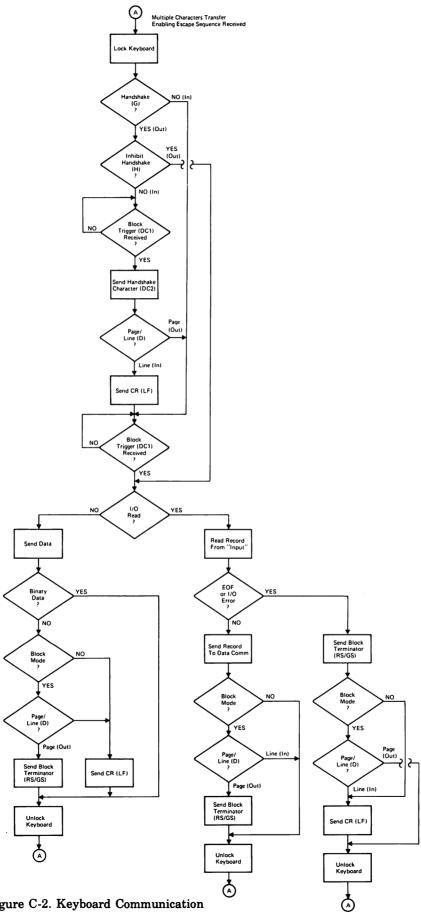


Figure C-2. Keyboard Communication Switches Flowcharts (Sheet 4 of 4)

## **APPENDIX**

# TAPE CARTRIDGE RETHREADING

D

Tape rethreading is difficult and is not recommended unless the data recorded on the runoff tape must be recovered. Instead, when tape runoff occurs, it is recommended to replace the entire tape cartridge. The rethreading procedures contained in this paragraph are for rethreading tape onto the tape cartridge's left tape hub. If a tape run-off condition occurs from the right tape hub, use the left tape hub rethreading instructions except interchange all right-hand and left-hand instructions and change all counter-clockwise directions to clockwise directions. This procedure requires the use of a small Phillips-head screwdriver. Rethread tape onto the left tape hub as follows:

# **CAUTION**

Whenever the tape cartridge top cover is removed, the spring-loaded door and spring can easily slide off the door pivot post. To prevent loss of parts, ensure that door is always completely seated on its pivot post as long as the tape cartridge top cover and backplate are separated.

- a. Remove tape cartridge top cover by removing four screws from backplate with Phillips-head screwdriver.
- b. As shown in figure D-1, view A, rethread loose end of tape around right tape guide, through tape cleaner (use tweezers, if necessary), past belt drive puck, outside guide pin, and around left tape guide so that approximately 1-3/4 inches of tape is clear of guide.
- c. Hold tape cartridge as shown in figure D-1, view B, so that right hand can be used to rotate belt drive puck and left hand can be used to maintain tape tension at left tape guide.
- d. Moisten inside surface of free end of tape and, while maintaining tape tension at left tape guide, rotate belt drive puck counterclockwise to wrap free end of tape around left tape hub until tape reaches point where drive belt touches tape hub.
- e. While maintaining tape tension, use any small round-tipped tool to trap free end of tape between drive belt and left tape hub as shown in figure D-1, view C.
- f. Rotate belt drive puck counterclockwise until tape is wrapped several times around left tape hub past first set of tape holes (approximately two feet).

- g. Replace tape cartridge top cover on backplate and secure in place with four screws.
- h. Condition tape (COMMAND, f1, f1, f6, f5 or f6, RETURN).

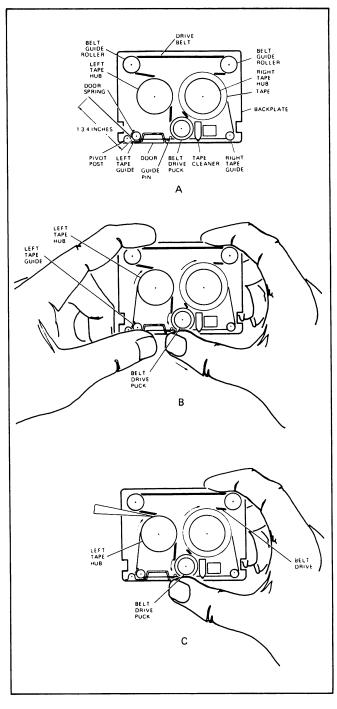


Figure D-1. Tape Cartridge Rethreading

# **INDEX**

	binary incremental
	binary operation (block) 5-29
13231 Display Enhancements	binary read 4–9, 4–14
13232 Cable Assemblies	binary relocatable
13238 Terminal Duplex Register Installation 7-12	binary short incremental
13246 Printer Subsystem Installation	binary transfers 4–9, 4–12
13250 Serial Printer Interface Installation	blinking
13260 Data Communications Interfaces,	block check character (BCC)5-24, 5-25
description	block check mode
13260 Data Communications Interfaces, installation . 7–13	block checking
13296A Shared Peripheral Interface installation 7–14	block input mode (block)
13349 Printer Subsystem installation	block mode
202 Modem compatibility	Block Mode, G and H straps
32K RAM Memory PCAs strapping	BLOCK MODE key programming
9866 Printer subsystem installation	BLOCK MODE key programming 2-18 BLOCK MODE key
9871 Printer installation	block moves (text)
	block operation
Α	block protocols
^	block protocol control characters operation 5-29
absolute, ASCII 3–16	block protocol control characters summary 5-31
absolute, binary	BREAK key
accessory installation	buffer, data communications5-7
ACK	buffer overflow error
ACK1 5–27	buffer size
address, terminal	bus, general description of
addressing, absolute	Bye command sequence 4-4
addressing, column 2-3	byte count
addressing, cursor relative 2-5	byte count, sending 4–12
addressing, screen relative2-4	_
AID character 5–39	C
alpha field checking2-9	
alphanumeric cursor operations 2-6	cables
alternate character sets	cables, multipoint
area fill, absolute and relocatable	cables, point-to-point
area pattern	cables, power down protect
area pattern, definition	cable fabrication
ASCII	cable lengths, data communications
ASCII (7-bit) Character Codes, DEC, OC1, HEX C-3 ASCII absolute	cable length limitations
ACCIII Chanactan Cat dooimal walson	cable types
ASCII Character Set decimal values	cabling, asynchronous multipoint
ASCII code selection	cabling, asynchronous multipoint
ASCII code selection	cabling, asynchronous multipoint7–30cabling, current loop7–29cabling, data communications7–26
ASCII code selection       5-24         ASCII incremental       3-16         ASCII relocatable       3-16	cabling, asynchronous multipoint7-30cabling, current loop7-29cabling, data communications7-26cabling, modem by-pass7-29
ASCII code selection       5-24         ASCII incremental       3-16         ASCII relocatable       3-16         ASCII transfers       4-5, 4-12	cabling, asynchronous multipoint7-30cabling, current loop7-29cabling, data communications7-26cabling, modem by-pass7-29cabling, synchronous multipoint7-31
ASCII code selection       5-24         ASCII incremental       3-16         ASCII relocatable       3-16         ASCII transfers       4-5, 4-12         assign devices       4-4	cabling, asynchronous multipoint7-30cabling, current loop7-29cabling, data communications7-26cabling, modem by-pass7-29cabling, synchronous multipoint7-31cabling considerations, HP-IB8-2
ASCII code selection       5-24         ASCII incremental       3-16         ASCII relocatable       3-16         ASCII transfers       4-5, 4-12         assign devices       4-4         Asynchronous Multipoint	cabling, asynchronous multipoint7-30cabling, current loop7-29cabling, data communications7-26cabling, modem by-pass7-29cabling, synchronous multipoint7-31cabling considerations, HP-IB8-2cabling limitations, HP-IB8-3
ASCII code selection	cabling, asynchronous multipoint       7-30         cabling, current loop       7-29         cabling, data communications       7-26         cabling, modem by-pass       7-29         cabling, synchronous multipoint       7-31         cabling considerations, HP-IB       8-2         cabling limitations, HP-IB       8-3         CAPS LOCK key programming       2-13
ASCII code selection       5-24         ASCII incremental       3-16         ASCII relocatable       3-16         ASCII transfers       4-5, 4-12         assign devices       4-4         Asynchronous Multipoint	cabling, asynchronous multipoint7-30cabling, current loop7-29cabling, data communications7-26cabling, modem by-pass7-29cabling, synchronous multipoint7-31cabling considerations, HP-IB8-2cabling limitations, HP-IB8-3CAPS LOCK key programming2-13cartridge tape operations, Compatibility Mode3-39
ASCII code selection 5-24  ASCII incremental 3-16  ASCII relocatable 3-16  ASCII transfers 4-5, 4-12  assign devices 4-4  Asynchronous Multipoint  Interface (13260C) straps 5-41, 7-24  Attention ID (AID) 5-39	cabling, asynchronous multipoint       7-30         cabling, current loop       7-29         cabling, data communications       7-26         cabling, modem by-pass       7-29         cabling, synchronous multipoint       7-31         cabling considerations, HP-IB       8-2         cabling limitations, HP-IB       8-3         CAPS LOCK key programming       2-13
ASCII code selection 5-24  ASCII incremental 3-16  ASCII relocatable 3-16  ASCII transfers 4-5, 4-12  assign devices 4-4  Asynchronous Multipoint  Interface (13260C) straps 5-41, 7-24  Attention ID (AID) 5-39  AUTO LF key programming 2-13	cabling, asynchronous multipoint 7–30 cabling, current loop 7–29 cabling, data communications 7–26 cabling, modem by–pass 7–29 cabling, synchronous multipoint 7–31 cabling considerations, HP–IB 8–2 cabling limitations, HP–IB 8–3 CAPS LOCK key programming 2–13 cartridge tape operations, Compatibility Mode 3–39 cartridge tape rethreading D–1
ASCII code selection 5-24  ASCII incremental 3-16  ASCII relocatable 3-16  ASCII transfers 4-5, 4-12  assign devices 4-4  Asynchronous Multipoint  Interface (13260C) straps 5-41, 7-24  Attention ID (AID) 5-39	cabling, asynchronous multipoint 7–30 cabling, current loop 7–29 cabling, data communications 7–26 cabling, modem by–pass 7–29 cabling, synchronous multipoint 7–31 cabling considerations, HP–IB 8–2 cabling limitations, HP–IB 8–3 CAPS LOCK key programming 2–13 cartridge tape operations, Compatibility Mode 3–39 cartridge tape rethreading D–1 CCA character 5–39 CCITT signals 7–27 centering graphics text 3–27
ASCII code selection 5-24 ASCII incremental 3-16 ASCII relocatable 3-16 ASCII transfers 4-5, 4-12 assign devices 4-4 Asynchronous Multipoint Interface (13260C) straps 5-41, 7-24 Attention ID (AID) 5-39 AUTO LF key programming 2-13  B back tab 2-6	cabling, asynchronous multipoint       7-30         cabling, current loop       7-29         cabling, data communications       7-26         cabling, modem by-pass       7-29         cabling, synchronous multipoint       7-31         cabling considerations, HP-IB       8-2         cabling limitations, HP-IB       8-3         CAPS LOCK key programming       2-13         cartridge tape operations, Compatibility Mode       3-39         cartridge tape rethreading       D-1         CCA character       5-39         CCITT signals       7-27         centering graphics text       3-27         character cell, general description of       1-3
ASCII code selection 5-24  ASCII incremental 3-16  ASCII relocatable 3-16  ASCII transfers 4-5, 4-12  assign devices 4-4  Asynchronous Multipoint  Interface (13260C) straps 5-41, 7-24  Attention ID (AID) 5-39  AUTO LF key programming 2-13	cabling, asynchronous multipoint       7-30         cabling, current loop       7-29         cabling, data communications       7-26         cabling, modem by-pass       7-29         cabling, synchronous multipoint       7-31         cabling considerations, HP-IB       8-2         cabling limitations, HP-IB       8-3         CAPS LOCK key programming       2-13         cartridge tape operations, Compatibility Mode       3-39         cartridge tape rethreading       D-1         CCA character       5-39         CCITT signals       7-27         centering graphics text       3-27         character cell, general description of       1-3         character checking       5-24
ASCII code selection 5-24 ASCII incremental 3-16 ASCII relocatable 3-16 ASCII transfers 4-5, 4-12 assign devices 4-4 Asynchronous Multipoint Interface (13260C) straps 5-41, 7-24 Attention ID (AID) 5-39 AUTO LF key programming 2-13  B back tab 2-6 backspace 2-6, 4-11 Bar Charts 3-31	cabling, asynchronous multipoint 7–30 cabling, current loop 7–29 cabling, data communications 7–26 cabling, modem by–pass 7–29 cabling, synchronous multipoint 7–31 cabling considerations, HP–IB 8–2 cabling limitations, HP–IB 8–3 CAPS LOCK key programming 2–13 cartridge tape operations, Compatibility Mode 3–39 cartridge tape rethreading D–1 CCA character 5–39 CCITT signals 7–27 centering graphics text 3–27 character cell, general description of 1–3 character checking 5–24 character code chart B–14
ASCII code selection 5-24 ASCII incremental 3-16 ASCII relocatable 3-16 ASCII transfers 4-5, 4-12 assign devices 4-4 Asynchronous Multipoint Interface (13260C) straps 5-41, 7-24 Attention ID (AID) 5-39 AUTO LF key programming 2-13  B back tab 2-6 backspace 2-6, 4-11 Bar Charts 3-31 baud rate selection (13260B) 5-23	cabling, asynchronous multipoint       7-30         cabling, current loop       7-29         cabling, data communications       7-26         cabling, modem by-pass       7-29         cabling, synchronous multipoint       7-31         cabling considerations, HP-IB       8-2         cabling limitations, HP-IB       8-3         CAPS LOCK key programming       2-13         cartridge tape operations, Compatibility Mode       3-39         cartridge tape rethreading       D-1         CCA character       5-39         CCITT signals       7-27         centering graphics text       3-27         character cell, general description of       1-3         character checking       5-24         character delete       2-7
ASCII code selection 5-24 ASCII incremental 3-16 ASCII relocatable 3-16 ASCII transfers 4-5, 4-12 assign devices 4-4 Asynchronous Multipoint Interface (13260C) straps 5-41, 7-24 Attention ID (AID) 5-39 AUTO LF key programming 2-13  B  back tab 2-6 backspace 2-6, 4-11 Bar Charts 3-31 baud rate selection (13260B) 5-23 BAUD RATE switch (point-to-point) 5-4	cabling, asynchronous multipoint 7–30 cabling, current loop 7–29 cabling, data communications 7–26 cabling, modem by–pass 7–29 cabling, synchronous multipoint 7–31 cabling considerations, HP–IB 8–2 cabling limitations, HP–IB 8–3 CAPS LOCK key programming 2–13 cartridge tape operations, Compatibility Mode 3–39 cartridge tape rethreading D–1 CCA character 5–39 CCITT signals 7–27 centering graphics text 3–27 character cell, general description of 1–3 character checking 5–24 character delete 2–7 Character Mode (block) 5–23
ASCII code selection 5-24 ASCII incremental 3-16 ASCII relocatable 3-16 ASCII transfers 4-5, 4-12 assign devices 4-4 Asynchronous Multipoint Interface (13260C) straps 5-41, 7-24 Attention ID (AID) 5-39 AUTO LF key programming 2-13   B  back tab 2-6 backspace 2-6, 4-11 Bar Charts 3-31 baud rate selection (13260B) 5-23 BAUD RATE switch (point-to-point) 5-4 baud rate switches (block) 5-33	cabling, asynchronous multipoint       7-30         cabling, current loop       7-29         cabling, data communications       7-26         cabling, modem by-pass       7-29         cabling, synchronous multipoint       7-31         cabling considerations, HP-IB       8-2         cabling limitations, HP-IB       8-3         CAPS LOCK key programming       2-13         cartridge tape operations, Compatibility Mode       3-39         cartridge tape rethreading       D-1         CCA character       5-39         CCITT signals       7-27         centering graphics text       3-27         character cell, general description of       1-3         character checking       5-24         character delete       2-7         Character Mode (block)       5-23         Character Mode (point-to-point)       5-7
ASCII code selection 5-24 ASCII incremental 3-16 ASCII relocatable 3-16 ASCII transfers 4-5, 4-12 assign devices 4-4 Asynchronous Multipoint Interface (13260C) straps 5-41, 7-24 Attention ID (AID) 5-39 AUTO LF key programming 2-13  B  back tab 2-6 backspace 2-6, 4-11 Bar Charts 3-31 baud rate selection (13260B) 5-23 BAUD RATE switch (point-to-point) 5-4 baud rate switches (block) 5-33 BCC 5-24, 5-25	cabling, asynchronous multipoint       7-30         cabling, current loop       7-29         cabling, data communications       7-26         cabling, modem by-pass       7-29         cabling, synchronous multipoint       7-31         cabling considerations, HP-IB       8-2         cabling limitations, HP-IB       8-3         CAPS LOCK key programming       2-13         cartridge tape operations, Compatibility Mode       3-39         cartridge tape rethreading       D-1         CCA character       5-39         CCITT signals       7-27         centering graphics text       3-27         character cell, general description of       1-3         character checking       5-24         character delete       2-7         Character Mode (block)       5-23         Character Mode (point-to-point)       5-7         character protocols       5-6
ASCII code selection 5-24 ASCII incremental 3-16 ASCII relocatable 3-16 ASCII transfers 4-5, 4-12 assign devices 4-4 Asynchronous Multipoint Interface (13260C) straps 5-41, 7-24 Attention ID (AID) 5-39 AUTO LF key programming 2-13  B  back tab 2-6 backspace 2-6, 4-11 Bar Charts 3-31 baud rate selection (13260B) 5-23 BAUD RATE switch (point-to-point) 5-4 baud rate switches (block) 5-33	cabling, asynchronous multipoint       7-30         cabling, current loop       7-29         cabling, data communications       7-26         cabling, modem by-pass       7-29         cabling, synchronous multipoint       7-31         cabling considerations, HP-IB       8-2         cabling limitations, HP-IB       8-3         CAPS LOCK key programming       2-13         cartridge tape operations, Compatibility Mode       3-39         cartridge tape rethreading       D-1         CCA character       5-39         CCITT signals       7-27         centering graphics text       3-27         character cell, general description of       1-3         character checking       5-24         character delete       2-7         Character Mode (block)       5-23         Character Mode (point-to-point)       5-7

 
character sets2–10	data communications
character sets, general description of1-4	data communications, general description of 1-5
checkerboard pattern	data format, ASCII absolute
clear display2-6	data format, ASCII incremental 3-16
clear line2-7	data format, ASCII relocatable
clear mode, graphics	data format, binary absolute 3–16
clear tab 2–5	data format, binary incremental 3-17
CLOse command sequence	data format, binary relocatable 3-18
code, device 4–10	data format, binary short incremental 3-17
code selection (ASCII/EBCDIC) 5-24	data format, binary 3-16
coding the Large Cheracter Set B-16	data format, Compatibility Mode 3-38
command line	data format, default
command status6–12	data format, packed (see binary) 3-16
commands, graphics 3-3	data overflow (block)
communication interface installation	data transfer, computer to device 4-13
communication protocols5-6	data transfer, device to computer 4-12
communication test procedure	data transfers (block)
communications	data transfers, device 4-5, 4-9, 4-12
communications, point-to-point 5-6	date, displaying of 4-8
communications flowcharts	date, setting of
compare all data 4-5, 4-10	DC1 character 5-7, 5-8
compare file 4-5, 4-10	DC1 character inhibit
compare record 4-5, 4-10	DC2 character 5-7, 5-8
Compatibility Mode	DC2 character inhibit
Compatibility Mode graphic data coding 3-40	default data format 3-15
Compatibility Mode strapping	default device
complement mode, graphics 3-6	default parameters, graphics 3-14
completion, device	defining soft keys
computers, connecting to5-1	delays in graphics operations 3-6
condition tape	delete character
configuration (block) 5–39	delete line
configuration (point-to-point)	device assignments, displaying of 4-8
configuration status, block 5–38	device code
connecting terminals 5-1	device completion
control bits, device	device control
control character protocol5-15	device control, cartridge tapes 4-2, 4-11
control codes, graphics	device control, display
control functions, terminal 2-13	device control, printer
Control Memory PCAs strapping	device functions
control parameter, device 4-10	Device ID 5–35
control sequences (block) 5–27, 5–36	device selection
control sequences, device	device status
controlling the display2-1	diagonal lines 3–8
copy all data	diagonal lines, define pattern 3-10
copy file	Digitizer (9874) example
copy record	display, alphanumeric, general description of 1-1
copying to end of medium4-14	display, graphics, general description of 1-1
CRC	display, send to computer (block) 2-17
Current Cursor Address (CCA)5-39	display clear 2-6
cursor addressing 2–4	DIsplay command sequence
cursor control, graphics	display control 2–1
cursor movements, general description of 1-5	display control, graphics
cursor positioning 2-4	Display Enhancements
cursor sensing 2–4	Display Enhancements (13231), installation 7-6
cursor/display operations 2-6	display enhancements and graphics data
	Display Enhancements test pattern
D	display memory functions $\dots 2-1$
_	display on/off, graphics
data checking (communications) 5-24	display selection 4-4, 4-6, 4-11
data checking (fields)2-9	display window control
data comm error	display workspaces

DLE	graphics drawing modes3-6
drawing modes, graphics3-6	graphics functions, keyboard
Driver Mode	graphics functions, recording of
Duplex Register installation	graphics hardcopy operations 4-9, 4-14
DUPLEX switch 5–4	graphics input terminator 3–36
_	graphics keys, description of
E	graphics keys, location of
	graphics memory control
EBCDIC Character Codes, DEC, OCT, HEX C-4	graphics memory dump to printer
EBCDIC code selection 5–24	graphics memory dump to tape
Edit Mode, enable/disable 4-5	graphics memory dump
edit operations	graphics operations, inserting delays
editing in Forms Mode2-9	graphics sequence termination
end-of-data, locating 4-6, 4-11	graphics sequence types
ENQ (block) 5–27	graphics status
ENQ (point-to-point)5-6	graphics text centering3–27
ENTER key	graphics text direction
EOT 5–28	graphics text justifying 3–27
error messages (also see Users Manual) 6-6	graphics text margin
error tests	graphics text on/off
escape sequence, device control	graphics text size
ETB	graphics text slant
ETX 5–28	grounding
EXecute command sequence	Group ID 5–35
EXIT command sequence	group polling 5–37
Extended Asynchronous Interface (13260B) straps5–19, 7–23	group select 5–37
Extended Text features	
Extended Text leadures	Н
F	
•	half bright
-	half bright
f1-f8 keys, programming of 2-14	half duplex operation
f1-f8 keys, programming of	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14
f1-f8 keys, programming of	half duplex operation
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9	half duplex operation       5-9         hardcopy operations       3-24         hardcopy operations, graphics       4-9, 4-14         HELLO command sequence       4-7         high-speed operation       5-6
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         home up cursor       2–6
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11	$\begin{array}{llllllllllllllllllllllllllllllllllll$
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         home up cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         home up cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         home up cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3         HP-IB configurations       8–1
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         home up cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         home up cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3         HP-IB configurations       8–1
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Format Mode       2-8	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         home up cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3         HP-IB configurations       8–1
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Format Mode       2-8         Forms Mode       2-8	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3         HP-IB strapping       7–16
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Format Mode       2-8         Forms Mode       2-8         forms, building       A-4	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3         HP-IB strapping       7–16    ID Number 5–35
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Format Mode       2-8         Forms Mode       2-8         forms, building       A-4         forms, creating       2-8, 2-13	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of       1–5
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Format Mode       2-8         Forms Mode       2-8         forms, building       A-4         forms, creating       2-8, 2-13         forward space       4-11	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of       1–5         incremental, ASCII       3–16
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Format Mode       2-8         Forms Mode       2-8         forms, building       A-4         forms, creating       2-8, 2-13         forward space       4-11         from device selection       4-4, 4-11	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of incremental, ASCII       3–16         incremental, binary       3–17
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Format Mode       2-8         Forms Mode       2-8         forms, building       A-4         forms, creating       2-8, 2-13         forward space       4-11         from device selection       4-4, 4-11         full duplex operation       5-9	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB configurations       8–3         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of incremental, ASCII       3–16         incremental, binary       3–17         input buffer (communications)       5–25
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Format Mode       2-8         Forms Mode       2-8         forms, building       A-4         forms, creating       2-8, 2-13         forward space       4-11         from device selection       4-4, 4-11	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB configurations       8–3         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of       1–5         incremental, ASCII       3–16         incremental, binary       3–17         input/output modules, general description of       1–3
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Formst Mode       2-8         Forms, building       A-4         forward space       4-11         from device selection       4-4, 4-11         full duplex operation       5-9         functions, device       4-11	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB configurations       8–3         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of       1–5         incremental, ASCII       3–16         incremental, binary       3–17         input buffer (communications)       5–25         input/output modules, general description of       1–3         insert character       2–7
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Format Mode       2-8         Forms Mode       2-8         forms, building       A-4         forms, creating       2-8, 2-13         forward space       4-11         from device selection       4-4, 4-11         full duplex operation       5-9	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3         HP-IB configurations       8–1         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of       1–5         incremental, ASCII       3–16         incremental, binary       3–17         input/output modules, general description of       1–3         insert character       2–7         insert line       2–7
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Forms Mode       2-8         Forms, building       A-4         forms, creating       2-8, 2-13         forward space       4-11         from device selection       4-4, 4-11         full duplex operation       5-9         functions, device       4-11	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB configurations       8–3         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of       1–5         incremental, ASCII       3–16         incremental, binary       3–17         input buffer (communications)       5–25         input/output modules, general description of       1–3         insert character       2–7         insert line       2–7         installation       7–1
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Forms Mode       2-8         forms, building       A-4         forms, creating       2-8, 2-13         forward space       4-11         from device selection       4-4, 4-11         full duplex operation       5-9         functions, device       4-11	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3         HP-IB configurations       8–1         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of       1–5         incremental, ASCII       3–16         incremental, binary       3–17         input/output modules, general description of       1–3         insert character       2–7         insert line       2–7         installation       7–1         installation, accessory       7–6
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         form, sample       2-13         Format Mode       2-8         Forms Mode       2-8         forms, building       A-4         forms, creating       2-8, 2-13         forward space       4-11         from device selection       4-4, 4-11         full duplex operation       5-9         functions, device       4-11    G graphics commands graphics commands, length of     3-15	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3         HP-IB configurations       8–1         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of incremental, ASCII       3–16         incremental, binary       3–17         input buffer (communications)       5–25         input/output modules, general description of insert character       2–7         insert character       2–7         installation       7–1         installation, accessory       7–6         interface cable signals       7–26
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         form, sample       2-13         Format Mode       2-8         Forms Mode       2-8         forms, building       A-4         forms, creating       2-8, 2-13         forward space       4-11         from device selection       4-4, 4-11         full duplex operation       5-9         functions, device       4-11          G	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB configurations       8–3         HP-IB configurations       8–1         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of       1–5         incremental, ASCII       3–16         incremental, binary       3–17         input/output modules, general description of       1–3         insert character       2–7         insert line       2–7         installation       7–1         installation, accessory       7–6         interface cable signals       7–26         interface signals       5–3
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Format Mode       2-8         forms, building       A-4         forms, creating       2-8, 2-13         forward space       4-11         from device selection       4-4, 4-11         full duplex operation       5-9         functions, device       4-11     G  graphics commands, length of graphics display, addressing points  3-15	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB cabling limitations       8–3         HP-IB configurations       8–1         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of incremental, ASCII       3–16         incremental, binary       3–17         input buffer (communications)       5–25         input/output modules, general description of insert character       2–7         insert character       2–7         installation       7–1         installation, accessory       7–6         interface cable signals       7–26
f1-f8 keys, programming of       2-14         fail       7-43         fast binary read       4-14         field checking       2-9         fields       2-9         file copy       4-5, 4-13         file mark, recording       4-7, 4-11         file transmission       4-12         files, finding       4-6, 4-11         fill area, absolute and relocatable       3-12         find file       4-6, 4-11         firmware, general description of       1-4         form, sample       2-13         Formst Mode       2-8         forms, building       A-4         forms, creating       2-8, 2-13         forward space       4-11         from device selection       4-4, 4-11         full duplex operation       5-9         functions, device       4-11          G	half duplex operation       5–9         hardcopy operations       3–24         hardcopy operations, graphics       4–9, 4–14         HELLO command sequence       4–7         high-speed operation       5–6         home down cursor       2–6         horizontal lines, define pattern       3–8, 3–10         HP-IB cabling considerations       8–2         HP-IB configurations       8–3         HP-IB strapping       7–16         ID Number       5–35         I/O subsystem, general description of       1–5         incremental, ASCII       3–16         incremental, binary       3–17         input buffer (communications)       5–25         input/output modules, general description of       1–3         insert character       2–7         installation       7–1         installation, accessory       7–6         interface cable signals       7–26         interfaces, data communications       5–1, 7–13

J	messages, transferring to device	. 4–8
	modem disconnect command	2–18
jam mode, graphics	modems	
justifying graphics text	modes, graphics drawing	. 3–6
	Monitor Mode 5–14,	
K	moving text blocks	. 2–8
	multicharacter transfers (block)	5-23
keyboard, general description of1-4	multicharacter transfers (point-to-point)	. 5–7
Keyboard communications switches flowcharts C-9	Multiplot	
keyboard disable2-17	multipoint	5-34
keyboard enable	multipoint communications	
keyboard graphics functions 3-1	multipoint example	
Keyboard Interface PCA strapping,	multipoint strapping flowchart	5–40
multipoint		
Keyboard Interface PCA strapping,	N	
point-to-point		
Keyboard Interface PCA switch summary 5-3	NAK	5-27
Keyboard Interface PCA switches (block) 5-32	network configurations	5-2
Keyboard Interface switches, programming 2-14	networks	
keyboard overlay installation 7-15	next page	
•	NOP, graphics	3–15
L	null characters	
	numeric field checking	2-9
labels, graphics text	_	
Large Character Set coding	. 0	
Large Character Set installation	_	
Large Character Set 2–12, A–7	opening the terminal	7–2
latching keys, programming 2–13	options and accessories	B–15
line delete	origin, relocatable	3–13
Line Drawing character set	output buffer (communications)	5–25
line feed		
line pattern, defining	P	
Line Select 5 38	<del>-</del>	
Line Select	PA key	5–34
Line Select	PAD	5–28
Line Select       5–38         line strap       5–10         line type       3–8	PADpage	5–28 2–6
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33	PAD	5–28 2–6 3–36
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26	PAD page Page Full Break Page Full Busy	5–28 2–6 3–36 3–36
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33	PAD  page  Page Full Break  Page Full Busy  page strap	5–28 2–6 3–36 3–36 5–10
Line Select       5-38         line strap       5-10         line type       3-8         Linear Charts       3-33         logic levels       7-26         LRC       5-24	PAD	5-28 2-6 3-36 3-36 5-10 5-11
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default	5-28 2-6 3-36 3-36 5-10 5-11 3-14
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24	PAD  page  Page Full Break  Page Full Busy  page strap  page strapping in Format Mode  parameters, graphics default  parameters, graphics	5-28 2-6 3-36 3-36 5-10 5-11 3-14 3-3
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         M         Main Channel protocol       5–14, 5–15	PAD  page  Page Full Break  Page Full Busy  page strap  page strapping in Format Mode  parameters, graphics default  parameters, graphics  PARITY switch (block)	5-28 2-6 3-36 3-36 5-10 5-11 3-14 3-3 5-33
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         M         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5	PAD  page  Page Full Break  Page Full Busy  page strap  page strapping in Format Mode  parameters, graphics default  parameters, graphics  PARITY switch (block)  PARITY switch (point-to-point)	5-28 2-6 3-36 3-36 5-10 5-11 3-14 3-3 5-33
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         M         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area	5-28 2-6 3-36 3-36 5-10 5-11 3-14 3-3 5-33 5-4 3-8
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         M         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard	5-28 2-6 3-36 3-36 5-10 5-11 3-14 3-3 5-33 5-4 3-8 3-10
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         M         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line	5-28 2-6 3-36 3-36 5-10 5-11 3-14 3-3 5-33 5-4 3-8 3-10 3-9
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, predefined	5-28 2-6 3-36 3-36 5-10 5-11 3-14 3-3 5-33 5-4 3-8 3-10 3-9 3-8
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory, general description of       1–3	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, predefined pattern, user defined	5-28 2-6 3-36 3-36 5-10 5-11 3-14 3-3 5-33 5-4 3-8 3-10 3-9 3-8 3-8
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory, general description of       1–3         memory addressing       2–3	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, predefined pattern, user defined patterns, graphics drawing	5-28 2-63 3-36 5-10 5-11 3-14 3-3 5-33 5-4 3-8 3-9 3-8 3-8
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         M         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory, general description of       1–3         memory addressing       2–3         memory configuration       7–11	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, predefined pattern, user defined patterns, graphics drawing pen control	5-28 2-6 3-36 5-10 5-11 3-14 3-3 5-33 5-4 3-8 3-10 3-9 3-8 3-8 3-8 3-8
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory, general description of       1–3         memory addressing       2–3         memory configuration       7–11         memory control, graphics       3–5	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, predefined pattern, user defined patterns, graphics drawing pen control PF key Pie Charts	5-28 2-63 3-36 3-36 5-10 5-11 3-3 5-4 3-8 3-10 3-8 3-8 3-8 3-15 5-34 3-35
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         M         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory, general description of       1–3         memory addressing       2–3         memory configuration       7–11         memory control, graphics       3–5         memory link structure, general description of       1–6	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, user defined pattern, user defined patterns, graphics drawing pen control PF key Pie Charts plotting commands summary	5-28 2-63 3-36 3-36 5-10 5-11 3-3 5-43 3-8 3-10 3-9 3-8 3-8 3-15 5-34 3-29 3-14
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory, general description of       1–3         memory addressing       2–3         memory configuration       7–11         memory control, graphics       3–5         memory link structure, general description of       1–6         memory lock       2–6	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, predefined pattern, user defined patterns, graphics drawing pen control PF key Pie Charts plotting commands summary point plot (line type pattern)	5-28 2-63 3-36 3-36 5-10 5-11 3-3 5-33 5-4 3-8 3-10 3-9 3-8 3-15 5-34 3-29 3-14 3-3 3-3 3-3 3-3 3-3 3-3 3-3 3-
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         M         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory, general description of       1–3         memory addressing       2–3         memory configuration       7–11         memory control, graphics       3–5         memory link structure, general description of       1–6         memory lock       2–6         memory management, general description of       1–5	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, predefined pattern, user defined patterns, graphics drawing pen control PF key Pie Charts plotting commands summary point plot (line type pattern) point-to-point	5-28 2-63 3-36 5-10 5-11 3-3 5-43 3-8 3-10 3-9 3-8 3-8 3-15 5-34 3-29 3-14 3-8 3-15 5-34 3-8 3-15 5-34 3-8 3-15 5-34 3-8 3-15 5-34 3-8 3-15 5-34 3-8 3-15 5-34 3-8 3-15 5-34 3-8 3-8 3-8 3-8 3-8 3-8 3-8 3-8
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         M         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory, general description of       1–3         memory addressing       2–3         memory configuration       7–11         memory control, graphics       3–5         memory link structure, general description of       1–6         memory lock       2–6         memory management, general description of       1–5         memory map       7–11	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, predefined pattern, user defined patterns, graphics drawing pen control PF key Pie Charts plotting commands summary point plot (line type pattern) point-to-point point-to-point communications flowchart	5-28 2-6 3-36 5-10 5-11 3-14 3-3 5-33 5-4 3-8 3-15 5-34 3-29 3-14 3-8 5-6 C-6
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         M         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory, general description of       1–3         memory addressing       2–3         memory configuration       7–11         memory link structure, general description of       1–6         memory lock       2–6         memory management, general description of       1–5         memory map       7–11         message blocks       5–23	PAD  page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, user defined pattern, user defined patterns, graphics drawing pen control PF key Pie Charts plotting commands summary point plot (line type pattern) point-to-point point-to-point communications flowchart point-to-point configuration	5-28 2-6 3-36 5-10 5-11 3-14 3-3 5-43 3-8 3-15 5-34 3-8 3-15 5-34 3-29 3-14 3-8 5-6 C-6 5-14
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory general description of       1–3         memory addressing       2–3         memory configuration       7–11         memory lock       2–6         memory management, general description of       1–5         memory map       7–11         message blocks       5–23         message line       2–2, 2–3	page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, user defined pattern, user defined patterns, graphics drawing pen control PF key Pie Charts plotting commands summary point plot (line type pattern) point-to-point point-to-point communications flowchart point-to-point strapping flowchart	5-28 2-6 3-36 5-10 5-11 3-14 3-3 5-43 3-8 3-15 5-34 3-8 3-15 5-34 3-29 3-14 3-8 5-6 C-6 5-14 5-19
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         M         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory, general description of       1–3         memory addressing       2–3         memory configuration       7–11         memory link structure, general description of       1–6         memory lock       2–6         memory management, general description of       1–5         memory map       7–11         message blocks       5–23	page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, user defined pattern, user defined patterns, graphics drawing pen control PF key Pie Charts plotting commands summary point plot (line type pattern) point-to-point point-to-point communications flowchart point-to-point strapping flowchart polling	5-28 2-6 3-36 5-10 5-11 3-14 3-3 5-33 5-4 3-8 3-15 5-34 3-8 3-15 5-34 3-29 3-14 3-8 5-6 C-6 5-14 5-19 5-36
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory general description of       1–3         memory addressing       2–3         memory configuration       7–11         memory lock       2–6         memory management, general description of       1–5         memory map       7–11         message blocks       5–23         message line       2–2, 2–3	page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, user defined pattern, user defined patterns, graphics drawing pen control PF key Pie Charts plotting commands summary point plot (line type pattern) point-to-point point-to-point communications flowchart point-to-point strapping flowchart polling positioning the cursor	5-28 2-6 3-36 5-10 5-11 3-14 3-3 5-33 5-4 3-8 3-15 5-34 3-8 3-15 5-34 3-29 3-14 3-8 5-6 5-14 5-19 5-36 2-4
Line Select       5–38         line strap       5–10         line type       3–8         Linear Charts       3–33         logic levels       7–26         LRC       5–24         Main Channel protocol       5–14, 5–15         margin, graphics text       3–27         margins       2–5         margins, Compatibility Mode       3–35         Math Character Set       2–12         Math Character Set installation       7–6         medium, copying to the end of       4–14         memory general description of       1–3         memory addressing       2–3         memory configuration       7–11         memory lock       2–6         memory management, general description of       1–5         memory map       7–11         message blocks       5–23         message line       2–2, 2–3	page Page Full Break Page Full Busy page strap page strapping in Format Mode parameters, graphics default parameters, graphics PARITY switch (block) PARITY switch (point-to-point) pattern, area pattern, checkerboard pattern, defining line pattern, user defined pattern, user defined patterns, graphics drawing pen control PF key Pie Charts plotting commands summary point plot (line type pattern) point-to-point point-to-point communications flowchart point-to-point strapping flowchart polling	5-28 2-6 3-36 5-10 5-11 3-14 3-3 5-33 5-4 3-8 3-10 3-9 3-8 3-15 5-34 3-8 5-34 3-8 5-6 5-14 5-19 5-36 5-14 5-19 5-36

predefined pattern 3-8	S
previous page	_
primary terminal status	scale, line pattern3-9
printer, header listing	scale switch
printer installation (9866)	scaled Compatibility Mode
printer installation (9871)	secondary terminal status6-4
printer selection	selection, device
printer status 6–7	selection, device function
processor, general description of	selection (multipoint)
program load command 2–18	selection of character sets
programmable graphics functions 3-1	self test, cartridge tapes
programmable keys 2–14	self test, data communications       7-43         self test, HP-IB       7-49, 8-3
Programmers Reference Table B-3	self test, multipoint
programming Keyboard Interface switches 2-14	self test, point-to-point
programming the latching keys	self test, terminal-to-terminal loop back
programming the soft keys	Self Test command
protected fields	self test connectors
protocol, Main Channel	Self Test procedure 7–39
protocol, Reverse Channel	send byte count 4–10
protocols	send display 2–17
protocois	sensing the cursor position 2-4
D	Serial Printer Interface installation 7–12
R	set mode, graphics 3-6
RAM error 7–39	set tab 2–5
RANGE switch	SET Time/Date command sequence 4-7
range, data	Shared Peripheral Interface installation
raster data, CPU to terminal	short incremental, binary 3-17
raster data, positioning on the display 3-22	SHow command sequence
raster data, terminal to CPU 3–23	signal levels
raster dump 3–19	signal line control
raster dump, summary of commands 3-24	signals, interface
raster output format	soft key applications
raster scan, general description of 1-3	soft key label line
read, binary 4-14	soft key labels
read control byte	soft key labels, displaying
record, copying	soft key programming
Record Mode, enable/disable	soft key triggering2-16
record transmission	soft reset 2–17
recording file marks	space compression 5–26
relocatable, ASCII	specifications B-2
relocatable binary         3–18           relocatable origin         3–13	speed switches (block)
REMOTE key	status
REMOTE key programming	status, block configuration 5-38
REPort command sequence 4–7	status, command
reset 2–17	status, device function
reset terminal (full)	status, device
reset terminal (soft)2-17	status, graphics
RESume command sequence 4–7	status, terminal secondary6–4
rethreading tapes D-1	status, terminal
retransmit last record4-10	status interpretation
RETURN 2-6	strap options (block)
RETURN key programming 2-14	strapping, 13296 Shared Peripheral Interface 7-16
Reverse Channel Protocol 5–14, 5–17	strapping, 32K RAM Memory PCAs7-10
rewind 4-7, 4-11	strapping, Asynchronous Multipoint (13260C) 7-24
roll down	strapping, Compatibility Mode 3-36
roll up	strapping, Control Memory PCAs
ROM error	
rubber band line	
rupper band line	

strapping, Extended Asychronous PCA (13260B) 7-23	TRansfer (8-bit binary) command sequence 4-9
strapping, G and H straps 5-9	transferring data from computer to device 4-13
strapping, Keyboard Interface PCA (block) 7-21	transferring data from device to computer 4-12
strapping, Keyboard Interface PCA (point-to-point) 7-19	transferring data 4-9, 4-12
strapping, Line/Page 5-10	transmit byte count 4–12
strapping, point-to-point 5-12, 5-19	transmit file 4–10, 4–12
strapping, Synchronous Multipoint (13260D) 7-25	TRANSMIT indicator 5–4
strapping, Terminal Duplex Register PCA 7-12	transmit last record 4–10
strapping option selection	transmit next record
STX 5–27	transmit only fields2-9
SUspend command sequence 4-8	transmit record 4–12
switch settings, data communications 5-4, 5-32	Transparency Mode
SYN	
Synch characters	U
synchronization, graphics	U
synchronous compatiblity (block)	underline
Synchronous Multipoint Interface (13260D) straps 7–25	
(202002) 014pc (1, 20	unprotected fields
Т	unscaled Compatibility Mode3–36
i i	user defined area pattern
	user defined line pattern 3–9
tab	user defined pattern 3-8
tabbing in Forms Mode 2–9	
tabs	V
tabs, clearing	-
tabs, setting	vectors
tabs, using	Verify Mode, enable/disable
tape conditioning	vertical lines, define pattern
tape rethreading D-1	video hardcopy 3–24
tape runoff D-1	Video Interface installation
tape selection	voltage selection
tape status 6–7	
tape status	VRC 5_24
tape status	VRC 5–24
tape storage capacity	VRC 5–24
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	W
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	<b>W</b> WACK 5–27
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$	<b>W</b> WACK
tape storage capacity B-2 tape test command 4-9, 4-11 tape test procedure 7-43 tape units, general description of 1-6 teletype compatible operation 5-9 TEll command sequence 4-8	WACK 5–27 wait command 2–17 window, graphics 3–13
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$ TEll command sequence $4-8$ terminal address $5-35$	WACK
tape storage capacity B-2 tape test command 4-9, 4-11 tape test procedure 7-43 tape units, general description of 1-6 teletype compatible operation 5-9 TEll command sequence 4-8	WACK
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$ TEll command sequence $4-8$ terminal address $5-35$ terminal architecture $1-2$ terminal control functions $2-13$	WACK
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$ TEll command sequence $4-8$ terminal address $5-35$ terminal architecture $1-2$ terminal control functions $2-13$ terminal display adjustments $7-4$	WACK
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$ TEll command sequence $4-8$ terminal address $5-35$ terminal architecture $1-2$ terminal control functions $2-13$ terminal display adjustments $7-4$ terminal ID $5-35$	WACK
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	WACK 5–27 wait command 2–17 window, graphics 3–13 window control 2–1, 2–2 wraparound 2–7 WRU 5–38
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$ TEll command sequence $4-8$ terminal address $5-35$ terminal architecture $1-2$ terminal control functions $2-13$ terminal display adjustments $7-4$ terminal ID $5-35$ terminal mainframe, general description of $1-1$ terminal networks $5-1$ , $7-9$	WACK 5–27 wait command 2–17 window, graphics 3–13 window control 2–1, 2–2 wraparound 2–7 WRU 5–38
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$ TEll command sequence $4-8$ terminal address $5-35$ terminal architecture $1-2$ terminal control functions $2-13$ terminal display adjustments $7-4$ terminal ID $5-35$ terminal mainframe, general description of $1-1$ terminal networks $5-1$ , $7-9$ terminal PCA locations $7-3$	WACK
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$ TEll command sequence $4-8$ terminal address $5-35$ terminal architecture $1-2$ terminal control functions $2-13$ terminal display adjustments $7-4$ terminal ID $5-35$ terminal mainframe, general description of $1-1$ terminal networks $5-1$ , $7-9$ terminal PCA locations $7-3$ terminal self-test command $2-18$	WACK
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$ TEll command sequence $4-8$ terminal address $5-35$ terminal architecture $1-2$ terminal control functions $2-13$ terminal display adjustments $7-4$ terminal ID $5-35$ terminal mainframe, general description of $1-1$ terminal networks $5-1$ , $7-9$ terminal PCA locations $7-3$ terminal self-test command $2-18$ terminal status $6-1$	WACK
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$ TEll command sequence $4-8$ terminal address $5-35$ terminal architecture $1-2$ terminal control functions $2-13$ terminal display adjustments $7-4$ terminal ID $5-35$ terminal mainframe, general description of $1-1$ terminal pCA locations $7-3$ terminal self-test command $2-18$ terminal status $6-1$ terminals, connecting $5-1$	WACK
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$ TEll command sequence $4-8$ terminal address $5-35$ terminal architecture $1-2$ terminal control functions $2-13$ terminal display adjustments $7-4$ terminal ID $5-35$ terminal mainframe, general description of $1-1$ terminal PCA locations $7-3$ terminal self-test command $2-18$ terminal status $6-1$ terminals, connecting $5-1$ terminating graphics sequences $3-15$	WACK
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$ TEll command sequence $4-8$ terminal address $5-35$ terminal architecture $1-2$ terminal control functions $2-13$ terminal display adjustments $7-4$ terminal ID $5-35$ terminal mainframe, general description of $1-1$ terminal PCA locations $7-3$ terminal self-test command $2-18$ terminal status $6-1$ terminals, connecting $5-1$ terminating graphics sequences $3-15$ Test DAtacomm command sequence $4-9$	WACK
tape storage capacity $B-2$ tape test command $4-9$ , $4-11$ tape test procedure $7-43$ tape units, general description of $1-6$ teletype compatible operation $5-9$ TEll command sequence $4-8$ terminal address $5-35$ terminal architecture $1-2$ terminal control functions $2-13$ terminal display adjustments $7-4$ terminal ID $5-35$ terminal mainframe, general description of $1-1$ terminal PCA locations $7-3$ terminal self-test command $2-18$ terminal status $6-1$ terminals, connecting $5-1$ Test DAtacomm command sequence $4-9$ Test HP-IB command sequence $4-9$	WACK
tape storage capacity       B-2         tape test command       4-9, 4-11         tape test procedure       7-43         tape units, general description of       1-6         teletype compatible operation       5-9         TEll command sequence       4-8         terminal address       5-35         terminal architecture       1-2         terminal control functions       2-13         terminal display adjustments       7-4         terminal ID       5-35         terminal mainframe, general description of       1-1         terminal petworks       5-1, 7-9         terminal PCA locations       7-3         terminal self-test command       2-18         terminal status       6-1         terminals, connecting       5-1         terminating graphics sequences       3-15         Test DAtacomm command sequence       4-9         Test HP-IB command sequence       4-9         test patterns       7-39	WACK
tape storage capacity       B-2         tape test command       4-9, 4-11         tape test procedure       7-43         tape units, general description of       1-6         teletype compatible operation       5-9         TEll command sequence       4-8         terminal address       5-35         terminal architecture       1-2         terminal control functions       2-13         terminal display adjustments       7-4         terminal ID       5-35         terminal mainframe, general description of       1-1         terminal petworks       5-1, 7-9         terminal PCA locations       7-3         terminal self-test command       2-18         terminal status       6-1         terminals, connecting       5-1         terminating graphics sequences       3-15         Test DAtacomm command sequence       4-9         Test HP-IB command sequence       4-9         test patterns       7-39         test tape       4-2	WACK
tape storage capacity       B-2         tape test command       4-9, 4-11         tape test procedure       7-43         tape units, general description of       1-6         teletype compatible operation       5-9         TEll command sequence       4-8         terminal address       5-35         terminal architecture       1-2         terminal control functions       2-13         terminal display adjustments       7-4         terminal ID       5-35         terminal mainframe, general description of       1-1         terminal networks       5-1, 7-9         terminal PCA locations       7-3         terminal self-test command       2-18         terminals, connecting       5-1         terminaling graphics sequences       3-15         Test DAtacomm command sequence       4-9         Test HP-IB command sequence       4-9         test patterns       7-39         test tape       4-2         Test Tapes command sequence       4-9	WACK
tape storage capacity       B-2         tape test command       4-9, 4-11         tape test procedure       7-43         tape units, general description of       1-6         teletype compatible operation       5-9         TEll command sequence       4-8         terminal address       5-35         terminal architecture       1-2         terminal control functions       2-13         terminal display adjustments       7-4         terminal ID       5-35         terminal mainframe, general description of       1-1         terminal networks       5-1, 7-9         terminal PCA locations       7-3         terminal self-test command       2-18         terminals, connecting       5-1         terminaling graphics sequences       3-15         Test DAtacomm command sequence       4-9         Test tape       4-9         test tape       4-2         Test Tapes command sequence       4-9         Test TErminal command sequence       4-9         Test TErminal command sequence       4-9	WACK
tape storage capacity       B-2         tape test command       4-9, 4-11         tape test procedure       7-43         tape units, general description of       1-6         teletype compatible operation       5-9         TEll command sequence       4-8         terminal address       5-35         terminal architecture       1-2         terminal control functions       2-13         terminal display adjustments       7-4         terminal ID       5-35         terminal mainframe, general description of       1-1         terminal networks       5-1, 7-9         terminal PCA locations       7-3         terminal self-test command       2-18         terminal self-test command       2-18         terminals, connecting       5-1         terminaling graphics sequences       3-15         Test DAtacomm command sequence       4-9         test tape       4-9         test tape       4-2         Test Tapes command sequence       4-9         Test TErminal command sequence       4-9         text, Compatibility Mode       3-39	WACK
tape storage capacity       B-2         tape test command       4-9, 4-11         tape test procedure       7-43         tape units, general description of       1-6         teletype compatible operation       5-9         TEll command sequence       4-8         terminal address       5-35         terminal architecture       1-2         terminal control functions       2-13         terminal display adjustments       7-4         terminal ID       5-35         terminal mainframe, general description of       1-1         terminal networks       5-1, 7-9         terminal PCA locations       7-3         terminal self-test command       2-18         terminal status       6-1         terminals, connecting       5-1         terminaling graphics sequences       3-15         Test DAtacomm command sequence       4-9         test patterns       7-39         test tape       4-2         Test Tapes command sequence       4-9         Test TErminal command sequence       4-9         Text, Compatibility Mode       3-39         text, graphics       3-25	WACK
tape storage capacity       B-2         tape test command       4-9, 4-11         tape test procedure       7-43         tape units, general description of       1-6         teletype compatible operation       5-9         TEll command sequence       4-8         terminal address       5-35         terminal architecture       1-2         terminal control functions       2-13         terminal display adjustments       7-4         terminal ID       5-35         terminal mainframe, general description of       1-1         terminal PCA locations       7-3         terminal self-test command       2-18         terminal status       6-1         terminals, connecting       5-1         terminating graphics sequences       3-15         Test DAtacomm command sequence       4-9         test patterns       7-39         test tape       4-2         Test Tapes command sequence       4-9         Test TErminal command sequence       4-9         text, Compatibility Mode       3-39         text, graphics       3-25         text moving       2-8	WACK
tape storage capacity       B-2         tape test command       4-9, 4-11         tape test procedure       7-43         tape units, general description of       1-6         teletype compatible operation       5-9         TEll command sequence       4-8         terminal address       5-35         terminal architecture       1-2         terminal control functions       2-13         terminal display adjustments       7-4         terminal ID       5-35         terminal mainframe, general description of       1-1         terminal PCA locations       7-3         terminal self-test command       2-18         terminal status       6-1         terminals, connecting       5-1         terminaling graphics sequences       3-15         Test DAtacomm command sequence       4-9         test ape       4-9         test tape       4-9         Test Terminal command sequence       4-9         Test TErminal command sequence       4-9         Test, Compatibility Mode       3-39         text, graphics       3-25         text moving       2-8         time, displaying of       4-8	WACK
tape storage capacity       B-2         tape test command       4-9, 4-11         tape test procedure       7-43         tape units, general description of       1-6         teletype compatible operation       5-9         TEll command sequence       4-8         terminal address       5-35         terminal architecture       1-2         terminal control functions       2-13         terminal display adjustments       7-4         terminal ID       5-35         terminal mainframe, general description of       1-1         terminal PCA locations       7-3         terminal self-test command       2-18         terminal status       6-1         terminals, connecting       5-1         terminating graphics sequences       3-15         Test DAtacomm command sequence       4-9         test patterns       7-39         test tape       4-2         Test Tapes command sequence       4-9         Test TErminal command sequence       4-9         text, Compatibility Mode       3-39         text, graphics       3-25         text moving       2-8	WACK



•

