

System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
System/23 Setup Instructions
(with 5322 Computer)





System/23 Setup Instructions

System/23 Setup Instructions

System/23 Setup Instructions

System/23 Setup Instructions

System/23 Setup Instructions

System/23 Setup Instructions

System/23 Setup Instructions

System/23 Setup Instructions

System/23 Setup Instructions

System/23 Setup Instructions

System/23 Setup Instructions

System/23 Setup Instructions

System/23 Setup Instructions

(with 5322 Computer)

Federal Communications Commission (FCC) Notice

Warning: This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Fourth Edition (June 1982)

This is a major revision of, and obsoletes SA34-0107-2.

Use this publication only for the purposes stated in "About this book."

Changes are periodically made to the information herein; any such changes will be reported in subsequent revisions or Technical Newsletters.

It is possible that this material may contain reference to, or information about, IBM products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that IBM intends to announce such IBM products, programming, or services in your country.

Publications are not stocked at the address given below. Requests for copies of IBM publications should be made to your IBM representative or the IBM branch office serving your locality.

This publication could contain technical inaccuracies or typographical errors. A form for readers' comments is provided at the back of this publication. If the form has been removed, address your comments to IBM Corporation, Information Development, Department 27T, P.O. Box 1328, Boca Raton, Florida 33432. IBM may use and distribute any of the information you supply in any way it believes appropriate without incurring any obligation whatever. You may, of course, continue to use the information you supply.

About this book

This book describes how to set up and check out the IBM System/23. Step-by-step instructions with photos are included for the following units:

- 5322 Computer
- 5246 Diskette Unit
- 5241 and 5242 Printer
- 5247 Disk
- 5217 Printer
- Printer Switch

These instructions can be used to set up and check out a new system or to set up and check out units that you are adding to an existing system.

You do not need any computer training or any tools to set up and check out your system. You should have unpacked your units and read *Introducing System/23* before you begin these instructions.

Other units that can be added to your system are shown in a later section of this book. Setup instructions for these units are in the manual that were shipped with each unit.

Related Publications

Introducing System/23, GA34-0106

Learning to Use System/23, SA34-0134

Operator Reference, SA34-0108

5247 Disk Setup Instructions, SA34-0187

5217 Printer Setup Instructions, SA34-0197


Contents




Before you begin



Setting up your 5322 Computer

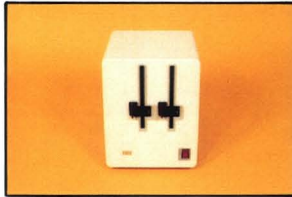

Setting up your 5246 Diskette Unit

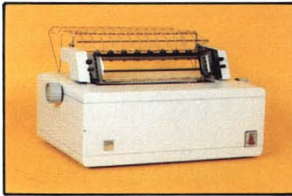


Setting up your 5241 or 5242 Printer



Setting up other units



Checkout out your System/23

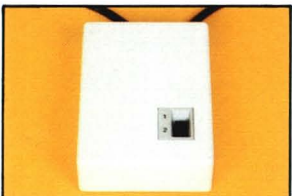

Setting up your Printer Switch

Before you begin



Before you begin

Before you begin



Check your purchase agreement to make sure you received what you ordered.


Check for possible shipping damage.

Put a check in the box above each step after you complete it.



2

If you ordered a document insertion device to attach to your printer (for using 8-1/2 x 11 paper), refer to the *Operator Reference* manual for instructions about setting up and using it.

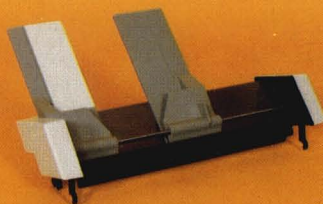

3

Make sure you received all of these items with your computer:

- Binders 1 through 7 (in selected countries)
- 5322 Maintenance Books (2)
- Keyboard aids
- Quick Reference book (in selected countries)
- Type 1 Customer Support Functions diskettes, VOL001 and VOL002, or Type 2D Customer Support Functions diskette, VOL002
- Fuses (in selected countries)

You will learn to use all of these items with your System/23 computer.





4


Your 5322 Computer will look like this after it is unpacked.



5322 Computer

Your System/23 also may include the units shown below. You may have other units shown. You will be instructed to set up these units later in this manual.

5241 or 5242 Printer
(shown after assembly)

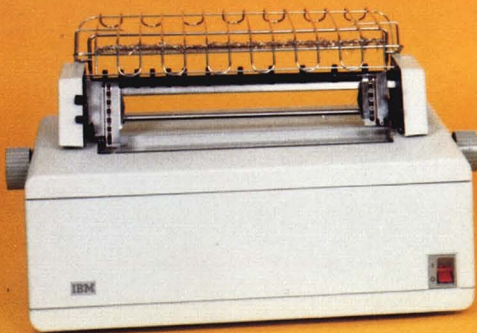

5246 Diskette Unit

Before you begin

5

Your units should be unpacked and placed in the area where you will use them. Make sure you have allowed enough space for service clearances (shown in *Introducing System/23*). An example of how your system may be placed is shown below.

Note: You may not have all of these units in your system or you may have additional units as part of your system.




6

If you want to attach your units to a table, a template is included as a pattern to show you the attachment points.

A template is in the shipping boxes with selected units in your system.

Template

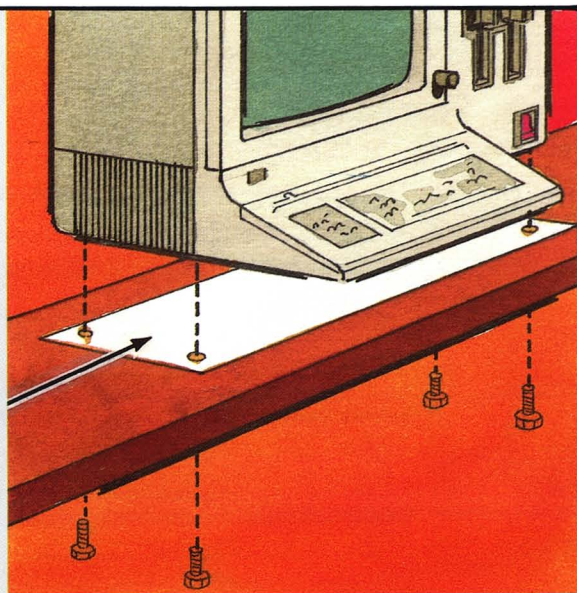

Setting up your 5322 Computer




Setting up your 5322 Computer

If you are setting up this unit, go to the next page. If you are not setting up this unit, go to the first page of the "Setting up your 5246 Diskette Unit" section.

Setting up your 5322 Computer





Switch off (O) the power to the computer.

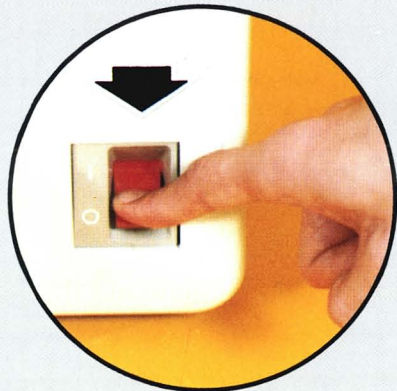


2

Remove the access cover from the back of the computer.

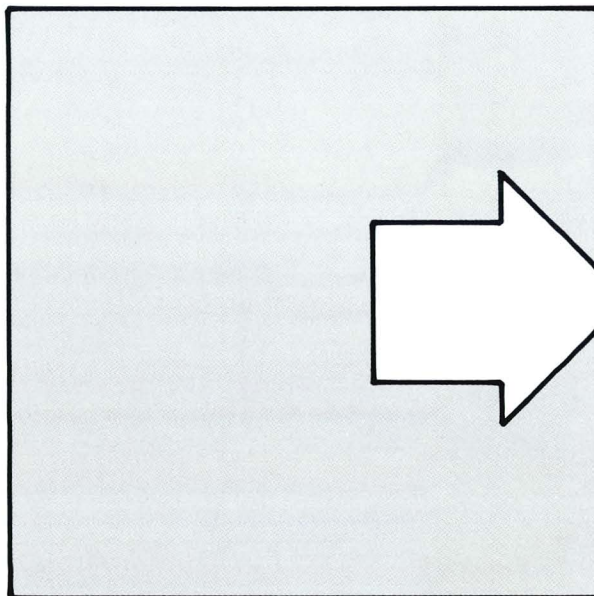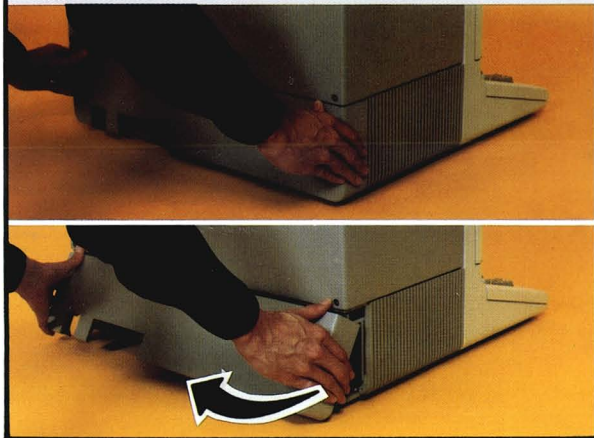

Setting up your 5246 Diskette Unit

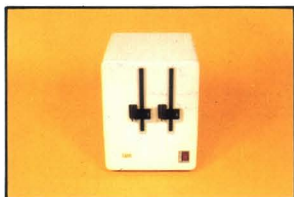


Setting up your 5246 Diskette Unit

If you are setting up this unit, go to the next page. If you are not setting up this unit, go to the first page of the "Setting up your 5241 or 5242 Printer" section.

Setting up your 5246 Diskette Unit


□

You will use the items shown below to set up your diskette unit.

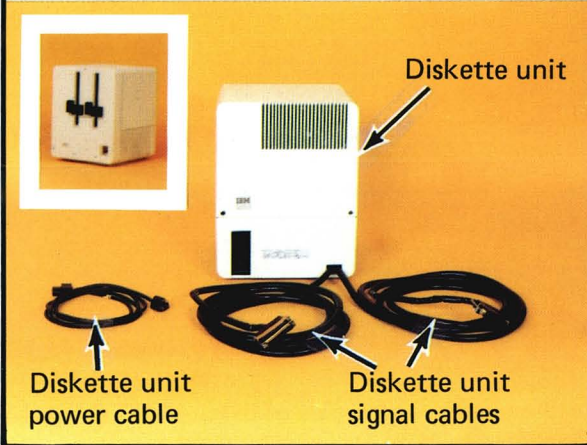

□


2 Switch off (O) the power to all of your units

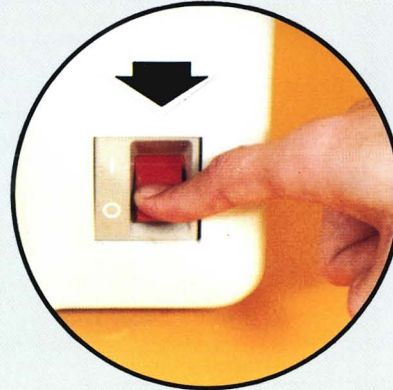

□


3 Find the signal cable(s) at the back of your diskette unit. Your diskette unit may have one or two cables. A diskette unit with two cables is shown at the right.

If your diskette unit has two cables, you can use either cable to attach your diskette unit to your computer. If you are attaching your diskette unit to two computers, you will use the second cable.

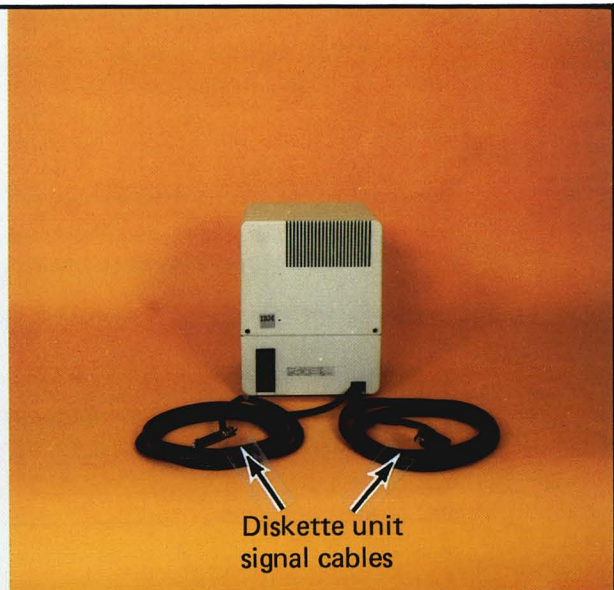


4

If you are adding a diskette unit to an existing system, remove the cable access cover from the back of your computer.

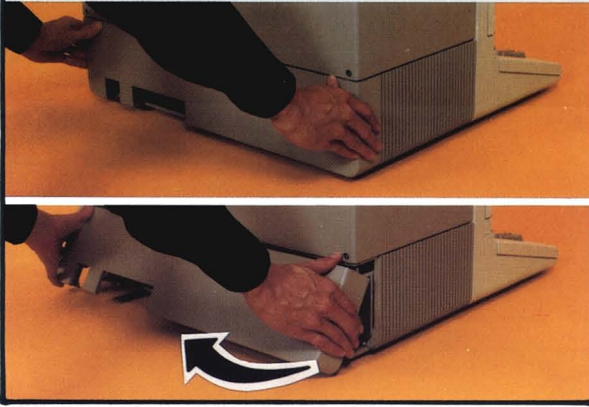

5

Find the connector for the diskette unit signal cable at the back of your computer.

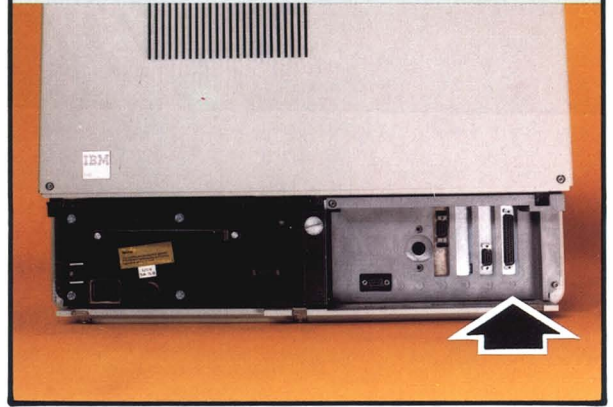

6

Insert the signal cable from the diskette unit into the computer. It will only fit one way.



7

Tighten the thumb screws.




Setting up your 5246 Diskette Unit

□

8


If your diskette unit is to be shared with another computer, repeat steps 2 through 7 to attach the second diskette unit signal cable to the second processor.

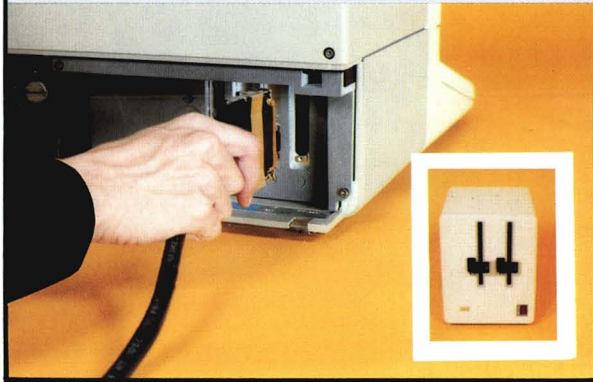

□

9



Attach one end of the diskette unit power cable to the diskette unit. **DO NOT** plug the power cable into the wall outlet at this time.

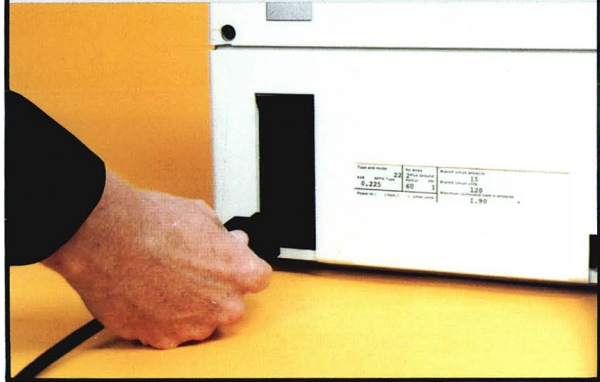


□

10

Make sure the circuit breaker is switched ON.

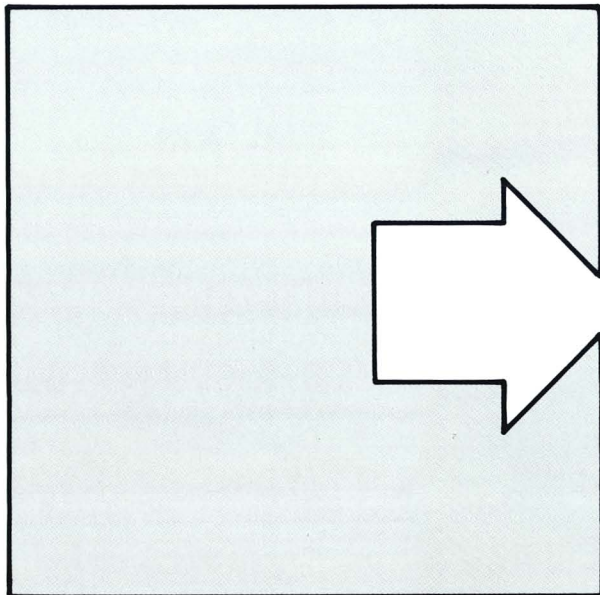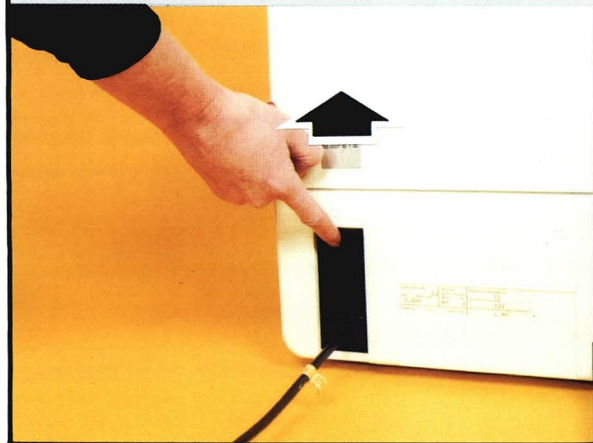

Setting up your 5241 or 5242 Printer

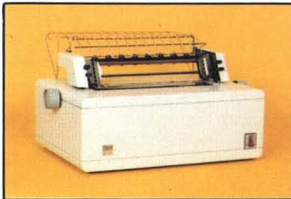



Setting up your 5241 or 5242 Printer

If you are setting up this unit, go to the next page. If you are not setting up this unit, go to the first page of the "Setting up other units" section.


Setting up your 5241 or 5242 Printer



You will use the items shown below to set up your 5241 or 5242 printer. Notice that the 5242 Printer has a print adjusting knob that is taped to the signal cable. Leave the knob taped to the cable. You will learn to attach the knob later in these instructions.

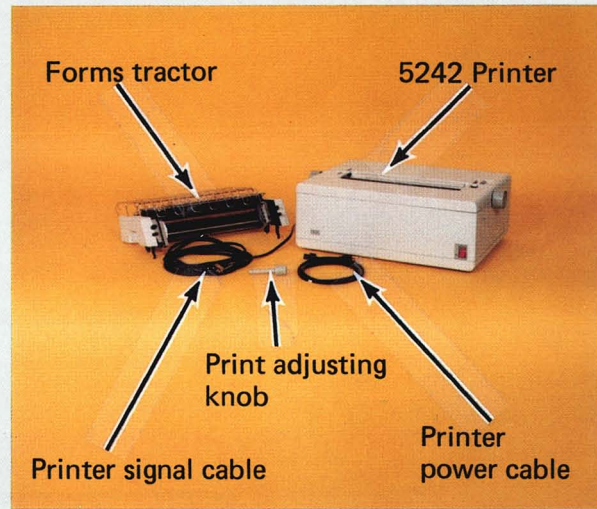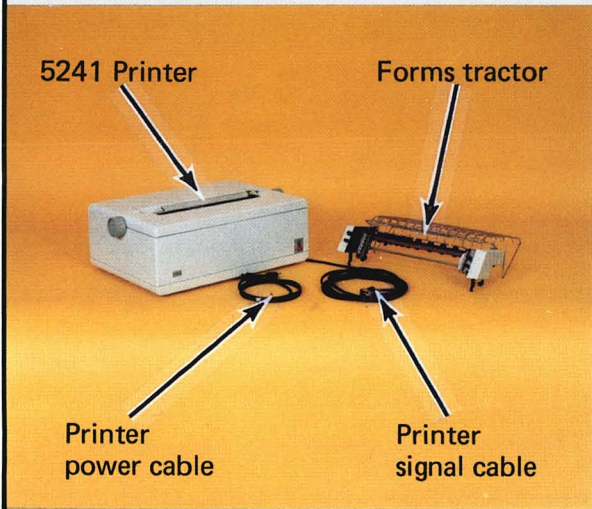


Your printer will look like this when you are finished with this section.

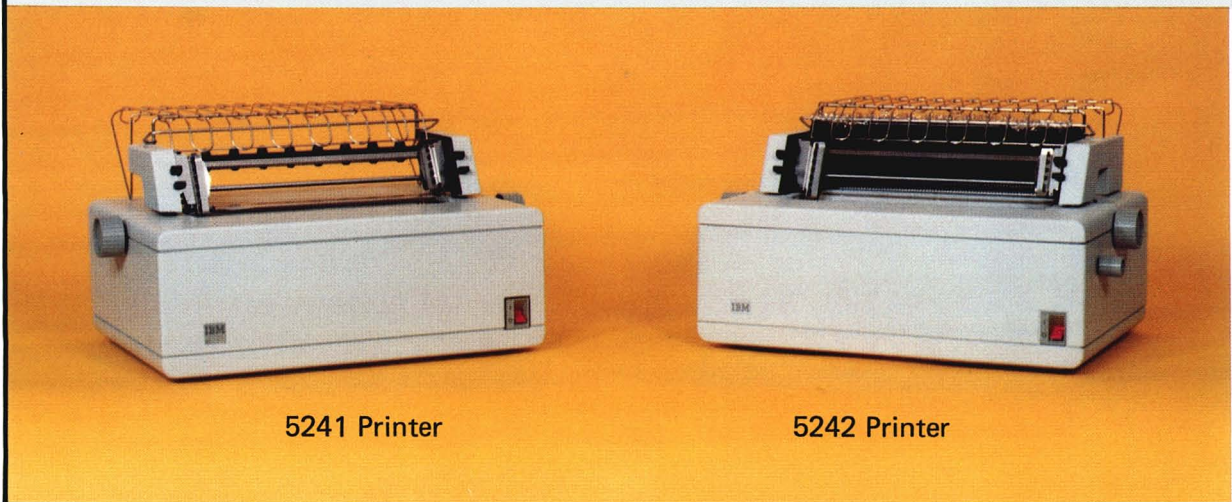

□

2


Slide the access cover forward until it stops.

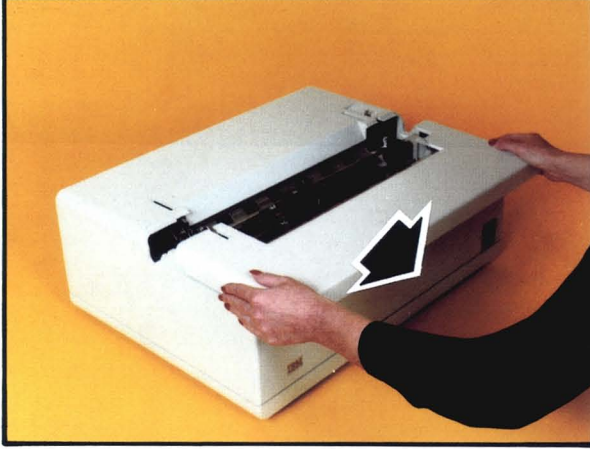


□

3

Move the paper release lever at the right side of the printer toward you until it stops.

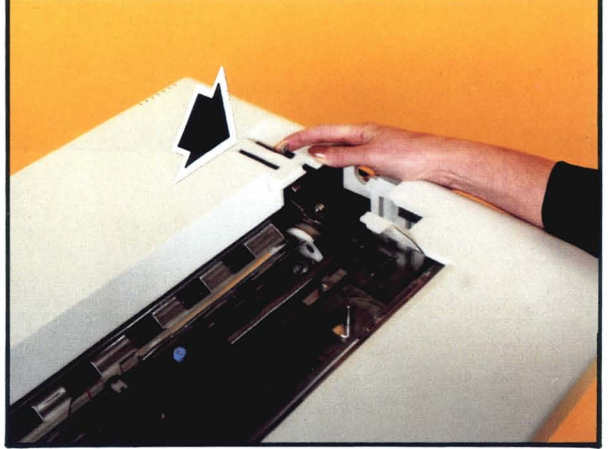

□

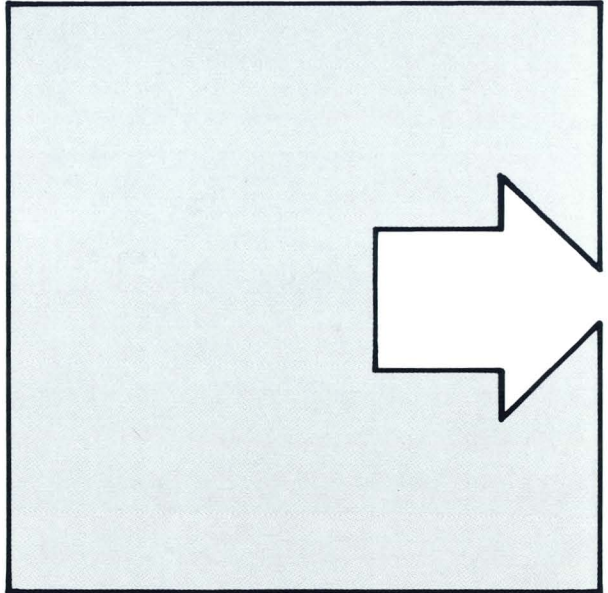


Setting up your 5241 or 5242 Printer




4

Your silver paper deflector should have been shipped in place on the printer. However, if it is not in place, follow the procedure below.


Place the paper deflector into your printer so the legs of the paper deflector rest loosely on the mounting brackets. Make sure the paper switch cutout is on the left and the legs are resting in the notch on the left bracket.

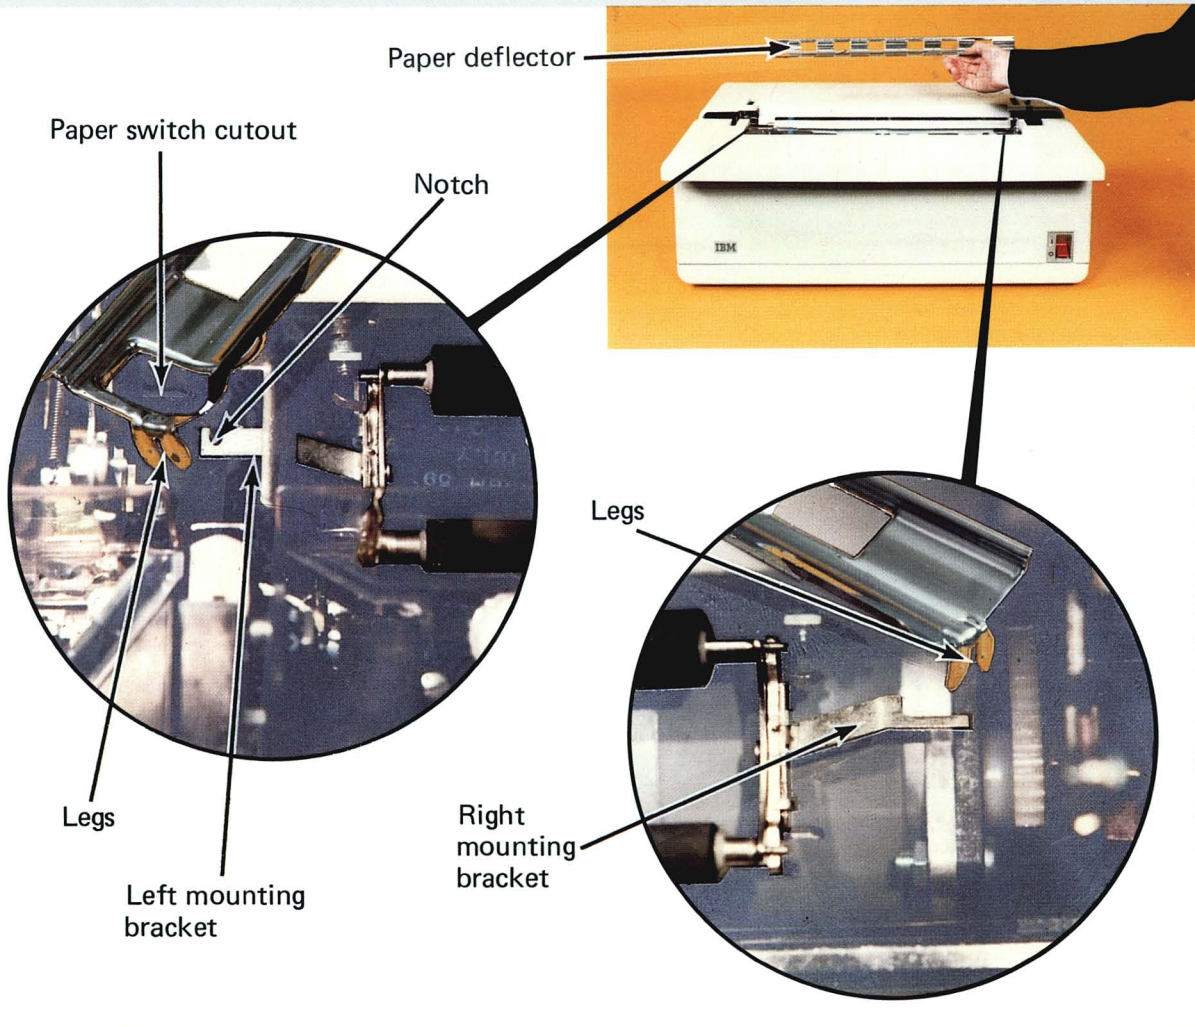


5 Locate the platen that was shipped with your printer. Place the platen in the printer. The gears should be on the right.

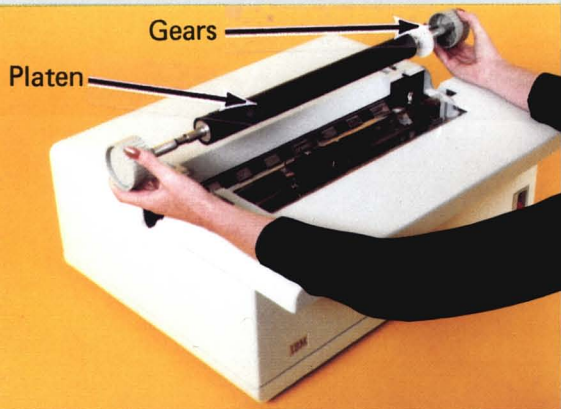


6 Now make sure the black gear on the platen is in line with the white gear *inside* the printer.

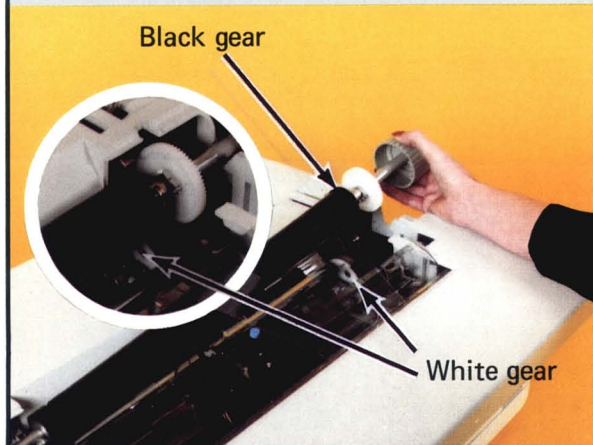

7 Press down firmly until the platen snaps into place on both ends.

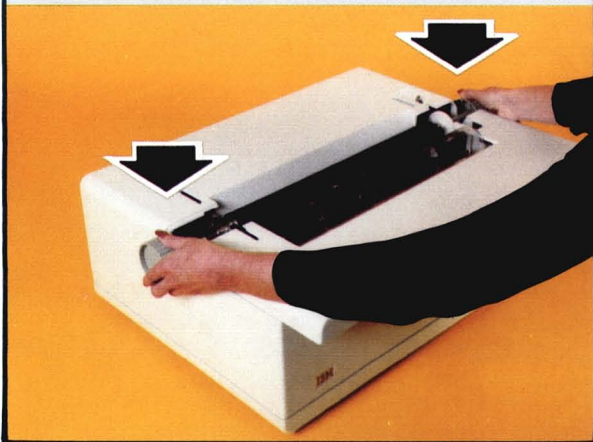

8 Turn the paper advance knob. The platen and the white gear in the printer should turn.


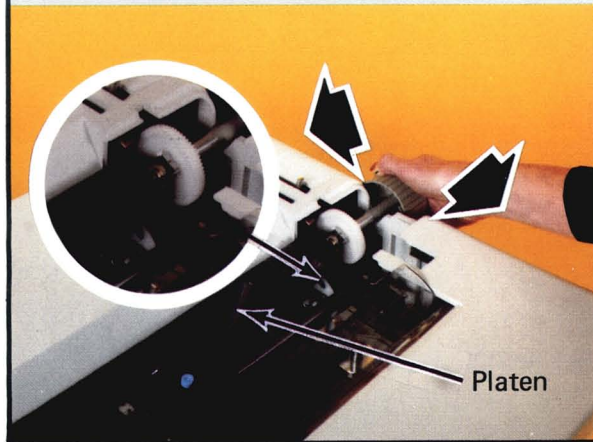


Setting up your 5241 or 5242 Printer




9

If the platen and the white gear don't turn, remove the platen by pressing the levers at each end of the platen and pulling the platen up. Repeat steps 5 through 8. Make sure the paper deflector is still in place.

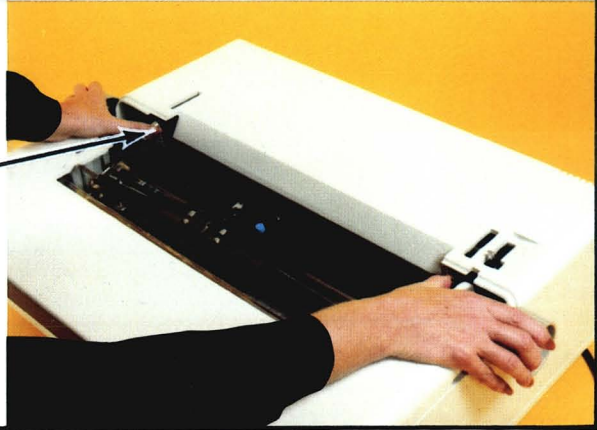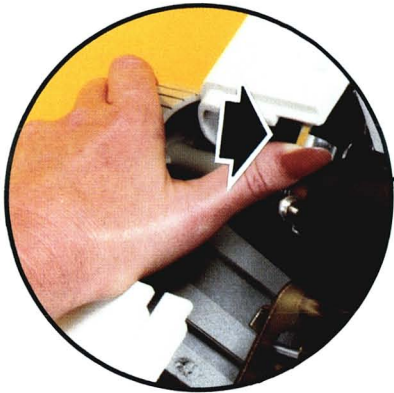


10

Close the access cover.

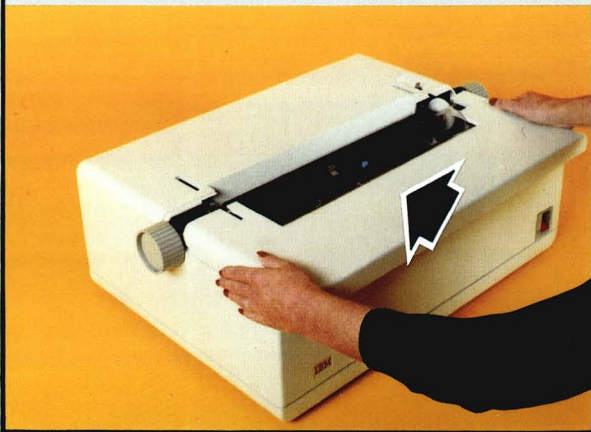


11

Now you are ready to attach the forms tractor that was shipped with your printer.

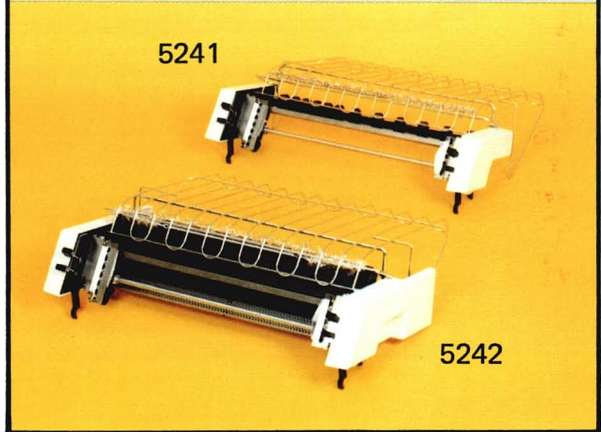



12 Place the legs of the forms tractor over the slots in the printer.

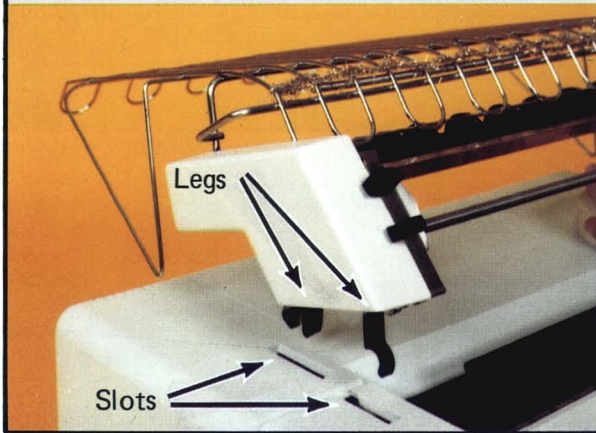


13 Press down on the rear of the forms tractor until the rear legs snap into place.



14 Press down on the front of the forms tractor until the front legs snap into place.



15 Turn the paper advance knob to make sure the tractor pins move. If the tractor pins do not move, repeat steps 12 through 14.

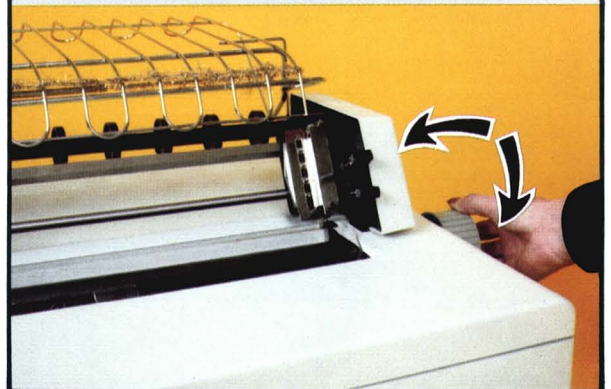


Setting up your 5241 or 5242 Printer



16

Squeeze the handles on the right forms tractor and slide it to the right. Do not move the left forms tractor at this time.

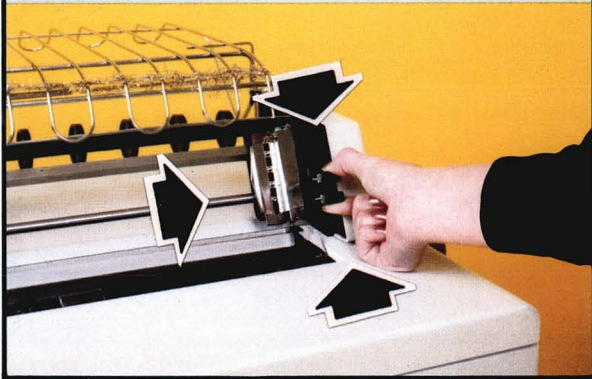



17

Slide the access cover toward you until it stops.



18


Slide the print head all the way to the left until it stops. The print head should move slightly away from the platen.

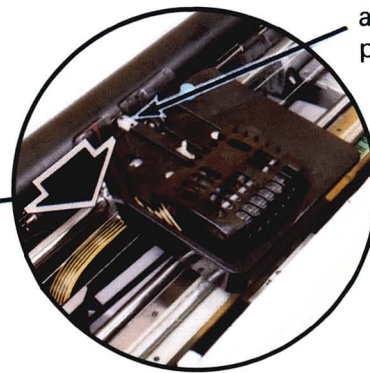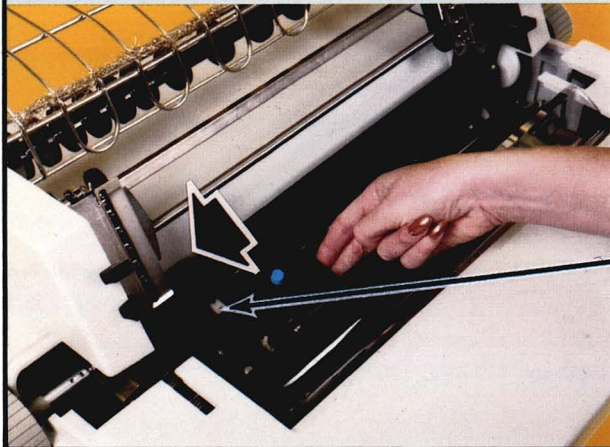

Print head
away from
platen


19

Pivot the forms guide rack up. You are ready to load paper.

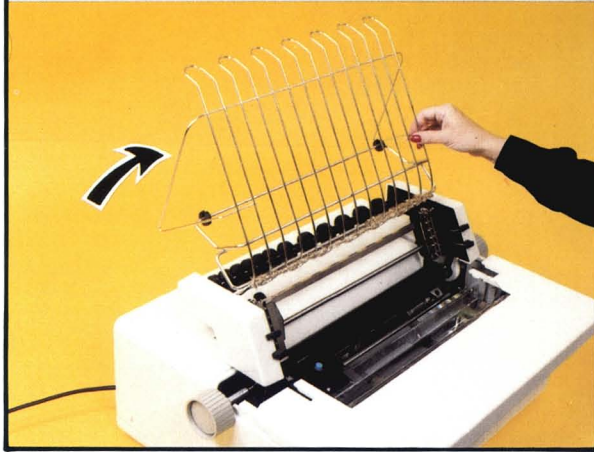

20

Move the paper release lever toward the rear of the printer.

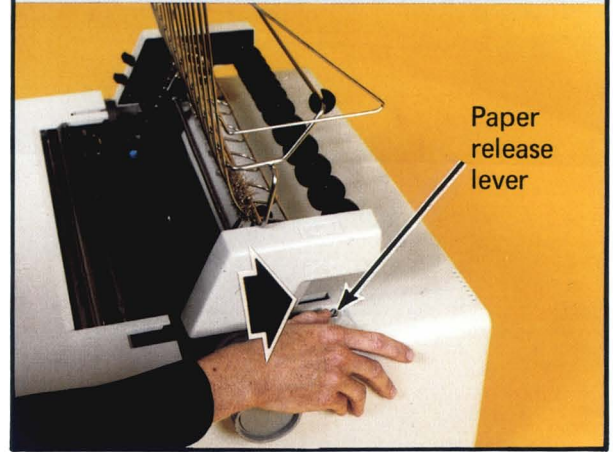

21

From the rear of the printer, feed the printer paper over the rollers on the forms tractor, behind the platen. The paper will stop when it reaches the platen.



22

Turn the paper advance knob until paper appears in front of the platen.



Setting up your 5241 or 5242 Printer



23

Lower the forms guide rack.





24

Move the paper release lever to the front.




25

Open the right forms tractor cover.

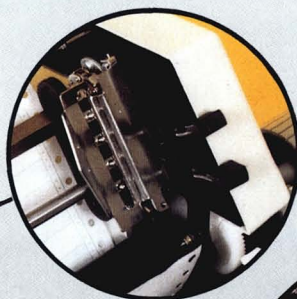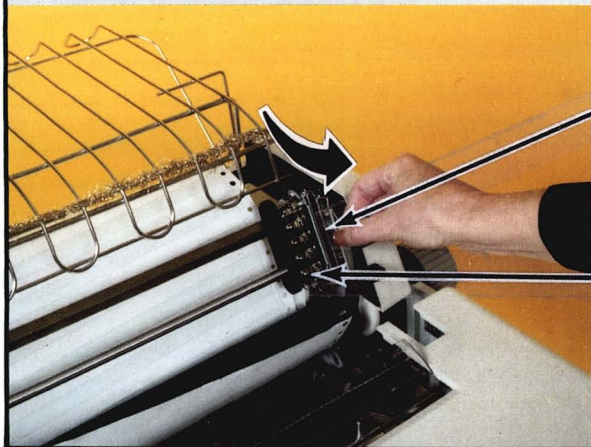


Tractor closed

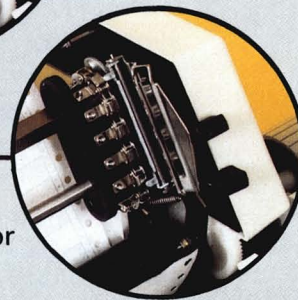


Tractor open

26 Open the left forms tractor cover.

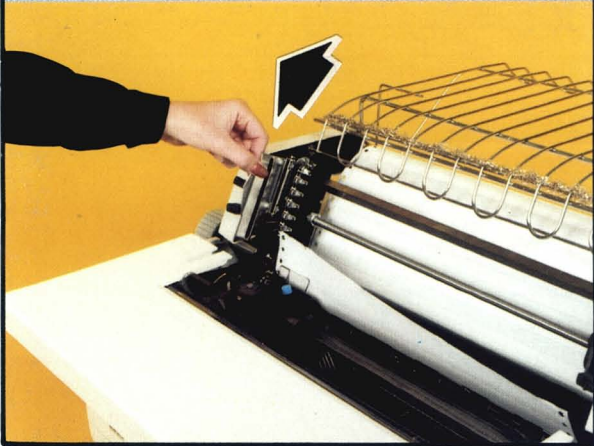

27 Pull up enough paper so that the holes are over the left tractor pins.

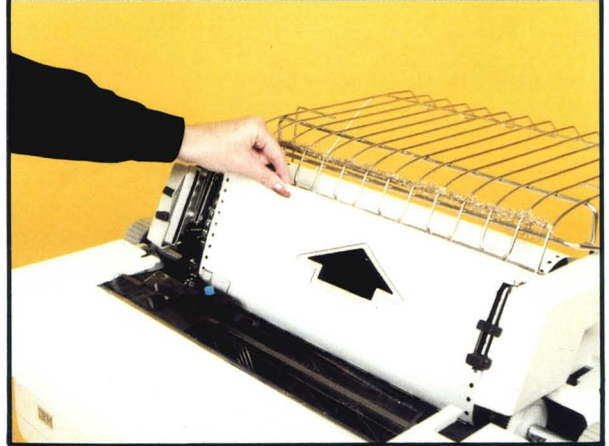


28 Close the left tractor cover.



29 Squeeze the handles on the right tractor. Slide it to align the tractor pins with the holes in the paper. Close the tractor cover.

Note: Remove any slack in the paper by moving the right tractor.

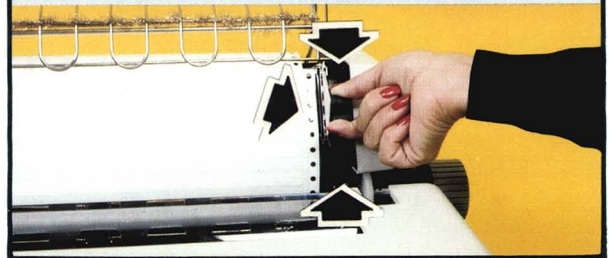

Setting up your 5241 or 5242 Printer

30

If you have a 5242 Printer, locate the print adjusting knob. The knob is shipped taped to the cable that is attached to your printer.


Note: If you have a 5242 Printer, your printer will have a hole at the right side of the printer case.



31

5242 PRINTER ONLY


Lift the front of the printer access cover and remove it.

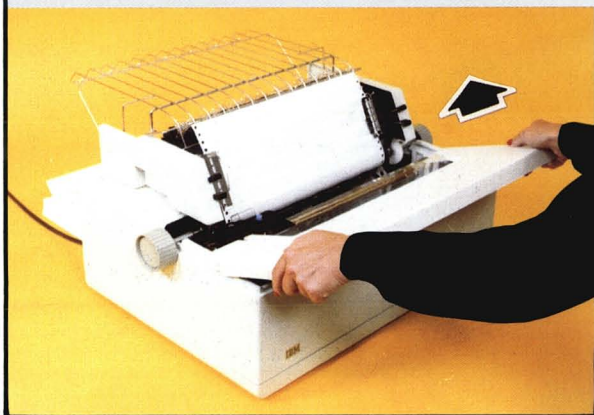

32

5242 PRINTER ONLY

Push the print adjusting knob onto the shaft.

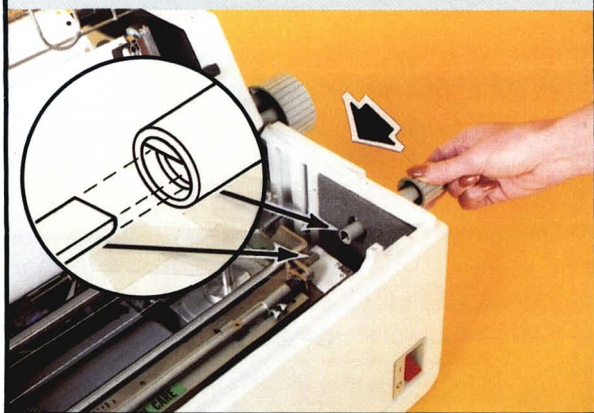

33


If you have a 5241 Printer, close the access cover.

If you have a 5242 Printer, replace and close the access cover.







34 Switch off (O) the power to all of your units.

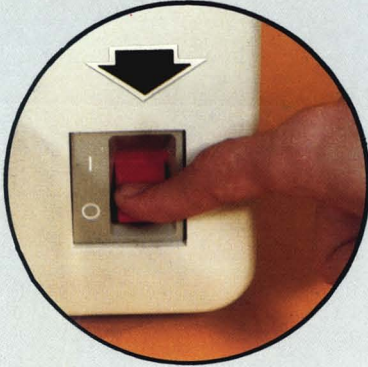


35 If you are adding a printer to an existing system, remove the cable access cover from the back of your computer.

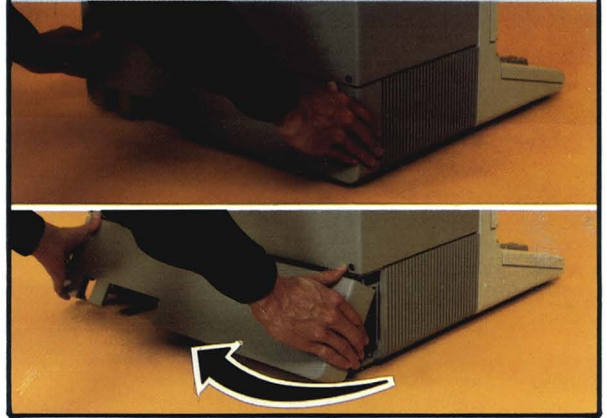

36 Locate the printer signal cable at the back of your printer.

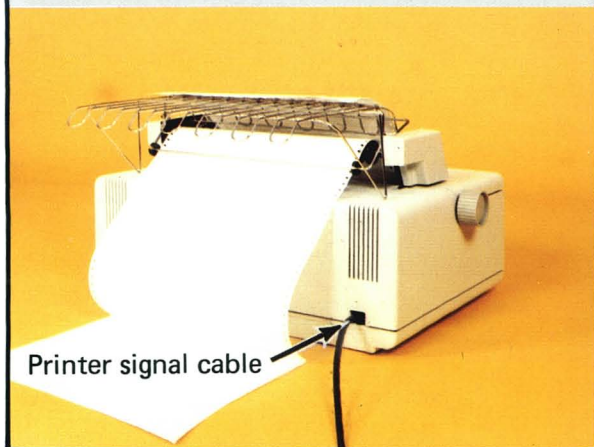

37 Locate the connector for the printer signal cable at the back of your computer.

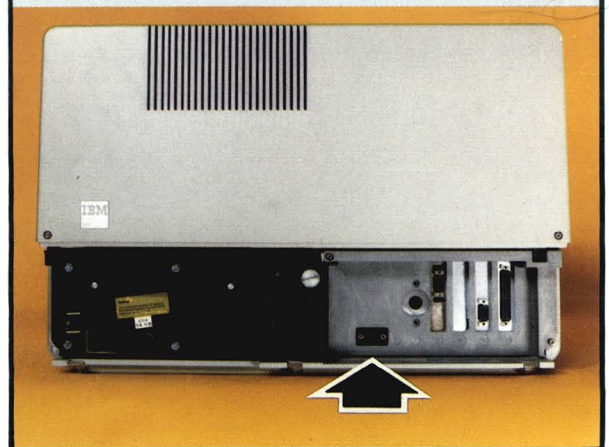

Setting up your 5241 or 5242 Printer




38

Insert the signal cable from the printer into the connector. It will only fit one way.



39

Tighten the thumb screws.

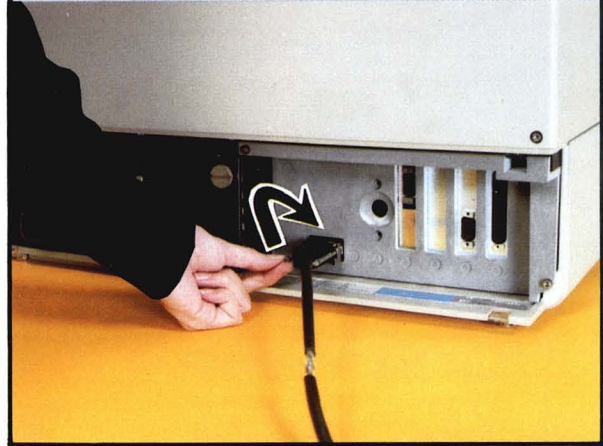


40

Attach one end of the printer power cable to the back of the printer. **DO NOT** plug the power cable into the wall outlet at this time.



41

Make sure the circuit breaker at the back of the printer is switched ON.

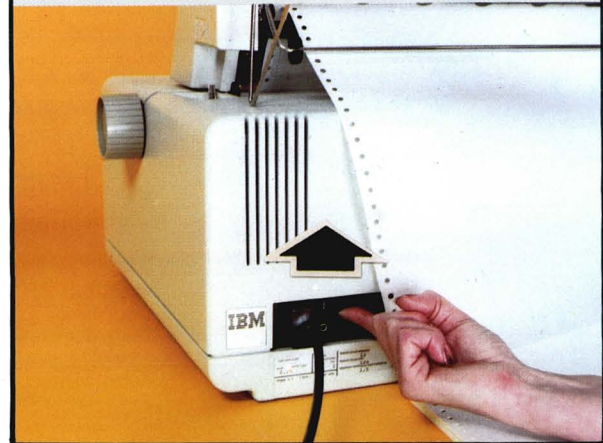




42 If you have a second printer to attach to your computer, attach the printer signal cable from the second printer as shown. Tighten the thumb screws.




43 Attach the power cable to the back of the second printer.



44 Make sure the circuit breaker at the back of the second printer is switched ON.

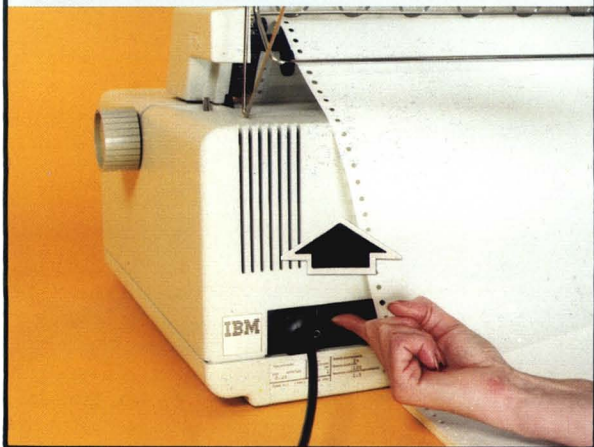

45 If you will be using a Printer Switch, you will set it up after you have checked out your system.

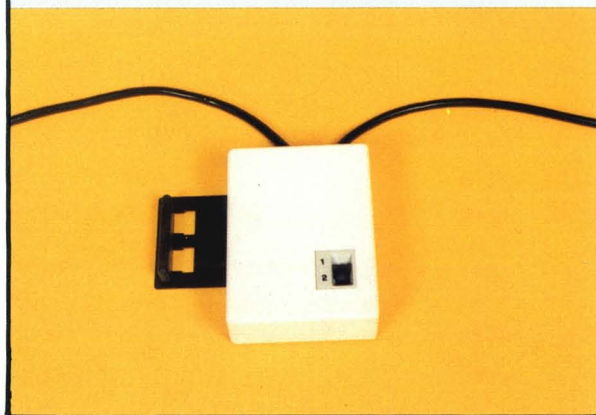

Setting up other units



Setting up other units

If you are setting up units other than the 5246 Diskette Unit or the 5241 or 5242 Printer, go to the next page. If you are not setting up one of these units, go to the first page of the "Checking out your System/23" section.

Setting up other units




So far you may have attached the following units to your system.



5241 or 5242 Printer

5322 Computer


5246 Diskette Unit

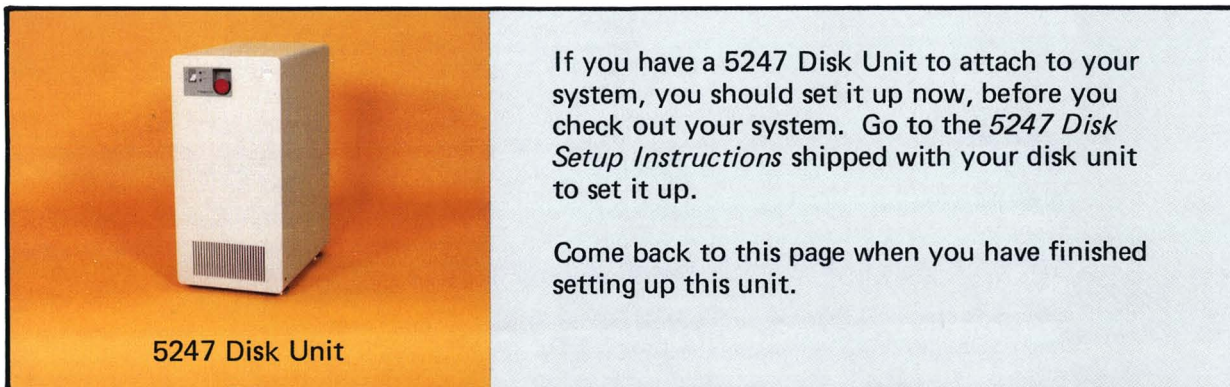

5247 Disk Unit

If you have a 5247 Disk Unit to attach to your system, you should set it up now, before you check out your system. Go to the *5247 Disk Setup Instructions* shipped with your disk unit to set it up.

Come back to this page when you have finished setting up this unit.

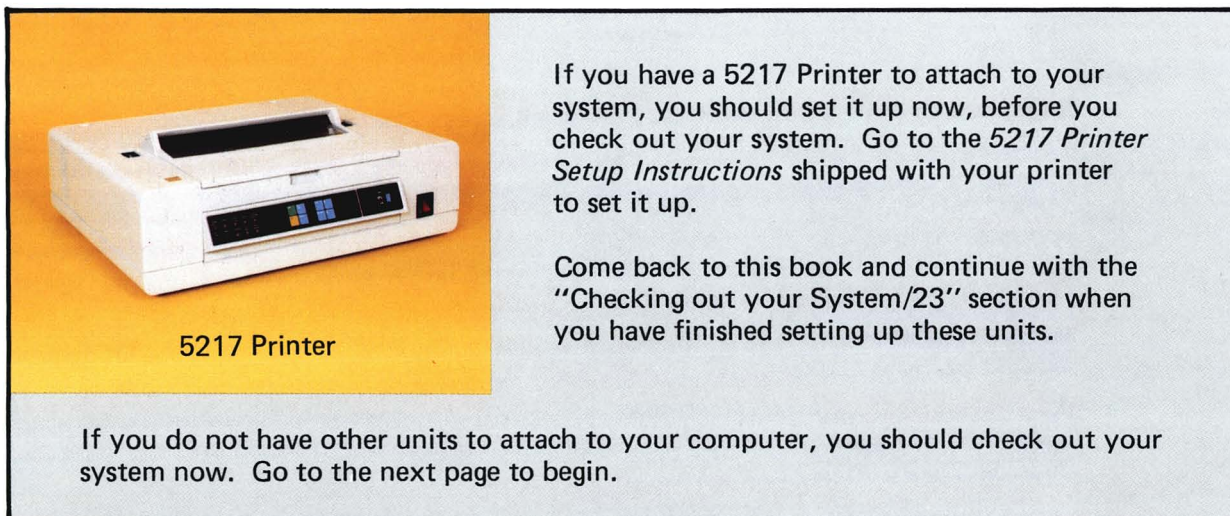

5217 Printer

If you have a 5217 Printer to attach to your system, you should set it up now, before you check out your system. Go to the *5217 Printer Setup Instructions* shipped with your printer to set it up.

Come back to this book and continue with the "Checking out your System/23" section when you have finished setting up these units.

If you do not have other units to attach to your computer, you should check out your system now. Go to the next page to begin.

Checking out your System/23




Checking out your System/23

You should always complete this section.

Checking out your System/23


□

1 Find the signal cable clamp at the back of your computer.

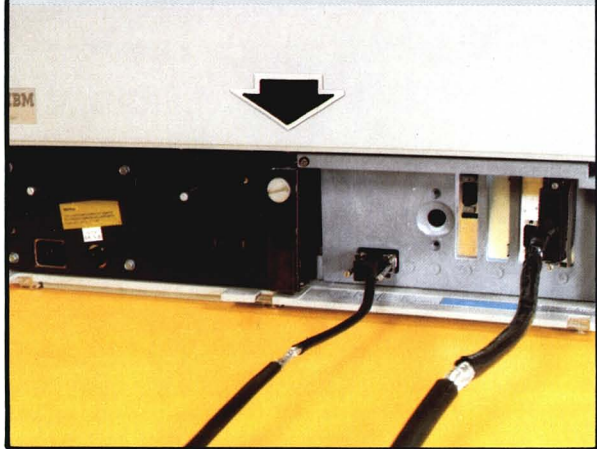


□

2 Open the clamp by turning the thumb screw in the direction shown.

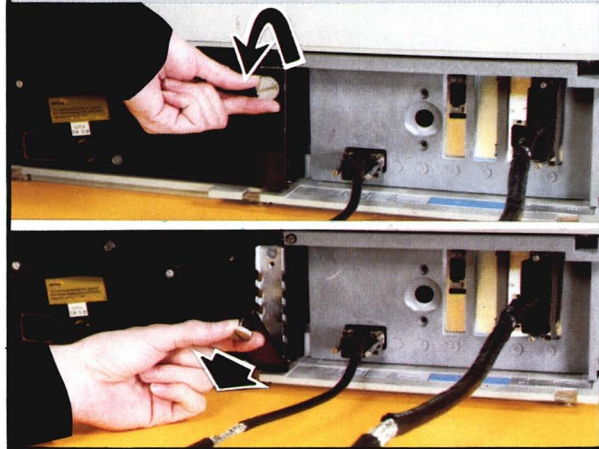

□

3 If you have a printer attached to your computer, place the metal covered part of the printer signal cable in the cable clamp. Hold it in place.

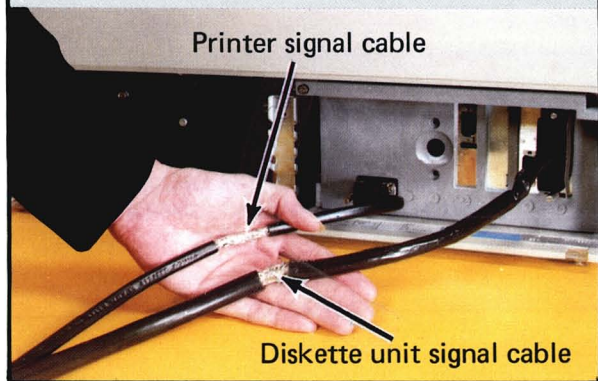

□

4 If you have two printers attached to your computer, repeat step 3 using the second printer signal cable.



5

If you have disk or diskette units attached to your computer, place the metal covered part of each signal cable in the cable clamp. Hold it in place.



6

Make sure all of the signal cables are in the clamp. Close the clamp and tighten the thumb screw.



7

Attach one end of the computer power cord to the back of the computer.



8

Replace the computer access cable cover. It will snap into place.



Checking out your System/23



9

Make sure all power switches are switched off (O).

Cut and remove the pink tags from your power cable(s).


You must have a grounded electrical outlet (see *Introducing System/23*). If you have any questions about the grounding of your outlet, call your electrician.

Plug in the power cable(s) for each of the units in your system.



10


Turn the brightness control knob clockwise until it stops.

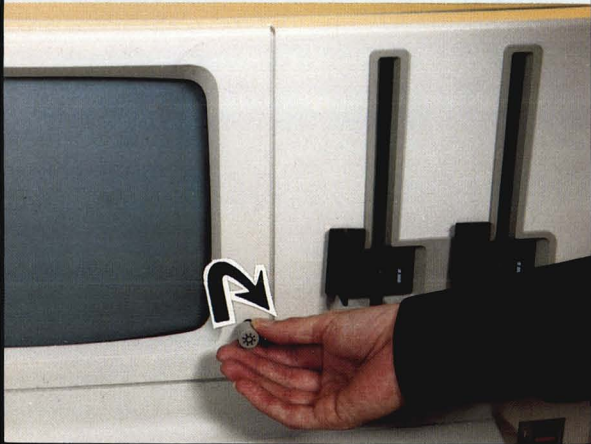

11

Switch on (I) the power to your units in the order shown below. You may not have all of these units as part of your system.

- 5247 Disk unit—wait 5 seconds for the red "Power" light to appear
- Printer(s)
- Diskette unit
- Computer(s)

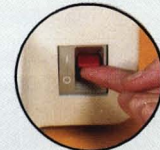

Last

 
IMPORTANT: You must switch on the power to your computer(s) last.



12

Numbers will appear at the top of your screen.


When the numbers on top of the screen disappear (about 30 seconds), you should hear a *beep*.



The lower left corner of your screen should look like this:

PROC START
READY INPUT

Adjust the brightness for your viewing comfort.

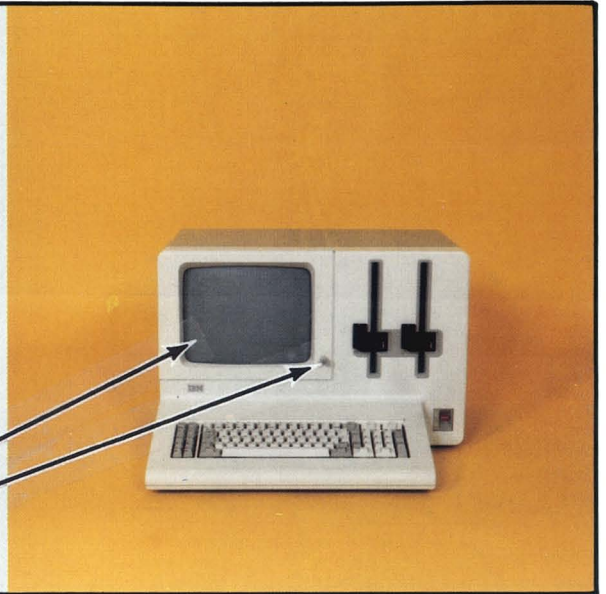

If you did not hear the *beep* and PROC START, READY INPUT is not on your screen, switch off (O) the power. Make sure all the circuit breakers are set to ON. Check your signal cable and power cable connections.

Make sure there is power available from the outlet(s) where you plugged in your power cables.

Repeat steps 11 and 12. If you still do not hear the *beep* and your screen is not correct, contact IBM for technical support.



13

If you have a 5247 Disk Unit attached to your computer, go to the next step. If you do not have a 5247 Disk Unit attached, go to step 26.




Checking out your System/23




14

Press the Scroll Up key (on the left side of the keyboard) once.

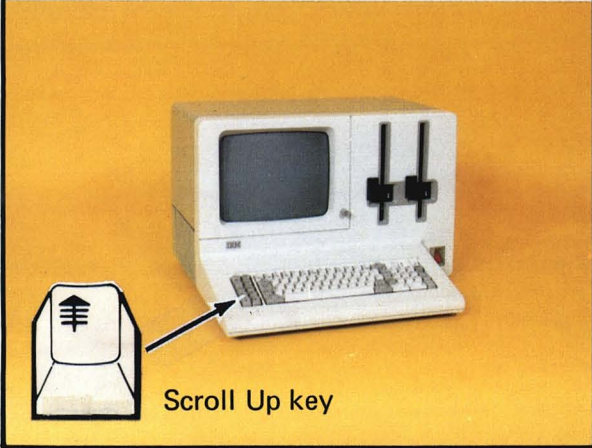

15

 
 
- Type the following on the keyboard: **proc setup1**
- Now check your spelling. Make sure that you typed a numeric 1 and not a lowercase L. If you made a mistake, press the Scroll Up key () once and repeat the above steps.
- Press the Enter key.



Your system is selecting and loading Machine Updates that it needs. **SELECT UPDATE IN PROGRESS** will show on your screen until the update is complete.

If **READY INPUT** is displayed on your screen, go to step 34. If **READY INPUT** is not on your screen after about 2 minutes,

- While you press and hold the **Cmd** key, press the **Error Reset** key. Release both keys.
- Press the **Error Reset** key again.
- Go back to step 15.



16

When the update is completed, READY INPUT will be displayed on the screen.



READY INPUT

17

If you have other computers attached to a 5247 Disk Unit, repeat steps 14 through 16 on each of the other computers.



18

You are now going to check out each of your printers.

19

- Type the following on the keyboard: **proc setup2**
- Now check your spelling. If you made a mistake, press the Scroll Up key (⌄) once and repeat the above steps.
- Press the Enter key.



Checking out your System/23



20 IBM S/23 should be displayed on the screen.



21 You will check out your printer now. Press and hold the Cmd key. At the same time, press the CopyD key. Release both keys. Your printer should print IBM S/23.



22 **5241, 5242 PRINTERS**

If the print head moves but IBM S/23 is not printed, or if the print head does not move, go to page 55 for error recovery. Then return to step 21.



5217 PRINTER


If the number in your printer display is 01 or 05, go to page 55 for error recovery. Then return to step 21.

23

Repeat steps 19 through 22 on each computer attached to a printer.

24

Switch off (O) the power to all of your computer(s) and your 5247 Disk Unit.

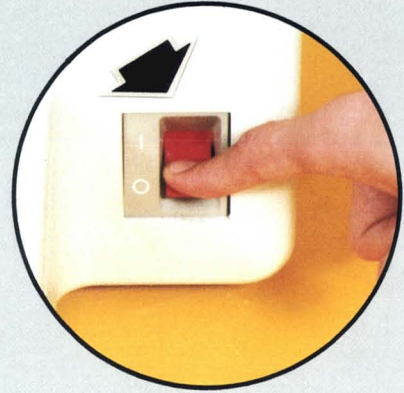

25

Switch on (I) the power to each of your computer(s) that have at least one diskette drive slot in the computer or in a 5246 Diskette Unit attached to the computer.



26

Locate the Customer Support Functions VOL002 diskette that was shipped with your system.



Customer Support Functions
(with VOL002 on the label)

Checking out your System/23




The Customer Support Functions diskette(s) shipped with your computer should be used *only* with the computer they were shipped with. So that you will know which Customer Support Functions diskette(s) to use with your computer, label your diskettes next to the workstation name using a felt-tip marker. You should label your diskette(s) even if you have only one computer.



27

Remove the VOL002 diskette from its protective envelope.

Do not touch the magnetic surface of the diskette that shows through the jacket.

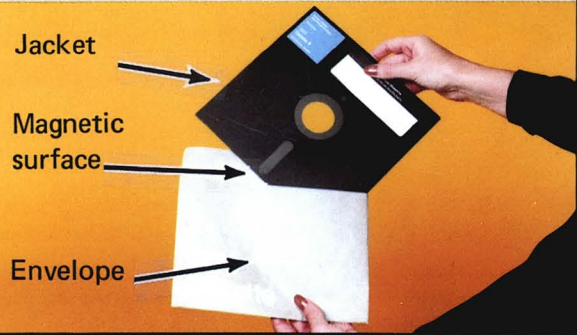


28

If the diskette drive handles on your computer are closed, open each drive by rotating the handle up.



29

Insert the VOL002 diskette into the diskette drive slot until it stops. The label must face the handle as shown.

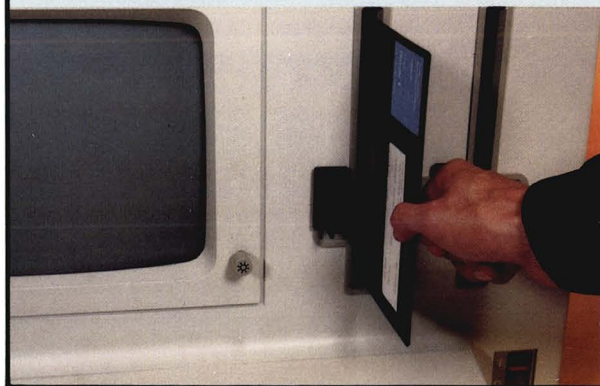




30

Close the handle.



31

Press the Scroll Up key (on the left side of the keyboard) once.

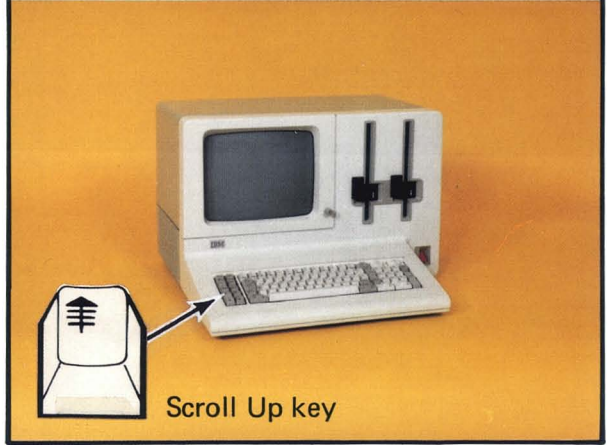

Scroll Up key



32

- Type the following on the keyboard: **proc setup1**
- Now check your spelling. Make sure that you typed a numeric 1 and not a lower-case L. If you made a mistake, press the Scroll Up key (⤴) once and repeat the above steps.
- Press the Enter key.



 
 
Your system is selecting and loading Machine Updates that it needs. **SELECT UPDATE IN PROGRESS** will show on your screen until the update is complete.

Checking out your System/23



If READY INPUT is displayed on your screen, go to step 34. If READY INPUT is not on your screen after about 2 minutes,

- While you press and hold the Cmd key, press the Error Reset key. Release both keys.
- Press the Error Reset key again.
- Go to step 24.




If READY INPUT still does not appear on your screen, contact IBM for technical support.



33

When the update is completed, READY INPUT will be displayed on the screen.

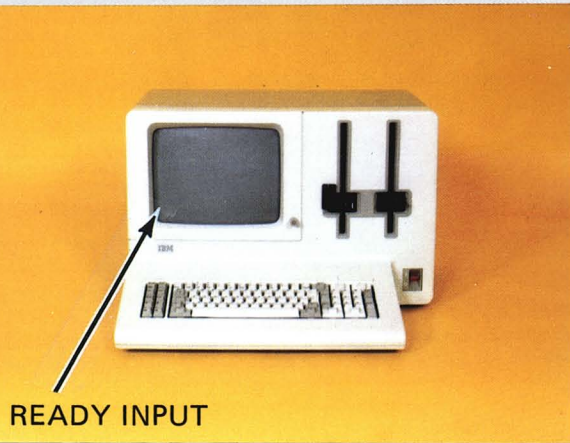

34

- Type the following on the keyboard: **proc setup2**
- Now check your spelling. If you made a mistake, press the Scroll Up key (⤴) once and repeat the above steps.
- Press the Enter key.



IBM S/23 should be displayed on the screen.

If your computer has more than one diskette drive slot, go to the next step. If your computer does not have other diskette drive slots, go to step 41.

35

Open the diskette drive slot handle.



36

Remove the VOL002 diskette.



37

Insert the VOL002 diskette into another diskette drive slot in either your computer or diskette unit. Close the handle.



Checking out your System/23




38

- Type the following on the keyboard: **proc setup2**
- Now check your spelling. If you made a mistake, press the Scroll Up key (⤴) once and repeat the above steps.
- Press the Enter key.



39

IBM S/23 should be displayed on the screen.

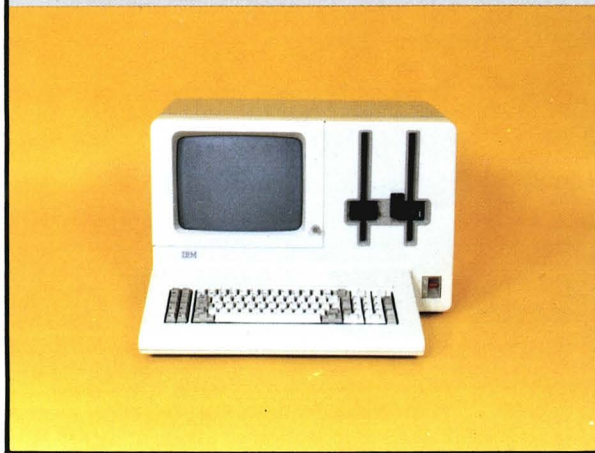

40

Repeat steps 35 through 39 for each of the diskette drive slots attached to your computer.




41

If you have computer(s) with diskette drive slot(s) that are attached to a printer, go to the next step.

If you do not have a printer, go to step 44.

42

If you have a printer, press and hold the Cmd key. At the same time, press the CopyD key. Release both keys. Your printer should print IBM S/23.

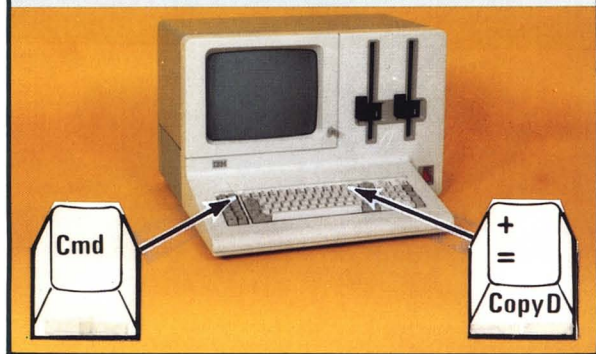

43

5241, 5242 PRINTERS


If the print head moves but IBM S/23 is not printed, or if the print head does not move, go to page 55 for error recovery. Then return to step 42.

5217 PRINTER

If the number in your printer display is 01 or 05, go to page 55 for error recovery. Then return to step 42.

44

Remove the VOL002 diskette from the diskette drive slot and return the diskette to its protective envelope.

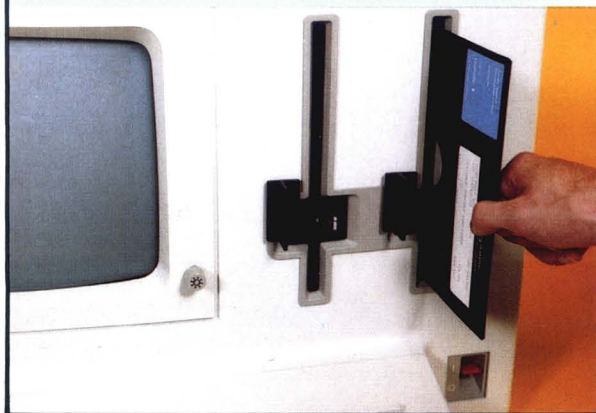

Checking out your System/23




45

If your system has other computers, repeat steps 26 through 44 on each computer, using the Customer Support Functions diskette shipped with each computer.



46

Switch off (O) the power to all of your units.

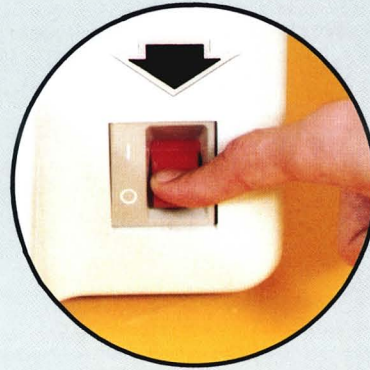


47

You have received two large service binders to be used by your service representative. The binders contain information needed to maintain your computer. Keep them in a safe place.


If you have a printer, diskette unit, or disk unit, you will have additional service information that was packed with each unit. Place this service information in the large service binders now.

Insert the setup and unpack instructions in yellow Binder 4. You may need to use them in the future.

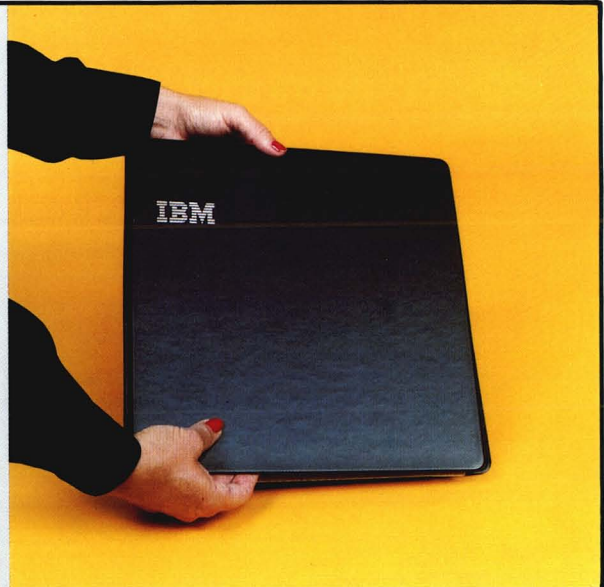

Your System/23 is set up and ready to use. You can become more familiar with the operation of your system by taking the *Learning to Use System/23* course located in Binder 1.

If you have an existing computer and have added a 5247 Disk unit, refer to "*Using Your 5247 Disk,*" in Binder 4.

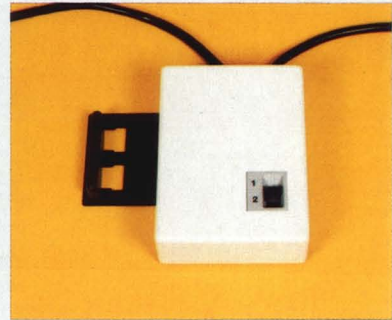


PRINTER SWITCH

If your system has a Printer Switch which allows one printer to be shared by 2 computers, use the following instructions to set up and check out the Printer Switch.



Setting up your Printer Switch

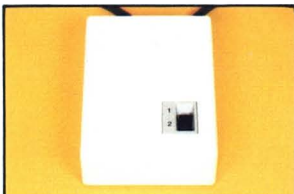

Setting up your Printer Switch


If you have this unit, go to the next page.

Setting up your Printer Switch


□

1 The Printer Switch allows two computers to share a printer. The Printer Switch for the 5241 and 5242 Printers has a bracket. The Printer Switch for the 5217 Printer does not have a bracket.

Bracket

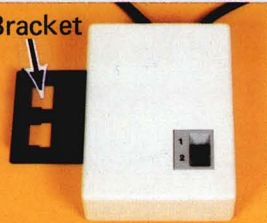


Printer Switch for
5241 or 5242 Printer

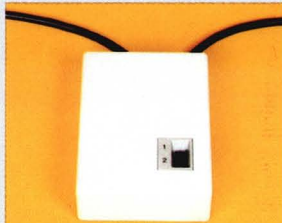

Printer Switch for
5217 Printer

□


2 Switch off (O) the power to all of your units.

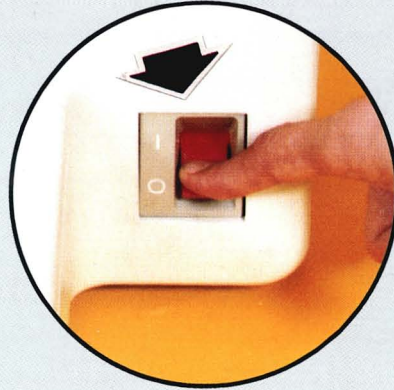

□


3 **5241, 5242 PRINTERS ONLY**

Remove the paper and the forms tractor from your printer. The rear legs of the forms tractor should be removed first.

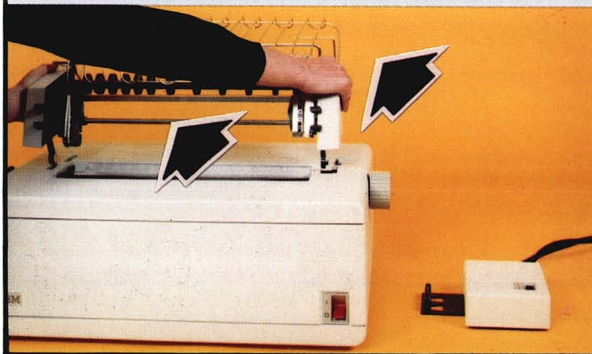

□

4 Turn the Printer Switch over.

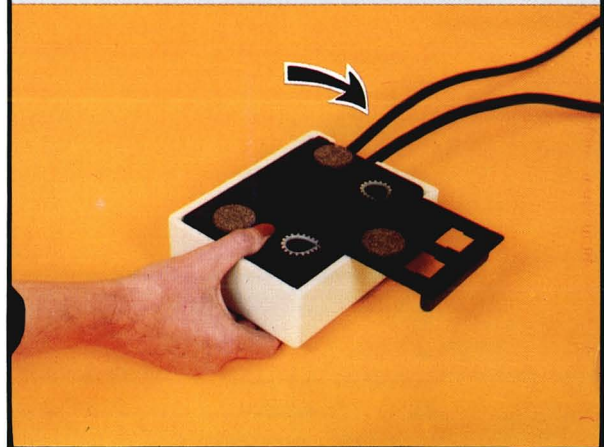




5 Open the access cover.




6 Remove the clip that is attached to one of the cables on the Printer Switch.

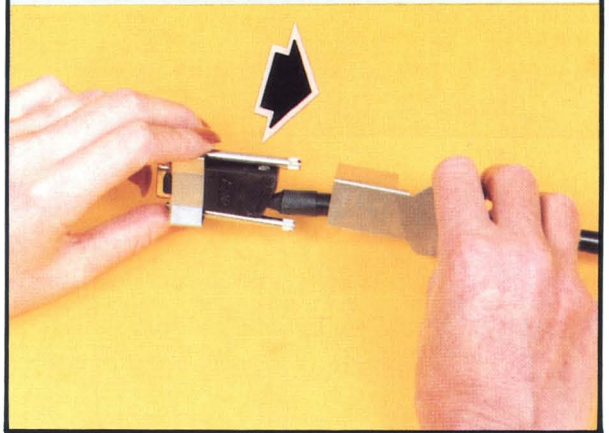

7 Remove the access cover from the back of each of your computers.



8 Open the signal cable clamp and remove the signal cable of the printer that is to be shared by two computers. Close the clamp.

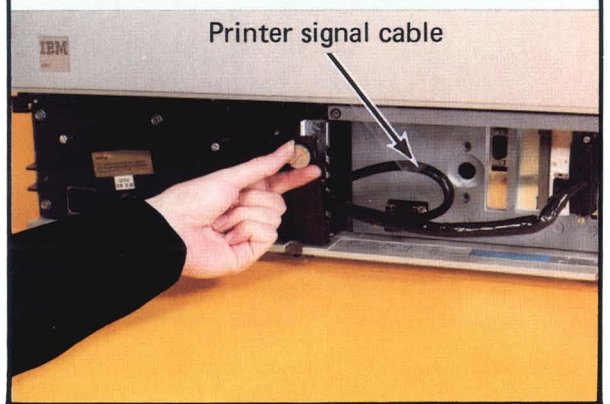


Setting up your Printer Switch




9

Remove the printer signal cable from the back of the computer.

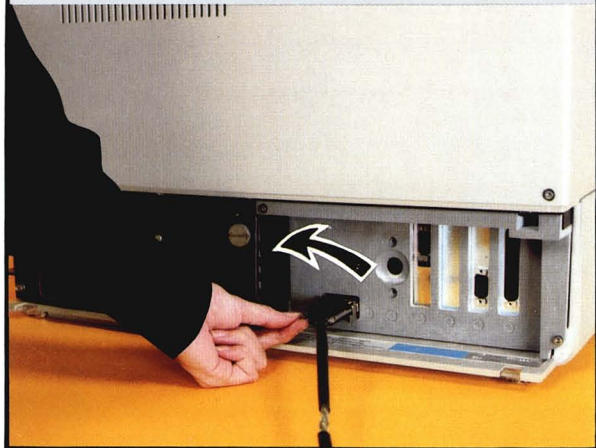

10

Attach the clip to the printer signal cable. The open side of the clip must be on the same side as the widest part of the cable connector.

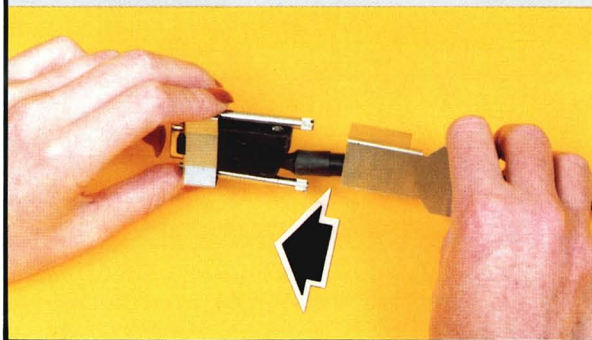


11

With the clip in place as shown, you're ready to attach the printer signal cable to the Printer Switch.



12


Connect the printer signal cable to the Printer Switch.

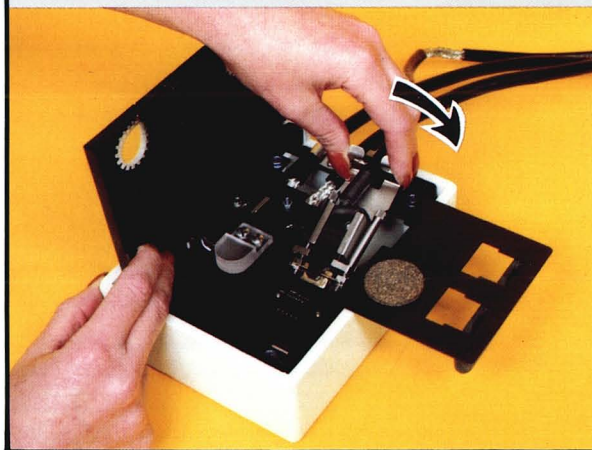




13

Press down until the clip snaps into place.

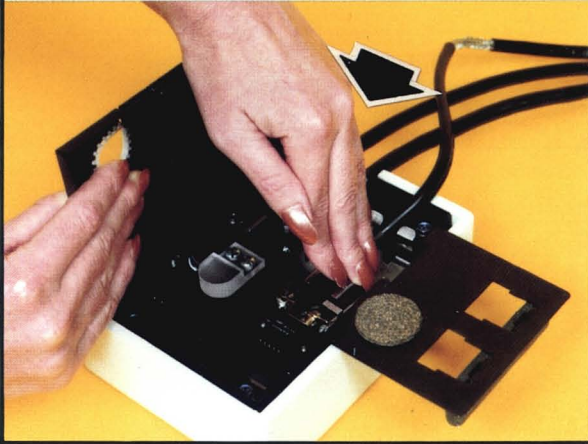


14

Place the cable under the first clip.

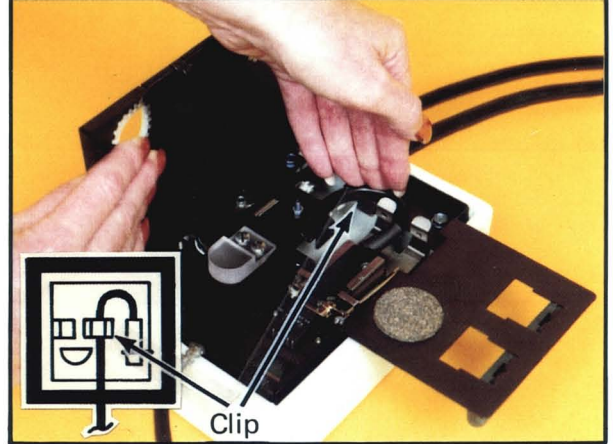


15

Place the cable around the block and press the cable under the second clip. Make sure the metal covering is under the clip.

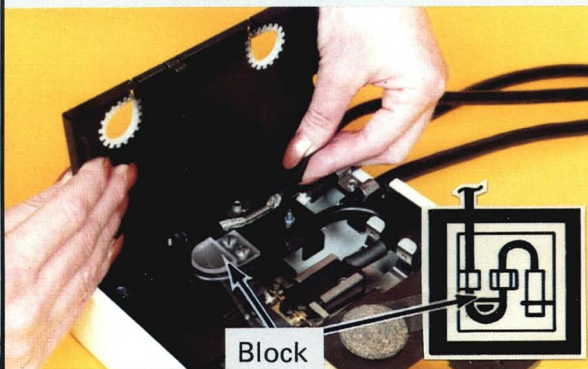

16

Close the access cover.

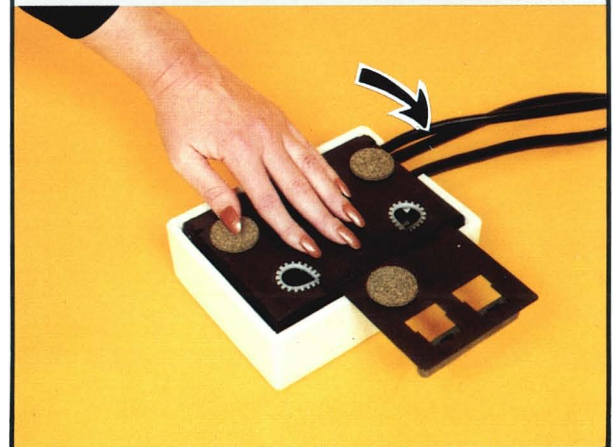


Setting up your Printer Switch

□

17 5241, 5242 PRINTERS ONLY


Raise the right side of the printer slightly and attach the Printer Switch to the bottom of the printer.

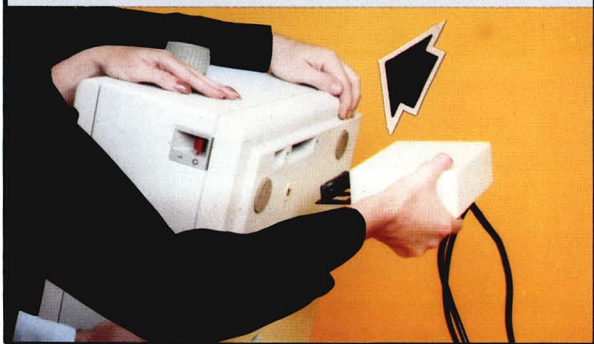

□

18 5241, 5242 PRINTERS ONLY

Lower the printer to its operating position.

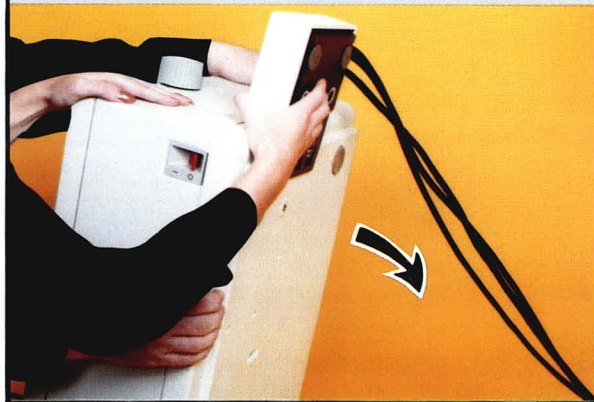

□

19 5241, 5242 PRINTERS ONLY


Replace the forms tractor. You may refer to steps 12 through 15 in the "Setting up your 5241 or 5242 Printer" section.



□

20

Connect one cable to each 5322 Computer in your system. The numbers 1 and 2 are marked where the cables exit the Printer Switch.

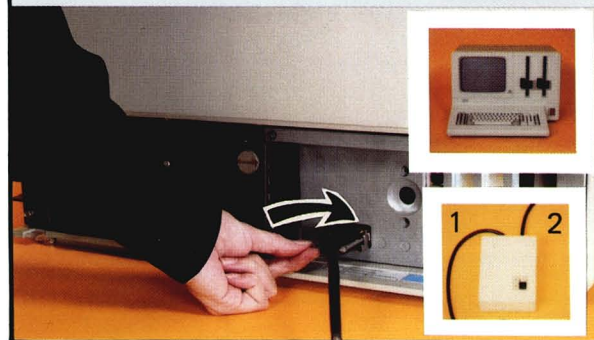


TO CHECK OUT SWITCH POSITION 1

21

Make sure the power to each of the units in your system is off (O).

Note: The Printer power must be switched off (O) before you select positions.

- Set Printer Switch to position 1.
- Switch on (I) all your units (computer last).
- When Proc Start appears on your screen, press and hold the Cmd key and the CopyD key at the same time. The information on your screen will now be printed.
- Switch off (O) all your units.

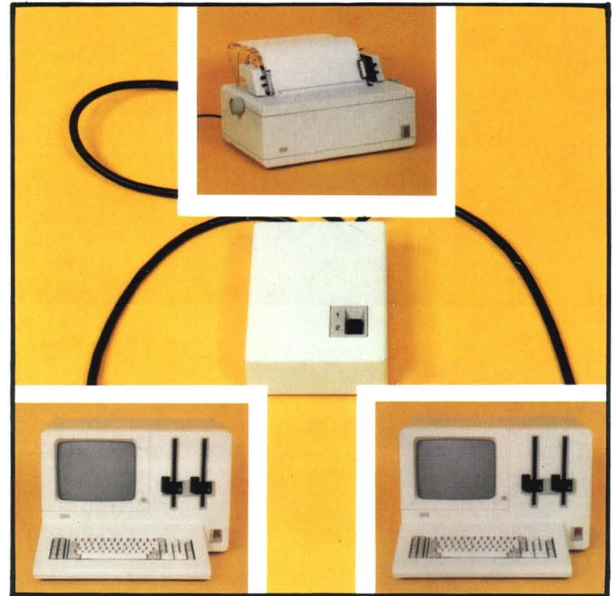

TO CHECK OUT SWITCH POSITION 2

22

Make sure the power to each of the units in your system is off (O).

Note: The Printer power must be switched off (O) before you select positions.

- Set Printer Switch to position 2.
- Switch on (I) all your units (computer last).
- When Proc Start appears on your screen, press and hold the Cmd key and the CopyD key at the same time. The information on your screen will now be printed.
- Switch off (O) all your units.

Error recovery



1

5241, 5242 PRINTERS ONLY

If the print head moves, but the IBM S/23 is not printed, move the copy control dial toward zero. Repeat steps 21 or 42.



Copy control dial



2

5241, 5242 PRINTERS ONLY

If the print head does not move, repeat steps 21 or 42.

If the print head still does not move, a highlighted error code 6113 should appear at the bottom of your screen.

- Press the Error Reset key.
- Switch your printer off (O).
- Switch your printer on (I).
- Press the Error Reset key.
- Repeat steps 21 or 42.

If your printer still does not print, call IBM for technical support.



3

5217 PRINTER ONLY

One of the following may have occurred.

- Out of paper
- Paper stuck together
- Sheet feed or drawer not installed correctly
- Paper jam
- Paper insertion gate not in auto feed position



4

5217 PRINTER ONLY

Correct the error. Then do the following:

- Press the Error Reset key.
- Switch your printer off (O).
- Switch your printer on (I).
- Press the Error Reset key.
- Repeat steps 21 or 42.

If your printer still does not print, call IBM for technical support.

READER'S COMMENT FORM

SA34-0107-3

System/23
Setup Instructions (with 5322 Computer)

Your comments assist us in improving the usefulness of our publications; they are an important part of the input used in preparing updates to the publications. IBM may use and distribute any of the information you supply in any way it believes appropriate without incurring any obligation whatever. You may, of course, continue to use the information you supply.

Please do not use this form for technical questions about the system or for requests for additional publications; this only delays the response. Instead, direct your inquiries or requests to your IBM representative or the IBM branch office serving your locality.

Corrections or clarifications needed:

Page	Comment
------	---------

Cut or Fold Along Line

Please indicate your name and address in the space below if you wish a reply.

Thank you for your cooperation. No postage stamp necessary if mailed in the U.S.A.
(Elsewhere, an IBM office or representative will be happy to forward your comments.)

Reader's Comment Form

Cut Along Line

Fold and tape


Please Do Not Staple

Fold and tape



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO. 40 ARMONK, NEW YORK
POSTAGE WILL BE PAID BY ADDRESSEE

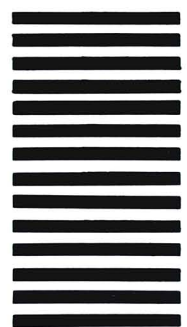

IBM Corporation
Information Development, Dept 27T
P.O. Box 1328
Boca Raton, Florida 33432

Fold and tape

Please Do Not Staple

Fold and tape







International Business Machines Corporation

SA34-0107-3
Printed in U.S.A.