

# PCL11-A,B

PCL11 EXERCISER VO2C  
CZPLAC0

AH-E260C-MC

COPYRIGHT 78-79

FICHE 1 OF 1

SEP 1979

**digital**

MADE IN USA

The main body of the document is a grid of 150 small, illegible tables or charts, arranged in 10 columns and 15 rows. Each cell in the grid contains a small, dense block of text or data, which is too small to be read. The grid is the primary content of the document, following the header information.

I D E N T I F I C A T I O N  
-----

PROGRAM CODE: AC-E259C-MC  
PROGRAM NAME: CZPLACO PCL11 EXERCISER V02C  
DATE CREATED: 21-SEP-76  
UPDATED (V02): 13-MAR-78  
MODIFIED (V02A): 11-SEP-78 BY D.WIENS  
(V02C) 07-JUN-79 BY D.WIENS  
MAINTAINER: SPECIAL SYSTEMS, KANATA  
AUTHOR: DAVID G. WIENS

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS DOCUMENT.

DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR THE USE OF RELIABILITY OF ITS SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL.

COPYRIGHT (C) 1978, 1979 BY DIGITAL EQUIPMENT OF CANADA, LIMITED.

## PARALLEL COMMUNICATIONS LINK (PCL11) EXERCISER

	TABLE OF CONTENTS	PAGE
	-----	----
1	GENERAL	1-1
1.1	GENERAL DESCRIPTION	1-1
1.2	REVISION HISTORY	1-2
2	EXERCISER TABLES	2-1
2.1	STATUS TABLE	2-1
2.2	SUMMARY TABLE	2-2
2.3	ERRORS TABLES	2-3
2.4	CLEARING OF THE TABLES	2-4
3	EXERCISER COMMANDS	3-1
3.1	CONTROL CHARACTERS	3-1
3.1.1	CONTROL-C	3-1
3.1.2	CONTROL-O	3-1
3.1.3	CONTROL-U	3-1
3.1.4	CONTROL-S	3-2
3.1.5	CONTROL-Q	3-2
3.1.6	CARRIAGE RETURN	3-2
3.1.7	LINE FEED	3-2
3.1.8	RUBOUT	3-2
3.2	COMMANDS	3-3
3.2.1	SILO	3-3
3.2.2	MASTER	3-4
3.2.3	SECONDARY	3-4
3.2.4	RIB	3-5
3.2.5	RANGE	3-5
3.2.6	ADD	3-6
3.2.7	DELETE	3-6
3.2.8	CLEAR	3-7
3.2.9	INITIALIZE	3-7
3.2.10	STATUS	3-8
3.2.11	SUMMARY	3-8
3.2.12	ERRORS	3-8
3.2.13	ASSIGN	3-9
3.2.14	GO	3-10
3.2.15	CONTINUE	3-10
3.2.16	**SYNTAX ERROR**	3-11
4	GETTING THE EXERCISER STARTED	4-1
4.1	PREPARATION	4-1
4.2	LOADING	4-1
4.3	DEVICE ADDRESSES	4-1
4.4	STARTING ADDRESSES	4-2
4.5	OPERATING PROCEDURES	4-2
4.6	ERRORS	4-3

TABLE OF CONTENTS (CONTD)		PAGE
-----		----
5	COMMAND INPUT MODE DESCRIPTION	5-1
5.1	SHORTENED COMMANDS	5-1
5.2	RUBOUT FEATURES	5-1
5.3	ENTERING COMMAND MODE	5-1
5.4	UPPER OR LOWER CASE	5-2
6	EXERCISE MODE DESCRIPTION	6-1
6.1	TRANSMIT EVENT	6-1
6.2	RECEIVE EVENT	6-1
6.3	DATA GENERATION EVENT	6-1
6.4	ADDRESS QUEUE EVENT	6-2
6.5	ERRORS UPDATE EVENT	6-2
6.6	SPECIAL EVENTS	6-2
APPENDIX A		
	EXERCISER OVERALL FLOW	A-1
APPENDIX B		
	EXERCISER COMMANDS	B-1
APPENDIX C		
	ERROR DESCRIPTIONS	C-1
APPENDIX D		
	STATISTICAL INFORMATION	D-1
LISTING...		

PARALLEL COMMUNICATIONS LINK  
EXERCISER PROGRAM

-----

GENERAL

1.1 GENERAL DESCRIPTION

-----

THE PDP-11 PARALLEL COMMUNICATIONS LINK (PCL11) EXERCISER IS WRITTEN TO EXERCISE A FULL SET OR PARTIAL SET OF PCL11 UNITS, EACH ON ITS OWN PDP-11. THE MAXIMUM NUMBER OF UNITS (FULL SET) WHICH MAY BE EXERCISED IS 31, ALTHOUGH THE NORMAL MAXIMUM CONFIGURATION INCLUDES ONLY 16 PCL11'S. THE MINIMUM NUMBER OF UNITS IS 1.

THE EXERCISER IS OPERATED BY MEANS OF THE OPERATOR ENTERING COMMANDS AT EACH PDP-11 CONSOLE TERMINAL WHICH WILL DESCRIBE TO THE EXERCISER THE NUMBER OF TARGET RECEIVERS TO BE COMMUNICATED WITH AND THEIR T.D.M. BUS ADDRESSES. STATUS AND ERROR REPORTS ARE ACHIEVED ALSO IN RESPONSE TO OPERATOR COMMANDS.

EACH PCL11 TRANSMITTER IN THE 'CHAIN' OF PDP-11'S MUST BE TOLD HOW MANY OF THE RECEIVERS IN THE 'CHAIN' IT SHOULD SEND DATA TO. THEN, UPON THE OPERATOR'S COMMAND, ALL PCL11 TRANSMITTERS INVOLVED WILL BEGIN SENDING RANDOM DATA PATTERNS TO EACH RECEIVER THEY HAVE BEEN TOLD TO COMMUNICATE WITH.

RECEIVERS IN THE CHAIN ARE ALWAYS RECEPTIVE TO DATA FROM ANY ONE TRANSMITTER AT A TIME AND WILL CHECK THAT THE DATA RECEIVED IS CORRECT. THE RECEIVER HANDLER PORTION OF THE EXERCISER WILL ALSO GENERATE A TABLE OF ERRORS THAT MAY BE EXAMINED UPON ISSUANCE OF THE 'ERRORS' COMMAND.

TRANSMITTERS IN THE CHAIN ARE ACTIVATED OR DE-ACTIVATED BY THE OPERATOR AND ARE DE-ACTIVATED BY A 'MASTER-DOWN' ERROR OR A UNIBUS TIMEOUT (TRAP TO 4). THE TRANSMITTER HANDLER PORTION OF THE EXERCISER WILL LOOK AFTER THE TRANSMISSION OF RANDOM DATA TO EACH RECEIVER ON ITS 'LIST' AND GENERATE A STATUS TABLE AND AN ERROR TABLE. THE STATUS TABLE WILL INFORM THE OPERATOR OF THE SUCCESS OR FAILURE OF THAT TRANSMITTER TO COMMUNICATE WITH EACH OF THE RECEIVERS ON ITS LIST. THE ERROR TABLE WILL SHOW THE OPERATOR ANY HARDWARE ERRORS ENCOUNTERED DURING COMMUNICATION.

A SPECIAL 'SUMMARY' COMMAND WILL GIVE A CONDENSED ERROR TABLE INDICATING ONLY THE ERROR NUMBER, THE ADDRESS IN THE LISTING OF THE ERROR, AND THE TOTAL NUMBER OF OCCURRENCES OF THAT ERROR WITHOUT REGARD TO WHICH RECEIVER AND TRANSMITTER WERE CONNECTED.



## 1.2 REVISION HISTORY

### 1.2.1 VERSION V02

- 1.2.1.1 STARTING AND RESTARTING (SEE SEC. 4.4)  
V-02 OF THE EXERCISER STARTS AT LOCATION 200. WHEN RESTARTED AT LOCATION 204, THE STATUS AND ERRORS ARE PRESERVED.
- 1.2.1.2 UPPER/LOWER CASE INPUT (SEE SEC. 5.4)  
EITHER UPPER OR LOWER CASE ALPHA CHARACTERS ARE ACCEPTED BY V-2 OF THE EXERCISER. WHICHEVER IS TYPED IN, THE UPPER CASE VERSION IS ECHOED.
- 1.2.1.3 ERRORS COMMAND (SEE SEC. 3.2.12)  
THE 'ERRORS' COMMAND HAS BEEN ADDED TO THE EXERCISER TO GIVE MORE DETAIL ABOUT THE ERROR CONDITIONS.
- 1.2.1.4 RIB COMMAND (SEE SEC. 3.2.4)  
THE 'RIB' COMMAND HAS BEEN ADDED TO THE EXERCISER TO ALLOW RUNNING IN A RE-TRY - IF - BUSY MODE, WHICH BRINGS THE ATTEMPTS AND SUCCESSES COUNTS MORE IN LINE.
- 1.2.1.5 ASSIGN COMMAND (SEE SEC. 3.2.13)  
THE 'ASSIGN' COMMAND WAS ADDED TO ALLOW CONSOLE CHANGING OF THE PCL11 UNIBUS ADDRESSES AND VECTORS WITHIN THE EXERCISER.
- 1.2.1.6 GO COMMAND (SEE SEC. 3.2.14)  
THE 'GO' COMMAND HAS BEEN ALTERED SO THAT THE RECEIVER ADDRESS QUEUE, STATUS OF ATTEMPTS AND SUCCESSES, AND THE ERROR TABLE ARE ALL CLEARED.
- 1.2.1.7 ADDRESS QUEUE EVENT (SEE SEC. 6.4)  
THIS EVENT WAS CHANGED SO THAT IF THE EXERCISER WAS TOLD TO 'GO' OR 'CONTINUE', AND NOTHING WAS LOADED INTO THE 'RECEIVER ADDRESS QUEUE', THE EXERCISER WOULD NOT GO.
- 1.2.1.8 LOADING OF THE SILO (SEE SEC. 3.2.1)  
IN THE PREVIOUS EXERCISER, THE SILO COULD BE LOADED IN SUCH A WAY AS TO CAUSE 'HARD TO TRACE' HARDWARE ERROR INDICATIONS. NOW A 'PAD' VALUE HAS BEEN INSERTED BETWEEN SIMILAR ENTRIES SO THAT THIS CANNOT HAPPEN.
- 1.2.1.9 NEW CONTROL CHARACTERS (SEE SEC. 3.1)  
V-02 OF THE EXERCISER HAS THROWN OUT THE 'ESCAPE/ALTMODE' CHARACTER IN FAVOUR OF 'CNTRL-C'. ALSO, CNTRL-S AND CNTRL-Q WERE ADDED TO CONTROL THE PRINTOUT ON VIDEO TERMINALS.
- 1.2.1.10 CARRIAGE RETURN (SEE SEC. 3.1.6)  
THIS VERSION OF THE EXERCISER WILL NOT GO INTO 'LIMBO' IF A CARRIAGE RETURN IS ENTERED BY ITSELF. IT SIMPLY ECHOES ANOTHER \$.
- 1.2.1.11 RUBOUT (SEE SEC. 3.1.8)  
THE EXERCISER WILL NOW INDICATE WHEN ALL HAS BEEN RUBBED OUT BY RETURNING A <CR-LF> AND '\$' WHEN THE COMMAND INPUT BUFFER IS EMPTY.

1-3

1.2.1.12 STATUS TABLE (SEE SEC. 2.1)  
 THE "ATTEMPTS" AND "SUCCESSSES" COUNTS IN THE STATUS TABLE HAVE BEEN BEEFED UP TO DOUBLE PRECISION DECIMAL NUMBERS. ALSO, AN INDICATION HAS BEEN ADDED TO THE TABLE OF WHETHER THE UNIT IS MASTER OR SECONDARY, AND WHETHER "RIB" IS SET OR CLEAR. ALSO, THE ELAPSED TIME OF THE RUN SO-FAR IS PRINTED PROVIDING THAT THE PDP-11 HAS A LINE CLOCK.

1.2.1.13 SUMMARY TABLE (SEE SEC. 2.2)  
 THE "NO. OF OCCURRENCES" COUNT IN THE SUMMARY TABLE HAS BEEN GIVEN A CEILING OF 65,528 (DECIMAL) AND WILL PRINT "MXCN" AFTER THAT. THE COUNT IS PRINTED IN DECIMAL.

## 1.2.2 VERSION V02A

THIS REVISION WAS BROUGHT ABOUT BY THE CHANGE OF THE PROMPT PRINTED WHILE IN COMMAND MODE. THE PROMPT WAS SIMPLY '\$'. IT HAS BEEN CHANGED TO 'PCL>' TO REDUCE CONFUSION ON SYSTEMS WHERE PDP-11'S ARE ATTACHED TO VAX/1170'S. (IT IS ONLY THE DIAGNOSTIC SUPERVISOR ON THE 'VAX' THAT IS ALLOWED TO USE THE PROMPT '\$').

## 1.2.3 VERSION V02C

1.2.3.1 ALIGN THE VERSION LETTER WITH THE ONE IN THE PRODUCT CODE, MAKING THIS V02C RATHER THAN V02B.

1.2.3.2 CHANGE THE HANDLING OF RECEIVER 'BYTE COUNT OVERFLOW' INTERRUPT SO THAT A SUCCESSFUL TRANSFER INTERRUPT ISN'T LOST. THIS PREVENTS THE EXERCISER FROM HANGING UP A RECEIVER.

1.2.3.3 MODIFY THE COUNT IN THE DATA GENERATION TO ACCOUNT FOR THE FIRST WORD IN THE RECEIVER NOT BEING 'NPR'D'. THE COUNT (MAX WITHOUT EXPECTING A TRUNCATE) IS NOW #602 OCTAL.

1.2.3.4 MODIFY THE MESSAGE PRINTED WHEN THERE ARE NO ERRORS TO REMOVE THE WORD 'YET'. MESSAGE NOW READS:  
 'NO ERRORS TO REPORT'

1.2.3.5 MODIFY THE MESSAGE PRINTED IF THE EXERCISER IS STARTED BEFORE BEING GIVEN ANY RECEIVER ADDRESSES. MESSAGE NOW READS:  
 'NO RECEIVERS SELECTED'  
 ALSO, DO A <CR>, <LF> BEFORE IT SO THAT THE 'GO' DOESN'T GET OVERWRITTEN.

1.2.3.6 REMOVE THE CODE WHICH USED TO COMPUTE THE RESTART ADDRESS BASED ON WHETHER THE DEVICE ADDRESSES WERE VALID. RESTART ADDRESS IS NOW ALWAYS '204'.

## EXERCISER TABLES

THE PCL11 EXERCISER MAINTAINS THREE TABLES: A 'STATUS' TABLE AN 'ERRORS' TABLE, AND A 'SUMMARY' TABLE.

## 2.1 STATUS TABLE

THE STATUS TABLE IS DESIGNED TO SHOW THE OPERATOR THE NUMBER OF SUCCESSFUL TRANSMISSIONS TO EACH RECEIVER RELATIVE TO THE NUMBER OF ATTEMPTS TO TRANSFER DATA TO EACH RECEIVER. IF THE TRANSMITTER HAS BEEN TOLD TO 'RE-TRY - IF - BUSY', THE NUMBER OF SUCCESSFUL TRANSFERS WILL BE VERY MUCH CLOSER TO THE NUMBER OF ATTEMPTS THAN WOULD BE THE CASE IF 'RE-TRY - IF - BUSY' WERE NOT THE ORDER. HOWEVER, THE TOTAL NUMBER OF ATTEMPTS WOULD BE GREATER WITH 'RIB' CLEAR. THE INFORMATION GIVEN IN THE TABLE INCLUDES:

RUN STATE - STATE OF MASTER, SECONDARY, AND 'RIB'  
 RECEIVER ADDRESS - THAT THIS TRANSMITTER HAS BEEN INSTRUCTED TO COMMUNICATE WITH.  
 CONNECTION ATTEMPTS - NUMBER OF TIMES THIS XMTR TRIED CONNECTING TO THE RECEIVER OF THE ABOVE ADDRESS.  
 SUCCESSFUL CONNECTIONS- NUMBER OF TIMES THAT THE ABOVE ATTEMPTS WERE SUCCESSFUL.

RIB IS -SET- (OR CLEAR)  
 THIS UNIT IS -MASTER- (OR SECONDARY)  
 ELAPSED TIME (HRS,MIN,SEC,TK)...0:0:4:35  
 RCVR ADDRESS CONNECTION ATTEMPTS SUCCESSFUL CONNECTIONS

1	X	Y
2	X	Y
3	X	Y
.	.	.
37	X	Y

THE ENTRIES UNDER 'RCVR ADDRESS' INCLUDE ONLY THOSE ADDRESSES ENTERED BY THE OPERATOR USING THE 'RANGE' OR 'ADD' COMMANDS.

THE ENTRIES UNDER 'CONNECTION ATTEMPTS' AND 'SUCCESSFUL CONNECTIONS' ARE DOUBLE PRECISION DECIMAL NUMBERS. THEY ARE CAPABLE OF INCREASING TO A VALUE OF 655,359,999. IF THERE ARE A LARGER NUMBER OF ATTEMPTS OR SUCCESSES FOR A PARTICULAR RECEIVER THAN THAT AMOUNT, THE ENTRY IN THE TABLE WILL APPEAR AS : "\*\*\*\*\*".

SINCE ANY DATA RECEIVED BY A PCL11 RECEIVER MUST BE CHECKED, THE DATA PATTERN, WHICH IS RANDOM, MUST BE RECREATED BY THE RECEIVING EXERCISER BASED ON THE FIRST WORD RECEIVED. THIS MUST THEN BE COMPARED WORD-FOR-WORD WITH THE RECEIVED DATA. IT IS READILY APPARENT THAT THIS TAKES TIME AND WILL MAKE THAT PARTICULAR RECEIVER UNAVAILABLE DURING THAT TIME. ON A LARGE SYSTEM, WITH MANY PCL11'S IT MIGHT BE QUITE A WHILE BETWEEN SUCCESSFUL CONNECTIONS OF A GIVEN TRANSMITTER TO THE SAME RECEIVER, SINCE ALL TRANSMITTERS MAY VERY WELL BE TRYING FOR THE SAME RECEIVERS AT THE SAME TIME. IT IS FOR THIS REASON, THEN, THAT IT NEED NOT BE ALARMING THAT



THERE IS A DIFFERENCE BETWEEN THE NUMBER OF SUCCESSES AND THE NUMBER  
OF ATTEMPTS.

FJ 0008

THE PRINTING OF THE STATUS TABLE MUST BE INITIATED BY THE OPERATOR ON EACH PDP-11 INVOLVED DURING THE COURSE OF AN EXERCISE RUN. THE STATUS TABLE OUTPUT IS NOT CAUSED BY ANY OTHER MEANS THAN THE OPERATOR ENTERING COMMAND MODE AND TYPING "STATUS". ALSO IT MUST BE NOTED THAT ALL TRANSMITTER ACTIVITY IS SUSPENDED ON THE UNIT WHILE THE STATUS IS BEING PRINTED OUT.

## 2.2 SUMMARY TABLE

THE SUMMARY TABLE IS DESIGNED TO SHOW THE OPERATOR A SUMMARY OF ERRORS WHICH HAVE OCCURRED IN EITHER THE RECEIVER OR TRANSMITTER HARDWARE ON EACH PDP-11.

INCLUDED IN THIS TABLE ARE:

- ERROR NUMBER - FOR REFERENCE LATER IN THIS DOCUMENT TO INDICATE THE TYPE OF FAILURE.
- ERROR ADDRESS - FOR REFERENCE IN THE PCL11 EXERCISER LISTING.
- NO. OF OCCURRENCES - TO INDICATE HOW OFTEN THIS ERROR HAS OCCURRED DURING RUN TIME.

THE SUMMARY TABLE IS PRINTED IN THE FORM:

ERROR NUMBER	ERROR ADDRESS	NO. OF OCCURRENCES
1	XXX	YYYY
2	XXX	YYYY
3	XXX	YYYY
.	.	.
30	XXX	YYYY

THE ENTRIES UNDER "ERROR NUMBER" INCLUDE ONLY THOSE ERRORS WHICH HAVE A "NO. OF OCCURRENCES" GREATER THAN 0.

THE ENTRIES UNDER "ERROR ADDRESS" REPRESENT THE OCTAL MEMORY ADDRESS OF THE OCCURRENCE OF THE ERROR WHICH OCCURRED. THE OPERATOR MAY FIND THIS USEFUL FOR LOCATING, IN THE LISTING, THE PORTION OF THE PROGRAM WHERE THE ERROR OCCURRED.

THE ENTRIES UNDER "NO. OF OCCURRENCES" IS THE TOTAL (OR SUMMARY VALUE) OF ALL THE ERRORS OF THAT ERROR NUMBER WHICH OCCURRED AT THIS TERMINAL REGARDLESS OF WHAT TRANSMITTER WAS CONNECTED TO WHAT RECEIVER.

THE PRINTING OF THE SUMMARY TABLE MUST BE INITIATED BY THE OPERATOR ON EACH PDP-11 INVOLVED DURING THE COURSE OF AN EXERCISE RUN. THE SUMMARY TABLE OUTPUT IS NOT CAUSED BY ANY OTHER MEANS THAN THE OPERATOR ENTERING COMMAND MODE AND TYPING "SUMMARY". ALSO IT MUST BE NOTED THAT ALL TRANSMITTER ACTIVITY IS SUSPENDED ON THE UNIT WHILE THE SUMMARY TABLE IS BEING PRINTED OUT.

## 2.3 ERROR TABLES

THE ERROR TABLES ARE DESIGNED TO SHOW THE OPERATOR THE ERRORS WHICH OCCURRED DURING AN EXERCISE RUN IN ENOUGH DETAIL SO THAT HE CAN DETERMINE AS CLOSELY AS POSSIBLE WHICH TRANSMITTER AND/OR WHICH RECEIVER WERE CONNECTED AT THE TIME OF THE ERROR. THERE ARE 15 OCTAL TRANSMITTER TYPE ERRORS AND 13 OCTAL RECEIVER TYPE ERRORS. FOR EACH OF THE TRANSMITTER ERRORS, ANY ONE OF 31 POSSIBLE RECEIVERS MAY HAVE BEEN CONNECTED TO THAT TRANSMITTER AT THE TIME OF THE ERROR. THE ONE THAT ACTUALLY WAS CONNECTED IS LISTED IN THIS ERROR TABLE ALONGSIDE THE ERROR NUMBER AND THE COUNT OF THAT OCCURRENCE. FOR EACH OF THE RECEIVER-TYPE ERRORS, ANY ONE OF 31 TRANSMITTERS MAY HAVE BEEN TALKING TO THIS RECEIVER AT THE TIME OF THE ERROR. AGAIN, THE ACTUAL ONE IS LISTED IN THE RECEIVER ERRORS TABLE.

THE ENTRIES IN THESE TABLES THEN, INCLUDE:

- ERROR NUMBER - FOR REFERENCE LATER IN THIS DOCUMENT TO INDICATE THE TYPE OF FAILURE.
- CONNECTED XMTR (RCVR) - TO INDICATE THE ACTUAL ERRONEOUS LINK.
- ERROR COUNT - TO SHOW THE NUMBER OF OCCURRENCES OF THIS ERROR WITH THIS CONNECTION.

THE TABLES ARE ALWAYS PRINTED TOGETHER AND ARE PRINTED IN THE FOLLOWING FORMAT:

## TRANSMITTER ERRORS:

ERROR NO.	CONCTD RCVR	ERROR COUNT
1	1	63
1	2	7
1	6	48
15	37	2

## RECEIVER ERRORS:

ERROR NO.	CONCTD XMTR	ERROR COUNT
16	1	22
16	2	22
27	37	12
30	6	2

IF THE COMMAND IS GIVEN TO DUMP THESE ERROR TABLES AND IT IS FOUND THAT NO ERRORS EXIST, THE EXERCISER RESPONDS IN THE FOLLOWING WAY:

\*\* NO ERRORS TO REPORT \*\*

IF THERE ARE, FOR EXAMPLE, TRANSMITTER ERRORS BUT NO RECEIVER ERRORS, THEN UNDER THE HEADING 'ERROR NO.' OF THE RECEIVER ERRORS WILL BE PRINTED: (NONE).

## 2.4 CLEARING OF THE TABLES

THE 'STATUS TABLE' IS NORMALLY CREATED BY MEANS OF THE OPERATOR ENTERING, VIA THE 'RANGE, OR ADD' COMMANDS, SOME RECEIVER ADDRESSES. FOR EXAMPLE, IF THE 'ADD' COMMAND WERE USED TO ENTER RECEIVER ADDRESSES 1, 2, 3, 4, & 5, AND IMMEDIATELY THEREAFTER THE STATUS WAS REQUESTED, THE STATUS TABLE WOULD INDICATE ALL OF THE SELECTED RECEIVERS BUT THE ATTEMPTED AND SUCCESSFUL CONNECTION COUNTS FOR EACH OF THOSE RECEIVERS WOULD BE 0.

THE STATUS TABLE IS COMPLETELY CLEARED BY USING THE 'CLEAR' COMMAND, OR BY USING THE 'DELETE' COMMAND AND DELETING ALL THOSE ADDRESSES INDICATED IN THE STATUS TABLE. THE 'INITIALIZE' COMMAND ALSO CLEARS THE STATUS TABLE COMPLETELY BY INTERNALLY CALLING THE 'CLEAR' COMMAND.

THE 'SUMMARY TABLE' IS NOT AFFECTED BY THE 'CLEAR' COMMAND BUT IS ENTIRELY CLEARED BY THE 'INITIALIZE' COMMAND.

LIKEWISE, THE 'ERRORS TABLE' IS COMPLETELY CLEARED BY THE 'INITIALIZE' COMMAND BUT IS NOT AFFECTED BY THE 'CLEAR' COMMAND.

WHEN THE OPERATOR 'STARTS' THE EXERCISER BY USING THE 'GO' COMMAND, THE FOLLOWING RESULTS CAN BE EXPECTED ON THE TABLES:

THE ADDRESS ENTRIES OF THE 'STATUS' TABLE ARE UNAFFECTED.

THE ATTEMPTS AND SUCCESSES ENTRIES OF THE STATUS TABLE ARE CLR'D

THE ENTIRE SUMMARY TABLE IS CLEARED.

THE ENTIRE ERRORS TABLE IS CLEARED.

## -----CAUTION-----

IT IS IMPORTANT TO NOTE THAT THE RECEIVER ERRORS ARE CLEARED ALONG WITH THE TRANSMITTER ERRORS UPON THE ISSUANCE OF THE 'GO' COMMAND. THEREFORE, THE OPERATOR MUST NOTE THAT THE NUMBER OF RECEIVER ERRORS INDICATED IN EITHER THE SUMMARY TABLE OR THE RECEIVER ERRORS TABLE IS ONLY THE NUMBER ACCUMULATED SINCE 'GO' WAS TYPED.

### 3 EXERCISE COMMANDS

#### 3.1 CONTROL CHARACTERS

##### 3.1.1 CONTROL-C

THIS CHARACTER IS USED TO GET THE EXERCISER INTO 'COMMAND' MODE SO THAT ANY OF THE CONTROLLING COMMANDS MAY BE ENTERED.

TYPING CONTROL-C (^C) ECHOS '^C' AND TERMINATES ANY OTHER FUNCTIONS WHICH MAY BE TAKING PLACE AT THE TIME. IF ANY OF THE TABLES ARE BEING PRINTED, THE CURRENT LINE WILL BE COMPLETED BEFORE '^C' IS ECHOED, THEN THE TABLE WILL BE TRUNCATED. THE EXERCISER WILL THEN ENTER 'COMMAND' MODE AND INDICATE THIS BY PRINTING 'PCL>'.

'PCL>' IS THE PROMPT WHICH INDICATES THAT A COMMAND MAY BE ENTERED BY THE OPERATOR.

TYPING 'CNTRL-C' WHILE THE EXERCISER IS 'EXERCISING' WILL CAUSE TERMINATION OF TRANSMITTER ACTIVITY ON THAT PDP-11, ECHO '^C', AND PRINT THE COMMAND MODE PROMPT 'PCL>'.

##### 3.1.2 CONTROL-O

THIS CHARACTER IS USED TO TERMINATE THE CURRENT PRINTOUT. IT CAUSES THE ENTIRE CONTENTS OF THE OUTPUT QUEUE TO BE THROWN AWAY. WHEN TABLES ARE BEING PRINTED, ONLY A SINGLE LINE IS IN THE OUTPUT QUEUE AT ANY GIVEN TIME. THIS ALLOWS 'SKIPPING' OF LINES DURING TABLE OUTPUT TO SAVE TIME.

WHEN CONTROL-O IS TYPED, THE EXERCISER WILL ECHO '^O', CLEAR THE OUTPUT QUEUE, AND THEN RETURN TO WHICHEVER MODE IT WAS IN WHEN 'CNTRL-O' WAS TYPED IN. THEREFORE, IF ^O IS TYPED IN DURING EXERCISE TIME, THE '^O' WILL STILL BE ECHOED. IF 'CNTRL-O' IS TYPED ARBITRARILY WHILE IN COMMAND MODE, THE '^O' WILL BE ECHOED BUT THERE WILL NOT BE ANOTHER 'PCL>' GIVEN (YET THE EXERCISER WILL ACCEPT COMMANDS).

##### 3.1.3 CONTROL-U

THIS CHARACTER IS USED (AS IT IS IN MOST D.E.C. SOFTWARE) TO THROW AWAY THE INPUT TYPED THUS FAR. THIS CONTROL CHARACTER SHOULD BE USED IF A MISTAKE IS NOTICED IN THE COMMAND STRING BEFORE CARRIAGE RETURN IS HIT. IF CARRIAGE RETURN IS HIT, THE ERRONEOUS COMMAND WILL BE EXECUTED UP TO THE POINT OF THE ERROR, THEN A SYNTAX ERROR MESSAGE WILL BE PRINTED.

WHEN CONTROL-U IS TYPED, THE EXERCISER WILL ECHO '^U', CLEAR THE INPUT QUEUE, THEN ISSUE A NEW 'PCL>' AND AWAIT A FURTHER COMMAND.

## 3.1.4 CONTROL-S

THIS CHARACTER IS USED TO SUSPEND PRINTER OUTPUT. NOTHING IS LOST WHEN IT IS USED, BUT THE PRINTOUT IS 'HELD' UNTIL THE ISSUANCE OF CONTROL-Q OR SIMPLY TYPING ANY OTHER CHARACTER. THIS FEATURE IS USEFUL WHEN GETTING TABLE PRINTOUTS ON A VIDEO TERMINAL AND IT IS DESIREOUS TO STOP THE DISPLAY. IT IS ALSO USEFUL TO STOP THE PRINTOUT IN ORDER TO FIX THE PAPER OR ADD MORE PAPER ON ANY HARD COPY PRINTER.

NOTHING IS ECHOED UPON , OR AFTER, THE ISSUANCE OF A CONTROL-S.

## 3.1.5 CONTROL-Q

THIS CHARACTER IS USED TO RESUME PRINTOUT AFTER IT WAS STOPPED BY USE OF CONTROL-S. TYPING ANY OTHER CHARACTER WILL ALSO RESUME OUTPUT BUT THE CONTROL-Q CHARACTER IS NOT ENTERED INTO THE INPUT QUEUE, AND SIMPLY RESUMES PRINTOUT.

NOTHING IS ECHOED AS A RESULT OF TYPING CONTROL-Q EXCEPT WHATEVER PRINTOUT HAD BEEN SUSPENDED BY THE CONTROL-S CHARACTER.

## 3.1.6 CARRIAGE RETURN

THE CARRIAGE RETURN CHARACTER IS USED TO TERMINATE COMMAND STRINGS AND SIGNIFIES ENTRANCE OF A COMMAND. ALL COMMANDS MUST BE TERMINATED WITH EITHER A CARRIAGE RETURN OR A LINE FEED. IF ONLY CARRIAGE RETURN IS TYPED, (BLANK COMMAND) THE EXERCISER SIMPLY ISSUES A NEW 'PCL>'.

WHEN CARRIAGE RETURN <CR> IS TYPED, BOTH CARRIAGE RETURN AN LINE FEED ARE ECHOED.

## 3.1.7 LINE FEED

THE LINE FEED CHARACTER IS TREATED EXACTLY AS THE CARRIAGE RETURN CHARACTER. IF ONLY A LINE FEED IS TYPED, (BLANK COMMAND) THE EXERCISER ISSUES A NEW 'PCL>'.

## 3.1.8 RUBOUT

THIS CHARACTER IS USED TO 'EDIT' THE COMMAND STRING WHILE IT IS BEING TYPED. EACH RUBOUT TYPED WILL REMOVE A CHARACTER FROM THE COMMAND BUFFER. WHEN ALL THE CHARACTERS HAVE BEEN REMOVED, THE EXERCISER WILL ISSUE A NEW 'PCL>' TO INDICATE THE ENTIRE COMMAND HAS BEEN ERASED.

EACH TIME A RUBOUT IS TYPED, A '^' IS ECHOED AND THE LAST CHARACTER WHICH WAS INPUT IS REMOVED.



## 3.2.1 COMMANDS

THIS SECTION DEALS WITH THE FULL COMMANDS OF THE EXERCISER WHICH ALLOW THE SETTING UP OF CONDITIONS TO BEST SUIT THE SYSTEM BEING TESTED. IN THE COMMANDS SHOWN, THE MINIMUM AMOUNT REQUIRED TO BE TYPED IS SET IN SQUARE BRACKETS [ ]. FOR EXAMPLE, IN THE COMMAND:

[I]INITIALIZE

ALL OF THE FOLLOWING ARE ACCEPTABLE:

I, IN, INI, INIT, INITI, INITIA, INITIAL, INITIALI, INITIALIZ  
AND INITIALIZE

WHEREAS THE FOLLOWING ARE NOT ACCEPTABLE:

INT, INTL, INITIALIZES

THERE ARE SOME COMMANDS WHICH MAY BE EXECUTED WITH OR WITHOUT ARGUMENTS. IN THESE CASES, THE <ARGUMENTS> WILL BE SET IN ANGLE BRACKETS. ARGUMENTS FOR COMMANDS MUST BE NUMERIC, EXCEPT FOR THE COMMANDS 'MASTER', 'SECONDARY', AND 'RIB', AND IF THEY ARE TYPED IN AS DECIMAL NUMBERS, THEY MUST BE IMMEDIATELY FOLLOWED BY A DECIMAL POINT (PERIOD). FOR THE 'RANGE' AND 'ASSIGN' COMMANDS, THE ORDER OF THE INPUT OF ARGUMENTS MUST ADHERE TO THE DESCRIPTIONS (SECT 3.2.5, & 3.2.13)

### 3.2.1 SILO

[SI]LO <A B C . . . .N>  
SILO -- CLEAR THE MASTER ADDRESS SILO AND RETURN TO 'AUTO  
ADDRESS MODE'.

SILO A B C . . . N  
LOAD THE MASTER ADDRESS SILO WITH THE SEQUENCE 'ABC..N'  
AS MANY TIMES AS THE WHOLE SEQUENCE WILL FIT INTO THE  
SILO'S 50 LOCATIONS.

THIS COMMAND MONITORS THE ARGUMENTS CAREFULLY CHECKING FOR SEQUENTIAL ARGUMENTS WHICH ARE THE SAME, ARGUMENTS WHICH ARE 0, OR ARE GREATER THAN 37 OCTAL, AND CHECKING THAT THE LAST ARGUMENT IS NOT THE SAME AS THE FIRST.

IF ANY TWO SEQUENTIAL ARGUMENTS ARE FOUND TO BE THE SAME, INCLUDING THE FIRST AND THE LAST, A 'PAD' VALUE IS INSERTED BETWEEN THEM. THE 'PAD' VALUE IS 0. THIS ALSO INCREASES THE NUMBER OF ARGUMENTS IN THE SEQUENCE.

IF ANY OF THE ARGUMENTS ARE '0', OR GREATER THAN '37' OR NON-NUMERIC, OR IF THERE ARE MORE THAN 50 ARGUMENTS, THE COMMAND WILL BE ABORTED AND THE '\*\*SYNTAX ERROR\*\*' MESSAGE WILL BE PRINTED.

WHEN THE SILO HAS BEEN SUCCESSFULLY LOADED, THERE IS THE POSSIBILITY THAT ONE OR TWO MESSAGES WILL BE PRINTED, OR NONE MAY BE PRINTED.

IF THIS UNIT IS NOT MASTER, THE FOLLOWING WILL BE PRINTED:

'THIS UNIT IS NOT MASTER BUT HAS BEEN MADE SECONDARY  
THE SILO YOU HAVE JUST LOADED WILL BE USED IF YOU CLEAR  
THE CURRENT MASTER.'

IF IT WAS REQUIRED FOR THE EXERCISER TO 'PAD' THE SILO WITH 0'S

THE FOLLOWING WILL BE PRINTED:

'THE SILO HAS BEEN PADDED WITH THE ADDRESS '0''.'

## 3.2.2 MASTER

[M]ASTER [S]ET OR [C]LEAR

MASTER SET - WRITE A (1) INTO THE TMMR REGISTER BIT 08 IN THIS TRANSMITTER TO ATTEMPT TO SET MASTER. ANOTHER UNIT HAVING 'MASTER' SET, WILL DISALLOW THIS BIT TO BE SET.

MASTER CLEAR - WRITE A (0) INTO THE TMMR REGISTER BIT 08 IN THIS TRANSMITTER TO CLEAR 'MASTER'. IF NO OTHER UNIT HAS BEEN SET TO BE 'SECONDARY', THIS ACTION WILL CAUSE 'MASTER DOWN' ERRORS ON ALL UNITS ATTEMPTING TO TRANSMIT.

THIS COMMAND IS USED TO 'SOFTWARE SET' ONE OF THE PCL11 UNITS TO BE MASTER OF THE T.D.M. BUS. THE ONLY ARGUMENTS ALLOWED ARE '[S]ET' AND '[C]LEAR'. NO ARGUMENTS, OR ANY OTHER ARGUMENTS THAN THESE, WILL RESULT IN THE MESSAGE '\*\*SYNTAX ERROR\*\*'.

SINCE THE HARDWARE DESIGN WILL NOT ALLOW MASTER TO BE SET ON MORE THAN ONE UNIT CONNECTED TO THE SAME T.D.M. BUS, THIS COMMAND MAY NOT WORK IN SETTING MASTER. THERE IS NOT, HOWEVER, ANY INDICATION THAT THE 'MASTER SET' COMMAND WAS OR WASN'T SUCCESSFUL.

## 3.2.3 SECONDARY

[S]ECONDARY [S]ET OR [C]LEAR

SECONDARY SET - WRITE A (1) INTO THE TMMR REGISTER BIT 09 IN THIS TRANSMITTER TO ATTEMPT TO SET 'SECONDARY'. THIS UNIT BEING 'MASTER' WILL DISALLOW THIS BIT TO BE SET.

SECONDARY CLEAR - WRITE A (0) INTO THE TMMR REGISTER BIT 09 IN THIS TRANSMITTER TO CLEAR 'SECONDARY'.

THIS COMMAND IS USED TO 'SOFTWARE SET' ONE OF THE PCL11 UNITS TO BE SECONDARY MASTER OF THE T.D.M. BUS. IF THE PCL11 UNIT WHICH CURRENTLY HAS MASTER SET CLEARS IT, AND THIS UNIT HAS SECONDARY SET, THEN THIS UNIT WILL BECOME THE NEW MASTER. IF THIS UNIT IS IN COMMUNICATION WITH A RECEIVER AT THE TIME IT BECOMES NEW MASTER, THE MESSAGE :

\*\* THIS UNIT HAS BECOME 'NEW MASTER' \*\*

IS PRINTED ON THE CONSOLE AND THE EXERCISER AUTOMATICALLY CONTINUES EXERCISING.

## 3.2.4 RIB

[R]IB [S]ET OR [C]LEAR

RIB SET - WRITE A (1) INTO THE MEMORY LOCATION (BIT 15) WHICH IS USED AS THE TRANSMITTER COMMAND WORD. THE LOCATION IS TAGGED: 'TXMST'. THIS WILL CAUSE THE NEXT AND SUBSEQUENT TRANSMITTER EVENTS TO OCCUR IN THE 'RE-TRY - IF - BUSY' MODE.

RIB CLEAR - WRITE A (0) INTO THE MEMORY LOCATION (BIT 15) WHICH IS USED AS THE TRANSMITTER COMMAND WORD TAGGED 'TXMST'. THIS WILL CAUSE 'BUSY' INTERRUPTS TO OCCUR WHENEVER THE RECEIVER BEING ADDRESSED IS NOT READY OR NOT THERE.

THIS COMMAND IS USED TO 'SOFTWARE SET' THE 'RIB' OR RE-TRY IF BUSY FEATURE IN THE PCL11 TRANSMITTER. WITH 'RIB' SET, THE TRANSMITTER HARDWARE WILL CONTINUOUSLY RE-TRY TO CONNECT TO THE SELECTED RECEIVER UNTIL EITHER A 'TIME-OUT' OCCURS, OR THE CONNECTION IS MADE AND A 'SUCCESSFUL TRANSFER' OCCURS.

WITH 'RIB' CLEAR, THE HARDWARE PRODUCES AN INTERRUPT IMMEDIATELY UPON FINDING THE ADDRESSED RECEIVER BUSY OR NOT THERE. THE USE OF THIS COMMAND WILL CAUSE A DIFFERENCE IN THE 'SUCCESSFUL CONNECTION' COUNT RELATIVE TO THE 'ATTEMPTED CONNECTION' COUNT IN THE STATUS PRINT-OUT.

## 3.2.5 RANGE

[R]ANGE [LOW HIGH]

RANGE A B PRODUCE A LIST, IN THE STATUS TABLE, OF ADDRESSES FROM ADDRESS 'A' TO 'B' AND MAKE THEM 'ACTIVE' RECEIVER ADDRESSES. 'B' MUST BE HIGHER THAN 'A'. BOTH 'A' AND 'B' ARE REPRESENTATIVE OF NUMERICAL VALUES WITHIN THE RANGE OF 1-37 OCTAL.

## EXAMPLE:

THE COMMAND 'RANGE 12. 16.' WILL ACTIVATE RECEIVER ADDRESSES 12 UP TO AND INCLUDING 16 (DECIMAL), OR 14 UP TO AND INCLUDING 20 (OCTAL). THESE ADDRESSES WILL BE USED SEQUENTIALLY BY THE TRANSMITTER MODULE IN THE EXERCISER AS TARGET RECEIVER ADDRESSES.

## 3.2.6 ADD

[ADD] D [1] 2 3 . . 37

ADD A B C

ADD THE NUMERIC VALUES OF A, B, C TO THE STATUS TABLE AND MAKE THEM "ACTIVE RECEIVER ADDRESSES". THIS COMMAND MAY HAVE ANY NUMBER OF ARGUMENTS PROVIDING THAT THERE IS AT LEAST ONE. THERE IS NO RESTRICTION ON THE ORDER OF THE ARGUMENTS AT ALL. THE SAME NUMBER MAY BE ADDED AS MANY TIMES AS YOU LIKE. THE ARGUMENTS MUST BE NUMERICAL AND BETWEEN THE VALUES 1 AND 31. (DECIMAL) OR 1 AND 37 (OCTAL).

## EXAMPLE:

THE COMMAND "ADD 1 12 3 3 22 8. ." WILL ACTIVATE RECEIVER ADDRESSES 1 3 10 12 AND 22 (OCTAL) OR 1 3 8, 10, AND 18. (DECIMAL) THIS COMMAND AFFECTS ONLY THOSE ADDRESSES INCLUDED IN THE ARGUMENTS OF THE COMMAND. IT MAY BE USED EFFECTIVELY IN CONJUNCTION WITH THE "RANGE" COMMAND TO PRODUCE AN EFFICIENT LIST OF THOSE RECEIVER ADDRESSES WHICH ARE TO BE COMMUNICATED WITH BY THIS TRANSMITTER.

## 3.2.7 DELETE

[DELETE] D [1] 2 3 . . 37

DELETE A B C

DELETE THE NUMERIC VALUES OF A, B, C FROM THE STATUS TABLE AND MAKE THEM "INACTIVE RECEIVER ADDRESSES". THIS COMMAND MAY HAVE ANY NUMBER OF ARGUMENTS PROVIDING THERE IS AT LEAST ONE. THERE IS NO RESTRICTION ON THE ORDER OF THE ARGUMENTS AT ALL, AND REDUNDANCIES ARE ACCEPTABLE. THE ARGUMENTS MUST BE NUMERIC AND BETWEEN THE VALUES 1 AND 31. (DECIMAL) OR 1 AND 37 (OCTAL).

## EXAMPLE:

THE COMMAND "DELETE 12 22 ." WILL MAKE RECEIVER ADDRESSES 12 AND 22 "INACTIVE" SO THAT THIS TRANSMITTER WILL NOT ATTEMPT TO COMMUNICATE WITH THEM. THIS COMMAND MAY BE USED EFFECTIVELY IN CONJUNCTION WITH THE "RANGE" COMMAND AS FOLLOWS:

RANGE 1 7  
DELETE 2 5

WILL PRODUCE A LIST OF "ACTIVE" RECEIVERS WITH THE ADDRESSES:

1, 3, 4, 6, AND 7

## 3.2.8 CLEAR

[C]LEAR

CLEAR - CLEAR THE ENTIRE STATUS TABLE. REMOVE ALL RECEIVER ACTIVE FLAGS AND CLEAR ALL CONNECTION ATTEMPTS AND SUCCESSES FROM EVERY TABLE LOCATION. THIS COMMAND IS MOSTLY USEFUL WHEN IT IS DESIRED TO 'RE-START' THE EXERCISER WITH A FRESH SLATE BUT NOT DISTURB THE ERROR SUMMARY TABLE NOR THE ERRORS TABLES.

THE "CLEAR" COMMAND HAS NO AFFECT ON ANY OTHER TABLES IN THE EXERCISER BUT IT DOES ALSO CLEAR THE INTERNAL (SOFTWARE) QUEUE OF RECEIVER ADDRESSES.

EXAMPLE:

CONSIDER THE FOLLOWING STRING OF COMMANDS:

```
RANGE 1 21
ADD 27 30 31 32 33 34
DELETE 17 20
CLEAR
RANGE 1 16
ADD 21 37
```

THE RESULT WOULD BE THE "ACTIVATION" OF RECEIVER ADDRESSES:

1, 2, 3, 4, 5, 6, 7, 10, 11, 12, 13, 14, 15, 16, 21, 37

## 3.2.9 INITIALIZE

[I]NITIALIZE

INITIALIZE - INITIALIZE EVERYTHING ABOUT THIS TRANSMITTER AND CLEAR ALL TABLES ASSOCIATED WITH THIS PDP-11. INITIALIZE PERFORMS A HARDWARE CLEAR OF THE TRANSMITTER REGISTERS, RESETS ALL OF THE EVENT FLAGS ASSOCIATED WITH THE SENDING OF DATA, CLEARS THE SOFTWARE QUEUE OF RECEIVER ADDRESSES, INITIALIZES THE SEEDS USED FOR GENERATION OF RANDOM DATA, DOES A "CLEAR" COMMAND AS ABOVE AND CLEARS BOTH ERROR TABLES.



## 3.2.10 STATUS

[S]ATUS

STATUS -

SET THE EVENT FLAG WHICH CAUSES THE CURRENT STATUS TABLE TO BE PRINTED. EVERY TIME THE STATUS COMMAND IS ISSUED, A STATUS HEADER IS PRINTED (SEE 2.1). THEN, IN NUMERICAL ORDER THE "ACTIVE" RECEIVER ADDRESSES, NUMBER OF ATTEMPTED CONNECTIONS, AND NUMBER OF SUCCESSFUL CONNECTIONS IS PRINTED ON A LINE-BY-LINE BASIS. THE PRINTING OF THE STATUS TABLE DOES (LIKE ALL COMMANDS) INHIBIT ANY ACTION BY THE TRANSMITTER IN THAT PDP-11 BUT THE RECEIVER IS ALWAYS ACTIVE.

## 3.2.11 SUMMARY

[SU]MMARY

SUMMARY -

SET THE EVENT FLAG WHICH CAUSES THE CURRENT ERROR SUMMARY TABLE TO BE PRINTED. EVERY TIME THE SUMMARY COMMAND IS ISSUED, A SUMMARY HEADER IS PRINTED (SEE 2.2). THEN, IN NUMERICAL ORDER, THE ERROR NUMBERS, ERROR ADDRESSES, AND NO. OF OCCURRENCES ARE PRINTED (IF ANY) ON A LINE-BY-LINE BASIS. AGAIN, TRANSMITTER ACTIVITY IS SUSPENDED UNTIL THE EXERCISER IS "CONTINUED".

## 3.2.12 ERRORS

[E]RRORS

ERRORS -

SET THE EVENT FLAG WHICH CAUSES THE CURRENT TRANSMITTER ERROR TABLE TO BE PRINTED. WHEN THE TRANSMITTER ERROR EVENT IS FINISHED, IT WILL AUTOMATICALLY SET THE RECEIVER ERROR EVENT FLAG WHEREBY THE RECEIVER ERROR TABLE WILL BE PRINTED (SEE 2.3).

WHEN THE "ERROR" COMMAND IS ISSUED, A CHECK IS MADE OF THE ENTIRE TRANSMITTER AND RECEIVER TABLES TO DETERMINE IF THERE HAD BEEN ANY ERROR OCCURRENCES TO DATE. IF THERE WERE NO ERRORS IN EITHER TABLE, THEN THE MESSAGE:

'NO ERRORS TO REPORT'

IS PRINTED. OTHERWISE, THE ERROR NUMBER (IN NUMERICAL ORDER), THE CONNECTED RCVR/XMTR, AND THE ERROR COUNT ARE PRINTED ON A LINE-BY-LINE BASIS. TRANSMITTER ACTIVITY IS AGAIN SUSPENDED UNTIL THE EXERCISER IS "CONTINUED".

## 3.2.13 ASSIGN

[AS]SIGN &lt;XM ADDR XM VCT RC ADDR RC VCTR&gt;

ASSIGN -

GIVE TO THE EXERCISER, THE UNIBUS ADDRESSES AND VECTORS OF THE PCL11 UNIT WHICH THE OPERATOR DESIRES TO EXERCISE.

AS IS INDICATED BY THE ANGLE BRACKETS, THE ASSIGN COMMANDS' ARGUMENTS ARE OPTIONAL. IF THE ASSIGN COMMAND IS ISSUED WITH NO ARGUMENTS, THEN THE 'DEFAULT' (NORMAL) ADDRESSES AND VECTORS ARE ASSIGNED. THESE ARE:

XMTR ADDR	164200
XMTR VECTOR	170
RCVR ADDR	164220
RCVR VECTOR	174

THE 'ASSIGN' COMMAND MAY ALSO BE USED WITH ANY, OR ALL OF FOUR ARGUMENTS. HOWEVER THE PROPER FIELD MUST BE USED TO ENTER THE DESIRED ADDRESS:

ASSIGN AAAAA BBB CCCCC DDD

TO ENTER ONLY THE TRANSMITTER ADDRESS, ONLY THE FIELD AAAAA NEED BE USED.

ASSIGN 166200

TO ENTER THE TRANSMITTER VECTOR (BBB), FIRST THE TRANSMITTER ADDRESS, THEN THE VECTOR IS TYPED:

ASSIGN 166200 700

TO ENTER THE RECEIVER ADDRESS (FIELD CCCCC), FIRST THE TRANSMITTER ADDRESS, THEN THE TRANSMITTER VECTOR, THEN THE RECEIVER ADDRESS IS TYPED:

ASSIGN 166200 700 166220

FINALLY, TO ASSIGN THE RECEIVER VECTOR, THE XMTR ADDRESS, XMTR VECTOR, RCVR ADDRESS AND THEN THE RECEIVER VECTOR IS TYPED:

ASSIGN 166200 700 166220 704

NOTE THAT EACH ARGUMENT MUST BE SEPARATED BY A SPACE (NOT A COMMA).

AT THE SUCCESSFUL COMPLETION OF THE 'ASSIGN' COMMAND, THE EXERCISER WILL BE STARTED OVER JUST AS THOUGH THE OPERATOR HAD STARTED AT 200.

A '\*\*SYNTAX ERROR\*\*' WILL OCCUR WITH ANY OF THE FOLLOWING CONDITIONS:

TOO MANY ARGUMENTS

ARGUMENT IS NOT NUMERIC

ADDRESS ARGUMENT NOT IN I/O ADDRESS FIELD  
(I.E. ABOVE 163776)

VECTOR ARGUMENT IS NOT IN VECTOR FIELD  
(I.E. FROM 0 TO 776)

ADDRESS ARGUMENT HAS WRONG OFFSET  
(I.E. LAST 4 BITS MUST BE 0)

VECTOR ARGUMENT HAS WRONG OFFSET  
(I.E. LAST 2 BITS MUST BE 0)

IMPROPER SPELLING OF 'ASSIGN' OR IMPROPER USE OF DECIMAL NUMBERS.

3.2.14 GO

[G]O

GO -

START THE EXERCISER. ENTER 'EXERCISE MODE'. GO IS ISSUED TO INITIALLY START THE EXERCISER TRANSMITTING TO OTHER RECEIVERS ON THE T.D.M. BUS. ALL TARGET RECEIVER ADDRESS SHOULD HAVE ALREADY BEEN ENTERED VIA THE 'RANGE' OR 'ADD' COMMANDS, AND ONE OF THE PCL11 UNITS SHOULD HAVE BEEN SET TO BE T.D.M. BUS MASTER. IF THE 'SILO' IS BEING USED TO GENERATE TRANSMITTER ADDRESSES, IT SHOULD HAVE BEEN LOADED PRIOR TO 'GO'.

THE 'GO' COMMAND WILL CAUSE THE CLEARING OF THE ERRORS TABLES AND THE SUMMARY TABLE AND THE 'ATTEMPTS' AND 'SUCCESSSES' PORTIONS OF THE STATUS TABLE. IT ALSO CAUSES THE CLEARING OF THE RECEIVER ADDRESS QUEUE (SOFTWARE). NOTE THAT THE RECEIVER ERRORS ACCUMULATED UP TO THE POINT OF TYPING 'GO' ARE LOST. ONLY THOSE ACCUMULATED AFTER 'GO' IS TYPED CAN BE DISPLAYED IN THE ERRORS TABLE. IT WILL NOT, HOWEVER, CAUSE THE CLEARING OF THE RECEIVER ADDRESSES IN THE STATUS TABLE; SO THAT ALL RECEIVERS SELECTED BY THE RANGE OR ADD COMMANDS WILL STILL BE ACTIVE.

THE TRANSMITTER 'EVENT' FLAG IS SET BY THE GO COMMAND WHICH BEGINS THE TRANSMISSION OF DATA TO THE DE-QUEUED TARGET RECEIVER ADDRESSES. WHEN 'GO' IS ISSUED, THE IMMEDIATE RESPONSE SHOULD BE THAT THE EXERCISER PRINTS:

EXERCISER STARTED

HOWEVER, IF THE OPERATOR FORGOT TO ENTER THE TARGET RECEIVER ADDRESSES, AND NONE WERE PREVIOUSLY ENTERED, THE EXERCISER WILL NOT BE ABLE TO RUN AND WILL PRINT:

\*\*\* NO RECEIVERS SELECTED \*\*\*

3.2.15 CONTINUE

[C]ONTINUE

CONTINUE -

CONTINUE EXERCISING. RE-ENTER EXERCISE MODE. 'CONTINUE' IS ISSUED TO CAUSE THE EXERCISER TO CONTINUE AFTER A TABLE HAS FINISHED BEING PRINTED, OR AFTER SOME OTHER COMMAND HAS BEEN EXECUTED TO POSSIBLY CHANGE THE RUNNING OF THE EXERCISER.

THE 'CONTINUE' COMMAND DOES NOTHING TO ANYTHING EXCEPT THAT IT RE-STARTS EXERCISE MODE. ALL TABLES ARE LEFT INTACT AND SOFTWARE QUEUES ARE UNTOUCHED. WHEN 'CONTINUE' IS ISSUED, THE IMMEDIATE RESPONSE SHOULD BE THAT THE EXERCISER PRINTS:

'EXERCISER CONTINUING'

IF, HOWEVER, WHILE THE EXERCISER WAS STOPPED, THE OPERATOR USED THE INITIALIZE OR CLEAR COMMANDS AND DID NOT RE-ENTER ANY TARGET RECEIVER ADDRESSES (VIA RANGE OR ADD), THE RECEIVER ADDRESS QUEUE WOULD EVENTUALLY BECOME EMPTY AND WOULD NEVER BE RE-FILLED. THIS WOULD AGAIN CAUSE THE PRINTOUT:

\*\*\* NO RECEIVERS SELECTED \*\*\*

### 3.2.16 \*\*SYNTAX ERROR\*\*

\*\*SYNTAX ERROR\*\* IS NOT A COMMAND BUT IS RELATED TO ALL OF THE COMMANDS OF SECTION 3.2. IN GENERAL, A SYNTAX ERROR WILL RESULT FOR THE FOLLOWING REASONS:

- .1 COMMAND DOES NOT EXIST IN 'KEYWORD' TABLE
- .2 COMMAND WORD IS MISSPELLED
- .3 FEWER THAN THE MINIMUM CHARACTERS WERE USED  
(I.E. LESS THAN THAT ENCLOSED IN SQUARE BRACKETS [CL]EAR)
- .4 NO ARGUMENTS GIVEN WHERE REQUIRED
- .5 ARGUMENTS GIVEN WHERE NONE REQUIRED
- .6 ARGUMENTS IN WRONG ORDER (WHERE ORDER IS IMPORTANT)
- .7 NOT ENOUGH ARGUMENTS
- .8 TOO MANY ARGUMENTS
- .9 ARGUMENTS ARE WRONG CLASS (USUALLY SHOULD BE NUMBERS)
- .10 ARGUMENTS ARE OUTSIDE SPECIFIC BOUNDARIES (SEE 3.2.13)
- .11 ARGUMENTS SEPARATED BY OTHER THAN A SPACE
- .12 COMMAND SEPARATED FROM ARGUMENTS FROM OTHER THAN A SPACE
- .13 DECIMAL NUMERIC ARGUMENTS USED WITHOUT THE POINT (.)
- .14 ARGUMENTS ARE THE SAME (ONLY IN 'RANGE' COMMAND)

## 4. GETTING THE EXERCISER STARTED

## 4.1 PREPARATION

-----

BEFORE RUNNING THE PCL11 EXERCISER, THE FOLLOWING MUST HAVE BEEN PREVIOUSLY PERFORMED:

- INSURE ALL PCL11 UNITS ARE CORRECTLY INSTALLED IN EACH PDP-11 PROCESSOR.
- DETERMINE ALL OF THE T.D.M. BUS ADDRESSES OF THE TRANSMITTERS AND THE RECEIVERS OF THE UNITS WHICH IT IS DESIRED TO BE TESTED. INSURE THAT NO TWO TRANSMITTERS AND NO TWO RECEIVERS HAVE BEEN ASSIGNED THE SAME T.D.M. BUS ADDRESSES.
- RUN THE PCL11 "STANDALONE" TEST (CZPLBCO) WITHOUT ERRORS BEFORE CONNECTING ALL UNITS TOGETHER VIA THE T.D.M. BUS.

## 4.2 LOADING

-----

THE PCL11 EXERCISER IS SUPPLIED IN ABSOLUTE BINARY FORMAT AND IS LOADED BY MEANS OF THE STANDARD PDP-11 ABSOLUTE LOADER OR THE "XXDP" LOAD COMMAND.

THE EXERCISER IS APPROXIMATELY 7-K LONG. THEREFORE, WHEN USING "XXDP", THE PROCESSOR MUST HAVE 16-K OF MEMORY.

THE EXERCISER MUST BE LOADED INTO EACH PDP-11 HOSTING A PCL11 WHICH IS TO BE TESTED.

## 4.3 DEVICE ADDRESSES

-----

IT MAY BE FOUND THAT THE UNIBUS ADDRESSES OF THE PCL11 UNIT ARE DIFFERENT THAN THE DEFAULT ADDRESSES IN THE EXERCISER (SEE 3.2.13). IF THIS IS THE CASE, AND THERE ARE NO OTHER DEVICES ON THE UNIBUS WITH THE ADDRESSES 164200-164226, THE FOLLOWING PRINTOUT WILL OCCUR:  
'DEVICE ADDRESS ERROR. USE "ASSIGN" COMMAND'

ALSO, IT MAY BE THE CASE THAT THERE ARE MORE THAN ONE PCL11 UNIT HOSTED BY ONE PDP-11 AND EACH ONE MUST BE TESETD "ON-LINE" USING THE EXERCISER.

IN EITHER CASE, THE OPERATOR MUST USE THE "ASSIGN" COMMAND AS SHOWN IN SECTION 3.2.13 TO ASSIGN THE CORRECT UNIBUS ADDRESSES TO THE EXERCISER IN ORDER TO EXERCISE THE RIGHT PCL11.

NOTE THAT THE EXERCISER WILL RUN WITH ONLY ONE PCL11 PER PDP-11 AT A TIME.

## 4.4 STARTING ADDRESSES

-----  
 THE EXERCISER STARTING ADDRESS IS 200  
 THIS WILL INITIALIZE EVERYTHING AND START IN COMMAND INPUT MODE.

THE EXERCISER IS RESTARTED AT LOCATION 204  
 THIS WILL PRESERVE THE ERROR TABLES, STATUS TABLE, AND THE  
 RECEIVER ADDRESS QUEUE. IT WILL NOT, HOWEVER, PRESERVE THE  
 STATE OF THE TRANSMITTER ADDRESS SILO (HARDWARE CLEARED BY 'RESET')  
 NOR THE STATE OF 'MASTER' OR 'SECONDARY'. THESE UNPRESERVED  
 STATES MUST BE RE-ESTABLISHED PRIOR TO STARTING THE EXERCISE MODE  
 WITH THE 'GO' COMMAND.

START = 200  
 RESTART = 204

## 4.5 OPERATING PROCEDURES

- 
- A) LOAD THE PROGRAM USING THE PDP-11 ABS LOADER OR THE LOAD  
 COMMAND OF 'XXDP'. (SEE 4.2)
  - B) LOAD ADDRESS 200; PRESS START. THE TEST WILL IDENTIFY  
 ITSELF AND TEST THE DEVICE ADDRESSES.
  - C) IF THE PCL11 UNIBUS ADDRESSES OF THE UNIT TO BE TESTED  
 ARE NON-STANDARD, USE THE 'ASSIGN' COMMAND AS IN 3.2.13
  - D) DO A) TO C) (ABOVE) ON ALL PDP-11S BEFORE CONTINUING.
  - E) ASSIGN ONE OF THE UNITS AS MASTER EITHER BY USING THE  
 'MASTER SET' COMMAND, (SEC. 3.2.2) OR BY LOADING THE  
 XMTR ADDRESS SILO (SEC. 3.2.1) ON THE SELECTED UNIT.
  - F) AT EACH UNIT, DECIDE WHETHER IT IS DESIRED TO RUN THE  
 TRANSMITTER IN THE 'RE-TRY - IF - BUSY' MODE AND SET OR  
 CLEAR 'RIB' ACCORDINGLY (SEC. 3.2.4).
  - G) AT EACH UNIT, ENTER THE RECEIVER ADDRESSES OF ALL THE  
 RECEIVERS THAT THIS TRANSMITTER IS TO COMMUNICATE TO,  
 INCLUDING THE ADDRESS OF ITS OWN RECEIVER.
  - H) ON EACH UNIT, TYPE 'GO' TO START THE EXERCISER(S).
  - I) PERIODICALLY, ON EACH UNIT, TYPE CNTRL-C, THEN ISSUE THE  
 'STATUS' COMMAND TO INSURE THAT ALL RECEIVERS ARE BEING  
 TALKED TO AND THAT THE CORRECT UNIT IS MASTER.
  - J) ALSO PERIODICALLY, ON EACH UNIT, ISSUE THE 'SUMMARY'  
 COMMAND TO DISCOVER IF THERE HAVE BEEN ANY ERRORS.
  - K) AT ANY TIME, THE 'ERRORS' COMMAND MAY BE ISSUED TO  
 DETERMINE WHICH ERRORS HAVE OCCURRED BETWEEN WHICH  
 RECEIVER AND TRANSMITTER CONNECTION.
  - L) TO RESUME EXERCISING AS BEFORE ON ANY UNIT, TYPE  
 'CONTINUE' ON THE UNITS WHICH HAD BEEN STOPPED BY  
 CNTRL-C. (OR MASTER DOWN).



## 4.6 ERRORS

-----

A LIST OF ERROR NUMBERS MAY BE FOUND IN APPENDIX C OF THIS DOCUMENT. THESE 'ERROR NUMBERS' ARE THOSE REFERRED TO IN THE SUMMARY TABLE AND IN THE ERRORS TABLES. A LITTLE MORE DETAIL MAY BE DETERMINED ABOUT THE ERROR BY REFERRING TO THE PROGRAM LISTING AROUND THE ADDRESS SHOWN IN THE SUMMARY TABLE. THE LISTING WILL HAVE, IN THE COMMENT FIELD, THE ERROR IDENTIFIER:

\*\*\*\* XMTR ERROR N \*\*\*\* OR:  
\*\*\*\* RCVR ERROR N \*\*\*\*

WHERE 'N' IS THE ERROR NUMBER. ABOVE THIS IDENTIFIER, WILL BE THE DESCRIPTION OR CAUSE OF THE ERROR WITH THAT NUMBER.

IT MAY BE NOTED THAT THE TRANSMITTER ERRORS ARE NUMBERED FROM 1 TO 15 (OCTAL), AND THE RECEIVER ERRORS ARE NUMBERED FROM 16 TO 30 (OCTAL). THIS IS DONE SO THAT ONLY ONE TABLE IS REQUIRED TO SUMMARIZE ALL THE ERRORS (SUMMARY TABLE).

IF THERE IS AN ALARMING NUMBER OF OCCURRENCES OF ERRORS, THE FOLLOWING STEPS SHOULD BE TAKEN:

- A) DETERMINE THE ERROR CAUSE (FROM APPENDIX C)
- B) DETERMINE WHICH TRANSMITTER AND/OR RECEIVER ARE SUSPECT (FROM THE ERRORS TABLES)
- C) IF THE ERROR WAS NOT 'MASTER DOWN' (ERROR 10), RUN THE PCL11 'STANDALONE TEST' (YC-2017D-08) ON THE UNITS WITH THE SUSPECTED RECEIVER OR TRANSMITTER. SEE IF THE SAME ERROR TYPE CAN BE ACHIEVED WITH THE 'STANDALONE TEST'. IF NOT, THEN THE T.D.M. DRIVERS, OR CABLES, OR TERMINATORS ETC. ARE SUSPECT.
- D) IF THE ERROR WAS 'ERROR 10' BUT THIS ERROR HAD NOT OCCURRED ON OTHER UNITS, THE CABLE, OR RECEIVER CHIPS ETC. ARE AGAIN SUSPECT.
- E) USING EITHER THE EXERCISER, OR THE STANDALONE TEST, A DEFECTIVE SINGLE MODULE SHOULD BE RELATIVELY SIMPLE TO LOCALIZE AND REPLACE, CORRECTING THE PROBLEM.
- F) ONCE A MODULE HAS BEEN REPLACED, ALWAYS RUN THE PCL11 STANDALONE TEST (EVEN IF IT WAS A LINE DRIVER MODULE) BEFORE RUNNING THE EXERCISER.

A SMALL NUMBER OF CERTAIN ERRORS IS ACCEPTABLE DURING A LONG EXERCISE RUN. THESE ERRORS WOULD BE ATTRIBUTED TO LINE NOISE, GENERAL SYSTEM NOISE ETC. THESE ERRORS ARE:

ERROR 6	TRANSMITTER CRC ERROR
ERROR 7	TRANSMITTER MISCELLANEOUS TXM ERROR
ERROR 22	RECEIVER CRC ERROR
ERROR 24	RECEIVER PARITY ERROR

## 5. COMMAND MODE DESCRIPTION

## 5.1. SHORTENED COMMANDS

ANY OF THE COMMANDS MAY BE TYPED IN AS SHORT A FORM AS WOULD SEEM REASONABLE. THAT IS, ONLY ENOUGH LETTERS NEED BE TYPED SO AS TO DISTINGUISH ONE COMMAND FROM ANOTHER WITH THE SAME FIRST LETTER. FOR EXAMPLE, SINCE THERE IS ONLY ONE COMMAND BEGINNING WITH THE LETTER 'E' (ERRORS), ONLY THE 'E' NEED BE TYPED FOR THAT COMMAND. HOWEVER, THERE ARE FOUR COMMANDS BEGINNING WITH THE LETTER 'S' (SUMMARY, STATUS, SILO, AND SECONDARY). IN EACH OF THESE COMMANDS, THE SECOND LETTER IS DIFFERENT, SO JUST TWO LETTERS NEED BE TYPED: (SU, ST, SI, AND SE).

ON THE OTHER HAND, THE COMMAND DECODER WILL NOT ACCEPT ANY COMMAND WORDS WITH ANY OF THE LETTERS WRONG. THAT IS, EVERY LETTER TYPED IN FOR A PARTICULAR COMMAND MUST BE AT LEAST ON THE WAY TO SPELLING THE WORD CORRECTLY.

FOR EXAMPLE: FOR THE "INITIALIZE" COMMAND:

INITIAL            IS ACCEPTABLE, WHEREAS:  
INITL             IS UNACCEPTABLE.

## 5.2. RUBOUT FEATURES

THERE ARE TWO EDITING FEATURES EMPLOYED IN THE COMMAND DECODER. "RUBOUT" (DELETE) CHARACTER WILL DELETE THE LAST CHARACTER WHICH WAS TYPED IN AS PART OF A COMMAND WORD OR ARGUMENT. CONTROL-U CHARACTER WILL REMOVE ALL THAT HAS BEEN TYPED IN SO FAR ON THIS LINE. ONE OTHER METHOD OF HAVING THE EXERCISER IGNORE EVERYTHING TYPED IN SO FAR IS TO TYPE "CONTROL-C".

- A) RUBOUT        DELETE LAST CHARACTER
- B) CNTRL-U     DELETE THIS LINE
- C) CNTRL-C     DELETE THIS LINE

## 5.3. ENTERING COMMAND MODE

COMMAND MODE IS AUTOMATICALLY ENTERED AT STARTUP OR RESTART OF THE EXERCISER. THERE ARE TIMES, HOWEVER, WHEN IT IS NOT IN "COMMAND" MODE. THEY ARE:

- A) WHEN IN EXERCISE MODE (RUNNING)
- B) WHILE PRINTING THE STATUS, SUMMARY, OR ERRORS TABLES

AT ANY TIME THAT IT IS DESIRED TO ENTER COMMAND MODE, THE OPERATOR NEED ONLY TYPE "CONTROL-C" (^C). THIS WILL TERMINATE ALL TRANSMITTER ACTIVITY ON THE UNIT AND ENTER COMMAND MODE. IT WILL ALSO, (AT COMPLETION OF THE CURRENT LINE), TERMINATE ALL TABLE PRINTING AND RETURN TO COMMAND MODE.

THERE IS ANOTHER CHARACTER WHICH WILL PERFORM THE SAME AS CONTROL-C DUE TO ITS FUNCTION; THAT IS CONTROL-U.

UPPER OR LOWER CASE  
-----

WHEN IN COMMAND MODE, THE OPERATOR MAY FIND HIMSELF USING A KEYBOARD WHICH DOES NOT HAVE A "CAPS LOCK" KEY. SINCE THE COMMAND DECODER REQUIRES THAT ALL INPUT BE IN CAPITAL LETTERS, THE KEYBOARD INPUT ROUTINE WILL AUTOMATICALLY CONVERT ALL LOWER CASE ALPHA CHARACTERS INTO UPPER CASE ALPHA CHARACTERS BY CLEARING BIT05 IN THE ASCII CODE OF THE INPUT CHARACTER.

## 6 EXERCISER MODE DESCRIPTION

## 6.1 TRANSMIT EVENT

AN 'EVENT FLAG' IS CHECKED IN THE MAIN LOOP OF THE PROGRAM TO DETERMINE WHETHER THE EXERCISER HAS BEEN TOLD TO 'GO'. THIS FLAG IS THE TRANSMIT EVENT FLAG. IT IS SET WHENEVER THE OPERATOR ISSUES THE 'GO' COMMAND, OR THE 'CONTINUE' COMMAND TO THE EXERCISER. THIS FLAG IS CLEARED WHENEVER THE OPERATOR TYPES CONTROL-C OR IF A MASTER DOWN ERROR OCCURS.

WHEN THE FLAG IS DETECTED AS BEING SET, THE EXERCISER CALLS THE TRANSMITTER MODULE WHICH TRANSMITS A BLOCK OF DATA THAT HAD BEEN PREVIOUSLY GENERATED BY THE DATA GENERATION MODULE. IF THIS DATA HAS ALREADY BEEN USED FOR THE FIFTH TIME, IT SETS THE DATA GENERATION EVENT FLAG AND NEW RANDOM DATA WILL BE GENERATED. WHEN THE TRANSMIT MODULE IS CALLED, THE TRANSMIT EVENT FLAG IS CLEARED AND IS NOT SET AGAIN UNTIL SOME TYPE OF 'COMPLETION' INTERRUPT HAS OCCURRED SUCH AS 'SUCCESSFUL TRANSFER' OR 'ERROR'.

THE TRANSMIT EVENT IS ALSO RESPONSIBLE FOR UPDATING THE ERROR TABLES FOR TRANSMITTER ERRORS, AND ALSO THE STATUS TABLE FOR ATTEMPTS AND SUCCESSES TO EACH RECEIVER IN THE RECEIVER ADDRESS QUEUE.

## 6.2 RECEIVE EVENT

WHEN THE EXERCISER IS STARTED BY THE OPERATOR STARTING AT LOCATION 200, A SOFTWARE FLAG CALLED 'RECEIVER EVENT FLAG' IS SET. WHEN THIS IS DETECTED IN THE MAIN LOOP, THE RECEIVER MODULE IS CALLED TO SET UP THE RECEIVER TO RECEIVE UP TO 600 (OCTAL) WORDS FROM A TRANSMITTER THAT TRIES. WHEN THE MODULE IS CALLED, THE FLAG (RCVR EVENT) IS CLEARED AND NOT SET AGAIN UNTIL SOME TYPE OF COMPLETION INTERRUPT IS RECEIVED SUCH AS 'SUCCESSFUL TRANSFER', 'ERROR', OR 'REJECT COMPLETED'.

THE RECEIVE EVENT IS ALSO RESPONSIBLE FOR UPDATING THE ERROR TABLES FOR RECEIVER ERRORS, AND FOR CHECKING THE DATA RECEIVED TO DETERMINE ITS CORRECTNESS AND THAT THE RIGHT NUMBER OF WORDS WERE RECEIVED.

UNLIKE THE TRANSMIT EVENT, THE RECEIVE EVENT CANNOT BE SUSPENDED BY THE OPERATOR ISSUING ANY COMMANDS OR CONTROL CHARACTERS. HALTING THE EXERCISER, OR A HARDWARE FAILURE TO INTERRUPT ARE THE ONLY WAYS TO PREVENT THE RECEIVE EVENT FROM OCCURRING.

## 6.3 DATA GENERATION EVENT

ANOTHER EVENT WHICH OCCURS IN EXERCISE MODE IS 'DATA GENERATION'. A NEW BUFFER FULL OF RANDOM DATA IS GENERATED AFTER 5 PASSES WITH THE OLD DATA ARE COMPLETED. THE LENGTH OF THE DATA BUFFER ALSO RANDOMLY VARIES FROM 1 TO 1000 (OCTAL) WORDS. IF THE BUFFER IS LONGER THAN 600 WORDS, THE RECEIVER WILL BE EXPECTED TO TRUNCATE THE MESSAGE AFTER RECEIVING THE 600TH WORD.

ALSO, IF THE FIRST WORD OF THE BUFFER ('FLAGS' WORD) HAS THE FOUR MOST SIGNIFICANT BITS SET, THE RECEIVER WILL REJECT THE MESSAGE ENTIRELY. ALL OF THESE 'REJECT' AND 'TRUNCATE' OCCURRENCES ARE EXPECTED BY THE TRANSMITTER EVENT AND CHECKS ARE MADE THAT THEY OCCUR AS THEY SHOULD.

## 6.4 ADDRESS QUEUE EVENT

-----

WHEN THE USER HAS COMPLETED GENERATING THE LIST OF RECEIVER ADDRESSES HE WISHES A PARTICULAR TRANSMITTER TO COMMUNICATE WITH, THE STATUS TABLE HAS THOSE ENTRIES 'ACTIVATED'. DURING EXERCISE MODE ACTIVE ADDRESSES IN THE STATUS TABLE ARE LOADED INTO A SOFTWARE QUEUE TO AWAIT THEIR TURN WITH THE TRANSMIT MODULE. ADDRESSES ARE DEQUEUED ON EVERY ENTRANCE TO THE TRANSMIT MODULE AND THE 'ATTEMPTS' ENTRY OF THE STATUS TABLE IS UPDATED. WHEN THE QUEUE IS EMPTY, THE ADDRESS QUEUE EVENT IS CALLED TO RE-FILL IT FROM THE STATUS TABLE.

NOTE THAT ADDRESSES ARE ALWAYS QUEUED AND DEQUEUED IN NUMERICAL ORDER REGARDLESS OF THE ORDER IN WHICH THEY WERE ENTERED.

## 6.5 ERRORS UPDATE EVENT

-----

AT ANY TIME, WHETHER THE EXERCISER IS IN 'EXERCISE' MODE OR COMMAND MODE, THE RECEIVE EVENT IS ACTIVE. THEREFORE, RECEIVER ERRORS CAN OCCUR AT ANY TIME. HOWEVER, TRANSMITTER ERRORS CAN ONLY OCCUR WHEN THE EXERCISER IS 'GOING'. WHEN AN ERROR OCCURS, OF THE TRANSMITTER TYPE, THE TRANSMITTER COMMAND REGISTER (TCR) IS READ TO GET THE ADDRESS OF THE CONNECTED RECEIVER. THIS IS USED TO DECIDE WHICH TRANSMITTER ERROR TABLE LOCATION TO INCREMENT ALONG WITH THE ERROR NUMBER. THIS UPDATE IS ACCOMPLISHED AT THE ACTUAL TIME THAT THE ERROR IS DISCOVERED. WHEN AN ERROR OF THE RECEIVE TYPE OCCURS THE RECEIVER COMMAND REGISTER (RCR) IS READ TO GET THE ADDRESS OF THE CONNECTED TRANSMITTER. AGAIN, THIS IS USED TO DETERMINE THE CORRECT TABLE LOCATION TO INCREMENT.

AGAIN, PLEASE NOTE THAT THE 'GO' COMMAND CLEARS BOTH THE TRANSMITTER ERROR TABLES AND THE RECEIVER ERROR TABLES.

ANOTHER FUNCTION OF THE ERRORS EVENT IS TO UPDATE THE 'SUMMARY' TABLE ACCORDING ONLY TO THE ERROR NUMBER.

THERE ARE, THEN, ACTUALLY TWO ERROR EVENTS: ONE FOR TRANSMITTER ERRORS, AND ONE FOR RECEIVER ERRORS.

## 6.6 SPECIAL EVENTS

-----

DURING AN EXERCISE RUN, THERE ARE TWO INTERRUPTS THAT CAN CAUSE PRINTOUTS ON THE CONSOLE. ONE OF THEM IS MASTER GOING DOWN. THIS WILL CAUSE THE CALLING OF A 'SPECIAL' EVENT TO PRINT THE MESSAGE:

\*\*\* MASTER DOWN \*\*\*

AND RETURN THE EXERCISER TO COMMAND MODE. THE OTHER INTERRUPT IS CAUSED BY THIS UNIT BECOMING 'MASTER' AFTER HAVING BEEN 'SECONDARY'. THIS WILL CAUSE THE CALLING OF ANOTHER 'SPECIAL' EVENT TO PRINT THE MESSAGE:

\*\* THIS UNIT HAS BECOME 'NEW MASTER' \*\*

AND LEAVE THE EXERCISER IN 'EXERCISE' MODE.

APPENDIX A, B, C, D



OVERALL FLOW

[S]---START

I  
LOAD & TRY  
DEVICE ADDRESSES

-----  
I  
INITIALIZE

-----  
I  
RESTART

[A]---MAIN LOOP

I  
TIO NOT  
EMPTY

<PROCHR>  
PROCESS  
CHARACTER

-----  
I  
PRCTCC  
I  
PRDEL  
I  
PRCTLS  
I  
PRCTLO  
I  
PRCH-LF  
I  
PRCTLU  
I  
PRCTLO  
I  
-----

I  
TOO NOT  
EMPTY


-----  
I  
DEQUEUE TOO  
I  
TO TTY IF  
I  
READY  
I  
-----

I  
QLDEV  
EVENT SET


-----  
I  
LOAD ADDRESS  
I  
QUEUE. IF NO-  
I  
THING LOADED,  
I  
FLAG ERROR, &  
I  
DON'T ALLOW  
I  
STARTUP  
I  
-----

I  
DATGEN  
EVENT SET

-----  
I  
GENERATE NEW  
I  
RANDOM DATA  
I  
TABLE FOR NEXT  
I  
5 CYCLES.  
I  
-----

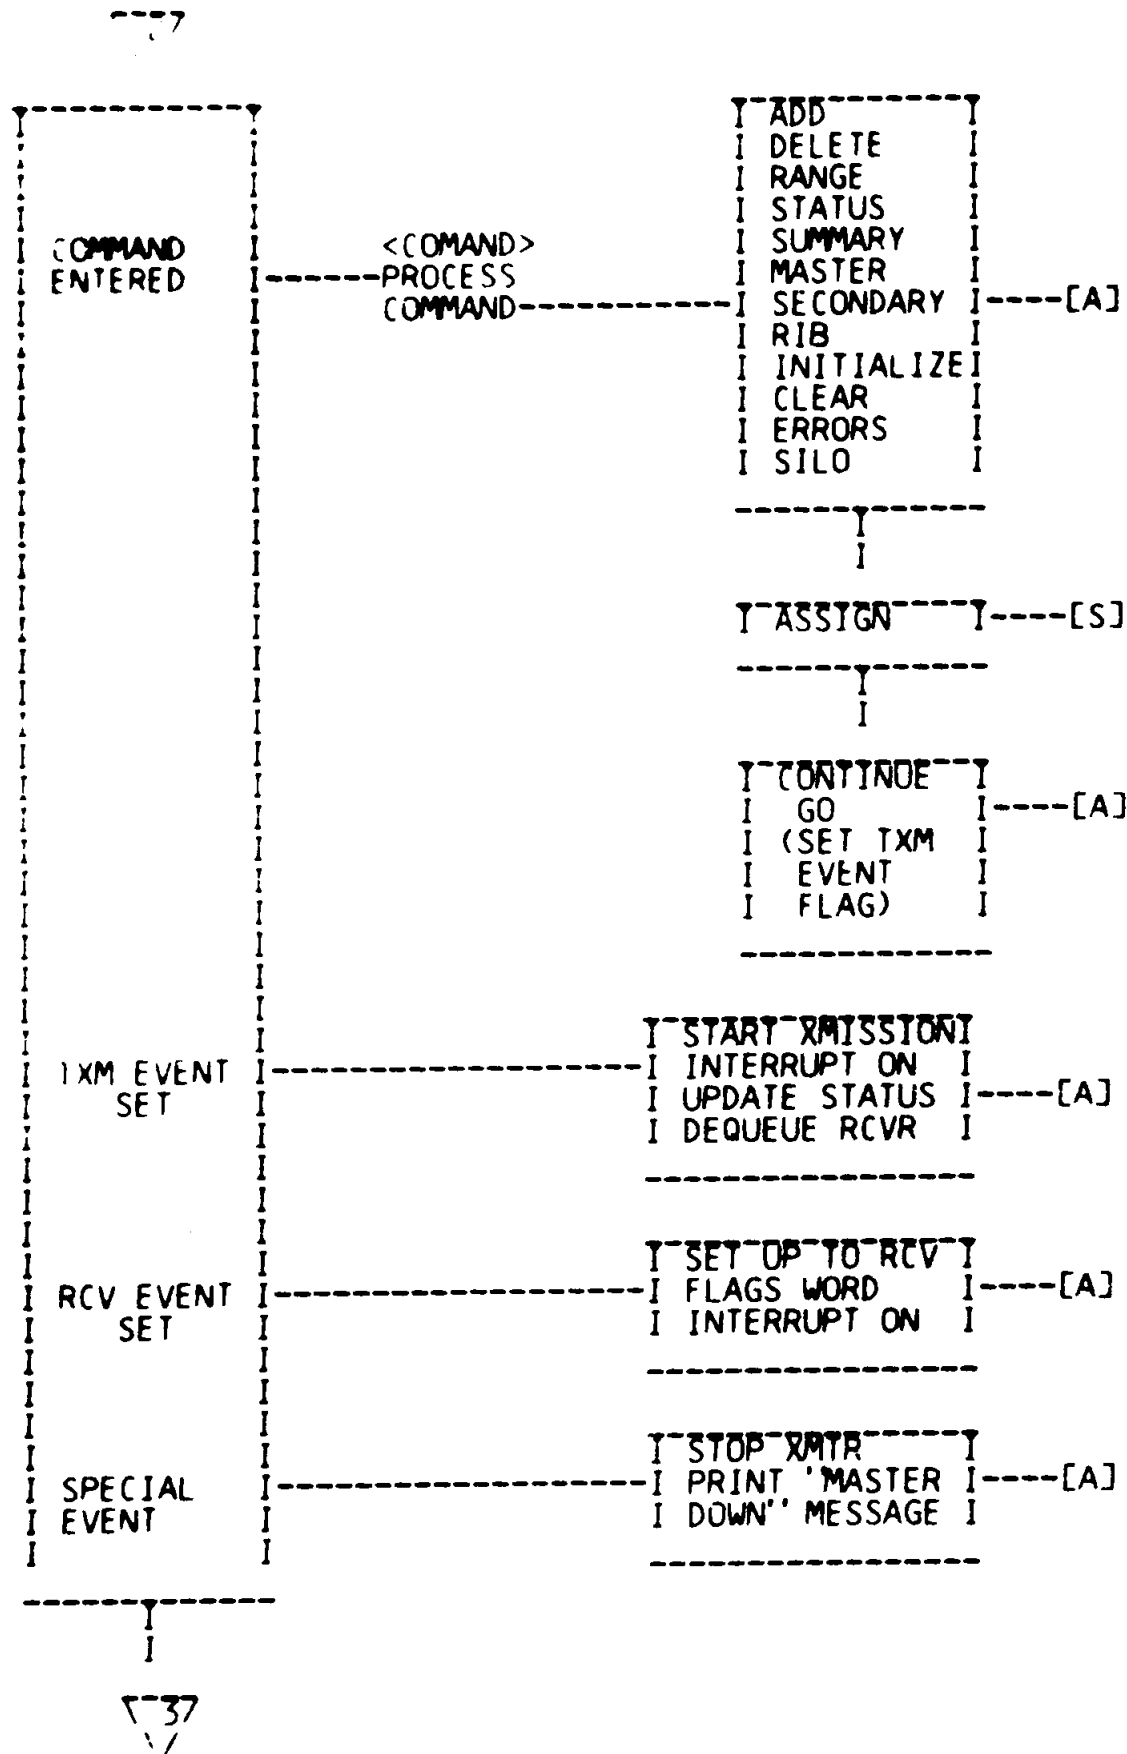

37  
V

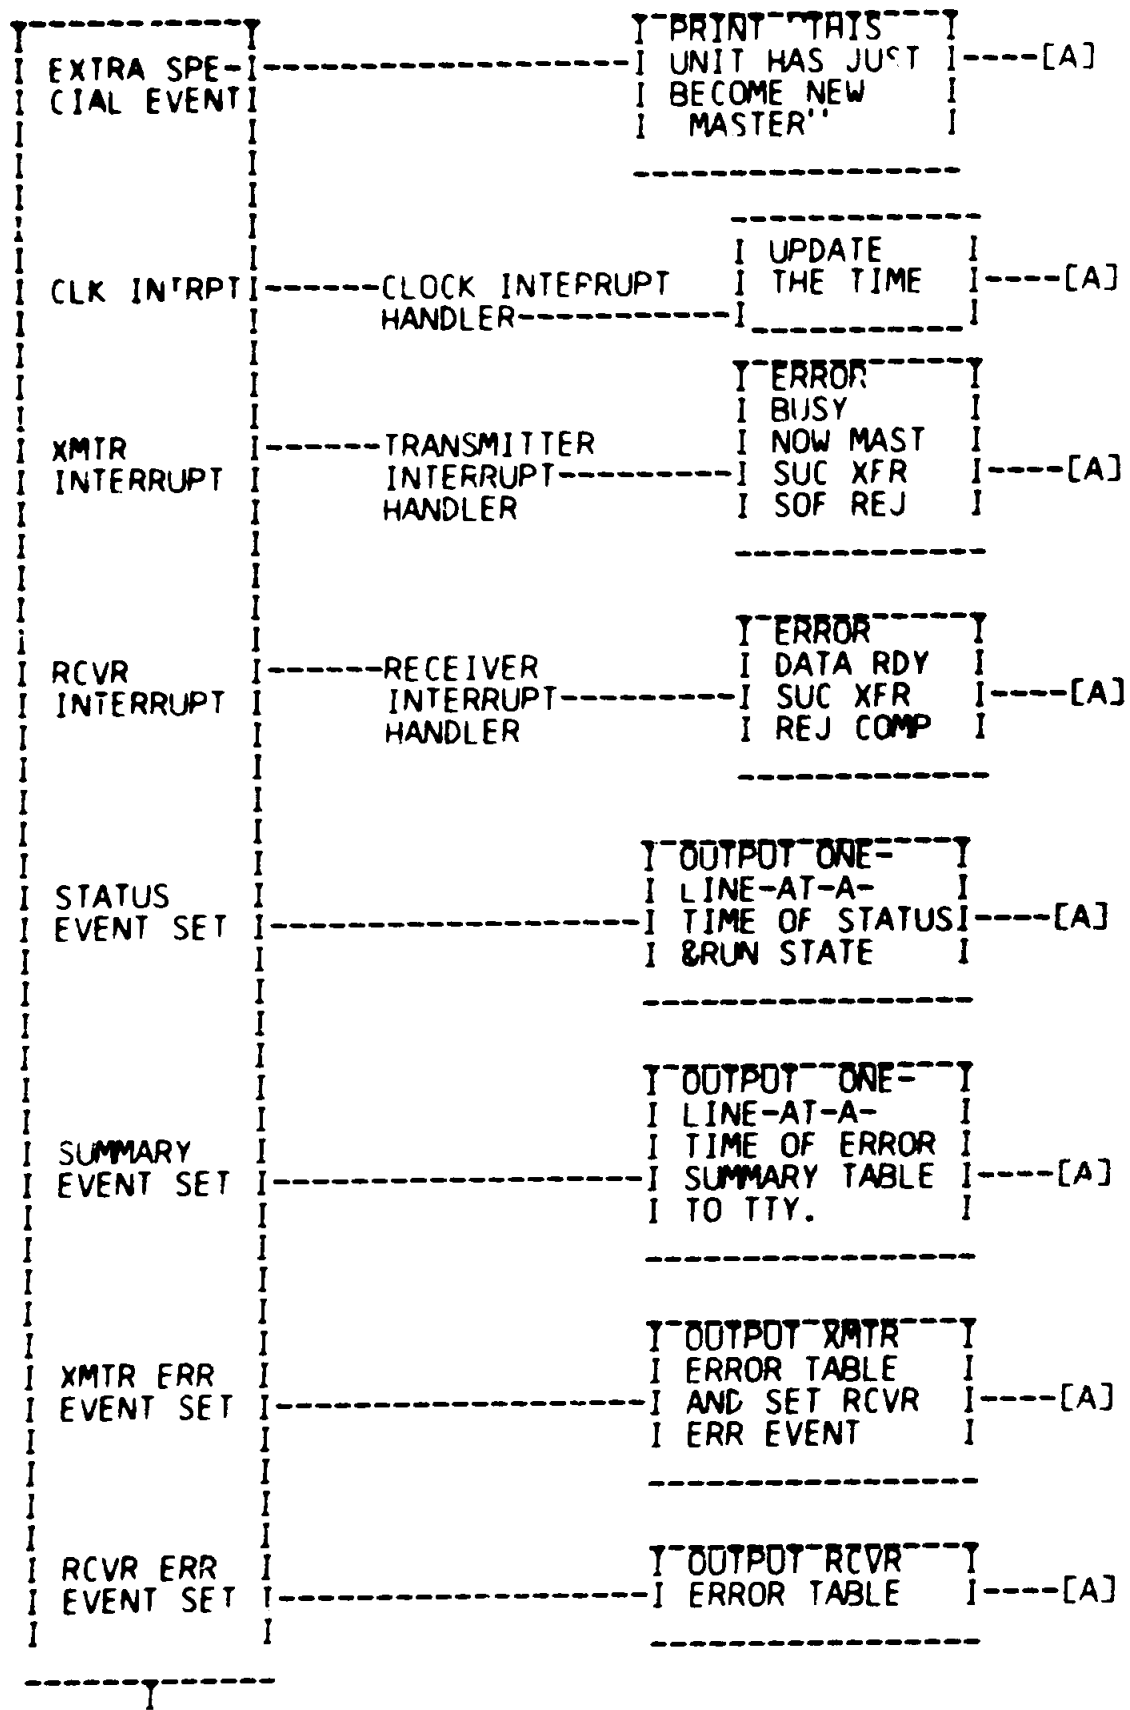



## EXERCISER COMMANDS

## CONTROL CHARACTERS

CHARACTER	ECHOES	EFFECT
CNTRL-C	^C	ENTER COMMAND INPUT MODE
CNTRL-O	^O	THROW AWAY TTY OUTPUT
CNTRL-U	^U	DISCARD CURRENT INPUT LINE
CNTRL-S		SUSPEND TTY OUTPUT
CNTRL-Q		RESUME TTY OUTPUT
RUBOUT	\	DELETE LAST INPUT CHARACTER
CAR RET	<CR, LF>	PERFORM COMMAND JUST ENTERED
LINE FEED	<CR, LF>	SAME AS CAR RET

B-2

## COMMANDS

COMMAND	ARGUMENTS	MINIMUM	EFFECT
-----	-----	-----	-----
[AD]D	A B C - N	AD A	ADD ADDRESSES A B C - N
[AS]SIGN	ADR VCT ADR VCT	AS	ASSIGN UNIBUS ADDRESSES AND VECTORS FOR TRANSMITTER AND RECEIVER.
[CL]EAR	-	CL	CLEAR THE STATUS TABLE
[CO]NTINUE	-	CO	CONTINUE EXERCISING
[D]ELETE	A B C - N	DA	DELETE ADDRS A B C - N
[E]RRORS	-	E	PRINT ERRORS TABLES
[G]O	-	G	START THE EXERCISER
[I]NITIALIZE	-	I	INIT THE EXERCISER
[M]ASTER	SET	MS	SET 'MASTER'
[M]ASTER	CLEAR	MC	CLEAR 'MASTER'
[RA]NGE	LOW HI	RA L H	ADD RANGE OF ADDRESSES FROM LOW TO HIGH INCLUSIVE.
[RI]B	SET	RI S	SET 'RIB'
[RI]B	CLEAR	RI C	CLEAR 'RIB'
[SE]CONDARY	SET	SE S	SET 'SECONDARY'
[SE]CONDARY	CLEAR	SE C	CLEAR 'SECONDARY'
[SI]LO	-	SI	CLEAR SILO; SET AUTO ADDR
[SI]LO	A B C - N	SI A	LOAD SILO WITH A B C - N
[ST]ATUS	-	ST	PRINT STATUS TABLE
[SU]MMARY	-	SU	PRINT SUMMARY TABLE

ERROR DESCRIPTIONS  
-----

ERROR NUMBER	DESCRIPTION
-----	-----
1	ERRONEOUS INTERRUPT FROM TRANSMITTER
2	NON EXISTANT LOC. ERROR IN XMTR
3	MEM OVERFLOW ERROR IN TRANSMITTER
4	XMTR TXM ERROR: RCVR ACCEPTED A NULL
5	XMTR TXM ERROR: RCVR HAS GONE OFF-LINE
6	XMTR TXM ERROR: WORD OR C.R.C. REJECTED
7	XMTR TXM ERROR: MISCELLANEOUS TXM ERROR
10	MASTER DOWN
11	TRANSMITTER TIMED OUT
12	SILO OVERRUN ERROR IN TRANSMITTER
13	MESSAGE TRUNCATED UNEXPECTEDLY
14	MESSAGE FAILED TO BE TRUNCATED
15	ERRONEOUS REJECT BY RECEIVER
16	UNKNOWN RECEIVER INTERRUPT OCCURRED
17	NON-EXISTANT LOC. ERROR IN XMTR
20	MEM OVERFLOW ERROR IN RECEIVER
21	RCVR TXM ERROR: XMTR HAS GONE OFF-LINE
22	RCVR TXM ERROR: RCVR C.R.C. ERROR
23	RCVR TXM ERROR: FIRST WORD INVALID
24	RECEIVER DETECTED INVALID PARITY.
25	RECEIVER TIMEOUT ERROR OCCURRED
26	RECEIVER GOT TOO MANY WORDS
27	DATA WORD RECEIVED WAS BAD
30	RECEIVER GOT TOO FEW WORDS

D-1

## STATISTICAL INFORMATION

STARTING ADDRESS	200
RESTARTING ADDRESS	204
SWITCH OPTIONS	NONE
PROGRAM SIZE	APPROX 7K
MEMORY OCCUPIED	
LOW BOUNDARY	00000
HIGH BOUNDARY	34456

LOCATIONS TO CHANGE FOR  
DIFFERENT DEVICE ADDRESSES

DEVICE	CHANGE LOCATION
KEYBOARD STATUS	16146
KEYBOARD DATA	16150
TTY STATUS	16152
TTY DATA	16154
KEYBOARD VECTOR	16156
LINE CLK STATUS	16160
XMTR PRIORITY	2326
RCVR PRIORITY	2340
KBD PRIORITY	2352
USEFUL LOCATIONS	ADDRESS
XMTR DATA BUFFER	20676
RCVR DATA BUFFER	22736
DATA SEED IN TRANSMITTER	17736
RANDOM MULTIPLIER	17756
RANDOM INCREMENT	17760



286	DEFINITIONS AND DEVICE INFO
369	PCL11 EXERCISER MAIN PROCEDURE
486	MAIN LOOP
543	COMMAND PROCESSORS:
544	COMMAND PROC. FOR SILO (LOAD)
641	COMMAND PROC. FOR MASTER, SECONDARY AND R.I.B.
710	COMMAND PROC. FOR RANGE
755	COMMAND PROC. FOR ADD AND DELETE
822	COMMAND PROC. FOR CLEAR, STATUS, AND CONTINUE
891	COMMAND PROC. FOR INIT, SUMMARY, AND GO
1005	COMMAND PROC. FOR "ASSIGN"
1100	COMMAND DECODER AND PROCESSOR
1196	RECEIVER ADDRESS QUEUE LOADER ROUTINE
1240	DATA GENERATION (RANDOM) ROUTINE
1285	MULTIPLY ROUTINE FOR DATA GENERATION
1319	TRANSMIT MODULE
1531	RECEIVER MODULE
1714	STATUS MODULE
1807	TRANSMITTER ERRORS MODULE
1862	RECEIVER ERRORS MODULE
1913	SUMMARY MODULE
1969	ERROR UPDATE ROUTINES
1970	TRANSMITTER ERRORS
2008	RECEIVER ERRORS
2047	UTILITY ROUTINES
2048	PROCESS AN INPUT CHARACTER FROM THE TTY
2070	TTY INPUT CHARACTER PROCESSING ROUTINES
2206	TTY OUTPUT HANDLERS
2224	TTY INPUT INTERRUPT PROCESSORS
2235	MESSAGE PRINT ROUTINE
2264	DATA AREAS
2471	KEYWORD TABLE
2532	SOME MORE ASCII STORAGE:
2588	AUXILIARY ROUTINES
2589	CHARACTER PROCESSOR
2632	BINARY TO ASCII CONVERSION
2735	GENERAL BINARY TO ASCII CONVERSION
2784	DOUBLE PRECISION BINARY TO ASCII
2871	DOUBLE PRECISION DIVIDE ROUTINE
2907	INTEGER DIVIDE MAGNITUDE NUMBERS
2952	QUEUE HANDLING ROUTINES
3075	COMMAND PROCESSOR INITIATING ROUTINE
3120	KEYWORD PROCESSING ROUTINE
3209	REGISTER SAVE & RESTORE ROUTINES
3236	LEXICAL SCAN ROUTINE

1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56

.TITLE CZPLACO PCL11 EXERCISER V02C  
.IDENT /0003/ ;DRCMAC.MAC 6-JAN-76  
.NLIST TTM  
.NLIST ME

: KEYWD MACRO

: THIS MACRO DETERMINES THE ROUTINE ADDRESS  
: ASSOCIATED WITH THE SYNTACTIC OBJECT OBJ, ACCORDING  
: TO A KEYWORD TABLE POINTED TO BY KWTABLE.

: ON RETURN, IF OBJ WAS IN THE TABLE, THEN THE PS  
: C BIT = 0 & THE ROUTINE ADDRESS IS AT THE TOP OF THE  
: STACK. IF NOT, THEN C=1 & @SP = 0.

: EACH KEYWORD IN THE TABLE HAS ASSOCIATED WITH IT A  
: MINIMUM LENGTH SPECIFYING THE MINIMUM NUMBER  
: OF CHARACTERS IN THE KEYWORD THAT MUST MATCH  
: THOSE IN OBJ FOR A MATCH TO HAVE BEEN DEEMED  
: FOUND. IF OBJ CONTAINS MORE THAN THIS MINIMUM  
: NO. OF CHARACTERS, THOUGH, ALL CHARACTERS IN OBJ MUST  
: CORRESPOND TO THE TABLE KEYWORD FOR A MATCH TO  
: HAVE BEEN DEEMED FOUND. THUS, FOR EXAMPLE, IF  
: 'REPEAT' APPEARS IN THE KEYWORD TABLE WITH A  
: MINIMUM LENGTH OF 3 ASSOCIATED WITH IT, THEN  
: 'REP', 'REPE', 'REPEA', & 'REPEAT' WILL ALL MATCH IT, BUT  
: 'R', 'RPT', 'REPEET', & 'REPEATER' WILL NOT.

: THE KEYWORD TABLE CONSISTS OF A SET OF ENTRIES AS FOLLOWS:

OFFSET	TYPE	ROUTINE ADDRESS
0	WORD	ROUTINE ADDRESS
2	BYTE	MINIMUM LENGTH OF KEYWORD
3	BYTE	FULL LENGTH OF KEYWORD
4	STRING	KEYWORD

: ENTRIES ARE STORED CONSECUTIVELY IN THE TABLE. EACH ENTRY  
: MUST BEGIN ON A WORD BOUNDARY. THE KEYWORD OF  
: THE PREVIOUS ENTRY MAY HAVE TO HAVE A BYTE (CONTAINING  
: ANYTHING) APPENDED TO IT TO ACCOMPLISH THIS.  
: ENTRIES MUST BE ARRANGED IN ALPHABETICAL  
: ORDER (MORE SPECIFICALLY, IN ASCII COLLATING SEQUENCE).  
: THE TABLE IS ENDED BY AN ENTRY WITH A FULL LENGTH  
: OF 0.

.MACRO KEYWD OBJ, KWTABLE  
.IF NR OBJ  
MOV OBJ, -(SP)  
.IF B KWTABLE  
.ERROR ;CANNOT SPECIFY OBJ & NOT TABLE ADDRESS.  
MOV #1, -(SP) ;IF RUN, THIS WILL CAUSE TRAP.  
.ENDC  
.ENDC  
.IF NB KWTABLE  
MOV KWTABLE, -(SP)  
.ENDC

57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112

```
JSR PC,KEYWD  
.ENDM ;KEYWD
```

-----  
: LXSCAN MACRO

: THIS MACRO CALLS THE ROUTINE LXSCAN TO CONVERT THE CHARACTER  
: STRING SPECIFIED BY STR INTO ITS CONSTITUENT SYNTACTIC OBJECTS.  
: STR IS AN ASSEMBLER EXPRESSION SPECIFYING THE ADDRESS OF THE  
: BEGINNING OF THE ASCII STRING TO BE CONVERTED. THE STRING  
: MUST BE ENDED BY A CARRIAGE RETURN CODE.

```
:  
: .MACRO LXSCAN STR  
: MOV STR,R1  
: JSR R1,,XSCAN  
:  
: .ENDM ;LXSCAN
```

-----  
: PROC MACRO

: THIS MACRO DEFINES THE ENTRY POINT FOR A PROCEDURE. THE PARAMS  
: SPECIFIED WILL BE GIVEN THEIR CORRESPONDING OFFSETS RELATIVE TO R5.  
: THUS, A PARAMETER PP CAN BE REFERENCED IN THE PROCEDURE BY THE  
: ASSEMBLER EXPRESSION '@PP(R5)'. THE PROCEDURE CAN BE CALLED  
: USING THE CALL MACRO.

```
:  
: .MACRO PROC PNAME,PARAMS  
ZX1 = 0  
: .IRP ZX2 <PARAMS>  
ZX1 = ZX1+2  
: .IRP ZX3 \ZX1  
ZX2 = ZX3  
: .NLIST  
: .ENDM  
: .ENDM ;ZX2  
: .LIST  
PNAME: ;**ENTRY POINT**  
: .NLIST  
: .ENDM ;PROC
```

-----  
: RETURN MACRO

: THIS MACRO RETURNS FROM A PROCEDURE. IF ANSWR IS SPECIFIED IT  
: WILL BE LOADED INTO R0 BEFORE RETURNING.

```
: .MACRO RETURN ANSWR
```

113  
114  
115  
116  
117  
118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

```
.IF NB ANSWR  
MOV ANSWR,R0  
.ENDC  
RTS PC  
.ENDM :RETURN
```

-----  
: CALL MACRO  
: THIS MACRO CALLS A PROCEDURE, SUBR, WITH AN ARGUMENT LIST SPECIFIED  
: BY ARGS. ARGS IS A LIST OF ADDRESSES WHICH WILL BE INCLUDED  
: IN THE ASSEMBLED EXPANSION OF THIS MACRO.  
: THE CALLING SEQUENCE GENERATED IS FORTRAN COMPATIBLE. R5 IS LEFT  
: INTACT THROUGH THE EXECUTION OF THIS MACRO. OTHER REGISTERS  
: ARE DESTROYED.

```
.MACRO CALL SUBR,ARGS,?PLIST,?ZXCALL  
JSR R5,ZXCALL  
PLIST: BR ZXCALL  
.IF NB <ARGS>  
.WORD ARGS  
.ENDC  
ZXCALL: JSR PC,SUBR  
MOV (SP)+,R5  
  
.ENDM :CALL
```

-----  
: MACRO TO MULTIPLY A NUMBER BY A CONSTANT.  
: THE NUMBER IN DST IS MULTIPLIED BY THE VALUE OF THE EXPRESSION  
: CONST; THE RESULT IS LEFT IN DST. A TEMPORARY LOCATION MAY  
: BE SPECIFIED AT WORK WHICH WILL BE USED IN THE MACRO EXPANSION  
: IF NECESSARY. IF WORK IS NOT SPECIFIED & A TEMPORARY LOCATION  
: IS NEEDED, A STACK ELEMENT WILL BE ALLOCATED (& SUBSEQUENTLY  
: DEALLOCATED) FOR THE PURPOSE. THE MACRO GENERATES A SERIES OF  
: SHIFT & ADD INSTRUCTIONS IN-LINE TO ACCOMPLISH THE MULTIPLICATION.

```
.MACRO MULT CONST,DST,WORK  
ZX1 = 0 ;FLAG: 0-->LEAST SIG 1-BIT NOT TESTED  
: YET; 1 >OPPOSITE.  
ZX2 = CONST ;COPY CONSTANT FOR SHIFTING.  
.IF Z ZX2  
CLR DST  
.MEXIT  
.ENDC  
  
.REPT 16.  
.IF NZ ZX2&1 ;IF BIT 0 = 1  
ZX2 - ZX2/2 ;SHIFT CONSTANT RIGHT 1 POSITION.  
.IF Z ZX1 ;IF LEAST SIG 1-BIT  
.IF NZ ZX2 ;IF NOT MOST SIG 1-BIT  
.IF NB WORK ;IF WORK SPECIFIED
```

169  
 170  
 171  
 172  
 173  
 174  
 175  
 176  
 177  
 178  
 179  
 180  
 181  
 182  
 183  
 184  
 185  
 186  
 187  
 188  
 189  
 190  
 191  
 192  
 193  
 194  
 195  
 196  
 197  
 198  
 199  
 200  
 201  
 202  
 203  
 204  
 205  
 206  
 207  
 208  
 209  
 210  
 211  
 212  
 213  
 214  
 215  
 216  
 217  
 218  
 219  
 220  
 221  
 222  
 223  
 224

```

      MOV     DST,WORK
      .IFF   MOV     DST,-(SP)           ;ELSE IF WORK BLANK
      .ENDC
      .IFF   .MEXIT                     ;END [.IF NB WORK]
      .ENDC
      ZX1    -      1                   ;ELSE IF MOST SIG 1-BIT
      .IFF   .MEXIT                     ;END [.IF NZ ZX2]
      .ENDC
      .IF    NZ     ZX2                 ;INDICATE NO LONGER LEAST SIG 1-BIT.
      .IF    NB     WORK                ;ELSE IF NOT LEAST SIG 1-BIT
      ADD    DST,WORK                   ;IF NOT MOST SIG 1-BIT
      .IFF   ADD    DST,WORK           ;IF WORK SPECIFIED
      .ENDC
      .IFF   ADD    DST,@SP            ;ELSE IF WORK BLANK
      .ENDC
      .IFF   ADD    DST,@SP            ;END [.IF NB WORK]
      .ENDC
      .IF    NB     WORK                ;ELSE IF MOST SIG 1-BIT
      ADD    WORK,DST                  ;IF WORK SPECIFIED
      .IFF   ADD    (SP)+,DST          ;ELSE IF WORK BLANK
      .ENDC
      .MEXIT                           ;END [.IF NB WORK]
      .ENDC
      .ENDC
      .IFF   =      ZX2/2              ;END [.IF NZ ZX2]
      .ENDC
      ASL    DST                       ;END [.IF Z ZX1]
      .ENDM
      .ENDM
      .MULT
  
```

```

;-----
      .MACRO HEDING NAM,VER,EDIT,PATCH
      .TITLE HEDING
      .IDENT /VER'EDIT'PATCH/
      .CSECT HEDING
      .GLOBL HEDING,HEDLEN
HEDING: .ASCII /NAM'VER'-'EDIT'/
      .IF   B      PATCH
      .BYTE 40
      .IFF   .ASCII /PATCH/
      .ENDC
HEDLEN .ENDM
      .ENDM
;MULTIPLY MACRO FOR UNSIGNED MULTIPLY ROUTINE
  
```

```

      .MACRO MULT A,B
      MOV   A,-(SP)           ;SAVE A ON STACK
      MOV   B,R4              ;SAVE B IN R4
      JSR   R4,MLI           ;PERFORM MULTIPLICATION
      .WORD +2
      MOV   (SP)+,B          ;PUT PRODUCT INTO B
      .ENDM
  
```

225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242  
243  
244  
245  
246  
247  
248  
249  
250  
251  
252  
253  
254  
255  
256  
257  
258  
259  
260  
261  
262  
263  
264  
265  
266  
267  
268  
269  
270  
271  
272  
273  
274  
275  
276  
277  
278  
279  
280

000001

```
.ENDM ;MULP

;BOARD INIT MACRO FOR CLEARING PCL HARDWARE
;BOARD INIT RECEIVER OR TRANSMITTER.

.MACRO BDINIT DEV
.NLIST
.IF IDN <DEV>,<XMTR>
BIS #B01,@TCR
.IFF
.IF IDN <DEV>,<RCVR>
BIS #B01,@RCR
.IFF
.ERROR ;BAD ARGUMENT FOR BDINIT
.ENDC
.ENDC

.LIST
.ENDM

N = 1 ;INITIAL ERROR NUMBER

;ERROR MACROS

.MACRO ERROT P
ERADR
CALL ERRMOD,<P,ERADR> ;UPDATE ENTRIES FOR ERROR P
N
.NLIST

;***** XMTR ERROR P *****

.NLIST
.ENDM

.MACRO ERROR P
ERADR =
CALL ERRMOD,<P,ERADR>
N
.LIST

;***** RCVR ERROR P *****

.NLIST
.ENDM

;REGISTER SAVE MACRO

.MACRO REGSAV
JSR R5,REGSAV
.ENDM

;REGISTER RESTORE MACRO
```

(ZPLACO PCL11 EXERCISER V02C  
(ZPLAC.P11 08-JUN-79 15:55

MACY11 30A(1052) 25-JUN-79 08:52 <sup>M 4</sup> PAGE 1-5

STG 5/14/79

281  
282  
283  
284

.MACRO REGRES  
JSR R5,REGRES  
.ENDM

.SBTTL DEFINITIONS AND DEVICE INFO

.IDENT '02'

:COPYRIGHT AUGUST, 1975  
:COMPUTER SPECIAL SYSTEMS,  
:DIGITAL EQUIPMENT OF CANADA LTD.

: VARIABLE SYMBOL DEFINITIONS.

: DEVICE DEFAULT INFORMATION.

TTDEV = 177560  
TTVCTR = 60  
TTPRIO = 4  
PCLTXM = 164200  
PCLRCV = 164220  
RCVECT = 174  
TXVECT = 170  
TXPRIO = 5  
RCPRIO = 5

:ADDR OF RCSR FOR TTY.  
:INPUT VECTOR ADDR FOR TTY.  
:PRIORITY LEVEL FOR TTY.

: QUEUE SIZES.

TISIZE = 20.  
TOSIZE = 256.  
AOSIZE = 32.

:TIQ SIZE.  
:TOQ SIZE.  
:ADR QUEUE SIZE

QELEMS = 0  
QSIZE = 2  
QTOP = 4  
QBOT = 6  
QFRONT = 10  
QBACK = 12

:#ELEMENTS PRESENTLY IN QUEUE.  
:#ELEMENTS IN QUEUE SPACE.  
:ADDR OF 1ST WORD OF QUEUE SPACE  
:=QTOP+(QSIZE\*2)  
:ADDR OF FRONT ELEMENT OF QUEUE.  
:ADDR OF BACK ELEMENT OF QUEUE.

: REGISTER DEFINITIONS.

R0 = %0  
R1 = %1  
R2 = %2  
R3 = %3  
R4 = %4  
R5 = %5  
SP = %6  
PC = %7  
PS = 177776  
SR = 177570

:SWITCH REGISTER.

:SPECIAL CHARACTER DEFINITIONS:

LF. = 12  
CR. = 15  
CTL.O = 17  
CTL.U = 25  
CTL.C = 3  
CTL.Q = 21  
CTL.S = 23  
RUBOUT = 177

:CR OR LF TO END LINE.  
:..  
:AO TO THROW AWAY TTY OUTPUT.  
:AU TO DELETE LINE.  
:CNTRL-C TO START INPUT.(^C)  
:CNTRL-Q TO RESUME PRINTOUT  
:CNTRL-S TO SUSPEND PRINTOUT  
:RUB OUT TO DELETE CHARACTER.

286  
287  
288  
289  
290  
291  
292  
293  
294  
295  
296  
297 177560  
298 000060  
299 000004  
300 164200  
301 164220  
302 000174  
303 000170  
304 000005  
305 000005  
306  
307  
308 000024  
309 000400  
310 000040  
311  
312  
313  
314 000000  
315 000002  
316 000004  
317 000006  
318 000010  
319 000012  
320  
321  
322 000000  
323 000001  
324 000002  
325 000003  
326 000004  
327 000005  
328 000006  
329 000007  
330 177776  
331 177570  
332  
333  
334 000012  
335 000015  
336 000017  
337 000025  
338 000003  
339 000021  
340 000023  
341 000177



342  
343  
344 100000  
345 004000  
346 000200  
347 000100

: DEVICE BIT DEFINITIONS.  
ERR = 100000  
BUSY - 4000  
DONE - 200  
INTENB - 100

;BIT DEFINITIONS:

349			
350			
351	100000	B15	100000
352	040000	B14	40000
353	020000	B13	20000
354	010000	B12	10000
355	004000	B11	4000
356	002000	B10	2000
357	001000	B09	1000
358	000400	B08	400
359	000200	B07	200
360	000100	B06	100
361	000040	B05	40
362	000020	B04	20
363	000010	B03	10
364	000004	B02	4
365	000002	B01	2
366	000001	B00	1
367			

```
369 .SBTTL PCL11 EXERCISER MAIN PROCEDURE
370
371 .ENABL ABS
372 000000
373 000200 .REPT 128.
374 .WORD .+2,0 ;TRAP CATCHERS
375
376 .ENDR
377
378 200
379 000200 000167 001574 JMP PCLEX ;PROGRAM STARTS AT 200
380 000204 012706 002000 MOV #STKTOP,SP ;AND RESTARTS AT 204
381 000210 000167 002342 JMP PCREST
382
383 002000 .STKTOP 2000
384 002000
385
386 002000 PCLEX: ;****START HERE****
387 002000 012706 002000 MOV #STKTOP,SP ;SET STACK POINTER TO TOP
388 002004 016700 014166 MOV TXDEV,RO ;PREPARE TO GENERATE TXM ADDR
389 002010 010067 014072 MOV RO,TCR ;GENERATE TCR ADDRESS
390 002014 062700 000002 ADD #2,RO
391 002020 010067 014064 MOV RO,TSR ;GENERATE TSR ADDRESS
392 002024 062700 000002 ADD #2,RO
393 002030 010067 014056 MOV RO,TSDB ;GENERATE TSDB ADDRESS
394 002034 062700 000002 ADD #2,RO
395 002040 010067 014050 MOV RO,TSBC ;GENERATE TSBC ADDRESS
396 002044 062700 000002 ADD #2,RO
397 002050 010067 014042 MOV RO,TSBA ;GENERATE TSBA ADDRESS
398 002054 062700 000002 ADD #2,RO
399 002060 010067 014034 MOV RO,TMMR ;GENERATE TMMR ADDRESS
400 002064 005200 INC RO
401 002066 010067 014030 MOV RO,TMMRH ;AND TMMR HIGH BYTE
402 002072 005200 INC RO
403 002074 010067 014024 MOV RO,TSCRC ;GENERATE TSCRC ADDRESS
404 002100 016767 014074 014034 MOV TXVEC,TXVVEC ;GENERATE TXVVEC ADDRESS
405
406 002106 016700 014070 MOV RCDEV,RO ;PREPARE TO GENERATE RCVR ADDR
407 002112 010067 014010 MOV RO,RCR ;GENERATE RCR ADDRESS
408 002116 062700 000002 ADD #2,RO
409 002122 010067 014002 MOV RO,RSR ;GENERATE RSR ADDRESS
410 002126 062700 000002 ADD #2,RO
411 002132 010067 013774 MOV RO,Rddb ;GENERATE Rddb ADDRESS
412 002136 062700 000002 ADD #2,RO
413 002142 010067 013766 MOV RO,RDBC ;GENERATE RDBC ADDRESS
414 002146 062700 000002 ADD #2,RO
415 002152 010067 013760 MOV RO,RDBA ;GENERATE RDBA ADDRESS
416 002156 062700 000004 ADD #4,RO
417 002162 010067 013752 MOV RO,RDCRC ;GENERATE RDCRC ADDRESS
418 002166 016767 014012 013750 MOV RCVEC,RCVVEC ;GENERATE RCVVEC ADDR
```

```
420 002174  
421 002174 012706 002000  
422 002200 012737 003326 000004  
423 002206 012737 000340 000006  
424 002214 105067 015430  
425 002220 105067 015425  
426 002224 005067 015460  
427  
428  
429  
430  
431  
432  
433  
(1) 002230 005067 014314  
(1) 002234 016767 014314 014316  
(1) 002242 016767 014306 014312  
(1) 002250 005067 014360  
(1) 002254 016767 014360 014362  
(1) 002262 016767 014352 014356  
434 002270 012737 000340 177776  
435 002276 012777 007566 013636  
436 002304 012777 011112 013632  
437 002312 012777 015652 013636  
438 002320 016700 013616  
439 002324 012760 000240 000002  
440 002332 016700 013606  
441 002336 012760 000240 000002  
442 002344 016700 013606  
443 002350 012760 000200 000002  
444 002356  
445 002372  
446 002406  
447 002424  
448 002440  
449 002456  
450 002472 012737 002536 000004 PRST:  
451 002500 005067 015154  
452 002504 005777 013450  
453 002510 012767 177777 015142  
454 002516 012737 012224 000100  
455 002524 012737 000340 000102  
456 002532 000167 000020  
457 002536 022626 STR:  
458 002540 005067 015114  
459 002544 012737 000102 000100  
460 002552 005037 000102  
461 002556 005037 177776 PCREST:  
462 002562 012737 002670 000004  
463 002570 052767 100000 015114  
464 002576 052777 000100 013342  
465 002604 005067 015156  
466 002610 005067 015052  
467 002614 005067 015130  
468 002620 005067 015126  
469 002624 005067 015064
```

PCRST:  
MOV #STKTOP,SP  
MOV #ERTRAP,@#4  
MOV #340,@#6  
CLRB REQINP  
CLRB CMDENT  
CLR PCLGO  
LC <TI,TO>  
CLR LC'Q  
MOV LC'Q+QTOP,LC'Q+QFRONT  
MOV LC'Q+QTOP,LC'Q+QBACK  
NLIST  
ENDM  
CLR TIO  
MOV TIO+QTOP,TIO+QFRONT  
MOV TIO+QTOP,TIO+QBACK  
CLR TOQ  
MOV TOQ+QTOP,TOQ+QFRONT  
MOV TOQ+QTOP,TOQ+QBACK  
MOV #340,@#PS  
MOV #XMTINT,@TXMVEC  
MOV #RCVINT,@RCVVEC  
MOV #TTIINT,@TTVECT  
MOV TXMVEC,R0  
MOV #TXPRIO\*32.,2(R0)  
MOV RCVVEC,R0  
MOV #RCPRIO\*32.,2(R0)  
MOV TTVECT,R0  
MOV #TTPRIO\*32.,2(R0)  
CALL PNCRLF  
CALL PNCRLF  
CALL PNTLIN,<PCLEXM>  
CALL PNCRLF  
CALL PNTLIN,<RSTMSG>  
CALL PRINT  
MOV #STR,@#4  
CLR KWFLG  
TST @LCS  
MOV #-1,KWFLG  
MOV #CLKINT,@#100  
MOV #340,@#102  
JMP PCPEST  
CMP (SP)+,(SP)+  
CLR KWFLG  
MOV #102,@#100  
CLR @#102  
CLR @#PS  
MOV #TRAP4,@#4  
BIS #B15,RCVEV  
BIS #B06,@TRCSR  
CLR ESCFLG  
CLR QLDEV  
CLR RJCTF  
CLR TRNKF  
CLR SPCEV

\*\*\*\*\*RESTART HERE \*\*\*\*\*  
:RESET STACK POINTER  
:SET UP VECTOR FOR ADDRESS FHROR  
:CLR INPUT REQUEST  
:CLR COMMAND ENTERED FLAG  
:CLR XMTR GO FLAG  
:INITIALIZE IO QUEUES TO EMPT  
:DISABLE INTERRUPTS  
:::SET UP XMTR INTR VECTOR  
:::SET UP RCVR INTR VECTOR  
:::SET UP TTY INTR VECTOR  
:::SET TXM PRIORITY  
:::SET RCVR PRIORITY  
:::SET TTY PRIORITY  
:::PRINT TITLE MESSAGE  
:::<CR>&<LF>  
:::ENQUEUE RESTART ADDR MSG  
:::INITIALIZE TRANSMITTER  
:::SET UP TO TEST FOR CLOCK  
:::CLEAR KW11 FLAG  
:::ANY CLOCK?  
:::YES, SET KW11 FLAG  
:::SET UP CLK VECTOR  
:::AND CONTINUE  
:::NO CLOCK, CLEAR STACK  
:::CLR KW11 FLAG  
:::SET UP TO TRAP HALT  
:::ALLOW INTERRUPTS  
:CHANGE TRAP VECTOR FOR ERROR  
:SET RCVR EVENT FLAG  
:SET TTY KBD INTR ENAB  
:CLEAR CNTRL-C FLAG  
:CLR QUEUE LOAD EVENT FLAG  
:CLEAR REJECT FLAG  
:CLEAR TRUNCATE FLAG  
:CLEAR MST DWN EVENT

470	002630	005067	015062		CLR	XSPCEV		: CLR NOW MST EVENT
471	002634				RTRYA: CALL	PNCRLF		: ENQUEUE CR, & LF
472	002650				CALL	PRESC		: ENTER COMMAND MODE
473	002664	000167	000060		JMP	PCLOOP		: GO TO MAIN LOOP
474								
475								
476	002670	011667	015000		TRAP4: MOV	(SP),SUMSV		: SAVE TRAP ADDRESS
477	002674	162767	000002	014772	SUB	#2,SUMSV		: ALIGN IT -2
478	002702	012700	031127		MOV	#TRP4AD,R0		: SHOW OCT CONV RTN RIGHT ADDRESS
479	002706	016701	014762		MOV	SUMSV,R1		: FOR ASCII CHARS.
480	002712	004767	027746		JSR	PC,UCTJSP		
481	002716				CALL	PNTLIN,<TRPDMG>		: PRINT TRAP MESSAGE
482	002734	012706	002000		MOV	#STKTOP,SP		
483	002740	005037	177776		CLR	@PS		: LOWER PRIORITY
484	002744	000167	177664		JMP	RTRYA		

```
.SBTTL MAIN LOOP

486
487
488
489 002750 005767 013574 PCLOOP: TST TIQ ;IS TTY INPUT QUEUE EMPTY?
490 002754 001406 BEQ NXT0 ;YES, TEST ANOTHER FLAG
491 002756 CALL TTINP ;NO, PROCESS A CHARACTER
492 002772 105767 014653 NXT0: TSTB CMDENT ;HAS A COMMAND BEEN ENTERED?
493 002776 100006 BPL NXT1 ;NO, TEST ANOTHER FLAG
494 003000 CALL COMENT ;YES, PROCESS COMMAND
495 003014 005767 013614 NXT1: TST TOQ ;IS TTY OUTPUT QUEUE EMPTY?
496 003020 001406 BEQ NXT2 ;YES, TEST ANOTHER FLAG
497 003022 CALL TTOUT ;NO, OUTPUT A CHAR IF DEV RDY
498 003036 005767 014624 NXT2: TST QLDEV ;IS ADDR QUEUE EMPTY?
499 003042 100006 BPL NXT3 ;NO, TEST ANOTHER FLAG
500 003044 CALL ADQLD ;YES, LOAD ADDR QUEUE
501 003060 005767 014604 NXT3: TST DATGEV ;IS DATA GEN FLAG SET?
502 003064 100006 BPL NXT4 ;NO, TEST ANOTHER FLAG
503 003066 CALL DATGEN ;YES, GENERATE NEW RANDOM DATA
504 003102 005767 014576 NXT4: TST TXMEV ;IS XMTR EVENT FLAG SET?
505 003106 100006 BPL NXT5 ;NO, TEST ANOTHER FLAG
506 003110 CALL TXMIT ;YES, ENTER XMIT MODULE
507 003124 005767 014562 NXT5: TST RCVEV ;IS RCVR EVENT FLAG SET?
508 003130 100006 BPL NXT6 ;NO, TEST ANOTHER FLAG
509 003132 CALL RECV ;YES, ENTER RECVR MODULE
510 003146 005767 014542 NXT6: TST SPCEV ;IS SPECIAL EVENT FLAG SET?
511 003152 100006 BPL NXT7 ;NO, TEST ANOTHER FLAG
512 003154 CALL SPEC ;YES, HANDLE SPECIAL EVENT
513 003170 005767 014502 NXT7: TST STSEV ;IS STATUS EVENT FLAG SET?
514 003174 100006 BPL NXT8 ;NO, TEST ANOTHER FLAG
515 003176 CALL STATUS ;YES, OUTPUT STATUS
516 003212 005767 014454 NXT8: TST SUMEV ;IS SUMMARY EVENT FLAG SET?
517 003216 100006 BPL NXT9 ;NO, TEST ANOTHER FLAG
518 003220 CALL SUMRY ;YES, OUTPUT ERROR SUMMARY
519 003234 005767 014456 NXT9: TST XSPCEV ;IS EXTRA-SPECIAL EVENT SET?
520 003240 100006 BPL NXT10 ;YES, HANDLE NOW MASTER.
521 003242 CALL XSPEC ;IS XMTR ERROR EVENT SET?
522 003256 005767 014400 NXT10: TST TEREV ;NO, TEST ANOTHER FLAG
523 003262 100006 BPL NXT11 ;YES, OUTPUT XMTR ERROR TABLE
524 003264 CALL TEROS ;IS RCVR ERROR EVENT SET?
525 003300 005767 014360 NXT11: TST REREV ;NO
526 003304 100006 BPL NXT12 ;YES, OUTPUT RCVR ERROR TABLE
527 003306 CALL REROS ;STAY IN MAIN LOOP
528 003322 000167 177422 NXT12: JMP PCLGOP
529
530 ;TRAP TO 4 HANDLER
531
532
533 003326 ERTRAP: REGSAV ;:::SAVE R0...R5
534 003332 CALL PNTLIN,<ERTMSG> ;:::PRINT TRAP MESSAGE
535 003350 005067 014336 CLR RCVEV ;:::CLEAR RCVR EVENT FLAG
536 003354 005067 014330 CLR PCLGO ;:::CLR PCL GO FLAG
537 003360 052777 000100 012560 BIS #B06,@ATTRCSR ;:::SET TTY KBD INTR ENAB
538 003366 005037 177776 CLR @#PS ;:::DROP CP PRIORITY
539 003372 REGRES
540 003376 012706 002000 MOV #STKTOP,SP ;FIX STACK
541 003402 000167 177226 JMP RTRVA ;ENTER COMMAND MODE
```

543  
 544  
 545  
 546  
 547  
 548  
 549  
 550  
 551  
 552  
 553  
 554  
 555  
 556  
 557  
 558  
 559  
 560  
 561  
 562  
 (1)  
 (1)  
 563  
 564  
 565  
 566  
 567  
 568  
 569  
 570  
 571  
 572  
 573  
 574  
 575  
 576  
 577  
 578  
 579  
 580  
 581  
 582  
 583  
 584  
 585  
 586  
 587  
 588  
 589  
 590  
 591  
 592  
 593  
 594  
 595  
 596

003406  
 003406 012701 020006  
 003412 016602 000002  
 003416 005302  
 003420 001002  
 003422 000167 000446  
 003426 010267 014276  
 003432 020227 000062  
 003436 101402  
 003440 000167 000422  
 003444 010267 014320  
 003450 010200  
 003452 005300  
 003454  
 003464 060600  
 003466 062700 000004  
 003472 016067 000004 014220  
 003500 012767 000000 014214  
 003506 021027 000002  
 003512 001402  
 003514 000167 000346  
 003520 026067 000004 014174  
 003526 001004  
 003530 112721 000000  
 003534 005267 014230  
 003540 116011 000004  
 003544 001002  
 003546 000167 000314  
 003552 122711 000037  
 003556 103002  
 003560 000167 000302  
 003564 112167 014132  
 003570 062700 177772  
 003574 005302  
 003576 001343

```

.SBTTL COMMAND PROCESSORS:
.SBTTL COMMAND PROC. FOR SILO (LOAD)

: LOAD OR CLEAR THE TRANSMITTER ADDRESS (HARDWARE) SILO.
: IF THERE ARE NO ARGUMENTS, CLEAR THE ADDRESS SILO AND SET
: AUTO ADDRESS. IF THERE ARE ARGUMENTS, LOAD THE TOTAL NUMBER
: OF ARGUMENTS (INCLUDING PAD VALUES) INTO THE SILO AS MANY TIMES
: AS THE TOTAL WILL GO INTO 50. LOCATIONS.

: IF ANY 2 SEQUENTIAL ARGUMENTS ARE THE SAME, SEPARATE THEM WITH
: A PAD VALUE OF '0'. IF THE FIRST ARGUMENT IS THE SAME AS THE LAST
: ARGUMENT, INSERT A PAD VALUE OF '0' AFTER THE LAST ARGUMENT.

: ARGUMENTS HIGHER THAN 37 (OCTAL) WILL NOT BE ACCEPTED
: ARGUMENTS LOWER THAN 1 WILL NOT BE ACCEPTED.

: ARGUMENTS MUST BE NUMERIC. DECIMAL ARGUMENTS MUST BE FOLLOWED BY
: A DECIMAL POINT. (18.)
PROC CPSILO

CPSILO:
MOV #ADSILO,R1
MOV 2(SP),R2
DEC R2
BNE 11$
JMP CLEAV
11$: MOV R2,PADFLG
CMP R2,#50.
BLOS 1$
JMP SYNRTM
1$: MOV R2,OBJCNT
MOV R2,R0
DEC R0
MULT 6,R0,R3
ADD SP,R0
ADD #4,R0
MOV 4(R0),FIRST
MOV #0,NEXT
CPMLP: CMP (R0),#2
BEQ 2$
JMP SYNRTM
2$: CMP 4(R0),NEXT
BNE 3$
MOVB #0,(R1)+
INC OBJCNT
3$: MOVB 4(R0),(R1)
BNE 4$
JMP SYNRTM
4$: CMPB #37,(R1)
BHS 5$
JMP SYNRTM
5$: MOVB (R1)+,NEXT
ADD #-6,R0
DEC R2
BNE CPMLP

:**ENTRY POINT**
:SET R1 TO POINT TO SILO BUFFER

:GET # OF ARGS. INTO R2
:O.K IF THERE ARE SOME
:OTHERWISE, EXIT
:SAVE COUNT FOR LATER USE.
:ARE THERE MORE THAN 50 OBJECTS?
:NO, CONTINUE
:YES, ERROR
:SAVE OBJECT COUNT
:TURN LOOK-UP AROUND

:SAVE FIRST ITEM
:SAVE CURRENT ITEM
:IS IT CLASS 2?
:YES, O.K.
:NO, ERROR
:IS THIS ITEM SAME AS LAST?
:NO, O.K.
:YES, INSERT A PAD VALUE
:KEEP OBJECT COUNT UP TO DATE
:PUT OBJECT INTO BUFFER
:ERROR IF OBJECT IS 0

:ERROR IF IT WAS > 37

:SAVE REAL ITEM
:SET UP TO GET NEXT OBJECT
:ARE WE DONE LOADING BUFF?
:NO, KEEP GOING
  
```

597	003600	026767	014116	014112		CMP	NEXT, FIRST	: IS LAST OBJECT - FIRST?
598	003606	001004				BNE	6\$	: NO, O.K.
599	003610	112721	000000			MOVB	#0, (R1)+	: YES, INSERT A PAD VALUE
600	003614	005267	014150			INC	OBJCNT	: AND KEEP OBJECT COUNT UP TO DATE
601	003620	026727	014144	000062	6\$:	CMP	OBJCNT, #50.	: OBJECT COUNT GOTTEN TOO BIG?
602	003626	101402				BLOS	7\$	: NO, O.K.
603	003630	000167	000232			JMP	SYNRTM	: YES, ERROR
604	003634	152777	000060	012260	7\$:	BISB	#B05+B04, @TMMRH	: PREPARE TO LOAD ADDR SILO
605	003642	012700	000062			MOV	#50, R0	: HOLD SILO SIZE
606	003646	026767	014116	014054		CMP	OBJCNT, PADFLG	: IS OBJECT COUNT DIFFERENT THAN START?
607	003654	001002				BNE	SILLD	: YES, LEAVE SOMETHING IN PADFLG (SET)
608	003656	005067	014046		8\$:	CLR	PADFLG	: NO, CLEAR PAD FLAG
609	003652	016702	014102		SILLD:	MOV	OBJCNT, R2	: GET NO. OF OBJECTS
610	003666	012701	020006			MOV	#ADSILO, R1	: GET OBJECT BUFFER
611	003672	112177	012222		SLOLP:	MOVB	(R1)+, @TMMRH	: GET AN OBJECT INTO SILO
612	003676	005302				DEC	R2	: LOADED ALL OBJECTS?
613	003700	001374				BNE	SLOLP	: NO, CONTINUE
614	003702	166700	014062			SUB	OBJCNT, R0	: YES, IS THAT ALL THAT'LL FIT?
615	003706	020067	014056			CMP	R0, OBJCNT	
616	003712	002363				BGE	SILLD	: IF NOT LOAD THEM AGAIN
617	003714	132777	000001	012200		BITB	#1, @TMMRH	: SEE IF I AM MASTER
618	003722	001037				BNE	CPSLV	: IF SO TURN ON SILO AND EXIT
619	003724					CALL	PNTLIN, <MSTMG1>	: PRINT 'THIS UNIT IS NOT MASTER
620	003742					CALL	PNTLIN, <MSTMG2>	: BUT HAS BEEN MADE SECONDARY
621	003760					CALL	PNTLIN, <MSTMG3>	: THE SILO YOU HAVE JUST FILLED
622	003776					CALL	PNTLIN, <MSTMG4>	: WILL BE USED IF YOU CLEAR THE
623	004014	152777	000002	012100		BISB	#B01, @TMMRH	: THE CURRENT MASTER'
624	004022	005767	013702		CPSLV:	TST	PADFLG	: HAS SILO BEEN PADDED?
625	004026	001407				BEQ	9\$	: NO, CARRY ON.
626	004030					CALL	PNTLIN, <MSTMG5>	: YES, TELL OPERATOR.
627	004046	012767	177777	013712	9\$:	MOV	#-1, ESCFLG	: FLAG COMMENT TO ISSUE NEW 'PCL'.
628	004054	142777	000020	012040		BICB	#B04, @TMMRH	: CLR AUTO ADDR
629	004062	000241				CLC		: CLEAR 'C' FOR NON ERROR RETURN
630	004064				CPSEX:	RETURN		
631								
632	004066	000261			SYNRTM:	SEC		: SET 'C' BIT FOR SYNTAX ERROR
633	004070	000167	177770			JMP	CPSEX	: AND RETURN
634								
635								
636	004074	152777	000060	012020	CLEAV:	BISB	#B05+B04, @TMMRH	: RESET AUTO ADDR & CLR SILO
637	004102	012767	177777	013656		MOV	#-1, ESCFLG	: FLAG COMMENT TO ISSUE NEW 'PCL'.
638	004110	000241				CLC		: CLEAR 'C' IN CASE IT WAS SET
639	004112	000167	177746			JMP	CPSEX	: RETURN



.SBTTL COMMAND PROC. FOR MASTER, SECONDARY AND R.I.B.

```
641  
642  
643 ;PROCESSOR FOR 'MASTER SET (OR CLEAR)' COMMAND  
644 ; SET MASTER, OR CLEAR MASTER  
645  
646 004116 PROC CPMAS  
(1)  
(1) 004116 CPMAS: ;**ENTRY POINT**  
647 004116 022766 000002 000002 CMP #2,2(SP) ;GET # OF ARGUMENTS  
648 004124 001402 BEQ CPMOK ;OKAY IF 2  
649 004126 000261 SEC  
650 004130 000423 BR CPMRET ;OTHERWISE, SYNTAX ERROR  
651 004132 010603 CPMOK: MOV SP,R3 ;GET 2ND WORD OF COMMAND  
652 004134 062703 000004 ADD #4,R3  
653 004140 KEYWD R3,#SCTBL ;PROCESS IT  
654 004152 103446 BCS KWDERT ;SYNTAX ERROR IF 'C' SET  
655 004154 117702 011742 MOV @TMMRH,R2 ;GET OLD TMMR  
656 004160 142702 000001 BICB #1,R2 ;REMOVE OLD STATE OF MASTER  
657 004164 052602 BIS (SP)+,R2 ;SET NEW STATE OF MASTER  
658 004166 110277 011730 MOV R2,@TMMRH ;LOAD NEW TMMR  
659 004172 012767 177777 013566 MOV #-1,ESCFLG ;FLAG COMENT TO ISSUE NEW 'PCL>'.  
660 004200 CPMRET: RETURN ;EXIT
```

```
662 ;PROCESSOR FOR 'SECONDARY SET (OR CLEAR)' COMMAND  
663 ; SET SECONDARY, OR CLEAR SECONDARY
```

```
664  
665  
666 004202 PROC CPSEC  
(1)  
(1) 004202 CPSEC: ;**ENTRY POINT**  
667 004202 022766 000002 000002 CMP #2,2(SP) ;ARE THERE 2 ARGUMENTS?  
668 004210 001402 BEQ CPSOK ;IF YES, PROCEED  
669 004212 000261 SEC  
670 004214 000424 BR CPSRET ;OTHERWISE, SYNTAX ERROR  
671 004216 010603 CPSOK: MOV SP,R3 ;GET 2ND WORD OF COMMAND  
672 004220 062703 000004 ADD #4,R3  
673 004224 KEYWD R3,#SCTBL ;PROCESS IT  
674 004236 103414 BCS KWDERT ;SYNTAX ERROR IF 'C' SET  
675 004240 117702 011656 MOV @TMMRH,R2 ;GET OLD TMMR  
676 004244 142702 000002 BICB #2,R2 ;REMOVE OLD STATE OF SECONDARY  
677 004250 006316 ASL (SP)  
678 004252 052602 BIS (SP)+,R2 ;SET NEW STATE OF SECONDARY  
679 004254 110277 011642 MOV R2,@TMMRH ;LOAD NEW TMMR  
680 004260 012767 177777 013500 MOV #-1,ESCFLG ;FLAG COMENT TO ISSUE NEW 'PCL>'.  
681 004266 CPSRET: RETURN ;EXIT
```

```
682  
683  
684 004270 032600 KWDERT: BIT (SP)+,R0 ;POP BAD WORD OFF STACK  
685 004272 000775 BR CPSRET ;EXIT
```

```
687 ;PROCESSOR FOR 'RIB SET' OR 'RIB CLEAR'  
688 ; SET 'RIB' BIT IN XMTR COMMAND WORD LOCATION 'TXMST', OR CLEAR IT
```

```
689  
690  
691 004274 PROC CPRIB  
(1)
```

```

(1) 004274
692 004274 022766 000002 000002 (PRIB: (CMP #2,2(SP) ;**ENTRY POINT**
693 004302 001402 (BEQ CPROK ;2 ARGUMENTS?
694 004304 000261 (SEC ;YES, O.K.
695 004306 000426 (BR CPROK ;OTHERWISE, ERROR RETURN
696 004310 010603 (PROK: MOV SP,R3 ;GET 2ND WORD OF COMMAND
697 004312 062703 000004 (ADD #4,R3
698 004316 (KEYWD R3,#SCTBL ;PROCESS IT
699 004330 103757 (BCS KWDERT ;IF ERROR, SHOW IT.
700 004332 016702 003030 (MOV TXMST,R2 ;GET OLD STATE OF TCR
701 004336 042702 100000 (BIC #B15,R2 ;CLEAR IMAGE OF RIB
702 004342 000241 (CLC ;GET NEW STATE OF RIB
703 004344 006016 (ROR (SP)
704 004346 006016 (ROR (SP)
705 004350 052602 (BIS (SP)+,R2 ;SET IT IN IMAGE
706 004352 010267 003010 (MOV R2,TXMST ;LOAD NEW STATE OF TCR
707 004356 012767 177777 013402 (MOV #-1,ESCFLG ;FLAG COMENT TO ISSUE NEW "PCL>"
708 004364 (PRRET: RETURN ;BACK TO CALLER
  
```

.SBTTL COMMAND PROC. FOR RANGE

: SET RANGE OF RECEIVER ADDRESSES THAT THIS TRANSMITTER SHOULD TALK TO.  
:  
: ACCEPT A LOWER AND UPPER RECEIVER ADDRESS (IN THAT ORDER).  
: GENERATE A LIST (SET ACTIVE FLAGS) OF RCVR ADDRESSES FROM LOW ADDRESS  
: TO HIGH ADDRESS INCLUSIVE.

710  
711  
712  
713  
714  
715  
716  
717  
718  
719

720 004366  
(1)  
(1) 004366  
721 004366 016600 000002  
722 004372 022700 000003  
723 004376 001047  
724 004400 016600 000004  
725 004404 022700 000002  
726 004410 001042  
727 004412 016601 000010  
728 004416 016600 000012  
729 004422 022700 000002  
730 004426 001033  
731 004430 016602 000016  
732 004434 020102  
733 004436 101427  
734 004440 022701 000037  
735 004444 103424  
736 004446 010200  
737 004450 001422  
738 004452 006300  
739 004454 006300  
740 004456 010003  
741 004460 006300  
742 004462 060300  
743 004464 062700 020074  
744 004470 012710 177777  
745 004474 062700 000014  
746 004500 005202  
747 004502 020201  
748 004504 003771  
749 004506 012767 177777 013252  
750 004514  
751  
752 004516 000261  
753 004520 000167 177770

PROC CPRANG  
CPRANG:  
MOV 2(SP),R0  
CMP #3,R0  
BNE SYNRTN  
MOV 4(SP),R0  
CMP #2,R0  
BNE SYNRTN  
MOV 10(SP),R1  
MOV 12(SP),R0  
CMP #2,R0  
BNE SYNRTN  
MOV 16(SP),R2  
CMP R1,R2  
BLOS SYNRTN  
CMP #37,R1  
BLO SYNRTN  
MOV R2,R0  
BEQ SYNRTN  
ASL R0  
ASL R0  
MOV R0,R3  
ASL R0  
ADD R3,R0  
ADD #RADBO,R0  
CPRFIL: MOV #-1,(R0)  
ADD #14,R0  
INC R2  
CMP R2,R1  
BLE CPRFIL  
MOV #-1,ESCF LG  
CPRRTN: RETURN  
SYNRTN: SEC  
JMP CPRRTN

:\*\*ENTRY POINT\*\*  
:GET # OF OBJECTS  
:3 OBJECTS?  
:IF NOT, INDICATE SYNTAX ERROR  
:GET CLASS OF FIRST OBJECT  
:IS IT CLASS 2?  
:IF NOT, INDICATE SYNTAX ERROR  
:GET 'TO' ARGUMENT INTO R1  
:GET CLASS OF SECOND OBJECT  
:IS IT CLASS 2?  
:IF NOT, INDICATE SYNTAX ERROR  
:GET 'FROM' ARGUMENT INTO R2  
:IS 'FROM' LOWER THAN 'TO'?  
:IF NOT, INDICATE SYNTAX ERROR  
:IS 'TO' > 37?  
:IF SO, INDICATE SYNTAX ERROR  
:FIND 'FROM' ENTRY  
:IF 'FROM' 0, SYNTAX ERROR  
  
:R0 CONTAINS 'FROM' ADDRESS  
:SET RCVR ADDR ACTIVE FLAG.  
:UPDATE TABLE POINTER  
:INCREMENT 'FROM' ADDRESS  
: UNTIL EQUAL TO 'TO' ADDRESS  
:EXIT WHEN COMPLETE.  
:FLAG COMMENT TO ISSUE NEW 'PCL>'  
  
:SET 'C' BIT TO INDICATE SYNTAX ERROR

.SBTTL COMMAND PROC. FOR ADD AND DELETE

```
: ADD A RECEIVER ADDRESS TO THE LIST (SET ACTIVE FLAG) OF RCVR ADDRESSES
:
: ACCEPT ARGUMENTS (AT LEAST 1) CHECK THAT THEY FALL IN A RANGE FROM
: 1 TO 37; THEN SET THE CORRESPONDING ACTIVE FLAGS IN THE STAT
: TABLE.
```

	PROC	CPADD		
755				
756				
757				
758				
759				
760				
761				
762				
763	004524			
(1)				
(1)	004524		CPADD:	::**ENTRY POINT**
764	004524	016602	000002	:GET # OF ARGUMENTS INTO R2
765	004530	005302		:IGNORE KEYWORD OBJECT
766	004532	010600		:GENERATE ADDRESS OF ARGUMENTS
767	004534	062700	000004	:POINT R0 AT 1ST OBJECT CLASS
768	004540	021027	000002	:IS CLASS = 2?
769	004544	001027		:NO, INDICATE SYNTAX ERROR
770	004546	016001	000004	:GET OBJECT INTO R1
771	004552	001424		:IF IT'S 0, SYNTAX ERROR
772	004554	022701	000037	
773	004560	103421		:IF IT'S >37, SYNTAX ERROR
774	004562	006301		:FIND THE TABLE ELEMENT
775	004564	006301		
776	004566	010103		
777	004570	006301		
778	004572	060301		
779	004574	062701	020074	
780	004600	012711	177777	
781	004604	062700	000006	
782	004610	005302		
783	004612	001352		
784	004614	012767	177777	013144
785	004622			
786	004624	000261		
787	004626	000167	177770	
788				
789				
790				
791	004632			
(1)				
(1)	004632		CPDEL:	::**ENTRY POINT**
792	004632	016602	000002	:GET # OF ARGUMENTS INTO R2
793	004636	005302		:IGNORE KEYWORD OBJECT
794	004640	010600		:GENERATE ADDRESS OF ARGUMENTS
795	004642	062700	000004	:POINT R0 AT 1ST OBJECTS CLASS
796	004646	021027	000002	:IS CLASS =2
797	004652	001034		:NO, INDICATE SYNTAX ERROR
798	004654	016001	000004	:GET OBJECT INTO R1
799	004660	001431		:IF IT'S 0, SYNTAX ERROR
800	004662	022701	000037	
801	004666	103426		:IF IT'S >37, SYNTAX ERROR
802	004670	006301		:FIND TABLE ELEMENT
803	004672	006301		
804	004674	010103		
805	004676	006301		
806	004700	060301		

:DELETE RECEIVER ADDRESSES AND ASSOCIATED "ATTEMPTS" AND "SUCCESSSES".

```
CPDEL:
MOV 2(SP),R2
DEC R2
MOV SP,R0
ADD #4,R0
CPDLP: CMP (R0),#2
BNE SYNTRD
MOV 4(R0),R1
BEQ SYNTRD
CMP #37,R1
BLO SYNTRD
ASL R1
ASL R1
MOV R1,R3
ASL R1
ADD R3,R1
```

CZPLAC PCL11 EXERCISER V02C  
CZPLAC.P11 08-JUN-79 15:55

MACY11 304(1052) 25-JUN-79 08:52 PAGE 10-1  
COMMAND PROC. FOR ADD AND DELETE

SFO 0060

807	004702	062701	020074
808	004706	005011	
809	004710	062701	000004
810	004714	005021	
811	004716	005021	
812	004720	005021	
813	004722	005011	
814	004724	062700	000006
815	004730	005302	
816	004732	001345	
817	004734	012767	177777 013024
818	004742		
819	004744	000261	
820	004746	000167	177770

```

ADD #RADBO,R1
CLR (R1)
ADD #4,R1
CLR (R1)+
CLR (R1)+
CLR (R1)+
CLR (R1)
ADD #6,R0
DEC R2
BNE CPDLP
MOV #-1,ESCFLG
CPDRTN: RETURN
SYNTRD: SEC
JMP CPDRTN

```

;CLEAR ACTIVE FLAG AT TABLE LOCATION  
;AND OTHER ENTRIES...

;SET UP FOR NEXT ARGUMENT  
;ARE WE DONE?  
;NO, CONTINUE  
;FLAG COMMENT TO ISSUE NEW 'PCL>'

;SET 'C' BIT FOR SYNTAX ERROR

CPDRTN: RETURN  
SYNTRD: SEC

.SBTTL COMMAND PROC. FOR CLEAR, STATUS, AND CONTINUE

```
822  
823  
824  
825  
826 ; CLEAR THE ENTIRE LIST OF RECEIVER ADDRESSES (CLEAR ACTIVE FLAGS)  
827 ;  
828 ; TO USE THIS ROUTINE BY A CALL MACRO, ENTER AT PRCLR AS FOLLOWS :  
829 ;  
830 ;  
831 CALL PRCLR ;CLEAR STATUS TABLE  
832 (1) 004752 PROC CPCLR  
833 (1) 004752 CPCLR: ;**ENTRY POINT**  
834 004752 016602 000002 MOV 2(SP),R2 ;GET NUMBER OF OBJECTS INTO R2  
835 004756 022702 000001 CMP #1,R2 ;ARE THERE ANY ARGUMENTS?  
836 004762 001031 BNE SYNTRC ;IF SO, INDICATE SYNTAX ERROR  
837 004764 012767 177777 012774 MOV #-1,ESCF LG ;FLAG COMMENT TO ISSUE NEW 'PCL>'  
838 004772 PROC PRCLR: ;**ENTRY POINT**  
839 004772 012701 000037 MOV #37,R1 ;SAVE COUNT OF TABLE ELEMENTS  
840 005002 005010 CPCLRC: MOV #RADB,R0 ;SET UP TO CLR ACTIVE FLAGS  
841 005004 062700 000004 CLR (R0) ;CLEAR ALL ELEMENTS OF ENTRY  
842 005010 005020 ADD #4,R0  
843 005012 005020 CLR (R0)+  
844 005014 005020 CLR (R0)+  
845 005016 005020 CLR (R0)+  
846 005020 005301 DEC R1 ;DONE?  
847 005022 001367 BNE CPCLRC ;IF NOT, CONTINUE  
848 005024 005067 011404 CLR ADD ;INITIALIZE ADDR QUEUE TO EMPTY  
849 005030 016767 011404 011406 MOV A00+QTOP,A00+QFRONT  
850 005036 016767 011376 011402 MOV A00+QTOP,A00+QBACK  
851 005044 CPCLRT: RETURN ;AND LEAVE  
852 005046 000261 SYNTRC: SEC ;SET 'C' BIT FOR SYNTAX ERROR  
853 005050 000167 177770 JMP CPCLRT  
854  
855  
856 ; SET THE STATUS EVENT FLAG SO THAT THE STATUS TABLE WILL BE PRINTED.  
857 ;  
858  
859 PROC CPSTAT  
860 (1) 005054 CPSTAT: ;**ENTRY POINT**  
861 005054 022766 000001 000002 CMP #1,2(SP) ;ARE THERE ANY ARGUMENTS?  
862 005062 001011 BNE SYNTRS ;IF SO, INDICATE SYNTAX ERROR  
863 005064 052767 100000 012604 BIS #B15,STSEV ;SET STATUS EVENT FLAG  
864 005072 005067 012602 CLR STPNTR ;0 STPNTR INDICATES HEADER FIRST  
865 005104 042777 000100 011002 BIC #B06,@TCR ;CLR TXM INTERRUPT ENABLE  
866 005106 000261 CPSRTN: RETURN ;SET 'C' BIT FOR SYNTAX ERROR  
867 005110 000167 177770 SYNTRS: SEC  
868 JMP CPSRTN  
869  
870 ; CONTINUE EXERCISING. DO NOT AFFECT THE STATUS TABLE  
871
```

CZPLAO PCL11 EXERCISER V02C  
CZPLAC.P11 08-JUN-79 15:55

MACY11 30A(1052) 25-JUN-79 08:52 PAGE 11-1  
COMMAND PROC. FOR CLEAR, STATUS, AND CONTINUE

SEQ 0062

872  
873  
874  
875  
876  
877  
878  
(1)  
(1)  
879  
880  
881  
882  
883  
884  
885  
886  
887  
888  
889

005114  
005114  
005114 022766 000001 000002  
005122 001027  
005124 012767 100000 012556  
005132  
005146  
005164 005767 012470  
005170 001403  
005172 012777 000100 010760  
005200  
005202 000261  
005204 000167 177770

: DO NOT AFFECT THE ERROR TABLE  
: DO NOT AFFECT THE RCVR ADDRESS QUEUE  
: SIMPLY SET PCLGO  
:

PROC CPCNT  
CPCNT:  
CMP #1,2(SP)  
BNE SYNTCN  
MOV #B15,PCLGO  
CALL PNCRLF  
CALL PNTLIN,<EXCNT>  
TST KWFLG  
BEQ CPCNRT  
MOV #B06,@LCS  
CPCNRT: RETURN  
SYNTCN: SEC  
JMP CPCNRT

;\*\*ENTRY POINT\*\*  
:ARE THERE ANY ARGUMENTS?  
:IF SO, INDICATE SYNTAX ERROR  
:SET PCL GO FLAG  
:PRINT CR & LF  
:PRINT 'EXERCISER CONTINUING'  
:GOT A CLOCK?  
:NO  
:RE-ENABLE CLOCK.  
:SET 'C' BIT FOR SYNTAX ERROR

.SBTTL COMMAND PROC. FOR INIT, SUMMARY, AND GO

891  
892  
893  
894  
895  
896  
897  
898  
899  
900  
901  
902  
(1)  
(1)  
903  
904  
905  
906  
(1)  
(1)  
907  
908  
909  
910  
911  
912  
913  
914  
(1)  
(1)  
915  
916  
917  
918  
919  
920  
921  
922  
923  
924  
925  
926  
927  
928  
929  
930  
931  
932  
933  
934  
935  
936  
937  
938  
939  
940

005210  
005210 022766 000001 000002  
005216 001114  
005220 012767 177777 012540  
005226  
005226  
005234 105067 012413  
005240 105067 012410  
005244 105067 012402  
005250 005067 012402  
005254 042767 100000 002104  
005262  
005276  
005276 012700 024736  
005302 022710 177777  
005306 001406  
005310 005060 000004  
005314 062700 000006  
005320 000167 177756  
005324 012700 001350  
005330 012701 025160  
005334 012721 000000  
005340 005300  
005342 001374  
005344 012700 000037  
005350 012701 020110  
005354 062701 000004  
005360 005021  
005362 005021  
005364 005021  
005366 005021  
005370 005300  
005372 001370  
005374 016767 012334 012334  
005402 016767 012332 012332  
005410 005067 012270  
005414 005067 012252  
005420 005067 012252  
005424 005067 012232

:TO USE CALL MACRO, ENTER AT PRINIT AND PARCLR  
: CLEAR STATUS TABLE, SUMMARY TABLE, ERROR TABLE  
: CLEAR 'RIB' IN XMTR COMMAND WORD 'TXMST'  
: CLEAR CLOCK DATA  
: CLEAR TRANSMITTER HARDWARE  
: INITIALIZE DATA PATTERN  
:

PROC CPINIT  
CPINIT:  
CMP #1,2(SP)  
BNE SYNTIN  
MOV #-1,ESCFLG  
PROC PRINT  
BDINIT XMTR  
CLRB SECNDS  
CLRB MINUTS  
CLRB TICKS  
CLR HOURS  
BIC #B15,TXMST  
CALL PRCLR  
PROC PARCLR  
ERTBCL:  
ERTCD:  
1\$:  
2\$:  
MOV #ERTBL,R0  
CMP #-1,(R0)  
BEQ ERTCD  
CLR 4(R0)  
ADD #6,R0  
JMP ERTBCL  
MOV #37\*30,R0  
MOV #TERTBL,R1  
MOV #0,(R1)+  
DEC R0  
BNE 1\$  
MOV #37,R0  
MOV #RADB,R1  
ADD #4,R1  
CLR (R1)+  
CLR (R1)+  
CLR (R1)+  
CLR (R1)+  
DEC R0  
BNE 2\$  
MOV ORIGSD,DTSEED  
MOV MLSD,MSGLSD  
CLR TXMEV  
CLR SUMEV  
CLR STSEV  
CLR TEREV

\*\*ENTRY POINT\*\*  
:ARE THERE ANY ARGUMENTS?  
:IF SO, INDICATE SYNTAX ERROR  
:FLAG COMENT TO ISSUE NEW 'PCL>'  
  
\*\*ENTRY POINT\*\*  
:CLEAR XMTR.  
:CLEAR SECONDS (TIME)  
:CLEAR MINUTES  
:CLEAR TICKS  
:CLEAR HOURS  
:CLEAR RIB IN COMMAND WORD FOR XMTR  
:CLR STATUS TABLE & ADDR QUEUE  
  
\*\*ENTRY POINT\*\*  
:CLEAR ERROR SUMMARY TABLE  
:IS ERR NUM -1?  
:IF SO, DONE CLEARING  
:OTHERWISE, CLR OCCURENCES  
:STEP TO NEXT ENTRY  
:AND CONTINUE  
:ALSO CLEAR ERROR DATA  
:FROM DETAILED ERR TABLE  
  
:CLEAR ATTEMPS & SUCCESSES  
:FROM STATUS TABLE  
  
:RESTORE ORIGINAL DATA SEED  
:AND MSG LENGTH SEED  
:CLR XMIT EVENT FLAG  
:CLR SUMMARY EVENT FLAG  
:CLR STATUS EVENT FLAG



```

941 005430 005067 012230          CLR      RREVE          ;CLR XMTR & RCVR ERROR EVENTS
942 005434 005067 012306          CLR      RCTXPS        ;CLEAR DATA PASS NO.
943 005440 052767 100000 012222  BIS      #B15,DATGEV    ;SET DATA GEN FLAG
944 005446          CPINRT: RETURN
945 005450 000261          SYNTIN: SEC            ;SET 'C' BIT FOR SYNTAX ERROR
946 005452 000167 177770          JMP      CPINRT
947
948
949
950          ; SET THE SUMMARY EVENT FLAG SO THAT THE ERROR SUMMARY TABLE WILL BE PRINTED
951
952
953 005456          PROC      CPSUM
(1)
(1) 005456          CPSUM:
954 005456 022766 000001 000002  CMP      #1,2(SP)      ;**ENTRY POINT**
955 005464 001006          BNE      SYNTSM        ;ARE THERE ANY ARGUMENTS?
956 005466 012767 100000 012176  MOV      #B15,SUMEV    ;IF SO, INDICATE SYNTAX ERROR
957 005474 005067 012202          CLR      SUMPNT       ;SET SUMMARY EVENT FLAG
958 005500          CPISUR: RETURN      ;0 SUMPNT INDICATES HEADER FIRST
959 005502 000261          SYNTSM: SEC            ;SET 'C' BIT FOR SYNTAX ERROR
960 005504 000167 177770          JMP      CPISUR
961
962
963
964
965          ; START THE EXERCISER
966          ; CLEAR 'ATTEMPTS' AND 'SUCCESSSES' IN STATUS TABLE
967          ; CLEAR ERROR TABLES
968          ; CAUSE RCVR ADDRESS QUEUE TO BE LOADED
969          ; SET PCLGO
970          ; IF THE RCVR ADDRESS QUEUE IS EMPTY AFTER BEING LOADED,
971          ; INDICATE THIS BY PRINTING THE FOLLOWING MESSAGE:
972          ;
973          ;     ***NO RECEIVERS SELECTED.***
974          ;
975          ; AND RETURN TO COMMAND INPUT MODE.
976
977
978
979 005510          PROC      CPGO
(1)
(1) 005510          CPGO:
980 005510 022766 000001 000002  CMP      #1,2(SP)      ;**ENTRY POINT**
981 005516 001062          BNE      SYNTAX        ;ARE THERE ANY ARGUMENTS?
982 005520 005067 012222          CLR      RCTXPS        ;IF SO, INDICATE SYNTAX ERROR
983 005524 005067 010704          CLR      AQQ           ;CLEAR PASS NO.
984 005530 105067 012117          CLR      SECNDS        ;INIT ADDR QUEUE TO EMPTY
985 005534 105067 012114          CLR      MINUTS        ;CLEAR SECONDS REG.
986 005540 105067 012106          CLR      TICKS         ;CLEAR MINUTES REG.
987 005544 005067 012106          CLR      HOURS         ;CLEAR TICKS REG.
988 005550 016767 010664 010666  MOV      AQQ+QTOP,AQQ+QFRONT ;CLEAR HOURS REG.
989 005556 016767 010656 010662  MOV      AQQ+QTOP,AQQ+QBACK
990 005564 052767 100000 012074  BIS      #B15,QLDEV    ;SET ADDR QUEUE LOAD EVENT
991 005572 012767 177777 012110  MOV      #-1,PCLGO     ;SET PCL TO GO
992 005600          CALL     PARCLR       ;CLEAR STATUS & ERRORS (NOT RCVR)

```

(ZPLACO PCL11 EXERCISER V02L  
(ZPLAC.P11 08-JUN-79 15:55

MACY11 30A(1052) 25-JUN-79 08:52 PAGE 12-2  
COMMAND PROC. FOR INIT, SUMMARY, AND GO

SFO 0065

```

993 005614          CALL   PNCRLF          ;PRINT CR, LF
994 005630          CALL   PNTLIN,<EXRST> ;PRINT 'EXERCISER STARTED'.
995 005646 005767 012006 TST    KWFLG          ;GOT A CLOCK?
996 005652 001403          BEQ    STRTRT        ;NO.
997 005654 012777 000100 010276 MOV    #B06,@LCS      ;ENABLE CLOCK INTR.
998 005662          STRTRT: RETURN        ;EXIT
999
1000 005664 000261          SYNTAX: SEC          ;SET 'C' TO INDICATE SYNTAX ERROR
1001 005666 000167 177770          JMP    STRTRT        ;AND EXIT
1002
1003

```

.SBTTL COMMAND PROC. FOR 'ASSIGN'

: ASSIGN XMTR ADDR & VECTOR AND RCVR ADDR & VECTOR.  
 : THE ASSIGN COMMAND MAY HAVE 0, 1, 2, 3 OR 4 ARGUMENTS:

- 0 = ASSIGN STANDARD ADDRESSES & VECTORS TO RCVR & XMTR
- 1 = ARGUMENT IS ASSUMED TO BE XMTR ADDRESS
- 2 = ARGUMENTS ARE ASSUMED TO BE : XMTR ADDR, XMTR VECTOR
- 3 = ARGUMENTS ARE ASSUMED TO BE: XMTR ADDR, XMTR VECT, RCVR ADDR
- 4 = ARGUMENTS IN THE FOLLOWING ORDER:

: XMTR ADDRESS, XMTR VECTOR, RCVR ADDRESS, AND RCVR VECTOR.  
 : CAUTION MUST BE EXERCISED WHEN ASSIGNING ADDRESSES TO GET THEM  
 : IN THE CORRECT SEQUENCE AND ORDER.

1005  
 1006  
 1007  
 1008  
 1009  
 1010  
 1011  
 1012  
 1013  
 1014  
 1015  
 1016  
 1017  
 1018  
 1019  
 1020  
 (1)  
 (1)  
 1021  
 1022  
 1023  
 1024  
 1025  
 1026  
 1027  
 1028  
 1029  
 1030  
 1031  
 1032  
 1033  
 1034  
 1035  
 1036  
 1037  
 1038  
 1039  
 1040  
 1041  
 1042  
 1043  
 1044  
 1045  
 1046  
 1047  
 1048  
 1049  
 1050  
 1051  
 1052  
 1053  
 1054  
 1055  
 1056  
 1057  
 1058

005672  
 005672  
 005672 010600  
 005674 016001 000002  
 005700 020127 000005  
 005704 101402  
 005706 000167 000372  
 005712 001030  
 005714 016002 000004  
 005720 022702 000002  
 005724 001402  
 005726 000167 000352  
 005732 062700 000006  
 005736 016002 000002  
 005742 032702 000003  
 005746 001402  
 005750 000167 000330  
 005754 020227 000774  
 005760 101402  
 005762 000167 000316  
 005766 010267 010212  
 005772 005301  
 005774 020127 000004  
 006000 001030  
 006002 016002 000004  
 006006 022702 000002  
 006012 001402  
 006014 000167 000264  
 006020 062700 000006  
 006024 016002 000002  
 006030 032702 000017  
 006034 001402  
 006036 000167 000242  
 006042 020227 164000  
 006046 103002  
 006050 000167 000230  
 006054 010267 010122  
 006060 005301  
 006062 020127 000003  
 006066 001030

PROC CPASS  
 (PASS:  
 MOV SP,R0  
 MOV 2(R0),R1  
 CMP R1,#5  
 BLOS 1\$  
 JMP SYNXR  
 BNE PART1  
 MOV 4(R0),R2  
 CMP #2,R2  
 BEQ 2\$  
 JMP SYNXR  
 ADD #6,R0  
 MOV 2(R0),R2  
 BIT #3,R2  
 BEQ 3\$  
 JMP SYNXR  
 CMP R2,#774  
 BLOS 4\$  
 JMP SYNXR  
 MOV R2,RCVEC  
 DEC R1  
 PART1: CMP R1,#4  
 BNE PART2  
 MOV 4(R0),R2  
 CMP #2,R2  
 BEQ 1\$  
 JMP SYNXR  
 ADD #6,R0  
 MOV 2(R0),R2  
 BIT #17,R2  
 BEQ 2\$  
 JMP SYNXR  
 CMP R2,#164000  
 BHS 3\$  
 JMP SYNXR  
 MOV R2,RCDEV  
 DEC R1  
 PART2: CMP R1,#3  
 BNE PART3

\*\*ENTRY POINT\*\*  
 : COPY LIST POINTER  
 : GET NO. OF ARGUMENTS  
 : 4 ARGUMENTS?  
 : ERROR TOO MANY ARGUMENTS  
 : LESS THAN 4, PARTIAL ASSIGNMENT  
 : GET CLASS OF OBJECT  
 : IF IT'S A NUMBER, O.K.  
 : ERROR WRONG CLASS  
 : NOW GET ACTUAL NUMBER  
 : IS IT ON VECTOR BOUNDARY?  
 : YES  
 : ERROR NOT ON VECTOR BOUNDARY  
 : IS IT WITHIN VECTOR AREA?  
 : YES  
 : ERROR, OUTSIDE VECTOR AREA  
 : SAVE AS RCVR VECTOR  
 : ARE THERE ONLY 3 ARGS?  
 : NO, MUST BE FEWER  
 : GET CLASS OF OBJECT  
 : IF IT'S A NUMBER, O.K.  
 : ERROR, OBJECT NOT A NUMBER  
 : NOW, GET THE NUMBER  
 : CHECK IF ITS A VALID ADDR  
 : IT IS. O.K.  
 : ERROR INVALID ADDRESS  
 : IS IT IN THE ADDRESS FIELD?  
 : YES, O.K.  
 : ERROR. ADDR = OUTSIDE DEVICE AREA  
 : SAVE AS RCVR ADDRESS  
 : ARE THERE ONLY 2 ARGS?  
 : NO, MUST BE ONLY 1.

1059	006070	016002	000004		MOV	4(R0),R2		;GET CLASS OF OBJECT
1060	006074	022702	000002		CMP	#2,R2		
1061	006100	001402			BEQ	1\$		;IF IT'S A NUMBER, O.K.
1062	006102	000167	000176		JMP	SYNXR		;ERROR, WRONG CLASS
1063	006106	062700	000006	1\$:	ADD	#6,R0		;NOW GET THE NUMBER
1064	006112	016002	000002		MOV	2(R0),R2		
1065	006116	032702	000003		BIT	#3,R2		;IS IT ON VECTOR BOUNDARY?
1066	006122	001402			BEQ	2\$		;YES
1067	006124	000167	000154		JMP	SYNXR		;ERROR, NOT ON VECTOR BOUNDARY
1068	006130	020227	000774	2\$:	CMP	R2,#774		;IS IT WITHIN VECTOR AREA?
1069	006134	101402			BLOS	3\$		;YES
1070	006136	000167	000142		JMP	SYNXR		;ERROR, OUTSIDE VECTOR AREA
1071	006142	010267	010032	3\$:	MOV	R2, TXVEC		;SAVE AS XMTR VECTOR
1072	006146	005301			DEC	R1		
1073	006150	020127	000002	PART3:	CMP	R1,#2		;ONLY 1 ARGUMENT?
1074	006154	001027			BNE	PART4		;NO, MUST BE NONE.
1075	006156	016002	000004		MOV	4(R0),R2		;GET CLASS OF OBJECT
1076	006162	022702	000002		CMP	#2,R2		
1077	006166	001402			BEQ	1\$		;IF IT'S A NUMBER, O.K.
1078	006170	000167	000110		JMP	SYNXR		;ERROR, WRONG CLASS
1079	006174	062700	000006	1\$:	ADD	#6,R0		;NOW GET THE NUMBER
1080	006200	016002	000002		MOV	2(R0),R2		
1081	006204	032702	000017		BIT	#17,R2		;CHECK FOR VALID ADDRESS
1082	006210	001402			BEQ	2\$		;O.K.
1083	006212	000167	000066		JMP	SYNXR		
1084	006216	020227	164000	2\$:	CMP	R2,#164000		;IS IT IN ADDRESS FIELD?
1085	006222	103002			BHIS	3\$		;YES
1086	006224	000167	000054		JMP	SYNXR		;ERROR, OUTSIDE ADDRESS FIELD
1087	006230	010267	007742	3\$:	MOV	R2, TXDEV		;SAVE AS XMTR ADDRESS
1088	006234	020127	000001	PART4:	CMP	R1,#1		;NO ARGUMENTS?
1089	006240	001014			BNE	ASEXT		;WE'RE DONE!
1090	006242	012767	164200		MOV	#164200, TXDEV		;NO ARGUMENTS, LOAD DEFAULTS.
1091	006250	012767	000170		MOV	#170, TXVEC		
1092	006256	012767	164220		MOV	#164220, RCDEV		
1093	006264	012767	000174		MOV	#174, RCVEC		
1094	006272	012737	000340	ASEXT:	MOV	#340, AIPS		;RAISE PROC. PRIORITY
1095	006300	000167	173474		JMP	PCLEX		;GO START EXERCISER OVER.
1096								
1097	006304	000261		SYNXR:	SEC			;SET 'C' TO FLAG ERROR
1098	006306				RETURN			;RETURN

.SBTTL COMMAND DECODER AND PROCESSOR

1100  
 1101  
 1102  
 1103  
 1104  
 1105  
 1106  
 1107 006310  
 (1)  
 (1) 006310  
 1108 006310 105067 011335  
 1109 006314 005067 011446  
 1110 006320  
 1111 006340 103015  
 1112 006342  
 1113 006360  
 1114 006374 005767 011366  
 1115 006400 001406  
 1116 006402  
 1117 006416  
 1118  
 1119  
 1120  
 1121  
 1122  
 1123  
 1124  
 1125  
 1126  
 1127  
 1128  
 1129  
 1130  
 1131  
 1132  
 1133  
 1134 006420  
 (1)  
 (1) 006420  
 1135 006420  
 1136 006434  
 1137 006452  
 1138 006466 005067 011222  
 1139 006472 005067 011212  
 1140 006476 005067 011174  
 1141 006502 005067 011164  
 1142 006506  
 1143 006522

```

: CONVERT COMMAND TO IT'S PROCESSING ROUTINE ADDRESS
: IF C BIT IS SET, INDICATE SYNTAX ERROR
: RETURN TO COMMAND INPUT MODE
: IF ESCFLG <> 0, CALL PRESC (CNTRL-C)

```

```

PROC      COMENT
COMENT:
  CLR      CLRB      CMDENT      **:ENTRY POINT**
  CLR      CLR       ESCFLG      :CLEAR COMMAND ENTERED FLAG
  CALL     CALL      COMAND,<CMDBUF,CMDTBL> :CLR COMMAND INPUT MODE FLAG
  BCC     BCC       CMDRTN      :CONVERT COMMAND
  CALL     CALL      PNTLIN,<SYNTAX> :IF C - 0, EXIT
  CALL     CALL      PRESC       :PRINT 'SYNTAX ERROR' IF C SET
  TST     TST       ESCFLG      :GIVE ANOTHER 'PCL>'
  BEQ     BEQ       CMDRET      :SHOULD WE FAKE CNTRL-C?
  CALL     CALL      PRESC       :NO, EXIT
  RETURN   RETURN    :YES, GIVE A 'PCL>'
                                :RETURN TO MAIN LOOP

```

```

:PROCESSOR FOR SPECIAL EVENT
:INDICATE 'NO MASTER' AND CLEAR EVENTS
:THIS EVENT IS CALLED BY THE MAIN LOOP AFTER
:THE OCCURRENCE OF A MASTER DOWN INTERRUPT
:THE RESULT OF THIS EVENT IS THAT THE PROGRAM WILL
:PRINT MASTER DOWN IN THE FOLLOWING FASION:

```

\*\*\*\*\* MASTER DOWN \*\*\*\*\*

```

:THEN CLEAR ACTIVE EVENT FLAGS BY ENTERING COMMAND MODE.
:TO RECOVER FROM THIS STATE AND RESUME EXERCISING:
: (A) SET MASTER ON ANY ONE PCL11
: (B) TYPE THE COMMAND 'CONTINUE'

```

```

PROC      SPEC
SPEC:
  CALL     CALL      PNCRLF      **:ENTRY POINT**
  CALL     CALL      PNTLIN,<MDNER> :ENQUEUE CR & LF
  CALL     CALL      PNCRLF      :ENQUEUE MASTER DOWN MESSAGE
  CLR      CLR       SPCEV      :ANOTHER CR & LF
  CLR      CLR       PCLGO      :CLR SPECIAL EVENT FLAG
  CLR      CLR       STSEV      :DON'T ALLOW TXM EVENT
  CALL     CALL      SUMEV       :DISCONTINUE STATUS EVENT
  RETURN   RETURN    :DISCONTINUE SUM EVENT
                                :FAKE CNTRL-C KEY

```

```
1145 :PROCESSOR FOR 'EXTRA' SPECIAL EVENT
1146 :TO INDICATE WHEN THIS UNIT HAS JUST BECOME
1147 :MASTER AS A RESULT OF PREVIOUSLY HAVING
1148 :SECONDARY SET AND THE CURRENT BUS MASTER
1149 :HAVING JUST DROPPED MASTER.
1150 :WHEN 'NOW MASTER' INTERRUPT OCCURS, THE
1151 :CONSOLE DEVICE WILL PRINT
1152 :   '** THIS UNIT HAS BECOME NEW MASTER **'
1153
1154 006524          PROC    XSPEC
(1)
(1) 006524          XSPEC:          : **ENTRY POINT**
1155 006524          CALL    PNCRLF          : ENQUEUE CR & LF
1156 006540          CALL    PNTLIN,<MSCHNG> : ENQUEUE NEW MASTER MESSAGE
1157 006556          CALL    PNCRLF          : ANOTHER CR & LF
1158 006572 005067 011120 CLR    XSPCEV          : CLR XSPEC EVENT FLAG
1159 006576          RETURN          : RETURN TO MAIN LOOP
1160
1161 :PROCESSOR FOR 'DETAILED' ERROR TABLE PRINTOUT COMMAND 'ERRORS'
1162
1163 :THIS ROUTINE WILL INITIALIZE THE TEMPORARY LOCATIONS REQUIRED
1164 :BY THE XMTR AND RCVR ERROR EVENTS. IT WILL THEN QUICKLY CHECK THE
1165 :RCVR AND XMTR ERROR TABLES FOR ANY ENTRIES. IF NONE EXIST, THE MESSAGE
1166 :   '**NO ERRORS TO REPORT**'
1167 : WILL BE PRINTED ON THE CONSOLE AND THAT IS ALL.
1168 : IF ANY ENTRIES WERE FOUND, THE XMTR ERROR EVENT FLAG 'TEREV' WILL BE SET
1169 : WHICH WILL CAUSE THE XMTR ERRORS AND THE RCVR ERRORS (IF ANY) TO
1170 : BE PRINTED.
1171
1172
1173
1174 006600          PROC    CPERR
(1)
(1) 006600          CPERR:          : **ENTRY POINT**
1175 006600 022766 000001 000002 CMP    #1,2(SP)          : ANY ARGUMENTS?
1176 006606 001044          BNE    SYNRR          : ERROR IF THERE ARE.
1177 006610 012700 025160 MOV    #TERTBL,R0          : POINT AT XMTR TABLE
1178 006614 012701 001350 MOV    #37*30,R1          : SET TABLE LENGTH COUNTER
1179 006620 005720          1$:    TST    (R0)+          : ANY ENTRIES?
1180 006622 001016          BNE    SERFL          : YES, CALL ERROR MODULE
1181 006624 005301          DEC    R1          : NO, CHECK WHOLE TABLE
1182 006626 001374          BNE    1$
1183 006630          CALL    PNTLIN,<NOERMG> : PRINT 'NO ERRORS'
1184 006646 012767 177777 011112 MOV    #-1,ESCFLG          : FLAG COMMENT TO ISSUE 'PCL'
1185 006654 000167 000036 JMP    CPERTN          : AND RETURN
1186 006660 012767 100000 010774 SERFL: MOV    #B15,TEREV          : SET XMTR EVENT FLAG
1187 006666 012767 000001 011104 MOV    #1,ERR0          : INITIATE ERROR #
1188 006674 012767 000001 011100 MOV    #1,ERR1          : INITIATE RCVR ADDR
1189 006702 012767 025160 011074 MOV    #TERTBL,ERR2          : INITIATE TABLE POINTER
1190 006710 052767 100000 011010 BIS    #B15,HDRFLG          : SET HEADER FLAG
1191 006716          CPERTN: RETURN
1192
1193          SYNRR: SEC
1194 006720 000261          JMP    CPERTN          : SET 'C' BIT TO INDICATE SYNTAX ERR
1194 006722 000167 177770
```

.SBTTL RECEIVER ADDRESS QUEUE LOADER ROUTINE

1196  
1197  
1198  
1199  
1200  
1201  
1202  
1203  
1204  
1205  
1206  
1207  
1208  
1209  
(1)  
(1)  
1210  
1211  
1212  
1213  
1214  
1215  
1216  
1217  
1218  
1219  
1220  
1221  
1222  
1223  
1224  
1225  
1226  
1227  
1228  
1229  
1230  
1231  
1232  
1233  
1234  
1235  
1236  
1237  
1238

006726  
006726  
006732  
006736  
006742  
006746  
006752  
006754  
006760  
006764  
006766  
006770  
006774  
006776  
007002  
007010  
007014  
007016  
007024  
007044  
007046  
007052  
007054  
007070  
007106  
007122

005067 010730  
012702 000037  
012700 020110  
022710 177777  
001002  
004767 000036  
062700 000014  
005302  
001367  
005767 007440  
001424  
005267 010744  
012767 100000  
116067 000002 021253  
000207  
005767 010636  
001753  
007054  
007070  
007106  
000727

010674

```

: LOAD THE RECEIVER ADDRESS SOFTWARE QUEUE
: THE TRANSMITTER EVENT WILL PICK RCVR ADDRESSES FROM THE QUEUE
: UNTIL IT IS EMPTY.
: IF THE QUEUE IS LOADED BUT STILL REMAINS EMPTY, AND PCLGO IS SET,
: THIS MEANS THE OPERATOR IS TRYING TO RUN BUT HASN'T ENTERED
: ANY RECEIVER ADDRESSES (USING 'RANGE' OR 'ADD' ETC.)
:
PROC ADQLD
ADQLD:
REGSAV
CLR QLDEV
MOV #37,R2
MOV #RADB,R0
QCHACT: CMP #-1,(R0)
BNE QLOOK
JSR PC,QLOAD
QLOOK: ADD #14,R0
DEC R2
BNE QCHACT
TST AQQ
BEQ QMTRN
INC RCTXPS
QRTN: MOV #B15, TXMEV
REGRES
RETURN

: **ENTRY POINT**
: SAVE R0...R5
: CLR QUEUE LOAD EVENT FLAG
: POSITION COUNTER
: R0 POINTS AT TABLE
: IS ACTIVE FLAG SET IN TABLE?
: NO, LOOK FOR NEXT ONE
: YES, LOAD ADDR INTO QUEUE

: ALL ENTRIES CHECKED?

: IS THERE ANYTHING IN QUEUE?
: NO, THIS IS NOT A VALID PASS
: YES, INCR PASS NO.
: SET XMTR EVENT FLAG
: RESTORE R0...R5

: GET RCV ADDR INTO HIGH BYTE
: PUT IT IN ADDR QUEUE

: ARE WE RUNNING?
: NO, LEAVE
: STOP PRINTING ANYTHING ELSE
: TELL OPERATOR NO RCVRs
: FAKE CNTRL-C
: RETURN

```

```

PROC ADQLD
ADQLD:
REGSAV
CLR QLDEV
MOV #37,R2
MOV #RADB,R0
QCHACT: CMP #-1,(R0)
BNE QLOOK
JSR PC,QLOAD
QLOOK: ADD #14,R0
DEC R2
BNE QCHACT
TST AQQ
BEQ QMTRN
INC RCTXPS
QRTN: MOV #B15, TXMEV
REGRES
RETURN

QLOAD: MOVB 2(R0),BKELEM+1
CALL ENQ,<BKELEM,AQQ>
RTS PC

QMTRN: TST PCLGO
BEQ QRTN
CALL PRCTLO
CALL PNTLIN,<MTQMSG>
CALL PRESC
BR QRTN

```

.SBTTL DATA GENERATION (RANDOM) ROUTINE

: GENERATE A BUFFER OF DATA AND NOTE THE FOLLOWING CONDITIONS:  
: BITS <8:0> OF THE FIRST WORD = MESSAGE LENGTH  
: IF THE FIRST WORD IS 170000 OR HIGHER, EXPECT A REJECT  
: IF THE MESSAGE LENGTH IS > 602, EXPECT A TRUNCATE  
: GENERATE RANDOM DATA USING THE FOLLOWING FORMULA:  
: SN = (SN-1 \* RANDOM NO.) + RANDOM INCREMENT  
  
: WHERE S = DATA SEED; AND N = A NUMBER FROM 1 TO MESSAGE LENGTH.  
: A MESSAGE LENGTH OF 0 IS NOT ALLOWED AND IS CHANGED TO 1.

1240  
1241  
1242  
1243  
1244  
1245  
1246  
1247  
1248  
1249  
1250  
1251  
1252  
1253  
1254  
1255  
(1)  
(1)  
1256  
1257  
1258  
1259  
1260  
1261  
1262  
1263  
1264  
1265  
1266  
1267  
1268  
1269  
1270  
1271  
1272  
1273  
1274  
1275  
1276  
1277  
1278  
1279  
1280  
1281  
1282  
1283

007124  
007124  
007124  
007130  
007134  
007140  
007146  
007150  
007156  
007164  
007166  
007174  
007202  
007204  
007212  
007216  
007222  
007226  
007230  
007232  
007236  
007242  
007246  
007270  
007276  
007300  
007302  
007310  
007316  
007322

005067 010616  
005067 010614  
005067 010612  
042767 177000  
001003  
012767 000001  
026727 010560  
002403  
012767 177777  
022767 170000  
101005  
012767 177777  
005067 010534  
012700 020676  
016705 010514  
006105  
005405  
010567 010516  
016705 010500  
016720 010470  
066767 010464  
005305  
003360  
016767 010430  
012767 100000  
005067 010346

010574  
C10564  
000602  
010556  
010534  
010536  
010514  
010440  
010432  
010366

DATGEN:  
DTCNT:  
DTGNC:  
DTGNCO:  
DTCLP:  
DTCDON:

PROC DATGEN  
CLR RCTXPS  
CLR RJCTF  
CLR TRNKF  
BIC #177000,MSGLSD  
BNE DTCNT  
MOV #1,MSGLSD  
DTCNT: CMP MSGLSD,#602  
BLT DTGNC  
MOV #-1,TRNKF  
DTGNC: CMP #170000,DTSEED  
BHI DTGNCO  
MOV #-1,RJCTF  
DTGNCO: MOV #DATBUF,R0  
MOV MSGLSD,R5  
ROL R5  
NEG R5  
MOV R5,TXML  
MOV MSGLSD,R5  
DTCLP: MOV DTSEED,(R0)+  
MULP RANM,DTSEED  
ADD RANK,DTSEED  
DEC R5  
BGT DTCLP  
DTCDON: MOV DTSEED,MSGLSD  
MOV #B15,TXMEV  
CLR DATGEV  
RETURN

:\*\*ENTRY POINT\*\*  
:CLEAR DATA PASS FLAG  
:CLEAR REJECT SOFTWARE FLAG  
:CLR TRUNCATE SOFTWARE FLAG  
:LENGTH NOT TO EXCEED 1000  
:IF NON-0, OKAY, CONTINUE.  
:IF 0, MAKE IT AT LEAST 1  
:IS LENGTH LESS THAN 602?  
  
:NO,SET TRUNCATE SOFTWARE FLAG  
:IS DATA SEED -10000 OR MORE?  
  
:YES SET REJECT SOFTWARE FLAG  
:AND CLR TRUNCATE SFTWR FLAG  
:POINT R0 TO TOP OF BUFFER  
:R5 IS MESSAGE LENGTH  
:DOUBLE IT  
:NEGATE IT  
:SAVE IT FOR TRANSMIT MODULE  
:R5 IS MSG LENGTH AGAIN  
:PUT WORD INTO BUFFER  
:GENERATE NEW RANDOM NUMBER  
  
:IF R5 = 0, FINISHED  
:GET NEW LENGTH  
:SET XMIT EVENT FLAG  
:CLEAR DAT GEN EVENT FLAG



.SBTTL MULTIPLY ROUTINE FOR DATA GENERATION

1285  
1286  
1287  
1288  
1289  
1290  
1291  
1292  
1293  
1294  
1295  
1296  
1297  
1298  
1299  
1300  
1301  
1302  
1303  
1304  
1305  
1306  
1307  
1308  
1309  
1310  
1311  
1312  
1313  
1314  
1315  
1316  
1317

007324 012601  
007326 011603  
007330 010446  
007332 012704 000020  
007336 005002  
007340 006002  
007342 006003  
007344 103001  
007346 060102  
007350 005304  
007352 003372  
007354 012604  
007356 006202  
007360 006003  
007362 010316  
007364 000134

```
:UNSIGNED MULTIPLY ROUTINE  
:CALLED BY 'JSR R4,MLI'  
:WITH MULTIPLICAND IN R4 AND MULTIPLIER ON STACK  
:PRODUCT RETURNED ON TOP OF STACK  
MLI:  MOV    (SP)+,R1      ;GET MULTIPLICAND  
      MOV    (SP),R3     ;GET MULTIPLIER  
      MOV    R4,-(SP)    ;SAVE R4  
      MOV    #16.,R4    ;SET UP FOR 16 BIT MULTIPLY  
      CLR    R2  
MUL:  ROR    R2           ;SHIFT PRODUCT  
      ROR    R3  
      BCC   CYCL        ;CHECK IF MULTIPLIER BIT IS 0  
      ADD   R1,R2       ;ADD IN MULTIPLICAND  
CYCL: DEC    R4         ;COUNT LOOP  
      BGT   MUL  
      MOV   (SP)+,R4    ;RESTORE R4  
      ASR  R2           ;ONE LAST SHIFT  
      ROR  R3           ;PRODUCT IS IN R3  
      MOV  R3,(SP)     ;STORE RESULT ON STACK  
      JMP  @R4+        ;RETURN
```

```
:MACRO FOR THE ABOVE IS AS FOLLOWS:  
:MACRO  MULP  A,B  
:      MOV  A,-(SP)    ;SAVE A ON STACK  
:      MOV  B,R4      ;SAVE B IN R4  
:      JSR  R4,MLI    ;PERFORM MULTIPLICATION  
:      .WORD .+2  
:      MOV  (SP)+,B   ;PUT PRODUCT INTO B  
:ENDM
```

.SBTTL TRANSMIT MODULE

1319  
1320  
1321  
1322  
1323  
1324  
1325  
1326  
1327  
1328  
1329  
1330  
1331  
1332  
1333  
1334  
1335  
1336  
(1)  
(1)  
1337  
1338  
1339  
1340  
1341  
1342  
1343  
1344  
1345  
1346  
1347  
1348  
1349  
1350  
1351  
1352  
1353  
1354  
1355  
1356  
1357  
1358  
1359  
1360  
1361  
1362  
1363  
1364  
1365

007366 060101  
007370  
007370 005767 010314  
007374 001455  
007376 005067 010302  
007402  
007410 005767 007020  
007414 001446  
007416 016777 010332 006470  
007424 012777 020676 006464  
007432  
007452 116767 020617 010302  
007460 016700 010276  
007464 006300  
007466 006300  
007470 010005  
007472 006300  
007474 060500  
007476 062700 020074  
007502 062760 000001 000006  
007510 005560 000004  
007514 016777 020554 006364  
007522 056777 177640 006356  
007530  
007532 012767 100000 010126  
007540 026727 010202 000004  
007546 001402  
007550 000167 177754  
007554 012767 100000 010106  
007562 000167 177742

: CONTROL TRANSMISSION OF RANDOM DATA TO DE-QUEUED RECEIVER ADDRESSES  
: IF 'PCLGO' IS SET, ('GO' OR 'CONTINUE' SET IT), START TRANSMITTING  
: THE DATA CONTAINED IN THE BUFFER 'DATBUF'.  
: THE TARGET RECEIVER ADDRESS IS DEQUEUED FROM THE ADDRESS QUEUE.  
: THE MESSAGE LENGTH WAS DETERMINED DURING THE GENERATION OF THE DATA.  
: NOTE THAT BIT '5 OF 'TXMST' MAY BE 1 OR 0 DEPENDING UPON THE USE  
: OF THE 'RIB SET' OR 'RIB CLEAR' COMMANDS.

TXMST: .WORD 060101 ;TRANSMITTER COMMAND WORD

PROC TXMIT

TXMIT:

TST PCLGO  
BEQ TXRTN  
CLR TXMEV  
BDINIT XMTR  
TST A00  
BEQ TXOUT  
MOV TXML,@TSBC  
MOV #DATBUF,@TSBA  
CALL DEQ,<FRELEM,A00>  
MOVB FRELEM+1,CURAD  
MOV CURAD,R0  
ASL R0  
ASL R0  
MOV R0,R5  
ASL R0  
ADD R5,R0  
ADD #RADB0,R0  
ADD #1,6(R0)  
ADC 4(R0)  
MOV FRELEM,@TCR  
BIS TXMST,@TCR

:\*\*ENTRY POINT\*\*  
:CAN PCL GO?  
:IF NOT, RETURN  
:CLR XMTR EVENT FLAG  
:CLR XMTR HARDWARE  
:ANY ELEMENTS IN ADDR QUEUE?  
:IF NOT, FILL IT UP AGAIN  
:LOAD BYTE COUNT  
:LOAD BUS ADDRESS  
:DEQUEUE RECEIVER ADDRESS  
:GET ADDRESS TABLE OFFSET  
:FIND ADDRESS TABLE ENTRY  
: IN ORDER TO UPDATE  
: 'ATTEMPTS'

TXRTN: RETURN

TXOUT: MOV #B15,QLDEV  
CMP RCTXPS,#4  
BEQ TXDGEN  
JMP TXRTN  
TXDGEN: MOV #B15,DATGEV  
JMP TXRTN

:UPDATE DOUBLE WORD  
:GIVE RECEIVER ADDR TO XMTR  
:START TRANSMISSION  
:SET QUEUE LOAD EVENT FLAG  
:IS THIS THE 5TH PASS?  
:IF SO, SET DATA GEN EVENT FLAG  
:RETURN  
:SET DAT GEN EVENT FLAG  
:RETURN

1367  
1368  
1369  
1370  
1371  
1372  
1373  
1374  
1375  
1376  
1377  
1378  
1379  
1380  
1381  
1382  
1383  
1384  
1385  
1386  
1387  
1388  
1389  
1390  
1391  
1392  
1393  
1394  
1395  
1396  
1397  
(1)  
(1)  
(1)  
1398  
1399

100000  
000020  
000200  
000040  
000004  
007566  
007572 042777 000100 006306  
007600 012737 000200 177776  
007606 032777 100000 006274  
007614 001402  
007616 000167 000114  
007622 032777 000200 006260  
007630 001402  
007632 000167 000610  
007636 032777 000040 006244  
007644 001402  
007646 000167 000772  
007652 132777 000004 006242  
007660 001402  
007662 000167 001074  
007666 032777 000020 006214  
007674 001402  
007676 000167 000514  
007702 012767 100000 007774  
007710  
  
007730  
007734 000002

;;; TRANSMITTER INTERRUPT HANDLER  
;;; SORT THE CAUSES OF TRANSMITTER INTERRUPTS  
;;; AND GO TO THE PROPER HANDLING ROUTINE.

TXER = 100000  
TXBSY - 20  
TXSUC - 200  
TXSOR - 40  
NOWMST = 4

XMTINT: REGSAV  
BIC #B06,@TCR  
MOV #200,@MPS  
BIT #TXER,@TSR  
BEQ XMTIS  
JMP ERRINT  
XMTIS: BIT #TXSUC,@TSR  
BEQ XMTSR  
JMP SUCINT  
XMTSR: BIT #TXSOR,@TSR  
BEQ XMTPNM  
JMP SORINT  
XMTPNM: BITB #NOWMST,@TMMRH  
BEQ XMTIB  
JMP NMINT  
XMTIB: BIT #TXBSY,@TSR  
BEQ XMTPRB  
JMP BSYINT  
XMTPRB: MOV #B15, TXMEV  
ERROT \N

;;;SAVE R0...R5  
;;;CLR TXM INTR ENABLE  
;;;ALLOW RCVR INTR BUT NOT TTY  
;;;IS THERE A HARDWARE ERROR?  
;;;NO, CHECK SUC TXF  
;;;HANDLE ERROR  
;;;WAS IT A SUC TRANSFER?  
;;;NO, CHECK SOFTWARE REJECT  
;;;HANDLE SUC TXF  
;;;WAS MESSAGE REJECTED?  
;;;NO, CHECK NOW MASTER  
;;;HANDLE REJECT  
;;;IS THIS UNIT NOW MASTER?  
;;;NO, WAS RECVR BUSY?  
;;;YES, HANDLE NOW MASTER INT  
;;;WAS RECEIVER BUSY  
;;;NO, INTERRUPT WAS ERRONEOUS  
;;;HANDLE BUSY  
;;;SET XMTR EVENT FLAG  
;;;ERROR:ERRONEOUS INTERRUPT FROM XMTR  
  
;\*\*\*\* XMTR ERROR 1 \*\*\*\*  
  
;;;RESTORE R0...R5  
;;;RETURN

REGRES  
RTI

```
1401 ;XMTR ERROR INTERRUPT ROUTINE
1402
1403
1404 ; DETERMINE AND REPORT THE CAUSE OF THE TRANSMITTER ERROR.
1405
1406
1407 007736 032777 040000 006144 ERRINT: BIT #B14,@TSR ;IS ERROR NON EXISTANT LOCATION?
1408 007744 001412 BEQ ERRA ;ERROR:NON-EXISTANT LOC ERROR IN XMTR
1409 007746 ERROT \N
(1) ;**** XMTR ERROR 2 ****
(1)
(1)
1410 007766 000167 000402 006110 ERRRA: JMP ERRX ;IS ERROR MEM OFL?
1411 007772 032777 020000 BIT #B13,@TSR
1412 010000 001412 BEQ ERRA
1413 010002 ERROT \N ;ERROR:MEM OFL ERROR IN XMTR
(1) ;**** XMTR ERROR 3 ****
(1)
(1)
1414 010022 000167 000346 006054 ERRB: JMP ERRX ;IS ERROR TXM ERROR?
1415 010026 032777 010000 BIT #B12,@TSR
1416 010034 001472 BEQ ERRC
1417 010036 017767 006046 007720 MOV @TSR,RSPC ;SAVE RESPONSE CODES
1418 010044 042767 177760 007712 BIC #-20,RSPC ;REMOVE GARBAGE
1419 010052 022767 000015 007704 CMP #15,RSPC ;RSP CODES 11&01?
1420 010060 001012 BNE ERRA1
1421 010062 ERROT \N ;ERROR:TXM ERROR. RCVR ACCEPTED A NULL
(1) ;**** XMTR ERROR 4 ****
(1)
(1)
1422 010102 000167 000266 007650 ERRB1: JMP ERRX ;DISCARD RSP A'S
1423 010106 042767 000003 BIC #3,RSPC ;RSB B 00?
1424 010114 001012 BNE ERRA2
1425 010116 ERROT \N ;ERROR:TXM ERROR. RCVR HAS GONE OFF LINE
(1) ;**** XMTR ERROR 5 ****
(1)
(1)
1426 010136 000167 000232 007614 ERRB2: JMP ERRX ;RSP B = 10?
1427 010142 022767 000010 CMP #10,RSPC
1428 010150 001012 BNE ERRA3
1429 010152 ERROT \N ;ERROR:TXM ERROR. WORD OR CRC REJECTED
(1) ;**** XMTR ERROR 6 ****
(1)
(1)
1430 010172 000167 000176 ERRB3: JMP ERRX ;ERROR:MISCELLANEOUS TXM ERROR
1431 010176 ERROT \N
(1) ;**** XMTR ERROR 7 ****
(1)
(1)
1432 010216 000167 000152 005660 ERRC: JMP ERRX ;MASTER DOWN?
1433 010222 032777 004000 BIT #B11,@TSR
1434 010230 001417 BEQ ERRA4
1435 010232 ERROT \N ;ERROR: M A S T E R D O W N .
(1) ;**** XMTR ERROR 10 ****
(1)
(1)
```

```

1436 010252 005067 007432          CLR      PCLGO          ;STOP TRANSMITTER
1437 010256 012767 100000 007430  MOV      #B15,SPCEV    ;SET SPECIAL EVENT FLAG
1438 010264 000167 000104          JMP      ERRX
1439 010270 032777 002000 005612  ERRD:   BIT      #B10,@TSR ;TIMEOUT ERRCR?
1440 010276 001422          BEQ      ERRE
1441 010300 032777 100000 005600  BIT      #B15,@TCR    ;IS 'R.I.B.' SET?
1442 010306 001404          BEQ      1$           ;NO MUST BE WEIRD ERROR.
1443 010310 032777 000020 005572  BIT      #TXBSY,@TSR  ;YES, IS TDM BUS BUSY?
1444 010316 001010          BNF      2$           ;YES, RECEIVER WASN'T THERE!
1445 010320          ERROT   \N          ;ERROR: ERRONEOUS TIMEOUT IN TRANSMITTER
(1)
(1)
(1)
1446 010340 000167 000030 005536  2$:    JMP      ERRX          ;TXM SILO OVERRUN?
1447 010344 032777 001000  ERRE:   BIT      #B09,@TSR
1448 010352 001410          BEQ      ERRX
1449 010354          ERROT   \N          ;ERROR:SILO OVERRUN ERROR IN XMTR
(1)
(1)
(1)
1450 010374          ERRX:   BDINIT   XMTR    ;CLEAR ALL XMTR HARDWARE
1451 010402 012767 100000 007274  MOV      #B15,TXMEV  ;SET XMTR EVENT FLAG
1452 010410          REGRES
1453 010414 000002          RTI                ;RESTORE R0...R5
                          ;RETURN

```

```

1455          ;BUSY INTERRUPT ROUTINE
1456
1457 010416 042777 000020 005464 BSYINT: BIC      #TXBSY,@TSR      ;CLEAR TDM BUS BUSY
1458 010424 012767 100000 007252      MOV      #B15, TXMEV    ;SET TXM EVENT FLAG
1459 010432      BDINIT  XMTR      ;CLEAR HARDWARE
1460 010440      REGRES      ;RESTORE RO...R5
1461 010444 000002      RTI      ;RETURN
1462
1463          ;SUCCESSFUL TRANSFER INTERRUPT ROUTINE
1464
1465          ;CLEAR SUC TXF
1466 010446 042777 000200 005434 SUCINT: BIC      #TXSUC,@TSR    ;IS SFTWR TRUNCATE FLAG SET?
1467 010454 005767 007272      TST      TRNKF      ;YES, GO CHECK SORE
1468 010460 001047      BNE      SUCIA      ;IS SORE SET?
1469 010462 032777 000040 005420 SUCINY: BIT      #TXSOR,@TSR    ;NO, CONTINUE
1470 010470 001414      BEQ      SUCINP      ;ERROR:MESSAGE TRUNCATED UNEXPECTEDLY
1471 010472      ERROT  \N
(1)
(1)
(1)
1472 010512 000421      BR      SHBRT      ;DON'T INC SUC CONNS IF ERROR
1473 010514 042777 000040 005366 SUCINP: BIC      #TXSOR,@TSR    ;CLR SORE
1474 010522 016700 007234      MOV      CURAD,R0    ;PREPARE TO UPDATE STATUS TABLE
1475 010526 006300      ASL      R0      ;GET TABLE ENTRY FOR CURRENT
1476 010530 006300      ASL      R0      ;RECEIVER ADDRESS IN
1477 010532 010005      MOV      R0,R5
1478 010534 006300      ASL      R0      ;ORDER TO UPDATE
1479 010536 060500      ADD      R5,R0
1480 010540 062700 020074      ADD      #RADB0,R0
1481 010544 062760 000001 000012      ADD      #1,12(R0)
1482 010552 005560 000010      ADC      10(R0)
1483 010556 012767 100000 007120 SHBRT: MOV      #B15, TXMEV    ;SET TRANSMIT EVENT FLAG
1484 010564      BDINIT  XMTR      ;CLEAR HARDWARE
1485 010572      REGRES      ;RESTORE RO...R5
1486 010576 000002      RTI      ;RETURN
1487
1488 010600 032777 000040 005302 SUCIA: BIT      #TXSOR,@TSR    ;IS SORE SET? (SHOULD BE SET)
1489 010606 001011      BNE      SUCCS
1490 010610      ERROT  \N      ;ERROR:MSG FAILED TO BE TRUNCATED
(1)
(1)
(1)
1491 010630 000752      BR      SHBRT      ;DON'T INC SUC CONNS IF ERROR
1492 010632 042777 000040 005250 SUCCS: BIC      #TXSOR,@TSR    ;CLR SORE
1493 010640 000167 177616      JMP      SUCINY      ;PROCESS SUC TXF AS NORMAL
  
```

```
1495 ;SOFTWARE REJECT INTERRUPT ROUTINE
1496
1497 010644 005767 007100 SORINT: TST RJCTF ;IS SFTWR REJECT FLAG SET?
1498 010650 001432 BEQ SORIP ;IF NOT, SOMETHING'S WRONG
1499 010652 016700 007104 MOV CURAD,R0 ;PREPARE TO UPDATE STATUS TABLE
1500 010656 006300 ASL R0 ;GET TABLE ENTRY FOR CURRENT
1501 010660 006300 ASL R0 ; RECIIVER ADDRESS IN
1502 010662 010003 MOV R0,R3 ;
1503 010664 006300 ASL R0 ; ORDER TO UPDATE
1504 010666 060300 ADD R3,R0 ;
1505 010670 062700 020074 ADD #RADB0,R0 ; 'SUCCESSFUL' ELEMENT
1506 010674 062760 000001 000012 ADD #1,12(R0) ;UPDATE ENTRY
1507 010702 005560 000010 ADC 10(R0)
1508 010706 042777 000040 005174 SORCNT: BIC #TXSOR,@TSR ;CLR SORC
1509 010714 012767 100000 006762 MOV #B15, TXMEV ;SET XMIT EVENT FLAG
1510 010722 BDINIT XMTR ;CLEAR HARDWARE
1511 010730 REGRES ;RESTORE R0...R5
1512 010734 000002 RTI ;RETURN
1513
1514 010736 SORIP: ERROT \N ;ERROR:ERRONEOUS REJECT BY RECEIVER
(1) ;**** XMTR ERROR 15 ****
(1)
(1)
1515 010756 000167 177724 JMP SORCNT ;RETURN
1516
1517
1518 ;NOW MASTER INTERRUPT ROUTINE
1519 ;SET XSPEC EVENT FLAG (XSPEV)
1520 ;AND CLR NOW MST
1521
1522
1523 010762 142777 000004 005132 NMINT: BICB #NOWMST,@TMMRH ;CLEAR NOW MASTER
1524 010770 012767 100000 006720 MOV #B15,XSPCEV ;SET EXTRA-SPECIAL EVENT
1525 010776 052777 000100 005102 BIS #B06,@TCR ;RE-SET INTERRUPT ENABLE
1526 011004 REGRES ;RESTORE R0...R5
1527 011010 000002 RTI ;RETURN
1528
1529
```

.SBTTL RECEIVER MODULE

1531  
1532  
1533  
1534  
1535  
1536  
1537  
1538  
1539  
1540  
1541  
1542  
(1)  
(1)  
1543  
1544  
1545  
1546  
1547  
1548  
1549  
1550  
1551  
1552  
1553  
1554  
1555  
1556  
1557  
1558  
1559  
1560  
1561

020000  
011012  
011012  
011012 005067 006674  
011016 004757 000040  
011022  
011030 012777 022736 005100  
011036 012777 176400 005070  
011044 012777 020000 005054  
011052 052777 000100 005046  
011060  
011062  
011066 012700 022736  
011072 012701 000700  
011076 005020  
011100 005301  
011102 003375  
011104  
011110 000207

:CONTROL RECEPTION OF DATA.  
: DATA IS STORED IN A BUFFER 'RCBUF'  
: FOR LATER CHECKING.  
: 'RCBUF' BUFFER IS CLEARED BEFORE RECEPTION.

:ACTIVE IF RCVEV IS -VE

RCWD = B13

PROC RECV

RECV:

CLR RCVEV  
JSR PC,DBFCLR  
BDINIT RCVR  
MOV #RCBUF,@RDBA  
MOV #-1400,@RDBC  
MOV #RCWD,@RCR  
BIS #B06,@RCR  
RETURN

:\*\*ENTRY POINT\*\*  
:CLR RCVR EVENT FLAG  
:CLEAR RCVR DATA BUFFER FIRST  
:CLR HARDWARE (REGARDLESS)  
:LOAD RCVR BUS ADDRESS  
:LOAD BYTE COUNT FOR 600 WORDS  
:SET RCV WORD IN RCVR  
:SET RCVR INTERRUPT ENABLE

DBFCLR: REGSAV  
MOV #RCBUF,R0  
MOV #700,R1  
DBCLP: CLR (R0)+  
DEC R1  
BGT DBCLP  
REGRES  
RTS PC

:SAVE R0...R5  
:R0 POINTS AT BUFFER AREA  
:R1 HOLDS BUFFER SIZE  
:CLEAR BUFF LOC  
:DONE ?  
:NO, LOOP  
:YES, RESTORE R0...R5  
:AND RETURN



```
1563      ;;;RECEIVER INTERRUPT HANDLER.
1564
1565      100000      RCER      =      100000
1566      000400      RCDOR     =      400
1567      000200      RCSUC     -      200
1568      000040      RCRCM     -      40
1569
1570      011112      RCVINT: REGSAV      ;;;SAVE R0...R5
1571      011116      042777 000100 005002 BIC      #B06,@RCR      ;;;CLEAR RCVR INTR ENABLE
1572      011124      032777 100000 004776 BIT      #RCER,@RSR      ;;;IS THERE A HARDWARE ERROR?
1573      011132      001402          BEQ      RCVINA      ;;;NO,CHECK DATA OUTPUT READY
1574      011134      000167 000100      JMP      RERINT      ;;;HANDLE ERROR INTERRUPT
1575      011140      032777 000400 004762 RCVINA: BIT      #RCDOR,@RSR      ;;;IS DATA OUTPUT READY?
1576      011146      001402          BEQ      RCVINB      ;;;NO, CHECK SUC TXF
1577      011150      000167 000500      JMP      RDOINT      ;;;HANDLE DATA OUTPUT RDY INTERRUPT
1578      011154      032777 000200 004746 RCVINB: BIT      #RCSUC,@RSR      ;;;SUCCESSFUL TRANSFER SET?
1579      011162      001402          BEQ      RCVINC      ;;;NO, CHECK REJECT COMPLETED
1580      011164      000167 000536      JMP      RSUINT      ;;;HANDLE SUC TXF INTERRUPT
1581      011170      032777 000040 004732 RCVINC: BIT      #RCRCM,@RSR      ;;;REJECT COMPLETED INTERRUPT?
1582      011176      001402          BEQ      RCVIND      ;;;NO,ERRONEOUS INTERRUPT
1583      011200      000167 000776      JMP      RRJINT      ;;;HANDLE REJ-COM INTERRUPT
1584      011204      RCVIND: ERROR      \N      ;;;ERROR:UNKNOWN RECEIVER INTERRUPT OCCURRED
      (1)
      (1)
      (1)
1585      011224      012767 100000 006460      MOV      #B15,RCVEV      ;;;SET RCVR EVENT FLAG
1586      011232      REGRES
1587      011236      000002      RTI      ;;;RESTORE R0...R5
      ;RETURN
```

```
1589 ;RCVR ERROR INTERRUPT ROUTINE
1590
1591 011240 032777 040000 004662 RERINT: BIT #B14,@RSR ;IS ERPOR NON EXST LOC ERR?
1592 011246 001412 BEQ RERRA
1593 011250 ERROR \N ;ERROR:NON EXST LOC ERR IN RCVR
(1) ;**** RCVR ERROR 17 ****
(1)
(1)
1594 011270 000167 000340 JMP RERRX
1595 011274 032777 020000 004626 RERRA: BIT #B13,@RSR ;IS ERROR MEM OFLO?
1596 011302 001412 BEQ RERRB
1597 011304 ERROR \N ;ERROR:MEM OFLO ERROR IN RCVR
(1) ;**** RCVR ERROR 20 ****
(1)
(1)
1598 011324 000167 000304 JMP RERRX
1599 011330 032777 010000 004572 RERRB. BIT #B12,@RSR ;ANY TRANSMISSION ERRORS?
1600 011336 001457 BEQ RERRC
1601 011340 017767 004564 006416 MOV @RSR,RSPC ;GET RESPONSE CODFS
1602 011346 042767 177760 006410 BIC #-20,RSPC ;REMOVE GARBAGE
1603 011354 032767 000003 006402 BIT #3,RSPC ;LOOK AT TXM RSP CODES
1604 011362 001012 BNE RERRB1
1605 011364 ERROR \N ;ERROR:TXM WENT OFF LINE
(1) ;**** RCVR ERROR 21 ****
(1)
(1)
1606 011404 000167 000224 JMP RERRX
1607 011410 042767 000003 006346 RERRB1: BIC #3,RSPC ;REMOVE TXM RSP CODES NOW
1608 011416 022767 000010 006340 CMP #10,RSPC ;WAS THERE A CRC ERROR?
1609 011424 001012 BNE RERRB2
1610 011426 ERROR \N ;ERROR:RCVR CRC ERROR OCCURRED
(1) ;**** RCVR ERROR 22 ****
(1)
(1)
1611 011446 000167 000162 JMP RERRX
1612 011452 RERRB2: ERROR \N ;ERROR:FIRST WORD RECVD NOT VALID
(1) ;**** RCVR ERROR 23 ****
(1)
(1)
1613 011472 000167 000136 JMP RERRX
1614 011476 032777 004000 004424 RERRC: BIT #B11,@RSR ;WAS ERROR A PARITY ERROR?
1615 011504 001412 BEQ RERRD
1616 011506 ERROR \N ;ERROR:RCVR DETECTED INVALID PARITY
(1) ;**** RCVR ERROR 24 ****
(1)
(1)
1617 011526 000167 000102 JMP RERRX
1618 011532 032777 002000 004370 RERRD: BIT #B10,@RSR ;DID RCVR TIME OUT?
1619 011540 001412 BEQ RERRR
1620 011542 ERROR \N ;ERROR:RCVR TIMEOUT ERROR OCCURRED
(1) ;**** RCVR ERROR 25 ****
(1)
(1)
1621 011562 000167 000046 JMP RERRX
1622 011566 032777 001000 004334 RERRR: BIT #B09,@RSP ;WAS IT BYTE COUNT OVERFLOW?
1623 011574 001417 BEQ RERRX
```

CZPLACO PCL11 EXERCISER V02C  
CZPLAC.P11 08-JUN-79 15:55

MACY11 30A(1052) 25-JUN-79 08:52 PAGE 26-1  
RECEIVER MODULE

SEQ 0082

1624	011576	042777	040000	004322
1625	011604	042777	001000	004316
1626	011612	052777	100000	004306
1627	011620	052777	000100	004300
1628	011626			
1629	011632	000002		
1630	011634			
1631	011642	012767	100000	006042
1632	011650	000167	177752	
1633				

```

BIC #B14,@RCR
BIC #B09,@RSR
BIS #B15,@RCR
BIS #B06,@RCR
RERTRN: REGRES
RTI
RERRX: BDINIT RCVR
MOV #B15,RCVEV
JMP RERTRN

```

```

:CLR RCVR NPR
:CLR RCVR BYTE COUNT OVERFLOW
:SET 'REJECT' IN RECEIVER
:RE-ENABLE INTERRUPT
:RESTORE RO...R5
:RETURN
:CLEAR RECVR
:SET RCV EVENT FLAG

```

```

*NEW*
*NEW*
*NEW*
*NEW*

```

```

1635 ;RCVR DATA OUTPUT RDY INTERRUPT ROUTINE
1636
1637 011654 017767 004252 006062 RDOINT: MOV @RDEB,RCSEED ;GET FLAG-WORD FOR DATA SEED
1638 011662 022767 170000 006054 CMP #170000,RCSEED ;LOOK AT DATA SEED
1639 011670 101011 BHI RDOINC ;IF MORE -VE THAN -10000
1640 011672 052777 100000 004226 BIS #B15,@RCR ; SET REJECT IN RCVR
1641 011700 RDORTN: REGRES ;RESTORE RO...R5
1642 011704 052777 000100 004214 BIS #B06,@RCR ;RE-SET INTR ENAB
1643 011712 000002 RTI ;RETURN
1644 011714 052777 040001 004204 RDOINC: BIS #B14+B00,@RCR ;START RECEIVER GOING
1645 011722 000167 177752 JMP RDORTN
1646
1647 ;RCVR SUC TXF INTERRUPT ROUTINE
1648
1649 011726 032777 000040 004174 RSUINT: BIT #RCRCM,@RSR ;WAS RECOM SET?
1650 011734 001403 BEQ RSUCNT ;NO, CONTINUE
1651 011736 042777 000040 004164 BIC #RCRCM,@RSR ;YES, CLR IT AND CONTINUE
1652 011744 016701 005774 RSUCNT: MOV RCSEED,R1 ;GET DATA SEED
1653 011750 042701 177000 BIC #177000,R1 ;MASK MSG LENGTH
1654 011754 001002 BNE RSNT0 ;IF NOT 0, OKAY
1655 011756 012701 000001 MOV #1,R1 ;IF 0, MAKE IT 1
1656 011762 162701 000001 RSNT0: SUB #1,R1 ;ACCOUNT FOR FLAG WORD
1657 011766 020127 000600 CMP R1,#600 ;IS IT GREATER THAN 600?
1658 011772 003402 BLE RSFLSZ ;NO, LEAVE IT ALONE
1659 011774 012701 000600 MOV #600,R1 ;YES, SET IT TO LIMIT (600)
1660 012000 012700 001400 RSFLSZ: MOV #1400,R0 ;DETERMINE # OF BYTES RECEIVED
1661 012004 067700 004124 ADD @RDBC,R0 ;NOTHING TO CHECK, EXIT
1662 012010 001451 BEQ RSULV ;RO = NO. OF WORDS RECEIVED
1663 012012 006200 ASR R0 ;DID WE RECV ALL THE WORDS?
1664 012014 020001 CMP R0,R1 ;YES, CARRY ON
1665 012016 001412 BEQ RSUTST ;NOT ENOUGH !
1666 012020 103456 BLO ERNE ;ERROR:RCVR GOT TOO MANY WORDS
1667 012022 ERROR \N
(1)
(1)
(1)
1668 012042 000434 BR RSULV ;EXIT IF ERROR
1669 012044 012705 022736 RSUTST: MOV #RCBUF,R5 ;R5 POINTS AT RECD DATA
1670 012050 RSUGEN: MULP RANM,RCSEED ;GENERATE CHECK WORD
1671 012072 066767 005662 005644 ADD RANK,RCSEED ;COMPARE IT WITH RECV'D WORD
1672 012100 026725 005640 CMP RCSEED,(R5)+
1673 012104 001411 BEQ RSUCHK ;ERROR:DATA WORD RECV'D WAS BAD
1674 012106 ERROR \N
(1)
(1)
(1)
1675 012126 000402 BR RSULV ;EXIT IF ERROR
1676 012130 005300 RSUCHK: DEC R0 ;CHECKED ALL WORDS?
1677 012132 001346 BNE RSUGEN ;NO,CONTINUE
1678 012134 RSULV: BDINIT RCVR ;CLR HARDWARE
1679 012142 REGRES ;RESTORE RO...R5
1680 012146 012767 100000 005536 MOV #B15,RCVEV ;SET RCVR EVENT FLAG
1681 012154 000002 RTI ;RETURN
1682
1683 012156 ERNE: ERROR \N ;ERROR: RCVR GOT TOO FEW WORDS
(1)

```

```
(1)
(1)
1684 012176 000167 177732          JMP      RSULV          ;***** RCVR ERROR 30 *****
1685                                     ;EXIT IF ERROR
1686                                     ;RCVR REJECT INTERRUPT ROUTINE
1687
1688 012202          RRJINT: BDINIT  RCVR          ;CLEAR HARDWARE
1689 012210 012767 100000 005474    MOV      #B15,RCVEV    ;SET RCVR EVENT FLAG
1690 012216          REGRES          ;RESTORE RO...RS
1691 012222 000002          RTI          ;RETURN
1692
1693                                     ;KW11 CLOCK INTERRUPT ROUTINE
1694                                     ;UPDATE TICKS. IF = 60. UPDATE SECONDS.
1695                                     ;IF SECS = 60, UPDATE MINUTS. IF MINUTS = 60
1696                                     ;UPDATE HOURS.
1697
1698 012224 042777 000200 003726    CLKINT: BIC      #B07,@LCS    ;JUST IN CASE IT MATTERS.
1699 012232 105267 005414          INCB     TICKS             ;UPDATE TICKS
1700 012236 126727 005410 000074    CMPB    TICKS,#60.        ;GET TO 60 YET?
1701 012244 103424          BLO     CLKEXT            ;NO
1702 012246 105067 005400          CLRB    TICKS             ;YES, CLR TICKS
1703 012252 105267 005375          INCB    SECNDS            ;& UPDATE SECONDS
1704 012256 126727 005371 000074    CMPB    SECNDS,#60.      ;GET 60 SECS?
1705 012264 103414          BLO     CLKEXT            ;NO
1706 012266 105067 005361          CLRB    SECNDS            ;YES, CLR SECNDS
1707 012272 105267 005356          INCB    MINUTS            ;& UPDATE MINUTES
1708 012276 126727 005352 000074    CMPB    MINUTS,#60.     ;GET 60 MINUTES?
1709 012304 103404          BLO     CLKEXT            ;NO
1710 012306 105067 005342          CLRB    MINUTS            ;YES, CLEAR MINUTS
1711 012312 005267 005340          INC     HOURS             ;& UPDATE HOURS
1712 012316 000002          CLKEXT: RTI              ;RETURN
```

.SBTTL STATUS MODULE

: DUMP STATUS TABLE INDICATING ACTIVATED RECEIVERS  
 : SHOW NO. OF ATTEMPTED CONNECTIONS TO EACH ACTIVE RECEIVER  
 : AND NO. OF SUCCESSFUL CONNECTIONS TO EACH ACTIVE RECEIVER.  
 : QUANTITIES ARE IN DECIMAL AND ARE CAPABLE OF EXPANDING TO  
 : 655,359,999. ANY QUANTITY HIGHER THAN THAT AMOUNT WILL BE  
 : REPRESENTED AS '\*\*\*\*\*'. RECEIVER ADDRESS NUMBERS ARE  
 : PRINTED IN OCTAL

Address	Receiver	Attempted	Successful	Receiver Addr	Proc	Status	Comments
1718							
1719							
1720							
1721							
1722							
1723							
1724							
1725							
1726	012320				PROC	STATUS	
(1)							
(1)	012320				STATUS:		::**ENTRY POINT**
1727	012320	005767	004310		TST	T00	: IS TTY OUT QUEUE EMPTY?
1728	012324	001402			BEQ	60\$	
1729	012326	000167	000540		JMP	STRN	: NO, RETURN TO WHEREVER
1730	012332	005767	005342		60\$: TST	STPNTR	: IS OUTPUT POINTER AT TABLE?
1731	012336	001504			BEQ	STHDR	: NO, GO PRINT HEADER
1732	012340	026727	005334	020674	STCHK: CMP	STPNTR,#RADEND	: IS POINTER AT END OF TABLE?
1733	012346	002402			BLT	59\$	: YES, DONE; EXIT
1734	012350	000167	000476		JMP	STARXT	
1735	012354	005777	005320		59\$: TST	@STPNTR	: CHECK RCV ADDR ACTIVE FLAG
1736	012360	001002			BNE	58\$	
1737	012362	000167	000452		JMP	STBADV	: ADVANCE TABLE IF FLAG CLR
1738	012366	012700	032043		58\$: MOV	#STLIN1,R0	: OUTPUT POINTER FOR OCTJSP
1739	012372	062767	000002	005300	ADD	#2,STPNTR	
1740	012400	017701	005274		MOV	@STPNTR,R1	: OCTJSP DUMPS DATA IN STPNTR
1741	012404	012702	177777		MOV	#-1,R2	: DON'T COMPRESS BLANKS
1742	012410	004767	020250		JSR	PC,OCTJSP	
1743	012414	062767	000002	005256	ADD	#2,STPNTR	
1744	012422	012700	032065		MOV	#STLIN2,P0	: OUTPUT POINTER FOR CDDMG
1745	012426	016701	005246		MOV	STPNTR,R1	: OUTPUT WORD FOR CDDMG
1746	012432	012702	177777		MOV	#-1,R2	: DON'T COMPRESS BLANKS
1747	012436	004767	020422		JSR	PC,CDDMG	
1748	012442	020027	032112		STYHR: CMP	R0,#STLIN2+25	: BLANK REST OF FIELD OUT
1749	012446	103003			BHIS	STYON	: BY INSERTING SPACES
1750	012450	112720	000040		MOVB	#' ,(R0)+	
1751	012454	000772			BR	STYHR	
1752	012456	062767	000004	005214	STYON: ADD	#4,STPNTR	: OUTPUT POINTER FOR CDDMG
1753	012464	012700	032113		MOV	#STLIN3,R0	: OUTPUT WORD FOR CDDMG
1754	012470	016701	005204		MOV	STPNTR,R1	: DON'T COMPRESS BLANKS
1755	012474	012702	177777		MOV	#-1,R2	
1756	012500	004767	020360		JSR	PC,CDDMG	
1757	012504	020027	032127		STYTHR: CMP	R0,#STLIN3+14	: BLANK REST OF FIELD OUT
1758	012510	103003			BHIS	STYONT	: BY INSERTING SPACES
1759	012512	112720	000040		MOVB	#' ,(R0)+	
1760	012516	000772			BR	STYTHR	
1761	012520				STYONT: CALL	PNTLIN,<STLIN>	: ENQUEUE STATUS LINE FOR OUTPUT
1762	012536	062767	000004	005134	ADD	#4,STPNTR	: UPDATE POINTER FOR NEXT LINE
1763	012544	000167	000322		JMP	STRN	: RETURN
1764							
1765	012550	132777	000001	003344	STHDR: BITB	#1,@TMMRH	: IS MASTER SET HERE?
1766	012556	001407			BEQ	1\$	: NO.
1767	012560				CALL	PNTLIN,<THUMST>	: YES, TELL OPERATOR

1768	012576	132777	000002	003316	1\$:	BITB	#2,@TMMRH	:WELL, IS SECONDARY SET?
1769	012604	001407				BEQ	2\$	:NO.
1770	012606					CALL	PNTLIN,<THUSCN>	:YES, TELL OPERATOR
1771	012624	032767	100000	174534	2\$:	BIT	#B15,TXMST	:IS 'RIB' SET?
1772	012632	001410				BEQ	3\$	:NO, TELL OPERATOR
1773	012634					CALL	PNTLIN,<RBSTMG>	:YES, TELL OPERATOR
1774	012652	000407				BR	4\$	
1775	012654				3\$:	CALL	PNTLIN,<RBCLMG>	
1776	012672	005767	004762		4\$:	TST	KWFLG	:GOT A CLOCK?
1777	012676	001444				BEQ	5\$	:NO, FORGET ABOUT TIME.
1778	012700	005002				CLR	R2	:SUPPRESS LEADING ZEROS
1779	012702	012700	031730			MOV	#TMLIN1,R0	:OUTPUT POINTER FOR DECPNT
1780	012706	016701	004744			MOV	HOURS,R1	:OUTPUT DATA FOR DECPNT
1781	012712	004767	017770			JSR	PC,DECPNT	:ENQUEUE 'HOURS'
1782	012716	005002				CLR	R2	:SUPPRESS LEADING ZEROS
1783	012720	112720	000072			MOVB	#':,(R0)+	:INSERT COLON
1784	012724	116701	004724			MOVB	MINUTS,R1	:GET 'MINUTES' FOR DECPNT
1785	012730	004767	017752			JSR	PC,DECPNT	:ENQUEUE 'MINUTES'
1786	012734	005002				CLR	R2	:SUPPRESS LEADING ZEROS
1787	012736	112720	000072			MOVB	#':,(R0)+	:INSERT ANOTHER COLON
1788	012742	116701	004705			MOVB	SECNDS,R1	:GET 'SECONDS' FOR DECPNT
1789	012746	004767	017734			JSR	PC,DECPNT	:ENQUEUE 'SECONDS'
1790	012752	005002				CLR	R2	:SUPPRESS LEADING ZEROS
1791	012754	112720	000072			MOVB	#':,(R0)+	:INSERT ANOTHER COLON
1792	012760	116701	004666			MOVB	TICKS,R1	:GET 'TICKS' FOR DECPNT
1793	012764	004767	017716			JSR	PC,DECPNT	:ENQUEUE 'TICKS'
1794	012770	105010				CLRB	(R0)	:ENQUEUE '0' PRINT TERMINATOR.
1795	012772					CALL	PNTLIN,<ELPSTM>	:PRINT 'ELAPSED TIME'
1796	013010				5\$:	CALL	PNTLIN,<STITLE>	:ENQUEUE STATUS HEADER
1797	013026	012767	020110	004644		MOV	#RADB,STPNTR	:SET POINTER TO TOP OF STAT LIST
1798	013034	000167	000032			JMP	STRTN	:RETURN
1799								
1800	013040	062767	000014	004632	STBADV:	ADD	#14,STPNTR	:SET POINTER TO NEXT ACTIVE FLAG
1801	013046	000167	000020			IMP	STRTN	
1802								
1803	013052	005067	004620		STARXT:	CLR	STSEV	:CLR STATUS EVENT FLAG
1804	013056					CALL	PRESC	:FAKE CNTRL-C KEY
1805	013072				STRTN:	RETURN		:RETURN

.SBTTL TRANSMITTER ERRORS MODULE

```

:DUMP A TABLE OF TRANSMITTER ERRORS INCLUDING:
: ERROR NO., CONCT'D RCVR, AND ERROR COUNT FOR
: EACH OF THE TRANSMITTER ERRORS.
: IF THE ERROR COUNT FOR ANY ENTRY IS 0, THAT ERROR NO. IS NOT REPERTED
: IF, AFTER CHECKING THE ENTIRE XMTR ERROR TABLE, NO ERRORS
: ARE PRINTED, SIMPLY PRINT (NONE).
  
```

1807									
1808									
1809									
1810									
1811									
1812									
1813									
1814									
1815									
1816									
1817	013074								
(1)									
(1)	013074								
1818	013074	005767	003534						
1819	013100	001402							
1820	013102	000167	000324						
1821	013106	005767	004614						
1822	013112	001422							
1823	013114	005067	004606						
1824	013120								
1825	013136								
1826	013154	000167	000252						
1827	013160	026727	004614	000016	1\$:				
1828	013166	001042							
1829	013170	005067	004466						
1830	013174	052767	100000	004462					
1831	013202	052767	100000	004516					
1832	013210	012767	000001	004564					
1833	013216	012767	026626	004560					
1834	013224	005767	004474						
1835	013230	001007							
1836	013232								
1837	013250				2\$:				
1838	013264	005067	004434						
1839	013270	000167	000136						
1840	013274	005777	004504		3\$:				
1841	013300	001434							
1842	013302	012700	032345						
1843	013306	016701	004466						
1844	013312	004767	017346						
1845	013316	012700	032362						
1846	013322	016701	004454						
1847	013326	004767	017332						
1848	013332	012700	032401						
1849	013336	017701	004442						
1850	013342	004767	017332						
1851	013346								
1852	013364	052767	100000	004332					
1853	013372	062767	000002	004404	4\$:				
1854	013400	026727	004376	000037					
1855	013406	001404							
1856	013410	005267	004366						
1857	013414	000167	000012						
1858	013420	012767	000001	004354	5\$:				
1859	013426	005267	004346						
1860	013432								

```

: **ENTRY POINT**
: IS THE TTY OUTPUT QUEUE EMPTY
: YES, CONTINUE
: NO, EXIT
: HEADER PRINTED YET?
: YES, SKIP IT
: NO, PRINT IT NOW.

: AND RETURN
: IS THIS ERROR # 16?
: NOT YET.
: YES, CLEAR XMTR ERROR EVENT
: SET RCVR ERROR EVENT
: SET HEADER FLAG
: LOAD INITIAL XMTR #
: POINT RCVR ERR EVENT AT ITS TABLE
: DID WE PRINT ANYTHING?
: YES, O.K.
: NO, PRINT "(NONE)"
: NEW LINE

: RETURN
: ANY ERRORS?
: NO.
: READY TO PRINT ERROR NO.

: ERROR NO. IS IN OCTAL
: READY TO PRINT RCVR NO.

: RCVR NO. IS ALSO IN OCTAL
: NOW PRINT ERROR COUNT

: ERROR COUNT IS IN DECIMAL
: ENQUEUE TABLE OUTPUT LINE
: SET 'PRINTED FLAG'
: UPDATE TABLE POINTER
: ALL RCVR'S DONE?
: YES.
: NO, DO NEXT

: NEXT ERROR NO.
  
```

```

PROC      TEROS
TEROS:    TST      TOQ
          BEQ      60$
          JMP      TERTN
60$:      TST      HDRFLG
          BEQ      1$
          CLR      HDRFLG
          CALL     PNTLIN,<TERHDR>
          CALL     PNTLIN,<TRHLIN>
          JMP      TERTN
1$:       CMP      ERRO,#16
          BNE      3$
          CLR      TEREV
          BIS      #B15,REREV
          BIS      #B15,HDRFLG
          MOV      #1,ERR1
          MOV      #RERTBL,ERR2
          TST      PRINTD
          BNE      2$
          CALL     PNTLIN,<NONMG>
2$:       CALL     PNCRLF
          CLR      PRINTD
          JMP      TERTN
3$:       TST      @ERR2
          BEQ      4$
          MOV      #TRRNO,R0
          MOV      ERRO,R1
          JSR      PC,OCTJSP
          MOV      #TRRCN,R0
          MOV      ERR1,R1
          JSR      PC,OCTJSP
          MOV      #TRERC,R0
          MOV      @ERR2,R1
          JSR      PC,DECJSP
          CALL     PNTLIN,<TRELIN>
          BIS      #B15,PRINTD
4$:       ADD      #2,ERR2
          CMP      ERR1,#37
          BEQ      5$
          INC      ERR1
          JMP      TERTN
5$:       MOV      #1,ERR1
          INC      ERRO
TERTN:    RETURN
  
```



.SBTTL RECEIVER ERRORS MODULE

1862  
1863  
1864  
1865  
1866  
1867  
1868  
1869  
1870  
1871 013434  
(1)  
(1) 013434  
1872 013434 005767 003174  
1873 013440 001402  
1874 013442 000167 000310  
1875 013446 005767 004254  
1876 013452 001422  
1877 013454 005067 004246  
1878 013460  
1879 013476  
1880 013514 000167 000236  
1881 013520 026727 004254 000031 1\$:  
1882 013526 001034  
1883 013530 005067 004130  
1884 013534 005767 004164  
1885 013540 001007  
1886 013542  
1887 013560  
1888 013574 005067 004124  
1889 013600  
1890 013614 000167 000136  
1891 013620 005777 004160  
1892 013624 001434  
1893 013626 012700 032502  
1894 013632 016701 004142  
1895 013636 004767 017022  
1896 013642 012700 032517  
1897 013646 016701 004130  
1898 013652 004767 017006  
1899 013656 012700 032536  
1900 013662 017701 004116  
1901 013666 004767 017006  
1902 013672  
1903 013710 052767 100000 004006  
1904 013716 062767 000002 004060 4\$:  
1905 013724 026727 004052 000037  
1906 013732 001404  
1907 013734 005267 004042  
1908 013740 000167 000012  
1909 013744 012767 000001 004030 5\$:  
1910 013752 005267 004022  
1911 013756

: DUMP A TABLE OF RECEIVER ERRORS, INCLUDING:  
: ERROR NO., CONCT'D XMTR, AND ERROR COUNT  
: FOR EACH OF THE RECEIVER ERRORS.  
: IF THE ERROR COUNT FOR ANY ENTRY IS 0, THAT ERROR NO. IS NOT  
: REPORTED. IF, AFTER CHECKING THE ENTIRE RCVR ERROR TABLE, NO  
: ERRORS ARE PRINTED, SIMPLY PRINT '(NONE)'.  
PROC REROS

REROS: ;\*\*ENTRY POINT\*\*  
TST TOQ ;IS TTY OUTPUT QUEUE EMPTY?  
BEQ 60\$ ;YES, CONTINUE  
JMP RERTN ;NO, RETURN  
60\$: TST HDRFLG ;IS HEADER PRINTED YET?  
BEQ 1\$ ;YES, SKIP IT  
CLR HDRFLG ;NO, CLEAR FLAG  
CALL PNTLIN,<RERHDR> ;AND PRINT HEADER  
CALL PNTLIN,<RRHLIN>  
JMP RERTN ;AND RETURN  
1\$: CMP ERRO,#31 ;DONE LAST ERROR?  
BNE 3\$ ;NOT YET  
CLR REREV ;YES, CLEAR RCVR ERROR EVENT  
TST PRINTD ;DID WE PRINT ANYTHING?  
BNE 2\$ ;YES, O.K.  
CALL PNTLIN,<NONMG> ;NO, PRINT '(NONE)'  
2\$: CALL PNCRLF  
CLR PRINTD ;WRAP IT UP!  
CALL PRESC  
JMP RERTN  
3\$: TST @ERR2 ;ANY ERRORS?  
BEQ 4\$ ;NO.  
MOV #RCRNO,R0 ;READY TO PRINT ERROR NO.  
MOV ERRO,R1 ;ERROR NO.S ARE IN OCTAL  
JSR PC,OCTJSP ;READY TO PRINT XMTR NO.  
MOV #RCTRN,R0  
MOV ERR1,R1 ;XMTR NO.S ARE IN OCTAL  
JSR PC,OCTJSP ;NOW PRINT ERROR COUNT  
MOV #RCERC,R0  
MOV @ERR2,R1  
JSR PC,DECJSP ;ERROR COUNTS ARE IN DECIMAL  
CALL PNTLIN,<RCCLIN> ;ENQUEUE TABLE OUTPUT LINE  
BIS #B15,PRINTD ;SET 'PRINTED' FLAG  
4\$: ADD #2,ERR2 ;UPDATE TABLE POINTER  
CMP ERR1,#37 ;ALL XMTRS DONE  
BEQ 5\$ ;NO, DO NEXT  
INC ERR1  
JMP RERTN  
5\$: MOV #1,ERR1 ;YES, NEXT ERROR  
INC ERRO  
RERTN: RETURN

.SBTTL SUMMARY MODULE

1913  
1914  
1915  
1916  
1917  
1918  
1919  
1920  
1921  
1922  
1923  
1924 013760  
(1)  
(1) 013760  
1925 013760  
1926 013764  
1927 013766  
1928 013772  
1929 013774  
1930 014002  
1931 014004  
1932 014010  
1933 014014  
1934 014016  
1935 014022  
1936 014024  
1937 014030  
1938 014034  
1939 014040  
1940 014044  
1941 014050  
1942 014054  
1943 014060  
1944 014064  
1945 014070  
1946 014072  
1947 014076  
1948 014102  
1949 014106  
1950 014112  
1951 014116  
1952 014120  
1953 014124  
1954 014130  
1955 014146  
1956 014154  
1957  
1958 014160  
1959 014176  
1960 014204  
1961  
1962 014210  
1963 014216  
1964  
1965 014222  
1966 014226

: DUMP SUMMARY TABLE INDICATING ERROR NUMBERS AND THE LOCATIONS  
: OF THE ERRORS AS WELL AS THE NUMBER OF OCCURRENCES OF EACH OF  
: THE ERRORS. ERRORS WITH 0 OCCURRENCES WILL NOT BE LISTED. THE  
: ENTRY UNDER 'NO. OF OCCURRENCES' IS IN DECIMAL AND IS CAPABLE  
: OF EXPANDING TO 65,528. QUANTITIES OF ERRORS IN EXCESS OF  
: THIS WILL BE LISTED AS 'MXCNT'.  
:

PROC	SUMRY	
SUMRY:	TST TOQ	**ENTRY POINT**
	BNE SMRTN	:IS OUTPUT QUEUE EMPTY?
	TST SUMPNT	:NO, RETURN
	BEQ SUMHDR	:IS OUTPUT POINTER AT TABLE?
177777 SMCHK:	CMP @SUMPNT,#-1	:NO, GO PRINT HEADER
	BEQ SMARXT	:IS ERROR # - -1 ?
	MOV SUMPNT,R4	:YES,DONE; EXIT
	TST 4(R4)	:CHECK TOTAL COUNT OF THIS ERR
	BEQ SMADV	:IF 0, TRY NEXT ERROR
	MOV #SMLIN1,R0	:R0 IS OUTPUT POINTER FOR OCTJSP
	MOV (R4),R1	:R1 IS DATA BUFF FOR OCTJSP
	MOV #-1,R2	:DON'T COMPRESS BLANKS
	JSR PC,OCTJSP	
	MOV #SMLIN2,R0	
	MOV 2(R4),R1	
	MOV #-1,R2	:DON'T COMPRESS BLANKS
	JSR PC,OCTJSP	
	MOV #SMLIN3,R0	
	MOV 4(R4),R1	
	CMP R1,#177770	:REACHED MAX COUNT?
	BLOS SMPN	:NO,OK
	MOVB #'M,(R0)+	:YES, PRINT 'MXCNT' IN
	MOVB #'X,(R0)+	: NOTE THAT 'MXCNT'
	MOVB #'C,(R0)+	: ALSO HAS ONLY 5
	MOVB #'N,(R0)+	: ASCII CHARACTERS.
	MOVB #'T,(R0)+	
	BR SMSPN	
	MOV #-1,R2	:DON'T COMPRESS BLANKS
SMPN:	JSR PC,DECJSP	
SMSPN:	CALL PNTLIN,<SMLIN>	:ENQUEUE SUM LINE FOR OUTPUT
	ADD #6,SUMPNT	:UPDATE POINTER FOR NEXT LINE
	JMP SMRTN	:RETURN
SUMHDR:	CALL PNTLIN,<SMTITLE>	:ENQUEUE SUMMARY HEADER
	MOV #ERTBL,SUMPNT	:SET POINTER TO TOP OF SUM LIST
	JMP SMRTN	:RETURN
SMADV:	ADD #6,SUMPNT	:SET POINTER TO NEXT ENTRY
	JMP SMCHK	
SMARXT:	CLR SUMEV	:CLEAR SUMMARY EVENT FLAG
	CALL PRESC	:FAKE CNTRL-C KEY

CZPLACO PCL 11 EXERCISER VO2C  
CZPLAC.P11 08-JUN-79 15:55

M 7  
MACY11 30A(1052) 25-JUN-79 08:52 PAGE 31-1  
SUMMARY MODULE

SEQ 0090

1967 014242

SMARTN: RETURN

;RETURN

```

1969          .SBTTL ERROR UPDATE ROUTINES
1970          .SBTTL TRANSMITTER ERRORS
1971
1972          ;CALLED BY THE MACRO 'CALL ERRMOD,<P,ERADR>'
1973
1974          PROC      ERRMOD,<ERRNUM,ERRADR>
1974 014244      ERRNUM  =      2
1974          ERRADR  =      4
1974          (3)      000002
1974          (3)      000004
1974          (1)
1974          (1) 014244      ERRMOD:          ;**ENTRY POINT**
1975 014244      010046      MOV      R0,-(SP)          ;SAVE R0 ON STACK
1976 014246      010146      MOV      R1,-(SP)          ; AND R1
1977 014250      010246      MOV      R2,-(SP)          ; AND R2
1978 014252      010346      MOV      R3,-(SP)          ;AND R3
1979 014254      017767      001626 003512      MOV      @TCR,TEMP          ;SAVE ADDRESS OF CONNECTED RCVR
1980 014262      042767      160377 003504      BIC      #160377,TEMP
1981 014270      000367      003500      SWAB     TEMP          ;GET IT IN THE RIGHT BYTE
1982 014274      016500      000002      MOV      ERRNUM(R5),R0          ;GET ERROR NUMBER
1983 014300      010067      003472      MOV      R0,TEMP1          ;SAVE ERROR NUMBER
1984 014304      006300      ASL      R0          ;FIND TABLE ENTRY
1985 014306      010001      MOV      R0,R1          ; IN ORDER TO UPDATF
1986 014310      006300      ASL      R0          ; ADDRESS FIELD
1987 014312      060100      ADD      R1,R0
1988 014314      062700      024730      ADD      #ERTBLO,R0
1989 014320      016560      000004 000002      MOV      ERRADR(R5),2(R0)          ;ENTER ERROR ADDRESS
1990 014326      026027      000004 177771      CMP      4(R0),#177771          ;AT MAX COUNT YET?
1991 014334      103401      BLO     ERMIS          ;NO, INCREMENT COUNT
1992 014336      000444      BR      ERMIS          ;YES SKIP UPDATE.
1993 014340      005260      000004      ERMIS:  INC      4(R0)          ;UPDATE OCCURRENCES
1994 014344      005367      003426      DEC      TEMP1          ; (ERR # - 1)
1995 014350      MULT     37,TEMP1,R3          ; (E-1)X37
1996 014414      MULT     2,TEMP1,R3          ; [(E-1)X37]X2
1997 014420      005367      003350      DEC      TEMP          ; RCVR ADDR - 1
1998 014424      MULT     2,TEMP,R3          ; (R-1)X2
1999 014430      066767      003342 003336      ADD      TEMP1,TEMP          ; [(E-1)X37]X2 + (R-1)X2
2000 014436      062767      025160 003330      ADD      #ERTBL,TEMP          ;TEMP = #TERTBL + <[(E-1)X37]X2 + (R-1)X2>
2001 014444      005277      003324      INC      @TEMP          ;UPDATE TABLE ENTRY FOR THIS ERROR
2002 014450      012603      ERMIS:  MOV      (SP)+,R3          ;RESTORE R3
2003 014452      012602      MOV      (SP)+,R2          ;RESTORE R2
2004 014454      012601      MOV      (SP)+,R1          ;RESTORE R1
2005 014456      012600      MOV      (SP)+,R0          ;RESTORE R0
2006 014460      RETURN
  
```

2008  
2009  
2010  
2011  
2012  
(3)  
(3)  
(1)  
2013  
2014  
2015  
2016  
2017  
2018  
2019  
2020  
2021  
2022  
2023  
2024  
2025  
2026  
2027  
2028  
2029  
2030  
2031  
2032  
2033  
2034  
2035  
2036  
2037  
2038  
2039  
2040  
2041  
2042  
2043  
2044  
2045

014462  
000002  
000004  
014462  
014462 010046  
014464 010146  
014466 010246  
014470 010346  
014472 017767 001430 003274  
014500 042767 160377 003266  
014506 000367 003262  
014512 016500 000002  
014516 010067 003254  
014522 006300  
014524 010001  
014526 006300  
014530 060100  
014532 062700 024730  
014536 016560 000004 000002  
014544 026027 000004 177771  
014552 103401  
014554 000447  
014556 005260 000004  
014562 162767 000015 003206  
014570 005367 003202  
014574  
014640  
014644 005367 003124  
014650  
014654 066767 003116 003112  
014662 062767 026626 003104  
014670 005277 003100  
014674 012603  
014676 012602  
014700 012601  
014702 012600  
014704

```
.SBTTL RECEIVER ERRORS  
:CALLED BY THE MACRO 'CALL ERRMOR,<P,ERRADR>'  
ERRMOR: PROC ERRMOR,<ERRNUM,ERRADR>  
ERRNUM - 2  
ERRADR 4  
ERRMOR: ;**ENTRY POINT**  
MOV R0,-(SP) ;SAVE R0 ON THE STACK  
MOV R1,-(SP) ;AND R1  
MOV R2,-(SP) ;AND R2  
MOV R3,-(SP) ;AND R3  
MOV @RCR,TEMP ;GET ADDR OF CONNECTED XMTR  
BIC #160377,TEMP ; INTO RIGHT BYTE  
SWAB TEMP ;GET ERROR NUMBER  
MOV ERRNUM(R5),R0 ;AND SAVE IT  
MOV R0,TEMP ; FIND 'SUM' TABLE ENTRY  
ASL R0 ; IN ORDER TO UPDATE  
MOV R0,R1 ; ADDRESS FIELD  
ASL R0 ; AND # OF OCCURRENCES  
ADD R1,R0  
ADD #ERTBLO,R0  
MOV ERRADR(R5),2(R0) ;ENTER ERROR ADDRESS  
CMP 4(R0),#177771 ;AT MAX COUNT YET?  
BLO ERMISR ;NO, UPDATE ERROR COUNT  
BR ERMISR ;YES, SKIP UPDATES  
FRMINR: INC 4(R0) ;UPDATE OCCURRENCES  
SUB #15,TEMP1 ;ALIGN ERRORS TABLE FOR RCVR  
DEC TEMP1 ; ERR # - 1 (E-1)  
MULT 37,TEMP1,R3 ; (E-1)x37  
MULT 2,TEMP1,R3 ; [(E-1)x37]x2  
DEC TEMP ; XMTR ADDR - 1 (T-1)  
MULT 2,TEMP,R3 ; (T-1)x2  
ADD TEMP1,TEMP ; [(E-1)x37]x2 + (T-1)x2  
ADD #RERTBL,TEMP ; TEMP - #RERTBL+[(E-1)x37]x2 + (T-1)x2  
ERMISR: INC @TEMP ;UPDATE RCVR ERROR COUNT  
MOV (SP)+,R3 ;RESTORE R3  
MOV (SP)+,R2 ;RESTORE R2  
MOV (SP)+,R1 ;RESTORE R1  
MOV (SP)+,R0 ;RESTORE R0  
RETURN
```

```
;**ENTRY POINT**  
;SAVE R0 ON THE STACK  
;AND R1  
;AND R2  
;AND R3  
;GET ADDR OF CONNECTED XMTR  
; INTO RIGHT BYTE  
;GET ERROR NUMBER  
;AND SAVE IT  
; FIND 'SUM' TABLE ENTRY  
; IN ORDER TO UPDATE  
; ADDRESS FIELD  
; AND # OF OCCURRENCES  
;ENTER ERROR ADDRESS  
;AT MAX COUNT YET?  
;NO, UPDATE ERROR COUNT  
;YES, SKIP UPDATES  
;UPDATE OCCURRENCES  
;ALIGN ERRORS TABLE FOR RCVR  
; ERR # - 1 (E-1)  
; (E-1)x37  
; [(E-1)x37]x2  
; XMTR ADDR - 1 (T-1)  
; (T-1)x2  
; [(E-1)x37]x2 + (T-1)x2  
; TEMP - #RERTBL+[(E-1)x37]x2 + (T-1)x2  
;UPDATE RCVR ERROR COUNT  
;RESTORE R3  
;RESTORE R2  
;RESTORE R1  
;RESTORE R0
```

```
2047          .SBTTL UTILITY ROUTINES
2048          .SBTTL PROCESS AN INPUT CHARACTER FROM THE ITY
2049
2050 014706     PROC    TTINP
2051 (1)         (1)     TTINP:                ;**ENTRY POINT**
2052 014706     CALL    DEQ,<FRELEM,TIQ>      ;GET ITY INPUT CHARACTER.
2053 014726 142767 000200 013340     BICB   #200,FRELEM ;CLEAR OFF PARITY BIT.
2054 014734 116700 013334     MOVB   FRELEM,R0
2055 014740 120027 000141     CMPB   R0,#141    ;CONVERT LOWER CASE INPUT
2056 014744 002405     BLT    TTINH      ; TO REGULAR (UPPER CASE)
2057 014746 120027 000172     CMPB   R0,#172    ; LETTERS INSTEAD.
2058 014752 003002     BGT    TTINH
2059 014754 042700 000040     BIC    #B05,R0    ;CONVERT CHARACTER
2060 014760 010067 013310     MGV   R0,FRELEM  ; IN 'FRELEM'
2061 014764 012701 016044     MOV   #CMCHTB,R1 ; TO ITS PROCESSING
2062 014770 004767 015642     JSR   PC,PROCHR  ; ROUTINE.
2063 014774 001407     BEQ   CMMISC     ;IF MISC CHAR, CALL MISC PROC.
2064 014776     CALL   @R1,<FRELEM>             ;CALL PROCESSING ROUTINE.
2065 015012 000407     BR    TTRET      ;RETURN.
2066
2067 015014     CMMISC: CALL  PRMISC,<FRELEM>    ;PROCESS MISCELLANEOUS CHARACTER
2068 015032     TTRET:  RETURN ;RETURN.
```

```
.SBTTL TTY INPUT CHARACTER PROCESSING ROUTINES

:
: PROCESSOR FOR CARRIAGE RETURN
: THIS CHARACTER SIGNIFIES THE END OF A COMMAND LINE.
:
: PROC      PROC
:
: PRCR:
: TSTB      REQINP      ;**ENTRY POINT**
: BGE       CRRET       ;IF INPUT NOT BEING TYPED,
:           #CR,@CBUFPT ;IGNORE CHARACTER.
: DECB      CMDENT      ;PUT CR IN BUFFER.
: CLRB      REQINP      ;SET COMMAND ENTERED FLAG.
: CALL      PNCRLF      ;CLEAR INPUT REQUESTED FLAG.
:           #CR,@CBUFPT ;ECHO CR & LF.
:           CMDENT      ;RETURN.
: CRRET: RETURN

:
: PROCESSOR FOR CONTROL-O CHARACTER.
: ALL CHARACTERS PRESENTLY IN THE TTY OUTPUT QUEUE ARE THROWN AWAY.
:
: PROC      PRCTLO
:
: PRCTLO:
: CLR       TOQ          ;**ENTRY POINT**
: MOV       TOQ+QBACK,TOQ+QFRONT ;THROW AWAY ALL CHARACTERS
: CALL      PNCRLF      ;IN TTY OUTPUT QUEUE.
: CALL      PNTLIN,<CTLOMG> ;PRINT <CR> AND <LF>
: RETURN    ;ECHO '^O'.
:           #CR,@CBUFPT ;RETURN.

:
: PROCESSOR FOR CONTROL S.
: TEMPORARILY SUSPEND PRINTOUT ON CONSOLE DEVICE
:
: PRINTOUT WILL BE RESUMED UPON RECEIPT OF A CNTRL-Q
: OR ANY OTHER KEYBOARD INTERRUPT.
:
: PROC      PRCTLS
:
: PRCTLS:
: BIS       #B15,THLTFL ;**ENTRY POINT**
: RETURN    ;SET TTY HALT FLAG

:
: PROCESSOR FOR CONTROL Q.
: RESUME PRINTOUT ON CONSOLE IF TTOUT QUEUE HAS NOT BEEN
: CLEARED BY SOME OTHER MEANS.
:
: PROC      PRCTLQ
:
: PRCTLQ:
: BIC       #B15,THLTFL ;**ENTRY POINT**
: RETURN    ;CLEAR TTY HALT FLAG
```

2118  
2119  
2120  
2121  
2122  
2123  
2124  
(1)  
(1)  
2125  
2126  
2127  
2128  
2129  
2130  
2131  
2132  
2133  
(1)  
(1)  
2134  
2135  
2136  
2137  
2138  
2139  
2140  
2141  
2142  
2143  
2144  
2145  
2146  
(1)  
(1)  
2147  
2148  
2149  
2150  
2151  
2152  
2153  
2154  
2155  
2156  
2157  
2158  
2159  
2160  
2161  
2162  
2163  
2164  
2165  
2166  
2167

015164  
015164  
015164  
015202 000167 000016  
  
015206  
015206  
015206  
  
  
  
  
  
  
  
  
  
  
015224  
015224 005767 002430  
015230 001402  
015232 005077 000722  
015236 105367 002406  
015242 005067 002430  
015246 005067 002420  
015252 005067 002404  
015256 005067 002402  
015262 005067 002422  
015266  
015306  
015326  
015346  
015366 012767 016206 001016  
015374 105067 002251  
015400

```

:
: PROCESSOR FOR CONTROL-C.
: ECHO '^C' AND GO TO PRESC ROUTINE.
:
PROC PRCTL
PRCTL:
CALL PNTLIN,<CTLCMG>
JMP PRESC
: **ENTRY POINT**
: ECHO '^C'
: GO TO PRESC ROUTINE.

:
: PROCESSOR FOR CONTROL-U.
: INPUT COMMAND BEING TYPED IS DISCARDED.
:
PROC PRCTLU
PRCTLU:
CALL PNTLIN,<CTLUMG>
: **ENTRY POINT**
: ECHO '^U'
: DROP INTO PRESC

:
: PROCESSOR FOR CNTRL-C KEY.
: THIS KEY IS USED TO REQUEST INPUT. ALL OTHER EVENTS WILL CEASE
: AFTER THE CURRENT LINE. A 'PCL>' WILL BE ECHOED ON THE TTY. THE
: OPERATOR IS NOW FREE TO TYPE IN A COMMAND.
:
PROC PRESC
PRESC:
TST KWFLG
BEQ 14$
CLR @LCS
14$:
DECB REQINP
CLR STSEV
CLR SUMEV
CLR TEREV
CLR REREV
CLR PCLGO
CALL ENQ,<A.P,TOQ>
CALL ENQ,<A.C,TOQ>
CALL ENQ,<A.L,TOQ>
CALL ENQ,<A.PR,TOQ>
MOV #CMDBUF,CBUFPT
CLRB CMDENT
RETURN
: **ENTRY POINT**
: GOT A CLOCK?
: NO.
: STOP THE CLOCK
: SET INPUT REQUESTED FLAG.
: CLR STATUS EVENT
: CLR SUMMARY EVENT
: CLR XMTR ERROR EVENT
: AND RCVR ERROR EVENT
: STOP XMTR
: ECHO 'PCL>'.

: INITIALIZE COMMAND BUF PTR.
: CLEAR COMMAND ENTERED FLAG.
: RETURN.

:
: PROCESS RUB OUT KEY.
: LAST CHARACTER IN COMMAND BUFFER IS DELETED. A '^' IS ECHOED.

```



```

2168      ;
2169
2170 015402      PROC      PRDEL
(1)
(1) 015402      PRDEL:
2171 015402 105767 002242      TSTB      REQINP      ;**ENTRY POINT**
2172 015406 002034      BGE      PDRET      ;IF INPUT NOT REQUESTED,
2173 015410 026727 000776 016206  CMP      CBUFPT,#CMDBUF ; THEN IGNORE RUBOUT CHAR.
2174 015416 003016      BGT      1$          ;IF AT BEGINNING OF BUFFER,
2175 015420      CALL     PNCRLF      ; THEN ISSUE NEW 'PCL'
2176 015434      CALL     PRESC
2177 015450 000167 000024      JMP      PDRET
2178 015454 005367 000732      1$:      DEC      CBUFPT      ;DECREMENT BUFFER POINTER.
2179 015460      CALL     ENQ,<A,BKSL,TOQ> ;ECHO A '^'.
2180 015500      PDRET:   RETURN      ;RETURN.
2181
2182
2183      ;
2184      ; PROCESSOR FOR MISCELLANEOUS CHARACTERS.
2185      ; THE CHARACTER IS APPENDED TO THE COMMAND BUFFER.
2186      ;
2187
2188
2189 015502      PROC      PRMISC,<CHAR>
(3)          CHAR      -      2
(1)
(1) 015502      PRMISC:
2190 015502 105767 002142      TSTB      REQINP      ;**ENTRY POINT**
2191 015506 002034      BGE      PMRET      ;IF INPUT NOT REQUESTED,
2192 015510 117500 000002      MOV      @CHAR(R5),R0 ; THEN JUST IGNORE CHARACTER.
2193 015514 120027 000040      CMP      R0,#'
2194 015520 002403      BLT      PM176      ;IF CHARACTER
2195 015522 120027 000140      CMP      R0,#140     ; IS NONPRINTING
2196 015526 002402      BLT      PM187      ; THEN CHANGE
2197 015530 012700 000077      PM176:  MOV     #'?,R0   ; IT TO
2198 015534 026727 000652 016411  PM187:  CMP     CBUFPT,#CBFEND-1 ; ASCII '?'.
2199 015542 001416      BEQ      PMRET      ;IF WE ARE AT END OF BUFFER,
2200 015544 110077 000642      MOV      R0,@CBUFPT ; THEN JUST RETURN.
2201 015550 005267 000636      INC      CBUFPT      ;PUT CHARACTER INTO BUFFER
2202 015554 110067 022516      MOV      R0,BKELEM  ;UPDATE BUFFER POINTER.
2203 015560      CALL     ENQ,<BKELEM,TOQ> ;ECHO CHARACTER.
2204 015600      PMRET:   RETURN      ;RETURN.

```

2206  
2207  
2208  
2209  
2210  
2211  
2212  
(1)  
(1)  
2213  
2214  
2215  
2216  
2217  
2218  
2219  
2220  
2221  
2222  
2223  
2224  
2225  
2226  
2227  
2228  
2229  
2230  
2231  
2232  
2233

015602

015602

015602

015606

015610

015614

015616

015622

015642

015650

105777

002020

005767

001402

000167

116777

000002

000344

002116

000026

012426

000304

000304

.SBTTL TTY OUTPUT HANDLERS

:  
: OUTPUT A CHARACTER TO THE TELETYPE IF IT IS READY.  
:

PROC TTOUT

TTOUT:

TSTB @TTXCSR  
BGE TORET  
TST THLTFL  
BEQ 1\$  
JMP TORET

1\$:

CALL DEQ,<FRELEM,TOQ>  
MOVE FRELEM,@TTXBUF

TORET: RETURN

:\*\*ENTRY POINT\*\*  
:IF DEVICE IS NOT READY,  
: THEN JUST RETURN.  
:IS TTY HALTED (CNTRL-S)?  
:NO, O.K. TO PRINT  
:YES, DON'T DO ANYTHING.  
:GET NEXT CHAR TO TYPE.  
:OUTPUT IT.  
:RETURN.

.SBTTL TTY INPUT INTERRUPT PROCESSORS

TTIINT:

CLR THLTFL  
REGSAV  
MOVB @TTXBUF,INTIMP  
CALL ENQ,<INTIMP,TIQ>  
REGRES  
RTI

:\*\*INTERRUPT ENTRY POINT\*\*  
:CLEAR TTY HALT FLAG ON INPUT  
:SAVE R0 - R5.  
:GET INPUT CHARACTER.  
:PUT IT IN TTY INPUT QUEUE.  
:RESTORE R0 - R5.  
:RETURN.

.SBTTL MESSAGE PRINT ROUTINE

```
2235  
2236  
2237  
2238  
2239  
2240  
2241  
2242  
2243 015716  
  (3) 000002  
  (1)  
  (1) 015716  
2244 015716 016546 000002  
2245 015722 117667 000000 012346  
2246 015730 001412  
2247 015732  
2248 015752 005216  
2249 015754 000762  
2250  
2251 015756 005026  
2252 015760 000400  
2253  
2254  
2255  
2256  
2257  
2258 015762  
  (1)  
  (1) 015762  
2259 015762  
2260 016002  
2261 016022  
2262 016042
```

ENQUEUE CHARACTERS STARTING AT MESSAG IN TTY OUTPUT  
QUEUE TOQ UNTIL A ZERO BYTE IS ENCOUNTERED. ENQUEUE A CR & LF  
INSTEAD OF THE ZERO, & THEN EXIT FROM THE ROUTINE.

PROC PNTLIN,<MESSAG>  
- 2

PNTLIN:  
MOV MESSAG(R5),-(SP) ;\*\*ENTRY POINT\*\*  
PLODEC: MOVB @(SP),BKELEM ;GET ADDRESS OF MESSAGE.  
BEQ PLCRLF ;GET A CHARACTER.  
CALL ENQ,<BKELEM,TOQ> ;IF NULL, APPEND CR & LF.  
INC @SP ;ENQUEUE CHAR FOR TTY OUTPUT.  
BR PLODEC ;POINT TO NEXT CHARACTER.  
 ;PROCESS IT.

PLCRLF: CLR (SP)+ ;POP ADDR FROM STACK.  
BR PL219 ;APPEND CR & LF.

ENQUEUE A CR & LF IN TTY OUTPUT QUEUE.

PROC PNCRLF

PNCRLF:  
PL219: CALL ENQ,<A.CR,TOQ> ;\*\*ENTRY POINT\*\*  
CALL ENQ,<A.LF,TOQ> ;ENQUEUE A CR.  
CALL ENQ,<ZERO,TOQ> ;ENQUEUE A LF.  
RETURN ;ENQUEUE A NULL FILL CHAR.  
 ;RETURN.

.SBTTL DATA AREAS

2264  
2265  
2266  
2267  
2268 016044  
2269 016044 000003 015164  
2270 016050 000012 015034  
2271 016054 000015 015034  
2272 016060 000017 015076  
2273 016064 000021 015154  
2274 016070 000023 015144  
2275 016074 000025 015206  
2276 016100 000177 015402  
2277 016104 177777  
2278  
2279  
2280  
2281  
2282 016106 164200  
2283 016110 164202  
2284 016112 164204  
2285 016114 164206  
2286 016116 164210  
2287 016120 164212  
2288 016122 164213  
2289 016124 164214  
2290 016126 164220  
2291 016130 164222  
2292 016132 164224  
2293 016134 164226  
2294 016136 164230  
2295 016140 164234  
2296  
2297 016142 000170  
2298 016144 000174  
2299  
2300 016146 177560  
2301 016150 177562  
2302 016152 177564  
2303 016154 177566  
2304 016156 000060  
2305 016160 177546  
2306  
2307  
2308  
2309  
2310 016162 000134  
2311 016164 000000  
2312 016166 000120  
2313 016170 000103  
2314 016172 000114  
2315 016174 000076  
2316  
2317  
2318  
2319

: TABLE ASSOCIATING SPECIAL TTY INPUT CHARACTERS WITH THEIR  
: PROCESSING ROUTINES.

CMCHTB:  
A.LF: .WORD CTL.C,PRCTL C  
A.CR: .WORD LF.,PRCR  
.WORD CR.,PRCR  
.WORD CTL.O,PRCTLO  
.WORD CTL.Q,PRCTLO  
.WORD CTL.S,PRCTLS  
.WORD CTL.U,PRCTLU  
.WORD RUBOUT,PRDEL  
.WORD -1

:DEVICE ADDRESS TABLES:

TCR: .WORD PCLTXM  
TSR: .WORD PCLTXM+2  
TSDB: .WORD PCLTXM+4  
TSBC: .WORD PCLTXM+6  
TSBA: .WORD PCLTXM+10  
TMMR: .WORD PCLTXM+12  
TMMRH: .WORD PCLTXM+13  
TSCRC: .WORD PCLTXM+14  
RCR: .WORD PCLRCV  
RSR: .WORD PCLRCV+2  
RDDB: .WORD PCLRCV+4  
RDBC: .WORD PCLRCV+6  
RDBA: .WORD PCLRCV+10  
RDCRC: .WORD PCLRCV+14  
  
TXMVEC: .WORD 170  
RCVVEC: .WORD 174  
  
TTRCSR: .WORD TTDEV  
TTRBUF: .WORD TTDEV+2  
TTXCSR: .WORD TTDEV+4  
TTXBUF: .WORD TTDEV+6  
TTVECT: .WORD TTVCTR  
LCS: .WORD 177546

:VECTOR ADDRESS.  
:KW11-L LINE CLOCK ADDR

: CHARACTER CONSTANTS. THESE ARE DEFINED AS WORDS SO THAT THEY MAY  
: BE ENQUEUED.

A.BKSL: .WORD '\ :ASCII '\'  
ZERO: .WORD 0 :ASCII NULL  
A.P: .WORD 'P :ASCII 'P'  
A.C: .WORD 'C :ASCII 'C'  
A.L: .WORD 'L :ASCII 'L'  
A.PR: .WORD '> :ASCII '>' (PROMPT)

.EVEN

:DEVICE ADDRESS AND VECTOR VARIABLES

```
2320 :CHANGE THESE LOCATIONS TO MODIFY ALL DEVICE ADDRESSES AND VECTORS
2321 :FOR PCL11.
2322
2323 016176 164200 TXDEV: .WORD 164200 ;DEFAULT IS 164200
2324 016200 000170 TXVEC: .WORD 170 ;DEFAULT IS 170
2325 016202 164220 RCDEV: .WORD 164220 ;DEFAULT IS 164220
2326 016204 000174 RCVEC: .WORD 174 ;DEFAULT IS 174
2327
2328 : BUFFER & MESSAGE AREAS.
2329 016206 000204 CMDBUF: .BLKW 132. ;TTY INPUT COMMAND BUFFER.
2330 016412 016412 CBFEND
2331 016412 033333 CBUFPT: .WORD 33333 ;CMDBUF BUFFER POINTER.
2332
2333 016414 047536 000 CTLOMG: .ASCIZ ''^O'' ;FOR ECHOING CONTROL CHARACTERS.
2334 016417 136 000125 CTLUMG: .ASCIZ ''^U''
2335 016422 041536 000 CTLCMG: .ASCIZ ''^C''
2336
2337 016425 040 051105 047522 RPMSG: .ASCIZ '' ERROR''
2338
2339 : QUEUE DEFINITIONS.
2340 .IRP LC <AO, TI, TO>
2341 .EVEN
2342 .LIST
2343 LC'Q: .WORD 0 ;QLEMS
2344 .WORD LC'SIZE ;QSIZE
2345 .WORD LC'AREA, LC'END ;QTOP & QBOT
2346 .WORD 33333, 33333 ;QFRONT & QBACK
2347 LC'AREA: .BLKW LC'SIZE ;LC'Q AREA
2348 LC'END
2349 .NLIST
2350 .ENDM
2351 AQQ: .WORD 0 ;QLEMS
2352 .WORD AOSIZE ;QSIZE
2353 .WORD AOAREA, AOEND ;QTOP & QBOT
2354 .WORD 33333, 33333 ;QFRONT & QBACK
2355 AOAREA: .BLKW AOSIZE ;AQQ AREA
2356 AOEND =
2357 TIQ: .WORD 0 ;QLEMS
2358 .WORD TISIZE ;QSIZE
2359 .WORD TIAREA, TIEND ;QTOP & QBOT
2360 .WORD 33333, 33333 ;QFRONT & QBACK
2361 TIAREA: .BLKW TISIZE ;TIQ AREA
2362 TIEND
2363 TOQ: .WORD 0 ;QLEMS
2364 .WORD TOSIZE ;QSIZE
2365 .WORD TOAREA, TOEND ;QTOP & QBOT
2366 .WORD 33333, 33333 ;QFRONT & QBACK
2367 TOAREA: .BLKW TOSIZE ;TOQ AREA
2368 TOEND
2369
2370 : FLAG VARIABLES.
2371 : < 0 ==> TRUE
2372 : >=0 ==> FALSE
2373
2374
2375 017650 333 REQINP: .BYTE 333 ;INPUT REQUEST IS BEING TYPED.
2376 017651 333 CMDENT: .BYTE 333 ;COMMAND HAS BEEN ENTERED.
```

2357	017652	000	TICKS:	.BYTE	0
2358	017653	000	SECNDS:	.BYTE	0
2359	017654	000	MINUTS:	.BYTE	0
2360		017656		.EVEN	
2361	017656	000000	HOURS:	.WORD	0
2362	017660	000000	KWFLG:	.WORD	0
2363	017662	000000	TEREV:	.WORD	0
2364	017664	000000	REREV:	.WORD	0
2365	017666	000000	QLDEV:	.WORD	0
2366	017670	000000	DATGEV:	.WORD	0
2367	017672	000000	SUMEV:	.WORD	0
2368	017674	000000	SUMSV:	.WORD	0
2369	017676	000000	STSEV:	.WORD	0
2370	017700	000000	STPNTR:	.WORD	0
2371	017702	000000	SUMPNT:	.WORD	0
2372	017704	000000	TXMEV:	.WORD	0
2373	017706	000000	TXMSV:	.WORD	0
2374	017710	000000	PCLGO:	.WORD	0
2375	017712	000000	RCVEV:	.WORD	0
2376	017714	000000	SPCEV:	.WORD	0
2377	017716	000000	XSPCEV:	.WORD	0
2378	017720	000000	FIRST:	.WORD	0
2379	017722	000000	NEXT:	.WORD	0
2380	017724	000000	PRINTD:	.WORD	0
2381	017726	000000	HDRFLG:	.WORD	0
2382	017730	000000	PADFLG:	.WORD	0
2383	017732	000000	THLTFL:	.WORD	0
2384					
2385				.EVEN	
2386					
2387				: DATA VARIABLES.	
2388	017734	133333	ORIGSD:	.WORD	133333
2389	017736	000000	DTSEED:	.WORD	0
2390	017740	000333	MLSD:	.WORD	333
2391	017742	000000	MSGLSD:	.WORD	0
2392	017744	000000	RCSEED:	.WORD	0
2393	017746	000000	RCTXPS:	.WORD	0
2394	017750	000000	RJCTF:	.WORD	0
2395	017752	000000	TRNKF:	.WORD	0
2396	017754	000000	TXML:	.WORD	0
2397	017756	037565	RANM:	.WORD	37565
2398	017760	012247	RANK:	.WORD	12247
2399	017762	000000	CURAD:	.WORD	0
2400	017764	000000	RSFC:	.WORD	0
2401	017766	000000	ESCFLG:	.WORD	0
2402	017770	000000	OBJCNT:	.WORD	0
2403	017772	000000	RSHOLD:	.WORD	0
2404	017774	000000	TEMP:	.WORD	0
2405	017776	000000	TEMP1:	.WORD	0
2406	020000	000000	ERR0:	.WORD	0
2407	020002	000000	ERR1:	.WORD	0
2408	020004	000000	ERR2:	.WORD	0
2409					
2410					
2411					
2412					

;ADDRESS SILO DATA BUFFER AREA

```
2413 020006 000102 ADSILO: .BLKB 66. ;66. BYTE AREA FOR SILO DATA
2414
2415 ;RECEIVER ADDRESS TABLE
2416
2417 000001 X - 1
2418 020110 RADB:
2419 000037 .REPT 31. ;ACTIVITY FLAG
2420 .WORD 0 ;RECEIVER ADDRESS
2421 .WORD X ;ATTEMPTS ENTRY
2422 .WORD 0,0 ;SUCCESSSES ENTRY
2423 .WORD 0,0
2424
2425 X - X+1
2426 .ENDR
2427 020674 020674 RADEND: .WORD .
2428 020074 RADBO= RADR-14
2429
2430 ;TRANSMITTER DATA BUFFER:
2431
2432 020676 001020 DATBUF: .BLKW 1020
2433
2434 ;RECEIVER DATA BUFFER:
2435
2436
2437 022736 001000 RCBUF: .BLKW 1000
2438
2439 ;EXERCISER ERROR TABLE
2440
2441 000001 Y = 1 ;INITIAL FRROR NUMBER
2442 024736 ERTBL:
2443 000030 .REPT N-1 ;ERROR NUMBER
2444 .WORD Y ;ERROR ADDRESS
2445 .WORD 0 ;NO. OF OCCURRENCES SINCE INIT
2446 .WORD 0
2447
2448 Y - Y+1
2449 .ENDR
2450 025156 177777 .WORD -1 ;LAST ERROR # IS -1
2451
2452 024730 ERTBLO - ERTBL-6
2453
2454 ; DETAILED ERROR TABLES FOR RCVR AND XMTR ERRORS:
2455
2456 025160 000623 TERTBL: .BLKW 37*15 ;RESERVE SPACE FOR XMTR ERRORS
2457
2458
2459 026626 000623 RERTBL: .BLKW 37*15 ;RESERVE SPACE FOR RCVR ERRORS
2460
2461
2462
2463
2464
2465 030274 033333 FRELEM: .WORD 33333 ;STORAGE FOR DEQUEUED ELEMENT.
2466 030276 033333 BKELEM: .WORD 33333 ;STORAGE FOR ENQUEUED ELEMENT.
2467 030300 033333 TCBFPT: .WORD 33333 ;CMDBUF POINTER USED DURING SCAN
2468 030302 033333 TCB.N: .WORD 33333 ;BINARY VALUE OF INPUT PARAMETER
```

```

2469 030304 033335      INTTMP: .WORD 33333      ;TEMP STORAGE FOR INTERRUPT PROC
2470
2471                      .SBTTL KEYWORD TABLE
2472
2473                      ;KEYWORD TABLE ASSOCIATING A COMMAND WITH ITS PROCESSING ROUTINE
2474
2475 030306 004524      CMDTBL: .WORD CPADD
2476 030310          002      003      .BYTE 2,3
2477 030312 042101 020104      .ASCII /ADD /
2478 030316 005672      .WORD CPASS
2479 030320          002      006      .BYTE 2,6
2480 030322 051501 044523 047107      .ASCII /ASSIGN/
2481 030330 004752      .WORD CPCLR
2482 030332          002      005      .BYTE 2,5
2483 030334 046103 040505 020122      .ASCII /CLEAR /
2484 030342 005114      .WORD CPCNT
2485 030344          002      010      .BYTE 2,8
2486 030346 047503 052116 047111      .ASCII /CONTINUE/
2487 030354 042525      .WORD CPDEL
2488 030356 004632          001      006      .BYTE 1,6
2489 030362 042504 042514 042524      .ASCII /DELETE/
2490 030370 006600      .WORD CPERR
2491 030372          001      006      .BYTE 1,6
2492 030374 051105 047522 051522      .ASCII /ERRORS/
2493 030402 005510      .WORD CPGO
2494 030404          001      002      .BYTE 1,2
2495 030406 047507      .ASCII /GO/
2496 030410 005210      .WORD CPINIT
2497 030412          001      012      .BYTE 1,10
2498 030414 047111 052111 040511      .ASCII /INITIALIZE/
2499 030422 044514 042532      .WORD CPMAS
2500 030426 004116          001      006      .BYTE 1,6
2501 030430 040515 052123 051105      .ASCII /MASTER/
2502 030432 004366      .WORD CPRANG
2503 030440          002      005      .BYTE 2,5
2504 030442 040522 043516 020105      .ASCII /RANGE /
2505 030444 004274      .WORD CPRIB
2506 030452          002      003      .BYTE 2,3
2507 030454 044522 020102      .ASCII /RIB /
2508 030456 004202      .WORD CPSEC
2509 030462          002      011      .BYTE 2,9
2510 030464 042523 047503 042116      .ASCII /SECONDARY /
2511 030474 051101 020131      .WORD CPSILO
2512 030500 003406          002      004      .BYTE 2,4
2513 030502 044523 047514      .ASCII /SILO/
2514 030504 005054      .WORD CPSTAT
2515 030510          002      006      .BYTE 2,6
2516 030512 052123 052101 051525      .ASCII /STATUS/
2517 030514 005456      .WORD CPSUM
2518 030522          002      007      .BYTE 2,7
2519 030524 052523 046515 051101      .ASCII /SUMMARY /
2520 030534 020131          000000      .WORD 0,0
  
```



2521					
2522					
2523	030542	000000			SCTBL: .WORD 0
2524	030544	001	005		.BYTE 1,5
2525	030546	046103	040505	020122	.ASCII /CLEAR /
2526	030554	000001			.WORD 1
2527	030556	001	003		.BYTE 1,3
2528	030560	042523	020124		.ASCII /SET /
2529	030564	000000	000000		.WORD 0,0
2530					
2531					.SBTTL SOME MORE ASCII STORAGE:
2532					
2533					
2534	030570	020040	020040	020052	MDNER: .ASCIZ / * * * * * MASTER DOWN * * * * * /
	030576	020052	020052	020052	
	030604	020052	020052	046440	
	030612	051501	042524	020122	
	030620	047504	047127	020040	
	030626	020052	020052	020052	
	030634	020052	020052	000052	
2535	030642	020040	025052	052040	MSCHNG: .ASCIZ / ** THIS UNIT HAS BECOME 'NEW MASTER' **/
	030650	044510	020123	047125	
	030656	052111	044040	051501	
	030664	041040	041505	046517	
	030672	020105	047042	053505	
	030700	046440	051501	042524	
	030706	021122	025040	000052	
2536	030714	020040	025052	051452	SYNTAX: .ASCIZ / ***SYNTAX ERROR***/
	030722	047131	040524	020130	
	030730	051105	047522	025122	
	030736	025052	000		
2537	030741	120	046103	030461	PCLEXM: .ASCIZ /PCL11 EXERCISER V02C CZPLACO (JUN-79)/
	030746	042440	042530	041522	
	030754	051511	051105	053040	
	030762	031060	020103	041440	
	030770	050132	040514	030103	
	030776	020040	045050	047125	
	031004	033455	024471	000	
2538	031011	122	051505	040524	RSTMSG: .ASCIZ /RESTART AT ADDRESS 204/
	031016	052122	040440	020124	
	031024	042101	051104	051505	
	031032	020123	030062	000064	
2539	031040	025052	047040	020117	MTQMSG: .ASCIZ /** NO RECEIVERS SELECTED **/
	031046	042522	042503	053111	
	031054	051105	020123	042523	
	031062	042514	052103	042105	
	031070	025040	000052		
2540	031074	051124	050101	042520	TRPDMG: .ASCII /TRAPPED TO 4 FROM LOCATION /
	031102	020104	047524	032040	
	031110	043040	047522	020115	
	031116	047514	040503	044524	
	031124	047117	040		
2541	031127	116	047116	047116	TRP4AD: .ASCIZ /NNNNN /
	031134	020040	000041		
2542	031140	042504	044526	042503	ERTMSG: .ASCIZ /DEVICE ADDRESS ERROR. USE 'ASSIGN' COMMAND./
	031146	040440	042104	0425..	

	031154	051523	042440	051122	
	031162	051117	020056	051525	
	031170	020105	040442	051523	
	031176	043511	021116	041440	
	031204	046517	040515	042116	
2543	031212	000056			
	031214	054105	051105	044503	EXRST: .ASCIIZ /EXERCISER STARTED/
	031222	042523	020122	052123	
2544	031230	051101	042524	000104	
	031236	054105	051105	044503	EXCNT: .ASCIIZ /EXERCISER CONTINUING/
	031244	042523	020122	047503	
	031252	052116	047111	044525	
2545	031260	043516	000		
	031263	052	025052	044124	MSTMG1: .ASCIIZ /***THIS UNIT IS NOT MASTER***/
	031270	051511	052440	044516	
	031276	020124	051511	047040	
	031304	052117	046440	051501	
	031312	042524	025122	025052	
2546	031320	000			
	031321	102	052125	044040	MSTMG2: .ASCIIZ /BUT HAS NOW BEEN MADE SECONDARY./
	031326	051501	047040	053517	
	031334	041040	042505	020116	
	031342	040515	042504	051440	
	031350	041505	047117	040504	
2547	031356	054522	000056		
	031362	044124	020105	044523	MSTMG3: .ASCIIZ /THE SILO YOU HAVE JUST LOADED WILL BE/
	031370	047514	054440	052517	
	031376	044040	053101	020105	
	031404	052512	052123	046040	
	031412	040517	042504	020104	
	031420	044527	046114	041040	
2548	031426	000105			
	031430	051525	042105	044440	MSTMG4: .ASCIIZ /USED IF YOU CLEAR THE CURRENT MASTER./
	031436	020106	047531	020125	
	031444	046103	040505	020122	
	031452	044124	020105	052503	
	031460	051122	047105	020124	
	031466	040515	052123	051105	
2549	031474	000056			
	031476	044124	020105	044523	MSTMG5: .ASCIIZ /THE SILO HAS BEEN PADDED WITH ADDRESS '0'/'
	031504	047514	044040	051501	
	031512	041040	042505	020116	
	031520	040520	042104	042105	
	031526	053440	052111	020110	
	031534	042101	051104	051505	
2550	031542	020123	030042	000042	
	031550	044124	051511	052440	THUMST: .ASCIIZ /THIS UNIT IS -MASTER-/
	031556	044516	020124	051511	
	031564	026440	040515	052123	
2551	031572	051105	000055		
	031576	044124	051511	052440	THUSCN: .ASCIIZ /THIS UNIT IS -SECONDARY-/
	031604	044516	020124	051511	
	031612	026440	042523	047503	
	031620	042116	051101	026531	
2552	031626	000			
	031627	042	044522	021102	RBSTMG: .ASCIIZ /'RIB' IS -SET-/

	031634	044440	020123	051455	
2553	031642	052105	000055		
	031646	051042	041111	020042	RBCLMG: .ASCIZ /'RIB' IS -CLEAR-/
	031654	051511	026440	046103	
2554	031662	040505	026522	000	
	031667	105	040514	051520	ELPSTM: .ASCII /ELAPSED TIME (HRS:MIN:SEC:TIK).../
	031674	042105	052040	046511	
	031702	020105	044050	051522	
	031710	046472	047111	051472	
	031716	041505	052072	045511	
2555	031724	027051	027056		
	031730	035060	035060	035060	TMLIN1: .ASCIZ /0:0:0:0 /
	031736	020060	020040	020040	
2556	031744	020040	020040	000	
	031751	122	053103	020122	STITLE: .ASCIZ /RCVR ADDRESS CONNECTION ATTEMPTS SUCCESSFUL CONNECTIONS/
	031756	042101	051104	051505	
	031764	020123	041440	047117	
	031772	042516	052103	047511	
	032000	020116	052101	042524	
	032006	050115	051524	020040	
	032014	052523	041503	051505	
	032022	043123	046125	041440	
	032030	047117	042516	052103	
	032036	047511	051516	000	
2557					
2558	032043				STLIN:
2559	032043	116	047116	020116	STLIN1: .ASCII /NNNN /
	032050	020040	020040	020040	
	032056	020040	020040	020040	
	032064	040			
2560	032065	116	047116	020116	STLIN2: .ASCII /NNNN /
	032072	020040	020040	020040	
	032100	020040	020040	020040	
	032106	020040	020040	040	
2561	032113	116	047116	020116	STLIN3: .ASCIZ /NNNN /
	032120	020040	020040	020040	
	032126	020040	000		
2562					
2563					
2564	032131	105	051122	051117	SMTTLE: .ASCIZ /ERROR NUMBER ERROR ADDRESS NO. OF OCCURRENCES/
	032136	047040	046525	042502	
	032144	020122	020040	042440	
	032152	051122	051117	040440	
	032160	042104	042522	051523	
	032166	020040	020040	047516	
	032174	020056	043117	047440	
	032202	041503	051125	042522	
	032210	041516	051505	000	
2565					
2566	032215	040	025040	020052	NOERMG: .ASCIZ / ** NO ERRORS TO REPORT **/
	032222	047516	042440	051122	
	032230	051117	020123	047524	
	032236	051040	050105	051117	
	032244	020124	025052	000	
2567	032251	124	040522	051516	TERHDR: .ASCIZ /TRANSMITTER ERRORS:/
	032256	044515	052124	051105	





.SBTTL BINARY TO ASCII CONVERSION

2632  
2633  
2634  
2635  
2636  
2637  
2638  
2639  
2640  
2641  
2642  
2643  
2644  
2645  
2646  
2647  
2648  
2649  
2650  
2651  
2652  
2653  
2654  
2655  
2656  
2657  
2658  
2659  
2660  
2661  
2662  
2663  
2664  
2665  
2666  
2667  
2668  
2669  
2670  
2671  
2672  
2673

: BINARY TO ASCII CONVERSION

: LOCAL MACROS

: SETUP CONVERSION CONTROL WORD ON STACK

: STCVT RADIX,WIDTH,SIGNED,COMPR,BLANKS

: WHERE:

RADIX=NUMERIC VALUE SPECIFYING CONVERSION RADIX  
WIDTH=NUMERIC VALUE FROM 1 TO 7 SPECIFYING FIELD WIDTH  
SIGNED-SIGN OR MAGNITUDE FLAG. ASCII STRING 'SIGN' SPECI-  
FIES SIGNED CONVERSION. ANYTHING ELSE SPECIFIES MAGNI-  
TITUDE.

COMPR=COMPRESS LEADING ZEROS FLAG. ASCII STRING 'COMPRES' SPE-  
CIFIES COMPRESSION OF LEADING ZEROS. ANYTHING ELSE MEANS  
INCLUDE LEADING ZEROS OR SPACES IN CONVERSION.

BLANK REPLACE LEADING ZEROS WITH BLANKS (SPACES). ASCII STRING  
'BLANKS' MEANS BLANK REPLACEMENT IF ZERO COMPRESS IS DIS-  
ABLED. ANYTHING ELSE SPECIFIES ZERO PADDING.

.MACRO STCVT RADIX,WIDTH,SIGN,COMPR,BLANK

\$BLK=0

\$SGN 0

\$SUP-1\*1000

.IF IDN <BLANK>,<BLANKS>

\$BLK 1\*2000

.ENDC .IF IDN <SIGN>,<SIGNED>

\$SGN 1\*400

.ENDC .IF IDN <COMPR>,<COMPRES>

\$SUP 0\*1000

.ENDC MOV #<WIDTH\*4000>,\$BLK!\$SGN!\$SUP!RADIX,-(SP)

.ENDM

2675  
2676  
2677  
2678  
2679  
2680  
2681  
2682  
2683  
2684  
2685  
2686  
2687  
2688  
2689  
2690  
2691  
2692  
2693  
2694  
2695  
2696  
2697  
2698  
2699  
2700  
2701  
2702  
2703  
2704  
2705  
2706 032664  
2707 032664  
2708 032670 000411  
2709  
2710  
2711  
2712 032672  
2713 032672  
2714 032676 000406  
2715  
2716  
2717  
2718 032700  
2719 032700  
2720 032704 000403  
2721  
2722  
2723  
2724 032706  
2725 032706  
2726 032712 000400  
2727  
2728 032714  
2729 032714 005702  
2730 032716 001002

```
: INPUTS:
:
: R0=ADDRESS TO STORE FIRST BYTE IN OUTPUT STRING
: R1=NUMBER TO BE CONVERTED
: R2 ZERO COMPRESSION INDICATOR
:   IF R2 EQ 0, THEN SUPPRESS ZEROS
:   IF R2 NE 0, THEN DO NOT SUPPRESS ZEROS.
:
: IF CBTA IS CALLED, THEN R2 MUST CONTAIN THE FOLLOWING INFORMATION
:
:   LOW BYTE=CONVERSION RADIX (2-10.)
:   BIT 8=MAGNITUDE/SIGNED CONVERSION (1=SIGNED)
:
:   BIT 9 -ZERO COMPRESS FLAG (0=COMPRESS LEADING ZEROS)
:
:   BIT 10=BLANK FILL FLAG (1=REPLACE LEADING ZEROS WITH BLANKS
:     IF ZERO COMPRESS DISABLED, 0=ZERO FILL).
:
:   BITS 11-15=FIELD WIDTH (1-32)
:
: OUTPUTS:
:
: R0=ADDRESS OF NEXT BYTE AFTER LAST DIGIT STORED.
:
: IF THE CONVERTED DIGIT EXCEEDS 9, THE RESULT IS BIASED TO FALL
: IN THE RANGE A - Z
:
: CONVERT 6 DIGIT OCTAL TO ASCII MAGNITUDE
OCTJSP:
:   STCVT 8,6,MAGN,NOCOMP,BLANKS :PUSH CONVERSION PARAMETERS
:   BR SETCN :CONVERT TO ASCII
:
: CONVERT 6 DIGIT OCTAL TO ASCII (ZERO COMP)
OCTPNT:
:   STCVT 8,6,MAGN,COMPRES,NOBLANK
:   BR SETCN
:
: CONVERT 5 DIGIT DECIMAL TO ASCII MAGNITUDE
DECJSP:
:   STCVT 10,5,MAGN,NOCOMP,BLANKS
:   BR SETCN
:
: CONVERT 5 DIGIT DECIMAL TO ASCII (ZERO COMP)
DECPNT:
:   STCVT 10,5,MAGN,COMPRES,NOBLANK
:   BR SETCN
:
: SETCN:
:   TST R2 :SUPPRESS ZEROS?
:   BNE 20$ :IF NE, NO
```

CZPLACO PCL11 EXERCISER V02C  
CZPLAC.P11 08-JUN-79 15:55

MALY11 30A(1052) 25-JUN-79 08:52 H 9 PAGE 41-1  
BINARY TO ASCII CONVERSION

SEQ 0111

2731 032720 042716 001000  
2732 032724  
2733 032724 012602

208: BIC #1\*1000,(SP) ;ENABLE ZERO SUPPRESS  
MOV (SP)+,R2 ;SET CONTROL WORD



.SBTTL GENERAL BINARY TO ASCII CONVERSION

2735							
2736							
2737	032726			(BTA:	JSR	R5,SAVRG	:SAVE THE NON-VOLATILE REGISTERS
2738	032726	004567	000406		MOVB	R2,R5	:COPY RADIX BYTE
2739	032732	110205			SWAB	R2	:POSITION REMAINING TO LOW BYTE
2740	032734	000302			ASRB	R2	:SHIFT OFF MAG. FLAG
2741	032736	106202			BCC	10\$	:UNSIGNED IF C IS CLR
2742	032740	103005			TST	R1	:POSITIVE VALUE?
2743	032742	005701			BPL	10\$	:IF PL, YES
2744	032744	100003			NEG	R1	:MAKE VALUE POSITIVE
2745	032746	005401			MOVB	#'-,(R0)+	:INSERT A MINUS SIGN
2746	032750	112720	000055				
2747	032754			10\$:	MOV	R0,R4	:COPY STRING POINTER
2748	032754	010004			CLC		:CLEAR CARRY
2749	032756	000241			RORB	R2	:SHIFT OFF SUPPR FLAG
2750	032760	106002			ROR	R2	:TRANSFER TO R2
2751	032762	006002			ROR	R3	:GET BLANK/ZERO PAD FLAG
2752	032764	006003			CLRB	R3	:CLEAR COUNT BYTE
2753	032766	105003			BISB	R2,R3	:TRANSFER COUNT BYTE
2754	032770	150203			CLRB	R2	:CLEAR FILL BYTE
2755	032772	105002			BISB	#'0,R2	:SET FILL BYTE
2756	032774	152702	000060		MOV	R1,R0	:DIVIDEND TO R0
2757	033000	010100					
2758	033002			1\$:	MOV	R5,R1	:SET CONVERSION RADIX
2759	033002	010501			JSR	PC,DIV	:DIVIDE EM UP
2760	033004	004767	000272		CMP	R1,#9.	:RESULT EXCEED NUMERICS?
2761	033010	020127	000011		BLOS	15\$	:IF LOS, NO
2762	033014	101402			ADD	#7,R1	:BIAS TO FALL IN ALPHA
2763	033016	062701	000007				
2764	033022			15\$:	ADD	R2,R1	:ADD CHARACTER BIAS
2765	033022	060201			MOV	R1,-(SP)	:SAVE CHARACTER
2766	033024	010146			DECB	R3	:DECREMENT CHARACTER COUNT
2767	033026	105303			BLE	3\$	:IF LE NO DIGITS LEFT
2768	033030	003412			TST	R0	:ZERO QUOTIENT
2769	033032	005700			BNE	2\$	:IF NE, YES, GO AGAIN
2770	033034	001006			TST	R2	:SUPPRESS ZEROS
2771	033036	005702			BPL	3\$	:IF PL, YES, ALL DONE
2772	033040	100006			TST	R3	:SUBSTITUTE BLANKS?
2773	033042	005703			BPL	2\$	:IF PL, NO
2774	033044	100002			BIC	#20,R2	:CONVERT FILL TO BLANK
2775	033046	042702	000020				
2776	033052			2\$:	JSR	PC,1\$	:DIVIDE AGAIN
2777	033052	004767	177724				
2778	033056			3\$:	MOVB	(SP)+,(R4)+	:STORE A DIGIT
2779	033056	112624			MOV	R4,R0	:STORE TERMINAL ADDRESS
2780	033060	010400			RETURN		
2781	033062						
2782							

```
2784 .SBTTL DOUBLE PRECISION BINARY TO ASCII
2785 : CONVERT A DOUBLE PRECISION UNSIGNED QUANTITY TO DECIMAL ASCII
2786 :
2787 : LOCAL MACROS
2788 :
2789 : SET ASCII CONVERSION PARAMETERS
2790 :
2791 : CBTAS RADIX,WID*H,SIGN,BLANK
2792 :
2793 : WHERE:
2794 :
2795 :     RADIX=CONVERSION RADIX
2796 :
2797 :     WIDTH=FIELD WIDTH
2798 :
2799 :     SIGN='SIGNED' FOR SIGNED CONVERSION. ANYTHING ELSE IMPLIES
2800 :           UNSIGNED CONVERSION
2801 :
2802 :     BLANK='BLANKS' TO CONVERT LEADING ZEROS TO BLANKS. ANYTHING ELSE
2803 :           IMPLIES NO CONVERSION OF ZEROS .
2804 :
2805 : .MACRO  CBTAS  RADIX,WIDTH,SIGN,BLANK
2806 $BLKS 0
2807 $SGNS 0
2808 .IF    IDN    <BLANK>,<BLANKS>
2809 $BLKS 1*2000
2810 .ENDC
2811 .IF    IDN    <SIGN>,<SIGNED>
2812 $SGNS-1*400
2813 .ENDC
2814 MOV    #<WIDTH*400>,$SGNS!$BLKS!RADIX,R5
2815 TST    R2
2816 BEQ    .+4
2817 BIS    #1*1000,R5
2818 .ENDM
2819
2820 : INPUTS:
2821 :
2822 :     RC=POINTER TO ASCII OUTPUT STRING
2823 :     R1-ADDRESS OF DOUBLE PRECISION VALUE
2824 :     R2-ZERO COMPRESS FLAG
2825 :
2826 :
2827 033064
2828 033064 004567 000250
2829 033070 010003
2830 033072 012704 023420
2831 033076
2832 033112 022104
2833 033114 103042
2834 033116 011102
2835 033120 014101
2836 033122 010400
2837 033124 004767 000110
2838 033130 010046
2839 033132 010201
```

```
CDDMG: JSR    R5,SAVRG           ;SAVE THE NON-VOLATILE REGISTERS
        MOV    R0,R3       ;COPY THE STRING POINTER
        MOV    #10000.,R4   ;SET DIVISOR
        CBTAS 10.,0,NOSIGN,BLANKS ;SET CONVERSION PARAMETERS
        CMP    (R1)+,R4     ;TEST FOR OVERFLOW
        BHIS  40$          ;IF HIS, OVERFLOW
        MOV    (R1),R2     ;GET LOW PART OF NUMBLR
        MOV    -(R1),R1    ;GET HIGH PART OF NUMBER
        MOV    R4,R0       ;COPY DIVISOR
        JSR    PC,DDIV     ;DO DOUBLE PREC. DIVIDE
        MOV    R0,-(SP)    ;SAVE REMAINDER
        MOV    R2,R1      ;COPY QUOTIENT
```

```

2840 033134 001011          BNE      11$          ;IF NE, SOMETHING TO PRINT
2841 033136 012702 000005    MOV      #5,R2       ;OTHERWISE, FILL FIELD WITH BLANKS
2842 033142 112723 000040    21$:    MOVB     #'',(R3)+
2843 033146 005302          DEC      R2
2844 033150 001374          BNE      21$
2845 033152 052705 003000    BIS     #3000,R5     ;DISABLE BLANK SUPPRESSION
2846 033156 000411          BR       20$
2847 033160 012702 024000    11$:    MOV      #5*4000,R2 ;SET FIELD WIDTH
2848 033164 004767 000020    JSR     PC,30$       ;OUTPUT HIGH ORDER DIGITS
2849 033170 052705 001000    BIS     #1*1000,R5  ;DISABLE ZERO COMPRESS
2850 033174 042705 002000    BIC     #1*2000,R5  ;DISABLE BLANKS
2851 033200 010003    31$:    MOV      R0,R3      ;SET STRING POINTER
2852 033202          20$:
2853 033202 012601          MOV      (SP)+,R1    ;GET LOW ORDER VALUE
2854 033204 012702 020000    MOV      #4*4000,R2 ;SET FIELD WIDTH
2855 033210          30$:
2856 033210 010300          MOV      R3,R0      ;GET STRING POINTER
2857 033212 050502          BIS     R5,R2       ;INCLUDE RADIX & BLANK SUPPRESS
2858 033214 004767 177506    JSR     PC,CBTA     ;CONVERT TO ASCII
2859 033220 000406          BR       60$       ;EXIT
2860 033222          40$:
2861 033222 012702 000011    MOV      #9.,R2     ;GET COUNT
2862 033226          50$:
2863 033226 112720 000052    MOVB     #'*',(R0)+ ;FILL FIELD WITH ASTERISKS
2864 033232 005302          DEC      R2
2865 033234 001374          BNE      50$
2866 033236          60$:
2867 033236          RETURN

```

.SBTTL DOUBLE PRECISION DIVIDE ROUTINE

```

: INPUTS:
: R2=LOW ORDER OF DIVIDEND
: R1-HIGH ORDER OF DIVIDEND
: R0=DIVISOR (15 BITS UNSIGNED)
:
: OUTPUTS:
: R2=LOW ORDER OF QUOTIENT
: R1-HIGH ORDER OF QUOTIENT
: R0=REMAINDER
:

```

```

2886 033240          DDIV:
2887 033240 010346          MOV      R3,-(SP)   ;SAVE R3
2888 033242 012703 000040    MOV      #32.,R3   ;SET ITERATION COUNT IN R3
2889 033246 010046          MOV      R0,-(SP)  ;STACK DIVISOR
2890 033250 005000          CLR      R0        ;SET REMAINDER TO 0
2891 033252          1$:
2892 033252 006302          ASL     R2          ;SHIFT THE ENTIRE DIVIDEND
2893 033254 006101          ROL    R1          ;... ONE BIT TO THE LEFT AND...
2894 033256 006100          ROL    R0          ;... INTO THE REMAINDER
2895 033260 020016          CMP    R0,(SP)    ;IS REMAINDER GE DIVISOR?

```

```

2896 033262 103402
2897 033264 161600
2898 033266 005202
2899 033270
2900 033270 005303
2901 033272 003367
2902 033274 005726
2903 033276 012603
2904 033300
2905
2906
2907
2908
2909
2910
2911
2912
2913
2914
2915
2916
2917
2918
2919
2920
2921 033302
2922 033302 012746 000020
2923 033306 010146
2924 033310 005001
2925 033312
2926 033312 006300
2927 033314 006101
2928 033316 020116
2929 033320 103402
2930 033322 161601
2931 033324 005200
2932 033326
2933 033326 005366 000002
2934 033332 003367
2935 033334
2936 033334 022626
2937 033336
2938
2939
2940
2941
2942 033340 010446
2943 033342 010346
2944 033344 010546
2945 033346 016605 000006
2946 033352 004736
2947 033354 012603
2948 033356 012604
2949 033360 012605
2950 033362

```

```

BLO 2$ ;NO, SKIP TO ITERATION CONTROL
SUB (SP),R0 ;YES, SUB DIVISOR OUT
INC R2 ;AND INCR THE QUOTIENT

2$: DEC R3 ;REPEAT AS LONG AS NECESSARY
    BGT 1$
    TST (SP)+ ;PURGE DIVISOR FROM STACK
    MOV (SP)+,R3 ;RESTORE R3
    RETURN

.SBTTL INTEGER DIVIDE MAGNITUDE NUMBERS
:
: INPUTS:
: RO=DIVIDEND
: R1-DIVISOR
:
: OUTPUTS:
: QUOTIENT IS RETURNED IN R0
: REMAINDER IS RETURNED IN R1
:
DIV: MOV #20,-(SP) ;SET LOOP COUNT
      MOV R1,-(SP) ;SAVE DIVISOR FOR SUBTRACTS
      CLR R1 ;CLEAR REMAINDER

30$: ASL R0 ;DOUBLE LEFT SHIFT
      ROL R1
      CMP R1,(SP) ;SUBTRACT OUT DIVISOR
      BLO 40$ ;IF LO, NO
      SUB (SP),R1 ;SUBTRACT OUT DIVISOR
      INC R0 ;ADD IN LOW BIT

40$: DEC 2(SP) ;DECREMENT REPEAT COUNT
      BGT 30$ ;IF GT, MORE TO GO

50$: CMP (SP)+,(SP)+ ;CLEAN STACK
      RETURN

; SAVE/RESTORE NONVOLATILE REGISTERS

SAVRG: MOV R4,-(SP) ;SAVE R4 & R3
        MOV R3,-(SP)
        MOV R5,-(SP)
        MOV 6(SP),R5 ;PUT RETURN ADDRESS ON STACK
        JSR PC,@(SP)+ ;RETRIEVE REAL R5
        MOV (SP)+,R3 ;CALL THE CALLER...!
        MOV (SP)+,R4 ;RESTORE NON VOLATILE REGISTERS
        MOV (SP)+,R5
        RETURN

```

```

2952          .SBTTL  QUEUE HANDLING ROUTINES
2953          : THIS MODULE CONTAINS 2 SUBROUTINES, ENQ & DEQ, TO ENQUEUE & DEQUEUE
2954          : WORDS, RESPECTIVELY, IN A FIRST-IN-FIRST-OUT LIST.
2955          :
2956          .LIST  MEB
2957
2958          PROC  ENQ,<ITEM,QUEUE>
2959 033364      ITEM  = 2
          (3)      QUEUE = 4
          (3)      000002
          (1)      000004
          (1) 033364      ENQ:          ;**ENTRY POINT**
2960          :
2961          : APPEND ITEM (A WORD) TO THE FIRST-IN-FIRST-OUT LIST QUEUE .
2962          :
2963 033364 016504 000004      MOV  QUEUE(R5),R4      ;GET QUEUE ADDRESS.
2964 033370 021464 000002      CMP  @R4,QSIZE(R4)      ;IF QUEUE IS FULL,
2965 033374 002020      BGE  NQFULL      ; SIGNAL TRAGIC ERROR.
2966 033376 017574 000002 000012      MOV  @ITEM(R5),@QBACK(R4)      ;PUT ITEM AT BACK OF QUEUE.
2967 033404 062764 000002 000012      ADD  #2,QBACK(R4)      ;UPDATE BACK POINTER.
2968 033412 026464 000012 000006      CMP  QBACK(R4),QBOT(R4)
2969 033420 103403      BLO  NQNOWP
2970 033422 016464 000004 000012      MOV  QTOP(R4),QBACK(R4)
2971 033430 005214      NQNOWP: INC  @R4      ;INCREMENT NO. OF ELEMENTS.
2972 033432 000241      CLC
2973 033434      NQRET: RETURN      ;INDICATE SUCCESSFUL ENQ.
          (1) 033434 000207      RTS  PC      ;RETURN.
2974
2975 033436 000261      NQFULL: SEC
2976 033440 000775      BR   NQRET      ;INDICATE UNSUCCESSFUL ENQ.
          ;IGNORE ITEM & RETURN.
2977
2978          PROC  DEQ,<ITEM,QUEUE>
2979 033442      ITEM  = 2
          (3)      QUEUE = 4
          (3)      000002
          (1)      000004
          (1) 033442      DEQ:          ;**ENTRY POINT**
2980          :
2981          : REMOVE A WORD ENTRY FROM THE FIRST-IN-FIRST-OUT LIST QUEUE &
2982          : STORE IT AT ITEM .
2983          :
2984 033442 016504 000004      MOV  QUEUE(R5),R4      ;GET QUEUE ADDRESS.
2985 033446 005714      TST  @R4      ;IF QUEUE IS EMPTY,
2986 033450 001420      BEQ  DQEMP      ; SIGNAL TRAGIC ERROR.
2987 033452 017475 000010 000002      MOV  @QFRONT(R4),@ITEM(R5)      ;RETRIEVE FRONT ELEMENT.
2988 033460 062764 000002 000010      ADD  #2,QFRONT(R4)      ;UPDATE FRONT POINTER.
2989 033466 026464 000010 000006      CMP  QFRONT(R4),QBOT(R4)
2990 033474 103403      BLO  DQNOWP
2991 033476 016464 000004 000010      MOV  QTOP(R4),QFRONT(R4)
2992 033504 005314      DQNOWP: DEC  @R4      ;DECREMENT NO. OF ELEMENTS.
2993 033506 000241      CLC
2994 033510      DQRET: RETURN      ;INDICATE SUCCESSFUL DEQ.
          (1) 033510 000207      RTS  PC      ;RETURN.
2995
2996 033512 000261      DQEMP: SEC
2997 033514 012775 177777 000002      MOV  #-1,@ITEM(R5)      ;INDICATE UNSUCCESSFUL DEQ
          ;SET ITEM TO ALL ONES.

```

CZPLACO PCL11 EXERCISER V02C  
CZPLAC.P11 08-JUN-79 15:55

MACY11 30A(1052) 25-JUN-79 08:52 N 9 PAGE 44-1  
QUEUE HANDLING ROUTINES

SEG 0117

2998 033522 000772

BR DQRET

;RETURN.

3000  
3001  
3002  
3003  
3004  
3005  
3006  
3007  
3008  
3009  
3010  
3011  
3012  
3013  
3014  
3015  
3016  
3017  
3018  
3019  
3020  
3021  
3022  
3023  
3024  
3025  
3026  
3027  
3028  
3029  
3030  
3031  
3032  
3033  
3034  
3035  
3036  
3037  
3038  
3039  
3040  
3041  
3042  
3043  
3044  
3045  
3046  
3047  
3048  
3049  
3050  
3051  
3052  
3053  
3054  
3055

: SUBROUTINE TO SCAN AN INPUT COMMAND & CALL ITS  
: PROCESSING ROUTINE.

.LIST MEB

.MACRO SPAN REG,CHAR,?L

: THIS MACRO SCANS THE STRING OF CHARACTERS STARTING AT  
: @REG UNTIL IT FINDS ONE NOT EQUAL TO CHAR. REG IS  
: SET POINTING TO THAT CHARACTER.

L:     CMPB     (REG)+,CHAR  
       BEQ     L  
       DEC     REG

.ENDM

.MACRO BREAK REG,CHRSET,?HH,?JJ

: THIS MACRO SCANS THE STRING STARTING AT @REG UNTIL  
: IT FINDS A CHARACTER THAT IS A MEMBER OF CHRSET.  
: REG IS SET POINTING TO THAT CHARACTER.

: EACH MEMBER OF CHRSET IS AN ADDRESSABLE QUANTITY.

HH:     .IRP     LS,<CHRSET>  
       CMPB     @REG,LS  
       BEQ     JJ  
       .ENDM  
       INC     REG  
       BR     HH

JJ:     .ENDM

.MACRO SYNCLS CHAR,CLASS,?CC,?DD,?EE,?FF,?GG

: THIS MACRO DETERMINES THE SYNTACTIC CLASS OF AN  
: OBJECT BEGINNING WITH CHAR. THE CLASS IS RETURNED  
: IN CLASS AS FOLLOWS:  
:     CLASS =     0 (WORD) IF CHAR = (A.....Z,-)  
:                 2 (NUMBER) IF CHAR = (0.....9)  
:                 6 (END OF LINE) IF CHAR = CARRIAGE RETURN  
:                 4 (CHARACTER STRING) OTHERWISE

CC:     CMPB     CHAR,#'A  
       BLT     EE  
       CMPB     CHAR,#'Z  
       BGT     DD  
       CLR     CLASS  
       BR     GG

3056	DD:	MOV	#4,CLASS
3057		BR	GG
3058			
3059	EE:	CMPB	CHAR,#'0
3060		BLT	FF
3061		CMPB	CHAR,#'9
3062		BGT	DD
3063		MOV	#2,CLASS
3064		BR	GG
3065			
3066	FF:	CMPB	CHAR,#'-
3067		BEQ	CC
3068		CMPB	CHAR,#15
3069		BNE	DD
3070		MOV	#6,CLASS
3071	GG:		
3072			
3073			.ENDM



```

3075          .SBTTL  COMMAND PROCESSOR INITIATING ROUTINE
3076
3077 033524    PROC    COMAND,<INPLIN,KWTABL>
(3)          000002    INPLIN  =      2
(3)          000004    KWTABL  =      4
(1)
(1) 033524    COMAND:      ;**ENTRY POINT**
3078          :
3079          : THIS ROUTINE CAUSES THE COMMAND SPECIFIED BY INPLIN TO BE
3080          : PROCESSED, AS DESCRIBED BELOW. INPLIN IS A STRING OF ASCII
3081          : CHARACTERS ENDED BY A CARRIAGE RETURN CODE.
3082          :
3083          : - INPLIN IS LEXICALLY SCANNED USING THE LXSCAN ROUTINE.
3084          : - THE 1ST OBJECT IS CONVERTED TO A PROCESSING ROUTINE ADDRESS
3085          :   USING THE KEYWD ROUTINE & THE KEYWORD TABLE KWTABL
3086          :   SUPPLIED BY THE CALLING PROGRAM.
3087          : - THE PROCESSING ROUTINE IS CALLED WITH THE OUTPUT FROM LXSCAN
3088          :   ON THE STACK STARTING AT 2(SP). (THE RETURN ADDRESS OF THIS
3089          :   CALL OCCUPIES THE TOP WORD OF THE STACK.)
3090          : - THE LXSCAN OUTPUT IS REMOVED FROM THE STACK.
3091          :
3092          : IF LXSCAN OR KEYWD OR THE PROCESSING ROUTINE RETURN AN ERROR
3093          : CONDITION, THEN C = 1; OTHERWISE, C = 0.
3094          :
3095 033524 010546    MOV     R5,-(SP)      ;SAVE PAR LIST POINTER.
3096 033526 010667 000076    MOV     SP,CMMARK      ;SAVE STACK POINTER.
3097 033532          LXSCAN INPLIN(R5)    ;LEXICALLY SCAN INPLIN.
(1) 033532 016501 000002    MOV     INPLIN(R5),R1
(1) 033536 004167 000310    JSR    R1,LXSCAN
3098 033542 103426          BCS    CMRET          ;IF ERROR, RETURN WITH C-1.
3099 033544 005716          TST    @SP           ;HAVE WE ANY OBJECTS?
3100 033546 003005          BGT    1$           ;NO, IGNORE BLANK COMMAND.
3101 033550 012767 177777 164210    MOV     #-1,ESCFLG
3102 033556 009167 000036          JMP    CMRET
3103 033562 016700 000042    *$:    MOV     CMMARK,R0      ;YES, DETERMINE ADDRESS
3104 033566 162700 000006          SUB    #6,PC          ;OF FIRST OBJECT.
3105 033572 017705 000032    MOV     @CMMARK,R5     ;RESTORE PAR LIST POINTER.
3106 033576          KEYWD  R0,KWTABL(R5)    ;GET ADDR OF COMMAND PROCESSOR.
(1) 033576 010046          MOV     R0,-(SP)
(1) 033600 016546 000004          MOV     KWTABL(R5),-(SP)
(1) 033604 004767 000024          JSR    PC,KEYWD
3107 033610 103403          BCS    CMRET          ;IF INVALID COMMAND, MAKE
3108          : ERROR RETURN.
3109 033612 012705 033632          MOV     #NULPAR,R5    ;LOAD NULL PAR LIST ADDRESS.
3110 033616 004736          JSR    PC,@(SP)+      ;PROCESS COMMAND & POP ADDR.
3111 033620 016706 000004    CMRET: MOV     CMMARK,SP  ;RESTORE STACK TO ENTRY STATUS.
3112 033624 030026          BIT    R0,(SP)+      ;THROW AWAY SAVED R5 (WITHOUT
3113          : AFFECTING C BIT).
3114 033626          RETURN
(1) 033626 000207          RTS    PC            ;RETURN TO CALLING PROGRAM.
3115
3116          : DATA AREAS.
3117 033630 033333    CMMARK: .WORD 33333    ;STORAGE FOR STACK PTR ON ENTRY.
3118 033632 000000    NULPAR: .WORD 0      ;PAR LIST CONTAINING NO PARS.
  
```

3120  
 3121  
 3122  
 3123  
 3124  
 3125  
 3126  
 3127  
 3128  
 3129  
 3130  
 3131  
 3132  
 3133  
 3134  
 3135  
 3136  
 3137  
 3138  
 3139  
 3140  
 3141  
 3142  
 3143  
 3144  
 3145  
 3146  
 3147  
 3148  
 3149  
 3150  
 3151  
 3152  
 3153  
 (1)  
 3154  
 3155  
 3156  
 3157  
 3158  
 3159  
 3160  
 3161  
 3162  
 3163  
 3164  
 3165  
 3166  
 3167  
 3168  
 3169  
 3170  
 3171  
 3172  
 3173  
 3174

0000C2  
 000004  
 000022  
 00G024  
 000026  
 000026  
 033634  
 033634  
 033634 004567 000160  
 033640 162706 000006  
 033644 016602 00G026  
 033650 005722  
 033652 001051  
 033654 012205  
 033656 010566 000004  
 033662 011204  
 033664 010466 000002  
 033670 016603 000024  
 033674 012316  
 033676 112302  
 033700 042702 177400  
 033704 112301  
 033706 042701 177400  
 033712 001431  
 033714 122423

```

.SBTTL KEYWORD PROCESSING ROUTINE
: SUBROUTINE TO DETERMINE THE ADDRESS OF THE PROCESSING
: ROUTINE ASSOCIATED WITH THE KEYWORD REPRESENTED BY
: THE SYNTACTIC OBJECT POINTED TO BY THE ARGUMENT
: SRC. CONVERSION FROM KEYWORD TO ROUTINE ADDRESS
: IS DONE AS DEFINED IN THE KEYWORD TABLE
: POINTED TO BY THE ARGUMENT TABLAD.
:
: ON ENTRY, THE TOP OF THE STACK IS AS FOLLOWS:
: (SP): RETURN ADDRESS
: 2(SP): TABLAD
: 4(SP): SRC
:
: CALLING INSTRUCTION: JSR PC,KEYWD
:
: ON RETURN, THE TOP OF THE STACK IS AS FOLLOWS:
: (SP): ROUTINE ADDRESS, IF KEYWORD IN TABLE; 0 IF NOT.
:
: IF THE KEYWORD IS IN THE TABLE, C=0 ON RETURN. IF NOT, C 1.
:
: STACK POINTER OFFSETS
:ROUTAD = 0
:ROUTINE ADDR FOR
: CURRENT TABLE
: ELEMENT.
:ADDR OF INPUT WORD
:#CHAR IN INPUT WORD
:SUBROUTINE RETURN ADDR
:ADDR OF KEYWORD TABLE
:ADDR OF INPUT OBJECT
:RESULT RETURNED
:
: **ENTRY POINT**
: SAVE REGISTERS.
:
: ALLOCATE STACK SPACE
: GET ADDR OF INPUT
: OBJECT
: IF OBJECT NOT A WORD
: THEN EXIT: NOT FOUND
: GET # CHAR IN OBJECT.
: STORE ON STACK.
: GET ADDR OF INPUT WORD.
: STORE ON STACK.
: GET ADDR. OF KEYWORD
: TABLE.
: SAVE ROUTINE ADDR OF
: 1ST ELEMENT.
: GET MINIMUM LENGTH
: OF TABLE WORD.
: GET FULL LENGTH.
:
: IF 0, THEN NO MORE
: TABLE TO SEARCH
: COMPARE INPUT CHAR
: WITH TABLE CHAR.
  
```

ADRINP = 2  
 LENINP = 4  
 RETURN = 22  
 TABLAD = 24  
 SRC = 26  
 RESULT = 26

KEYWD:  
 REGSAV  
 JSR R5,REGSAV  
 SUB #6,SP  
 MOV SRC(SP),R2  
 TST (R2)+  
 BNE NOTHER  
 MOV (R2)+,R5  
 MOV R5,LENINP(SP)  
 MOV @R2,R4  
 MOV R4,ADRINP(SP)  
 MOV TABLAD(SP),R3  
 GTLENS: MOV (R3)+,@SP  
 MOVB (R3)+,R2  
 BIC #177400,R2  
 MOVB (R3)+,R1  
 BIC #177400,R1  
 BEQ NOTHER  
 NXTCH: CMPB (R4)+,(R3)+

```

3175 033716 002427
3176
3177 033720 003005
3178
3179 033722 005305
3180
3181 033724 001413
3182
3183 033726 005301
3184 033730 001371
3185 033732 005201
3186 033734 060103
3187 033736 042703 000001
3188 033742 016604 000002
3189
3190 033746 016605 000004
3191 033752 000750
3192
3193 033754 026602 000004
3194 033760 002406
3195 033762 011666 000026
3196
3197 033766 062706 000006
3198 033772 000241
3199 033774 000405
3200
3201
3202 033776 005066 000026
3203 034002 062706 000006
3204 034006 000261
3205 034010
(1) 034010 004567 000020
3206 034014 012616
3207 034016 000207

```

```

BLT NOTHER
BGT NXTWD
DEC R5
BEQ THFND
DEC R1
BNE NXTCH
INC R1
NXTWD: ADD R1,R3
BIC #1,R3
MOV ADRINP(SP),R4
MOV LENINP(SP),R5
BR GLENS
THFND: CMP LENINP(SP),R2
BLT NOTHER
MOV (SP),RESULT(SP)
ADD #6,SP
CLC
BR KWEXIT
: WORD IS NOT IN TABLE. SET RESULT TO 0 & SET Z BIT ON.
NOTHER: CLR RESULT(SP)
ADD #6,SP
SEC
KWEXIT: REGRES
JSR R5,REGRES
MOV (SP)+,@SP
RTS PC

```

```

:IF <, THEN NO MATCH
: EXISTS.
:IF >, THEN TRY NEXT
: TABLE WORD.
:IF INPUT STRING
: EXHAUSTED,
: WE MAY HAVE FOUND
: MATCH.
:IF MORE CHAR IN TABLE WORD
: TO TEST, GO & TEST THEM.
:GET ADDR OF NEXT
: TABLE ENTRY.
:POINT TO BEGINNING
: OF INPUT WORD.
:GET LENGTH OF INPUT WORD.
:GET LENGTHS OF TABLE WORD.
:IF LEN(INP.WD) < MIN LEN (TABLE
: WORD), WORD IS NOT IN TABLE.
:SAVE ROUTINE ADDR. OF
: MATCH.
:FREE LOCAL STACK SPACE.
:CLEAR CARRY BIT.
:CLEAR RESULT.
:FREE LOCAL STACK SPACE.
:SET CARRY BIT.
:RESTORE REGISTERS.
:POP AN ARGUMENT.
:RETURN.

```

```

3209
3210
3211
3212
3213 034020
3214 034020 010446
3215 034022 010346
3216 034024 010246
3217 034026 010146
3218 034030 010046
3219 034032 000145
3220
3221
3222
3223
3224
3225
3226
3227 034034
3228 034034 030025
3229 034036 012600
3230 034040 012607
3231 034042 012602
3232 034044 012603
3233 034046 012604
3234 034050 000205

```

.SBTTL REGISTER SAVE & RESTORE ROUTINES

```

: SUBROUTINE TO SAVE R0 - R5 ON STACK
: CALLING SEQUENCE: JSR R5,REGSAV ;**ENTRY POINT**
REGSAV:

```

```

MOV R4,-(SP)
MOV R3,-(SP)
MOV R2,-(SP)
MOV R1,-(SP)
MOV R0,-(SP)
JMP @R5

```

```

: SUBROUTINE TO RESTORE R0-R5 FROM STACK
: THE CONDITION CODE BITS IN THE PS ARE DESTROYED,
: EXCEPT FOR THE CARRY BIT, WHICH IS PRESERVED.

```

```

: CALLING SEQUENCE: JSR R5,REGRES ;**ENTRY POINT**
REGRES: ;THROW AWAY OLD R5 VALUE.

```

```

BIT R0,(SP)+
MOV (SP)+,R0
MOV (SP)+,R1
MOV (SP)+,R2
MOV (SP)+,R3
MOV (SP)+,R4
RTS R5

```

3236  
3237  
3238  
3239  
3240  
3241  
3242  
3243  
3244  
3245  
3246  
3247  
3248  
3249  
3250  
3251  
3252  
3253  
3254  
3255  
3256  
3257  
3258  
3259  
3260  
3261  
3262  
3263  
3264  
3265  
3266  
3267  
3268  
3269  
3270  
3271  
3272  
3273  
3274  
3275  
3276  
3277  
3278  
3279  
3280  
3281  
3282  
3283  
3284  
3285  
3286  
3287  
3288  
3289  
3290  
3291

.SBTTL LEXICAL SCAN ROUTINE

: PERFORM LEXICAL SCAN OF INPUT COMMAND IN  
: BUFFER.

: THREE CLASSES OF SYNTACTIC OBJECTS ARE RECOGNIZED:  
: 1. WORD: A STRING OF CHARACTERS BEGINNING WITH  
: A LETTER & TERMINATED WITH A  
: BLANK OR CARRIAGE RETURN.  
: 2. NUMBER: A STRING OF OCTETS TERMINATED WITH A  
: BLANK OR CARRIAGE RETURN, OR A STRING OF DIGITS  
: TERMINATED WITH A DOT.  
: 3. CHARACTER STRING: A STRING SURROUNDED BY 2 INSTANCES  
: (1 ON EACH END) OF A SPECIAL CHARACTER.


: SYNTACTIC OBJECTS ARE SEPARATED BY 1 OR MORE BLANKS.  
: THE COMMAND IS ENDED BY A CARRIAGE RETURN.

: THIS LEXICAL SCANNER DETERMINES THE LOCATIONS OF THE  
: SYNTACTIC OBJECTS & DETERMINES THEIR CLASSES.  
: NUMBERS ARE CONVERTED TO THEIR BINARY VALUES.

: AFTER THE LEXICAL SCAN IS PERFORMED, EACH  
: SYNTACTIC OBJECT WILL BE REPRESENTED ON THE STACK  
: AS A 3 WORD QUANTITY AS FOLLOWS:

TOP WORD	=	SYNTACTIC CLASS: 0==>WORD 2==>NUMBER 4==>CHARACTER STRING
2ND WORD	-	LENGTH OF OBJECT IN CHARACTERS; NOT SIGNIFICANT FOR NUMBERS; DOES NOT INCLUDE SURROUNDING DELIMITERS FOR CHAR. STRINGS.
3RD WORD	=	VALUE OF NUMBER, OR POINTER TO 1ST LETTER OF KEYWORD OR 1ST SIGNIFICANT CHARACTER OF STRING (IE: NOT SUR- ROUNDING DELIMITER)

: AT THE END OF THE LEXICAL SCAN THE STACK WILL BE  
: ARRANGED AS FOLLOWS (N - NO. OF SYNTACTIC OBJECTS):

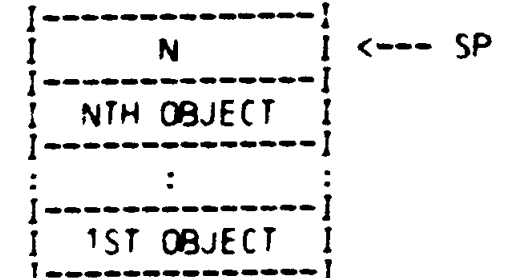

: WHERE EACH OBJECT IS REPRESENTED AS ABOVE.

: CALLING SEQUENCE: R1=BUFFER ADDRESS  
: JSR R1,LXSCAN  
: ON RETURN, REGISTERS 0-5 ARE UNDEFINED.  
: EXCEPT FOR THE ABOVE TABLE, THE STACK IS AS IT  
: WAS BEFORE ENTRY TO THE ROUTINE.

3292  
3293  
3294  
3295  
3296  
3297  
3298 034052  
3299 034052 005002  
3300 034054 012605  
3301 034056  
(1) 034056 122527 00004C  
(1) 034062 001775  
(1) 034064 005305  
3302 034066  
(1) 034066 121527 00010  
(1) 034072 002410  
(1) 034074 121527 000132  
(1) 034100 003002  
(1) 034102 005004  
(1) 034104 000424  
(1) 034106 012704 000004  
(1) 034112 000421  
(1) 034114 121527 000060  
(1) 034120 002406  
(1) 034122 121527 000071  
(1) 034126 003367  
(1) 034130 012704 000002  
(1) 034134 000410  
(1) 034136 121527 000055  
(1) 034142 001757  
(1) 034144 121527 000015  
(1) 034150 001356  
(1) 034152 012704 000006  
3303 034156 000174 034162  
3304  
3305 034162 034172  
3306 034164 034232  
3307 034166 034376  
3308 034170 034436  
3309  
3310 034172 010503  
3311 034174  
(2) 034174 121527 000040  
(2) 034200 001405  
(2) 034202 121527 000015  
(2) 034206 001402  
(1) 034210 005205  
(1) 034212 000770  
3312 034214 010346  
3313 034216 160503  
3314 034220 005403  
3315 034222 010346  
3316 034224 010446  
3317  
3318 034226 005202  
3319 034230 000712

: IF LXSCAN DETECTS AN ERROR CONDITION, IT RETURNS WITH THE CARRY (C)  
: BIT SET; OTHERWISE IT IS CLEAR. AT THE MOMENT, THE  
: ONLY ERROR CONDITION DETECTED BY LXSCAN IS A STRING WHICH IS MISSING  
: ITS CLOSING DELIMITER.

LXSCAN:

CLR R2  
MOV (SP),R5  
NXTL: SPAN R5,<#>  
64\$: CMPB (R5),#'  
BEQ 64\$  
DEC R5  
SYNCLS @R5,R4  
CMPB @R5,#'A  
BLT 67\$  
CMPB @R5,#'Z  
BGT 66\$  
65\$: CLR R4  
BR 69\$  
66\$: MOV #4,R4  
BR 69\$  
67\$: CMPB @R5,#'0  
BLT 68\$  
CMPB @R5,#'9  
BGT 66\$  
MOV #2,R4  
BR 69\$  
68\$: CMPB @R5,#'-  
BEQ 65\$  
CMPB @R5,#'5  
BN 66\$  
MOV #6,R4  
JMP @SJT(R4)

:\*\*ENTRY POINT\*\*  
:CLEAR #OBJECTS.  
:GET ADDR. OF COMMAND BUFFER.  
:R5 = ADDR (1ST NONBLANK CHAR)

:DETERMINE SYNTACTIC CLASS.

SJT: .WORD SCWORD  
.WORD SCNO  
.WORD SCCHAR  
.WORD SCEOL

:PROCESS OBJECT  
:WORD PROCESSOR.  
:NUMBER PROCESSOR.  
:CHARACTER STRING PROCESSOR.  
:END OF LINE PROCESSOR.

SCWORD: MOV R5,R3  
BREAK R5,<<#>,<#15>>  
CMPB @R5,#'  
BEQ 65\$  
CMPB @R5,#'5  
BEQ 65\$  
INC R5  
BR 64\$  
MOV R3,-(SP)  
SUB R5,R3  
PLAC: NEG R3  
MOV R3,-(SP)  
MOV R4,-(SP)

:R3 = START ADDR OF OBJECT  
:R5 ADDR (NEXT BLANK JR CR)

LXINCN: INC R2  
BR NXTL

:PUSH ADDR OF OBJECT ONTO STACK.  
:R3 = (-LENGTH OF OBJECT)  
:NEGATE TO GET LENGTH.  
:PUSH LENGTH ONTO STACK.  
:PUSH SYNTACTIC CLASS ONTO  
: STACK  
: INCREMENT  
: GO TO SCAN NEXT ELEMENT

3320									
3321	034232	005000		SCNO:	CLR	R0			:CLEAR ACCUMULATED NO.
3322	034234	010504			MOV	R5,R4			:SAVE POINTER TO 1ST DIGIT.
3323	034236	121527	000060	SNXTDG:	CMPB	@R5,#'0			:IF CHAR <'0'
3324	034242	002415			BLT	SNTDIG			: THEN TREAT AS DELIMITER.
3325	034244	121527	000071		CMPB	@R5,#'9			:IF CHAR >'9'
3326	034250	003012			BGT	SNTDIG			: THEN TREAT AS DELIMITER.
3327	034252				MULT	10.,R0,R3			:MULTIPLY PREVIOUS DIGITS BY 10.
(2)	034252	006300			ASL	R0			
(2)	034254	010003			MOV	R0,R3			
(2)	034256	006300			ASL	R0			
(2)	034260	006300			ASL	R0			
(2)	034262	060300			ADD	R3,R0			
3328	034264	112503			MOVB	(R5)+,R3			
3329	034266	142703	000060		BICB	#60,R3			:CLEAR TOP BITS OF ASCII CODE.
3330	034272	060300			ADD	R3,R0			:ADD DIGIT.
3331	034274	000760			BR	SNXTDG			:GET NEXT DIGIT.
3332									
3333	034276	121527	000040	SNTDIG:	CMPB	@R5,#'			:IF DELIMITER = SPACE, TRY
3334	034302	001413			BEQ	TRYOCT			: CONVERTING OCTAL NO.
3335	034304	121527	000015		CMPB	@R5,#'15			:IF DELIMITER = CR, TRY
3336	034310	001410			BEQ	TRYOCT			: CONVERTING OCTAL NO.
3337	034312	122527	000056		CMPB	(R5)+,#'			:IF DELIMITER IS NOT DOT,
3338	034316	001052			BNE	LXERR			: THEN SIGNAL LXSCAN ERROR.
3339	034320	010046		PUSHNO:	MOV	R0,-(SP)			:PUT CONVERTED NO. ON STACK.
3340	034322	005046			CLR	-(SP)			:SET OBJECT LENGTH TO ZERO.
3341	034324	012746	000002		MOV	#2,-(SP)			:SET OBJECT CLASS TO ?
3342									: (NUMBER).
3343	034330	000736			BR	LXINCN			:INCREMENT OBJ. COUNT &
3344									: SCAN NEXT OBJ.
3345									
3346	034332	005000		TRYOCT:	CLR	R0			:CLEAR ACCUMULATED NO.
3347	034334	121427	000060	ONXTDG:	CMPB	@R4,#'0			:IF CHAR <'0'
3348	034340	002413			BLT	ODELIM			: THEN TREAT AS DELIMITER.
3349	034342	121427	000067		CMPB	@R4,#'7			:IF CHAR >'7'
3350	034346	003010			BGT	ODELIM			: THEN TREAT AS DELIMITER.
3351	034350				MULT	8.,R0			:MULTIPLY PREVIOUS DIGITS BY 8.
(2)	034350	006300			ASL	R0			
(2)	034352	006300			ASL	R0			
(2)	034354	006300			ASL	R0			
3352	034356	112403			MOVB	(R4)+,R3			:GET CHARACTER.
3353	034360	142703	000060		BICB	#60,R3			:CLEAR TOP BITS OF ASCII CODE.
3354	034364	060300			ADD	R3,R0			:ADD DIGIT.
3355	034366	000762			BR	ONXTDG			:GET NEXT DIGIT.
3356									
3357	034370	020405		ODELIM:	CMF	R4,R5			:IF NOT AT END OF NO.(DUE TO
3358	034372	001024			BNE	LXERR			: '8' OR '9'), LXSCAN ERROR.
3359	034374	000751			BR	PUSHNO			:GENERATE OBJECT FOR NUMBER.
3360									
3361	034376	112500		SCCHAR:	MOVB	(R5)+,R0			:R0 = DELIMITER OF STRING.
3362	034400	010503			MOV	R5,R3			:R3 = ADDR (1ST CHAR OF
3363									: STRING ITSELF)
3364	034402				BREAK	R5,<R0,#15>			:R5 = ADDR (NEXT DELIM OR CR).
(2)	034402	121500			CMPB	@R5,R0			
(2)	034404	001405			BEQ	65\$			
(2)	034406	121527	000015		CMPB	@R5,#15			

```

(2) 034412 001402      BEQ    65$
(1) 034414 005205      INC    R5
(1) 034416 000771      BR     64$
3365 034420 121527 000015  CMPB  @R5,#15      ;WAS CR FOUND BEFORE DELIMITER?
3366 034424 001407      BEQ    LXERR      ;YES, PROCESS ERROR
3367 034426 010346      MOV    R3,-(SP)   ;PUSH ADDR. OF STRING ONTO
3368                                     ; STACK.
3369 034430 160503      SUB    R5,R3      ;R3 = (-LENGTH OF STRING EXCL.
3370                                     ; DELIMITER)
3371 034432 005205      INC    R5         ;R5 = ADDR (CHAR AFTER CLOSING
3372                                     ; DELIMITER).
3373 034434 000671      BR     PLAC      ;FINISH OFF PROCESSING STRING.
3374                                     ;
3375 034436 010246      SCEOL: MOV    R2,-(SP) ;PUSH NO. OF OBJECTS ONTO STACK
3376 034440 000241      CLC                                     ;INDICATE NO ERROR
3377 034442 000111      LXIT: JMP    @R1   ;RETURN TO CALLING PROGRAMME
3378                                     ;
3379                                     ; PROCESS LEXICAL SCAN ERROR .
3380 034444 000261      LXERR: SEC                                     ;INDICATE ERROR OCCURRED .
3381 034446 005302      DEC    R2         ;CLEAN UP STACK & EXIT .
3382 034450 002774      BLT    LXIT      ;..
3383 034452 062706 000006  ADD    #6,SP     ;..
3384 034456 000772      BR     LXERR     ;..
3385                                     ;
3386                                     ;
3387                                     ;
                                .END

```





CZPLACO PCL11 EXERCISER V02C  
CZPLAC.P11 08-JUN-79 15:55

MACY11 30A(1052) 25-JUN-79 08:52 PAGE 50-1  
CROSS REFERENCE TABLE -- USER SYMBOLS

SEQ 0129

CPALP	004540	768#	783				
CPARTN	004622	785#	787				
CPASS	005672	1020#	2478				
CPCLR	004752	831#	2481				
CPCLRC	005002	840#	847				
CPCLRT	005044	851#	853				
CPCNRT	005200	885	887#	889			
CPCNT	005114	878#	2484				
CPDEL	004632	791#	2487				
CPDLP	004646	796#	816				
CPDRTN	004742	818#	820				
CPERR	006600	1174#	2490				
CPERTN	006716	1185	1191#	1194			
CPGO	005510	979#	2493				
CPINIT	005210	902#	2496				
CPINRT	005446	744#	946				
CPMAST	004116	646#	2499				
CPMLP	003506	580#	596				
CPMOK	004132	648	651#				
CPMRET	004200	650	660#				
CPRANG	004366	720#	2502				
CPRFIL	004470	744#	748				
CPRIIB	004274	691#	2505				
CPROK	004310	693	696#				
CPRRET	004364	695	708#				
CPRRTN	004514	750#	753				
CPSEC	004202	666#	2508				
CPSEX	004064	630#	633	639			
CPSILO	003406	562#	2511				
CPSLV	004022	618	624#				
CPSOK	004216	668	671#				
CPSRET	004266	670	681#	685			
CPSRTN	005104	865#	867				
CPSTAT	005054	859#	2514				
CPSUM	005456	953#	2517				
CPCURT	005500	958#	960				
CRRET	015074	2078	2083#				
CR.	= 000015	335#	2079	2271			
CTL CMG	C16422	2125	2335#				
CTL OMG	016414	2093	2333#				
CTL JMG	016417	2134	2334#				
CTL.C	= 000003	338#	2269				
CTL.O	= 000017	336#	2272				
CTL.J	= 000021	339#	2273				
CTL.S	= 000023	340#	2274				
CTL.U	= 000025	337#	2275				
CURAD	017762	1346*	1347	1474	1499	2399#	
CYCL	007350	1299	1301#				
DATBUF	020676	1269	1344	2432#			
DATGEN	007124	503	1255#				
DATGEV	017670	501	943*	1282*	1364*	2366#	
DBCLP	011076	1557#	1559				
UBF CLR	011062	1544	1554#				
DDIV	033240	2837	2886#				
DECJSP	032700	1850	190	1953	2718#		
DECPNT	032706	1781	1785	1789	1793	2724#	



















ZPLACD PCL11 EXERCISER V02C  
 CZPLAC.P11 08-JUN-79 15:55

MACY11 30A(1052) 25-JUN-79 08:52 PAGE 51  
 CROSS REFERENCE TABLE -- MACRO NAMES

SEG 0138

BDINIT	231#	907	1340	1450	1459	1484	1510	1545	1630	1678	1688				
BREAK	3018#	3311	3364												
CALL	131#	444	445	446	447	448	449	471	472	481	491	494	497	500	503
	506	509	512	515	518	521	524	527	534	619	620	621	622	626	882
	883	913	992	993	994	1110	1112	1113	1116	1135	1136	1137	1142	1155	1156
	1157	1183	1229	1235	1236	1237	1345	1397	1409	1413	1421	1425	1429	1431	1435
	1445	1449	1471	1490	1514	1584	1593	1597	1605	1610	1612	1616	1620	1667	1674
	1683	1761	1767	1770	1773	1775	1795	1796	1804	1824	1825	1836	1837	1951	1878
	1879	1886	1887	1889	1902	1954	1958	1966	2052	2064	2067	2082	2092	2093	2125
	2134	2156	2157	2158	2159	2175	2176	2179	2203	2218	2230	2247	2259	2260	2261
CBTAS	2805#	2831													
ERROR	262#	1584	1593	1597	1605	1610	1612	1616	1620	1667	1674	1683			
ERROT	250#	1397	1409	1413	1421	1425	1429	1431	1435	1445	1449	1471	1490	1514	
HEDING	202#														
KEYWD	46#	653	673	698	3106										
LXSCAN	71#	3097													
MULP	219#	1276	1670												
MULT	153#	575	1995	1996	1998	2034	2035	2037	3327	3351					
PROC	87#	562	646	666	691	720	763	791	831	837	859	878	902	906	914
	953	979	1020	1107	1134	1154	1174	1209	1255	1336	1542	1726	1817	1871	1924
	1974	2012	2050	2076	2089	2105	2115	2124	2133	2146	2170	2189	2212	2243	2258
	2959	2979	3077												
REGRES	282#	539	1224	1398	1452	1460	1485	1511	1526	1560	1586	1628	1641	1679	1690
	2231	3205													
REGSAV	276#	533	1210	1378	1554	1570	2228	3153							
RETURN	112#	630	660	681	708	750	785	818	851	865	887	944	958	998	1098
	1117	1143	1159	1191	1225	1283	1358	1550	1805	1860	1911	1967	2006	2045	2068
	2083	2094	2107	2117	2162	2180	2204	2220	2262	2781	2867	2904	2937	2950	2973
	2994	3114													
SPAN	3006#	3301													
STCVT	2659#	2707	2713	2719	2725										
SYNCLS	3039#	3302													

. ABS. 034460 000

ERRORS DETECTED: 0

CZPLAC,CZPLAC/CR=CZPLAC  
 RUN-TIME: 31 43 3 SECONDS  
 RUN-TIME RATIO: 462/79-5.8  
 CORE USED: 10K (19 PAGES)