

FP11-F

FP11F FLTG PNT A
CKFPAA0

AH-F632A-MC


COPYRIGHT 1980

FICHE 1 OF 2

JAN 1980

digital

MADE IN USA

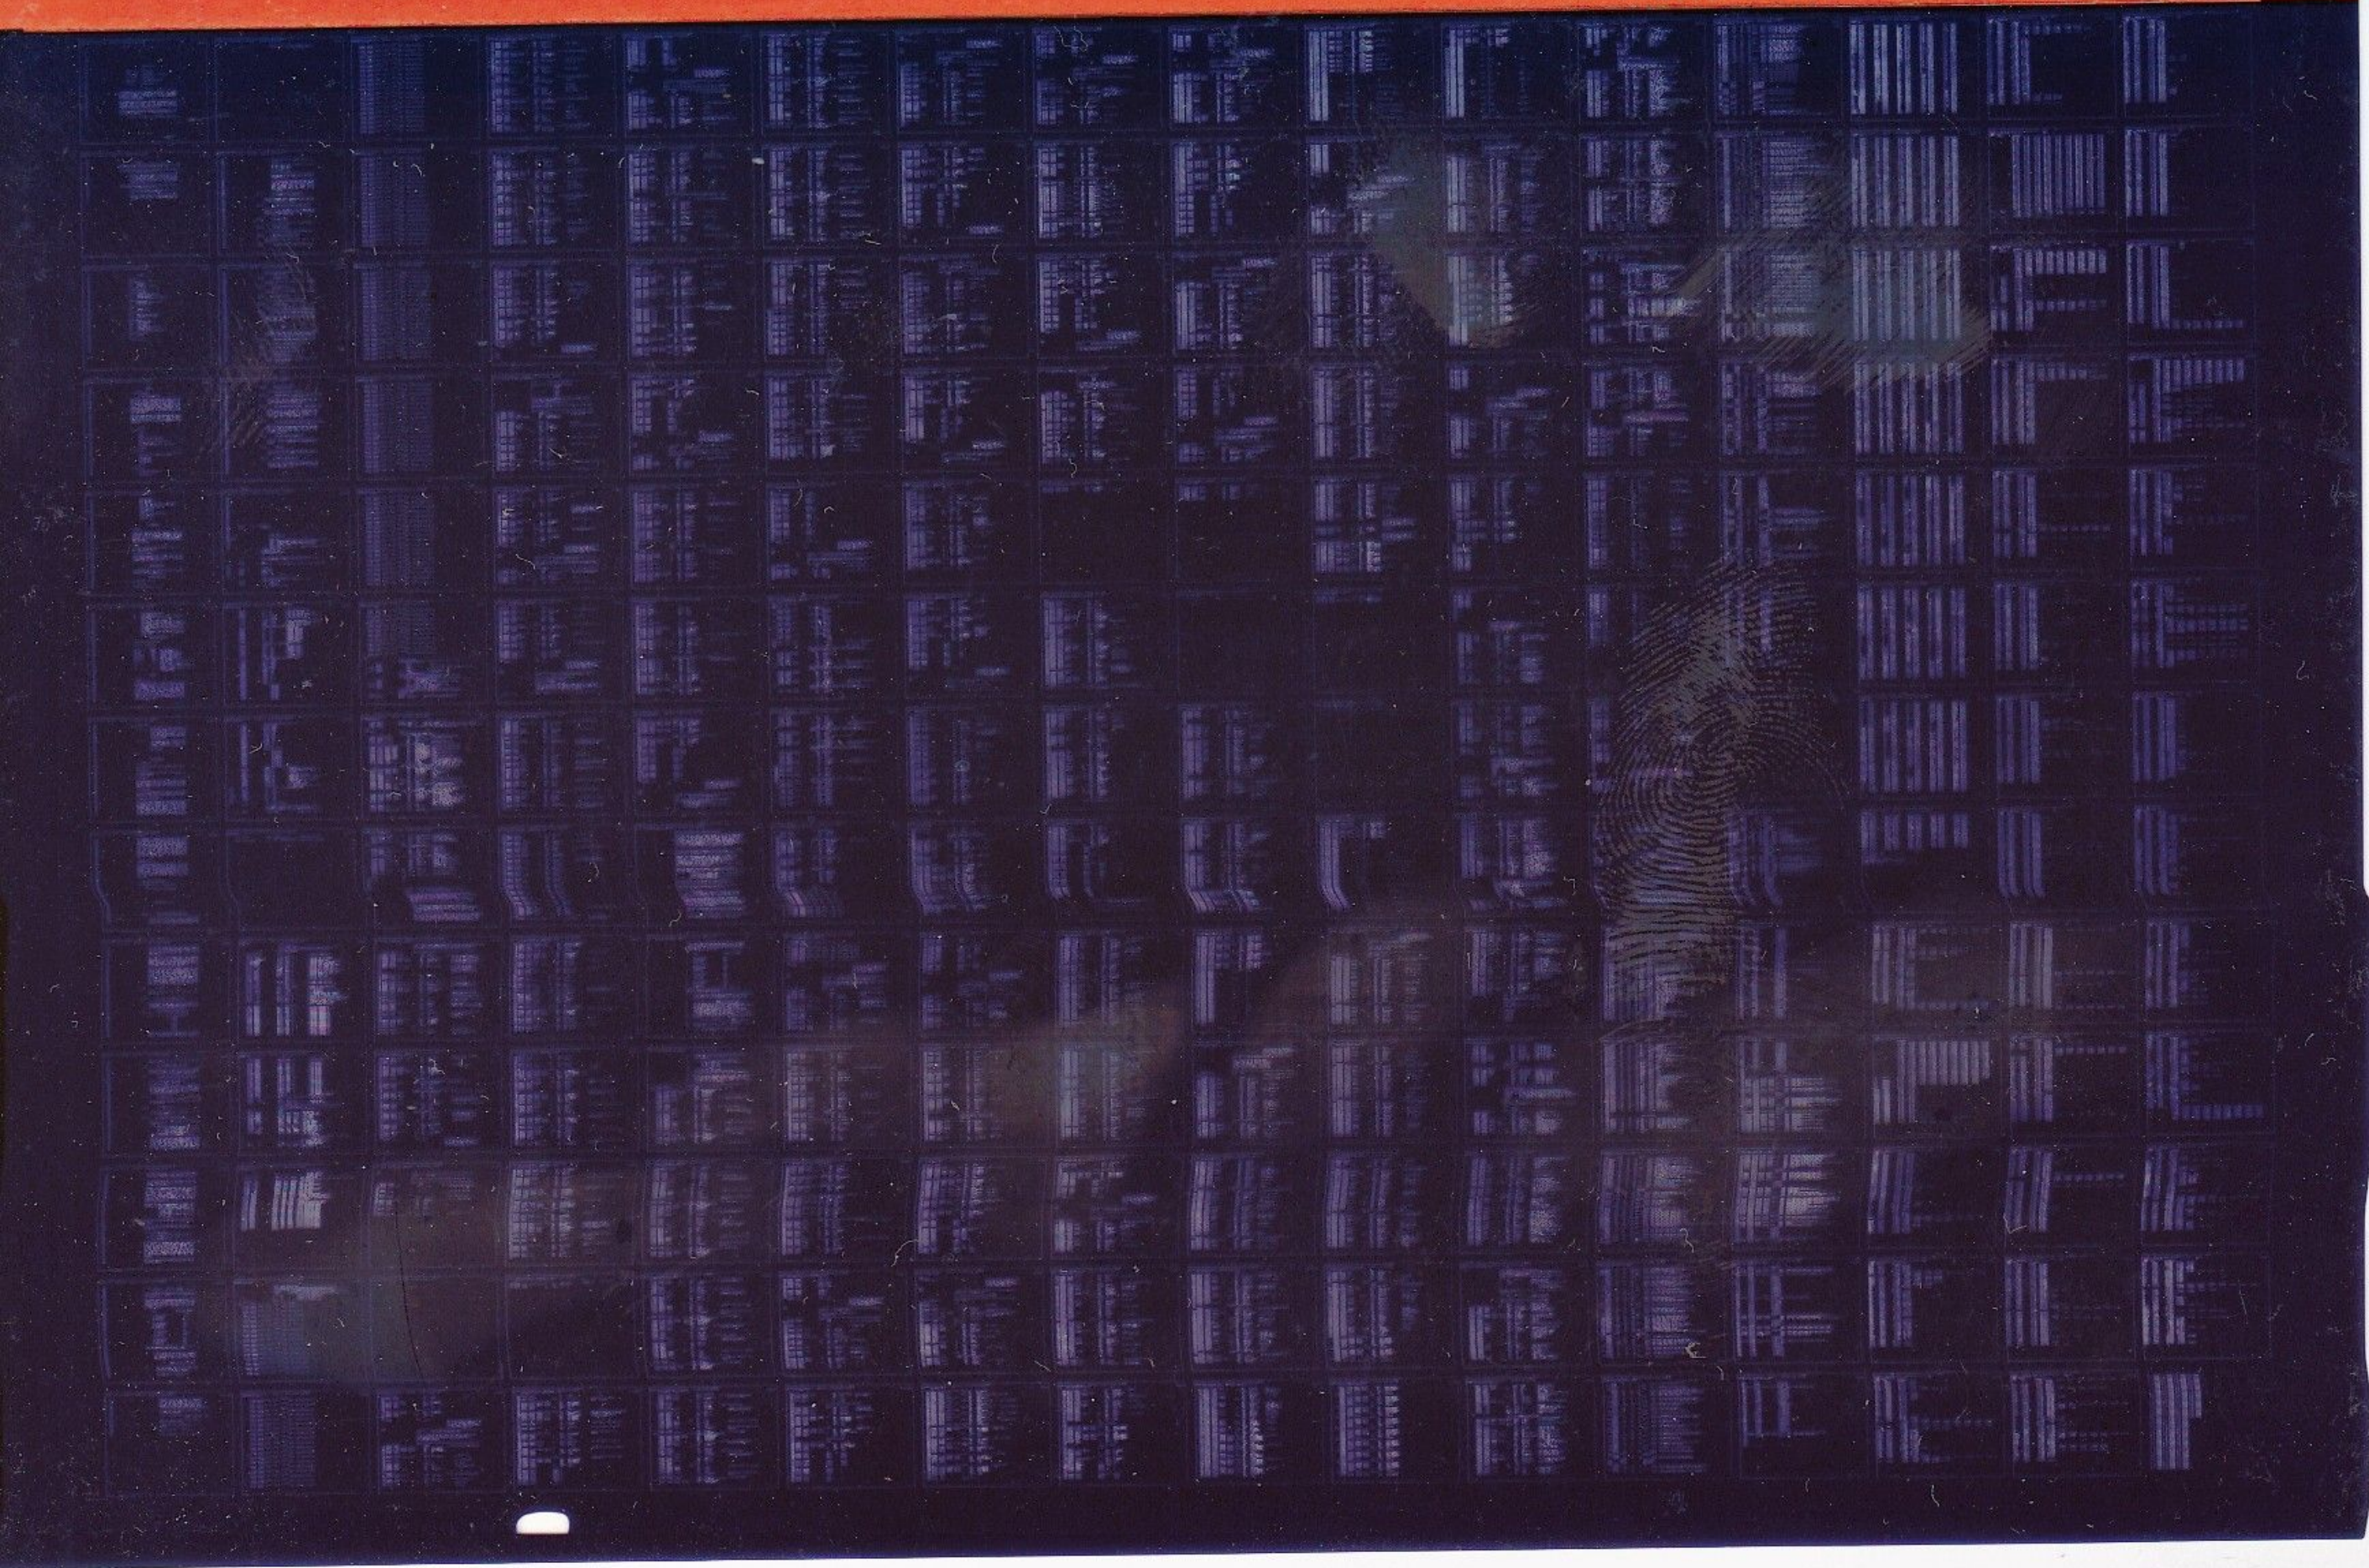

FP11-F

FP11F FLTG PNT A
CKFPAA0

AH-F632A-MC

COPYRIGHT 1980

FICHE 2 OF 2

JAN 1980

digital

MADE IN USA

.REM 8

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45

IDENTIFICATION

PRODUCT CODE: AC-F630A-MC
PRODUCT NAME: CKFPAA0 FP11F FLTG PNT PRT A
DATE CREATED: OCTOBER, 1979
MAINTAINER: DIAGNOSTIC ENGINEERING
AUTHOR: ANTHONY VEZZA

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY OCCUR IN THIS MANUAL.

THE SOFTWARE DESCRIBED IN THIS DOCUMENT IS FURNISHED TO THE PURCHASER UNDER A LICENSE FOR USE ON A SINGLE COMPUTER SYSTEM AND CAN BE COPIED (WITH INCLUSION OF DIGITAL'S COPYRIGHT NOTICE) ONLY FOR USE IN SUCH SYSTEM, EXCEPT AS MAY OTHERWISE BE PROVIDED IN WRITING BY DIGITAL.

DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR THE USE OR RELIABILITY OF ITS SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL.

COPYRIGHT (C) 1979 BY DIGITAL EQUIPMENT CORPORATION

47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74

HISTORY

NO CHANGES TO THE 11/34 FLOATING POINT DIAGNOSTIC PART 'A' WERE FOUND TO BE NEEDED TO ADAPT IT FOR USE ON THE 11/44.

THE FOLLOWING WAS ADDED TO THE 11/34 FLOATING POINT DIAGNOSTIC TO MAKE THE 'B' VERSION COVER THE 11/44:

1. TEST 22 - PROCESSOR LOOKS TO SEE IF APT IS CONTROLLING THE TEST, AND IF IT IS, CHECKS TO SEE IF THE USER HAS SELECTED THIS TEST BY CHECKING BIT 7 IN THE SWITCH REGISTER. IT HAS ALSO BEEN CHANGED SO THAT IF BIT 7 IS *ONE*, THE CODE WILL SELECT THE TEST.

THE FOLLOWING WAS ADDED TO THE 11/34 FLOATING POINT DIAGNOSTIC TO MAKE THE 'C' VERSION COVER THE 11/44:

1. TEST 76 - CHECKS THAT FP PROCESSOR DOESN'T ACCESS D-SPACE UNTIL CONDITIONS WARRANT.
2. TEST 77 - CHECKS THAT SR1 MATCHES WHAT ACTUALLY HAPPENED TO THE REGISTER OF THE INSTRUCTION, AND THAT THE VALUE OF AUTO INCREMENT/DECREMENT WAS PROPER.

76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125

CONTENTS

- 1. ABSTRACT
- 2. REQUIREMENTS
 - 2.1 EQUIPMENT
 - 2.2 STORAGE
 - 2.3 PRELIMINARY PROGRAMS
- 3. LOADING PROCEDURE
- 4. STARTING PROCEDURE
 - 4.1 CONTROL SWITCH SETTINGS
 - 4.2 STARTING ADDRESS
 - 4.3 PROGRAM AND OPERATOR INTERACTION
- 5. OPERATING PROCEDURE
 - 5.1 OPERATIONAL SWITCH SETTINGS
 - 5.3 OPERATOR ACTION
- 6. ERRORS
 - 6.1 SUMMARY
 - 6.2 ERROR RECOVERY
- 7. RESTRICTIONS
 - 7.1 STARTING RESTRICTIONS
 - 7.2 OPERATING RESTRICTIONS
- 8. MISCELLANEOUS
 - 8.1 EXECUTION TIMES
 - 8.2 STACK POINTER
 - 8.3 PASS COUNT
 - 8.4 T-BIT TRAPPING
 - 8.5 SOFTWARE SWITCH REGISTER
 - 8.6 INTERRUPTS TEST
 - 8.7 ACT, APT AND XXDP COMPATIBILITY
- 9. PROGRAM DESCRIPTION
 - 9.1 CKFPAA0
- 10. LISTING
 - 10.1 CKFPAA0

127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183

1.

ABSTRACT

THE THREE PROGRAMS:

CKFPAA0 CKFPBA0 CKFPCA0

ARE DESIGN TO DETECT AND REPORT LOGIC FAULTS IN THE PDP 11/44 FP11-F FLOATING POINT PROCESSOR. THE DESIGN IS AN ATTEMPT TO REACH ALL ROM STATES, TAKE ALL BRANCH MICRO TESTS (BUT'S) AND VERIFY ALL THE LOGIC. THEY CONSIST OF 157 (OCT) INDIVIDUAL TESTS SEQUENCED TO DETECT AND ATTEMPT TO IDENTIFY FAULTS WITH A MINIMUM HARDWARE OR SOFTWARE LEVEL. THE TESTS ARE PARTIONED INTO THREE STAND-ALONE PROGRAMS DESCRIBED BELOW.

NOTE THAT ERROR REPORTS IN THESE PROGRAMS ARE BASED UPON THE KNOWLEDGE THAT ALL PREVIOUS TESTS HAVE BEEN RUN AND IN MOST CASE THAT THERE IS ONLY A SINGLE POINT FAULT IN THE FP11-F. IF THE PROGRAMS OR TESTS ARE NOT RUN IN ORDER THEN ERROR MESSAGES MAY NOT BE ACCURATE.

A. CKFPAA0

CKFPAA0 TESTS:

LDFPS
STFPS
CFCC
SETF, SETD, SETI AND SETL
STST
LDF AND LDD (ALL SOURCE MODES)
STD (MODE 0 AND 1)
ADDF, ADDD AND SUBD (MOST CONDITIONS)

B. CKFPBA0

CKFPBA0 TESTS:

ADDF, ADDD AND SUBD (ALL CONDITIONS NOT TESTED IN CKFPAA0)
CMPD AND CMPF
DIVD AND DIVF
MULD AND MULF
MODD AND MODF

C. CKFPCA0

CKFPCA0 TESTS:

STF AND STD (ALL MODES)
STCFD AND STCDF
CLRD AND CLRF

184	NEGF AND NEGD
185	ABSF AND ABSD
186	TSTF AND TSTD
187	NEGF, ABSF AND TSTF (ALL SOURCE MODES)
188	NEGF, ABSF AND TSTF (ALL SOURCE MODES)
189	LDFPS (ALL SOURCE MODES)
190	LDCIF AND LDCLF
191	LDC!D AND LDCLD
192	LDEXP
193	STFPS (ALL DESTINATION MODES)
194	STCFL AND STCFI
195	STCDL AND STCDI
196	STEXP
197	STST

2. REQUIREMENTS

2.1 EQUIPMENT

A PDP 11/44 (WITH OR WITHOUT CONSOLE), LA30 (OR EQUIVALENT) AND AN FP11-F FLOATING POINT PROCESSOR. NOTE THAT A SPECIAL INTERRUPTS TEST MODULE IS BEING DESIGNED FOR USE IN THE MANUFACTURING ENVIRONMENT. WHEN THIS DEVICE IS PRESENT THE PROGRAM CKFPBA0 WILL MAKE USE OF IT TO TEST THE FPP INTERRUPT ON BUS REQUEST FUNCTIONS.

2.2 STORAGE

ALL THREE PROGRAM REQUIRE A MEMORY SYSTEM OF AT LEAST 16K TO LOAD AND RUN.

2.3 PRELIMINARY PROGRAMS

THESE THREE DIAGNOSTICS WILL ASSUME THAT THE PDP 11/44 CENTRAL PROCESSOR IS FAULTLESS, THEREFORE WHEN IN DOUBT RUN THE PDP 11/44 PROCESSOR DIAGNOSTICS BEFORE THESE FP11-F DIAGNOSTICS.

3. LOADING PROCEDURE

THE PROGRAMS WILL BE SUPPLIED ON THE 11/44 DIAGNOSTIC MEDIA. REFER TO THE XXDP OPERATING MANUAL FOR FURTHER INFORMATION.

4. STARTING PROCEDURE

4.1 CONTROL SWITCH SETTINGS

SEE SECTION 5.1

4.2 PROGRAM AND OPERATOR ACTION

184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240

241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297

1. LOAD PROGRAM INTO MEMORY
2. LOAD ADDRESS 200
3. SET CONSOLE SWITCHES (IF CONSOLE IS PRESENT)
4. PRESS START
ON FIRST PASS THE PROGRAM WILL IDENTIFY ITSELF. NOTE THAT IF THERE IS NO PHYSICAL CONSOLE THE PROGRAM WILL REQUEST THE OPERATOR FOR INITIAL VALUE FOR THE SOFTWARE SWITCH REGISTER (SEE SECTION 8.5). IF RUNNING UNDER ACT, APT OR CHAIN THIS DOES NOT APPLY.
5. THE PROGRAM WILL LOOP AND AN END OF PASS AND ERROR SUMMARY WILL BE TYPED AT THE END OF EVERY PASS.

5. OPERATING PROCEDURE

5.1 OPERATIONAL SWITCH SETTINGS

THE SWITCH SETTING ARE:

	OCTAL	
SW<15>=1...	100000	HALT ON ERROR
SW<14>=1...	40000	LOOP ON CURRENT TEST
SW<13>=1...	20000	INHIBIT ERROR TYPE OUTS
SW<12>=1...	10000	INHIBIT T-BIT TRAPPING
SW<11>=1...	4000	INHIBIT ITERATIONS
SW<10>=1...	2000	RING TTY BELL ON ERROR
SW<9>=1....	1000	LOOP ON ERROR
SW<8>=1....	400	LOOP ON TEST SPECIFIED IN SW<6> THROUGH SW<0>
SW<7>=1....	200	PRINT ERROR SUMMARY EVEN IF SW<13>=1, THIS APPLIES ONLY TO PROGRAM CKFPAA0.
SW<7>=1....	200	SELECT CORRECT INTERRUPT TEST IN PROGRAM CKFPBA0.

6. ERRORS

6.1 SUMMARIES

IN PROGRAM CKFPAA0 TESTS 1 AND 11 HAVE A SPECIAL ERROR SUMMARY FEATURE. THESE TWO TEST RUN MANY TEST PATTERNS THROUGH THE LOGIC. AFTER AN ERROR IS ENCOUNTERED, ONLY THE FIRST FIVE ERRORS ARE REPORTED (TYPED ON THE TTY). EVERY ERROR THOUGH IS LOGGED AND AN ERROR SUMMARY IS PRINTED WHEN THE TEST IS COMPLETE. NOTE THAT IF SW<13>=1, THIS SUMMARY WILL NOT BE TYPED UNLESS SW<7>=1. IN OTHER WORDS TO GET JUST AN ERROR SUMMARY FROM EITHER OF THESE TWO TESTS 1 AND 11 IN PROGRAM CKFPAA0 BOTH SWITCHES 13 AND 7 MUST = 1.

298 6.2 ERROR RECOVERY
299
300 SW<15:9>=0... MOST ERRORS WILL CAUSE EXECUTION TO
301 GO TO THE START OF THE NEXT TEST
302 AFTER THE MESSAGE IS TYPED. A FEW
303 TESTS ARE IN SECTIONS. IN THESE
304 TESTS AN ERROR WILL CAUSE EXECUTION
305 TO GO TO THE NEXT SECTION AFTER THE
306 MESSAGE IS TYPED.
307
308 SW<15>=1... THE PROGRAM WILL HALT AFTER TYPING
309 THE ERROR MESSAGE. PRESSING THE
310 CONSOLE CONTINUE WILL CAUSE THE
311 PROGRAM TO CONTINUE AS IF SW<15>=0.
312
313 7. RESTRICTIONS
314 -----
315
316 NONE
317
318
319 8. MISCELLANEOUS
320 -----
321
322 8.1 EXECUTION TIMES
323
324 LESS THAN 10 SECONDS FOR EACH PROGRAM ON ANY PASS.
325
326 8.2 STACK POINTER
327
328 THE STACK POINTER IS INITIALIZED TO 1100 IN EACH OF
329 THE THREE PROGRAMS.
330
331 8.3 PASS COUNT
332
333 THE PROGRAM MAKES ONE PASS FOR EACH END OF PASS
334 MESSAGE TYPED. THE END OF PASS MESSAGE DESCRIBES
335 THE TOTAL NUMBER OF PASSES COMPLETED AND THE TOTAL
336 NUMBER OF ERRORS SINCE THE LAST END OF PASS MESSAGE.
337
338 8.4 T-BIT TRAPPING
339
340 IF SW<12>=0 EACH PROGRAM WILL RUN WITH TRACE TRAPS
341 ON EVERY OTHER PASS. FIRST PASS WILL NOT ENABLE
342 TRACE TRAPS. NOTE SW<12>=1 DISABLES T-BIT TRAPS.
343
344 8.5 SOFTWARE SWITCH REGISTER
345
346 EACH OF THE THREE PROGRAMS WILL RUN WITH OR WITHOUT
347 A CONSOLE SWITCH REGISTER. IF A PHYSICAL CONSOLE
348 SWITCH REGISTER IS PRESENT ON THE SYSTEM, THEN THESE
349 PROGRAMS WILL GO AHEAD AND USE IT FOR THE SWITCH
350 FUNCTIONS DESCRIBED IN 5.1 ABOVE. IF HOWEVER THERE
351 IS NO CONSOLE SWITCH REGISTER ON THE SYSTEM A
352 SOFTWARE SWITCH REGISTER WILL BE USED. THIS
353 SOFTWARE SWITCH REGISTER CAN BE EXAMINED OR MODIFIED
354 AT ANY TIME BY THE USER IF HE TYPES CONTROL G WHILE

355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411

THE PROGRAM IS RUNNING. THIS CONTROL G WILL CAUSE THE CONTENTS OF THE SOFTWARE SWITCH REGISTER TO BE TYPED ON THE TTY AND ASK THE USER FOR A NEW VALUE. WHEN THE USER TYPES A VALUE AND CARRIAGE RETURN THEN THE PROGRAM WILL RESUME TESTING AT THE SAME POINT AT WHICH IT LEFT OFF WHEN THE USER TYPED CONTROL G. NOTE THAT WHEN NOT RUNNING UNDER ACT, APT OR CHAIN THE USER WILL BE ASKED FOR A SOFTWARE SWITCH REGISTER VALUE AFTER LOADING ADDRESS 200 AND STARTING THE PROGRAM THE FIRST TIME THE PROGRAM IS RUN AFTER LOADING (ONLY IF NO CONSOLE SWITCH REGISTER IS ON THE SYSTEM).

8.6 INTERRUPTS TEST

IN PROGRAM CKFPBAO THERE IS A SPECIAL TEST FOR CHECKING THE CORRECT FLOWS OF THE FPP. THIS TEST CAN BE RUN ONLY IF A SPECIAL TEST MODULE IS IN THE SYSTEM. THIS MODULE WILL PROBABLY ONLY BE USED IN MANUFACTURING. IF THIS MODULE IS NOT IN THE SYSTEM THIS TEST WILL AUTOMATICALLY BE DESELECTED. IF THIS TEST MODULE IS ON THE SYSTEM AND SW<7>=1 THIS TEST WILL BE RUN. IF SW<7>=0 THIS TEST WILL BE DESELECTED.

8.7 ACT, APT AND XXDP COMPATIBILITY

THESE PROGRAMS ARE FULLY COMPATIBLE WITH:
APT
ACT
XXDP MONITOR AND CHAIN PROGRAMS.

9. PROGRAM DESCRIPTION

TEST 1 LDFPS, STFPS AND DATA PATHS TEST

THIS IS A TEST OF THE LDFPS (LOAD FLOATING POINT STATUS) AND STFPS (STORE FLOATING POINT STATUS) INSTRUCTIONS. A COUNT PATTERN IS GENERATED AND RUN THROUGH THE FLOATING POINT STATUS REGISTER. THIS

412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468

WILL TEST THE 16-BIT TRI STATE BUS WHICH CONNECTS THE CPU WITH THE FPP AND ALSO RUNS INTERNALLY WITHIN THE FPP. ONLY DMO AND SMO ARE USED. NOTE THAT A MASK MUST BE USED BECAUSE SOME OF THE FPS BITS CANNOT BE SET.

ONLY THE FIRST FIVE ERRORS WILL BE REPORTED INDIVIDUALLY. THIS IS TO PREVENT LOCKING OUT THE COMPLETION OF THE TEST BECAUSE OF VIRTUALLY ENDLESS NUMBER OF ERRORS. ONLY FIVE INDIVIDUAL ERRORS WILL BE REPORTED THEN THE TEST WILL BE COMPLETED AND AN ERROR SUMMARY GIVEN (SEE NOTE BELOW).

NOTE THAT THIS TEST KEEPS A DYNAMIC RECORD OF THE LOGICAL 'AND' AND 'OR' OF THE FAILING DATA PATTERNS. THESE CAN BE VERY USEFUL IN DETERMINING STUCK BITS. IF THE USER HAS THE INHIBIT ERROR TYPE OUT SWITCH (SWR13) OFF, THEN THE USER WILL RECEIVE EACH INDIVIDUAL ERROR MESSAGE PLUS AN ERROR SUMMARY AT THE END OF THE TEST. INHIBITING ERROR PRINT OUT WILL INHIBIT ERROR SUMMARY PRINT OUT, EXCEPT IN THE CASE DESCRIBED BELOW. TO GET JUST THE ERROR SUMMARY WITH NO INDIVIDUAL ERROR REPORTS, SET SWITCH REGISTER BIT13 AND SWITCH REGISTER BIT7 BOTH ON.

TEST 2 CFCC TEST

THIS IS A TEST OF THE COPY CONDITION CODES INSTRUCTION, CFCC.

TEST 3 SETF, SETD, SETI AND SETL TEST

THIS IS A TEST OF THE SETF, SETD, SETI AND SETL INSTRUCTIONS. EACH INSTRUCTION IS EXECUTED WITH THE FPS CONTAINING ALL ONES AND ALSO WITH THE FPS CLEAR. THE RESULT OF EACH SITUATION IS CHECKED.

TEST 4 ILLEGAL FPP OP CODES AND STST TEST

THIS IS A TEST OF THE FPP OPERATION CODES:

170003
170004
:
170010
170013
170014
:
170077

THESE ARE ILLEGAL INSTRUCTIONS AND WITH INTERRUPTS ENABLED SHOULD CAUSE A TRAP TO 244. ALSO TESTED HERE IS THE INSTRUCTION: STST R1, WHICH SHOULD PUT

469 THE FEC CODE 2 IN R1, AFTER ANY OF THE ABOVE OP
470 CODES IS EXECUTED.
471
472 TEST 5 FID, INTERRUPT DISABLE, BIT TEST
473 -----
474
475 THIS IS A TEST OF FPS BIT 14 (FID) OR FLOATING
476 INTERRUPT DISABLE. AN ILLEGAL INSTRUCTION IS
477 EXECUTED WITH FID=1. NO INTERRUPT SHOULD OCCUR.
478
479 TEST 6 LDD AND STD, WITH SRC AND DST MODE 1, TEST
480 -----
481
482 THIS IS A TEST OF BOTH THE INSTRUCTION:
483 LDD (R0),ACO
484 AND THE INSTRUCTION:
485 STD ACO,(R0) MOST OF THE
486 FAILURES ARE ISOLATED TO THE SRC OR DST FLOWS. NOTE
487 THAT THE INTEGRITY OF ACO HAS NOT BEEN ASSURED.
488 THIS MEANS THAT IN SOME CASES IT WILL BE IMPOSSIBLE
489 TO ISOLATE CERTAIN DATA PATTERN FAILURES TO EITHER
490 THE FLOWS OR THIS ACCUMULATOR.
491
492 TEST 7 FSRC MODE 0 TEST
493 -----
494
495 THIS IS A TEST OF FSRC MODE ZERO USING THE LDD AND
496 LDF INSTRUCTIONS.
497
498
499 TEST 10 FDST MODE 0 TEST
500 -----
501
502 THIS IS A TEST OF THE STORE INSTRUCTIONS, STD AND
503 STF, WITH FDST MODE 0.
504
505 TEST 11 ACCUMULATORS DATA PATTERNS TEST
506 -----
507
508 THIS IS A TEST OF THE FLOATING POINT PROCESSOR
509 ACCUMULATORS.
510
511 EACH ACCUMULATOR IS TESTED IN TWO WAYS:
512 1 TEST PATTERN GENERATED BY FLOATING A
513 ONE ACROSS A FIELD OF ZEROES.
514 2 TEST PATTERN GENERATED BY FLOATING A
515 ZERO ACROSS A FIELD OF ONES.
516 EACH OF ACCUMULATORS ACO THROUGH AC5 IS TESTED.
517
518 NOTE THAT THIS TEST KEEPS A DYNAMIC RECORD OF THE
519 LOGICAL 'AND' AND 'OR' OF THE FAILING DATA PATTERNS.
520 THESE CAN BE VERY USEFUL IN DETERMINING STUCK BITS.
521 IF THE USER HAS THE INHIBIT ERROR TYPE OUT SWITCH
522 (SWR13) OFF, THEN THE USER WILL RECEIVE EACH
523 INDIVIDUAL ERROR MESSAGE PLUS AN ERROR SUMMARY AT
524 THE END OF THE TEST. INHIBITING ERROR PRINT OUT
525 WILL INHIBIT ERROR SUMMARY PRINT OUT, EXCEPT IN THE

526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582

CASE DESCRIBED BELOW. TO GET JUST THE ERROR SUMMARY WITH NO INDIVIDUAL ERROR REPORTS, SET SWITCH REGISTER BIT13 AND SWITCH REGISTER BIT7 BOTH ON.

THE FOLLOWING PROCEDURE IS PRESENTED TO AID THE TROUBLE SHOOTER IN SITUATIONS WHERE AM2901 CHIP ISOLATION IS ATTEMPTED.

WARNING: THIS PROCEDURE ASSUMES THAT THE FAULT IS IN ONE OF THE AM2901 CHIPS. THIS ASSUMPTION IS NOT NECESSARILY VALID IN ALL SITUATIONS. IT REMAINS TO BE SEEN WHAT NUMBER OF FAILURES CAN PROBABILISTICALLY ASSOCIATED WITH THEM. NOTE ALSO THAT THIS INFORMATION SHOULD NOT BE TAKEN AS ABSOLUTE, THAT IS THIS INFORMATION IS THE AUTHOR'S SUGGESTION FOR ACHIEVING ISOLATION WHEN CHIP LEVEL REPAIR IS NECESSARY.

WHEN THIS TEST HAS FINISHED RUNNING, IF ERRORS HAVE OCCURRED, AN ERROR SUMMARY WILL BE TYPED. THIS SUMMARY WILL CONSIST OF TWO IMPORTANT QUANTITIES:

- A. FOUR SIXTEEN BIT NUMBERS LABELED THE LOGICAL 'AND' ('*') OF THE FAILING DATA PATTERNS.
- B. FOUR SIXTEEN BIT NUMBERS LABELED THE LOGICAL 'OR' ('+') OF THE FAILING DATA PATTERNS.

A BIT STUCK HIGH IN THE HARDWARE WILL SHOW UP AS A 0 IN THAT BIT POSITION OF THE 'OR' OF THE FAILING DATA PATTERNS.

A BIT STUCK LOW IN THE HARDWARE WILL SHOW UP AS A 1 IN THAT BIT POSITION OF THE 'AND' OF THE FAILING DATA PATTERNS.

THUS IF A FAILURE OCCURS:

- A. STUCK HIGHS WILL SHOW AS 0'S IN THE 'OR' PATTERN.
- B. STUCK LOWS WILL SHOW AS 1'S IN THE 'AND' PATTERN.

IF THE FAILURE IS INTERMITTANT THEN THIS PROCEDURE WILL STILL APPLY!! IF THE FAILURE MOVES FROM ONE BIT TO ANOTHER, OR FROM ONE GROUP OF BITS TO ANOTHER GROUP OF BITS THEN THE FAULT WILL PROBABLY NOT SHOW UP IN THE 'AND' OR THE 'OR' PATTERNS; IN THIS CASE THE 'AND' PATTERN WILL BE ALL 0'S AND THE 'OR' PATTERN WILL BE ALL 1'S. WHEN THIS OCCURS SOME OTHER METHOD OF REPAIR MUST BE FOUND (SUCH AS INSPECTION OF EACH INDIVIDUAL ERROR REPORT RATHER THAN USING THE SUMMARY).

MAP THE FOLLOWING NOTATION ONTO EACH BIT POSITION IN THE 'AND' AND THE 'OR' PATTERNS WHICH ARE TYPED IN THE ERROR SUMMARY.

640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662

PROBABLE SOURCE OF THE ERROR. IF REPAIRING THAT CHIP DOES NOT REMOVE THE FAULT THEN TRY EACH OF THE CHIPS ASSOCIATED WITH BITS A12, B12 AND D12 SHOULD BE TRIED WITH EQUAL PROBABILITY OF THE FAULT BEING IN ANY ONE OF THESE OTHER THREE CHIPS, TRY CHIPS E61, E86 AND E78.

2.) IF THERE ARE FOUR CONSECUTIVE BITS IN ERROR, FOLLOWING THE PATTERN:

LN, LN+1, LN+2 AND LN+3 WHERE 'L' IS A, B, C OR D
N=0, 4, 8 OR 12

THEN THE ABOVE TABLE SHOULD DIRECTLY IDENTIFY THE FAILING CHIP.

3.) IF FOUR BITS ARE DROPPED WHICH FIT THE PATTERN:

AN, BN, CN AND DN WHERE N=15, 14, ... OR 0
OR 0

THEN ANY ONE OF THE FOUR CHIPS ASSOCIATED

664
665

WITH EACH OF THE BITS AN, BN, CN AND DN
COULD BE AT FAULT WITH EQUAL PROBABILITY.

CK
ER

667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723

4.) IF 16 BITS ARE IN ERROR, FITTING THE PATTERN:
AN, AN+1, AN+2, AN+3 WHERE N=0, 4, 8 OR 12
BN, BN+1, BN+2, BN+3
CN, CN+1, CN+2, CN+3
AND
DN, DN+1, DN+2, AN+3
THEN ANY ONE OF THE FOUR CHIPS ASSOCIATED WITH THESE BITS COULD BE AT FAULT WITH EQUAL PROBABILITY.

5.) IF THE FAILING BIT PATTERNS DISPLAYED IN THE 'AND' AND THE 'OR' DATA TYPED IN THE SUMMARY DOES NOT CONFORM EXPLICITELY TO ANY OF THE ABOVE PATTERNS, THEN THE TROUBLE SHOOTER MUST INTUITIVELY TRY TO FIND WHICH OF THE ABOVE CASES (1 THROUGH 4) IS A 'BEST FIT' OF THE SYMPTOMS.

TEST 12 FPP ACCUMULATORS DUAL ADDRESS TEST

THIS TEST PERFORMS A DUAL ADDRESSING TEST ON THE FLOATING ACCUMULATORS. NOTE THAT ACCUMULATOR ZERO IS USED TO ACCESS ALL THE OTHERS.

TEST 13 FSRC MODE 0 WITH ILLEGAL ACCUMULATOR TEST

THIS IS A TEST OF FSRC MODE 0 WITH ACCUMULATORS 6 AND 7. USE OF EITHER OF THESE NON-EXISTENT ACCUMULATORS SHOULD RESULT IN A TRAP TO 244 WITH FEC=2 (ILLEGAL FPP INSTRUCTION).

TEST 14 FSRC MODE 2 TEST

THIS IS A TEST OF FSRC MODE 2, AUTO INCREMENT MODE.

TEST 15 FSRC MODE 4 TEST

THIS IS A TEST OF FSRC MODE 4, AUTO DECREMENT MODE.

TEST 16 FSRC MODE 2, WITH FD=0, TEST

THIS IS A TEST OF FSRC MODE 2 WITH FD=0. (AUTO INCREMENT)

TEST 17 FSRC MODE 2 WITH GR7, IMMEDIATE MODE, TEST

724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780

THIS IS A TEST OF FSRC MODE 2 USING GR7 (THE PC).
THIS IS IMMEDIATE MODE.

TEST 20 FSRC MODE 3 TEST

THIS IS A TEST OF FSRC MODE 3, AUTO INCREMENT
DEFERRED

TEST 21 FSRC MODE 5 TEST

THIS IS A TEST OF FSRC MODE 5, AUTO DECREMENT
DEFERRED.

TEST 22 FSRC MODE 6 TEST

THIS IS A TEST OF FSRC MODE 6, INDEX MODE

TEST 23 FSRC MODE 7 TEST

THIS IS A TEST OF FSRC MODE 7, INDEX DEFERRED MODE.

TEST 24 (BUT EZBT Y8), (BUT ENBT) AND (BUT FIUV) TEST

THIS IS A TEST OF THE (BUT EZBT Y8) FORK, THE (BUT
ENBT) FORK AND (BUT FIUV) FORK IN THE LOAD
INSTRUCTION FLOWS.
EACH OF THE PATTERNS:

- 0
- +NUM
- NUM
- 0

IS LOADED TWICE, ONCE WITH AC>0 THEN WITH AC=0.
AFTER EACH LOAD THE FPS IS CHECK TO INSURE THAT
CONTROL WAS PASSED THROUGH WITH THE FORKS PROPERLY.

TEST 25 ADDF, ADDD, SUBF AND SUBD WITH FSRC=AC=0 TEST

THIS IS A TEST OF ADD AND SUB WITH FSRC=AC=0

TEST 26 ADDD AND SUB WITH FSRC=0

THIS IS A TEST OF ADD AND SUB WITH FSRC=0.

TEST 27 SUBD WITH AC=0 TEST

THIS IS A TEST OF SUBD WITH AC=0. BOTH POSITIVE AND
NEGATIVE FSRC'S ARE TRIED.

781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837

TEST 30 ADD WITH AC=0 TEST

POSITIVE AND NEGATIVE FSRC'S ARE TRIED.

TEST 31 ADDF AND ADD WITH E(AC)=E(FSRC) AND (BUT FT) TEST

THIS IS A TEST OF THE ADD INSTRUCTION WITH THE OPERANDS HAVING EQUAL EXPONENTS. THE (BUT FT) FORK IN THE ROUND/TRUNK FLOWS IS ALSO TESTED.

TEST 32 ADDF AND ADD WITH E(AC) LESS THAN E(FSRC) TEST

THIS IS A TEST OF THE ADDD AND ADDF INSTRUCTIONS AND THE ALIGN AC ALGORITHM FLOWS. THE CONSTANT (25 FOR FLOATING, 57 FOR DOUBLE) USED IS CHECKED. THEN SIMPLE AND WORST CASE ALIGNMENT SITUATIONS ARE TRIED. NOTE E(AC) IS LESS THEN E(FSRC)

TEST 33 ADDF AND ADDD WITH E(AC) GREATER THAN E(FSRC) TEST

THIS IS A TEST OF THE ADDD AND ADDF INSTRUCTIONS AND THE ALIGN FSRC ALGORITHM FLOWS. FIRST THE CONSTANT USED IS CHECKED. THEN SIMPLE AND WORST CASE ALIGNMENT SITUATIONS ARE TRIED. NOTE E(AC) IS GREATER THAN E(FSRC).

TEST 34 ADD WITH NEGATIVE OPRANDS TEST

THIS IS A TEST OF THE ADDD INSTRUCTION WITH NEGATIVE OPERANDS. EVERY COMBINATION OF OPERAND SIGNS IS TRIED.

TEST 35 SUBD TEST

THIS IS A TEST OF THE SUBD INSTRUCTION. BOTH A POSITIVE AND A NEGATIVE NUMBER IS SUBTRACTED FROM IT SELF

TEST 36 NORMALIZE ALGORITHM TEST

THIS IS A TEST OF THE NORMALIZE FLOW ALGORITHM. TWO PATTERNS ARE USED, FIRST THE MINIMUM SITUATION REQUIRING ONE LEFT SHIFT AND THEN THE MAXIMUM SITUATION REQUIRING 56 SHIFTS.

838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
914
1092
1099
1100
1101
1102
1103
1104

000000

000213
000001

000001
160000

000244
177400
000200
000011
000015

001100
104000
000004

10.

LISTING

&

MNUMBER=213
PROGNUM=1

.LIST ME
.NLIST MD,MC,CND

.ENABL ABS
.MCALL .HEADER,.SWRHI,.EQUAT,.SETUP,.SCATCH,.\$ACT11,.SCMTAG
.MCALL .SEOP,\$SCOPE,\$ERROR,\$SAVE,\$TYPE,\$TYPOCT
.MCALL .\$TYPDEC,\$STRAP,\$POWER,\$APTHDR,\$APTBL
.MCALL .\$APTYPE,\$READ
.MCALL .EQUIV ;*REMOVE FOR ASSEMBLY ON PDP-10

.TITLE CKFPAAO FP11F FLTG PNT PRT A

;*COPYRIGHT (C) 1979
;*DIGITAL EQUIPMENT CORP.
;*MAYNARD, MASS. 01754

;*THIS PROGRAM WAS ASSEMBLED USING THE PDP-11 MAINDEC SYSMAC
;*PACKAGE (MAINDEC-11-DZQAC-C3), JAN 19, 1977.

\$TN=1
\$SWR=160000 ;:HALT ON ERROR, LOOP ON TEST, INHIBIT ERROR TYPOUT

FPVECT=244
\$SWR=177400
\$SWRMSK=200
TAB=11
CRLF=15

.SBTTL BASIC DEFINITIONS
;*INITIAL ADDRESS OF THE STACK POINTER *** 1100 ***

STACK= 1100
ERROR=EMT
SCOPE=IOT

;*MISCELLANEOUS DEFINITIONS

```
000011 HT= 11 ::CODE FOR HORIZONTAL TAB
000012 LF= 12 ::CODE FOR LINE FEED
000015 CR= 15 ::CODE FOR CARRIAGE RETURN
000200 CRLF= 200 ::CODE FOR CARRIAGE RETURN-LINE FEED
177776 PS= 177776 ::PROCESSOR STATUS WORD
177776 PSW=PS
177774 STKLMT= 177774 ::STACK LIMIT REGISTER
177772 PIRQ= 177772 ::PROGRAM INTERRUPT REQUEST REGISTER
177570 DSWR= 177570 ::HARDWARE SWITCH REGISTER
177570 DDISP= 177570 ::HARDWARE DISPLAY REGISTER
;*GENERAL PURPOSE REGISTER DEFINITIONS
000000 R0= %0 ::GENERAL REGISTER
000001 R1= %1 ::GENERAL REGISTER
000002 R2= %2 ::GENERAL REGISTER
000003 R3= %3 ::GENERAL REGISTER
000004 R4= %4 ::GENERAL REGISTER
000005 R5= %5 ::GENERAL REGISTER
000006 R6= %6 ::GENERAL REGISTER
000007 R7= %7 ::GENERAL REGISTER
000006 SP= %6 ::STACK POINTER
000007 PC= %7 ::PROGRAM COUNTER
;*PRIORITY LEVEL DEFINITIONS
000000 PR0= 0 ::PRIORITY LEVEL 0
000040 PR1= 40 ::PRIORITY LEVEL 1
000100 PR2= 100 ::PRIORITY LEVEL 2
000140 PR3= 140 ::PRIORITY LEVEL 3
000200 PR4= 200 ::PRIORITY LEVEL 4
000240 PR5= 240 ::PRIORITY LEVEL 5
000300 PR6= 300 ::PRIORITY LEVEL 6
000340 PR7= 340 ::PRIORITY LEVEL 7
;*SWITCH REGISTER SWITCH DEFINITIONS
100000 SW15= 100000
040000 SW14= 40000
020000 SW13= 20000
010000 SW12= 10000
004000 SW11= 4000
002000 SW10= 2000
001000 SW09= 1000
000400 SW08= 400
000200 SW07= 200
000100 SW06= 100
000040 SW05= 40
000020 SW04= 20
000010 SW03= 10
000004 SW02= 4
000002 SW01= 2
000001 SW00= 1
001000 SW9=SW09
000400 SW8=SW08
000200 SW7=SW07
000100 SW6=SW06
000040 SW5=SW05
000020 SW4=SW04
000010 SW3=SW03
000004 SW2=SW02
000002 SW1=SW01
000001 SW0=SW00
```

```

100000 BIT15= 100000
040000 BIT14= 40000
020000 BIT13= 20000
010000 BIT12= 10000
004000 BIT11= 4000
002000 BIT10= 2000
001000 BIT09= 1000
000400 BIT08= 400
000200 BIT07= 200
000100 BIT06= 100
000040 BIT05= 40
000020 BIT04= 20
000010 BIT03= 10
000004 BIT02= 4
000002 BIT01= 2
000001 BIT00= 1
001000 BIT9=BIT09
000400 BIT8=BIT08
000200 BIT7=BIT07
000100 BIT6=BIT06
000040 BIT5=BIT05
000020 BIT4=BIT04
000010 BIT3=BIT03
000004 BIT2=BIT02
000002 BIT1=BIT01
000001 BIT0=BIT00

;*BASIC "CPU" TRAP VECTOR ADDRESSES
000004 ERRVEC= 4 ;;TIME OUT AND OTHER ERRORS
000010 RESVEC= 10 ;;RESERVED AND ILLEGAL INSTRUCTIONS
000014 TBITVEC=14 ;;'T' BIT
000014 TRTVEC= 14 ;;TRACE TRAP
000014 BPTVEC= 14 ;;BREAKPOINT TRAP (BPT)
000020 IOTVEC= 20 ;;INPUT/OUTPUT TRAP (IOT) **SCOPE**
000024 PWRVEC= 24 ;;POWER FAIL
000030 EMTVEC= 30 ;;EMULATOR TRAP (EMT) **ERROR**
000034 TRAPVEC=34 ;;'TRAP' TRAP
000060 TKVEC= 60 ;;TTY KEYBOARD VECTOR
000064 TPVEC= 64 ;;TTY PRINTER VECTOR
000240 PIRQVEC=240 ;;PROGRAM INTERRUPT REQUEST VECTOR

.SBTTL FPP REGISTER DEFINITIONS
AC0 =%0
AC1 =%1
AC2 =%2
AC3 =%3
AC4 =%4
AC5 =%5
AC6 =%6
AC7 =%7

.SBTTL TRAP CATCHER
.=0
;*ALL UNUSED LOCATIONS FROM 4 - 776 CONTAIN A "+2,HALT"
;*SEQUENCE TO CATCH ILLEGAL TRAPS AND INTERRUPTS
;*LOCATION 0 CONTAINS 0 TO CATCH IMPROPERLY LOADED VECTORS
.=174
000174 000000 DISPREG: .WORD 0 ;;SOFTWARE DISPLAY REGISTER
```

000176 000000
000200 000137 003606

SWREG: .WORD 0 ;;SOFTWARE SWITCH REGISTER
.SBTTL STARTING ADDRESS(ES)
JMP @#START ;;JUMP TO STARTING ADDRESS OF PROGRAM

1126

001100 001100
001100 000000
001102 000
001103 000
001104 000000
001106 000000
001110 000000
001112 000000
001114 000
001115 001
001116 000000
001120 000000
001122 000000
001124 000000
001126 000000
001130 000000
001132 000000
001134 000
001135 000
001136 000000
001140 177570
001142 177570
001144 177560
001146 177562
001150 177564
001152 177566
001154 000
001155 002
001156 012
001157 000
001160 000000

001162 000000
001164 000000
001166 000000
001170 000000
001172 000000
001174 000000
001176 000000
001200 000000
001202 000000
001204 000000
001206 000000
001210 000000
001212 000000
001214 000000
001216 000000
001220 000000
001222 000000
001224 000000
001226 000000

.SBTTL COMMON TAGS

*THIS TABLE CONTAINS VARIOUS COMMON STORAGE LOCATIONS
*USED IN THE PROGRAM.

.=1100

\$CMTAG: .WORD 0
\$TSTNM: .BYTE 0
\$ERFLG: .BYTE 0
\$ICNT: .WORD 0
\$LPADR: .WORD 0
\$LPERR: .WORD 0
\$ERTTL: .WORD 0
\$ITEMB: .BYTE 0
\$ERMAX: .BYTE 1
\$ERRPC: .WORD 0
\$GDADR: .WORD 0
\$BDADR: .WORD 0
\$GDDAT: .WORD 0
\$BDDAT: .WORD 0
\$AUTOB: .BYTE 0
\$INTAG: .BYTE 0
\$SWR: .WORD DSWR
\$DISPLAY: .WORD DDISP
\$TKS: 177560
\$TKB: 177562
\$TPS: 177564
\$TPB: 177566
\$NULL: .BYTE 0
\$FILLS: .BYTE 2
\$FILLC: .BYTE 12
\$TPFLG: .BYTE 0
\$REGAD: .WORD 0

.REPT \$CM3
\$REG0: .WORD 0
\$REG1: .WORD 0
\$REG2: .WORD 0
\$REG3: .WORD 0
\$REG4: .WORD 0
\$REG5: .WORD 0
\$REG6: .WORD 0
\$REG7: .WORD 0
\$REG10: .WORD 0
\$REG11: .WORD 0
\$REG12: .WORD 0
\$REG13: .WORD 0
\$REG14: .WORD 0
\$REG15: .WORD 0
\$REG16: .WORD 0
\$REG17: .WORD 0
\$REG20: .WORD 0
\$REG21: .WORD 0
\$REG22: .WORD 0

::: START OF COMMON TAGS
::: CONTAINS THE TEST NUMBER
::: CONTAINS ERROR FLAG
::: CONTAINS SUBTEST ITERATION COUNT
::: CONTAINS SCOPE LOOP ADDRESS
::: CONTAINS SCOPE RETURN FOR ERRORS
::: CONTAINS TOTAL ERRORS DETECTED
::: CONTAINS ITEM CONTROL BYTE
::: CONTAINS MAX. ERRORS PER TEST
::: CONTAINS PC OF LAST ERROR INSTRUCTION
::: CONTAINS ADDRESS OF 'GOOD' DATA
::: CONTAINS ADDRESS OF 'BAD' DATA
::: CONTAINS 'GOOD' DATA
::: CONTAINS 'BAD' DATA
::: RESERVED--NOT TO BE USED

::: AUTOMATIC MODE INDICATOR
::: INTERRUPT MODE INDICATOR

::: ADDRESS OF SWITCH REGISTER
::: ADDRESS OF DISPLAY REGISTER
::: TTY KBD STATUS
::: TTY KBD BUFFER
::: TTY PRINTER STATUS REG. ADDRESS
::: TTY PRINTER BUFFER REG. ADDRESS
::: CONTAINS NULL CHARACTER FOR FILLS
::: CONTAINS # OF FILLER CHARACTERS REQUIRED
::: INSERT FILL CHARS. AFTER A 'LINE FEED'
::: 'TERMINAL AVAILABLE' FLAG (BIT<07>=0=YES)
::: CONTAINS THE ADDRESS FROM
::: WHICH (\$REG0) WAS OBTAINED

::: CONTAINS ((\$REGAD)+0)
::: CONTAINS ((\$REGAD)+2)
::: CONTAINS ((\$REGAD)+4)
::: CONTAINS ((\$REGAD)+6)
::: CONTAINS ((\$REGAD)+10)
::: CONTAINS ((\$REGAD)+12)
::: CONTAINS ((\$REGAD)+14)
::: CONTAINS ((\$REGAD)+16)
::: CONTAINS ((\$REGAD)+20)
::: CONTAINS ((\$REGAD)+22)
::: CONTAINS ((\$REGAD)+24)
::: CONTAINS ((\$REGAD)+26)
::: CONTAINS ((\$REGAD)+30)
::: CONTAINS ((\$REGAD)+32)
::: CONTAINS ((\$REGAD)+34)
::: CONTAINS ((\$REGAD)+36)
::: CONTAINS ((\$REGAD)+40)
::: CONTAINS ((\$REGAD)+42)
::: CONTAINS ((\$REGAD)+44)


```
001230 000000 $REG23: .WORD 0 ;;CONTAINS (($REGAD)+46)
001230 000024 .REPT 24
001232 000000 $TMP0: .WORD 0 ;;USER DEFINED
001234 000000 $TMP1: .WORD 0 ;;USER DEFINED
001236 000000 $TMP2: .WORD 0 ;;USER DEFINED
001240 000000 $TMP3: .WORD 0 ;;USER DEFINED
001242 000000 $TMP4: .WORD 0 ;;USER DEFINED
001244 000000 $TMP5: .WORD 0 ;;USER DEFINED
001246 000000 $TMP6: .WORD 0 ;;USER DEFINED
001250 000000 $TMP7: .WORD 0 ;;USER DEFINED
001252 000000 $TMP10: .WORD 0 ;;USER DEFINED
001254 000000 $TMP11: .WORD 0 ;;USER DEFINED
001256 000000 $TMP12: .WORD 0 ;;USER DEFINED
001260 000000 $TMP13: .WORD 0 ;;USER DEFINED
001262 000000 $TMP14: .WORD 0 ;;USER DEFINED
001264 000000 $TMP15: .WORD 0 ;;USER DEFINED
001266 000000 $TMP16: .WORD 0 ;;USER DEFINED
001270 000000 $TMP17: .WORD 0 ;;USER DEFINED
001272 000000 $TMP20: .WORD 0 ;;USER DEFINED
001274 000000 $TMP21: .WORD 0 ;;USER DEFINED
001276 000000 $TMP22: .WORD 0 ;;USER DEFINED
001300 000000 $TMP23: .WORD 0 ;;USER DEFINED
001302 000000 $TIMES: 0 ;;MAX. NUMBER OF ITERATIONS
001304 000000 $ESCAPE: 0 ;;ESCAPE ON ERROR ADDRESS
001306 207 377 377 $BELL: .ASCIZ <207><377><377> ;;CODE FOR BELL
001311 000
001312 077
001313 015
001314 012 000
$QUES: .ASCII /?/ ;;QUESTION MARK
$CRLF: .ASCII <15> ;;CARRIAGE RETURN
$LF: .ASCIZ <12> ;;LINE FEED
*****
.SBTTL APT MAILBOX-ETABLE
*****
.EVEN
001316 $MAIL: ;;APT MAILBOX
001316 000000 $MSGTY: .WORD AMSGTY ;;MESSAGE TYPE CODE
001320 000000 $FATAL: .WORD AFATAL ;;FATAL ERROR NUMBER
001322 000000 $TESTN: .WORD ATESTN ;;TEST NUMBER
001324 000000 $PASS: .WORD APASS ;;PASS COUNT
001326 000000 $DEVCT: .WORD ADEVCT ;;DEVICE COUNT
001330 000000 $UNIT: .WORD AUNIT ;;I/O UNIT NUMBER
001332 000000 $MSGAD: .WORD AMSGAD ;;MESSAGE ADDRESS
001334 000000 $MSGLG: .WORD AMSGLG ;;MESSAGE LENGTH
001336 $ETABLE: ;;APT ENVIRONMENT TABLE
001336 000 $ENV: .BYTE AENV ;;ENVIRONMENT BYTE
001337 000 $ENVM: .BYTE AENVM ;;ENVIRONMENT MODE BITS
001340 000000 $SWREG: .WORD ASWREG ;;APT SWITCH REGISTER
001342 000000 $USWR: .WORD AUSWR ;;USER SWITCHES
001344 000000 $CPUOP: .WORD ACPUOP ;;CPU TYPE, OPTIONS
;*
;* BITS 15-11=CPU TYPE
;* 11/04=01,11/05=02,11/20=03,11/40=04,11/45=05
;* 11/70=06,PDQ=07,Q=10
;*
;* BIT 10=REAL TIME CLOCK
;* BIT 9=FLOATING POINT PROCESSOR
;* BIT 8=MEMORY MANAGEMENT
001346 000 $MAMS1: .BYTE AMAMS1 ;;HIGH ADDRESS,M.S. BYTE
001347 000 $MTYP1: .BYTE AMTYP1 ;;MEM. TYPE,BLK#1
;*
MEM.TYPE BYTE -- (HIGH BYTE)
```

```

          900 NSEC CORE=001
          300 NSEC BIPOLAR=002
          500 NSEC MOS=003
001350 000000 $MADR1: .WORD AMADR1 ::HIGH ADDRESS,BLK#1
          MEM.LAST ADDR.=3 BYTES,THIS WORD AND LOW OF 'TYPE' ABOVE
001352 000 $MAMS2: .BYTE AMAMS2 ::HIGH ADDRESS,M.S. BYTE
001353 000 $SMTYP2: .BYTE AMTYP2 ::MEM.TYPE,BLK#2
001354 000000 $MADR2: .WORD AMADR2 ::MEM.LAST ADDRESS,BLK#2
001356 000 $MAMS3: .BYTE AMAMS3 ::HIGH ADDRESS,M.S.BYTE
001357 000 $SMTYP3: .BYTE AMTYP3 ::MEM.TYPE,BLK#3
001360 000000 $MADR3: .WORD AMADR3 ::MEM.LAST ADDRESS,BLK#3
001362 000 $MAMS4: .BYTE AMAMS4 ::HIGH ADDRESS,M.S.BYTE
001363 000 $SMTYP4: .BYTE AMTYP4 ::MEM.TYPE,BLK#4
001364 000000 $MADR4: .WORD AMADR4 ::MEM.LAST ADDRESS,BLK#4
001366 000000 $VECT1: .WORD AVECT1 ::INTERRUPT VECTOR#1,BUS PRIORITY#1
001370 000000 $VECT2: .WORD AVECT2 ::INTERRUPT VECTOR#2BUS PRIORITY#2
001372 000000 $BASE: .WORD ABASE ::BASE ADDRESS OF EQUIPMENT UNDER TEST
001374 000000 $DEVN: .WORD ADEVN ::DEVICE MAP
001376 000000 $CDW1: .WORD ACDW1 ::CONTROLLER DESCRIPTION WORD#1
001400 000000 $CDW2: .WORD ACDW2 ::CONTROLLER DESCRIPTION WORD#2
001402 000000 $DDW0: .WORD ADDW0 ::DEVICE DESCRIPTOR WORD#0
001404 000000 $DDW1: .WORD ADDW1 ::DEVICE DESCRIPTOR WORD#1
001406 000000 $DDW2: .WORD ADDW2 ::DEVICE DESCRIPTOR WORD#2
001410 000000 $DDW3: .WORD ADDW3 ::DEVICE DESCRIPTOR WORD#3
001412 000000 $DDW4: .WORD ADDW4 ::DEVICE DESCRIPTOR WORD#4
001414 000000 $DDW5: .WORD ADDW5 ::DEVICE DESCRIPTOR WORD#5
001416 000000 $DDW6: .WORD ADDW6 ::DEVICE DESCRIPTOR WORD#6
001420 000000 $DDW7: .WORD ADDW7 ::DEVICE DESCRIPTOR WORD#7
001422 000000 $DDW8: .WORD ADDW8 ::DEVICE DESCRIPTOR WORD#8
001424 000000 $DDW9: .WORD ADDW9 ::DEVICE DESCRIPTOR WORD#9
001426 000000 $DDW10: .WORD ADDW10 ::DEVICE DESCRIPTOR WORD#10
001430 000000 $DDW11: .WORD ADDW11 ::DEVICE DESCRIPTOR WORD#11
001432 000000 $DDW12: .WORD ADDW12 ::DEVICE DESCRIPTOR WORD#12
001434 000000 $DDW13: .WORD ADDW13 ::DEVICE DESCRIPTOR WORD#13
001436 000000 $DDW14: .WORD ADDW14 ::DEVICE DESCRIPTOR WORD#14
001440 000000 $DDW15: .WORD ADDW15 ::DEVICE DESCRIPTOR WORD#15
001442 $ETEND:
```

.SBTTL ERROR POINTER TABLE
 :*THIS TABLE CONTAINS THE INFORMATION FOR EACH ERROR THAT CAN OCCUR.
 :*THE INFORMATION IS OBTAINED BY USING THE INDEX NUMBER FOUND IN
 :*LOCATION \$ITEMB. THIS NUMBER INDICATES WHICH ITEM IN THE TABLE IS PERTINENT.
 :*NOTE1: IF \$ITEMB IS 0 THE ONLY PERTINENT DATA IS (\$ERRPC).
 :*NOTE2: EACH ITEM IN THE TABLE CONTAINS 4 POINTERS EXPLAINED AS FOLLOWS:
 :* EM ::POINTS TO THE ERROR MESSAGE
 :* DH ::POINTS TO THE DATA HEADER
 :* DT ::POINTS TO THE DATA
 :* DF ::POINTS TO THE DATA FORMAT

1130	001442	000213			\$ERRTB:		
1132	001442	043061	063304	067720	:ITEM 1	.REPT	MNUMBER
	001450	066645				.WORD	EM1,DH1,DT1,DF1
	001452	043116	063374	067742	:ITEM 2	.WORD	EM2,DH2,DT2,DF2
	001460	066655					
	001462	043162	063467	067764	:ITEM 3	.WORD	EM3,DH3,DT3,DF3
	001470	066665					
	001472	043227	063560	067764	:ITEM 4	.WORD	EM4,DH4,DT4,DF4
	001500	066665					
	001502	043267	063654	070006	:ITEM 5	.WORD	EM5,DH5,DT5,DF5
	001510	066675					
	001512	043323	063654	070040	:ITEM 6	.WORD	EM6,DH6,DT6,DF6
	001520	066675					
	001522	043355	063654	070040	:ITEM 7	.WORD	EM7,DH7,DT7,DF7
	001530	066675					
	001532	043267	063654	070040	:ITEM 10	.WORD	EM10,DH10,DT10,DF10
	001540	066675					
	001542	043410	063654	070040	:ITEM 11	.WORD	EM11,DH11,DT11,DF11
	001550	066675					
	001552	000000	000000	070062	:ITEM 12	.WORD	EM12,DH12,DT12,DF12
	001560	066711					
	001562	000000	000000	070150	:ITEM 13	.WORD	EM13,DH13,DT13,DF13
	001570	066743					
	001572	043471	063654	070040	:ITEM 14	.WORD	EM14,DH14,DT14,DF14
	001600	066675					
	001602	043614	063654	070040	:ITEM 15	.WORD	EM15,DH15,DT15,DF15
	001610	066675					
	001612	043737	063714	070202	:ITEM 16	.WORD	EM16,DH16,DT16,DF16
	001620	066757					
	001622	044010	063774	067764	:ITEM 17	.WORD	EM17,DH17,DT17,DF17
	001630	066665					

001632	044243	064064	070222	:ITEM 20	.WORD	EM20,DH20,DT20,DF20
001640	066766					
001642	044421	063654	070244	:ITEM 21	.WORD	EM21,DH21,DT21,DF21
001650	066776					
001652	044552	064152	070256	:ITEM 22	.WORD	EM22,DH22,DT22,DF22
001660	067002					
001662	044552	064207	070304	:ITEM 23	.WORD	EM23,DH23,DT23,DF23
001670	067014					
001672	044552	064345	070326	:ITEM 24	.WORD	EM24,DH24,DT24,DF24
001700	067024					
001702	044637	064504	070352	:ITEM 25	.WORD	EM25,DH25,DT25,DF25
001710	067033					
001712	044752	064546	070422	:ITEM 26	.WORD	EM26,DH26,DT26,DF26
001720	067057					
001722	044752	064546	070476	:ITEM 27	.WORD	EM27,DH27,DT27,DF27
001730	067104					
001732	045020	000000	070540	:ITEM 30	.WORD	EM30,DH30,DT30,DF30
001740	067124					
001742	045072	064546	070422	:ITEM 31	.WORD	EM31,DH31,DT31,DF31
001750	067057					
001752	045072	064546	070476	:ITEM 32	.WORD	EM32,DH32,DT32,DF32
001760	067104					
001762	045140	064634	070572	:ITEM 33	.WORD	EM33,DH33,DT33,DF33
001770	067140					
001772	045201	064634	070650	:ITEM 34	.WORD	EM34,DH34,DT34,DF34
002000	067166					
002002	045303	064634	070650	:ITEM 35	.WORD	EM35,DH35,DT35,DF35
002010	067166					
002012	045405	064634	070650	:ITEM 36	.WORD	EM36,DH36,DT36,DF36
002020	067166					
002022	045506	064634	070650	:ITEM 37	.WORD	EM37,DH37,DT37,DF37
002030	067166					
002032	045607	064634	070572	:ITEM 40	.WORD	EM40,DH40,DT40,DF40
002040	067212					
002042	045760	000000	070722	:ITEM 41	.WORD	EM41,DH41,DT41,DF41
002050	067240					
002052	046015	064737	070754	:ITEM 42	.WORD	EM42,DH42,DT42,DF42
002060	067254					

002062	046136	064737	070754	:ITEM 43	.WORD	EM43,DH43,DT43,DF43
002070	067254					
002072	046257	000000	071032	:ITEM 44	.WORD	EM44,DH44,DT44,DF44
002100	067302					
002102	046257	065041	071102	:ITEM 45	.WORD	EM45,DH45,DT45,DF45
002110	067325					
002112	046322	065060	071156	:ITEM 46	.WORD	EM46,DH46,DT46,DF46
002120	067352					
002122	046400	065041	071244	:ITEM 47	.WORD	EM47,DH47,DT47,DF47
002130	067404					
002132	046516	065104	070650	:ITEM 50	.WORD	EM50,DH50,DT50,DF50
002140	067421					
002142	046614	065104	071276	:ITEM 51	.WORD	EM51,DH51,DT51,DF51
002150	067445					
002152	046655	063654	071244	:ITEM 52	.WORD	EM52,DH52,DT52,DF52
002160	067404					
002162	046776	064546	071334	:ITEM 53	.WORD	EM53,DH53,DT53,DF53
002170	067463					
002172	047173	065156	071354	:ITEM 54	.WORD	EM54,DH54,DT54,DF54
002200	067472					
002202	047237	063654	071244	:ITEM 55	.WORD	EM55,DH55,DT55,DF55
002210	067404					
002212	047360	064546	071334	:ITEM 56	.WORD	EM56,DH56,DT56,DF56
002220	067463					
002222	047555	065156	071354	:ITEM 57	.WORD	EM57,DH57,DT57,DF57
002230	067472					
002232	047621	064546	071334	:ITEM 60	.WORD	EM60,DH60,DT60,DF60
002240	067463					
002242	050016	065156	071354	:ITEM 61	.WORD	EM61,DH61,DT61,DF61
002250	067472					
002252	050062	065156	071354	:ITEM 62	.WORD	EM62,DH62,DT62,DF62
002260	067472					
002262	050254	065156	071354	:ITEM 63	.WORD	EM63,DH63,DT63,DF63
002270	067472					
002272	050446	065266	071412	:ITEM 64	.WORD	EM64,DH64,DT64,DF64
002300	067510					
002302	050446	065217	071412	:ITEM 65	.WORD	EM65,DH65,DT65,DF65
002310	067510					

002312	050602	065156	071354	:ITEM 66	.WORD	EM66,DH66,DT66,DF66
002320	067472					
002322	050645	063654	070244	:ITEM 67	.WORD	EM67,DH67,DT67,DF67
002330	066776					
002332	051076	063654	071432	:ITEM 70	.WORD	EM70,DH70,DT70,DF70
002340	067517					
002342	051221	064504	071432	:ITEM 71	.WORD	EM71,DH71,DT71,DF71
002350	067517					
002352	051323	064546	071500	:ITEM 72	.WORD	EM72,DH72,DT72,DF72
002360	067541					
002362	051377	065156	071354	:ITEM 73	.WORD	EM73,DH73,DT73,DF73
002370	067472					
002372	051437	063654	070244	:ITEM 74	.WORD	EM74,DH74,DT74,DF74
002400	066776					
002402	051670	063654	071432	:ITEM 75	.WORD	EM75,DH75,DT75,DF75
002410	067517					
002412	052013	064504	071432	:ITEM 76	.WORD	EM76,DH76,DT76,DF76
002420	067517					
002422	052115	064546	071500	:ITEM 77	.WORD	EM77,DH77,DT77,DF77
002430	067541					
002432	052171	065156	071354	:ITEM 100	.WORD	EM100,DH100,DT100,DF100
002440	067472					
002442	052231	063654	071432	:ITEM 101	.WORD	EM101,DH101,DT101,DF101
002450	067517					
002452	052355	064546	071432	:ITEM 102	.WORD	EM102,DH102,DT102,DF102
002460	067541					
002462	052427	064504	071432	:ITEM 103	.WORD	EM103,DH103,DT103,DF103
002470	067517					
002472	052532	065156	071354	:ITEM 104	.WORD	EM104,DH104,DT104,DF104
002500	067472					
002502	052573	063654	071432	:ITEM 105	.WORD	EM105,DH105,DT105,DF105
002510	067517					
002512	052720	064546	071500	:ITEM 106	.WORD	EM106,DH106,DT106,DF106
002520	067541					
002522	052773	064504	071432	:ITEM 107	.WORD	EM107,DH107,DT107,DF107
002530	067517					
002532	053077	065156	071354	:ITEM 110	.WORD	EM110,DH110,DT110,DF110
002540	067472					

002542	053141	064504	071520	:ITEM 111	.WORD	EM111,DH111,DT111,DF111
002550	067550					
002552	053141	065354	071520	:ITEM 112	.WORD	EM112,DH112,DT112,DF112
002560	067550					
002562	053243	064504	071520	:ITEM 113	.WORD	EM113,DH113,DT113,DF113
002570	067550					
002572	053243	065354	071520	:ITEM 114	.WORD	EM114,DH114,DT114,DF114
002600	067550					
002602	053141	065573	071520	:ITEM 115	.WORD	EM115,DH115,DT115,DF115
002610	067550					
002612	053243	065573	071520	:ITEM 116	.WORD	EM116,DH116,DT116,DF116
002620	067550					
002622	053345	063774	067764	:ITEM 117	.WORD	EM117,DH117,DT117,DF117
002630	066665					
002632	053501	066057	067764	:ITEM 120	.WORD	EM120,DH120,DT120,DF120
002640	066665					
002642	053635	063654	071244	:ITEM 121	.WORD	EM121,DH121,DT121,DF121
002650	067404					
002652	053754	065104	070650	:ITEM 122	.WORD	EM122,DH122,DT122,DF122
002660	067421					
002662	054053	065104	071276	:ITEM 123	.WORD	EM123,DH123,DT123,DF123
002670	067445					
002672	054114	063774	071532	:ITEM 124	.WORD	EM124,DH124,DT124,DF124
002700	067554					
002702	054207	063774	071532	:ITEM 125	.WORD	EM125,DH125,DT125,DF125
002710	067554					
002712	054277	063654	071520	:ITEM 126	.WORD	EM126,DH126,DT126,DF126
002720	067550					
002722	054506	065156	071520	:ITEM 127	.WORD	EM127,DH127,DT127,DF127
002730	067550					
002732	054721	066057	067764	:ITEM 130	.WORD	EM130,DH130,DT130,DF130
002740	066665					
002742	055021	065156	071616	:ITEM 131	.WORD	EM131,DH131,DT131,DF131
002750	067605					
002752	055061	065156	071616	:ITEM 132	.WORD	EM132,DH132,DT132,DF132
002760	067605					
002762	055121	066147	071660	:ITEM 133	.WORD	EM133,DH133,DT133,DF133
002770	067625					

002772	055160	066147	071660	:ITEM 134	.WORD	EM134,DH134,DT134,DF134
003000	067625					
003002	055217	066147	071660	:ITEM 135	.WORD	EM135,DH135,DT135,DF135
003010	067625					
003012	055256	066147	071660	:ITEM 136	.WORD	EM136,DH136,DT136,DF136
003020	067625					
003022	055121	066257	071732	:ITEM 137	.WORD	EM137,DH137,DT137,DF137
003030	067651					
003032	055160	066257	071732	:ITEM 140	.WORD	EM140,DH140,DT140,DF140
003040	067651					
003042	055217	066257	071732	:ITEM 141	.WORD	EM141,DH141,DT141,DF141
003050	067651					
003052	055256	066257	071732	:ITEM 142	.WORD	EM142,DH142,DT142,DF142
003060	067651					
003062	055315	066147	071660	:ITEM 143	.WORD	EM143,DH143,DT143,DF143
003070	067625					
003072	055350	066147	071660	:ITEM 144	.WORD	EM144,DH144,DT144,DF144
003100	067625					
003102	055315	066257	071732	:ITEM 145	.WORD	EM145,DH145,DT145,DF145
003110	067651					
003112	055350	066257	071732	:ITEM 146	.WORD	EM146,DH146,DT146,DF146
003120	067651					
003122	055403	065156	071660	:ITEM 147	.WORD	EM147,DH147,DT147,DF147
003130	067625					
003132	055403	066447	071660	:ITEM 150	.WORD	EM150,DH150,DT150,DF150
003140	067625					
003142	055403	066257	071732	:ITEM 151	.WORD	EM151,DH151,DT151,DF151
003150	067651					
003152	055435	066147	071660	:ITEM 152	.WORD	EM152,DH152,DT152,DF152
003160	067625					
003162	055435	066257	071732	:ITEM 153	.WORD	EM153,DH153,DT153,DF153
003170	067651					
003172	055467	066540	071752	:ITEM 154	.WORD	EM154,DH154,DT154,DF154
003200	067661					
003202	055721	066540	071752	:ITEM 155	.WORD	EM155,DH155,DT155,DF155
003210	067661					
003212	056154	065156	071660	:ITEM 156	.WORD	EM156,DH156,DT156,DF156
003220	067625					

003222	056371	065156	071660	:ITEM 157	.WORD	EM157,DH157,DT157,DF157
003230	067625					
003232	056610	065156	071660	:ITEM 160	.WORD	EM160,DH160,DT160,DF160
003240	067625					
003242	057015	065156	071660	:ITEM 161	.WORD	EM161,DH161,DT161,DF161
003250	067665					
003252	057222	065156	071660	:ITEM 162	.WORD	EM162,DH162,DT162,DF162
003260	067625					
003262	057267	065156	071660	:ITEM 163	.WORD	EM163,DH163,DT163,DF163
003270	067665					
003272	057334	063774	067764	:ITEM 164	.WORD	EM164,DH164,DT164,DF164
003300	066665					
003302	057401	063774	067764	:ITEM 165	.WORD	EM165,DH165,DT165,DF165
003310	066665					
003312	057446	065156	071660	:ITEM 166	.WORD	EM166,DH166,DT166,DF166
003320	067625					
003322	057556	065156	071660	:ITEM 167	.WORD	EM167,DH167,DT167,DF167
003330	067625					
003332	060015	065156	071660	:ITEM 170	.WORD	EM170,DH170,DT170,DF170
003340	067665					
003342	060125	065156	071660	:ITEM 171	.WORD	EM171,DH171,DT171,DF171
003350	067665					
003352	060364	065156	071660	:ITEM 172	.WORD	EM172,DH172,DT172,DF172
003360	067625					
003362	060623	065156	071660	:ITEM 173	.WORD	EM173,DH173,DT173,DF173
003370	067625					
003372	061062	065156	071660	:ITEM 174	.WORD	EM174,DH174,DT174,DF174
003400	067665					
003402	061321	065156	071660	:ITEM 175	.WORD	EM175,DH175,DT175,DF175
003410	067665					
003412	061560	065156	071660	:ITEM 176	.WORD	EM176,DH176,DT176,DF176
003420	067625					
003422	061715	065156	071660	:ITEM 177	.WORD	EM177,DH177,DT177,DF177
003430	067625					
003432	062052	065156	071660	:ITEM 200	.WORD	EM200,DH200,DT200,DF200
003440	067625					
003442	062207	065156	071660	:ITEM 201	.WORD	EM201,DH201,DT201,DF201
003450	067625					

```

003452 062344 065156 071660 :ITEM 202
003460 067625 .WORD EM202,DH202,DT202,DF202

003462 062501 065156 071660 :ITEM 203
003470 067625 .WORD EM203,DH203,DT203,DF203

003472 062636 065156 071660 :ITEM 204
003500 067625 .WORD EM204,DH204,DT204,DF204

003502 062773 063774 067764 :ITEM 205
003510 066665 .WORD EM205,DH205,DT205,DF205

003512 063040 065156 071660 :ITEM 206
003520 067625 .WORD EM206,DH206,DT206,DF206

003522 063105 065156 071660 :ITEM 207
003530 067625 .WORD EM207,DH207,DT207,DF207

003532 063227 065156 071660 :ITEM 210
003540 067625 .WORD EM210,DH210,DT210,DF210

003542 043267 066600 071764 :ITEM 211
003550 067711 .WORD EM211,DH211,DT211,DF211

003552 043323 063654 072002 :ITEM 212
003560 067711 .WORD EM212,DH212,DT212,DF212

003562 043355 063654 072002 :ITEM 213
003570 067711 .WORD EM213,DH213,DT213,DF213
    
```

1133
 1134
 1135

```

.SBTTL ACT11 HOOKS
:*****
:HOOKS REQUIRED BY ACT11
003572 $SVPC= . ;SAVE PC
000046 000046 .=46
034754 $ENDAD ;;1)SET LOC.46 TO ADDRESS OF $ENDAD IN .$EOP
000052 000052 .=52
000000 .WORD 0 ;;2)SET LOC.52 TO ZERO
003572 .=$SVPC ;; RESTORE PC
    
```

1136

```

.SBTTL APT PARAMETER BLOCK
:*****
:SET LOCATIONS 24 AND 44 AS REQUIRED FOR APT
:*****
003572 $.X= . ;;SAVE CURRENT LOCATION
000024 000024 .=24 ;;SET POWER FAIL TO POINT TO START OF PROGRAM
000200 200 ;;FOR APT START UP
000044 000044 .=44 ;;POINT TO APT INDIRECT ADDRESS PNTR.
003572 $APTHDR ;;POINT TO APT HEADER BLOCK
003572 .=$X ;;RESET LOCATION COUNTER
:*****
:SETUP APT PARAMETER BLOCK AS DEFINED IN THE APT-PDP11 DIAGNOSTIC
:INTERFACE SPEC.
$APTHD:
$HIBTS: .WORD 0 ;;TWO HIGH BITS OF 18 BIT MAILBOX ADDR.
$MBADR: .WORD $MAIL ;;ADDRESS OF APT MAILBOX (BITS 0-15)
    
```

003576 000010
003600 000040
003602 000000
003604 000052

\$STMT: .WORD 10 ::RUN TIM OF LONGEST TEST
\$PASTM: .WORD 40 ::RUN TIME IN SECS. OF 1ST PASS ON 1 UNIT (QUICK VERIFY)
\$UNITM: .WORD 0 ::ADDITIONAL RUN TIME (SECS) OF A PASS FOR EACH ADDITIONAL UNIT
.WORD \$ETEND-\$MAIL/2 ::LENGTH MAILBOX-ETABLE(WORDS)

1137
1138
1139 003606

START:
.SBTTL INITIALIZE THE COMMON TAGS
::CLEAR THE COMMON TAGS (\$CMTAG) AREA

003606 012706 001100
003612 005026
003614 022706 001140
003620 001374
003622 012706 001100

MOV #CMTAG,R6 ::FIRST LOCATION TO BE CLEARED
CLR (R6)+ ::CLEAR MEMORY LOCATION
CMP #SWR,R6 ::DONE?
BNE -6 ::LOOP BACK IF NO
MOV #STACK,SP ::SETUP THE STACK POINTER

003626 012737 035034 000020
003634 012737 000340 000022
003642 012737 035314 000030
003650 012737 000340 000032
003656 012737 037332 000034
003664 012737 000340 000036
003672 012737 037416 000024
003700 012737 000340 000026
003706 016767 030664 030654
003714 005067 175362
003720 005067 175360
003724 112767 000001 175163

::INITIALIZE A FEW VECTORS
MOV #SCOPE,@IOTVEC ::IOT VECTOR FOR SCOPE ROUTINE
MOV #340,@IOTVEC+2 ::LEVEL 7
MOV #ERROR,@EMTVEC ::EMT VECTOR FOR ERROR ROUTINE
MOV #340,@EMTVEC+2 ::LEVEL 7
MOV #STRAP,@TRAPVEC ::TRAP VECTOR FOR TRAP CALLS
MOV #340,@TRAPVEC+2 ::LEVEL 7
MOV #SPWRDN,@PWRVEC ::POWER FAILURE VECTOR
MOV #340,@PWRVEC+2 ::LEVEL 7
MOV \$ENDCT,\$EOPCT ::SETUP END-OF-PROGRAM COUNTER
CLR \$TIMES ::INITIALIZE NUMBER OF ITERATIONS
CLR \$ESCAPE ::CLEAR THE ESCAPE ON ERROR ADDRESS
MOVB #1,\$ERMAX ::ALLOW ONE ERROR PER TEST

003732 012737 035020 000014
003740 012737 000340 000016
003746 012767 000002 031044
003754 012737 004002 000010
003762 005046
003764 012746 003772
003770 000006
003772 012767 000006 031020 64\$:
004000 000402 BR 66\$
004002 062706 000010 65\$:
004006 012737 000012 000010 66\$:
004014 005067 031006
004020 012767 004020 175060
004026 012767 004026 175054

::INITIALIZE THE 'T-BIT' TRAP VECTOR. THEN LOAD LOCATION '\$RTRN', IN
::THE 'END-OF-PASS' (\$EOP) ROUTINE, WITH A 'RTI' OR 'RTT'.
MOV #RTRN,@TBITVEC ::SET 'T' BIT VECTOR TO \$RTRN
MOV #340,@TBITVEC+2 ::LEVEL 7
MOV #RTI,\$RTRN ::SET \$RTRN TO A RTI
MOV #65\$,@RESVEC ::TRY TO DO A RTT
CLR -(SP) ::DUMMY PS
MOV #64\$,-(SP) ::AND PC
RTT ::TRY THE RTT
MOV #RTT,\$RTRN ::RTT IS LEGAL--SET \$RTRN TO A RTT
BR 66\$
ADD #10,SP ::RTT ILLEGAL--CLEAN OFF THE STACK
MOV #RESVEC+2,@RESVEC ::RESTORE TRAP CATCHER
CLR \$TBIT ::CLEAR 'T' BIT SWITCH
MOV #,\$LPADR ::INITIALIZE THE LOOP ADDRESS FOR SCOPE
MOV #,\$LPERR ::SETUP THE ERROR LOOP ADDRESS

004034 013746 000004
004040 012737 004074 000004
004046 012767 177570 175064
004054 012767 177570 175060
004062 022777 177777 175050
004070 001012

::SIZE FOR A HARDWARE SWITCH REGISTER. IF NOT FOUND OR IT IS
::EQUAL TO A '-1', SETUP FOR A SOFTWARE SWITCH REGISTER.
MOV @ERRVEC,-(SP) ::SAVE ERROR VECTOR
MOV #67\$,@ERRVEC ::SET UP ERROR VECTOR
MOV #DSWR,SWR ::SETUP FOR A HARDWARE SWICH REGISTER
MOV #DDISP,DISPLAY ::AND A HARDWARE DISPLAY REGISTER
CMP #-1,@SWR ::TRY TO REFERENCE HARDWARE SWR
BNE 69\$::BRANCH IF NO TIMEOUT TRAP OCCURRED
::AND THE HARDWARE SWR IS NOT = -1

004072 000403
004074 012716 004102 67\$:
004100 000002
004102 012767 000176 175030 68\$:
004110 012767 000174 175024

BR 68\$::BRANCH IF NO TIMEOUT
MOV #68\$,(SP) ::SET UP FOR TRAP RETURN
RTI
MOV #SWREG,SWR ::POINT TO SOFTWARE SWR
MOV #DISPREG,DISPLAY

```

004116 012637 000004      69$:  MOV    (SP)+,@#ERRVEC  ;;RESTORE ERROR VECTOR
004122 005067 175176      CLR    $PASS             ;;CLEAR PASS COUNT
004126 132767 000200 175203  BITB   #APTSIZE,$ENVM   ;;TEST USER SIZE UNDER APT
004134 001403      BEQ    70$              ;;YES,USE NON-APT SWITCH
004136 012767 001340 174774  MOV    #$$SWREG,$SWR   ;;NO,USE APT SWITCH REGISTER
004144
1140  .SBTTL  TYPE PROGRAM NAME
      ;;TYPE THE NAME OF THE PROGRAM IF FIRST PASS
004144 005227 177777      INC    #-1              ;;FIRST TIME?
004150 001047      BNE    71$             ;;BRANCH IF NO
004152 022737 034754 000042  CMP    #SENDAD,@#42    ;;ACT-11?
004160 001443      BEQ    71$             ;;BRANCH IF YES
004162 104401 004230      TYPE   ,72$           ;;TYPE ASCIZ STRING
      .SBTTL  GET VALUE FOR SOFTWARE SWITCH REGISTER
004166 005737 000042      TST    @#42           ;;ARE WE RUNNING UNDER XXDP/ACT?
004172 001012      BNE    73$           ;;BRANCH IF YES
004174 126727 175136 000001  CMPB   $ENV,#1        ;;ARE WE RUNNING UNDER APT?
004202 001406      BEQ    73$           ;;BRANCH IF YES
004204 026727 174730 000176  CMP    $SWR,#$SWREG   ;;SOFTWARE SWITCH REG SELECTED?
004212 001005      BNE    74$           ;;BRANCH IF NO
004214 104405      GTSWR                ;;GET SOFT-SWR SETTINGS
004216 000403      BR     74$
004220 112767 000001 174706 73$:  MOVB   #1,$AUTOB     ;;SET AUTO-MODE INDICATOR
004226      74$:
004226 000420      BR     71$           ;;GET OVER THE ASCIZ
      ;;72$: .ASCIZ <CRLF>*CKFPAAO FP11F FLTG PNT PRT A*<CRLF>
      71$:
    
```

1141
 1142 004270
 1143
 1144
 1145
 1146
 1147
 1166

LOOP:

```

*****
*TEST 1          LDFPS, STFPS AND DATA PATHS TEST
*
*THIS IS A TEST OF THE LDFPS (LOAD FLOATING POINT STATUS) AND STFPS
*(STORE FLOATING POINT STATUS) INSTRUCTIONS. A COUNT PATTERN IS GENERATED
*AND RUN THROUGH THE FLOATING POINT STATUS REGISTER.
*THIS WILL TEST THE 16-BIT TRI STATE BUS WHICH CONNECTS THE CPU
*WITH THE FPP AND ALSO RUNS INTERNALLY WITHIN THE FPP. ONLY DMO AND
*SMD ARE USED.
*NOTE THAT A MASK MUST BE USED BECAUSE SOME OF THE FPS BITS CANNOT
*BE SET.
*
*ONLY THE FIRST FIVE ERRORS WILL BE REPORTED INDIVIDUALLY.
*THIS IS TO PREVENT LOCKING OUT THE COMPLETION OF THE TEST BECAUSE
*OF VIRTUALLY ENDLESS NUMBER OF ERRORS. ONLY FIVE INDIVIDUAL ERRORS
*WILL BE REPORTED THEN THE TEST WILL BE COMPLETED AND AN ERROR
*SUMMARY GIVEN (SEE NOTE BELOW).
*
*NOTE THAT THIS TEST KEEPS A DYNAMIC RECORD OF THE LOGICAL 'AND' AND 'OR'
*OF THE FAILING DATA PATTERNS. THESE CAN BE VERY USEFUL IN DETERMINING
*STUCK BITS. IF THE USER HAS THE INHIBIT ERROR TYPE OUT SWITCH (SWR13)
*OFF, THEN THE USER WILL RECIEVE EACH INDIVIDUAL ERROR MESSAGE PLUS
*AN ERROR SUMMARY AT THE END OF THE TEST. INHIBITING ERROR PRINT OUT
    
```

;*WILL INHIBIT ERROR SUMMARY PRINT OUT, EXCEPT IN THE CASE DESCRIBED BELOW.
;*TO GET JUST THE ERROR SUMMARY WITH NO INDIVIDUAL ERROR REPORTS,
;*SET SWITCH REGISTER BIT13 AND SWITCH REGISTER BIT7 BOTH ON.
;*

TST1: SCOPE

1167	004270	000004							
1168	004272	005037	004544						
1169	004276	104413							
1170	004300	012700	177777						
1171	004304	012737	004546	000244					
1172	004312	012737	004560	000010					
1173	004320	005002							
1174	004322	005102							
1175	004324	005003							
1176	004326	012737	004612	000004					
1177									
1178									
1179	004334								
1180	004334	010004							
1181	004336	042704	030020						
1182	004342	170104							
1183									
1184	004344	012701	177777						
1185	004350	170201							
1186	004352	012737	040234	000244					
1187	004360	010004							
1188	004362	042704	030020						
1189	004366	012737	040266	000004					
1190	004374	012737	040304	000010					
1191	004402	020401							
1192									
1193	004404	001002							
1194									
1195	004406	077026							
1196	004410	000425							
1197									
1198	004412	005237	004544						
1199	004416	050003							
1200	004420	010005							
1201	004422	005105							
1202	004424	040502							
1203									
1204	004426	022737	000005	004544					
1205	004434	103412							
1206									
1207									
1208	004436	012737	004334	001236					
1209	004444	010037	001240						
1210	004450	010137	001242						
1211	004454	010437	001244						
1212	004460	104001							
1213									
1214	004462	000751							
1215									
1216	004464	005737	004544						
1217	004470	001471							

```

TST1: SCOPE
      CLR @#AERFLG
      LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
      MOV #-1,R0 ;INITIALIZE THE COUNT PATTERN.
      MOV #AERR1,@#FPVECT ;SET UP FOR UNABLE TO DECODE
      MOV #AERR2,@#10 ;FPP INSTRUCTION TRAP TO 244 OR 10.
      CLR R2 ;R2 IS THE 'AND' OF BAD DATA.
      COM R2
      CLR R3 ;R3 IS THE 'OR' OF BAD DATA.
      MOV #AERR3,@#ERRVECT ;IF EITHER INSTRUCTION
                          ;FAILS TO GO THROUGH THE
                          ;CORRECT SRC OR DST MODE AN
                          ;ODD ADDRESS TRAP WILL OCCUR.

A1:
A11: MOV R0,R4
      BIC #30020,R4
      LDFPS R4 ;TEST INSTRUCTION.

A12: MOV #-1,R1
      STFPS R1 ;TEST INSTRUCTION.
      MOV #FPSPUR,@#FPVECT ;SET UP FOR UNEXPECTED TRAPS.
      MOV R0,R4 ;MASK OFF UNSETTABLE BITS.
      BIC #30020,R4
      MOV #CPSPUR,@#ERRVECT
      MOV #CPTWO,@#10
      CMP R4,R1 ;COMPARE DATA EXPECTED WITH
                ;THE DATA READ.
                ;IF NOT EQUAL GO REPORT ERROR.

A2: SOB R0,A1 ;OTHERWISE DECREMENT COUNT PATTERN
      BR A5 ;UNTIL IT IS ZERO.

A3: INC @#AERFLG ;RECORD ERROR.
      BIS R0,R3 ;COMPUTE 'OR' OF FAILING PATTERNS.
      MOV R0,R5 ;COMPUTE 'AND' OF FAILING PATTERNS.
      COM R5
      BIC R5,R2

      CMP #5,@#AERFLG ;SEE IF MORE THAN 5 ERRORS HAVE
      BLD A05 ;OCCURRED. BR IF YES.
                ;OTHERWISE
                ;REPORT ERROR.

      MOV #A1,@#STMP2
      MOV R0,@#STMP3
      MOV R1,@#STMP4
      MOV R4,@#STMP5
A4: ERROR +1

A05: BR A2 ;CONTINUE TESTING.

A5: TST @#AERFLG ;SEE IF ANY ERRORS OCCURRED.
      BEQ ADONE ;IF NOT GO TO NEXT TEST.

```

```

1218 004472 032777 020000 174440 BIT #SW13,@SWR ;OTHERWISE SEE IF A SUMMARY
1219 004500 001404 BEQ A6 ;SHOULD BE TYPED.
1220 004502 032777 000200 174430 BIT #SW7,@SWR
1221 004510 001461 BEQ ADONE
1222
1223 004512 A6: ;TYPE ERROR SUMMARY.
1224 004512 010237 001236 MOV R2,@#STMP2
1225 004516 010337 001240 MOV R3,@#STMP3
1226 004522 012737 004536 001116 MOV #A7,@#SERRPC
1227 004530 02737 000002 001114 MOVB #2,@#SITEMB
1228 004536 004737 037602 A7: JSR PC,@#ERTYPE
1229 004542 000444 BR ADONE
1230
1231 004544 000000 AERFLG: .WORD 0
1232
1233 ;UNABLE TO DECODE FPP INSTRUCTION. TRAPPED TO 244.
1234 004546 011637 001236 AERR1: MOV (SP),@#STMP2 ;SAVE PC OF TRAP.
1235 004552 022626 CMP (SP)+,(SP)+
1236 004554 104010 1$: ERROR +10
1237 004556 000436 BR ADONE
1238
1239 ;UNABLE TO DECODE INSTRUCTION. TRAPPED TO 10.
1240 004560 021627 004336 AERR2: CMP (SP),#A11+2 ;DID TRAP OCCUR OF FPP INSTRUCTION?
1241 004564 001405 BEQ 1$
1242 004566 021627 004352 CMP (SP),#A12+2
1243 004572 001402 BEQ 1$
1244 004574 000137 040304 JMP @#CPTWO ;IF NOT FPP INSTRUCTION THEN
1245 ;REPORT SPURIOUS TRAP TO 10.
1246
1247 004600 011637 001236 1$: MOV (SP),@#STMP2 ;OTHERWISE REPORT IR DECIDE ERROR.
1248 004604 022626 CMP (SP)+,(SP)+
1249 004606 104011 2$: ERROR +11
1250 004610 000421 BR ADONE
1251
1252 ;TRAP TO 4 HANDLER:
1253 004612 021627 004336 AERR3: CMP (SP),#A11+2 ;DID THE TRAP OCCUR ON THE
1254 004616 001405 BEQ 1$ ;LDFPS INSTRUCTION?
1255 004620 021627 004352 CMP (SP),#A12+2 ;OR THE STFPS INSTRUCTION?
1256 004624 001407 BEQ 2$
1257 004626 000137 040266 JMP @#CPSPUR ;IF NEITHER THEN REPORT
1258 ;UNEXPECTED TRAP TO 4.
1259
1260 004632 011637 001236 1$: MOV (SP),@#STMP2
1261 004636 022626 CMP (SP)+,(SP)+
1262 004640 104014 15$: ERROR +14
1263 004642 000404 BR ADONE
1264
1265 004644 011637 001236 2$: MOV (SP),@#STMP2
1266 004650 022626 CMP (SP)+,(SP)+
1267 004652 104015 25$: ERROR +15
1268
1269 004654 ADONE: ;GO INITIALIZE THE FPS AND STACK; AND
004654 104412 RSETUP ;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).

```

1270
 1271
 1277

```

:*****
:*TEST 2          CFCC TEST
:*
:*THIS IS A TEST OF THE COPY CONDITION CODES INSTRUCTION, CFCC.
:*
:*****
  
```

```

1278 004656 000004
1278 004660 104413
1279 004662 012700 000017
1280
1281 004666
1282 004666 170100
1283
1284 004670
1285 004670 170000
1286
1287 004672 013703 177776
1288 004676 042703 177760
1289 004702 020003
1290 004704 001002
1291
1292 004706 077011
1293 004710 000422
1294
1295 004712
1296 004712 170201
1297 004714 012737 004670 001236
  
```

```

TST2:  SCOPE
        LPERR          ;SET UP THE LOOP ON ERROR ADDRESS.
        MOV    #17,R0  ;R0 CONTAINS TO TEST PATTERN.

B1:    LDFPS  R0          ;LOAD THE TEST PATTERN

B2:    CFCC             ;COPY CONDITION CODES.
        MOV    @#PSW,R3  ;SEE IF PATTERN TRANSFERED.
        BIC    #177760,R3
        CMP    R0,R3
        BNE   BERR

B3:    SOB    R0,B1
        BR    BDONE

BERR:  STFPS  R1          ;WAS FPS MODIFIED BY CFCC?
        MOV    #B2,@#TMP2
  
```

1299

1301 004722 020001
1302 004724 001006
1303
1304 004726 010337 001240
1305 004732 010037 001242
1306 004736 104003
1307 004740 000762
1308
1309 004742
1310 004742 010037 001240
1311 004746 010137 001242
1312 004752 104004
1313 004754 000754
1314
1315 004756
004756 104412

CMP R0,R1
BNE BERR1
MOV R3,@#\$TMP3
MOV R0,@#\$TMP4
1\$: ERROR +3
BR B3
BERR1:
MOV R0,@#\$TMP3
MOV R1,@#\$TMP4
1\$: ERROR +4
BR B3
BDONE:
RSETUP

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).

1316
1325

;*TEST 3 SETF, SETD, SETI AND SETL TEST
;*THIS IS A TEST OF THE SETF, SETD, SETI AND SETL INSTRUCTIONS.
;*EACH INSTRUCTION IS EXECUTED WITH THE FPS CONTAINING
;*ALL ONES AND ALSO WITH THE FPS CLEAR. THE RESULT OF EACH
;*SITUATION IS CHECKED.
;*****

004760 000004
1326 004762 104413
1327 004764 012737 000760 001244
1328 004772 012737 000202 001250
1329 005000 012737 041406 001252
1330 005006 005000
1331
1332 005010 170100
1333 005012 012737 005020 001236
1334
1335 005020 170001
1336
1337 005022 170201
1338 005024 005002
1339 005026 020201
1340 005030 001402
1341 005032 004737 005416
1342
1343 005036
005036 104413
1344 005040 012700 147757
1345
1346 005044 170100
1347 005046 012737 005054 001236
1348 005054 170001
1349
1350 005056 170201

TST3: SCOPE
LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
MOV #760,@#\$TMP5
C1: MOV #202,@#\$TMP7
MOV #SETF1,@#\$TMP10
CLR R0
LDFPS R0 ;CLEAR THE FPS.
MOV #C15,@#\$TMP2
C15: SETF ;TEST INSTRUCTION.
STFPS R1 ;GET RESULT.
CLR R2
CMP R2,R1 ;DID AN ERROR OCCUR?
BEQ 1\$
JSR PC,@#CERR1
1\$:
LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
C2: MOV #147757,R0
LDFPS R0 ;PUT 147757 IS FPS
MOV #C25,@#\$TMP2
C25: SETF ;CLEAR FD BIT.
STFPS R1 ;GET RESULT

1351	005060	012702	147557			MOV	#147557,R2	
1352	005064	020102				CMP	R1,R2	;RESULT CORRECT.
1353	005066	001402				BEQ	1\$	
1354	005070	004737	005514			JSR	PC,@#CERR2	
1355								
1356	005074				1\$:			
	005074	104413				LPERR		;SET UP THE LOOP ON ERROR ADDRESS.
1357	005076	012737	000203	001250	C3:	MOV	#203,@#STMP7	
1358	005104	012737	041414	001252		MOV	#SETD1,@#STMP10	
1359	005112	012700	147757			MOV	#147757,R0	
1360								
1361	005116	170100				LDFPS	R0	;LOAD 147757 INTO FPS.
1362	005120	012737	005126	001236		MOV	#C35,@#STMP2	
1363	005126	170011			C35:	SETD		;SETD FD BIT.
1364								
1365	005130	170201				STFPS	R1	
1366	005132	012702	147757			MOV	#147757,R2	
1367	005136	020102				CMP	R1,R2	;RESULT CORRECT?
1368	005140	001402				BEQ	1\$	
1369	005142	004737	005514			JSR	PC,@#CERR2	
1370								
1371	005146				1\$:			
	005146	104413				LPERR		;SET UP THE LOOP ON ERROR ADDRESS.
1372	005150	005000			C4:	CLR	R0	
1373	005152	170100				LDFPS	R0	;CLEAR FPS.
1374	005154	012737	005162	001236		MOV	#C45,@#STMP2	
1375								
1376	005162	170011			C45:	SETD		;SET FD BIT.
1377								
1378	005164	170201				STFPS	R1	;GET RESULT.
1379	005166	012702	000200			MOV	#200,R2	
1380	005172	020102				CMP	R1,R2	;RESULT CORRECT?
1381	005174	001402				BEQ	1\$	
1382	005176	004737	005416			JSR	PC,@#CERR1	
1383								
1384	005202				1\$:			
	005202	104413				LPERR		;SET UP THE LOOP ON ERROR ADDRESS.
1385	005204	012737	000204	001250	C5:	MOV	#204,@#STMP7	
1386	005212	012737	041422	001252		MOV	#SETI1,@#STMP10	
1387	005220	005000				CLR	R0	
1388								
1389	005222	170100				LDFPS	R0	;CLEAR FPS
1390	005224	012737	005232	001236		MOV	#C55,@#STMP2	
1391								
1392	005232	170002			C55:	SETI		;CLEAR FL BIT.
1393								
1394	005234	170201				STFPS	R1	;GET RESULT.
1395	005236	005002				CLR	R2	
1396	005240	020201				CMP	R2,R1	;RESULT CORRECT?
1397	005242	001402				BEQ	1\$	
1398	005244	004737	005416			JSR	PC,@#CERR1	
1399								
1400	005250				1\$:			
	005250	104413				LPERR		;SET UP THE LOOP ON ERROR ADDRESS.
1401	005252	012700	147757		C6:	MOV	#147757,R0	
1402	005256	170100				LDFPS	R0	;PUT 147757 INTO FPS
1403	005260	012737	005266	001236		MOV	#C65,@#STMP2	

```

1404
1405 005266 170002          C65:  SETI                ;CLEAR FL BIT.
1406
1407 005270 170201          STFPS   R1                ;GET THE RESULT.
1408 005272 012702 147657  MOV     #147657,R2
1409 005276 020102          CMP     R1,R2             ;RESULT CORRECT?
1410 005300 001402          BEQ    1$
1411 005302 004737 005514  JSR    PC,@#CERR2
1412
1413 005306          1$:
1414 005310 104413          LPERR                    ;SET UP THE LOOP ON ERROR ADDRESS.
1415 005316 012737 000205 001250  C7:  MOV     #205,@#STMP7
1416 005324 012737 041430 001252  MOV     #SETL1,@#STMP10
1417 005330 012700 147757          MOV     #147757,R0
1418 005332 012737 005340 001236  LDFPS  R0                ;SET FPS TO 147757.
1419
1420 005340 170012          C75: SETL                ;SET FL BIT.
1421
1422 005342 170201          STFPS   R1                ;GET THE RESULT.
1423 005344 012702 147757  MOV     #147757,R2
1424 005350 020102          CMP     R1,R2             ;RESULT CORRECT?
1425 005352 001402          BEQ    1$
1426 005354 004737 005514  JSR    PC,@#CERR2
1427
1428 005360          1$:
1429 005362 104413          LPERR                    ;SET UP THE LOOP ON ERROR ADDRESS.
1430 005364 005000          C8:  CLR     R0
1431 005366 170100          LDFPS  R0                ;CLEAR FPS.
1432
1433 005374 170012          C85: SETL                ;SET FL BIT.
1434
1435 005376 170201          STFPS   R1
1436 005400 012702 000100  MOV     #100,R2
1437 005404 020102          CMP     R1,R2             ;RESULT CORRECT.
1438 005406 001402          BEQ    1$
1439 005410 004737 005416  JSR    PC,@#CERR1
1440
1441 005414 000522          1$:  BR     CDONE
1442
1443          ;THESE ARE ERROR ANALYSIS ROUTINES:
1444 005416 010103          CERR1: MOV    R1,R3
1445 005420 032703 177477  BIT     #177477,R3        ;ARE ANY OTHER BITS SET?
1446 005424 001401          BEQ    2$
1447 005426 000503          1$:  BR     CERR4
1448
1449 005430 022703 000300  2$:  CMP     #300,R3        ;ARE BOTH FD AND FL SET?
1450 005434 001774          BEQ    1$
1451 005436 032703 000300  BIT     #300,R3        ;ARE THEY BOTH CLEAR?
1452 005442 001771          BEQ    1$
1453
1454 005444 032703 000200          BIT     #200,R3        ;IS FD SET?
1455 005450 001407          BEQ    3$
1456 005452 012737 041414 001254  MOV     #SETD1,@#STMP11
1457 005460 012737 000203 001246  MOV     #203,@#STMP6
1458 005466 000452          BR     CERR3
    
```

```

1459
1460 005470 032703 000100      3$:  BIT      #100,R3          ;IS FL SET
1461 005474 001754              BEQ      1$
1462 005476 012737 041430 001254  MOV     #SETL1,@#STMP11
1463 005504 012737 000205 001246  MOV     #205,@#STMP6
1464 005512 000440              BR       CERR3
1465
1466 005514 010103      CERR2: MOV     R1,R3
1467 005516 005103              COM     R3
1468
1469 005520 032703 177477              BIT     #177477,R3          ;ARE ANY OTHER BITS SET?
1470 005524 001401              BEQ     2$
1471 005526 000443      1$:  BR       CERR4
1472
1473 005530 032703 000300      2$:  BIT     #300,R3          ;ARE BOTH FD AND FL SET?
1474 005534 001774              BEQ     1$
1475 005536 032701 000300              BIT     #300,R1          ;ARE THEY BOTH CLEAR?
1476 005542 001771              BEQ     1$
1477
1478 005544 032701 000200              BIT     #200,R1          ;IS FD CLEAR?
1479 005550 001007              BNE     3$
1480 005552 012737 041406 001254  MOV     #SETF1,@#STMP11
1481 005560 012737 000202 001246  MOV     #202,@#STMP6
1482 005566 000412              BR       CERR3
1483
1484 005570 032701 000100      3$:  BIT     #100,R1
1485 005574 001354              BNE     1$          ;IS FL CLEAR.
1486 005576 012737 041422 001254  MOV     #SETI1,@#STMP11
1487 005604 012737 000204 001246  MOV     #204,@#STMP6
1488 005612 000400              BR       CERR3
1489
1490      ;REPORT THE ERRORS:
1491 005614      CERR3:
1492 005614 010137 001240      MOV     R1,@#STMP3
1493 005620 010237 001242      MOV     R2,@#STMP4
1494 005624 012637 005660      MOV     (SP)+,@#CPC
1495 005630 104012      1$:  ERROR  +12
1496 005632 000177 000022      JMP     @CPC
1497
1498 005636      CERR4:
1499 005636 010137 001240      MOV     R1,@#STMP3
1500 005642 010237 001242      MOV     R2,@#STMP4
1501 005646 012637 005660      MOV     (SP)+,@#CPC
1502 005652 104013      1$:  ERROR  +13
1503 005654 000177 000000      JMP     @CPC
1504
1505 005660 000000      CPC:  .WORD 0
1506
1507 005662      CDONE:
1508 005662 104412      RSETUP      ;GO INITIALIZE THE FPS AND STACK; AND
1509      ;SEE IF THE USER HAS EXPRESSED
1529      ;THE DESIRE TO CHANGE THE SOFTWARE
1529      ;VIRTUAL CONSOLE SWITCH REGISTER (HAS
1529      ;THE USER TYPED CONTROL G?).
    
```

```

1567 006022 022701 100000          CMP    #100000,R1          ;SET CORRECTLY.
1568 006026 001406          BEQ    3$
1569
1570 006030 012737 100000 001240      MOV    #100000,@#$TMP3
1571 006036 010137 001242          MOV    R1,@#$TMP4
1572 006042 104017          2$:   ERROR    +17
1573
1574 006044 012704 000001          3$:   MOV    #1,R4
1575 006050 170304          D8$:   STST    R4          ;GET THE FEC CODE. NOTE THAT
1576                                     ;IF THE DESTINATION MODE IS
1577                                     ;IMPROPERLY DECODED AN ODD
1578                                     ;ADDRESS TRAP TO 4 SHOULD OCCUR.
1579 006052 022704 000002          CMP    #2,R4          ;WAS FEC CORRECT?
1580 006056 001001          BNE    D9
1581 006060 000735          BR     D5
1582
1583 006062          D9$:   ;REPORT STST FAILURE
1584 006062 012737 006050 001240      MOV    #D8,@#$TMP3
1585 006070 010437 001242          MOV    R4,@#$TMP4
1586 006074 104020          1$:   ERROR    +20
1587 006076 000726          BR     D5
1588
1589 006100 022716 006052          DERR2: CMP    #D8+2,(SP)    ;DID THE TRAP OCCUR ON THE
1590 006104 001402          BEQ    D10            ;STST INSTRUCTION?
1591 006106 000137 040266          JMP    @#CPSPUR
1592
1593          D10:
1594 006112          MOV    (SP),@#$TMP2
1595 006116 011637 001236          CMP    (SP)+,(SP)+
1596 006120 104021          1$:   ERROR    +21
1597 006122 000714          BR     D5
1598
1599 006124          DDONE:
1600 006124 104412          RSETUP ;GO INITIALIZE THE FPS AND STACK; AND
1601                                     ;SEE IF THE USER HAS EXPRESSED
1602                                     ;THE DESIRE TO CHANGE THE SOFTWARE
1603                                     ;VIRTUAL CONSOLE SWITCH REGISTER (HAS
1604                                     ;THE USER TYPED CONTROL G?).

```

1600
1601
1609

```

:*****
:*TEST 5          FID, INTERRUPT DISABLE, BIT TEST
:*
:*THIS IS A TEST OF FPS BIT 14 (FID) OR FLOATING INTERRUPT DISABLE.
:*AN ILLEGAL INSTRUCTION IS EXECUTED WITH FID=1. NO INTERRUPT SHOULD
:*OCCUR.
:*
:*****

```

```

1610 006126 000004          TST5: SCOPE
1611 006130 104413          LPERR
1612 006132 012737 006234 000244      MOV    #EERR2,@#FPVECT ;SET UP THE LOOP ON ERROR ADDRESS.
1613 006140 012700 040000          E1:   MOV    #40000,R0          ;SETUP FOR THE INTERRUPT.
1614 006144 170100          LDFPS R0
1615 006146 012737 006154 001236      MOV    #E3,@#$TMP2          ;SET FID.
1616 006154          E2:
1617 006154 170020          E3:   .WORD 170020          ;ILLEGAL FPP INSTRUCTION.

```

```

1618 006156 170000          E4:      CFCC
1619
1620 006160 170201          STFPS   R1          ;SEE IF ERROR WAS DETECTED.
1621 006162 022701 140000  CMP      #140000,R1
1622 006166 001005          BNE     EERR0
1623
1624 006170 170304          STST    R4          ;SEE IF FEC=2
1625 006172 022704 000002  CMP      #2,R4
1626 006176 001010          BNE     EERR1
1627 006200 000431          BR      EDONE
1628
1629 006202          EERR0:          ;REPORT FPS INCORRECTLY SET.
1630 006202 010137 001240  MOV      R1,@#TMP3
1631 006206 012737 140000 001242  MOV      #140000,@#TMP4
1632 006214 104022          1$:      ERROR   +22
1633 006216 000422          BR      EDONE
1634
1635 006220          EERR1:          ;REPORT FEC NOT 2.
1636 006220 010537 001240  MOV      R5,@#TMP3
1637 006224 010437 001242  MOV      R4,@#TMP4
1638 006230 104023          1$:      ERROR   +23
1639 006232 000414          BR      EDONE
1640
1641 006234 021627 006156  EERR2:  CMP      (SP),#E4          ;DID THE ILLEGAL INSTRUCTION TRAP?
1642 006240 001402          BEQ     1$
1643 006242 000137 040234  JMP      @#FPSPUR
1644
1645 006246          1$:
1646 006246 011637 001236  MOV      (SP),@#TMP2
1647 006252 022626          CMP     (SP)+,(SP)+
1648 006254 170201          STFPS   R1
1649 006256 010137 001240  MOV      R1,@#TMP3
1650 006262 104024          2$:      ERROR   +24
1651
1652 006264          EDONE:
      006264 104412          RSETUP          ;GO INITIALIZE THE FPS AND STACK; AND
                          ;SEE IF THE USER HAS EXPRESSED
                          ;THE DESIRE TO CHANGE THE SOFTWARE
                          ;VIRTUAL CONSOLE SWITCH REGISTER (HAS
                          ;THE USER TYPED CONTROL G?).
    
```

1653
1654
1667

```

:*****
:*TEST 6      LDD AND STD, WITH SRC AND DST MODE 1, TEST
:*
:*THIS IS A TEST OF BOTH THE INSTRUCTION:
:*          LDD      (R0),ACO
:*AND THE INSTRUCTION:
:*          STD      ACO,(R0)
:*MOST OF THE FAILURES ARE ISOLATED TO THE SRC OR DST FLOWS. NOTE
:*THAT THE INTEGRITY OF ACO HAS NOT BEEN ASSURED. THIS MEANS THAT
:*IN SOME CASES IT WILL BE IMPOSSIBLE TO ISOLATE CERTAIN DATA PATTERN
:*FAILURES TO EITHER THE FLOWS OR THIS ACCUMULATOR.
:*
:*****
TST6:  SCOPE
    
```

1668 006266 000004

```

1669 006270          F1:          LPERR
      006270 104413          MOV          #F3,@#STMP2      ;SET UP THE LOOP ON ERROR ADDRESS.
1670 006272 012737 006342 001236  CLR          R0
1671 006300 005000          LDFPS       R0
1672 006302 170100          SETD
1673 006304 170011          MOV          #FDAT10,R1      ;SET UP THE LOAD DATA.
1674 006306 012701 010074          MOV          #FXDAT0,R2
1675 006312 012702 010140          MOV          #10,R3
1676 006316 012703 000010          SOB
1677
1678 006322 012221          F2:          MOV          (R2)+,(R1)+
1679 006324 077302          SOB          R3,F2
1680
1681 006326 012700 010104          MOV          #FDAT14,R0      ;SETUP R0 FOR THE LDD (R0),ACO.
1682 006332 012737 007560 000004  MOV          #FERR20,@#ERRVECT ;IF THE SRC FLOWS FAIL THEN
1683
1684 006340 005003          CLR          R3              ;AN ODD ADDRESS MAY OCCUR.
1685
1686 006342 172410          F3:          LDD          (R0),ACO
1687 006344 005203          F4:          INC          R3
1688 006346 005203          INC          R3
1689
1690 006350 020027 010104          CMP          R0,#FDAT14      ;WAS R0 AFFECTED?
1691 006354 001402          BEQ          F5
1692 006356 000137 006724          JMP          @#FERR1
1693
1694 006362 020327 000002          F5:          CMP          R3,#2
1695 006366 001402          BEQ          1$              ;SEE IF THE PC WAS ADVERSELY
1696 006370 000137 007022          JMP          @#FERR2        ;AFFECTED DURING THE INSTRUCTION.
1697
1698 006374 012701 010074          1$:          MOV          #FDAT10,R1      ;MAKE SURE THE SOURCE DATA WAS
1699 006400 012702 010140          MOV          #FXDAT0,R2      ;NOT AFFECTED.
1700 006404 012703 000010          MOV          #10,R3
1701 006410 022122          2$:          CMP          (R1)+,(R2)+
1702 006412 001402          BEQ          3$
1703 006414 000137 006666          JMP          @#FERRO
1704 006420 077305          3$:          SOB          R3,2$
1705
1706 006422 170201          STFPS       R1              ;MAKE SURE THE FPS IS CORRECT.
1707 006424 022701 000200          CMP          #200,R1
1708 006430 001402          BEQ          F6
1709 006432 000137 007540          JMP          @#FERR11
1710
1711 006436          F6:          LPERR
      006436 104413          MOV          #F10,@#STMP2    ;SET UP THE LOOP ON ERROR ADDRESS.
1712 006440 012737 006502 001236  MOV          #-1,R3
1713
1714 006446 012703 177777          MOV          #10,R4
1715 006452 012704 000010          MOV          #FDAT00,R5      ;SET UP THE OUTPUT DATA BUFFER.
1716 006456 012705 010116          MOV          R3,(R5)+
1717 006462 010325          F7:          MOV          R4,F7
1718 006464 077402          SOB
1719
1720 006466 012700 010126          MOV          #FDAT04,R0      ;SET UP R0 FOR DST MODE 1 REG 0.
1721 006472 012737 007726 000004  MOV          #FERR25,@#ERRVECT ;IF THE DST FLOWS FAIL AN ODD
1722
1723 006500 005003          CLR          R3              ;ADDRESS COULD OCCUR.
  
```


1724									
1725	006502	174010		F10:	STD	AC0,(R0)			;TEST INSTRUCTION.
1726	006504	005203		F11:	INC	R3			
1727	006506	005203			INC	R3			
1728									
1729	006510	020027	010126		CMP	R0,#FDAT04			;WAS R0 MODIFIED?
1730	006514	001402			BEQ	F12			
1731	006516	000137	007062		JMP	@#FERR3			
1732									
1733	006522	020327	000002	F12:	CMP	R3,#2			;WAS THE PC AFFECTED CORRECTLY?
1734	006526	001402			BEQ	F135			
1735	006530	000167	000320		JMP	FERR4			
1736									
1737	006534	012701	010116	F135:	MOV	#FDAT00,R1			
1738	006540	012702	010140		MOV	#FXDAT0,R2			
1739									
1740	006544	022122			CMP	(R1)+,(R2)+			;SEE IF THE DATA WAS OUTPUT
1741	006546	001402			BEQ	F13			;TO THE TARGET AREA CORRECTLY.
1742	006550	000137	007160		JMP	@#FERR5			
1743									
1744	006554	022122		F13:	CMP	(R1)+,(R2)+			
1745	006556	001402			BEQ	F14			
1746	006560	000137	007160		JMP	@#FERR5			
1747									
1748	006564	022122		F14:	CMP	(R1)+,(R2)+			
1749	006566	001402			BEQ	F15			
1750	006570	000137	007160		JMP	@#FERR5			
1751									
1752	006574	022122		F15:	CMP	(R1)+,(R2)+			
1753	006576	001402			BEQ	F16			
1754	006600	000137	007160		JMP	@#FERR5			
1755									
1756	006604	022122		F16:	CMP	(R1)+,(R2)+			
1757	006606	001402			BEQ	F17			
1758	006610	000137	007504		JMP	@#FERR10			
1759									
1760	006614	022122		F17:	CMP	(R1)+,(R2)+			
1761	006616	001402			BEQ	F20			
1762	006620	000137	007214		JMP	@#FERR6			
1763									
1764	006624	022122		F20:	CMP	(R1)+,(R2)+			
1765	006626	001402			BEQ	F21			
1766	006630	000167	000514		JMP	FERR7			
1767									
1768	006634	022122		F21:	CMP	(R1)+,(R2)+			
1769	006636	001402			BEQ	F22			
1770	006640	000137	007504		JMP	@#FERR10			
1771									
1772	006644	005001		F22:	CLR	R1			
1773	006646	170201			STFPS	R1			;MAKE SURE FPS IS CORRECT.
1774	006650	022701	000200		CMP	#200,R1			
1775	006654	001402			BEQ	F23			
1776	006656	000137	007540		JMP	@#FERR11			
1777	006662	000137	010160	F23:	JMP	@#FDONE			
1778									
1779	006666			FERR0:					;SOURCE DATA AFFECTED BY
1780	006666	012737	010140	001240	MOV	#FXDAT0,@#STMP3			;THE LDD INSTRUCTION.

```

1781 006674 012737 010152 001242      MOV    #FXDAT0+12,@#STMP4
1782 006702 012737 010074 001244      MOV    #FDAT10,@#STMP5
1783 006710 012737 010106 001246      MOV    #FDAT10+12,@#STMP6
1784 006716 104025          1$:    ERROR  +25
1785 006720 000137 010160      JMP    @#FDONE
1786
1787 006724 012737 010104 001242  FERR1: MOV    #FDAT14,@#STMP4      ;FSRC FLOWS FAILURE.
1788 006732 010037 001240      MOV    R0,@#STMP3
1789 006736 012737 000762 001244      MOV    #762,@#STMP5
1790 006744 012737 000321 001250      MOV    #321,@#STMP7
1791
1792 006752 022700 010074          CMP    #FDAT10,R0      ;FSRC MODE 4?
1793 006756 001004          BNE    1$
1794 006760 012737 000324 001246      MOV    #324,@#STMP6
1795 006766 000412          BR     4$
1796
1797 006770 022700 010114          1$:    CMP    #FDAT14+10,R0      ;FSRC MODE 2?
1798 006774 001004          BNE    2$
1799 006776 012737 000322 001246      MOV    #322,@#STMP6
1800 007004 000403          BR     4$
1801
1802 007006          2$:
1803 007006 104027          3$:    ERROR  +27
1804 007010 000137 010160      JMP    @#FDONE
1805
1806 007014          4$:
1807 007014 104026          5$:    ERROR  +26
1808 007016 000137 010160      JMP    @#FDONE
1809
1810 007022 012701 006344      FERR2: MOV    #F4,R1      ;THE PC WAS INCORRECTLY AFFECTED
1811                                     ;DURING THE INSTRUCTION.
1812 007026 010137 001242      FER2:  MOV    R1,@#STMP4
1813 007032 162701 000004      SUB    #4,R1
1814 007036 006303      ASL    R3
1815 007040 060301      ADD    R3,R1
1816 007042 010137 001240      MOV    R1,@#STMP3
1817 007046 104030          1$:    ERROR  +30
1818 007050 000137 010160      JMP    @#FDONE
1819
1820 007054 012701 006504      FERR4: MOV    #F11,R1
1821 007060 000762      BR     FER2
1822
1823 007062 012737 010126 001242  FERR3: MOV    #FDAT04,@#STMP4      ;FAILURE IN THE FDST FLOWS.
1824 007070 010037 001240      MOV    R0,@#STMP3
1825 007074 012737 000527 001244      MOV    #527,@#STMP5
1826 007102 012737 000641 001250      MOV    #641,@#STMP7
1827
1828 007110 022700 010116          CMP    #FDAT00,R0      ;DST MODE 4?
1829 007114 001004          BNE    1$
1830 007116 012737 000644 001246      MOV    #644,@#STMP6
1831 007124 000412          BR     4$
1832
1833 007126 022700 010136          1$:    CMP    #FDAT04+10,R0      ;DST MODE 2?
1834 007132 001004          BNE    2$
1835 007134 012737 000642 001246      MOV    #642,@#STMP6
1836 007142 000403          BR     4$
1837

```

1838	007144				2\$:			
1839	007144	104032			3\$:	ERROR	+32	
1840	007146	000137	010160			JMP	@#FDONE	
1841								
1842	007152				4\$:			
1843	007152	104031			5\$:	ERROR	+31	
1844	007154	000137	010160			JMP	@#FDONE	
1845								
1846	007160				FERR5:			;FAILURE OF STD.
1847	007160	010037	001240			MOV	R0,@#STMP3	
1848	007164	012737	010116	001242		MOV	#FDAT00,@#STMP4	
1849	007172	012737	010134	001244		MOV	#FDAT07,@#STMP5	
1850	007200	012737	010140	001246		MOV	#FXDAT0,@#STMP6	
1851	007206	104033			1\$:	ERROR	+33	
1852	007210	000137	010160			JMP	@#FDONE	
1853								
1854	007214	012701	010130		FERR6:	MOV	#FDAT05,R1	;DID (BUT GR7) FAIL IN THE FDST
1855	007220	012702	177777			MOV	#-1,R2	;FLOWS?
1856	007224	012703	000003			MOV	#3,R3	
1857	007230	020221			1\$:	CMP	R2,(R1)+	
1858	007232	001017				BNE	5\$	
1859	007234	077303				SOB	R3,1\$	
1860								
1861								;REPORT FAILURE OF (BUT GR7) IN
1862	007236	010037	001240			MOV	R0,@#STMP3	;THE FDST FLOWS.
1863	007242	012737	000412	001244		MOV	#412,@#STMP5	
1864	007250	012737	000147	001246		MOV	#147,@#STMP6	
1865	007256	012737	000145	001250		MOV	#145,@#STMP7	
1866	007264	104034			2\$:	ERROR	+34	
1867	007266	000137	010160			JMP	@#FDONE	
1868								
1869	007272	012701	010130		5\$:	MOV	#FDAT05,R1	;DID (BUT GR7) FAIL IN THE SRC FLOWS?
1870	007276	012703	000003			MOV	#3,R3	
1871	007302	005721			6\$:	TST	(R1)+	
1872	007304	001402				BEQ	7\$	
1873	007306	000137	007504			JMP	@#FERR10	
1874	007312	077305			7\$:	SOB	R3,6\$	
1875								
1876								;REPORT FAILURE OF (BUT GR7) IN
1877	007314	010037	001240			MOV	R0,@#STMP3	;THE FSRC FLOWS.
1878	007320	012737	000207	001244		MOV	#207,@#STMP5	
1879	007326	012737	000176	001246		MOV	#176,@#STMP6	
1880	007334	012737	000174	001250		MOV	#174,@#STMP7	
1881								
1882	007342	104035			10\$:	ERROR	+35	
1883	007344	000137	010160			JMP	@#FDONE	
1884								
1885	007350	012701	010132		FERR7:	MOV	#FDAT06,R1	;DID (BUT FD) FAIL IN THE FDST FLOWS?
1886	007354	012702	177777			MOV	#-1,R2	
1887	007360	012703	000002			MOV	#2,R3	
1888	007364	020221			1\$:	CMP	R2,(R1)+	
1889	007366	001017				BNE	5\$	
1890	007370	077303				SOB	R3,1\$	
1891								
1892								;REPORT FAILURE OF (BUT FD) IN THE
1893	007372	010037	001240			MOV	R0,@#STMP3	;FDST FLOWS.
1894	007376	012737	000707	001244		MOV	#707,@#STMP5	

1895	007404	012737	000244	001246		MOV	#244,@#STMP6	
1896	007412	012737	000245	001250		MOV	#245,@#STMP7	
1897	007420	104036			2\$:	ERROR	+36	
1898	007422	000137	010160			JMP	@#FDONE	
1899								
1900	007426	012701	010132		5\$:	MOV	#FDAT06,R1	;DID (BUT FD) FAIL IN THE FSRC FLOWS?
1901	007432	012703	000002			MOV	#2,R3	
1902	007436	005721			6\$:	TST	(R1)+	
1903	007440	001402				BEQ	7\$	
1904	007442	000137	007504			JMP	@#FERR10	
1905	007446	077305			7\$:	SOB	R3,6\$	
1906								
1907								;REPORT FAILURE OF (BUT FD) IN THE
1908	007450	010037	001240			MOV	R0,@#STMP3	;FSRC FLOWS.
1909	007454	012737	000441	001244		MOV	#441,@#STMP5	
1910	007462	012737	000076	001246		MOV	#76,@#STMP6	
1911	007470	012737	000077	001250		MOV	#77,@#STMP7	
1912	007476	104037			10\$:	ERROR	+37	
1913	007500	000137	010160			JMP	@#FDONE	
1914								
1915	007504				FERR10:			;REPORT DATA ERROR.
1916	007504	010037	001240			MOV	R0,@#STMP3	
1917	007510	012737	010126	001242		MOV	#FDAT04,@#STMP4	
1918	007516	012737	010134	001244		MOV	#FDAT07,@#STMP5	
1919	007524	012737	010150	001246		MOV	#FXDAT4,@#STMP6	
1920	007532	104040			1\$:	ERROR	+40	
1921	007534	000137	010160			JMP	@#FDONE	
1922								
1923	007540				FERR11:			;REPORT BAD FPS.
1924	007540	010137	001240			MOV	R1,@#STMP3	
1925	007544	012737	000200	001242		MOV	#200,@#STMP4	
1926	007552	104041			1\$:	ERROR	+41	
1927	007554	000137	010160			JMP	@#FDONE	
1928								
1929	007560	012737	040445	001264	FERR20:	MOV	#NULL,@#STMP15	;THE EXECUTION OF THE LDD
1930	007566	005037	001252			CLR	@#STMP10	;CAUSED A TRAP TO 4, BECAUSE
1931	007572	011637	001236			MOV	(SP),@#STMP2	;A FSRC FLOW FAILURE RESULTED
1932	007576	012737	010104	001240		MOV	#FDAT14,@#STMP3	;IN AN ODD ADDRESS.
1933	007604	012737	000321	001250		MOV	#321,@#STMP7	
1934	007612	012737	000762	001244		MOV	#762,@#STMP5	
1935								
1936	007620	021627	006346			CMP	(SP),#F4+2	;SEE IF FSRC MODE 6 OR 7 WAS
1937	007624	001424				BEQ	FERR21	;EXECUTED.
1938								
1939	007626	020027	010102			CMP	R0,#FDAT13	;FSRC MODE 5?
1940	007632	001006				BNE	2\$	
1941								
1942								;REPORT FSRC FLOW FAILURE TO
1943	007634	012737	000325	001246		MOV	#325,@#STMP6	;MODE 5.
1944	007642	022626				CMP	(SP)+,(SP)+	
1945	007644	104042			1\$:	ERROR	+42	
1946	007646	000544				BR	FDONE	
1947								
1948	007650	020027	010106		2\$:	CMP	R0,#FDAT15	;FSRC MODE 3?
1949	007654	001402				BEQ	3\$	
1950	007656	000137	040266			JMP	@#CPSPUR	
1951								

1952 007662 3\$:
1953 007662 012737 000323 001246
1954 007670 022626
1955 007672 104042 4\$:

MOV #323,@#STMP6
CMP (SP)+,(SP)+
ERROR +42

:REPORT FSRC
:MODE 3.

FLOW FAILURE TO

1957	007674	000531			BR	FDONE	
1958							
1959	007676	022626			FERR21: CMP	(SP)+,(SP)+	:REPORT FSRC FLOW FAILURE TO
1960							:MODE 6 OR MODE 7.
1961	007700	012737	042212	001264	MOV	#MS16,@#STMP15	
1962	007706	012737	000326	001246	MOV	#326,@#STMP6	
1963	007714	012737	000327	001252	MOV	#327,@#STMP10	
1964	007722	104042			1\$: ERROR	+42	
1965	007724	000515			BR	FDONE	
1966							
1967	007726	012737	040445	001264	FERR25: MOV	#NULL,@#STMP15	:THE EXECUTION OF THE STD INSTRUCTION
1968	007734	005037	001252		CLR	@#STMP10	:TRAPPED TO 4, BECAUSE A FAILURE
1969	007740	012737	010126	001240	MOV	#FDAT04,@#STMP3	:IN THE FDST FLOWS RESULTED
1970	007746	011637	001236		MOV	(SP),@#STMP2	:IN AN ODD ADDRESS.
1971	007752	012737	000527	001244	MOV	#527,@#STMP5	
1972	007760	012737	000641	001250	MOV	#641,@#STMP7	
1973							
1974	007766	021627	006504		CMP	(SP),#F10+2	:FLOW FAILURE TO FDST MODE 6 OR 7?
1975	007772	001424			BEQ	FERR26	
1976							
1977	007774	020027	010124		CMP	R0,#FDAT03	:DID FDST FLOW FAIL TO MODE 5?
1978	010000	001006			BNE	2\$	
1979							
1980							:REPORT FLOW FAILURE TO FDST
1981	010002	012737	000645	001246	MOV	#645,@#STMP6	:MODE 5.
1982	010010	022626			CMP	(SP)+,(SP)+	
1983	010012	104043			1\$: ERROR	+43	
1984	010014	000461			BR	FDONE	
1985							
1986	010016	020027	010130		2\$: CMP	R0,#FDAT05	:DID FDST FLOW FAIL TO MODE 3?
1987	010022	001402			BEQ	3\$	
1988	010024	000137	040266		JMP	@#CPSPUR	
1989							
1990	010030				3\$:		:REPORT FDST FLOW FAILED TO MODE 3.
1991	010030	012737	000643	001246	MOV	#643,@#STMP6	
1992	010036	022626			CMP	(SP)+,(SP)+	
1993	010040	104043			4\$: ERROR	+43	
1994	010042	000446			BR	FDONE	
1995							
1996	010044				FERR26:		:REPORT FDST FLOW FAILURE TO MODE
1997	010044	012737	042212	001264	MOV	#MS16,@#STMP15	:6 OR MODE 7.
1998	010052	012737	000646	001246	MOV	#646,@#STMP6	
1999	010060	012737	000647	001252	MOV	#647,@#STMP10	
2000	010066	022626			CMP	(SP)+,(SP)+	
2001	010070	104043			1\$: ERROR	+43	
2002	010072	000432			BR	FDONE	
2003							
2004	010074	177777			FDAT10:	-1	
2005	010076	177777			FDAT11:	-1	
2006	010100	177777			FDAT12:	-1	
2007	010102	177777			FDAT13:	-1	
2008	010104	177777			FDAT14:	-1	
2009	010106	177777			FDAT15:	-1	
2010	010110	177777			FDAT16:	-1	
2011	010112	177777			FDAT17:	-1	
2012	010114	177777				-1	
2013	010116	177777			FDAT00:	-1	

2014	010120	177777	FDAT01: -1
2015	010122	177777	FDAT02: -1
2016	010124	177777	FDAT03: -1
2017	010126	177777	FDAT04: -1
2018	010130	177777	FDAT05: -1
2019	010132	177777	FDAT06: -1
2020	010134	177777	FDAT07: -1
2021	010136	177777	-1
2022	010140	177777	FXDAT0: -1
2023	010142	177777	FXDAT1: -1
2024	010144	177777	FXDAT2: -1
2025	010146	177777	FXDAT3: -1
2026	010150	052525	FXDAT4: 052525
2027	010152	031463	FXDAT5: 031463
2028	010154	007417	FXDAT6: 007417
2029	010156	000477	FXDAT7: 000477

2032	010160		FDONE:
	010160	104412	RSETUP

```

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).

```

2033
2034
2040

```

:*****
:*TEST 7          FSRC MODE 0 TEST
:*
:*THIS IS A TEST OF FSRC MODE ZERO USING THE LDD AND LDF INSTRUCTIONS.
:*
:*****

```

2041	010162	000004	TST7:	SCOPE
2042	010164	104413		LPERR

```

;SET UP THE LOOP ON ERROR ADDRESS.

```

2043	010166		I1:	SETD		
2044	010166	170011		MOV	#IDATIO,R0	;SET FD.
2045	010170	012700	011012	MOV	#IPAT10,R1	
2046	010174	012701	010762	MOV	#4,R2	
2047	010200	012702	000004	MOV	(R1)+,(R0)+	;SET UP THE INPUT DATA BUFFER.
2048	010204	012120		SOB	R2,I2	
2049	010206	077202				
2051	010210	012700	011012	MOV	#IDATIO,R0	;LOAD AC1
2052	010214	172510		LDD	(R0),AC1	
2054	010216	012700	010772	MOV	#IPAT20,R0	;LOAD AC0
2055	010222	172410		LDD	(R0),AC0	
2057	010224	012701	000001	MOV	#1,R1	;IN CASE THE FSRC FLOWS FAIL
2058	010230	012737	010562	MOV	#IERRO,@#ERRVECT	;AN ODD ADDRESS TRAP TO 4 MAY OCCUR.
2059	010236	012737	010252	MOV	#I3,@#STMP2	
2060	010244	012737	042672	MOV	#MS35,@#STMP3	
2061	010252	172401		I3:	LDD	AC1,AC0
2062	010254	000240		I4:	NOP	;TEST INSTRUCTION.
2063	010256	000240		I5:	NOP	

```

;TEST INSTRUCTION.

```

```

2065 010260 012700 011002      MOV      #IDAT00,R0
2066 010264 174010              STD      ACO,(R0)                ;GET ACO, THE RESULTS.
2067                                ;SEE IF DATA IS CORRECT.
2068 010266 012700 011002      MOV      #IDAT00,R0
2069 010272 012701 011012      MOV      #IDAT10,R1
2070 010276 012702 000004      MOV      #4,R2
2071 010302 022021              16:    CMP      (R0)+,(R1)+
2072 010304 001424              BEQ      I105
2073                                ;SEE IF (BUT FD) FAILED.
2074 010306 012700 011006      MOV      #IDAT02,R0
2075 010312 012702 000002      MOV      #2,R2
2076 010316 005720              17:    TST      (R0)+
2077 010320 001413              BEQ      I10
2078
2079 010322 012700 011006      MOV      #IDAT02,R0
2080 010326 012702 000002      MOV      #2,R2
2081 010332 022720 177777      1$:    CMP      #-1,(R0)+
2082 010336 001402              BEQ      2$
2083 010340 000137 010644      JMP      @#IERR1
2084 010344 077206              2$:    SOB      R2,1$
2085 010346 000401              BR       I106
2086 010350 077216              I10:   SOB      R2,I7
2087 010352 000137 010664      I106:  JMP      @#IERR2
2088
2089 010356 077227              I105:  SOB      R2,I6
2090
2091                                ;NOW TEST THE LOAD INSTRUCTION WITH FSRC MODE ZERO AND FD CLEAR.
2092
2093 010360 104413              I11:   LPERR                        ;SET UP THE LOOP ON ERROR ADDRESS.
2094
2095 010362 012700 010762      I12:   MOV      #IPAT10,R0
2096 010366 012701 011012      MOV      #IDAT10,R1
2097 010372 012702 000004      MOV      #4,R2
2098 010376 012021              I13:   MOV      (R0)+,(R1)+
2099 010400 077202              SOB      R2,I13
2100
2101 010402 012700 011012      MOV      #IDAT10,R0                ;SET UP AC1
2102 010406 172510              LDD      (R0),AC1
2103
2104 010410 012700 010772      MOV      #IPAT20,R0                ;SET UP ACO
2105 010414 172410              LDD      (R0),ACC
2106
2107 010416 012701 000001      MOV      #1,R1
2108 010422 012737 010440 001236  MOV      #I14,@#STMP2
2109 010430 012737 042677 001240  MOV      #MS36,@#STMP3
2110 010436 170001              SETF
2111                                ;CLEAR FD.
2112 010440 172401              I14:   LDF      AC1,ACO                ;TEST INSTRUCTION.
2113 010442 000240              I15:   NOP
2114 010444 000240              I16:   NOP
2115
2116 010446 170200              STFPS   R0                        ;SEE IF FPS IS STILL CLEAR.
2117 010450 022700 000004      CMP      #4,RC
2118 010454 001402              BEQ      I17
2119 010456 000137 010736      JMP      @#IERR3
2120

```



```

2121 010462          I17:          :RESET TO DOUBLE MODE.
2122 010462 170011          SETD
2123
2124 010464 012700 011002          MOV  #IDAT00,R0
2125 010470 174010          STD  ACO,(R0)          :GET ACO
2126
2127 010472 012737 177777 011016          MOV  #-1,@#IDATI2
2128 010500 012737 177777 011020          MOV  #-1,@#IDATI3
2129 010506 012700 011002          MOV  #IDAT00,R0
2130 010512 012701 011012          MOV  #IDATI0,R1
2131 010516 012702 000004          MOV  #4,R2
2132 010522 022021          I20:  CMP  (R0)+,(R1)+          :SEE IF ACO WAS CORRECT.
2133 010524 001414          BEQ  I23
2134
2135 010526 023737 011006 010766          CMP  @#IDAT02,@#IPAT12          :DID (BUT FD) FAIL?
2136 010534 001402          BEQ  I22
2137 010536 000137 010644          I21:  JMP  @#IERR1
2138 010542 023737 011010 010770          I22:  CMP  @#IDAT03,@#IPAT13
2139 010550 001372          BNE  I21
2140 010552 000137 010712          JMP  @#IERR4
2141
2142 010556 077217          I23:  SOB  R2,I20
2143
2144 010560 000520          BR   IDONE          :NO ERRORS.
2145
2146          :IF AN ODD ADDRESS TRAP OCCURS COME HERE TO ANALYZE THE FSRC FAILURE.
2147 010562 022716 010254          IERR0: CMP  #14,(SP)          :MAKE SURE THE TRAP OCCURRED
2148 010566 001413          BEQ  1$          :ON THE INSTRUCTION BEING TESTED.
2149 010570 022716 010256          CMP  #15,(SP)
2150 010574 001410          BEQ  1$
2151 010576 022716 010442          CMP  #115,(SP)
2152 010602 001405          BEQ  1$
2153 010604 022716 010444          CMP  #116,(SP)
2154 010610 001402          BEQ  1$
2155 010612 000137 040266          JMP  @#CPSPUR
2156
2157 010616 011637 001236          1$:  MOV  (SP),@#$TMP2          :REPORT FAILURE.
2158 010622 012737 000627 001240          MOV  #627,@#$TMP3
2159 010630 012737 000320 001242          MOV  #320,@#$TMP4
2160 010636 022626          CMP  (SP)+,(SP)+
2161 010640 104047          2$:  ERROR +47
2162 010642 000467          BR   IDONE
2163
2164          :REPORT DATA ERROR.
2165 010644          IERR1:
2166 010644 012737 011012 001242          MOV  #IDATI0,@#$TMP4
2167 010652 012737 011002 001244          MOV  #IDAT00,@#$TMP5
2168 010660 104051          1$:  ERROR +51
2169 010662 000457          BR   IDONE
2170
2171          :REPORT FAILURE OF (BUT FD)
2172 010664 012737 000153 001244          IERR2: MOV  #153,@#$TMP5
2173 010672 012737 000434 001246          MOV  #434,@#$TMP6
2174 010700 012737 000435 001250          MOV  #435,@#$TMP7
2175 010706          IERR25:
2176 010706 104050          1$:  ERROR +50
2177 010710 000444          BR   IDONE
  
```

```

2178 010712 012737 000153 001244 IERR4: MOV #153,@#STMP5
2179 010720 012737 000435 001246 MOV #435,@#STMP6
2180 010726 012737 000434 001250 MOV #434,@#STMP7
2181 010734 000764 BR IERR25
2182
2183 ;REPORT INCORRECT FPS AFTER LOAD INSTRUCTION.
2184 010736 IERR3:
2185 010736 012737 010440 001236 MOV #114,@#STMP2
2186 010744 010037 001240 MOV R0,@#STMP3
2187 010750 012737 000004 001242 MOV #4,@#STMP4
2188 010756 104041 1$: ERROR +41
2189 010760 000420 BR IDONE
2190
2191
2192 010762 000000 IPAT10: 0
2193 010764 170360 IPAT11: 170360
2194 010766 016161 IPAT12: 016161
2195 010770 052525 IPAT13: 052525
2196
2197 010772 177777 IPAT20: -1
2198 010774 177777 IPAT21: -1
2199 010776 177777 IPAT22: -1
2200 011000 177777 IPAT23: -1
2201
2202 011002 000000 IDAT00: 0
2203 011004 000000 IDAT01: 0
2204 011006 000000 IDAT02: 0
2205 011010 000000 IDAT03: 0
2206
2207 011012 000000 IDAT10: 0
2208 011014 000000 IDAT11: 0
2209 011016 000000 IDAT12: 0
2210 011020 000000 IDAT13: 0
2211
2212 011022 IDONE:
011022 104412 RSETUP ;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).

2213
2219
2220 ;*****
;*TEST 10 FDST MODE 0 TEST
;*
;*THIS IS A TEST OF THE STORE INSTRUCTIONS, STD AND STF, WITH FDST MODE 0.
;*
;*****
2221 011024 000004 TST10: SCOPE
011026 104413 11:
011026 170011 LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
2222 011030 011570 SETD ;SET FD
011032 012700 011620 MOV #TPAT10,R0
2223 011036 012701 011620 MOV #TDAT10,R1
2224 011042 012702 000004 MOV #4,R2
2225 011046 012021 12: MOV (R0)+,(R1)+ ;SET UP THE INPUT DATA BUFFER.
2227 011050 077202 SOB R2,T2
  
```

```

2228
2229 011052 012700 011620      MOV    #TDATIO,R0      ;LOAD AC0
2230 011056 172410              LDD    (R0),AC0
2231
2232 011060 012700 011600      MOV    #TPAT20,R0     ;LOAD AC1
2233 011064 172510              LDD    (R0),AC1
2234
2235 011066 012701 000001      MOV    #1,R1          ;IF THE (BUT FDST) FORK FAILS
2236 011072 012737 011376 000004  MOV    #TERR0,@#ERRVECT ;AN ODD ADDRESS TRAP COULD RESULT.
2237 011100 012737 011114 001236  MOV    #T3,@#$TMP2
2238 011106 012737 042672 001240  MOV    #MS35,@#$TMP3
2239 011114 174001              T3:   STD    AC0,AC1
2240 011116 000240              T4:   NOP
2241 011120 000240              T5:   NOP
2242
2243 011122 012700 011610      MOV    #TDAT00,R0
2244 011126 174110              STD    AC1,(R0)      ;GET THE DATA.
2245
2246 011130 012703 011610      MOV    #TDAT00,R3     ;SEE IF THE DATA IS CORRECT.
2247 011134 012704 011620      MOV    #TDATIO,R4
2248 011140 012705 000004      MOV    #4,R5
2249 011144 022324              T6:   CMP    (R3)+,(R4)+
2250 011146 001413              BEQ    T105
2251
2252 011150 012703 011614      MOV    #TDAT02,R3     ;DID (BUT FD) FAIL?
2253 011154 012705 000002      MOV    #2,R5
2254 011160 005723              T7:   TST    (R3)+
2255 011162 001402              BEQ    T10
2256 011164 000137 011460      JMP    @#TERR1
2257 011170 077505              T10:  SOB    R5,T7
2258 011172 000137 011500      JMP    @#TERR2
2259
2260 011176 077516              T105: SOB    R5,T6
2261
2262 ;NOW TEST THE STF AC0,AC1 INSTRUCTION.
2263
2264 011200              T11:  LPERR
2265 011200 104413              ;SET UP THE LOOP ON ERROR ADDRESS.
2266 011202 012700 011570      T12:  MOV    #TPAT10,R0   ;SET UP THE INPUT DATA BUFFER.
2267 011206 012701 011620      MOV    #TDATIO,R1
2268 011212 012702 000004      MOV    #4,R2
2269 011216 012021              T13:  MOV    (R0)+,(R1)+
2270 011220 077202              SOB    R2,T13
2271
2272 011222 012700 011620      MOV    #TDATIO,R0     ;SET UP AC0
2273 011226 172410              LDD    (R0),AC0
2274
2275 011230 012700 011600      MOV    #TPAT20,R0     ;SET UP AC1
2276 011234 172510              LDD    (R0),AC1
2277
2278 011236 012701 000001      MOV    #1,R1
2279 011242 012737 011260 001236  MOV    #T14,@#$TMP2
2280 011250 012737 042677 001240  MOV    #MS36,@#$TMP3
2281 011256 170001              SETF
2282 011260 174001              T14:  STF    AC0,AC1   ;CLEAR FD
2283 011262 000240              T15:  NOP

```

```

2284 011264 000240          T16:  NOP
2285
2286 011266 005000          CLR    R0
2287 011270 170200          STFPS R0                ;SEF IF FPS IS CLEAR.
2288 011272 022700 000010  CMP    #10,R0
2289 011276 001401          BEQ    T17
2290 011300 000521          BR     TERR3
2291
2292 011302          T17:
2293 011302 170011          SETD                    ;SET FD.
2294
2295 011304 012700 011610  MOV    #TDAT00,R0
2296 011310 174110          STD    AC1,(R0)        ;PICK UP AC1.
2297
2298 011312 012737 177777 011624  MOV    #-1,@#TDAT12
2299 011320 012737 177777 011626  MOV    #-1,@#TDAT13
2300 011326 012703 011610          MOV    #TDAT00,R3
2301 011332 012704 011620          MOV    #TDAT10,R4
2302 011336 012705 000004          MOV    #4,R5
2303 011342 022324          T20:  CMP    (R3)+,(R4)+      ;WAS THE DATA TRANSFERRED CORRECTLY?
2304 011344 001412          BEQ    T23
2305
2306 011346 023737 011614 011574  CMP    @#TDAT02,@#TPAT12  ;DID (BUT FD) FAIL.
2307 011354 001401          BEQ    T22
2308 011356 000440          T21:  BR     TERR1
2309 011360 023737 011616 011576  T22:  CMP    @#TDAT03,@#TPAT13
2310 011366 001373          BNE    T21
2311 011370 000456          BR     TERR4
2312
2313 011372 077515          T23:  SOB   R5,T20
2314 011374 000515          BR     TDONE
2315
2316
2317          ;TRAP HERE THROUGH VECTOR 4 IF AN ODD ADDRESS OCCURS.
2318 011376 022716 011116  TERRO:  CMP    #T4,(SP)          ;MAKE SURE THE TRAP WAS ON
2319 011402 001413          BEQ    1$              ;AN INSTRUCTION BEING TESTED.
2320 011404 022716 011120  CMP    #T5,(SP)
2321 011410 001410          BEQ    1$
2322 011412 022716 011262  CMP    #T15,(SP)
2323 011416 001405          BEQ    1$
2324 011420 022716 011264  CMP    #T16,(SP)
2325 011424 001402          BEQ    1$
2326 011426 000137 040266  JMP    @#CPSPUR
2327
2328 011432 011637 001236  1$:    MOV    (SP),@#$TMP2
2329 011436 022626          CMP    (SP)+,(SP)+
2330 011440 012737 000527 001240  MOV    #527,@#$TMP3
2331 011446 012737 000640 001242  MOV    #640,@#$TMP4
2332 011454 104121          2$:    ERROR +121
2333 011456 000464          BR     TDONE
2334
2335          ;REPORT DATA FAILURE.
2336 011460          TERR1:
2337 011460 012737 011620 001242  MOV    #TDAT10,@#$TMP4
2338 011466 012737 011610 001244  MOV    #TDAT00,@#$TMP5
2339 011474 104123          1$:    ERROR +123
2340 011476 000454          BR     TDONE
  
```

```
2341
2342
2343 011500 012737 000160 001246 :REPORT FAILURE OF (BUT FD).
2344 011506 012737 000161 001250 TERR2: MOV #160,@#STMP6
2345 011514 012737 000640 001244 TERR25: MOV #161,@#STMP7
2346 011522 104122 1$: ERROR +122
2347 011524 000441 BR TDONE
2348 011526 012737 000161 001246 TERR4: MOV #161,@#STMP6
2349 011534 012737 000160 001250 MOV #160,@#STMP7
2350 011542 000764 BR TERR25
2351
2352 :REPORT INCORRECT FPS AFTER STORE INSTRUCTION.
2353 011544 TERR3:
2354 011544 012737 011262 001236 MOV #T15,@#STMP2
2355 011552 010037 001240 MOV R0,@#STMP3
2356 011556 012737 000010 001242 MOV #10,@#STMP4
2357 011564 104041 1$: ERROR +41
2358 011566 000420 BR TDONE
2359
2360 011570 000000 TPAT10: 0
2361 011572 170360 TPAT11: 170360
2362 011574 016161 TPAT12: 016161
2363 011576 052525 TPAT13: 052525
2364
2365 011600 177777 TPAT20: -1
2366 011602 177777 TPAT21: -1
2367 011604 177777 TPAT22: -1
2368 011606 177777 TPAT23: -1
2369
2370 011610 000000 TDATA00: 0
2371 011612 000000 TDATA01: 0
2372 011614 000000 TDATA02: 0
2373 011616 000000 TDATA03: 0
2374
2375 011620 000000 TDATA10: 0
2376 011622 000000 TDATA11: 0
2377 011624 000000 TDATA12: 0
2378 011626 000000 TDATA13: 0
2379
2380 011630 TDONE:
      011630 104412 RSETUP
```

```
:GO INITIALIZE THE FPS AND STACK; AND
:SEE IF THE USER HAS EXPRESSED
:THE DESIRE TO CHANGE THE SOFTWARE
:VIRTUAL CONSOLE SWITCH REGISTER (HAS
:THE USER TYPED CONTROL G?).
```

2381
2382
2516
2517

```
::*****
:*TEST 11 ACCUMULATORS DATA PATTERNS TEST
:*
:*THIS IS A TEST OF THE FLOATING POINT PROCESSOR ACCUMULATORS.
:*EACH ACCUMULATOR IS TESTED IN TWO WAYS:
:* 1 TEST PATTERN GENERATED BY FLOATING A ONE ACROSS
:* A FIELD OF ZEROES.
:* 2 TEST PATTERN GENERATED BY FLOATING A ZERO ACROSS
:* A FIELD OF ONES.
```

:*EACH OF ACCUMULATORS ACO THROUGH ACS IS TESTED.
:*
:*NOTE THAT THIS TEST KEEPS A DYNAMIC RECORD OF THE LOGICAL 'AND' AND 'OR'
:*OF THE FAILING DATA PATTERNS. THESE CAN BE VERY USEFUL IN DETERMINING
:*STUCK BITS. IF THE USER HAS THE INHIBIT ERROR TYPE OUT SWITCH (SWR13)
:*OFF, THEN THE USER WILL RECIEVE EACH INDIVIDUAL ERROR MESSAGE PLUS
:*AN ERROR SUMMARY AT THE END OF THE TEST. INHIBITING ERROR PRINT OUT
:*WILL INHIBIT ERROR SUMMARY PRINT OUT, EXCEPT IN THE CASE DESCRIBED BELOW.
:*TO GET JUST THE ERROR SUMMARY WITH NO INDIVIDUAL ERROR REPORTS,
:*SET SWITCH REGISTER BIT13 AND SWITCH REGISTER BIT7 BOTH ON.
:*
:*
:*THE FOLLOWING PROCEDURE IS PRESENTED TO AID THE TROUBLE
:*SHOOTER IN SITUATIONS WHERE AM2901 CHIP ISOLATION IS ATTEMPTED.
:*
:*WARNING: THIS PROCEDURE ASSUMES THAT THE FAULT IS IN ONE OF THE
:*AM2901 CHIPS. THIS ASSUMPTION IS NOT NECESSARILY VALID IN ALL
:*SITUATIONS. IT REMAINS TO BE SEEN WHAT NUMBER OF FAILURES CAN
:*PROBABLILISTICALLY ASSOCIATED WITH THEM. NOTE ALSO THAT THIS
:*INFORMATION SHOULD NOT BE TAKEN AS ABSOLUTE, THAT IS
:*THIS INFORMATION IS THE AUTHOR'S SUGGESTION FOR ACHIEVING ISOLATION
:*WHEN CHIP LEVEL REPAIR IS NECESSARY.
:*
:*WHEN THIS TEST HAS FINISHED RUNNING, IF ERRORS HAVE OCCURRED,
:*AN ERROR SUMMARY WILL BE TYPED. THUS SUMMARY WILL CONSIST OF TWO
:*IMPORTANT QUANTITIES:
:* A. FOUR SIXTEEN BIT NUMBERS LABELED THE LOGICAL 'AND' ('*')
:* OF THE FAILING DATA PATTERNS.
:* B. FOUR SIXTEEN BIT NUMBERS LABELED THE LOGICAL 'OR' ('*')
:* OF THE FAILING DATA PATTERNS.
:*
:*A BIT STUCK HIGH IN THE HARDWARE WILL SHOW UP AS A 0 IN THAT
:*BIT POSITION OF THE 'OR' OF THE FAILING DATA PATTERNS.
:*
:*A BIT STUCK LOW IN THE HARDWARE WILL SHOW UP AS A 1 IN THAT BIT
:*POSITION OF THE 'AND' OF THE FAILING DATA PATTERNS.
:*
:*THUS IF A FAILURE OCCURS:
:* A. STUCK HIGHS WILL SHOW AS 0'S IN THE 'OR' PATTERN.
:* B. STUCK LOWS WILL SHOW AS 1'S IN THE 'AND' PATTERN.
:*IF THE FAILURE IS INTERMITTANT THEN THIS PROCEDURE WILL STILL
:*APPLY!!
:*IF THE FAILURE MOVES FROM ONE BIT TO ANOTHER, OR FROM ONE
:*GROUP OF BITS TO ANOTHER GROUP OF BITS THEN THE FAULT WILL
:*PROBABLY NOT SHOW UP IN THE 'AND' OR THE 'OR' PATTERNS; IN THIS
:*CASE THE 'AND' PATTERN WILL BE ALL 0'S AND THE 'OR' PATTERN WILL
:*BE ALL 1'S. WHEN THIS OCCURS SOME OTHER METHOD OF REPAIR MUST
:*BE FOUND (SUCH AS INSPECTION OF EACH INDIVIDUAL ERROR REPORT
:*RATHER THAN USING THE SUMMARY).
:*
:*MAP THE FOLLOWING NOTATION ONTO EACH BIT POSITION IN THE 'AND'
:*AND THE 'OR' PATTERNS WHICH ARE TYPED IN THE ERROR SUMMARY.
:*
:*A15,A14,....A1,A0 B15,B14,....B1,B0 C15,C14,....C1,C0 D15,D14,....C1,C0
:*
:*IN THIS NOTATION A15 THROUGH A0 IS THE FIRST OF THE FOUR 16 BIT
:*OCTAL NUMBERS TYPED, B15 THROUGH B0 IS THE SECOND, ETC.

* THIS TABLE SHOWS THE CORRESPONDING AM2901 CHIP ('E' NUMBER)
 * WHICH IS RESPONSIBLE FOR EACH BIT POSITION USING THE ABOVE
 * NOTATION. NOTE THAT ECO'S TO THE HARDWARE MIGHT MAKE THIS
 * TABLE OBSOLETE IF IT IS NOT UP DATED. NOTE ALSO THAT THERE ARE
 * FOUR BITS FOR EACH AM2901 CHIP:

BITS	AM2901 CHIP NUMBER
A15,A14,A13,A12	E61
A11,A10,A9,A8	E62
A7,A6,A5,A4	E90
A3,A2,A1,A0	E81
B15,B14,B13,B12	E86
B11,B10,B9,B8	E85
B7,B6,B5,B4	E83
B3,B2,B1,B0	E88
C15,C14,C13,C12	E79
C11,C10,C9,C8	E84
C7,C6,C5,C4	E89
C3,C2,C1,C0	E87
D15,D14,D13,D12	E78
D11,D10,D9,D8	E77
D7,D6,D5,D4	E82
D3,D2,D1,D0	E80

* NOW FIVE IMPORTANT CASES WHICH WILL ARRISE WHEN A FAULTY
 * AM2901 IS PRESENT CAN BE DESCRIBED:

- * 1.) IF ONLY ONE BIT OF THE 64 BITS IS INCORRECT THE CHIP INDICATED
 IN THE ABOVE TABLE IS MOST PROBABLY AT FAULT. BUT IF THAT
 CHIP IS REPLACED AND THE ERROR PERSISTS THEN SUPPOSE THAT
 BIT IS,
 LN WHERE 'L' IS A, B, C OR D
 AND N IS 15, 14, ... OR 0
 THEN IN GENERAL ANY OF THE FOUR CHIPS RESPONSIBLE FOR
 AN, BN, CN OR DN COULD BE AT FAULT, WITH LN BEING MOST PROBABLE.
 FOR EXAMPLE IF BIT C12 IS FAULTY, THEN CHIP E79
 IS THE MOST PROBABLE SOURCE OF THE ERROR. IF REPAIRING
 THAT CHIP DOES NOT REMOVE THE FAULT THEN TRY EACH OF THE
 CHIPS ASSOCIATED WITH BITS A12, B12 AND D12 SHOULD BE TRIED
 WITH EQUAL PROBABILITY OF THE FAULT BEING
 IN ANY ONE OF THESE OTHER THREE CHIPS, TRY CHIPS E61, E86 AND E78.
- * 2.) IF THERE ARE FOUR CONSECUTIVE BITS IN ERROR, FOLLOWING THE
 PATTERN:
 $LN, LN+1, LN+2$ AND $LN+3$ WHERE 'L' IS A, B, C
 OR D.
 AND N=0,4,8 OR 12
 THEN THE ABOVE TABLE SHOULD DIRECTLY IDENTIFY THE
 FAILING CHIP.
- * 3.) IF FOUR BITS ARE DROPPED WHICH FIT THE PATTERN:
 AN, BN, CN AND DN WHERE N=15,14,... OR 0


```

012006 004737 013572      JSR    PC,@#GSETUP      ;LOAD TEST PATTERN.
012012 012703 000102      MOV    #102,R3
012016      G4:          LDD    (R0),AC0
012016 172410              STD    AC0,AC0
012020 174000              LDD    AC0,AC0      ;STORE THE TEST PATTERN.
012022 172400              STD    AC0,(R1)
012024 174011              JSR    PC,@#GCMP      ;COMPARE THE DATA READ WITH
012026 004737 013670              ;THAT WHICH WAS WRITTEN.

012032 005737 014110      TST    @#GFLAG1
012036 001004              BNE    G5
012040 005137 014110      COM    @#GFLAG1
012044 000241              CLC
012046 000401              BR     G6
012050 000261      G5:          SEC
012052 006160 000006      G6:          ROL    6(R0)      ;GENERATE THE NEXT TEST PATTERN.
012056 006160 000004      ROL    4(R0)
012062 006160 000002      ROL    2(R0)
012066 006110              ROL    (R0)
012070 004737 013650      JSR    PC,@#GRESET      ;RESET DEFAULT PATTERN IN OUTPUT
;BUFFER.

012074 077330              SOB    R3,G4
012076 004737 014006      JSR    PC,@#GSUM      ;TYPE ERROR SUMMARY.
2521 ;TEST ACCUMULATOR 1 WITH FLOATING ONE
012102 012737 042252 001244      MOV    #MNUM1,@#$TMP5
012110 012737 012140 001236      MOV    #G7,@#$TMP2
012116 012700 014114      MOV    #GPAT00,R0
012122 012701 014154      MOV    #GDAT00,R1
012126 104413              LPERR
012130 004737 013572      JSR    PC,@#GSETUP      ;SET UP THE LOOP ON ERROR ADDRESS.
012134 012703 000102      MOV    #102,R3      ;LOAD TEST PATTERN.
012140      G7:          LDD    (R0),AC0
012140 172410              STD    AC0,AC1
012142 174001              LDD    AC1,AC0      ;STORE THE TEST PATTERN.
012144 172401              STD    AC0,(R1)
012146 174011              JSR    PC,@#GCMP      ;COMPARE THE DATA READ WITH
012150 004737 013670              ;THAT WHICH WAS WRITTEN.

012154 005737 014110      TST    @#GFLAG1
012160 001004              BNE    G10
012162 005137 014110      COM    @#GFLAG1
012166 000261              SEC
012170 000401              BR     G11
012172 000241      G10:         CLC
012174 006160 000006      G11:         ROL    6(R0)      ;GENERATE THE NEXT TEST PATTERN.
012174 006160 000004      ROL    4(R0)
012200 006160 000002      ROL    2(R0)
012204 006160 000002      ROL    (R0)
012210 006110              JSR    PC,@#GRESET      ;RESET DEFAULT PATTERN IN OUTPUT
012212 004737 013650              ;BUFFER.

012216 077330              SOB    R3,G7
012220 004737 014006      JSR    PC,@#GSUM      ;TYPE ERROR SUMMARY.
2522 ;TEST ACCUMULATOR 1 WITH FLOATING ZERO
012224 012737 042252 001244      MOV    #MNUM1,@#$TMP5
012232 012737 012262 001236      MOV    #G12,@#$TMP2
012240 012700 014124      MOV    #GPAT10,R0
012244 012701 014154      MOV    #GDAT00,R1
  
```

```

012250 104413          LPERR
012252 004737 013572  JSR    PC,@#GSETUP      ;SET UP THE LOOP ON ERROR ADDRESS.
012256 012703 000102  MOV    #102,R3          ;LOAD TEST PATTERN.
                                G12:
012262 172410          LDD    (R0),AC0
012264 174001          STD    AC0,AC1
012266 172401          LDD    AC1,AC0          ;STORE THE TEST PATTERN.
012270 174011          STD    AC0,(R1)
012272 004737 013670  JSR    PC,@#GCMP        ;COMPARE THE DATA READ WITH
                                ;THAT WHICH WAS WRITTEN.

012276 005737 014110  TST    @#GFLAG1
012302 001004          BNE    G13
012304 005137 014110  COM    @#GFLAG1
012310 000241          CLC
012312 000401          BR     G14
012314 000261          SEC
012316 006160 000006  G13:  ROL    6(R0)        ;GENERATE THE NEXT TEST PATTERN.
012322 006160 000004  G14:  ROL    4(R0)
012326 006160 000002  ROL    2(R0)
012332 006110          ROL    (R0)
012334 004737 013650  JSR    PC,@#GRESET     ;RESET DEFAULT PATTERN IN OUTPUT
                                ;BUFFER.

012340 077330          SOB    R3,G12
012342 004737 014006  JSR    PC,@#GSUM        ;TYPE ERROR SUMMARY.
2523  ;TEST ACCUMULATOR 2 WITH FLOATING ONE
012346 012737 042257 001244  MOV    #MNUM2,@#$TMP5
012354 012737 012404 001236  MOV    #G15,@#$TMP2
012362 012700 014114  MOV    #GPAT00,R0
012366 012701 014154  MOV    #GDAT00,R1
012372 104413          LPERR
012374 004737 013572  JSR    PC,@#GSETUP      ;SET UP THE LOOP ON ERROR ADDRESS.
012400 012703 000102  MOV    #102,R3          ;LOAD TEST PATTERN.
                                G15:
012404 172410          LDD    (R0),AC0
012406 174002          STD    AC0,AC2
012410 172402          LDD    AC2,AC0          ;STORE THE TEST PATTERN.
012412 174011          STD    AC0,(R1)
012414 004737 013670  JSR    PC,@#GCMP        ;COMPARE THE DATA READ WITH
                                ;THAT WHICH WAS WRITTEN.

012420 005737 014110  TST    @#GFLAG1
012424 001004          BNE    G16
012426 005137 014110  COM    @#GFLAG1
012432 000261          SEC
012434 000401          BR     G17
012436 000241          CLC
012440 006160 000006  G16:  ROL    6(R0)        ;GENERATE THE NEXT TEST PATTERN.
012444 006160 000004  G17:  ROL    4(R0)
012450 006160 000002  ROL    2(R0)
012454 006110          ROL    (R0)
012456 004737 013650  JSR    PC,@#GRESET     ;RESET DEFAULT PATTERN IN OUTPUT
                                ;BUFFER.

012462 077330          SOB    R3,G15
012464 004737 014006  JSR    PC,@#GSUM        ;TYPE ERROR SUMMARY.
2524  ;TEST ACCUMULATOR 2 WITH FLOATING ZERO
012470 012737 042257 001244  MOV    #MNUM2,@#$TMP5
012476 012737 012526 001236  MOV    #G20,@#$TMP2
012504 012700 014124  MOV    #GPAT10,R0

```

```

012510 012701 014154      MOV      #GDAT00,R1
012514 104413      LPERR
012516 004737 013572      JSR      PC,@#GSETUP      ;SET UP THE LOOP ON ERROR ADDRESS.
012522 012703 000102      MOV      #102,R3          ;LOAD TEST PATTERN.
012526                G20:
012526 172410      LDD      (R0),AC0
012530 174002      STD      AC0,AC2
012532 172402      LDD      AC2,AC0          ;STORE THE TEST PATTERN.
012534 174011      STD      AC0,(R1)
012536 004737 013670      JSR      PC,@#GCMP        ;COMPARE THE DATA READ WITH
                                ;THAT WHICH WAS WRITTEN.

012542 005737 014110      TST      @#GFLAG1
012546 001004      BNE      G21
012550 005137 014110      COM      @#GFLAG1
012554 000241      CLC
012556 000401      BR       G22
012560 000261      SEC
012562 006160 000006      G21: ROL      6(R0)          ;GENERATE THE NEXT TEST PATTERN.
012566 006160 000004      G22: ROL      4(R0)
012572 006160 000002      ROL      2(R0)
012576 006110      ROL      (R0)
012600 004737 013650      JSR      PC,@#GRESET      ;RESET DEFAULT PATTERN IN OUTPUT
                                ;BUFFER.

012604 077330      SOB      R3,G20
012606 004737 014006      JSR      PC,@#GSUM        ;TYPE ERROR SUMMARY.
2525 ;TEST ACCUMULATOR 3 WITH FLOATING ONE
012612 012737 042264 001244      MOV      #MNUM3,@#STMP5
012620 012737 012650 001236      MOV      #G23,@#STMP2
012626 012700 014114      MOV      #GPAT00,R0
012632 012701 014154      MOV      #GDAT00,R1
012636 104413      LPERR
012640 004737 013572      JSR      PC,@#GSETUP      ;SET UP THE LOOP ON ERROR ADDRESS.
012644 012703 000102      MOV      #102,R3          ;LOAD TEST PATTERN.
012650                G23:
012650 172410      LDD      (R0),AC0
012652 174003      STD      AC0,AC3
012654 172403      LDD      AC3,AC0          ;STORE THE TEST PATTERN.
012656 174011      STD      AC0,(R1)
012660 004737 013670      JSR      PC,@#GCMP        ;COMPARE THE DATA READ WITH
                                ;THAT WHICH WAS WRITTEN.

012664 005737 014110      TST      @#GFLAG1
012670 001004      BNE      G24
012672 005137 014110      COM      @#GFLAG1
012676 000261      SEC
012700 000401      BR       G25
012702 000241      CLC
012704 006160 000006      G24: ROL      6(R0)          ;GENERATE THE NEXT TEST PATTERN.
012710 006160 000004      G25: ROL      4(R0)
012714 006160 000002      ROL      2(R0)
012720 006110      ROL      (R0)
012722 004737 013650      JSR      PC,@#GRESET      ;RESET DEFAULT PATTERN IN OUTPUT
                                ;BUFFER.

012726 077330      SOB      R3,G23
012730 004737 014006      JSR      PC,@#GSUM        ;TYPE ERROR SUMMARY.
2526 ;TEST ACCUMULATOR 3 WITH FLOATING ZERO
012734 012737 042264 001244      MOV      #MNUM3,@#STMP5
012742 012737 012772 001236      MOV      #G26,@#STMP2

```

```

012750 012700 014124      MOV      #GPAT10,R0
012754 012701 014154      MOV      #GDAT00,R1
012760 104413             LPERR
012762 004737 013572      JSR      PC,@#GSETUP      ;SET UP THE LOOP ON ERROR ADDRESS.
012766 012703 000102      MOV      #102,R3          ;LOAD TEST PATTERN.
012772                               G26:
012772 172410             LDD      (R0),AC0
012774 174003             STD      AC0,AC3
012776 172403             LDD      AC3,AC0          ;STORE THE TEST PATTERN.
013000 4011              STD      AC0,(R1)
013002 004737 013670      JSR      PC,@#GCMP
                                ;COMPARE THE DATA READ WITH
                                ;THAT WHICH WAS WRITTEN.

013006 005737 014110      TST      @#GFLAG1
013012 001004             BNE      G27
013014 005137 014110      COM      @#GFLAG1
013020 000241             CLC
013022 000401             BR       G30
013024 000261             SEC
013026 006160 000006      ROL      6(R0)            ;GENERATE THE NEXT TEST PATTERN.
013032 006160 000004      ROL      4(R0)
013036 006160 000002      ROL      2(R0)
013042 006110             ROL      (R0)
013044 004737 013650      JSR      PC,@#GRESET     ;RESET DEFAULT PATTERN IN OUTPUT
                                ;BUFFER.

013050 077330             SOB      R3,G26
013052 004737 014006      JSR      PC,@#GSUM       ;TYPE ERROR SUMMARY.
2527 ;TEST ACCUMULATOR 4 WITH FLOATING ONE
013056 012737 042273 001244  MOV      #MNUM4,@#STMP5
013064 012737 013114 001236  MOV      #G31,@#STMP2
013072 012700 014114      MOV      #GPAT00,R0
013076 012701 014154      MOV      #GDAT00,R1
013102 104413             LPERR
013104 004737 013572      JSR      PC,@#GSETUP     ;SET UP THE LOOP ON ERROR ADDRESS.
013110 012703 000102      MOV      #102,R3          ;LOAD TEST PATTERN.
013114                               G31:
013114 172410             LDD      (R0),AC0
013116 174004             STD      AC0,AC4
013120 172404             LDD      AC4,AC0          ;STORE THE TEST PATTERN.
013122 174011             STD      AC0,(R1)
013124 004737 013670      JSR      PC,@#GCMP
                                ;COMPARE THE DATA READ WITH
                                ;THAT WHICH WAS WRITTEN.

013130 005737 014110      TST      @#GFLAG1
013134 001004             BNE      G32
013136 005137 014110      COM      @#GFLAG1
013142 000261             SEC
013144 000401             BR       G33
013146 000241             CLC
013150 006160 000006      ROL      6(R0)            ;GENERATE THE NEXT TEST PATTERN.
013154 006160 000004      ROL      4(R0)
013160 006160 000002      ROL      2(R0)
013164 006110             ROL      (R0)
013166 004737 013650      JSR      PC,@#GRESET     ;RESET DEFAULT PATTERN IN OUTPUT
                                ;BUFFER.

013172 077330             SOB      R3,G31
013174 004737 014006      JSR      PC,@#GSUM       ;TYPE ERROR SUMMARY.
2528 ;TEST ACCUMULATOR 4 WITH FLOATING ZERO
013200 012737 042273 001244  MOV      #MNUM4,@#STMP5
  
```

```

013206 012737 013236 001236      MOV      #G34,@#STMP2
013214 012700 014124      MOV      #GPAT10,R0
013220 012701 014154      MOV      #GDAT00,R1
013224 104413      LPERR
013226 004737 013572      JSR      PC,@#GSETUP      ;SET UP THE LOOP ON ERROR ADDRESS.
013232 012703 000102      MOV      #102,R3          ;LOAD TEST PATTERN.
013236      G34:
013236 172410      LDD      (R0),AC0
013240 174004      STD      AC0,AC4
013242 172404      LDD      AC4,AC0          ;STORE THE TEST PATTERN.
013244 174011      STD      AC0,(R1)
013246 004737 013670      JSR      PC,@#GCMP        ;COMPARE THE DATA READ WITH
                                ;THAT WHICH WAS WRITTEN.

013252 005737 014110      TST      @#GFLAG1
013256 001004      BNE      G35
013260 005137 014110      COM      @#GFLAG1
013264 000241      CLC
013266 000401      BR       G36
013270 000261      G35: SEC
013272 006160 000006      G36: ROL      6(R0)        ;GENERATE THE NEXT TEST PATTERN.
013276 006160 000004      ROL      4(R0)
013302 006160 000002      ROL      2(R0)
013306 006110      ROL      (R0)
013310 004737 013650      JSR      PC,@#GRESET     ;RESET DEFAULT PATTERN IN OUTPUT
                                ;BUFFER.

013314 077330      SOB      R3,G34
013316 004737 014006      JSR      PC,@#GSUM       ;TYPE ERROR SUMMARY.
2529 ;TEST ACCUMULATOR 5 WITH FLOATING ONE
013322 012737 042301 001244      MOV      #MNUM5,@#STMP5
013330 012737 013360 001236      MOV      #G37,@#STMP2
013336 012700 014114      MOV      #GPAT00,R0
013342 012701 014154      MOV      #GDAT00,R1
013346 104413      LPERR
013350 004737 013572      JSR      PC,@#GSETUP     ;SET UP THE LOOP ON ERROR ADDRESS.
013354 012703 000102      MOV      #102,R3          ;LOAD TEST PATTERN.
013360      G37:
013360 172410      LDD      (R0),AC0
013362 174005      STD      AC0,AC5
013364 172405      LDD      AC5,AC0          ;STORE THE TEST PATTERN.
013366 174011      STD      AC0,(R1)
013370 004737 013670      JSR      PC,@#GCMP        ;COMPARE THE DATA READ WITH
                                ;THAT WHICH WAS WRITTEN.

013374 005737 014110      TST      @#GFLAG1
013400 001004      BNE      G40
013402 005137 014110      COM      @#GFLAG1
013406 000261      SEC
013410 000401      BR       G41
013412 000241      G40: CLC
013414 006160 000006      G41: ROL      6(R0)        ;GENERATE THE NEXT TEST PATTERN.
013420 006160 000004      ROL      4(R0)
013424 006160 000002      ROL      2(R0)
013430 006110      ROL      (R0)
013432 004737 013650      JSR      PC,@#GRESET     ;RESET DEFAULT PATTERN IN OUTPUT
                                ;BUFFER.

013436 077330      SOB      R3,G37
013440 004737 014006      JSR      PC,@#GSUM       ;TYPE ERROR SUMMARY.
2530 ;TEST ACCUMULATOR 5 WITH FLOATING ZERO

```

```

013444 012737 042301 0C1244      MOV      #MNUM5,@#STMP5
013452 012737 013502 001236      MOV      #G42,@#STMP2
013460 012700 014124      MOV      #GPAT10,R0
013464 012701 014154      MOV      #GDAT00,R1
013470 104413      LPERR
013472 004737 013572      JSR      PC,@#GSETUP      ;SET UP THE LOOP ON ERROR ADDRESS.
013476 012703 000102      MOV      #102,R3          ;LOAD TEST PATTERN.
013502
013502 172410      G42:      LDD      (R0),AC0
013504 174005      STD      AC0,AC5
013506 172405      LDD      AC5,AC0          ;STORE THE TEST PATTERN.
013510 174011      STD      AC0,(R1)
013512 004737 013670      JSR      PC,@#GCMP        ;COMPARE THE DATA READ WITH
                                ;THAT WHICH WAS WRITTEN.

013516 005737 014110      TST      @#GFLAG1
013522 001004      BNE     G43
013524 005137 014110      COM     @#GFLAG1
013530 000241      CLC
013532 000401      BR     G44
013534 000261      G43:      SEC
013536 006160 000006      G44:      ROL     6(R0)           ;GENERATE THE NEXT TEST PATTERN.
013542 006160 000004      ROL     4(R0)
013546 006160 000002      ROL     2(R0)
013552 006110      ROL     (R0)
013554 004737 013650      JSR      PC,@#GRESET      ;RESET DEFAULT PATTERN IN OUTPUT
                                ;BUFFER.

013560 077330      SOB     R3,G42
013562 004737 014006      JSR      PC,@#GSUM        ;TYPE ERROR SUMMARY.

2531
2532 013566 000137 014166      JMP     @#GDONE
2533
2534      ;USE THIS ROUTINE TO INITIALIZE ALL THE DATA BUFFERS.
2535 013572 012705 014110      GSETUP: MOV     #GFLAG1,R5
2536 013576 012704 000026      MOV     #26,R4
2537 013602 005025      1$:     CLR     (R5)+
2538 013604 077402      SOB     R4,1$
2539
2540 013606 012705 014124      MOV     #GPAT10,R5
2541 013612 012704 000010      MOV     #10,R4
2542 013616 005125      2$:     COM     (R5)+
2543 013620 077402      SOB     R4,2$
2544
2545 013622 020067 000266      GS1:    CMP     R0,GPAT00
2546 013626 001401      BEQ     3$
2547 013630 000207      RTS     PC
2548
2549 013632 012705 014154      3$:     MOV     #GDAT00,R5
2550 013636 012704 000004      MOV     #4,R4
2551 013642 005125      4$:     COM     (R5)+
2552 013644 077402      SOB     R4,4$
2553 013646 000207      RTS     PC
2554
2555 013650 012705 014154      GRESET: MOV     #GDAT00,R5
2556 013654 012704 000004      MOV     #4,R4
2557 013660 005025      1$:     CLR     (R5)+
2558 013662 077402      SOB     R4,1$
2559 013664 000137 013622      JMP     @#GS1
  
```

```

2560
2561 :SEE IF THE DATA WRITTEN MATCHES THE DATA READ.
2562 013670 012705 014154 GCMP: MOV #GDAT00,R5
2563 013674 012704 000004 MOV #4,R4
2564 013700 010002 MOV R0,R2
2565 013702 022225 1$: CMP (R2)+,(R5)+
2566 013704 001402 BEQ 2$
2567 013706 000137 013716 JMP @#GERR1
2568 013712 077405 2$: SOB R4,1$
2569 013714 000207 RTS PC
2570
2571 :COME HERE TO REPORT AND RECORD ERRORS.
2572 013716 012637 014164 GERR1: MOV (SP)+,@#GADR ;SAVE THE RETURN ADDRESS.
2573 013722 010003 MOV R0,R3 ;COMPUTE 'OR' OF BAD DATA.
2574 013724 012705 014144 MOV #GORO,R5
2575 013730 012704 000004 MOV #4,R4
2576 013734 052325 1$: BIS (R3)+,(R5)+
2577 013736 077402 SOB R4,1$
2578
2579 013740 010003 MOV R0,R3 ;COMPUTE 'AND' OF BAD DATA.
2580 013742 012705 014134 MOV #GAND0,R5
2581 013746 012704 000004 MOV #4,R4
2582 013752 012302 2$: MOV (R3)+,R2
2583 013754 005102 COM R2
2584 013756 040225 BIC R2,(R5)+
2585 013760 077404 SOB R4,2$
2586
2587 013762 005237 014112 INC @#GFLAG2 ;INCREMENT ERROR COUNT.
2588 013766 010037 001240 MOV R0,@#STMP3
2589 013772 012737 014154 001242 MOV #GDAT00,@#STMP4
2590 014000 104044 3$: ERROR +44
2591 014002 000177 000156 JMP @GADR
2592
2593 :SEE IF ANY ERRORS HAVE OCCURRED AND WHETHER OR NOT AN ERROR SUMMARY
2594 :SHOULD BE TYPED.
2595 014006 005737 014112 GSUM: TST @#GFLAG2 ;ANY ERRORS?
2596 014012 001435 BEQ 3$
2597
2598 014014 032777 020000 165116 BIT #SW13,@SWR ;INHIBIT ERROR PRINT OUT?
2599 014022 001404 BEQ 1$
2600 014024 032777 000200 165106 BIT #SW7,@SWR ;PRINT SUMMARY?
2601 014032 001425 BEQ 3$
2602
2603 014034 013737 014112 001246 1$: MOV @#GFLAG2,@#STMP6 ;YES PRINT SUMMARY.
2604 014042 012737 014134 001240 MOV #GAND0,@#STMP3
2605 014050 012737 014144 001242 MOV #GORO,@#STMP4
2606 014056 012637 014164 MOV (SP)+,@#GADR ;SAVE RETURN ADDRESS.
2607 014062 012737 014076 001116 MOV #2,@#SERRPC
2608 014070 112737 000045 001114 MOV #45,@#SITEMB
2609 014076 004737 037602 2$: JSR PC,@#ERTYPE
2610 014102 000177 000056 JMP @GADR
2611 014106 000207 3$: RTS PC
  
```

```

2613
2614
2615 014110 000000 GFLAG1: 0
2616 014112 000000 GFLAG2: 0
2617
2618 014114 000000 GPAT00: 0
2619 014116 000000 GPAT01: 0
2620 014120 000000 GPAT02: 0
2621 014122 000000 GPAT03: 0
2622
2623 014124 177777 GPAT10: -1
2624 014126 177777 GPAT11: -1
2625 014130 177777 GPAT12: -1
2626 014132 177777 GPAT13: -1
2627
2628 014134 177777 GAND0: -1
2629 014136 177777 GAND1: -1
2630 014140 177777 GAND2: -1
2631 014142 177777 GAND3: -1
2632
2633 014144 000000 GORO: 0
2634 014146 000000 GOR1: 0
2635 014150 000000 GOR2: 0
2636 014152 000000 GOR3: 0
2637
2638 014154 000000 GDAT00: 0
2639 014156 000000 GDAT01: 0
2640 014160 000000 GDAT02: 0
2641 014162 000000 GDAT03: 0
2642
2643 014164 000000 GADR: 0
2644
2645 014166 GDONE:
      014166 104412 RSETUP
  
```

```

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).
  
```

2646
2647
2654

```

:*****
:*TEST 12      FPP ACCUMULATORS DUAL ADDRESS TEST
:*
:*THIS TEST PERFORMS A DUAL ADDRESSING TEST ON THE FLOATING ACCUMULATORS.
:*NOTE THAT ACCUMULATOR ZERO IS USED TO ACCESS ALL THE OTHERS.
:*
:*****
  
```

```

2655 014170 000004
      014172 104413
2656
2657 014174 005037 014720
2658 014200 012700 014722
2659 014204 012701 015042
2660 014210 012703 000024
2661 014214 012120
2662 014216 077302
2663
  
```

```

TST12: SCOPE
        LPERR          ;SET UP THE LOOP ON ERROR ADDRESS.

H1:    CLR    @HFLAG
        MOV    #HA1W,R0          ;INITIALIZE THE LOAD BUFFER DATA.
        MOV    #HDAT1,R1
        MOV    #24,R3
H2:    MOV    (R1)+,(R0)+
        SOB   R3,H2
  
```



```

2664 014220 004767 000422          JSR      PC,HCLR          ;CLEAR THE OUTPUT DATA BUFFER.
2665
2666 014224 170011
2667          H3:      SETD
;LOAD ACCUMULATOR 1
          MOV      #HA1W,R0
          LDD      (R0),AC0
          STD      AC0,AC1
2668          ;LOAD ACCUMULATOR 2
          MOV      #HA2W,R0
          LDD      (R0),AC0
          STD      AC0,AC2
2669          ;LOAD ACCUMULATOR 3
          MOV      #HA3W,R0
          LDD      (R0),AC0
          STD      AC0,AC3
2670          ;LOAD ACCUMULATOR 4
          MOV      #HA4W,R0
          LDD      (R0),AC0
          STD      AC0,AC4
2671          ;LOAD ACCUMULATOR 5
          MOV      #HA5W,R0
          LDD      (R0),AC0
          STD      AC0,AC5
2672
2673 014276 004737 014532          H4:      JSR      PC,@#HSTD          ;GO READ ALL ACCUMULATORS BACK.
2674
2675 014302 004737 014610          JSR      PC,@#HCMP          ;SEE IF DATA IS CORRECT.
2676
2677          ;COMPLIMENT EACH WORD OF THE DATA STORED IN ACCUMULATOR 1,
          ;RELOAD THAT ACCUMULATOR, READ ALL THE ACCUMULATORS BACK AND CHECK
          ;THE DATA.
          MOV      #HA1W,R0
          MOV      #4,R2
          MOV      R0,R1
2678          H5:      COM      (R1)+
          LDD      (R0),AC0
          STD      AC0,AC1
          JSR      PC,@#HSTD          ;READ ALL THE ACCUMULATORS BACK.
          JSR      PC,@#HCMP          ;CHECK THE DATA.
          SOB      R2,H5
          ;COMPLIMENT EACH WORD OF THE DATA STORED IN ACCUMULATOR 2,
          ;RELOAD THAT ACCUMULATOR, READ ALL THE ACCUMULATORS BACK AND CHECK
          ;THE DATA.
          MOV      #HA2W,R0
          MOV      #4,R2
          MOV      R0,R1
2679          H6:      COM      (R1)+
          LDD      (R0),AC0
          STD      AC0,AC2
          JSR      PC,@#HSTD          ;READ ALL THE ACCUMULATORS BACK.
          JSR      PC,@#HCMP          ;CHECK THE DATA.
          SOB      R2,H6
          ;COMPLIMENT EACH WORD OF THE DATA STORED IN ACCUMULATOR 3,
          ;RELOAD THAT ACCUMULATOR, READ ALL THE ACCUMULATORS BACK AND CHECK
          ;THE DATA.
          MOV      #HA3W,R0
          MOV      #4,R2
  
```

014402	010001			MOV	R0,R1		
014404	005121			H7: COM	(R1)+		
014406	172410			LDD	(R0),AC0		
014410	174003			STD	AC0,AC3		
014412	004737	014532		JSR	PC,@#HSTD		:READ ALL THE ACCUMULATORS BACK.
014416	004737	014610		JSR	PC,@#HCMP		:CHECK THE DATA.
014422	077210			SOB	R2,H7		
2680							:COMPLIMENT EACH WORD OF THE DATA STORED IN ACCUMULATOR 4, :RELOAD THAT ACCUMULATOR, READ ALL THE ACCUMULATORS BACK AND CHECK :THE DATA.
014424	012700	014752		MOV	#HA4W,R0		
014430	012702	000004		MOV	#4,R2		
014434	010001			MOV	R0,R1		
014436	005121			H10: COM	(R1)+		
014440	172410			LDD	(R0),AC0		
014442	174004			STD	AC0,AC4		
014444	004737	014532		JSR	PC,@#HSTD		:READ ALL THE ACCUMULATORS BACK.
014450	004737	014610		JSR	PC,@#HCMP		:CHECK THE DATA.
014454	077210			SOB	R2,H10		
2681							:COMPLIMENT EACH WORD OF THE DATA STORED IN ACCUMULATOR 5, :RELOAD THAT ACCUMULATOR, READ ALL THE ACCUMULATORS BACK AND CHECK :THE DATA.
014456	012700	014762		MOV	#HA5W,R0		
014462	012702	000004		MOV	#4,R2		
014466	010001			MOV	R0,R1		
014470	005121			H11: COM	(R1)+		
014472	172410			LDD	(R0),AC0		
014474	174005			STD	AC0,AC5		
014476	004737	014532		JSR	PC,@#HSTD		:READ ALL THE ACCUMULATORS BACK.
014502	004737	014610		JSR	PC,@#HCMP		:CHECK THE DATA.
014506	077210			SOB	R2,H11		
2682							
2683	014510	005737	014720	TST	@#HFLAG		
2684	014514	001402		BEQ	H12		
2685	014516	000137	015112	JMP	@#HDONE		
2686							
2687	014522	005137	014720	H12: COM	@#HFLAG		
2688	014526	000137	014224	JMP	@#H3		
2689							
2690							:STORE ALL ACCUMULATORS IN THE OUTPUT BUFFERS.
2691	014532	004737	014646	HSTD: JSR	PC,@#HCLR		:CLEAR ALL OUTPUT BUFFERS.
2692							:STORE ACCUMULATOR 1
	014536	012704	014772	MOV	#HA1R,R4		
	014542	172401		LDD	AC1,AC0		
	014544	174014		STD	AC0,(R4)		
2693							:STORE ACCUMULATOR 2
	014546	012704	015002	MOV	#HA2R,R4		
	014552	172402		LDD	AC2,AC0		
	014554	174014		STD	AC0,(R4)		
2694							:STORE ACCUMULATOR 3
	014556	012704	015012	MOV	#HA3R,R4		
	014562	172403		LDD	AC3,AC0		
	014564	174014		STD	AC0,(R4)		
2695							:STORE ACCUMULATOR 4
	014566	012704	015022	MOV	#HA4R,R4		
	014572	172404		LDD	AC4,AC0		
	014574	174014		STD	AC0,(R4)		

```

2696          014576 012704 015032          ;STORE ACCUMULATOR 5
          014602 172405
          014604 174014          MOV #HA5R,R4
          014606 000207          LDD AC5,AC0
          2697          STD AC0,(R4)
          2698          RTS PC
          2699          ;COMPARE DATA LOADED WITH DATA READ.
2700 014610 012637 014716          HCMP: MOV (SP)+,@#HADR          ;SAVE RETURN ADDRESS.
          014614 012703 014722          MOV #HA1W,R3
          014620 012704 014772          MOV #HA1R,R4
          014624 012705 000024          MOV #24,R5
          014630 022324          HCMP1: CMP (R3)+,(R4)+
          014632 001402          BEQ HCMP2
          014634 000137 014664          JMP @#HERROR
          014640 077505          HCMP2: SOB R5,HCMP1
          014642 000177 000050          JMP @#HADR
          2709          ;CLEAR THE DATA OUTPUT BUFFER.
          2710          HCLR: MOV #HA1R,R4
          014646 012704 014772          MOV #24,R5
          014652 012705 000024          HCLR1: CLR (R4)+
          014656 005024          SOB R5,HCLR1
          014660 077502          RTS PC
          014662 000207
          2716          ;REPORT ERROR.
          2717          HERROR:
          014664          MOV #HA1W,R3
          014664 012703 014722          MOV #STMP2,R4
          014670 012704 001236          MOV #12,R5
          014674 012705 000012          1$: MOV R3,(R4)+
          014700 010324          ADD #10,R3
          014702 062703 000010          SOB R5,1$
          014706 077504          2$: ERROR +46
          014710 104046          JMP @#HDONE
          014712 000137 015112
          2727          HADR: 0
          2728          HFLAG: 0
          2729 014716 000000
          2730 014720 000000
          2731
          2732 014722 000000 000000 000000 HA1W: .WORD 0,0,0,0
          014730 000000
          2733 014732 000000 000000 000000 HA2W: .WORD 0,0,0,0
          014740 000000
          2734 014742 000000 000000 000000 HA3W: .WORD 0,0,0,0
          014750 000000
          2735 014752 000000 000000 000000 HA4W: .WORD 0,0,0,0
          014760 000000
          2736 014762 000000 000000 000000 HA5W: .WORD 0,0,0,0
          014770 000000
          2737
          2738 014772 000000 000000 000000 HA1R: .WORD 0,0,0,0
          015000 000000
          2739 015002 000000 000000 000000 HA2R: .WORD 0,0,0,0
          015010 000000
          2740 015012 000000 000000 000000 HA3R: .WORD 0,0,0,0
          015020 000000
          2741 015022 000000 000000 000000 HA4R: .WORD 0,0,0,0
  
```

```

2742 015030 000000
      015032 000000 000000 000000 HASR: .WORD 0,0,0,0
      015040 000000
2743
2744 015042 073567 073567 073567 HDAT1: .WORD 73567,73567,73567,73567
      015050 073567
2745 015052 063146 063146 063146 HDAT2: .WORD 63146,63146,63146,63146
      015060 063146
2746 015062 010421 010421 010421 HDAT3: .WORD 10421,10421,10421,10421
      015070 010421
2747 015072 031463 031463 031463 HDAT4: .WORD 31463,31463,31463,31463
      015100 031463
2748 015102 042104 042104 042104 HDAT5: .WORD 42104,42104,42104,42104
      015110 042104
2749
2750 015112
      015112 104412 HDONE: RSETUP
  
```

```

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).
  
```

2751
2752
2760

```

:*****
:*TEST 13 FSRC MODE 0 WITH ILLEGAL ACCUMULATOR TEST
:*
:*THIS IS A TEST OF FSRC MODE 0 WITH ACCUMULATORS 6 AND 7. USE OF
:*EITHER OF THESE NON-EXISTENT ACCUMULATORS SHOULD RESULT IN A TRAP TO 244
:*WITH FEC=2 (ILLEGAL FPP INSTRUCTION).
:*
:*****
  
```

```

2761 015114 000004
      015116 104413
      015116 170011
2762 015120 170011
2763 015122 012700 015626
2764 015126 172410
2765
2766 015130 012737 015326 000244
2767
2768
2769 015136 012700 000001
2770
2771 015142 012737 015536 000004
2772 015150 005003
2773
2774 015152 172407
2775 015154 170000
2776 015156 005203
2777 015160 005203
2778
2779 015162 012701 015636
2780 015166 174011
2781
2782 015170 012701 015636
2783 015174 012702 015626
2784 015200 012703 000004
  
```

```

TST13: SCOPE
S1:
      LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
      SETD ;SET FD
      MOV #SPAT10,R0 ;LOAD ACO
      LDD (R0),AC0
      MOV #SERR0,@#FPVECT ;USE OF THE NON-EXISTENT AC-
                          ;CUMULATOR SHOULD RESULT IN
                          ;A TRAP TO 244.
                          ;A FAILURE IN THE FSRC FLOWS
                          ;WILL RESULT IN AN ODD ADDRESS
                          ;TRAP TO 4.
      MOV #1,R0
      MOV #SERR1,@#ERRVECT
      CLR R3
S2: LDD AC7,AC0
S3: CFCC
      INC R3
S4: INC R3
      MOV #SDAT00,R1 ;NO TRAP OCCURRED!!
      STD ACO,(R1) ;SEE IF ACO WAS MODIFIED.
      MOV #SDAT00,R1
      MOV #SPAT10,R2
      MOV #4,R3
  
```

```

2785 015204 022122          S5:  CMP      (R1)+,(R2)+
2786 015206 001402          BEQ      S6
2787 015210 000137 015466  JMP      @#SERR2
2788 015214 077305          S6:  SOB      R3,S5
2789
2790 015216 000137 015512          JMP      @#SERR3
2791
2792          ;NOW TEST AC6.
2793 015222          S7:
      015222 104413          LPERR
      015224 170011          SETD          ;SET UP THE LOOP ON ERROR ADDRESS.
2794 015224 170011
2795
2796 015226 012700 015626          MOV      #SPAT10,R0          ;LOAD ACO
2797 015232 172410          LDD      (R0),AC0
2798
2799 015234 012737 015404 000244  MOV      #SERR4,@#FPVECT
2800 015242 012700 000001          MOV      #1,R0
2801 015246 012737 015570 000004  MOV      #SERR5,@#ERRVECT
2802 015254 005003          CLR      R3
2803
2804 015256 172406          S8:  LDD      AC6,AC0
2805 015260 170000          S9:  CFCC
2806 015262 005203          INC      R3
2807 015264 005203          S10: INC      R3
2808
2809 015266 012701 015636          MOV      #SDAT00,R1
2810 015272 174011          STD      ACO,(R1)          ;NO TRAP! GET ACO.
2811
2812 015274 012701 015636          MOV      #SDAT00,R1          ;WAS ACO MODIFIED.
2813 015300 012702 015626          MOV      #SPAT10,R2
2814 015304 012703 000004          MOV      #4,R3
2815 015310 022122          S11: CMP      (R1)+,(R2)+
2816 015312 001402          BEQ      S12
2817 015314 000137 015500          JMP      @#SERR6
2818 015320 077305          S12: SOB      R3,S11
2819 015322 000137 015524          JMP      @#SERR7
2820
2821          ;TRAPPED TO 244.
2822 015326 021627 015154          SERR0: CMP      (SP),#S3          ;PC OF TRAP CORRECT?
2823 015332 001402          BEQ      1$
2824 015334 000137 040234          JMP      @#FPSPUR
2825
2826 015340 012737 015222 015622  1$:  MOV      #S7,@#SADR
2827
2828 015346 011637 001236          SERR10: MOV      (SP),@#$TMP2
2829 015352 022626          CMP      (SP)+,(SP)+
2830 015354 005004          CLR      R4
2831 015356 170204          STFPS   R4          ;IS FPS CORRECT?
2832 015360 022704 100200          CMP      #100200,R4
2833 015364 001020          BNE     SERR15
2834
2835 015366 005004          CLR      R4
2836 015370 170304          STST   R4          ;IS FEC CORRECT?
2837 015372 022704 000002          CMP      #2,R4
2838 015376 001023          BNE     SERR20
2839 015400 000177 000216          JMP      @SADR
2840
  
```

```

2841 015404 021627 015260          SERR4:  CMP      (SP),#S9
2842 015410 001402                    BEQ      1$
2843 015412 000137 040234          JMP      @#FPSPUR
2844 015416 012737 015646 015622 1$:  MOV      #SDONE,@#SADR
2845 015424 000750                    BR       SERR10
2846
2847
2848 015426 012737 100200 001242  :REPORT FPS FAILURE:
SERR15: MOV      #100200,@#TMP4
2849 015434 010437 001240          MOV      R4,@#TMP3
2850 015440 104117                    1$:  ERROR  +117
2851 015442 000177 000154          JMP      @SADR
2852
2853
2854 015446 012737 000002 001242  :REPORT FEC BAD:
SERR20: MOV      #2,@#TMP4
2855 015454 010437 001240          MOV      R4,@#TMP3
2856 015460 104120                    1$:  ERROR  +120
2857 015462 000177 000134          JMP      @SADR
2858
2859
2860
2861 015466 012737 015152 001236  :ACO WAS MODIFIED. (BUT FSRC) FORK FAILED.
SERR2:  MOV      #S2,@#TMP2
2862 015474 104112                    1$:  ERROR  +112
2863 015476 000463                    BR       SDONE
2864 015500 012737 015256 001236  SERR6:  MOV      #S8,@#TMP2
2865 015506 104114                    1$:  ERROR  +114
2866 015510 000456                    BR       SDONE
2867
2868 015512 012737 015152 001236  SERR3:  MOV      #S2,@#TMP2
2869 015520 104111                    1$:  ERROR  +111
2870 015522 000451                    BR       SDONE
2871 015524 012737 015256 001236  SERR7:  MOV      #S8,@#TMP2
2872 015532 104113                    1$:  ERROR  +113
2873 015534 000444                    BR       SDONE
2874
2875
2876 015536 021627 015154          :FAILURE OF (BUT FSRC) CAUSED AN ODD ADDRESS TRAP TO 4.
SERR1:  CMP      (SP),#S3                    ;DID TRAP OCCUR ON TESTED INSTRUCTION?
2877 015542 001405                    BEQ      1$
2878 015544 021627 015160          CMP      (SP),#S4
2879 015550 001402                    BEQ      1$
2880 015552 000137 040266          JMP      @#CPSPUR
2881
2882 015556 011637 001236          1$:  MOV      (SP),@#TMP2
2883 015562 022626                    CMP      (SP)+,(SP)+
2884 015564 104115                    2$:  ERROR  +115
2885 015566 000427                    BR       SDONE
2886
2887 015570 021627 015256          SERR5:  CMP      (SP),#S8                    ;DID TRAP OCCUR ON TEST INSTRUCTION?
2888 015574 001405                    BEQ      1$
2889 015576 021627 015260          CMP      (SP),#S9
2890 015602 001402                    BEQ      1$
2891 015604 000137 040266          JMP      @#CPSPUR
2892
2893 015610 011637 001236          1$:  MOV      (SP),@#TMP2
2894 015614 022626                    CMP      (SP)+,(SP)+
2895 015616 104116                    2$:  ERROR  +116
2896 015620 000412                    BR       SDONE
2897

```

```

2898 015622 000000      SADR:  0
2899 015624 177777      -1
2900 015626 010421      SPAT10: 10421
2901 015630 021042      SPAT11: 21042
2902 015632 031463      SPAT12: 31463
2903 015634 042104      SPAT13: 42104
2904
2905 015636 000000      SDAT00: 0
2906 015640 000000      SDAT01: 0
2907 015642 000000      SDAT02: 0
2908 015644 000000      SDAT03: 0
2909
2910 015646          SDONE:  .
      015646 104412      RSETUP

```

```

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).

```

2911
2918

```

:*****
:*TEST 14      FSRC MODE 2 TEST
:*
:* THIS IS A TEST OF FSRC MODE 2, AUTO
:* INCREMENT MODE.
:*
:*****

```

```

2919 015650 000004      TST14:  SCOPE
      015652 104413      LPERR                      ;SET UP THE LOOP ON ERROR ADDRESS.
2920
2921 015654          J1:
2922 015654 170011      SETD                      ;SET DOUBLE MODE
2923
2924 015656 012700 016132      MOV      #JDAT0,R0
2925 015662 172410      LDD      (R0),AC0          ;LOAD ACO
2926
2927 015664 012700 016112      MOV      #JDAT10,R0
2928 015670 005003      CLR      R3
2929 015672 012737 015762 000004      MOV      #JERR0,@#ERRVECT
2930
2931 015700 172420          J2:  LDD      (R0)+,AC0          ;TEST INSTRUCTION
2932 015702 005203          J3:  INC      R3
2933 015704 005203          J4:  INC      R3
2934
2935 015706 012701 016122      MOV      #JDAT00,R1
2936 015712 174011      STD      ACO,(R1)        ;PICK UP RESULTS
2937
2938 015714 020027 016102      CMP      R0,#JBUF0        ;WAS AN AUTO
2939 015720 001001      BNE     1$              ;DECREMENT EXECUTED?
2940 015722 000442      BR      JERR1
2941
2942 015724 012702 016112      1$:  MOV      #JDAT10,R2          ;IS DATA CORRECT?
2943 015730 012703 016122      MOV      #JDAT00,R3
2944 015734 012704 000004      MOV      #4,R4
2945 015740 022223          J5:  CMP      (R2)+,(R3)+
2946 015742 001401      BEQ     J6
2947 015744 000443      BR      JERR2
2948 015746 077404          J6:  SOB     R4,J5

```

```

2949
2950 015750 022700 016122      CMP      #JDATIO+10,R0      ;WAS R0 INCREM.
2951 015754 001401      BEQ      J7                ;BY 10 (OCTAL)
2952 015756 000424      BR       JERR1
2953
2954 015760 000470      J7:      BR       JDONE
2955
2956      ;IF A TRAP THROUGH 4 OCCURS COME HERE
2957
2958 015762 021627 015702      JERR0:   CMP      (SP),#J3      ;SEE IF THE TRAP
2959 015766 001405      BEQ      J10              ;OCCURRED ON THE
2960 015770 021627 015704      CMP      (SP),#J4      ;TESTED INSTRUCTION
2961 015774 001402      BEQ      J10
2962 015776 000137 040266      JMP      @#CPSPUR
2963
2964 016002 012737 000762 001240      J10:    MOV      #762,@#STMP3      ;REPORT FSRC FLOW
2965 016010 012737 000322 001242      MOV      #322,@#STMP4      ;FAILURE
2966 016016 011637 001236      MOV      (SP),@#STMP2
2967 016022 022626      CMP      (SP)+,(SP)+
2968 016024 104052      1$:     ERROR    +52
2969 016026 000445      BR       JDONE
2970
2971 016030      JERR1:   ;REPORT, R0 NOT
2972 016030 012737 015700 001236      MOV      #J2,@#STMP2      ;CORRECTLY AFFECTED
2973 016036 010037 001240      MOV      R0,@#STMP3
2974 016042 012737 016122 001242      MOV      #JDATIO+10,@#STMP4
2975 016050 104053      1$:     ERROR    +53
2976 016052 000433      BR       JDONE
2977
2978      ;REPORT DATA FAILURE
2979
2980 016054      JERR2:
2981 016054 012737 015700 001236      MOV      #J2,@#STMP2
2982 016062 012737 016112 001240      MOV      #JDATIO,@#STMP3
2983 016070 012737 016122 001242      MOV      #JDAT00,@#STMP4
2984 016076 104054      1$:     ERROR    +54
2985 016100 000420      BR       JDONE
2986
2987 016102 010421      JBUF0:   .WORD    010421
2988 016104 021042      JBUF1:   .WORD    021042
2989 016106 042104      JBUF2:   .WORD    042104
2990 016110 031463      JBUF3:   .WORD    031463
2991
2992 016112 052525      JDATIO:  052525
2993 016114 114631      JDAT11:  114631
2994 016116 063146      JDAT12:  063146
2995 016120 073567      JDAT13:  073567
2996
2997 016122 000000      JDAT00:  0
2998 016124 000000      JDAT01:  0
2999 016126 000000      JDAT02:  0
3000 016130 000000      JDAT03:  0
3001
3002 016132 177777      JDAT0:   -1
3003 016134 177777      JDAT1:   -1
3004 016136 177777      JDAT2:   -1
3005 016140 177777      JDAT3:   -1
  
```


3006
 3007
 3008 016142 104412
 016142

JDONE :

RSETUP

;GO INITIALIZE THE FPS AND STACK; AND
 ;SEE IF THE USER HAS EXPRESSED
 ;THE DESIRE TO CHANGE THE SOFTWARE
 ;VIRTUAL CONSOLE SWITCH REGISTER (HAS
 ;THE USER TYPED CONTROL G?).

3009
 3016
 3017

 ;TEST 15 FSRC MODE 4 TEST
 ;
 ; THIS IS A TEST OF FSRC MODE 4, AUTO
 ; DECREMENT MODE.
 ;
 ;*****

3018 016144 000004
 016146 104413

TST15: SCOPE LPERR ;SET UP THE LOOP ON ERROR ADDRESS.

3019
 3020 016150
 3021 016150 170011

K1: SETD ;SET DOUBLE MODE

3022
 3023 016152 012700 016424
 3024 016156 172410

MOV #KPATO,R0
 LDD (R0),ACO ;LOAD A DEFAULT
 ;PATTERN INTO ACO

3025
 3026 016160 012700 016404
 3027 016164 005003
 3028 016166 012737 016256 000004
 3029

MOV #KBUF0,R0
 CLR R3
 MOV #KERR0,@#ERRVECT

3030 016174 172440
 3031 016176 005203
 3032 016200 005203

K2: LDD -(R0),ACO ;TEST INSTRUCTION
 K3: INC R3
 K4: INC R3

3033
 3034 016202 012701 016414
 3035 016206 174011

MOV #KDAT00,R1
 STD ACO,(R1) ;PICK UP THE RESULT

3036
 3037 016210 020027 016414
 3038 016214 001001
 3039 016216 000441

CMP R0,#KBUF0+10 ;WAS AN AUTO
 BNE 1\$;INCREMENT EXECUTED
 BR KERR1

3040
 3041 016220 012702 016374
 3042 016224 012703 016414
 3043 016230 012704 000004

1\$: MOV #KDAT10,R2 ;IS DATA CORRECT?
 MOV #KDAT00,R3
 MOV #4,R4

3044 016234 022223
 3045 016236 001401
 3046 016240 000442
 3047 016242 077404

K5: CMP (R2)+,(R3)+
 BEQ K6
 BR KERR2
 K6: SOB R4,K5

3048
 3049 016244 022700 016374
 3050 016250 001401
 3051 016252 000423

CMP #KBUF0-10,R0 ;WAS R0 DECREMENTED
 BEQ K7 ;PROPERLY?
 BR KERR1

3052
 3053 016254 000467

K7: BR KDONE

3054
 3055
 3056

;TRAP TO HERE ON AN ODD ADDRESS ERROR

```

3057 016256 021627 016176      KERR0:  CMP      (SP),#K3      ;SEE IF THE ERROR
3058 016262 001405              BEQ      K10                ;OCCURRED AT THE
3059 016264 021627 016200      CMP      (SP),#K4          ;INSTRUCTION TESTED.
3060 016270 001402              BEQ      K10
3061 016272 000137 040266      JMP      @#CPSPUR
3062
3063 016276 012737 000762 001240 K10:    MOV      #762,@#STMP3      ;REPORT FAILURE IN
3064 016304 012737 000324 001242      MOV      #324,@#STMP4      ;FSRC FLOWS
3065 016312 011637 001236      MOV      (SP),@#STMP2
3066 016316 104055              1$:     ERROR    +55
3067 016320 000445              BR       KDONE
3068
3069 016322              KERR1:  MOV      #K2,@#STMP2      ;REPORT, R0
3070 016322 012737 016174 001236      MOV      R0,@#STMP3        ;INCORRECTLY AFFECTED.
3071 016330 010037 001240      MOV      #KDAT10,@#STMP4
3072 016334 012737 016374 001242      MOV      #KDAT10,@#STMP4
3073 016342 104056              1$:     ERROR    +56
3074 016344 000433              BR       KDONE
3075
3076              ;REPORT DATA FAILURE
3077
3078 016346              KERR2:  MOV      #K2,@#STMP2
3079 016346 012737 016174 001236      MOV      #KDAT10,@#STMP3
3080 016354 012737 016374 001240      MOV      #KDAT00,@#STMP4
3081 016362 012737 016414 001242      MOV      #KDAT00,@#STMP4
3082 016370 104057              1$:     ERROR    +57
3083 016372 000420              BR       KDONE
3084
3085 016374 052525      KDAT10: .WORD    052525
3086 016376 114631      KDAT11:          114631
3087 016400 063140      KDAT12:          063140
3088 016402 073567      KDAT13:          073567
3089
3090 016404 010421      KBUF0:           010421
3091 016406 031463      KBUF1:           031463
3092 016410 042104      KBUF2:           042104
3093 016412 021042      KBUF3:           021042
3094
3095 016414 000000      KDAT00:          0
3096 016416 000000      KDAT01:          0
3097 016420 000000      KDAT02:          0
3098 016422 000000      KDAT03:          0
3099
3100 016424 177777      KPAT0:           -1
3101 016426 177777      KPAT1:           -1
3102 016430 177777      KPAT2:           -1
3103 016432 177777      DPAT3:           -1
3104
3105 016434              KDONE:
      016434 104412      RSETUP          ;GO INITIALIZE THE FPS AND STACK; AND
                                          ;SEE IF THE USER HAS EXPRESSED
                                          ;THE DESIRE TO CHANGE THE SOFTWARE
                                          ;VIRTUAL CONSOLE SWITCH REGISTER (HAS
                                          ;THE USER TYPED CONTROL G?).

```

3106
 3113
 3114

::*****

```

: *TEST 16      FSRC MODE 2, WITH FD=0, TEST
: *
: * THIS IS A TEST OF FSRC MODE 2 WITH
: * FD=0. (AUTO INCREMENT)
: *
: *****

```

```

3115 016436 000004
3116 016440 104413
3117 016442
3118 016442 170011
3119
3120 016444 012700 016712
3121 016450 172410
3122
3123 016452 012700 016734
3124 016456 012701 016722
3125 016462 012702 000004
3126
3127 016466 012120
3128 016470 077202
3129
3130 016472 012700 016734
3131 016476 005003
3132 016500 170001
3133
3134 016502 172420
3135 016504 005203
3136
3137 016506
3138 016506 170011
3139
3140 016510 012701 016746
3141 016514 174011
3142
3143 016516 020027 016740
3144 016522 001401
3145 016524 000421
3146
3147 016526 012737 177777 016740 1$:
3148 016534 012737 177777 016742
3149 016542 012702 016734
3150 016546 012703 016746
3151 016552 012704 000004
3152
3153 016556 022223
3154 016560 001401
3155 016562 000427
3156 016564 077404
3157
3158 016566 000473
3159
3160 016570
3161 016570 012737 016502 001236
3162 016576 010037 001240
3163 016602 012737 016740 001242
3164 016610 104060

```

```

TST16: SCOPE
LPERR ;SET UP THE LOOP ON ERROR ADDRESS.

L1:
SETD ;SET DOUBLE MODE

MOV #LPAT10,R0
LDD (R0),AC0 ;LOAD AC0

MOV #LDAT10,R0 ;SET UP THE INPUT
MOV #LPAT20,R1 ;DATA
MOV #4,R2

1$: MOV (R1)+,(R0)+
SOB R2,1$

MOV #LDAT10,R0
CLR R3
SETF ;CLEAR FD.

L2: LDF (R0)+,AC0
L3: INC R3

L4:
SETD ;SET FD

MOV #LDAT00,R1
STD AC0,(R1) ;PICK UP RESULTS

CMP R0,#LDAT12 ;WAS R0 INCREMENTED
BEQ 1$ ;CORRECTLY BY 4
BR LERR1

1$: MOV #-1,@#LDAT12
MOV #-1,@#LDAT13
MOV #LDAT10,R2 ;IS DATA CORRECT
MOV #LDAT00,R3
MOV #4,R4

L5: CMP (R2)+,(R3)+
BEQ L6
BR LERR2

L6: SOB R4,L5

BR LDONE

LERR1: ;REPORT FAILURE
MOV #L2,@#STMP2 ;R0 NOT INCREMENTED
MOV R0,@#STMP3 ;BY 4
MOV #LDAT12,@#STMP4
1$: ERROR +60

```

```

3165 016612 000461          BR      LDONE
3166
3167 016614          LERR3:          :REPORT DATA FAILURE.
3168 016614 012737 016502 001236      MOV      #L2,@#STMP2
3169 016622 012737 016734 001240      MOV      #LDAT10,@#STMP3
3170 016630 012737 016746 001242      MOV      #LDAT00,@#STMP4
3171 016636 104061      1$:      ERROR      +61
3172 016640 000446          BR      LDONE
3173
3174 016642 012702 016722      LERR2:      MOV      #LPAT20,R2          :DID (BUT FD)
3175 016646 012703 016746          MOV      #LDAT00,R3          :FAIL.
3176 016652 012704 000004          MOV      #4,R4
3177 016656 022223      1$:      CMP      (R2)+,(R3)+
3178 016660 001355          BNE      LERR3
3179 016662 077403          SOB      R4,1$
3180 016664 012737 016502 001236      MOV      #L2,@#STMP2
3181 016672 012737 016734 001240      MOV      #LDAT10,@#STMP3
3182 016700 012737 016750 001242      MOV      #LDAT01,@#STMP4
3183 016706 104062      2$:      ERROR      +62
3184 016710 000422          BR      LDONE
3185
3186 016712 177777      LPAT10:     .WORD      -1
3187 016714 177777      LPAT11:     -1
3188 016716 177777      LPAT12:     -1
3189 016720 177777      LPAT13:     -1
3190
3191 016722 052525      LPAT20:     052525
3192 016724 114631      LPAT21:     114631
3193 016726 063142      LPAT22:     063142
3194 016730 073567      LPAT23:     073567
3195 016732 000001          .WORD      000001
3196 016734 000000      LDAT10:     0
3197 016736 000000      LDAT11:     0
3198 016740 000000      LDAT12:     0
3199 016742 000000      LDAT13:     0
3200 016744 000001          .WORD      00001
3201 016746 000000      LDAT00:     0
3202 016750 000000      LDAT01:     0
3203 016752 000000      LDAT02:     0
3204 016754 000000      LDAT03:     0
3205
3206 016756          LDONE:
      016756 104412          RSETUP          :GO INITIALIZE THE FPS AND STACK; AND
          :SEE IF THE USER HAS EXPRESSED
          :THE DESIRE TO CHANGE THE SOFTWARE
          :VIRTUAL CONSOLE SWITCH REGISTER (HAS
          :THE USER TYPED CONTROL G?).
    
```

3207
3215
3216

```

:*****
:*TEST 17      FSRC MODE 2 WITH GR7, IMMEDIATE MODE, TEST
:*
:* THIS IS A TEST OF FSRC MODE 2
:* USING GR7 (THE PC). THIS IS IMMEDIATE
:* MODE.
:*
:*****
    
```

```

016760 000004          TST17: SCOPE
3217
3218 016762          M1:
3219 016762 170011          SETD
3220
3221 016764 012700 017256          MOV  #MPAT10,R0
3222 016770 172410          LDD  (R0),AC0          ;LOAD BACKGROUND
3223                                     ;PATTERN INTO AC0.
3224 016772 005004          CLR  R4
3225 016774 012737 017216 000004          MOV  #MERR3,@#ERRVECT
3226
3227 017002 172427 000000          M15: LDD  #0,AC0          ;TEST INSTRUCTION
3228                                     .=-2
3229 017004 005204          .WORD 5204
3230 017006 005204          M2:  INC  R4          ;NOTE THAT
3231 017010 005204          M3:  INC  R4          ;005204=INC R4
3232 017012 005204          M4:  INC  R4
3233
3234 017014 020427 000003          CMP  R4,#3          ;SEE IF THE PC
3235 017020 001401          BEQ  1$          ;WAS INCREMENTED
3236 017022 000443          BR   MERR0        ;BY 2 DURING THE
3237                                     ;INSTRUCTION. IF
3238                                     ;NOT THEN A BAD
3239                                     ;CONSTANT WAS GENERATED
3240 017024 012700 017276          1$:  MOV  #MDAT00,R0
3241 017030 174010          STD  AC0,(R0)        ;GET THE DATA
3242
3243 017032 012700 017276          MOV  #MDAT00,R0
3244 017036 022720 005204          CMP  #5204,(R0)+    ;IS THE DATA CORRECT?
3245 017042 001401          BEQ  M5
3246 017044 000451          BR   MERR1
3247 017046 012701 000003          M5:  MOV  #3,R1
3248 017052 005720          M6:  TST  (R0)+
3249 017054 001002          BNE  M7
3250 017056 077103          SOB  R1,M6
3251 017060 000512          BR   MDONE
3252
3253 017062 012700 017276          M7:  MOV  #MDAT00,R0          ;DID (BUT GRM) FAIL?
3254 017066 012701 000004          MOV  #4,R1
3255 017072 022720 005204          M8:  CMP  #5204,(R0)+
3256 017076 001401          BEQ  M9
3257 017100 000433          BR   MERR1
3258 017102 077105          M9:  SOB  R1,M8
3259
3260 017104          MERR2:          ;REPORT FAILURE
3261 017104 012737 017002 001236          MOV  #M15,@#$TMP2    ;OF (BUT GR7)
3262 017112 012737 017266 001240          MOV  #MPAT20,@#$TMP3
3263 017120 012737 017276 001242          MOV  #MDAT00,@#$TMP4
3264 017126 104063          1$:  ERROR +63
3265 017130 000466          BR   MDONE
3266
3267 017132 012705 017006          MERR0: MOV  #M2,R5          ;REPORT FAILURE

```

```

3269 017136 010537 001242      MOV    R5,@#STMP4      ;PC INCREMENTED
3270 017142 162704 000003      SUB    #3,R4
3271 017146 006304                ASL    R4
3272 017150 160405                SUB    R4,R5
3273 017152 010537 001240      MOV    R5,@#STMP3
3274 017156 012737 017002 001236  MOV    #M15,@#STMP2
3275 017164 104064          1$:   ERROR    +64
3276 017166 000447                BR     MDONE
3277
3278 017170                MERR1:                ;REPORT DATA
3279 017170 012737 017002 001236  MOV    #M15,@#STMP2    ;FAILURE
3280 017176 012737 017276 001240  MOV    #MDAT00,@#STMP3
3281 017204 012737 017266 001242  MOV    #MPAT20,@#STMP4
3282 017212 104066          1$:   ERROR    +66
3283 017214 000434                BR     MDONE
3284                ;TRAP TO HERE THROUGH 4.
3285 017216 032716 000001  MERR3: BIT    #1,(SP)    ;SEE IF THE
3286 017222 001002                BNE    1$              ;TRAP TO 4 OCCURRED
3287 017224 000137 040266                JMP    @#CPSPUR        ;BECAUSE OF AN
3288                ;ODD ADDRESS
3289 017230 011637 001240          1$:   MOV    (SP),@#STMP3    ;IF YES REPORT
3290 017234 012737 017006 001242  MOV    #M2,@#STMP4    ;BAD CONSTANT
3291 017242 012737 017002 001236  MOV    #M15,@#STMP2    ;GENERATED
3292 017250 022626                CMP    (SP)+,(SP)+
3293 017252 104065          2$:   ERROR    +65
3294 017254 000414                BR     MDONE
3295
3296 017256 177777          MPAT10:                -1
3297 017260 177777          MPAT11:                -1
3298 017262 177777          MPAT12:                -1
3299 017264 177777          MPAT13:                -1
3300
3301 017266 005204          MPAT20:                5204
3302 017270 005204          MPAT21:                5204
3303 017272 005204          MPAT22:                5204
3304 017274 005204          MPAT23:                5204
3305
3306 017276 000000          MDAT00:                0
3307 017300 000000          MDAT01:                0
3308 017302 000000          MDAT02:                0
3309 017304 000000          MDAT03:                0
3310
3311 017306                MDONE:
      017306 104412          RSETUP                ;GO INITIALIZE THE FPS AND STACK; AND
                                ;SEE IF THE USER HAS EXPRESSED
                                ;THE DESIRE TO CHANGE THE SOFTWARE
                                ;VIRTUAL CONSOLE SWITCH REGISTER (HAS
                                ;THE USER TYPED CONTROL G?).
3312
3319
3320

```

```

*****
*TEST 20      FSRC MODE 3 TEST
*
* THIS IS A TEST OF FSRC MODE 3, AUTO INCREMENT
* DEFERRED
*****

```

```

017310 000004          TST20: SCOPE
3321
3322 017312          N1:
3323 017312 170011          SETD          ;SET FD MODE
3324
3325 017314 012700 017774          MOV    #NPAT10,R0
3326 017320 172410          LDD    (R0),ACC    ;LOAD ACC WITH A DEFAULT
3327          ;PATTERN
3328 017322 012700 017762          MOV    #NPAT20,R0
3329 017326 005003          CLR    R3
3330 017330 012737 017504 000004          MOV    #NERR0,@#ERRVECT ;IF A FAILURE OCCURS
3331          ;IN THE FSRC FLOWS AN
3332          ;ODD TRAP TO 4 COULD OCCUR
3333 017336 172430          N2: LDD    @(R0)+,ACC    ;TEST INSTRUCTION.
3334 017340 005203          N3: INC    R3
3335 017342 005203          N4: INC    R3
3336
3337 017344 012701 017742          MOV    #NDAT00,R1
3338 017350 174011          STD    ACC,(R1)    ;GET THE DATA
3339
3340 017352 020027 017764          CMP    R0,#NPAT20+2 ;WAS R0 INCREMENTED
3341 017356 001437          BEQ    N12          ;BY 2?
3342
3343 017360 020027 017772          N5: CMP    R0,#NPAT20+10 ;FSRC MODE 2?
3344 017364 001001          BNE    N6
3345 017366 000506          BR     NERR1
3346
3347 017370 020027 017752          N6: CMP    R0,#NPAT20-10 ;FSRC MODE 4?
3348 017374 001001          BNE    N7
3349 017376 000520          BR     NERR2
3350
3351 017400 020027 017762          N7: CMP    R0,#NPAT20
3352 017404 001023          BNE    N11
3353
3354 017406 012702 017742          MOV    #NDAT00,R2    ;FSRC MODE 0?
3355 017412 012703 000004          MOV    #4,R3
3356 017416 022227 177777          N8: CMP    (R2)+,#-1
3357 017422 001002          BNE    N9
3358 017424 077304          SOB    R3,N8
3359 017426 000510          BR     NERR3
3360
3361 017430 012702 017742          N9: MOV    #NDAT00,R2    ;FSRC MODE 1
3362 017434 012703 017762          MOV    #NPAT20,R3
3363 017440 012704 000004          MOV    #4,R4
3364 017444 022223          N10: CMP    (R2)+,(R3)+
3365 017446 001002          BNE    N11
3366 017450 077403          SOB    R4,N10
3367 017452 000502          BR     NERR4
3368
3369 017454 000505          N11: BR     NERR5
3370
3371 017456 012702 017742          N12: MOV    #NDAT00,R2    ;DATA CORRECT?
3372 017462 012703 020004          MOV    #NDAT10,R3
3373 017466 012704 000004          MOV    #4,R4
3374 017472 022223          N13: CMP    (R2)+,(R3)+
3375 017474 001002          BNE    N14
3376 017476 077403          SOB    R4,N13

```

```
3377 017500 000545 BR NDONE
3378
3379 017502 000504 N14: BR NERR6
3380
3381 ;IF AN ODD ADDRESS TRAP OCCURS COME HERE
3382 ;TO SEE IF THE FAILURE WAS IN THE FSRC
3383 ;FLOWS
3384
3385 017504 022716 017342 NERR0: CMP #N4,(SP) ;FSRC MODE 6 OR 7?
3386 017510 001412 BEQ NERR10
3387 017512 022716 017340 CMP #N3,(SP)
3388 017516 001402 BEQ 1$
3389 017520 000137 040266 JMP @#CPSPUR
3390 017524 020027 017760 1$: CMP R0,#NPAT20-2 ;FSRC MODE 5?
3391 017530 001407 BEQ NERR11
3392 017532 000137 040266 JMP @#CPSPUR
3393
3394 017536 NERR10: ;WENT TO FSRC
3395 017536 011637 001236 MOV (SP),@#STMP2 ;MODE 6 OR 7.
3396 017542 022626 CMP (SP)+,(SP)+
3397 017544 104067 1$: ERROR +67
3398 017546 000522 BR NDONE
3399
3400 017550 011637 001236 NERR11: MOV (SP),@#STMP2 ;WENT TO FSRC
3401 017554 022626 CMP (SP)+,(SP)+ ;MODE 5.
3402 017556 012737 000627 001244 MOV #627,@#STMP5
3403 017564 012737 000323 001250 MOV #323,@#STMP7
3404 017572 012737 000325 001246 MOV #325,@#STMP6
3405 017600 104070 1$: ERROR +70
3406 017602 000504 BR NDONE
3407 017604 012737 000322 001246 NERR1: MOV #322,@#STMP6 ;FSRC MODE 2.
3408 017612 012737 000627 001244 NERR20: MOV #627,@#STMP5
3409 017620 012737 000323 001250 MOV #323,@#STMP7
3410 017626 012737 017336 001236 MOV #N2,@#STMP2
3411 017634 104071 1$: ERROR +71
3412 017636 000466 BR NDONE
3413 017640 012737 000324 001246 NERR2: MOV #324,@#STMP6 ;FSRC MODE 4
3414 017646 000761 BR NERR20
3415 017650 012737 000320 001246 NERR3: MOV #320,@#STMP6 ;FSRC MODE 0
3416 017656 000755 BR NERR20
3417 017660 012737 000321 001246 NERR4: MOV #321,@#STMP6 ;FSRC MODE 1
3418 017666 000751 BR NERR20
3419
3420 017670 010037 001240 NERR5: MOV R0,@#STMP3 ;R0 NOT
3421 017674 012737 017764 001242 MOV #NPAT20+2,@#STMP4 ;INCREMENTED
3422 017702 012737 017336 001236 MOV #N2,@#STMP2 ;PROPERLY.
3423 017710 104072 1$: ERROR +72
3424 017712 000440 BR NDONE
3425
3426 017714 NERR6: ;DATA FAILURE.
3427 017714 012737 017336 001236 MOV #N2,@#STMP2
3428 017722 012737 017742 001240 MOV #NDAT00,@#STMP3
3429 017730 012737 020004 001242 MOV #NDATIO,@#STMP4
3430 017736 104073 1$: ERROR +73
3431 017740 000425 BR NDONE
3432
3433 017742 000000 NDAT00: .WORD 0
```



```

3434 017744 000000      NDAT01:      0
3435 017746 000000      NDAT02:      0
3436 017750 000000      NDAT03:      0
3437
3438 017752 052525 052525 052525      .WORD      52525,52525,52525,52525
      017760 052525
3439 017762 020004      NPAT20: .WORD      NDAT10
3440 017764 070707      NPAT21:      070707
3441 017766 070707      NPAT22:      070707
3442 017770 070707      NPAT23:      070707
3443 017772 000001      .WORD      1
3444 017774 177777      NPAT10: .WORD      -1
3445 017776 177777      NPAT11:      -1
3446 020000 177777      NPAT12:      -1
3447 020002 177777      NPAT13:      -1
3448
3449 020004 010421      NDAT10: .WORD      010421
3450 020006 021042      NDAT11:      021042
3451 020010 031463      NDAT12:      031463
3452 020012 042104      NDAT13:      042104
3453
3454 020014      NDONE:
      020014 104412      RSETUP
    
```

```

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).
    
```

3455
3462
3463

```

:*****
:*TEST 21      FSRC MODE 5 TEST
:*
:* THIS IS A TEST OF FSRC MODE 5, AUTO DECREMENT
:* DEFERRED.
:*
:*****
    
```

```

      020016 000004
3464
3465 020020
3466 020020 170011
3467
3468 020022 012700 020500      MOV      #OPAT10,R0
3469 020026 172410      LDD      (R0),AC0      ;LOAD AC0 WITH A
      ;DEFAULT PATTERN.
3470
3471 020030 012700 020466      MCV      #OPAT21,R0
3472 020034 005003      CLR      R3
3473 020036 012737 020210 000004      MOV      #OERR0,@#ERRVEC ;IF A FAILURE
      ;OCCURS IN THE FSRC
      ;FLOWS AN ODD ADDR.
      ;TRAP TO 4 MAY OCCUR.
3474
3475
3476
3477 020044 172450      02:      LDD      @-(R0),AC0 ;TEST INSTRUCTION
3478 020046 005203      03:      INC      R3
3479 020050 005203      04:      INC      R3
3480
3481 020052 012701 020446      MOV      #ODAT00,R1
3482 020056 174011      STD      AC0,(R1)      ;GET THE DATA
3483
    
```

```

3484 020060 020027 020464      CMP      R0,#OPAT20      ;WAS R0 DECREMENTED
3485 020064 001436              BEQ      012             ;BY 2?
3486
3487 020066 020027 020476      05:     CMP      R0,#OPAT21+10 ;FSRC MODE 2
3488 020072 001001              BNE     06
3489 020074 000505              BR      OERR1
3490
3491 020076 020027 020456      06:     CMP      R0,#OPAT21-10 ;FSRC MODE 4?
3492 020102 001001              BNE     07
3493 020104 000517              BR      OERR2
3494
3495 020106 020027 020466      07:     CMP      R0,#OPAT21
3496
3497 020112 012702 020450      MOV     #ODAT01,R2      ;FSRC MODE 0?
3498 020116 012703 000004      MOV     #4,R3
3499 020122 022227 177777      08:     CMP      (R2)+,#-1
3500 020126 001002              BNE     09
3501 020130 077304              SOB     R3,08
3502 020132 000510              BR      OERR3
3503
3504 020134 012702 020446      09:     MOV     #ODAT00,R2      ;FSRC MODE 1?
3505 020140 012703 020466      MOV     #OPAT21,R3
3506 020144 012704 000004      MOV     #4,R4
3507 020150 022223              010:    CMP      (R2)+,(R3)+
3508 020152 001002              BNE     011
3509 020154 077403              SOB     R4,010
3510 020156 000502              BR      OERR4
3511
3512 020160 000505              011:    BR      OERR5
3513
3514 020162 012702 020446      012:    MOV     #ODAT00,R2      ;DATA CORRECT?
3515 020166 012703 020510      MOV     #ODAT10,R3
3516 020172 012704 000004      MOV     #4,R4
3517 020176 022223              013:    CMP      (R2)+,(R3)+
3518 020200 001002              BNE     014
3519 020202 077403              SOB     R4,013
3520 020204 000545              BR      ODONE
3521
3522 020206 000504              014:    BR      OERR6
3523
3524      ;IF AN ODD ADDRESS TRAP OCCURS COME
3525      ;HERE TO SEE IF THE FAILURE WAS IN THE
3526      ;FSRC FLOWS:
3527
3528 020210 022716 020050      OERR0:  CMP      #04,(SP)      ;FSRC MODE 6 OR 7?
3529 020214 001412              BEQ     OERR10
3530 020216 022716 020046      CMP     #03,(SP)
3531 020222 001402              BEQ     1$
3532 020224 000137 040266      JMP     @#CPSPUR
3533 020230 020027 020470      1$:     CMP      R0,#OPAT21+2      ;FSRC MODE 3?
3534 020234 001425              BEQ     OERR1
3535 020236 000137 040266      JMP     @#CPSPUR
3536
3537 020242              OERR10:
3538 020242 011637 0012      MOV     (SP),@#$TMP2      ;WENT TO FSRC
3539 020246 022626              CMP     (SP)+,(SP)+      ;MODE 6 OR 7
3540 020250 104074              1$:     ERROR  +74
  
```

```

3541 020252 000522 BR ODONE
3542
3543 020254 011637 001240 OERR11: MOV (SP),@#STMP3 ;WENT TO FSRC MODE
3544 020260 022626 CMP (SP)+,(SP)+ ;3
3545 020262 012737 000627 001244 MOV #627,@#STMP5
3546 020270 012737 000325 001250 MOV #325,@#STMP7
3547 020276 012737 000323 001246 MOV #323,@#STMP6
3548 020304 104075 1$: ERROR +75
3549 020306 000504 BR ODONE
3550
3551 020310 012737 000322 001246 OERR1: MOV #322,@#STMP6 ;FSRC MODE2
3552 020316 012737 000627 001242 OERR20: MOV #627,@#STMP4
3553 020324 012737 000325 001250 MOV #325,@#STMP7
3554 020332 012737 020044 001236 MOV #02,@#STMP2
3555 020340 104076 1$: ERROR +76
3556 020342 000466 BR ODONE
3557 020344 012737 000324 001246 OERR2: MOV #324,@#STMP6 ;FSRC MODE 4
3558 020352 000761 BR OERR20
3559 020354 012737 000320 001246 OERR3: MOV #320,@#STMP6 ;FSRC MODE 0
3560 020362 000755 BR OERR20
3561 020364 012737 000321 001246 OERR4: MOV #321,@#STMP6 ;FSRC MODE 1
3562 020372 000751 BR OERR20
3563
3564 020374 010037 001240 OERR5: MOV R0,@#STMP3 ;R0 NOT DECREMENTED
3565 020400 012737 020464 001242 MOV #OPAT20,@#STMP4 ;PROPERLY
3566 020406 012737 020050 001236 MOV #04,@#STMP2
3567 020414 104077 1$: ERROR +77
3568 020416 000440 BR ODONE
3569
3570 020420 OERR6: ;DATA FAILURE
3571 020420 012737 020044 001236 MOV #02,@#STMP2
3572 020426 012737 020446 001240 MOV #ODAT00,@#STMP3
3573 020434 012737 020510 001242 MOV #ODAT10,@#STMP4
3574 020442 104100 1$: ERROR +100
3575 020444 000425 BR ODONE
3576
3577 020446 000000 ODAT00: .WORD 0
3578 020450 000000 ODAT01: 0
3579 020452 000000 ODAT02: 0
3580 020454 000000 ODAT03: 0
3581
3582 020456 052525 052525 052525 .WORD 52525,52525,52525
3583 020464 020510 OPAT20: .WORD ODAT10
3584 020466 070707 OPAT21: 070707
3585 020470 070707 OPAT22: 070707
3586 020472 070707 OPAT23: 070707
3587 020474 070707 OPAT24: 070707
3588 020476 000001 .WORD 1
3589 020500 177777 OPAT10: .WORD -1
3590 020502 177777 OPAT11: -1
3591 020504 177777 OPAT12: -1
3592 020506 177777 OPAT13: -1
3593
3594 020510 073567 ODAT10: .WORD 73567
3595 020512 004210 ODAT11: 004210
3596 020514 114631 ODAT12: 114631
3597 020516 125252 ODAT13: 125252
  
```

3598
3599 020520 104412

ODONE: RSETUP

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).

3600
3606
3607

;TEST 22 FSRC MODE 6 TEST
; THIS IS A TEST OF FSRC MODE 6, INDEX MODE
;*****
TST22: SCOPE

020522 000004
3608
3609 020524
3610 020524 170011
3611
3612 020526 012700 021144
3613 020532 172410
3614
3615 020534 012737 020642 000004
3616
3617 020542 012700 020713
3618
3619 020546 172460 000241
3620 020550
3621
3622 020552 012701 021164
3623 020556 174011
3624 020560 012703 000004
3625 020564 012702 021154
3626 020570 012701 021164
3627 020574 022221
3628 020576 001007
3629 020600 077303
3630 020602 022700 020713
3631 020606 001401
3632 020610 000512
3633 020612 000137 021174
3634
3635 020616 012701 021164
3636 020622 012703 000004
3637 020626 022721 177777
3638 020632 001401
3639 020634 000512
3640 020636 077305
3641 020640 000523
3642
3643 020642 021627 020550
3644 020646 001411
3645 020650 021627 020552
3646 020654 001402
3647 020656 000137 040266
3648

P1: SETD ;SET FD MODE
MOV #PPAT10,R0
LDD (R0),AC0 ;LOAD A DEFAULT PATTERN
;INTO ACO
MOV #PERR0,@#ERRVECT ;IF THE (BUT FSRC) FORQ
;FAILS AN ODD ADDRESS TRAP
;COULD OCCUR.
MOV #PDAT10-241,R0
P2: LDD 241(R0),AC0
P3=P2+2
P4: MOV #PDAT00,R1
STD AC0,(R1) ;GET THE DATA
MOV #4,R3
MOV #PDAT10,R2
MOV #PDAT00,R1
P5: CMP (R2)+,(R1)+ ;CHECK THE DATA
BNE P6
SOB R3,P5
CMP #PDAT10-241,R0 ;R0 CORRECT?
BEQ 1\$
BR PERR21
1\$: JMP @#PDONE
P6: MOV #PDAT00,R1
MOV #4,R3
P7: CMP #-1,(R1)+ ;WAS IT FSRC MODE 0?
BEQ P8
BR PERR1
P8: SOB R3,P7
BR PERR2
;TRAP TO HERE ON AN ODD ADDRESS
PERR0: CMP (SP),#P3
BEQ PERR11
CMP (SP),#P4 ;WAS IT FSRC MODE 7?
BEQ PERR10
JMP @#CPSPUR

```

3649 020662 012737 000327 001246 PERR10: MOV #327,@#STMP6
3650 020670 000443 BR PERR17
3651 020672 022700 020713 PERR11: CMP #PDATIO-241,R0 ;WAS IT FSRC MODE 1
3652 020676 001004 BNE PERR12
3653 020700 012737 000321 001246 MOV #321,@#STMP6
3654 020706 000434 BR PERR17
3655 020710 022700 020723 PERR12: CMP #PDATIO-241+10,R0 ;WAS IT FSRC MODE 2
3656 020714 001004 BNE PERR13
3657 020716 012737 000322 001246 MOV #322,@#STMP6
3658 020724 000425 BR PERR17
3659 020726 022700 020715 PERR13: CMP #PDATIO-241+2,R0 ;WAS IT FSRC MODE 3
3660 020732 001004 BNE PERR14
3661 020734 012737 000323 001246 MOV #323,@#STMP6
3662 020742 000416 BR PERR17
3663 020744 022700 020703 PERR14: CMP #PDATIO-241-10,R0 ;WAS IT FSRC MODE 4
3664 020750 001004 BNE PERR15
3665 020752 012737 000324 001246 MOV #324,@#STMP6
3666 020760 000407 BR PERR17
3667 020762 022700 020711 PERR15: CMP #PDATIO-241-2,R0 ;WAS IT FSRC MODE 5
3668 020766 001401 BEQ PERR16
3669 020770 000416 BR PERR20
3670 020772 012737 000325 001246 PERR16: MOV #325,@#STMP6
3671 BR
3672 021000 012737 000627 001244 PERR17: MOV #627,@#STMP5 ;REPORT FSRC
3673 021006 012737 000326 001250 MOV #326,@#STMP7 ;FLOWS FAILURE.
3674 021014 011637 001236 MOV (SP),@#STMP2
3675 021020 022626 CMP (SP)+,(SP)+
3676 021022 104101 1$: ERROR +101
3677 021024 000463 BR PDONE
3678 BR
3679 021026 011637 001236 PERR20: MOV (SP),@#STMP2 ;REPORT R0 AFFECTED
3680 021032 022626 CMP (SP)+,(SP)+
3681 021034 000403 BR PERR22
3682 021036 012737 020546 001236 PERR21: MOV #P2,@#STMP2
3683 021044 PERR22:
3684 021044 010037 001240 MOV R0,@#STMP3
3685 021050 012737 020713 001242 MOV #PDATIO-241,@#STMP4
3686 021056 104102 1$: ERROR +102
3687 021060 000445 BR PDONE
3688 BR
3689 021062 PERR1: ;DATA FAILURE.
3690 021062 012737 020546 001236 MOV #P2,@#STMP2
3691 021070 012737 021154 001240 MOV #PDATIO,@#STMP3
3692 021076 012737 021164 001242 MOV #PDATIO0,@#STMP4
3693 021104 104104 1$: ERROR +104
3694 021106 000432 BR PDONE
3695 BR
3696 021110 PERR2: ;FSRC FAILURE TO
3697 021110 012737 020546 001236 MOV #P2,@#STMP2 ;MODE 0
3698 021116 012737 000627 001244 MOV #627,@#STMP5
3699 021124 012737 000326 001250 MOV #326,@#STMP7
3700 021132 012737 000320 001246 MOV #320,@#STMP6
3701 021140 104103 1$: ERROR +103
3702 021142 000414 BR PDONE
3703 BR
3704 021144 177777 PPAT10: .WORD -1
3705 021146 177777 PPAT11: -1
  
```

```

3706 021150 177777 PPAT12: -1
3707 021152 177777 PPAT13: -1
3708
3709 021154 010421 PDAT10: .WORD 010421
3710 021156 031463 PDAT11: 031463
3711 021160 052525 PDAT12: 052525
3712 021162 073567 PDAT13: 073567
3713
3714 021164 000000 PDAT00: .WORD 0
3715 021166 000000 PDAT01: 0
3716 021170 000000 PDAT02: 0
3717 021172 000000 PDAT03: 0
3718
3719 021174 PDONE:
    021174 104412 RSETUP
    
```

```

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).
    
```

3720
3727
3728

```

*****
;*TEST 23 FSRC MODE 7 TEST
;*
;* THIS IS A TEST OF FSRC MODE 7, INDEX
;* DEFERRED MODE.
;*
*****
TST23: SCOPE
    
```

```

021176 000004
3729
3730 021200
3731 021200 170011
3732
3733 021202 012700 021634 MOV #QPAT10,R0
3734 021206 172410 LDD (R0),AC0 ;LOAD A DEFAULT
3735 ;PATTERN INTO ACO
3736 021210 012737 021342 000004 MOV #QERR0,@#ERRVECT ;IF THE (BUT FSRC)
3737 ;FORK FAILS AN
3738 ;ODD ADR TRAP COULD
3739 ;OCCUR
3740 021216 012700 021403 MOV #QPAT20-241,R0
3741
3742 021222 172470 000241 Q2: LDD @241(R0),AC0
3743 021224 Q3=Q2+2
3744
3745 021226 012701 021654 Q4: MOV #QDAT00,R1
3746 021232 174011 STD ACO,(R1) ;GET THE DATA
3747
3748 021234 012703 000004 MOV #4,R3
3749 021240 012704 021654 MOV #QDAT00,R4
3750 021244 012705 021664 MOV #QDAT10,R5
3751 021250 022425 Q5: CMP (R4)+,(R5)+ ;CHECK THE DATA
3752 021252 001007 BNE Q6
3753 021254 077303 SOB R3,Q5
3754
3755 021256 022700 021403 CMP #QPAT20-241,R0 ;CHECK R0.
3756 021262 001401 BEQ 1$
    
```

```

3757 021264 000514          BR      QERR21
3758 021266 000137 021674  1$:    JMP      @#QDONE
3759
3760 021272 012701 021654  Q6:    MOV      #QDAT00,R1
3761 021276 012703 000004      MOV      #4,R3
3762 021302 022721 177777  Q7:    CMP      #-1,(R1)+      ;WAS IT FSRC MODE 0?
3763 021306 001002          BNE      Q8
3764 021310 077304          SOB      R3,Q7
3765 021312 000513          BR       QERR2
3766
3767 021314 012701 021644  Q8:    MOV      #QPAT20,R1
3768 021320 012702 021654      MOV      #QDAT00,R2
3769 021324 012703 000004      MOV      #4,R3
3770 021330 022122          Q9:    CMP      (R1)+,(R2)+      ;WAS IT FSRC 6
3771 021332 001401          BEQ      Q10                  ;OR DATA FAILURE
3772 021334 000524          BR       QERR1
3773 021336 077304          Q10:   SOB      R3,Q9
3774 021340 000504          BR       QERR3
3775
3776          ;TRAP TO HERE ON AN ODD ADR FAILURE
3777
3778 021342 021627 020550  QERR0: CMP      (SP),#P3
3779 021346 000137 040266      JMP      @#CPSPUR
3780
3781 021352 022700 021403  QERR11: CMP      #QPAT20-241,R0      ;WAS IT FSRC
3782 021356 001004          BNE      QERR12              ;MODE 1?
3783 021360 012737 000321 001246      MOV      #321,@#STMP6
3784 021366 000434          BR       QERR17
3785 021370 022700 021413  QERR12: CMP      #QPAT20-241+10,R0      ;WAS IT FSRC
3786 021374 001004          BNE      QERR13              ;MODE 2?
3787 021376 012737 000322 001246      MOV      #322,@#STMP6
3788 021404 000425          BR       QERR17
3789 021406 022700 021405  QERR13: CMP      #QPAT20-241+2,R0      ;WAS IT FSRC
3790 021412 001004          BNE      QERR14              ;MODE 3?
3791 021414 012737 000323 001246      MOV      #323,@#STMP6
3792 021422 000416          BR       QERR17
3793 021424 022700 021373  QERR14: CMP      #QPAT20-241-10,R0      ;WAS IT FSRC
3794 021430 001004          BNE      QERR15              ;MODE 4
3795 021432 012737 000324 001246      MOV      #324,@#STMP6
3796 021440 000407          BR       QERR17
3797
3798 021442 022700 021401  QERR15: CMP      #QPAT20-241-2,R0      ;WAS IT FSRC
3799 021446 001401          BEQ      QERR16              ;MODE 5
3800 021450 000416          BR       QERR20
3801
3802 021452 012737 000325 001246  QERR16: MOV      #325,@#STMP6
3803
3804 021460 012737 000627 001244  QERR17: MOV      #627,@#STMP5      ;REPORT FSRC FAILURE
3805 021466 012737 000327 001250      MOV      #327,@#STMP7
3806 021474 011637 001236      MOV      (SP),@#STMP2
3807 021500 022626          CMP      (SP)+,(SP)+
3808 021502 104105          1$:    ERROR  +105
3809 021504 000473          BR       QDONE
3810
3811 021506 011637 001236  QERR20: MOV      (SP),@#STMP2      ;REPORT R0 AFFECTED.
3812 021512 022626          CMP      (SP)+,(SP)+
3813 021514 000403          BR       QERR22
    
```

```
3814 021516 012737 021222 001236 QERR21: MOV #Q2,@#STMP2
3815 021524 QERR22:
3816 021524 010037 001240 MOV R0,@#STMP3
3817 021530 012737 021403 001242 MOV #QPAT20-241,@#STMP4
3818 021536 104106 1$: ERROR +106
3819 021540 000455 BR QDONE
3820
3821 021542 012737 000320 001246 QERR2: MOV #320,@#STMP6 ;WENT TO FSRC
3822 021550 000403 BR QERR4 ;MODE 0
3823 021552 012737 000326 001246 QERR3: MOV #326,@#STMP6 ;WENT TO FSRC
3824 ;MODE 6
3825 021560 012737 000627 001244 QERR4: MOV #627,@#STMP5
3826 021566 012737 000327 001250 MOV #327,@#STMP7
3827 021574 012737 021222 001236 MOV #Q2,@#STMP2
3828 021602 104107 1$: ERROR +107
3829 021604 000433 BR QDONE
3830
3831 021606 QERR1: ;DATA FAILURE
3832 021606 012737 021222 001236 MOV #Q2,@#STMP2
3833 021614 012737 021664 001240 MOV #QDAT10,@#STMP3
3834 021622 012737 021654 001242 MOV #QDAT00,@#STMP4
3835 021630 104110 1$: ERROR +110
3836 021632 000420 BR QDONE
3837
3838 021634 177777 QPAT10: .WORD -1
3839 021636 177777 QPAT11: -1
3840 021640 177777 QPAT12: -1
3841 021642 177777 QPAT13: -1
3842
3843 021644 021664 QPAT20: .WORD QDAT10
3844 021646 052525 QPAT21: 52525
3845 021650 052525 QPAT22: 52525
3846 021652 052525 QPAT23: 52525
3847
3848 021654 000000 QDAT00: .WORD 0
3849 021656 000000 QDAT01: 0
3850 021660 000000 QDAT02: 0
3851 021662 000000 QDAT03: 0
3852
3853 021664 073567 QDAT10: .WORD 073567
3854 021666 052525 QDAT11: .WORD 052525
3855 021670 031463 QDAT12: .WORD 031463
3856 021672 010421 QDAT13: .WORD 010421
3857
3858 021674 QDONE:
021674 104412 RSETUP ;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).
```

3859
3876

```
::*****
:*TEST 24 (BUT EZBT Y8),(BUT ENBT) AND (BUT FIUV) TEST
:*
:* THIS IS A TEST OF THE (BUT EZBT Y8) FORK, THE
:* (BUT ENBT) FORK AND (BUT FIUV) FORK IN THE
:* LOAD INSTRUCTION FLOWS.
```



```

: * EACH OF THE PATTERNS:
: *
: *      0
: *     +NUM
: *     -NUM
: *     -0
: * IS LOADED TWICE, ONCE WITH AC>0 THEN
: * WITH AC=0. AFTER EACH LOAD THE FPS IS
: * CHECK TO INSURE THAT CONTROL WAS PASSED
: * THROUGH WITH THE FORKS PROPERLY.
: *
: *
: * *****
    
```

```

3877 021676 000004
3878 021700 005037 022776
3879 021704 012700 022726
3880 021710 012701 000004
3881 021714 012720 177777
3882 021720 077103
3883 021722 012737 000033 023000
3884 021730 012737 000023 023002
3885 021736 012737 022456 000244
3886 021744
3887 021744 104413
3888 021746 012700 000200
3889 021752 170100
3890 021754 012700 022726
3891 021760 172410
3892 021762 013737 023000 023004
3893 021766 012737 000001 023006
3894 021776 012737 000254 023010
3895 022004 012700 022736
3896 022010 172410
3897 022012 010037 001252
3898 022016 012737 022010 001236
3899
3900 022024 012704 000204
3901 022030 170205
3902
3903 022032 020405
3904 022034 001402
3905 022036 000137 022502
3906
3907 022042
3908 022042 104413
3909 022044 012700 000200
3910 022050 170100
3911 022052 012700 022726
3912 022056 172410
3913 022060 013737 023002 023004
3914 022066 012737 000003 023006
3915 022074 012737 000054 023010
3916
3917 022102 012700 022746
3918
3919 022106 172410

TST24: SCOPE
        CLR      @#UFLAG
        MOV      #UPAT00,R0      ;SET UP AC#0 DATA.
U0:     MOV      #4,R1
        MOV      #-1,(R0)+
        SOB      R1,U0
        MOV      #033,@#UTMP1
        MOV      #023,@#UTMP2
        MOV      #UERR0,@#FPVECT ;IN CASE (BUT FIUV FAILS)
U1:     LPERR
        MOV      #200,R0      ;SET UP THE LOOP ON ERROR ADDRESS.
        LDFPS   R0
        MOV      #UPAT00,R0      ;LOAD AC0
        LDD     (R0),AC0
        MOV      @#UTMP1,@#UROM1
        MOV      #001,@#UROM2
        MOV      #254,@#UROM3
U2:     MOV      #UPAT10,R0      ;LOAD 0 INTO AC0
        LDD     (R0),AC0
        MOV      R0,@#STMP10
        MOV      #U2,@#STMP2
        MOV      #204,R4
        STFPS   R5      ;SEE IF FPS IS CORRECT
        BEQ     U3
        JMP     @#UERR1
U3:     LPERR
        MOV      #200,R0      ;SET UP THE LOOP ON ERROR ADDRESS.
        LDFPS   R0
        MOV      #UPAT00,R0      ;LOAD AC0
        LDD     (R0),AC0
        MOV      @#UTMP2,@#UROM1
        MOV      #003,@#UROM2
        MOV      #054,@#UROM3
U4:     MOV      #UPAT20,R0      ;LOAD A POSITIVE NUMBER
        LDD     (R0),AC0      ;INTO AC0
    
```

3920	022110	010037	001252		MOV	R0,@#STMP10	
3921	022114	012737	022106	001236	MOV	#U4,@#STMP2	
3922	022122	012704	000200		MOV	#200,R4	;FPS CORRECT?
3923	022126	170205			STFPS	R5	

```

3925
3926 022130 020405          CMP      R4,R5
3927 022132 001402          BEQ      U5
3928 022134 000137 022566   JMP      @#UERR2
3929 022140                U5:
      022140 104413          LPERR
3930 022142 012700 000200   MOV      #200,R0          ;SET UP THE LOOP ON ERROR ADDRESS.
3931 022146 170100          LDFPS   R0
3932 022150 012700 022726   MOV      #UPAT00,R0      ;LOAD ACO
3933 022154 172410          LDD     (R0),AC0
3934 022156 013737 023002 023004  MOV      @#UTMP2,@#UROM1
3935 022164 012737 000403 023006  MOV      #403,@#UROM2
3936 022172 012737 000056 023010  MOV      #056,@#UROM3
3937 022200 012700 022756   MOV      #UPAT30,R0      ;LOAD A NEGATIVE
3938                                ;NUMBER INTO ACO
3939 022204 172410          U6:  LDD     (R0),AC0
3940 022206 010037 001252   MOV      R0,@#STMP10
3941 022212 012737 022204 001236  MOV      #U6,@#STMP2
3942 022220 012704 000210   MOV      #210,R4          ;FPS CORRECT
3943 022224 170205          STFPS   R5
3944 022226 020405          CMP      R4,R5
3945 022230 001402          BEQ      U7
3946 022232 000137 022566   JMP      @#UERR2
3947 022236                U7:
      022236 104413          LPERR
3948 022240 012700 000200   MOV      #200,R0          ;SET UP THE LOOP ON ERROR ADDRESS.
3949 022244 170100          LDFPS   R0
3950 022246 012700 022726   MOV      #UPAT00,R0      ;LOAD ACO
3951 022252 172410          LDD     (R0),AC0
3952 022254 013737 023000 023004  MOV      @#UTMP1,@#UROM1
3953 022262 012737 000401 023006  MOV      #401,@#UROM2
3954 022270 012737 000256 023010  MOV      #256,@#UROM3
3955 022276 012700 022766   MOV      #UPAT40,R0      ;LOAD -0 INTO ACO
3956 022302 172410          U10:  LDD     (R0),AC0
3957 022304 000240          U11:  NOP
3958 022306 010037 001252   MOV      R0,@#STMP10      ;TRAP FROM HERE IF
3959 022312 012737 022302 001236  MOV      #U10,@#STMP2      ;(BUT FIUV) FAILS!
3960 022320 012704 000214   MOV      #214,R4          ;SEE IF FPS IS CORRECT.
3961 022324 170205          STFPS   R5
3962 022326 020405          CMP      R4,R5
3963 022330 001402          BEQ      U12
3964 022332 000137 022502   JMP      @#UERR1
3965 022336 005737 022776   U12:  TST     @#UFLAG ;SEE IF ALL THE PATTERNS
3966 022342 001021          BNE     U14                ;HAVE BEEN TEST WITH
3967                                ;BOTH AC NOT EQUAL TO 0 AND AC=0
3968 022344 012700 022726   MOV      #UPAT00,R0      ;IF NOT GO BACK AND
3969 022350 012701 000004   MOV      #4,R1            ;CHECK THEM WITH AC=0
3970 022354 005020          U13:  CLR     (R0)+
3971 022356 077102          SOB     R1,U13
3972 022360 012737 177777 022776  MOV      #-1,@#UFLAG
3973 022366 012737 000233 023000  MOV      #233,@#UTMP1
3974 022374 012737 000223 023002  MOV      #223,@#UTMP2
3975 022402 000137 021744   JMP      @#U1
3976 022406                U14:
      022406 104413          LPERR
3977                                ;SET UP THE LOOP ON ERROR ADDRESS.
3978 022410 012737 022652 000244  ;NOW SEE IF A TRAP CAN BE FORCED BY SETTING FIUV AND LOADING -0
      MOV      #UERR3,@#FPVECT
    
```

```

3979 022416 012700 004200      MOV      #4200,R0      ;SET FD AND FIUV
3980 022422 170100      LDFPS   R0
3981 022424 012700 022726      MOV      #UPAT00,R0    ;SET UP ACO
3982 022430 172410      LDD     (R0),AC0
3983 022432 012700 022766      MOV      #UPAT40,R0    ;LOAD -0
3984 022436 172410      U15:    LDD     (R0),AC0    ;SHOULD TRAP TO 244
3985 022440 170000      U16:    CFCC
3986 022442 000240      NOP
3987 022444 012737 022436 001236  MOV      #U15,@#STMP2  ;REPORT ERROR.
3988                                     ;DIDN'T TRAP
3989 022452 104127      1$:     ERROR  +127    ;(BUT FIUV) FAILED.
3990 022454 000556      BR      UDONE
3991
3992                                     ;TRAPPED TO 244. DID (BUT FIUV) FAIL?
3993 022456 021627 022304  UERR0:  CMP      (SP),#U11
3994 022462 001402      BEQ     1$
3995 022464 000137 040234      JMP     @#FPSPUR
3996 022470 011637 001236  1$:     MOV      (SP),@#STMP2
3997 022474 022626      CMP     (SP)+,(SP)+
3998 022476 104126      2$:     ERROR  +126
3999 022500 000544      BR      UDONE
4000
4001                                     ;COME HERE TO ANALYZE FPS ERRORS
4002
4003 022502 032705 000004  UERR1:  BIT      #4,R5
4004 022506 001432      BEQ     UERR20
4005 022510 012737 000443 001244  UERR10: MOV      #443,@#STMP5
4006 022516 013703 023010      MOV     @#UROM3,R3
4007 022522 010337 001250      MOV     R3,@#STMP7
4008 022526 032703 000200      BIT     #200,R3
4009 022532 001403      BEQ     1$
4010 022534 042703 000200      BIC     #200,R3
4011 022540 000402      BR      2$
4012 022542 052703 000200  1$:     BIS     #200,R3
4013 022546 010337 001246  2$:     MOV     R3,@#STMP6
4014 022552 010537 001240  UERR11: MOV     R5,@#STMP3
4015 022556 010437 001242      MOV     R4,@#STMP4
4016 022562 104124      1$:     ERROR  +124
4017 022564 000512      BR      UDONE
4018 022566 032705 000004  UERR2:  BIT      #4,R5
4019 022572 001746      BEQ     UERR10
4020 022574 013737 023004 001244  UERR20: MOV     @#UROM1,@#STMP5
4021 022602 013703 023006      MOV     @#UROM2,R3
4022 022606 010337 001250      MOV     R3,@#STMP7
4023 022612 032703 000400      BIT     #400,R3
4024 022616 001403      BEQ     1$
4025 022620 042703 000400      BIC     #400,R3
4026 022624 000402      BR      2$
4027 022626 052703 000400  1$:     BIS     #400,R3
4028 022632 010337 001246  2$:     MOV     R3,@#STMP6
4029 022636 010537 001240  UERR21: MOV     R5,@#STMP3
4030 022642 010437 001242      MOV     R4,@#STMP4
4031 022646 104125      1$:     ERROR  +125
4032 022650 000460      BR      UDONE
4033
4034                                     ;INTERRUPT HERE WHEN FIUV SET AND ATTEMPTED TO LOAD-0
4035 022652 021627 022440  UERR3:  CMP      (SP),#U16
    
```

```

4036 022656 001402          BEQ      1$
4037 022660 000137 040234  JMP      @#FPSPUR
4038 022664 022626          CMP      (SP)+,(SP)+
4039 022666 005000          CLR      R0
4040 022670 170300          STST    R0          :GET FEC.
4041 022672 022700 000014  CMP      #14,R0      :CORRECT
4042 022676 001001          BNE     UERR4
4043 022700 000444          BR      UDONE
4044 022702 012737 022436 001236 UERR4:  MOV     #U15,@#STMP2
4045 022710 012737 000012 001242  MOV     #12,@#STMP4
4046 022716 010037 001240  MOV     R0,@#STMP3
4047 022722 104130          1$:    ERROR  +130
4048 022724 000432          BR      UDONE
4049 022726 000000          UPAT00: .WORD  0
4050 022730 000000          UPAT01:          0
4051 022732 000000          UPAT02:          0
4052 022734 000000          UPAT03:          0
4053
4054 022736 000000          UPAT10: .WORD  0          :0
4055 022740 000000          UPAT11:          0
4056 022742 000000          UPAT12:          0
4057 022744 000000          UPAT13:          0
4058
4059 022746 010421          UPAT20: .WORD  010421      :POS NUM
4060 022750 114631          UPAT21:          114631
4061 022752 125252          UPAT22:          125252
4062 022754 177777          UPAT23:          177777
4063
4064 022756 114631          UPAT30:          114631      :NEG NUM
4065 022760 135673          UPAT31:          135673
4066 022762 146314          UPAT32:          146314
4067 022764 167356          UPAT33:          167356
4068
4069 022766 100000          UPAT40:          100000      :NEG ZERO
4070 022770 000000          UPAT41:          0
4071 022772 000000          UPAT42:          0
4072 022774 000000          UPAT43:          0
4073
4074 022776 000000          UFLAG:  .WORD  0
4075 023000 000000          UTMP1:          0
4076 023002 000000          UTMP2:          0
4077 023004 000000          UROM1:          0
4078 023006 000000          UROM2:          0
4079 023010 000000          UROM3:          0
4080 023012          UDONE:
4081
4082
4090

```

 ;*TEST 25 ADDF,ADD, SUBF AND SUBD WITH FSRC=AC=0 TEST

;
 ;* THIS IS A TEST OF ADD AND SUB WITH FSRC=AC=0
 ;*

 TST25: SCOPE
 W1:

4091 023012 000004
 4091 023014

```

023014 104413 LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
4092 023016 012700 000200 MOV #200,R0
4093 023022 170100 LDFPS R0 ;SET DOUBLE MODE
4094 023024 012700 023546 MOV #WPAT00,R0 ;LOAD AC0=:
4095 023030 172410 LDD (R0),AC0
4096 023032 012737 023044 001236 MOV #W2,@#STMP2
4097 023040 012700 023546 MOV #WPAT00,R0
4098 023044 172010 W2: ADDD (R0),AC0 ;TEST INSTRUCTION.
4099 023046 170205 STFPS R5 ;GET FPS
4100 023050 170011 SETD ;SET DOUBLE MODE
4101 023052 012700 023546 MOV #WPAT00,R0
4102 023056 174010 STD AC0,(R0) ;GET THE RESULT
4103 023060 012701 023546 MOV #WPAT00,R1
4104 023064 012702 000004 MOV #4,R2
4105 023070 022021 W3: CMP (R0)+,(R1)+ ;IS RESULT CORRECT
4106 023072 001405 BEQ W4 ;NO
4107 JSR PC,@#WSETUP
4108 023074 004737 023514 1$: ERROR +133
4109 023100 104133 JMP @#WDONE
4110 023102 000137 023566 W4: SOB R2,W3
4111 023106 077210 SOB R2,W3
4112 023110 022705 000204 CMP #204,R5 ;IS FPS CORRECT
4113 023114 001410 BEQ W5 ;NO
4114 MOV #204,@#STMP4
4115 023116 012737 000204 001242 MOV R5,@#STMP3
4116 023124 010537 001240 1$: ERROR +137
4117 023130 104137 JMP @#WDONE
4118 023132 000137 023566 W5:
4119 023136 104413 LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
4120 023140 012700 000200 MOV #200,R0
4121 023144 170100 LDFPS R0 ;SET DOUBLE MODE
4122 023146 012700 023546 MOV #WPAT00,R0 ;LOAD AC0=0
4123 023152 172410 LDD (R0),AC0
4124 023154 012737 023172 001236 MOV #W6,@#STMP2
4125 023162 005000 CLR R0
4126 023164 170100 LDFPS R0 ;GO TO FLOATING MODE
4127 023166 012700 023546 MOV #WPAT00,R0
4128 023172 172010 W6: ADDF (R0),AC0 ;TEST INSTRUCTION
4129 023174 170205 STFPS R5 ;GET FPS
4130 023176 170011 SETD ;RESET TO DOUBLE MODE
4131 023200 012700 023546 MOV #WPAT00,R0
4132 023204 174010 STD AC0,(R0) ;GET THE RESULT
4133 023206 012701 023546 MOV #WPAT00,R1
4134 023212 012702 000004 MOV #4,R2
4135 023216 022021 W7: CMP (R0)+,(R1)+ ;WAS THE RESULT
4136 023220 001402 BEQ W10 ;NO. REPORT FAILURE.
4137 023222 104134 1$: ERROR +134
4138 023224 000560 BR WDONE
4139 023226 077205 W10: SOB R2,W7
4140 023230 022705 000004 CMP #4,R5 ;WAS FPS CORRECT
4141 023234 001407 BEQ W11 ;INCORRECT FPS.
4142 MOV #4,@#STMP4
4143 023236 012737 000004 001242 MOV R5,@#STMP3
4144 023244 010537 001240 1$: ERROR +140
4145 023250 104140 BR WDONE
4146 023252 000545
  
```

4147	023254				W11:	LPERR		:SET UP THE LOOP ON ERROR ADDRESS.
4148	023254	104413				MOV	#200,R0	
4149	023262	170100	000200			LDFPS	R0	:SET DOUBLE MODE
4150	023264	012700	023546			MOV	#WPAT00,R0	:LOAD AC0=0
4151	023270	172410				LDD	(R0),AC0	
4152	023272	012737	023304	001236		MOV	#W12,@#STMP2	
4153	023300	012700	023546			MOV	#WPAT00,R0	
4154	023304	173010			W12:	SUBD	(R0),AC0	:TEST INSTRUCTION
4155	023306	170205				STFPS	R5	:GET FPS
4156	023310	170011				SETD		:SET DOUBLE MODE
4157	023312	012700	023546			MOV	#WPAT00,R0	
4158	023316	174010				STD	AC0,(R0)	:GET THE RESULT
4159	023320	012701	023546			MOV	#WPAT00,R1	
4160	023324	012702	000004			MOV	#4,R2	
4161	023330	022021			W13:	CMP	(R0)+,(R1)+	:IS RESULT CORRECT?
4162	023332	001404				BEQ	W14	:NO.
4163								
4164	023334	004737	023514			JSR	PC,@#WSETUP	
4165	023340	104135			1\$:	ERROR	+135	
4166	023342	000511				BR	WDONE	
4167	023344	077207			W14:	SOB	R2,W13	
4168	023346	022705	000204			CMP	#204,R5	:IS FPS CORRECT?
4169	023352	001407				BEQ	W15	:NO.
4170								
4171	023354	012737	000204	001242		MOV	#204,@#STMP4	
4172	023362	010537	001240			MOV	R5,@#STMP3	
4173	023366	104141			1\$:	ERROR	+141	
4174	023370	000476				BR	WDONE	
4175	023372				W15:			
4176	023372	104413				LPERR		:SET UP THE LOOP ON ERROR ADDRESS.
4177	023374	012700	000200			MOV	#200,R0	
4178	023400	170100				LDFPS	R0	:SET DOUBLE MODE
4179	023402	012700	023546			MOV	#WPAT00,R0	:LOAD AC0=0
4180	023406	172410				LDD	(R0),AC0	
4181	023410	012737	023426	001236		MOV	#W16,@#STMP2	
4182	023416	005000				CLR	R0	
4183	023420	170100				LDFPS	R0	:ENTER FLOATING MODE.
4184	023422	012700	023546			MOV	#WPAT00,R0	
4185	023426	173010			W16:	SUBF	(R0),AC0	:TEST INSTRUCTION.
4186	023430	170205				STFPS	R5	:GET FPS
4187	023432	170011				SETD		:RESET TO DOUBLE MODE
4188	023434	012700	023546			MOV	#WPAT00,R0	:GET THE RESULT.
4189	023440	174010				STD	AC0,(R0)	
4190	023442	012701	023546			MOV	#WPAT00,R1	
4191	023446	012702	000004			MOV	#4,R2	
4192	023452	022021			W17:	CMP	(R0)+,(R1)+	:IS RESULT CORRECT?
4193	023454	001404				BEQ	W20	:NO.
4194								
4195	023456	004737	023514			JSR	PC,@#WSETUP	
4196	023462	104136			1\$:	ERROR	+136	
4197	023464	000440				BR	WDONE	
4198	023466	077207			W20:	SOB	R2,W17	
4199	023470	022705	000004			CMP	#4,R5	:IS FPS CORRECT?
4200	023474	001434				BEQ	WDONE	:NO.
4201								
4201	023476	012737	000004	001242		MOV	#4,@#STMP4	

```

4202 023504 010537 001240          MOV    R5, @#$TMP3
4203 023510 104142          1$:   ERROR  +142
4204 023512 000425          BR     WDONE
4205
4206          ;SET UP FOR ERROR CALL
4207
4208 023514 012737 023546 001240 WSETUP: MOV    #WPAT00, @#$TMP3
4209 023522 012737 023546 001242      MOV    #WPAT00, @#$TMP4
4210 023530 012737 023546 001246      MOV    #WPAT00, @#$TMP6
4211 023536 012737 023546 001244      MOV    #WPAT00, @#$TMP5
4212 023544 000207          RTS    PC
4213 023546 000000          WPAT00: .WORD 0
4214 023550 000000          WPAT01:      0
4215 023552 000000          WPAT02:      0
4216 023554 000000          WPAT03:      0
4217
4218 023556 000000          WDAPO0: .WORD 0
4219 023560 000000          WDAT01:      0
4220 023562 000000          WDAT02:      0
4221 023564 000000          WDAT03:      0
4222
4223 023566 104412          WDONE:      RSETUP
  
```

```

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).
  
```

4224
4225
4232

```

*****
*TEST 26      ADDD AND SUB WITH FSRC=0
*
* THIS IS A TEST OF ADD AND SUB WITH FSRC=0.
*
  
```

```

4233 023570 000004
4234 023572 104413
4235 023574 012700 000200
4236 023600 170100
4237 023602 012700 024332
4238 023606 010037 024320
4239 023612 172410
4240 023614 012737 023626 001236
4241 023622 012700 024342
4242 023626 172010
4243 023630 170205
4244 023632 170011
4245 023634 012700 024322
4246 023640 174010
4247 023642 012701 024332
4248 023646 012702 000004
4249 023652 022021
4250 023654 001401
4251 023656 000553
4251 023660 077204
  
```

```

*****
TST26: SCOPE
X1:      LPERR          ;SET UP THE LOOP ON ERROR ADDRESS.
        MOV    #200, R0
        LDFPS  R0          ;SET DOUBLE MODE
        MOV    #XPAT00, R0 ;SET ACO TO POSITIVE
        MOV    R0, @#XTMP ;NUMBER #0
        LDD   (R0), ACO
        MOV    #X2, @#$TMP2
        MOV    #XPAT10, R0 ;FSRC=0
X2:      ADDD   (R0), ACO  ;TEST INSTRUCTION
        STFPS  R5
        SETD
        MOV    #XDAT00, R0 ;GET RESULT.
        STD   ACO, (R0)
        MOV    #XPAT00, R1
        MOV    #4, R2
X3:      CMP   (R0)+, (R1)+ ;IS RESULT CORRECT?
        BEQ   X4
        BR    XERR1
X4:      SOB   R2, X3
  
```



```

4252 023662 012704 000200      MOV      #200,R4
4253 023666 020405      CMP      R4,R5      ;IS FPS CORRECT?
4254 023670 001402      BEQ     X5
4255 023672 000137 024270      JMP     @#XERR2
4256 023676      X5:      LPERR      ;SET UP THE LOOP ON ERROR ADDRESS.
      023676 104413      MOV      #200,R0
4257 023700 012700 000200      LDFPS   R0      ;SET DOUBLE MODE
4258 023704 170100      MOV      #XPAT20,R0 ;SET ACO TO
4259 023706 012700 024352      MOV      R0,@#XTMP ;NEGATIVE NUMBER
4260 023712 010037 024320      LDD     (R0),AC0
4261 023716 172410      MOV      #X6,@#STMP2
4262 023720 012737 023732 001236      MOV      #XPAT10,R0 ;FSRC=0
4263 023726 012700 024342      ADDD   (R0),AC0 ;TEST INSTRUCTION
4264 023732 172010      STFPS  R5
4265 023734 170205      SETD
4266 023736 170011      MOV      #XDAT00,R0 ;GET RESULT
4267 023740 012700 024322      STD    ACO,(R0)
4268 023744 174010      MOV      #XPAT20,R1
4269 023746 012701 024352      MOV      #4,R2
4270 023752 012702 000004      CMP     (R0)+,(R1)+ ;IS RESULT CORRECT?
4271 023756 022021      BEQ     X10
4272 023760 001401      BR     XERR1
4273 023762 000511      SOB    R2,X7
4274 023764 077204      MOV      #210,R4
4275 023766 012704 000210      CMP     R4,R5      ;IS FPS CORRECT?
4276 023772 020405      BEQ     X11
4277 023774 001401      BR     XERR2
4278 023776 000534      X11:    LPERR      ;SET UP THE LOOP ON ERROR ADDRESS.
4279 024000      MOV      #200,R0
4280 024002 012700 000200      LDFPS   R0      ;SET DOUBLE MODE
4281 024006 170100      MOV      #XPAT00,R0 ;SET ACO TO NON-ZERO
4282 024010 012700 024332      MOV      R0,@#XTMP ;POSITIVE NUMBER
4283 024014 010037 024320      LDD     (R0),AC0
4284 024020 172410      MOV      #X12,@#STMP2
4285 024022 012737 024034 001236      MOV      #XPAT10,R0 ;FSRC=0
4286 024030 012700 024342      SUBD   (R0),AC0 ;TEST INSTRUCTION
4287 024034 173010      STFPS  R5
4288 024036 170205      SETD
4289 024040 170011      MOV      #XDAT00,R0 ;GET RESULT
4290 024042 012700 024322      STD    ACO,(R0)
4291 024046 174010      MOV      #XPAT00,R1
4292 024050 012701 024332      MOV      #4,R2
4293 024054 012702 000004      CMP     (R0)+,(R1)+ ;IS RESULT CORRECT?
4294 024060 022021      BEQ     X14
4295 024062 001401      BR     XERR3
4296 024064 000463      SOB    R2,X13
4297 024066 077204      MOV      #200,R4
4298 024070 012704 000200      CMP     R4,R5      ;IS FPS CORRECT?
4299 024074 020405      BEQ     X15
4300 024076 001401      BR     XERR4
4301 024100 000501      X15:    LPERR      ;SET UP THE LOOP ON ERROR ADDRESS.
4302 024102      MOV      #200,R0
4303 024104 012700 000200      LDFPS   R0      ;SET DOUBLE MODE
4304 024110 170100      MOV      #XPAT20,R0 ;SET ACO=A NEGATIVE
4305 024112 012700 024352

```

```

4306 024116 010037 024320      MOV      R0,@#XTMP      ;NUMBER
4307 024122 172410              LDD      (R0),AC0
4308 024124 012737 024136 001236  MOV      #X16,@#STMP2
4309 024132 012700 024342      MOV      #XPAT10,R0    ;FSRC=0
4310 024136 173010              SUBD     (R0),AC0      ;TEST INSTRUCTION.
4311 024140 170205              STFPS   R5
4312 024142 170011              SETD
4313 024144 012700 024322      MOV      #XDAT00,R0    ;GET RESULT
4314 024150 174010              STD     AC0,(R0)
4315 024152 012701 024352      MOV      #XPAT20,R1
4316 024156 012702 000004      MOV      #4,R2
4317 024162 022021              X17:    CMP      (R0)+,(R1)+ ;IS RESULT CORRECT?
4318 024164 001401              BEQ
4319 024166 000422              BR      XERR3
4320 024170 077204              X20:    SOB     R2,X17
4321 024172 012704 000210      MOV      #210,R4      ;IS FPS CORRECT?
4322 024176 020405              CMP     R4,R5
4323 024200 001401              BEQ     X21
4324 024202 000440              BR      XERR4
4325 024204 000466              X21:    BR      XDONE
4326
4327              ;REPORT DATA ERRORS
4328
4329 024206 012737 024342 001240  XERR1:  MOV      #XPAT10,@#STMP3
4330 024214 013737 024320 001242      MOV      @#XTMP,@#STMP4
4331 024222 012737 024322 001244      MOV      #XDAT00,@#STMP5
4332 024230 104143              1$:    ERROR  +143
4333 024232 000453              BR      XDONE
4334 024234 012737 024342 001240  XERR3:  MOV      #XPAT10,@#STMP3
4335 024242 013737 024320 001242      MOV      @#XTMP,@#STMP4
4336 024250 012737 024322 001244      MOV      #XDAT00,@#STMP5
4337 024256 013737 024320 001246      MOV      @#XTMP,@#STMP6
4338 024264 104144              1$:    ERROR  +144
4339 024266 000435              BR      XDONE
4340
4341              ;REPORT FPS ERRORS
4342
4343 024270              XERR2:
4344 024270 010537 001240      MOV      R5,@#STMP3
4345 024274 010437 001242      MOV      R4,@#STMP4
4346 024300 104145              1$:    ERROR  +145
4347 024302 000427              BR      XDONE
4348 024304              XERR4:
4349 024304 010537 001240      MOV      R5,@#STMP3
4350 024310 010437 001242      MOV      R4,@#STMP4
4351 024314 104146              1$:    ERROR  +146
4352 024316 000421              BR      XDONE
4353 024320 000000      XTMP:   .WORD  0
4354 024322 000000      XDAT00: .WORD  0
4355 024324 000000      XDAT01:      0
4356 024326 000000      XDAT02:      0
4357 024330 000000      XDAT03:      0
4358
4359 024332 010421      XPAT00: .WORD  010421
4360 024334 021042      XPAT01:      021042
4361 024336 031463      XPAT02:      031463
4362 024340 042104      XPAT03:      042104
  
```

4363
 4364 024342 000000
 4365 024344 000000
 4366 024346 000000
 4367 024350 000000
 4368 024352 104210
 4369 024354 114631
 4370 024356 125252
 4371 024360 135673
 4372
 4373 024362
 024362 104412

XPAT10: .WORD 0
 XPAT11: 0
 XPAT12: 0
 XPAT13: 0
 XPAT20: .WORD 104210
 XPAT21: 114631
 XPAT22: 125252
 XPAT23: 135673

XDONE: RSETUP

;GO INITIALIZE THE FPS AND STACK; AND
 ;SEE IF THE USER HAS EXPRESSED
 ;THE DESIRE TO CHANGE THE SOFTWARE
 ;VIRTUAL CONSOLE SWITCH REGISTER (HAS
 ;THE USER TYPED CONTROL G?).

4374
 4382

 ;*TEST 27 SUBD WITH AC=0 TEST
 ;*
 ;* THIS IS A TEST OF SUBD WITH AC=0. BOTH POSITIVE
 ;* AND NEGATIVE FSRC'S ARE TRIED.
 ;*

024364 000004
 4383 024366 005037 024716
 4384 024372 012737 024736 024720
 4385 024400 012737 024746 024722
 4386 024405 012737 000210 024724
 4387 024414
 024414 104413
 4388 024416 012700 000200
 4389 024422 170100
 4390 024424 012700 024756
 4391 024430 172410
 4392 024432 013700 024720
 4393 024436 173010
 4394 024440 170205
 4395 024442 170011
 4396 024444 012700 024726
 4397 024450 174010
 4398 024452 012702 000004
 4399 024456 013701 024722
 4400 024462 022021
 4401 024464 001026
 4402 024466 077203
 4403 024470 023705 024724
 4404 024474 001401
 4405 024476 000475
 4406 024500 005737 024716
 4407 024504 001015
 4408 024506 012737 177777 024716
 4409 024514 012737 024746 024720
 4410 024522 012737 024736 024722
 4411 024530 012737 000200 024724
 4412 024536 000726

 TST27: SCOPE
 CLR @#YFLAG
 MOV #YPAT00,@#YTMP1 ;P
 MOV #YPAT10,@#YTMP2 ;N
 MOV #210,@#YTMP3
 Y1: LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
 MOV #200,R0
 LDFPS R0 ;SET DOUBLE MODE
 MOV #YPAT20,R0 ;SET ACO=0
 LDD (R0),AC0
 MOV @#YTMP1,R0
 Y2: SUBD (R0),AC0 ;TEST INSTRUCTION
 STFPS R5
 SETD
 MOV #YDAT00,R0 ;GET RESULT
 STD AC0,(R0)
 MOV #4,R2
 MOV @#YTMP2,R1 ;CHECK RESULT.
 Y3: CMP (R0)+,(R1)+
 BNE Y6
 SOB R2,Y3
 CMP @#YTMP3,R5 ;FPS CORRECT?
 BEQ Y4
 BR YERR3
 Y4: TST @#YFLAG ;FINISHED TEST?
 BNE Y5
 MOV #-1,@#YFLAG
 MOV #YPAT10,@#YTMP1
 MOV #YPAT00,@#YTMP2
 MOV #200,@#YTMP3
 BR Y1

```

4413 024540 000512          Y5:   BR      YDONE
4414 024542 012702 000004   Y6:   MOV     #4,R2
4415 024546 012700 024720     MOV     #YTMP1,R0      ;DID XOR OF SIGN BIT
4416 024552 012701 024726     MOV     #YDAT00,R1    ;FAIL?
4417 024556 022021          Y7:   CMP     (R0)+,(R1)+
4418 024560 001002          BNE     YERR1
4419 024562 077203          SOB     R2,Y7
4420 024564 000421          BR      YERR2
4421 024566          YERR1:          ;DATA FAILURE
4422 024566 012737 024436 001236     MOV     #Y2,@#STMP2
4423 024574 013737 024720 001240     MOV     @#YTMP1,@#STMP3
4424 024602 012737 024756 001242     MOV     #YPAT20,@#STMP4
4425 024610 012737 024726 001244     MOV     #YDAT00,@#STMP5
4426 024616 013737 024722 001246     MOV     @#YTMP2,@#STMP6
4427 024624 104147          1$:   ERROR  +147
4428 024626 000457          BR      YDONE
4429 024630          YERR2:          ;XOR OF SIGN BIT
4430 024630 012737 024436 001236     MOV     #Y2,@#STMP2    ;FAILED
4431 024636 013737 024720 001240     MOV     @#YTMP1,@#STMP3
4432 024644 012737 024756 001242     MOV     #YPAT20,@#STMP4
4433 024652 012737 024726 001244     MOV     #YDAT00,@#STMP5
4434 024660 013737 024722 001246     MOV     @#YTMP2,@#STMP6
4435 024666 104150          1$:   ERROR  +150
4436 024670 000436          BR      YDONE
4437 024672          YERR3:          ;FPS WRONG.
4438 024672 012737 024436 001236     MOV     #Y2,@#STMP2
4439 024700 010537 001240     MOV     R5,@#STMP3
4440 024704 013737 024724 001242     MOV     @#YTMP3,@#STMP4
4441 024712 104151          1$:   ERROR  +151
4442 024714 000424          BR      YDONE
4443
4444 024716 000000          YFLAG: .WORD  0
4445 024720 000000          YTMP1:          0
4446 024722 000000          YTMP2:          0
4447 024724 000000          YTMP3:          0
4448
4449 024726 000000          YDAT00: .WORD  0
4450 024730 000000          YDAT01:          0
4451 024732 000000          YDAT02:          0
4452 024734 000000          YDAT03:          0
4453
4454 024736 063146          YPAT00:          063146
4455 024740 052525          YPAT01:          052525
4456 024742 042104          YPAT02:          042104
4457 024744 167356          YPAT03:          167356
4458
4459 024746 163146          YPAT10:          163146
4460 024750 052525          YPAT11:          052525
4461 024752 042104          YPAT12:          042104
4462 024754 167356          YPAT13:          167356
4463
4464 024756 000000          YPAT20:          0
4465 024760 000000          YPAT21:          0
4466 024762 000000          YPAT22:          0
4467 024764 000000          YPAT23:          0
4468
4469 024766          YDONE:
  
```

024766 104412

RSETUP

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).

4478

;*TEST 30 ADDD WITH AC=0 TEST

:@
:@ THIS IS A TEST OF ADDD WITH AC=0. BOTH
;* POSITIVE AND NEGATIVE FSRC'S ARE TRIED.
:*

4479	024770	000004		
4480	024772	005067	000224	
4481	024776	012737	025240	025224
4482	025004	012737	000200	025226
	025012			
	025012	104413		
4483	025014	012700	000200	
4484	025020	170100		
4485	025022	012700	025260	
4486	025026	172410		
4487	025030	013700	025224	
4488	025034	172010		
4489	025036	170205		
4490	025040	170011		
4491	025042	012700	025230	
4492	025046	174010		
4493	025050	012702	000004	
4494	025054	013701	025224	
4495	025060	022021		
4496	025062	001401		
4497	025064	000423		
4498	025066	077204		
4499	025070	023705	025226	
4500	025074	001401		
4501	025076	000437		
4502	025100	005737	025222	
4503	025104	001012		
4504	025106	012737	177777	025222
4505	025114	012737	025250	025224
4506	025122	012737	000210	025226
4507	025130	000730		
4508	025132	000456		
4509	025134			
4510	025134	012737	025034	001236
4511	025142	013737	025224	001240
4512	025150	012737	025260	001242
4513	025156	012737	025230	001244
4514	025164	013737	025224	001246
4515	025172	104152		
4516	025174	000435		
4517	025176			
4518	025176	012737	025034	001236
4519	025204	010537	001240	

```

TST30: SCOPE
        CLR      ZFLAG
        MOV      #ZPAT00,@#ZTMP1 ;P
        MOV      #200,@#ZTMP2
Z1:     LPERR
        MOV      #200,R0          ;SET UP THE LOOP ON ERROR ADDRESS.
        LDFPS   R0              ;SET DOUBLE MODE
        MOV      #ZPAT20,R0     ;SET ACO=0
        LDD     (R0),AC0
        MOV      @#ZTMP1,R0
Z2:     ADDD    (R0),AC0        ;TEST INSTRUCTION
        STFPS   R5
        SETD
        MOV      #ZDAT00,R0     ;GET RESULT
        STD     AC0,(R0)
        MOV      #4,R2
        MOV      @#ZTMP1,R1    ;RESULT CORRECT?
Z3:     CMP     (R0)+,(R1)+
        BEQ     Z4
        BR      ZERR1
Z4:     SOB    R2,Z3
        CMP     @#ZTMP2,R5     ;FPS CORRECT?
        BEQ     Z5
        BR      ZERR2
Z5:     TST    @#ZFLAG        ;FINISHED TEST?
        BNE    Z6
        MOV     #-1,@#ZFLAG
        MOV     #ZPAT10,@#ZTMP1
        MOV     #210,@#ZTMP2
        BR     Z1
Z6:     BR     ZDONE
ZERR1:  MOV     #Z2,@#STMP2    ;DATA FAILURE
        MOV     @#ZTMP1,@#STMP3
        MOV     #ZPAT20,@#STMP4
        MOV     #ZDAT00,@#STMP5
        MOV     @#ZTMP1,@#STMP6
ZERR2:  ERROR  +152
        BR     ZDONE
        MOV     #Z2,@#STMP2
        MOV     R5,@#STMP3

```

```

4520 025210 013737 025226 001242      MOV      @#ZTMP2,@#STMP4
4521 025216 104153      1$:      ERROR      +153
4522 025220 000423      BR        ZDONE
4523
4524 025222 000000      ZFLAG:   .WORD    0
4525 025224 000000      ZTMP1:   0
4526 025226 000000      ZTMP2:   0
4527
4528 025230 000000      ZDAT00:  .WORD    0
4529 025232 000000      ZDAT01:  0
4530 025234 000000      ZDAT02:  0
4531 025236 000000      ZDAT03:  0
4532
4533 025240 031463      ZPAT00:  031463
4534 025242 010421      ZPAT01:  010421
4535 025244 146314      ZPAT02:  146314
4536 025246 156735      ZPAT03:  156735
4537
4538 025250 156735      ZPAT10:  156735
4539 025252 167356      ZPAT11:  167356
4540 025254 135673      ZPAT12:  135673
4541 025256 146314      ZPAT13:  146314
4542
4543 025260 000000      ZPAT20:  0
4544 025262 000000      ZPAT21:  0
4545 025264 000000      ZPAT22:  0
4546 025266 000000      ZPAT23:  0
4547
4548 025270      ZDONE:
      025270 104412      RSETUP

```

```

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).

```

4549
4550
4558
4559

```

;TEST TITLE:ADDF AND ADDD WITH E(AC)=E(FSRC) TEST AND (BUT FT) TEST
:*****
:*TEST 31      SEE ABOVE COMMENT FOR TEST TITLE
:*
:* THIS IS A TEST OF THE ADD INSTRUCTION WITH THE
:* OPERANDS HAVING EQUAL EXPONENTS.  THE (BUF FT)
:* FORK IN THE ROUND/TRUNK FLOWS IS ALSO TESTED.
:*
:*****

```

```

4560 025272 000004      TST31:  SCOPE
      025274      AA1:
4561 025274 104413      LPERR      ;SET UP THE LOOP ON ERROR ADDRESS.
4562 025276 012700 003240      MOV      #3240,R0
4563 025302 170100      LDFPS     R0      ;SET FIV FIV FD AND FT
4564 025304 012737 025654 000244      MOV      #AAERRO,@#FPVECT ;IN CASE THE OVER/UNDER
4565 025312 012700 026232      MOV      #AAPATO,R0      ;FLOWS IN TRAP WILL
4566 025316 172410      ;OCCUR
4567 025320 012737 025332 001236      LDD      (R0),ACO      ;SET UP ACO
4568 025326 012700 026242      MOV      #AA2,@#STMP2    ;OPERAND
4569 025332 172010      MOV      #AAPAT1,R0
      AA2:  ADDD      (R0),ACO      ;TEST INSTRUCTION

```

4570									
4571	025334	012700	026222	AA3:	MOV	#AADATO,R0			:SHOULD TRUNCATE
4572	025340	174010			STD	ACO,(R0)			:GET THE RESULT
4573	025342	012701	026252		MOV	#AAPAT2,R1			
4574	025346	012702	000004		MOV	#4,R2			
4575	025352	022021		AA4:	CMP	(R0)+,(R1)+			:CORRECT?
4576	025354	001414			BEQ	AA7			
4577	025356	012700	026262		MOV	#AAPAT3,R0			:DID (BUT FT) FAIL
4578	025362	012701	026222		MOV	#AADATO,R1			
4579	025366	012702	000004		MOV	#4,R2			

4581 025372 022021

AA5: (MP (R0)*,(R1)*


```

4583 025374 001401          BEQ      AA6
4584 025376 000561          BR       AAERR1 ;DATA ERROR
4585 025400 077204          AA6:    SOB      R2,AA5
4586 025402 000137 025776    JMP      @#AAERR2 ;(BUT FT) ERROR
4587 025406 077217          AA7:    SOB      R2,AA4
4588
4589                      ;NOW TEST DOUBLE FLOATING ROUND MODE.
4590
4591 025410          AA10:
      025410 104413          LPERR           ;SET UP THE LOOP ON ERROR ADDRESS.
4592 025412 012700 003200    MOV      #3200,R0 ;SET FD FIV FIV. FT=0
4593 025416 170100          LDFPS      R0
4594 025420 012700 026232    MOV      #AAPAT0,R0
4595 025424 172410          LDD      (R0),AC0 ;SET UP ACO OPERAND
4596 025426 012737 025440 001236    MOV      #AA11,@#STMP2
4597 025434 012700 026242    MOV      #AAPAT1,R0
4598 025440 172010          AA11:    ADDD     (R0),AC0 ;TEST INSTRUCTION
4599                      ;SHOULD ROUND
4600 025442 012700 026222    AA12:    MOV      #AADAT0,R0
4601 025446 174010          STD      ACO,(R0) ;GET THE RESULT
4602 025450 012701 026262    MOV      #AAPAT3,R1
4603 025454 012702 000004          MOV      #4,R2
4604 025460 022021          AA13:    CMP      (R0)+,(R1)+ ;CORRECT?
4605 025462 001425          BEQ      AA20
4606 025464 012700 026252    MOV      #AAPAT2,R0 ;DID (BUT FT) FAIL?
4607 025470 012701 026222    MOV      #AADAT0,R1
4608 025474 012702 000004          MOV      #4,R2
4609 025500 022021          AA14:    CMP      (R0)+,(R1)+
4610 025502 001413          BEQ      AA17
4611 025504 012700 026272    MOV      #AAPAT4,R0 ;WAS THE FLOATING
4612 025510 012701 026222    MOV      #AADAT0,R1 ;CONSTANT USED
4613 025514 012702 000004          MOV      #4,R2 ;INSTEAD OF THE
4614 025520 022021          AA15:    CMP      (R0)+,(R1)+ ;DOUBLE CONSTANT
4615 025522 001401          BEQ      AA16 ;IN THE ROUND
4616 025524 000542          BR       AAERR3 ;FLOWS?
4617 025526 077204          AA16:    SOB      R2,AA15 ;DATA ERROR
4618 025530 000544          BR       AAERR4 ;CONSTANT ERROR
4619 025532 077216          AA17:    SOB      R2,AA14
4620 025534 000560          BR       AAERR5 ;(BUT FT) ERROR
4621 025536 077230          AA20:    SOB      R2,AA13
4622
4623                      ;NOW TEST ADDF WITH FT=0, ROUND MODE
4624
4625 025540          AA21:
      025540 104413          LPERR           ;SET UP THE LOOP ON ERROR ADDRESS.
4626 025542 012700 003200    MOV      #3200,R0 ;FIV=1, FIV=1, FT=0
4627 025546 170100          LDFPS      R0
4628 025550 012700 026232    MOV      #AAPAT0,R0 ;LOAD ACO OPERAND
4629 025554 172410          LDD      (R0),AC0
4630 025556 170001          SETF           ;ENTER FLOATING MODE
4631 025560 012737 025572 001236    MOV      #AA22,@#STMP2
4632 025566 012700 026302    MOV      #AAPAT5,R0
4633 025572 172010          AA22:    ADDF     (R0),AC0 ;TEST INSTRUCTION
4634                      ;SHOULD ROUND
4635 025574          AA23:
4636 025574 170011          SETD           ;RESET TO DOUBLE
4637                      ;MODE
    
```

```

4638 025576 012700 026222      MOV      #AADATO,R0      :GET THE RESULT
4639 025602 174010              STD      ACO,(R0)
4640 025604 012701 026312      MOV      #AAPAT6,R1     :CORRECT?
4641 025610 012702 000002      MOV      #2,R2
4642 025614 022021      AA24:   CMP      (R0)+,(R1)+
4643 025616 001413              BEQ      AA27
4644 025620 012700 026252      MOV      #AAPAT2,R0     :WAS THE DOUBLE
4645 025624 012701 026222      MOV      #AADATO,R1     :CONSTANT USED INSTEAD
4646 025630 012702 000002      MOV      #2,R2          :OF THE FLOATING
4647 025634 022011      AA25:   CMP      (R0)+,(R1)   :CONSTANT IN THE
4648 025636 001401              BEQ      AA26          :ROUND FLOWS?
4649 025640 000534              BR       AAERR6 ;DATA ERROR
4650 025642 077204      AA26:   SOB      R2,AA25
4651 025644 000550              BR       AAERR7 ;CONSTANT ERROR
4652 025646 077216      AA27:   SOB      R2,AA24
4653 025650 000137 026322      JMP      @#AADONE
4654
4655      ;COME HERE IF A TRAP OCCURS TO 244.
4656
4657 025654 013700 001236      AAERR0: MOV      @#$TMP2,R0 ;SEE IF THE TRAP WAS
4658 025660 005720              TST      (R0)+ ;AT A TEST INSTRUCTION
4659 025662 020016              CMP      R0,(SP)
4660 025664 001402              BEQ      1$
4661 025666 000137 040234      10$:   JMP      @#FPSPUR
4662 025672
4663 025672 170300              1$:   STST     R0 ;GET FEC
4664 025674 020027 000010              CMP      R0,#10
4665 025700 001405              BEQ      20$ ;OVERFLOW
4666 025702 020027 000012              CMP      R0,#12
4667 025706 001410              BEQ      30$ ;UNDERFLOW
4668 025710 000766              BR       10$
4669 025712 025714      20$:   MOV      (SP),@#$TMP2 ;REPORT OVERFLOW ERROR
4670 025714 011637 001236      20$:   CMP      (SP)+,(SP)+
4671 025720 022626      21$:   ERROR   +154
4672 025722 104154      25$:   JMP      @#AADONE
4673 025724 000137 026322      30$:   MOV      (SP),@#$TMP2 ;REPORT UNDERFLOW
4674 025730 011637 001236      30$:   CMP      (SP)+,(SP)+ ;ERROR
4675 025734 022626      31$:   ERROR   +155
4676 025736 104155              BR       25$
4677 025740 000771
4678
4679      ;ADD RESULT INCORRECT
4680 025742 012737 026252 001246      AAERR1: MOV      #AAPAT2,@#$TMP6
4681 025750 012737 026232 001242      AAERR10: MOV     #AAPAT0,@#$TMP4
4682 025756 012737 026242 001240              MOV      #AAPAT1,@#$TMP3
4683 025764 012737 026222 001244              MOV      #AADATO,@#$TMP5
4684 025772 104162      1$:   ERROR   +162
4685 025774 000552              BR       AADONE
4686 025776 012737 026252 001246      AAERR2: MOV     #AAPAT2,@#$TMP6 ;(BUT FT) FAILED.
4687 026004 012737 026232 001242              MOV      #AAPAT0,@#$TMP4
4688 026012 012737 026242 001240              MOV      #AAPAT1,@#$TMP3
4689 026020 012737 026222 001244              MOV      #AADATO,@#$TMP5
4690 026026 104156      1$:   ERROR   +156
4691 026030 000534              BR       AADONE
4692 026032 012737 026262 001246      AAERR3: MOV     #AAPAT3,@#$TMP6 ;DATA ERROR.
4693 026040 000743              BR       AAERR10
4694 026042 012737 026262 001246      AAERR4: MOV     #AAPAT3,@#$TMP6 ;BAD CONSTANT
    
```

```

4695 026050 012737 026232 001242      MOV      #AAPAT0,@#$TMP4
4696 026056 012737 026242 001240      MOV      #AAPAT1,@#$TMP3
4697 026064 012737 026222 001244      MOV      #AADATO,@#$TMP5
4698 026072 104160      1$:      ERROR  +160
4699 026074 000512      BR       AADONE
4700 026076 012737 026262 001246  AAERR5:  MOV      #AAPAT3,@#$TMP6  ;(BUT FT) FAILED.
4701 026104 012737 026232 001242      MOV      #AAPAT0,@#$TMP4
4702 026112 012737 026242 001240      MOV      #AAPAT1,@#$TMP3
4703 026120 012737 026222 001244      MOV      #AADATO,@#$TMP5
4704 026126 104157      1$:      ERROR  +157
4705 026130 000474      BR       AADONE
4706 026132 012737 026302 001240  AAERR6:  MOV      #AAPAT5,@#$TMP3  ;FD=0 AND
4707 026140 012737 026232 001242      MOV      #AAPAT0,@#$TMP4  ;DATA ERROR
4708 026146 012737 026222 001244      MOV      #AADATO,@#$TMP5
4709 026154 012737 026312 001246      MOV      #AAPAT6,@#$TMP6
4710 026162 104160      1$:      ERROR  +160
4711 026164 000456      BR       AADONE
4712 026166 012737 026302 001240  AAERR7:  MOV      #AAPAT5,@#$TMP3  ;CONSTANT ERROR
4713 026174 012737 026232 001242      MOV      #AAPAT0,@#$TMP4
4714 026202 012737 026222 001244      MOV      #AADATO,@#$TMP5
4715 026210 012737 026312 001246      MOV      #AAPAT6,@#$TMP6
4716 026216 104161      1$:      ERROR  +161
4717 026220 000440      BR       AADONE
4718 026222 000000      AADATO:  0
4719 026224 000000      0
4720 026226 000000      0
4721 026230 000000      0
4722 026232 000200      AAPAT0:  200
4723 026234 000000      0
4724 026236 000000      0
4725 026240 000000      0
4726 026242 000200      AAPAT1:  200
4727 026244 000000      0
4728 026246 000000      0
4729 026250 000001      1
4730 026252 000400      AAPAT2:  400
4731 026254 000000      0
4732 026256 000000      0
4733 026260 000000      0
4734 026262 000400      AAPAT3:  400
4735 026264 000000      0
4736 026266 000000      0
4737 026270 000001      1
4738 026272 000400      AAPAT4:  400
4739 026274 000000      0
4740 026276 100000      100000
4741 026300 000000      0
4742 026302 000200      AAPAT5:  200
4743 026304 000001      1
4744 026306 000000      0
4745 026310 000000      0
4746 026312 000400      AAPAT6:  400
4747 026314 000001      1
4748 026316 000000      0
4749 026320 000000      0
4750 026322 104412      AADONE:
          RSETUP      ;GO INITIALIZE THE FPS AND STACK; AND
    
```

:SEE IF THE USER HAS EXPRESSED
 :THE DESIRE TO CHANGE THE SOFTWARE
 :VIRTUAL CONSOLE SWITCH REGISTER (HAS
 :THE USER TYPED CONTROL G?).

4761

```

*****
*TEST 32      ADDF & ADDD WITH E(AC) LESS THAN E(FSRC) TEST
*
*THIS IS ATEST OF THE ADDD AND ADDF
*INSTRUCTIONS AND THE ALIGN AC ALGORITHM
*FLOWS. THE CONSTANT (25 FOR FLOATING, 57 FOR
*DOUBLE) USED IS CHECKED. THEN SIMPLE
*AND WORST CASE ALIGNMENT SITUATIONS ARE
*TRIED. NOTE E(AC) IS LESS THEN E(FSRC)
*
*****
    
```

```

026324 000004
4762 026324 104413
4763 026326 012704 003200
4764 026330 012704 003200
4765 026334 170104
4766 026336 012737 026356 001236
4767 026344 012700 027760
4768 026350 172410
4769 026352 012700 030000
4770 026356 172010
4771 026360 170205
4772 026362 012700 027750
4773 026366 174010
4774 026370 012701 030000
4775 026374 012702 000004
4776 026400 022021
4777 026402 001415
4778 026404 012700 027750
4779 026410 012701 027760
4780 026414 012702 000004
4781 026420 022021
4782 026422 001402
4783 026424 000137 027346
4784 026430 077205
4785 026432 000137 027404
4786 026436 077220
4787 026440 020405
4788 026442 001402
4789 026444 000137 027312
4790
4791 026450
4792 026452 012704 003200
4793 026456 170104
4794 026460 012737 026500 001236
4795 026466 012700 027760
4796 026472 172410
4797 026474 012700 027770
4798 026500 172010
4799 026502 170205
4800 026504 012700 027750
    
```

```

TST32: SCOPE
CC1: LPERR ;EXPONENT DIFFERENCE=57=71 (OCT) FD=1
      MOV #3200,R4 ;SET UP THE LOOP ON ERROR ADDRESS.
      LDFPS R4 ;SET FIV,FIV, AND FD
      MOV #CC2,@#STMP2
      MOV #CCP0,R0 ;SET ACO OPERAND
      LDD (R0),ACO ;ACO
      MOV #CCP2,R0
      ADDD (R0),ACO ;TEST INSTRUCTION
      STFPS R5 ;GET FPS
      MOV #CCDAT0,R0 ;GET THE RESULT
      STD ACO,(R0)
      MOV #CCP2,R1 ;IS IT CORRECT
      MOV #4,R2
      CC3: CMP (R0)+,(R1)+
            BEQ CC6
            MOV #CCDAT0,R0 ;DID A BAD
            MOV #CCP0,R1 ;CONSTANT (NOT 57)
            MOV #4,R2 ;GET GENERATED
      CC4: CMP (R0)+,(R1)+ ;FOR THE ALIGNMENT
            BEQ CC5 ;FLOWS?
            JMP @#CCER1 ;DATA ERROR.D
      CC5: SOB R2,CC4
            JMP @#CCER2 ;BAD CONSTANT.D
      CC6: SOB R2,CC3
            CMP R4,R5 ;FPS CORRECT?
            BEQ CC7
            JMP @#CCERO ;BAD FPS.
      ;EXPONENT DIFFERENCE=56=70 (OCT) FD=1
      CC7: LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
            MOV #3200,R4 ;SET FIV,FIV, AND FD
            LDFPS R4
            MOV #CC8,@#STMP2
            MOV #CCP0,R0 ;SET ACO OPERAND
            LDD (R0),ACO
            MOV #CCP1,R0 ;FSRC
      CC8: ADDD (R0),ACO ;TEST INSTRUCTION
            STFPS R5 ;GET FPS
            MOV #CCDAT0,R0 ;GET THE RESULT
    
```

```

4801 026510 174010          STD      ACO,(R0)
4802 026512 012701 030050  MOV      #CCP7,R1          ;IS IT CORRECT
4803 026516 012702 000004  MOV      #4,R2
4804 026522 022021          CC9:    CMP      (R0)+,(R1)+
4805 026524 001415          BEQ      CC12
4806 026526 012700 027750  MOV      #CCDAT0,R0       ;DID A BAD
4807 026532 012701 027770  MOV      #CCP1,R1         ;CONSTANT (NOT 57)
4808 026536 012702 000004  MOV      #4,R2           ;GET GENERATED
4809 026542 022021          CC10:   CMP      (R0)+,(R1)+  ;FOR THE ALIGNMENT
4810 026544 001402          BEQ      CC11            ;FLOWS?
4811 026546 000137 027442  JMP      @#CCER3         ;DATA ERROR.D
4812 026552 077205          CC11:   SOB      R2,CC10
4813 026554 000137 027460  JMP      @#CCER4         ;BAD CONSTANT.D
4814 026560 077220          CC12:   SOB      R2,CC9
4815 026562 020405          CMP      R4,R5           ;FPS CORRECT?
4816 026564 001402          BEQ      CC13
4817 026566 000137 027312  JMP      @#CCER0         ;BAD FPS.
4818
4819 026572          ;EXPONENT DIFFERENCE=25=31.(OCT) FD=0
026572 104413          CC13:   LPERR          ;SET UP THE LOOP ON ERROR ADDRESS.
4820 026574 012737 026622 001236  MOV      #CC14,@#$TMP2
4821 026602 012700 027760  MOV      #CCP0,R0         ;SET UP ACO OPERAND.
4822 026606 172410          LDD      (R0),ACO
4823 026610 012704 003000  MOV      #3000,R4        ;SET FIV,FIV. CLEAR FD.
4824 026614 170104          LDFPS   R4
4825 026616 012700 030040  MOV      #CCP6,R0        ;FSRC
4826 026622 172010          CC14:   ADDF     (R0),ACO   ;TEST INSTRUCTION
4827 026624 170205          STFPS   R5
4828 026626 170011          SETD
4829 026630 012700 027750  MOV      #CCDAT0,R0       ;REENTER DOUBLE MOVE
4830 026634 174010          STD      ACO,(R0)        ;GET THE RESULT
4831 026636 012701 030040  MOV      #CCP6,R1        ;IS THE RESULT CORRECT?
4832 026642 012702 000002  MOV      #2,R2
4833 026646 022021          CC15:   CMP      (R0)+,(R1)+
4834 026650 001415          BEQ      CC18
4835 026652 012700 027750  MOV      #CCDAT0,R0       ;WAS A BAD CONSTANT
4836 026656 012701 030010  MOV      #CCP3,R1        ;USED (NOT 25) IN
4837 026662 012702 000002  MOV      #2,R2           ;THE ALIGN FLOWS?
4838 026666 022021          CC16:   CMP      (R0)+,(R1)+
4839 026670 001402          BEQ      CC17
4840 026672 000137 027516  JMP      @#CCER5         ;DATA ERROR F
4841 026676 077205          CC17:   SOB      R2,CC16
4842 026700 000137 027552  JMP      @#CCER6         ;BAD CONSTANT F
4843 026704 077220          CC18:   SOB      R2,CC15
4844 026706 020405          CMP      R4,R5
4845 026710 001402          BEQ      CC19
4846 026712 000137 027330  JMP      @#CCER90        ;BAD FPS.
4847
4848 026716          ;EXPONENT DIFFERENCE=24=30 (OCT) FD=0
026716 104413          CC19:   LPERR          ;SET UP THE LOOP ON ERROR ADDRESS.
4849 026720 012737 026746 001236  MOV      #CC20,@#$TMP2
4850 026726 012700 030010  MOV      #CCP3,R0        ;SET UP ACO OPERAND.
4851 026732 172410          LDD      (R0),ACO
4852 026734 012704 003000  MOV      #3000,R4        ;SET FIV,FIV. CLEAR FD.
4853 026740 170104          LDFPS   R4
4854 026742 012700 030030  MOV      #CCP5,R0        ;FSRC
4855 026746 172010          CC20:   ADDF     (R0),ACO   ;TEST INSTRUCTION
    
```

```

4856 026750 170205          STFPS   R5
4857 026752 170011          SETD           ;REENTER DOUBLE MOVE
4858 026754 012700 027750    MOV     #CCDAT0,R0 ;GET THE RESULT
4859 026760 174010          STD     AC0,(R0)
4860 026762 012701 030060    MOV     #CCP10,R1 ;IS THE RESLT CORRECT?
4861 026766 012702 000002    MOV     #2,R2
4862 026772 022021          CC21:  CMP     (R0)+,(R1)+
4863 026774 001415          BEQ     CC24
4864 026776 012700 027750    MOV     #CCDAT0,R0 ;WAS A BAD CONSTANT
4865 027002 012701 030030    MOV     #CCP5,R1 ;USED (NOT 25) IN
4866 027006 012702 000002    MOV     #2,R2 ;THE ALIGN FLOWS?
4867 027012 022021          CC22:  CMP     (R0)+,(R1)+
4868 027014 001402          BEQ     CC23
4869 027016 000137 027606    JMP     @#CCER7 ;DATA ERROR F
4870 027022 077205          CC23:  SOB     R2,CC22
4871 027024 000137 027624    JMP     @#CCER8 ;BAD CONSTANT F
4872 027030 077220          CC24:  SOB     R2,CC21
4873 027032 020405          CMP     R4,R5
4874 027034 001402          BEQ     CC25
4875 027036 000137 027330    JMP     @#CCER90 ;BAD FPS.
4876
4877 027042          ;EXPONENT DIFFERENCE=1 FD=1
027042 104413          CC25:  LPERR           ;SET UP THE LOOP ON ERROR ADDRESS.
4878 027044 012704 003200    MOV     #3200,R4 ;SET FIV,FIV, AND FD
4879 027050 170104          LDFPS   R4
4880 027052 012737 027072 001236    MOV     #CC26,@#$TMP2
4881 027060 012700 027760    MOV     #CCP0,R0 ;SET AC0 OPERAND
4882 027064 172410          LDD     (R0),AC0
4883 027066 012700 030010    MOV     #CCP3,R0 ;FSRC
4884 027072 172010          CC26:  ADDD   (R0),AC0 ;TEST INSTRUCTION
4885 027074 170205          STFPS   R5 ;GET FPS
4886 027076 012700 027750    MOV     #CCDAT0,R0 ;GET THE RESULT
4887 027102 174010          STD     AC0,(R0)
4888 027104 012701 030070    MOV     #CCP11,R1 ;IS IT CORRECT
4889 027110 012702 000004    MOV     #4,R2
4890 027114 022021          CC27:  CMP     (R0)+,(R1)+
4891 027116 001415          BEQ     CC30
4892 027120 012700 027750    MOV     #CCDAT0,R0 ;DID A BAD
4893 027124 012701 030010    MOV     #CCP3,R1 ;CONSTANT (NOT 57)
4894 027130 012702 000004    MOV     #4,R2 ;GET GENERATED
4895 027134 022021          CC28:  CMP     (R0)+,(R1)+ ;FOR THE ALIGNMENT
4896 027136 001402          BEQ     CC29 ;FLOWS?
4897 027140 000137 027660    JMP     @#CCER10 ;DATA ERROR.D
4898 027144 077205          CC29:  SOB     R2,CC28
4899 027146 000137 027676    JMP     @#CCER11 ;BAD CONSTANT.D
4900 027152 077220          CC30:  SOB     R2,CC27
4901 027154 020405          CMP     R4,R5 ;FPS CORRECT?
4902 027156 001402          BEQ     CC31
4903 027160 000137 027312    JMP     @#CCER0 ;BAD FPS.
4904          ;EXPONENT DIFFERENCE=100=144 (OCT) FD=1
4905 027164          CC31:  LPERR           ;SET UP THE LOOP ON ERROR ADDRESS.
027164 104413          MOV     #3200,R4 ;SET FIV,FIV, AND FD
4906 027166 012704 003200    MOV     #3200,R4
4907 027172 170104          LDFPS   R4
4908 027174 012737 027214 001236    MOV     #CC32,@#$TMP2
4909 027202 012700 027760    MOV     #CCP0,R0 ;SET AC0 OPERAND
4910 027206 172410          LDD     (R0),AC0
    
```

4911	027210	012700	030020			MOV	#CCP4,R0		:FSRC
4912	027214	172010			CC32:	ADD	(R0),AC0		:TEST INSTRUCTION
4913	027216	170205				STFPS	R5		:GET FPS
4914	027220	012700	027750			MOV	#CCDAT0,R0		:GET THE RESULT
4915	027224	174010				STD	AC0,(R0)		
4916	027226	012701	030020			MOV	#CCP4,R1		:IS IT CORRECT
4917	027232	012702	000004			MOV	#4,R2		
4918	027236	022021			CC33:	CMP	(R0)+,(R1)+		
4919	027240	001415				BEQ	CC36		
4920	027242	012700	027750			MOV	#CCDAT0,R0		:DID A BAD
4921	027246	012701	030020			MOV	#CCP4,R1		:CONSTANT (NOT 57)
4922	027252	012702	000004			MOV	#4,R2		:GET GENERATED
4923	027256	022021			CC34:	CMP	(R0)+,(R1)+		:FOR THE ALIGNMENT
4924	027260	001402				BEQ	CC35		:FLOWS?
4925	027262	000137	027714			JMP	@#CCER12		:DATA ERROR.D
4926	027266	077205			CC35:	SOB	R2,CC34		
4927	027270	000137	027732			JMP	@#CCER13		:BAD CONSTANT.D
4928	027274	077220			CC36:	SOB	R2,CC33		
4929	027276	020405				CMP	R4,R5		:FPS CORRECT?
4930	027300	001402				BEQ	CC37		
4931	027302	000137	027312			JMP	@#CCERO		:BAD FPS.
4932	027306	000137	030110		CC37:	JMP	@#CCDONE		
4933	027312	010437	001242		CCERO:	MOV	R4,@#STMP4		:FPS ERROR D
4934	027316	010537	001240			MOV	R5,@#STMP3		
4935	027322	104164			1\$:	ERROR	+164		
4936	027324	000137	030110			JMP	@#CCDONE		
4937	027330	010437	001242		CCER90:	MOV	R4,@#STMP4		:FPS ERROR F
4938	027334	010537	001240			MOV	R5,@#STMP3		
4939	027340	104165			1\$:	ERROR	+165		
4940	027342	000137	030110			JMP	@#CCDONE		
4941	027346	012737	030000	001240	CCER1:	MOV	#CCP2,@#STMP3		:DATA ERROR D
4942	027354	012737	030000	001246		MOV	#CCP2,@#STMP6		
4943	027362	012737	027760	001242	CCER50:	MOV	#CCP0,@#STMP4		
4944	027370	012737	027750	001244		MOV	#CCDAT0,@#STMP5		
4945	027376	104166			1\$:	ERROR	+166		
4946	027400	000137	030110			JMP	@#CCDONE		
4947	027404	012737	030000	001240	CCER2:	MOV	#CCP2,@#STMP3		:CONSTANT BAD D(B)
4948	027412	012737	030000	001246		MOV	#CCP2,@#STMP6		
4949	027420	012737	027760	001242	CCER22:	MOV	#CCP0,@#STMP4		
4950	027426	012737	027750	001244		MOV	#CCDAT0,@#STMP5		
4951	027434	104172			1\$:	ERROR	+172		
4952	027436	000137	030110			JMP	@#CCDONE		
4953	027442	012737	027770	001240	CCER3:	MOV	#CCP1,@#STMP3		
4954	027450	012737	030050	001246		MOV	#CCP7,@#STMP6		
4955	027456	000741				BR	CCER50		
4956	027460	012737	027770	001240	CCER4:	MOV	#CCP1,@#STMP3		:CONSTANT BAD D(G)
4957	027466	012737	030050	001246		MOV	#CCP7,@#STMP6		
4958	027474	012737	027760	001242	CCER44:	MOV	#CCP0,@#STMP4		
4959	027502	012737	027750	001244		MOV	#CCDAT0,@#STMP5		
4960	027510	104173			1\$:	ERROR	+173		
4961	027512	000137	030110			JMP	@#CCDONE		
4962	027516	012737	030040	001240	CCER5:	MOV	#CCP6,@#STMP3		:DATA ERROR F
4963	027524	012737	030040	001246		MOV	#CCP6,@#STMP6		
4964	027532	012737	027760	001242	CCER55:	MOV	#CCP0,@#STMP4		
4965	027540	012737	027750	001244		MOV	#CCDAT0,@#STMP5		
4966	027546	104170			1\$:	ERROR	+170		
4967	027550	000557				BR	CCDONE		

```

4968 027552 012737 030040 001240 CCER6: MOV #CCP6,@#STMP3 ;CONSTANT BAD F(B)
4969 027560 012737 030040 001246 MOV #CCP6,@#STMP6
4970 027566 012737 027760 001242 MOV #CCP0,@#STMP4
4971 027574 012737 027750 001244 MOV #CCDAT0,@#STMP5
4972 027602 104174 1$: ERROR +174
4973 027604 000541 BR CCDONE
4974 027606 012737 030030 001240 CCER7: MOV #CCP5,@#STMP3 ;DATA ERROR F
4975 027614 012737 030060 001246 MOV #CCP10,@#STMP6
4976 027622 000743 BR CCER55
4977 027624 012737 030030 001240 CCER8: MOV #CCP5,@#STMP3 ;CONSTANT BAD F(G)
4978 027632 012737 030060 001246 MOV #CCP10,@#STMP6
4979 027640 012737 027750 001244 MOV #CCDAT0,@#STMP5
4980 027646 012737 027760 001242 MOV #CCP0,@#STMP4
4981 027654 104175 1$: ERROR +175
4982 027656 000514 BR CCDONE
4983 027660 012737 030010 001240 CCER10: MOV #CCP3,@#STMP3 ;DATA ERROR D
4984 027666 012737 030070 001246 MOV #CCP11,@#STMP6
4985 027674 000632 BR CCER50
4986 027676 012737 030010 001240 CCER11: MOV #CCP3,@#STMP3 ;CONSTANT BAD D(G)
4987 027704 012737 030070 001246 MOV #CCP11,@#STMP6
4988 027712 000670 BR CCER44
4989 027714 012737 030020 001240 CCER12: MOV #CCP4,@#STMP3 ;DATA ERROR D
4990 027722 012737 030020 001246 MOV #CCP4,@#STMP6
4991 027730 000614 BR CCER50
4992 027732 012737 030020 001240 CCER13: MOV #CCP4,@#STMP3 ;CONSTANT BAD D(B)
4993 027740 012737 030020 001246 MOV #CCP4,@#STMP6
4994 027746 000624 BR CCER22
4995 027750 000000 CCDATO: 0
4996 027752 000000 0
4997 027754 000000 0
4998 027756 000000 0
4999 027760 000200 CCP0: 200 ;E(AC)=1
5000 027762 000000 0
5001 027764 000000 0
5002 027766 000000 0
5003 027770 016200 CCP1: 16200 ;E(FSRC)=E(AC)+56=57
5004 027772 000000 0 ; =71(OCT)
5005 027774 000000 0
5006 027776 000000 0
5007 030000 016400 CCP2: 16400 ;E(FSRC)=E(AC)+57=58
5008 030002 000000 0 ; =72(OCT)
5009 030004 000000 0
5010 030006 000000 0
5011 030010 000400 CCP3: 400 ;E(FSRC)=E(AC)+1=2
5012 030012 000000 0
5013 030014 000000 0
5014 030016 000000 0
5015 030020 031200 CCP4: 31200 ;E(FSRC)=E(AC)+100=101=145(OCT)
5016 030022 000000 0
5017 030024 000000 0
5018 030026 000000 0
5019 030030 006200 CCP5: 6200 ;E(FSRC)=E(AC)+24=25=31(OCT)
5020 030032 000000 0
5021 030034 000000 0
5022 030036 000000 0
5023 030040 006400 CCP6: 6400 ;E(FSRC)=E(AC)+25=26=32(OCT)
5024 030042 000000 0

```



```

5025 030044 000000 0
5026 030046 000000 0
5027 030050 016200 CCP7: 16200 ;CCP1 RES
5028 030052 000000 0
5029 030054 000000 0
5030 030056 000001 1
5031 030060 006200 CCP10: 6200 ;CCP5 RES
5032 030062 000001 1
5033 030064 000000 0
5034 030066 000000 0
5035 030070 000500 CCP11: 500 ;CCP3 RES
5036 030072 000000 0
5037 030074 000000 0
5038 030076 000000 0
5039 030100 000200 CCP12: 200 ;BAD CONSTANT
5040 030102 000000 0 ;RES CCP2,CCP4
5041 030104 000000 0
5042 030106 000000 0
5043
5044 030110 CCDONE: RSETUP ;GO INITIALIZE THE FPS AND STACK; AND
      030110 104412 ;SEE IF THE USER HAS EXPRESSED
      ;THE DESIRE TO CHANGE THE SOFTWARE
      ;VIRTUAL CONSOLE SWITCH REGISTER (HAS
      ;THE USER TYPED CONTROL G?).

```

```

5045
5056 ;TEST TITLE:ADDF AND ADDD WITH E(AC) GREATER THAN E(FSRC) TEST
5057

```

```

:*****
:*TEST 33 SEE ABOVE COMMENT FOR TEST TITLE
:*
:*THIS IS A TEST OF THE ADDD AND ADDF
:*INSTRUCTIONS AND THE ALIGN FSRC ALGORITHM
:*FLOWS. FIRST THE CONSTANT USED IS CHECKED.
:*THEN SIMPLE AND WORST CASE ALIGNMENT
:*SITUATIONS ARE TRIED. NOTE E(AC)
:*IS GREATER THAN E(FSRC).
:*
:*****

```

```

5058 030112 000004 TST33: SCOPE
5059 030114 ;EXPONENT DIFFERENCE=57=71 (OCT) FD=1
      030114 104413 BB1:
5060 030116 012704 003200 LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
      030116 012704 003200 MOV #3200,R4 ;SET FIV FIV, AND FD
5061 030122 170104 LDFPS R4
5062 030124 012737 030752 000244 MOV #BBERO,@#FPVECT ;SET UP FOR ERROR
5063 030132 012737 030152 001236 MOV #BB2,@#STMP2 ;IN CASE THE OVER\
      ;UNDER FLOWS FAIL.
5064 ;SET ACO OPERAND.
5065 030140 012700 031314 MOV #BBPAT2,R0
5066 030144 172410 LDD (R0),AC0
5067 030146 012700 031304 MOV #BBPAT1,R0 ;FSRC
5068 030152 172010 BB2: ADDD (R0),AC0 ;TEST INSTRUCTION
5069 030154 170205 STFPS R5
5070 030156 012700 031264 BB3: MOV #BBDAT0,R0 ;GET THE RESULT
5071 030162 174010 STD ACO,(R0)
5072 030164 012701 031314 MOV #BBPAT2,R1 ;RESULT CORRECT?
5073 030170 012702 000004 MOV #4,R2
5074 030174 022021 BB4: CMP (R0)+,(R1)+

```

```

5075 030176 001402          BEQ      BB5
5076 030200 000137 031012    JMP      @#BBER1          ;DATA ERROR D
5077 030204 077205          SOB      R2, BB4
5078                                ;WAS FPS CORRECT?
5079 030206 020405          CMP      R4, R5
5080 030210 001402          BEQ      BB6
5081 030212 000137 030752    JMP      @#BBERO          ;FPS ERROR
5082                                ;EXPONENT DIFFERENCE=56=70 (OCT) FD=1
5083 030216          BB6:
      030216 104413          LPERR          ;SET UP THE LOOP ON ERROR ADDRESS.
5084 030220 012704 003200    MOV      #3200, R4          ;SET FIV, FIV, AND FD
5085 030224 170104          LDFPS      R4
5086 030226 012737 030246 001236    MOV      #BB7, @#$TMP2
5087 030234 012700 031334          MOV      #BBPAT4, R0          ;SET ACO OPERAND
5088 030240 172410          LDD      (R0), ACO
5089 030242 012700 031304          MOV      #BBPAT1, R0          ;FSRC
5090 030246 172010          BB7:  ADDD      (R0), ACO          ;TEST INSTRUCTION
5091 030250 170205          STFPS      R5          ;GET FPS
5092 030252 012700 031264          MOV      #BBDAT0, R0          ;GET THE RESULT
5093 030256 174010          STD      ACO, (R0)
5094 030260 012701 031374          MOV      #BBP10, R1          ;IS IT CORRECT
5095 030264 012702 000004          MOV      #4, R2
5096 030270 022021          BB10:  CMP      (R0)+, (R1)+
5097 030272 001415          BEQ      BB13
5098 030274 012700 031264          MOV      #BBDAT0, R0          ;DID A BAD
5099 030300 012701 031334          MOV      #BBPAT4, R1          ;CONSTANT (NOT 57)
5100 030304 012702 000004          MOV      #4, R2          ;GET GENERATED
5101 030310 022021          BB11:  CMP      (R0)+, (R1)+          ;FOR THE ALIGNMENT
5102 030312 001402          BEQ      BB12          ;FLOWS?
5103 030314 000137 031050          JMP      @#BBER2          ;DATA ERROR.D
5104 030320 077205          BB12:  SOB      R2, BB11
5105 030322 000137 031066          JMP      @#BBER3          ;BAD CONSTANT.D
5106 030326 077220          BB13:  SOB      R2, BB10
5107 030330 020405          CMP      R4, R5          ;FPS CORRECT?
5108 030332 001402          BEQ      BB14
5109 030334 000137 030752          JMP      @#BBERO          ;BAD FPS.
5110                                ;EXPONENT DIFFERENCE=25=31 (OCT) FD=0
5111 030340          BB14:
      030340 104413          LPERR          ;SET UP THE LOOP ON ERROR ADDRESS.
5112 030342 012737 030370 001236    MOV      #BB15, @#$TMP2
5113 030350 012700 031274          MOV      #BBPAT0, R0          ;SET UP ACO OPERAND
5114 030354 172410          LDD      (R0), ACO
5115 030356 012704 003000          MOV      #3000, R4          ;SET FIV AND FIV
5116                                ;CLEAR FD
5117 030362 170104          LDFPS      R4
5118 030364 012700 031304          MOV      #BBPAT1, R0          ;FSRC
5119 030370 172010          BB15:  ADDD      (R0), ACO          ;TEST INSTRUCTION
5120 030372 170205          STFPS      R5
5121 030374 170011          CFTD          ;REENTED DOUBLE MODE.
5122 030376 012700 031264          MOV      #BBDAT0, R0          ;GET THE RESULT
5123 030402 174010          STD      ACO, (R0)
5124 030404 012701 031274          MOV      #BBPAT0, R1          ;IS THE RESULT
5125 030410 012702 000002          MOV      #2, R2          ;CORRECT?
5126 030414 022021          BB16:  CMP      (R0)+, (R1)+
5127 030416 001402          BEQ      BB17
5128 030420 000137 031122          JMP      @#BBER4          ;DATA ERROR F
5129 030424 077205          BB17:  SOB      R2, BB16
  
```

```

5130 030426 020405          CMP      R4,R5          ;IS FPS CORRECT?
5131 030430 001402          BEQ      BB20
5132 030432 000137 030772  JMP      @#BBER10      ;FPS ERROR.
5133                                     ;EXPONENT DIFFERENCE=24=30 (OCT)
5134 030436 104413          BB20:  LPERR          ;SET UP THE LOOP ON ERROR ADDRESS.
      030436 012737 030466 001236  MOV      #BB21,@#STMP2
5135 030440 012737 030466 001236  MOV      #BBPAT3,R0      ;SET UP ACO OPERAND.
5136 030446 012700 031324          LDD      (R0),AC0
5137 030452 172410          LDFPS   R4              ;SET FIU,FIV. CLEAR FD.
5138 030454 012704 003000          MOV      #3000,R4
5139 030460 170104          LDFPS   R4
5140 030462 012700 031304          MOV      #BBPAT1,R0      ;FSRC
5141 030466 172010          BB21:  ADDF      (R0),AC0  ;TEST INSTRUCTION
5142 030470 170205          STFPS   R5
5143 030472 170011          SETD
5144 030474 012700 031264          MOV      #BBDAT0,R0      ;REENTER DOUBLE MODE
5145 030500 174010          STD      AC0,(R0)        ;GET THE RESULT
5146 030502 012701 031364          MOV      #BBP7,R1
5147 030506 012702 000002          MOV      #2,R2          ;IS THE RESULT CORRECT?
5148 030512 022021          BB22:  CMP      (R0)+,(R1)+
5149 030514 001415          BEQ      BB25
5150 030516 012700 031264          MOV      #BBDAT0,R0      ;WAS A BAD CONSTANT
5151 030522 012701 031324          MOV      #BBPAT3,R1      ;USED (NOT 25) IN
5152 030526 012702 000002          MOV      #2,R2          ;THE ALLIGN FLOWS?
5153 030532 022021          BB23:  CMP      (R0)+,(R1)+
5154 030534 001402          BEQ      BB24
5155 030536 000137 031156          JMP      @#BBER5        ;DATA ERROR F
5156 030542 077205          BB24:  SOB      R2,BB23
5157 030544 000137 031174          JMP      @#BBER6        ;BAD CONSTANT F
5158 030550 077220          BB25:  SOB      R2,BB22
5159 030552 020405          ;
5160 030554 001402          ; CMP      R4,R5
5161 030556 000137 030772          ; BEQ      BB26
      ; JMP      @#BBER10      ;BAD FPS.
5162                                     ;EXPONENT DIFFERENCE=1
5163 030562 104413          BB26:  LPERR          ;SET UP THE LOOP ON ERROR ADDRESS.
      030562 012737 030612 001236  MOV      #BB27,@#STMP2
5164 030564 012737 030612 001236  MOV      #3200,R4
5165 030572 012704 003200          LDFPS   R4              ;SET UP ACO OPERAND
5166 030576 170104          LDFPS   R4
5167 030600 012700 031344          MOV      #BBPAT5,R0
5168 030604 172410          LDD      (R0),AC0
5169 030606 012700 031304          MOV      #BBPAT1,R0      ;FSRC
5170 030612 172010          BB27:  ADDD      (R0),AC0  ;TEST INSTRUCTION
5171 030614 170205          STFPS   R5
5172 030616 012700 031264          MOV      #BBDAT0,R0      ;GET THE RESULT.
5173 030622 174010          STD      AC0,(R0)
5174 030624 012701 031404          MOV      #BBP11,R1      ;IS IT CORRECT?
5175 030630 012702 000004          MOV      #4,R2
5176 030634 022021          BB30:  CMP      (R0)+,(R1)+
5177 030636 001402          BEQ      BB31
5178 030640 000137 031230          JMP      @#BBER7        ;DATA ERROR D
5179 030644 077205          BB31:  SOB      R2,BB30
5180 030646 020405          CMP      R4,R5          ;IS FPS CORRECT
5181 030650 001402          BEQ      BB32
5182 030652 000137 030752          JMP      @#BBER0
5183                                     ;EXPONENT DIFFERENCE=100=144 (OCT)
5184 030656          BB32:
    
```

```

5185 030656 104413          LPERR          ;SET UP THE LOOP ON ERROR ADDRESS.
5186 030660 012737 030706 001236  MOV          #BB33,@#STMP2
5187 030672 170104 003200  MOV          #3200,R4
5188 030674 012700 031354  LDFPS       R4          ;SET FIV,FIV AND FD
5189 030700 172410          MOV          #BBPAT6,R0  ;SET UP ACO OPERAND.
5190 030702 012700 031304  LDD         (R0),ACO
5191 030706 172010          MOV          #BBPAT1,R0  ;FSRC
5192 030710 170205          ADDD        (R0),ACO    ;TEST INSTRUCTION
5193 030712 012700 031264  STFPS      R5
5194 030716 174010          MOV          #BBDAT0,R0  ;GET THE RESULT
5195 030720 012701 031354  STD        ACO,(R0)
5196 030724 012702 000004  MOV          #BBPAT6,R1  ;IS IT CORRECT
5197 030730 022021          MOV          #4,R2
5198 030732 001402          BB34:      CMP          (R0)+,(R1)+
5199 030734 000137 031246  BEQ        BB35
5200 030740 077205          JMP          @#BBER8     ;DATA ERROR D
5201 030742 020405          BB35:      SOB          R2, BB34
5202 030744 001002          CMP          R4,R5     ;IS FPS CORRECT
5203 030746 000167 000442  BNE        BBERO
5204 030752 010437 001242  JMP          BBDONE
5205 030756 010537 001240  BBERO:     MOV          R4,@#STMP4  ;FPS ERROR D
5206 030762 104164          MOV          R5,@#STMP3
5207 030764 104412          1$:      ERROR      +164
          RSETUP          ;GO INITIALIZE THE FPS AND STACK; AND
          ;SEE IF THE USER HAS EXPRESSED
          ;THE DESIRE TO CHANGE THE SOFTWARE
          ;VIRTUAL CONSOLE SWITCH REGISTER (HAS
          ;THE USER TYPED CONTROL G?).

5208 030766 000137 031414          JMP          @#BBDONE
5209 030772 010437 001242  BBER10:   MOV          R4,@#STMP4  ;FPS ERROR F
5210 030776 010537 001240          MOV          R5,@#STMP3
5211 031002 104165          1$:      ERROR      +165
5212 031004 104412          RSETUP          ;GO INITIALIZE THE FPS AND STACK; AND
          ;SEE IF THE USER HAS EXPRESSED
          ;THE DESIRE TO CHANGE THE SOFTWARE
          ;VIRTUAL CONSOLE SWITCH REGISTER (HAS
          ;THE USER TYPED CONTROL G?).

5213 031006 000137 031414          JMP          @#BBDONE
5214 031012 012737 031314 001242  BBER1:   MOV          #BBPAT2,@#STMP4 ;DATA ERROR D
5215 031020 012737 031314 001246  MOV          #BBPAT2,@#STMP6
5216 031026 012737 031304 001240  BBER11:  MOV          #BBPAT1,@#STMP3
5217 031034 012737 031264 001244  MOV          #BBDAT0,@#STMP5
5218 031042 104166          1$:      ERROR      +166
5219 031044 000137 031414          JMP          @#BBDONE
5220 031050 012737 031334 001242  BBER2:   MOV          #BBPAT4,@#STMP4
5221 031056 012737 031374 001246  MOV          #BBP10,@#STMP6
5222 031064 000760          BR          BBER11
5223 031066 012737 031334 001242  BBER3:   MOV          #BBPAT4,@#STMP4 ;BAD CONSTANT D
5224 031074 012737 031374 001246  MOV          #BBP10,@#STMP6
5225 031102 012737 031304 001240  MOV          #BBPAT1,@#STMP3
5226 031110 012737 031264 001244  MOV          #BBDAT0,@#STMP5
5227 031116 104167          1$:      ERROR      +167
5228 031120 000535          BR          BBDONE
5229 031122 012737 031274 001242  BBER4:   MOV          #BBPAT0,@#STMP4 ;DATA ERROR F
5230 031130 012737 031274 001246  MOV          #BBPAT0,@#STMP6
5231 031136 012737 031304 001240  BBER40:  MOV          #BBPAT1,@#STMP3
5232 031144 012737 031264 001244  MOV          #BBDAT0,@#STMP5

```

5233	031152	104170			18:	ERROR	+170
5234	031154	000517				BR	BBDONE
5235	031156	012737	031324	001242	BBER5:	MOV	#BBPAT3,@#STMP4
5236	031164	012737	031364	001246		MOV	#BBP7,@#STMP6
5237	031172	000761				BR	BBER40

5239 031174 012737 031324 001242 BBER6: MOV #BBPAT3,@#STMP4 ;CONSTANT ERROR F

```

5241 031202 012737 031364 001246      MOV      #BBP7,@#$TMP6
5242 031210 012737 031304 001240      MOV      #BBPAT1,@#$TMP3
5243 031216 012737 031264 001244      MOV      #BBDAT0,@#$TMP5
5244 031224 104171                      1$:     ERROR      +171
5245 031226 000472                      BR       BBDONE
5246 031230 012737 031344 001242  BBER7:  MOV      #BBPAT5,@#$TMP4
5247 031236 012737 031304 001246      MOV      #BBPAT11,@#$TMP6
5248 031244 000670                      BR       BBER11
5249 031246 012737 031354 001242  BBER8:  MOV      #BBPAT6,@#$TMP4
5250 031254 012737 031354 001246      MOV      #BBPAT6,@#$TMP6
5251 031262 000661                      BR       BBER11
5252 031264 000000      BBDAT0: 0
5253 031266 000000                      0
5254 031270 000000                      0
5255 031272 000000                      0
5256 031274 006400      BBPAT0: 6400      ;F(AC)=E(FSRC)+25=26
5257 031276 000000                      0      ;      =32(OCT)
5258 031300 000000                      0
5259 031302 000000                      0
5260 031304 000200      BBPAT1: 200
5261 031306 000000                      0      ;E(FSRC)=1
5262 031310 000000                      0
5263 031312 000000                      0
5264 031314 016400      BBPAT2: 16400
5265 031316 000000                      0      ;E(AC)=E(FSRC)+57=58
5266 031320 000000                      0      ;      =72(OCT)
5267 031322 000000                      0
5268 031324 006200      BBPAT3: 6200      ;E(AC)=E(FSRC)+24=25
5269 031326 000000                      0      ;      =31(OCT)
5270 031330 000000                      0
5271 031332 000000                      0
5272 031334 016200      BBPAT4: 16200      ;E(AC)=E(FSR6)+56=57
5273 031336 000000                      0      ;      =71(OCT)
5274 031340 000000                      0
5275 031342 000000                      0
5276 031344 000400      BBPAT5: 400      ;E(AC)=E(FSRC)+1=2
5277 031346 000000                      0
5278 031350 000000                      0
5279 031352 000000                      0
5280 031354 031200      BBPAT6: 31200      ;E(AC)=E(FSRC)+100=101
5281 031356 000000                      0      ;      =145(OCT)
5282 031360 000000                      0
5283 031362 000000                      0
5284 031364 006200      BBP7: 6200      ;BBPAT3 RES
5285 031366 000001                      1
5286 031370 000000                      0
5287 031372 000000                      0
5288 031374 016200      BBP10: 16200      ;BBPAT4 RES
5289 031376 000000                      0
5290 031400 000000                      0
5291 031402 000001                      1
5292 031404 000500      BBP11: 500      ;BBPAT5 RES
5293 031406 000000                      0
5294 031410 000000                      0
5295 031412 000000                      0
5296 031414 104412      BBDONE: RSETUP      ;GO INITIALIZE THE FPS AND STACK; AND

```

:SEE IF THE USER HAS EXPRESSED
 :THE DESIRE TO CHANGE THE SOFTWARE
 :VIRTUAL CONSOLE SWITCH REGISTER (HAS
 :THE USER TYPED CONTROL G?).

5304

 :TEST 34 ADDD WITH NEGATIVE OPRANDS TEST
 :
 :*THIS IS A TEST OF THE ADDD INSTRUCTION
 :*WITH NEGATIVE OPERANDS. EVERY COMBINATION OF
 :*OPERAND SIGNS IS TRIED.
 :*

5305 031416 000004
 5306 031420
 5307 031420 104413 003200
 5308 031422 012704 003200
 5309 031426 170104 001236
 5310 031430 012737 031450 001236
 5311 031436 012700 033300
 5312 031442 172410 033300
 5313 031444 012700 033300
 5314 031450 172010
 5315 031452 170205
 5316 031454 012700 033260
 5317 031460 174010
 5318 031462 012701 033400
 5319 031466 012702 000004
 5320 031472 022021
 5321 031474 001415
 5322 031476 012700 033260
 5323 031502 012701 033330
 5324 031506 012702 000004
 5325 031512 022021
 5326 031514 001402
 5327 031516 000137 032510
 5328 031522 077205
 5329 031524 000137 032546
 5330 031530 077220
 5331 031532 052704 000010
 5332 031536 020405
 5333 031540 001402
 5334 031542 000137 032472
 5335 031546
 5336 031546 104413
 5337 031550 012704 003200
 5338 031554 170104
 5339 031556 012737 031576 001236
 5340 031564 012700 033310
 5341 031570 172410
 5342 031572 012700 033300
 5343 031576 172010
 5344 031600 170205
 5345 031602 012700 033260
 5346 031606 174010
 5347 031610 012701 033270

TST34: SCOPE
 :BOTH OPERANDS NEGATIVE
 DD1: LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
 MOV #3200,R4 ;SET FIO, FIV, AND FD
 LDFPS R4
 MOV #DD2,@#STMP2
 MOV #DDP1,R0 ;SET ACO OPERAND
 LDD (R0),ACO
 MOV #DDP1,R0 ;ESRC
 DD2: ADDD (R0),ACO ;TEST INSTRUCTION
 STFPS R5 ;GET FPS
 MOV #DDDATO,R0 ;GET THE RESULT
 STD ACO,(R0)
 MOV #DDP9,R1 ;IS IT CORRECT
 DD3: MOV #4,R2
 CMP (R0)+,(R1)+
 BEQ DD6
 MOV #DDDATO,R0 ;DID A ADD-SUB
 MOV #DDP4,R1 ;FLOW A FAILURE
 DD4: MOV #4,R2
 CMP (R0)+,(R1)+
 BEQ DD5 ;216,442,500
 JMP @#DDER1 ;DATA ERROR,D
 DD5: SOB R2,DD4
 JMP @#DDER2 ;FLOW FAILURE,D
 DD6: SOB R2,DD3
 BIS #10,R4
 CMP R4,R5 ;FPS CORRECT?
 BEQ DD7
 JMP @#DDERO ;BAD,FPS
 :AC POS FSRC NEG AC=-FSRC
 DD7: LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
 MOV #3200,R4 ;SET FIO, FIV, AND FD
 LDFPS R4
 MOV #DD8,@#STMP2
 MOV #DDP2,R0 ;SET ACO OPERAND
 LDD (R0),ACO
 MOV #DDP1,R0 ;FSPC
 DD8: ADDD (R0),ACO ;TEST INSTRUCTION
 STFPS R5 ;GET FPS
 MOV #DDDATO,R0 ;GET THE RESULT
 STD ACO,(R0)
 MOV #DDP0,R1 ;IS IT CORRECT

5347	031614	012702	000004		MOV	#4,R2		
5348	031620	022021		DD10:	CMP	(R0)+,(R1)+		
5349	031622	001402			BEQ	DD11		
5350	031624	000137	032604		JMP	@#DDER3		;FLOW FAILURE
5351	031630	077205		DD11:	SOB	R2,DD10		
5352	031632	052704	000004		BIS	#4,R4		
5353	031636	020405			CMP	R4,R5		;FPS CORRECT?
5354	031640	001402			BEQ	DD12		
5355	031642	000137	032472		JMP	@#DDERO		;BAD FPS
5356								AC=-FSRC
5357	031646				:AC NEG	FSRC POS		
	031646	104413		DD12:	LPERR			;SET UP THE LOOP ON ERROR ADDRESS.
5358	031650	012704	003200		MOV	#3200,R4		;SET FIU, FIV, AND FD
5359	031654	170104			LDFPS	R4		
5360	031656	012737	031676	001236	MOV	#DD13,@#\$TMP2		
5361	031664	012700	033300		MOV	#DDP1,R0		;SET ACO OPERAND
5362	031670	172410			LDD	(R0),ACO		
5363	031672	012700	033310		MOV	#DDP2,R0		;FSRC
5364	031676	172010		DD13:	ADDD	(R0),ACO		;TEST INSTRUCTION
5365	031700	170205			STFPS	R5		;GET FPS
5366	031702	012700	033260		MOV	#DDDATO,R0		;GET THE RESULT
5367	031706	174010			STD	ACO,(R0)		
5368	031710	012701	033270		MOV	#DDP0,R1		;IS IT CORRECT
5369	031714	012702	000004		MOV	#4,R2		
5370	031720	022021		DD14:	CMP	(R0)+,(R1)+		
5371	031722	001402			BEQ	DD15		
5372	031724	000137	032642		JMP	@#DDER4		;FLOW FAILURE 216,440,121
5373	031730	077205		DD15:	SOB	R2,DD14		
5374	031732	052704	000004		BIS	#4,R4		
5375	031736	020405			CMP	R4,R5		;EPS CORRECT?
5376	031740	001402			BEQ	DD16		
5377	031742	000137	032472		JMP	@#DDERO		;BAD FPS
5378					:ACO POC	FSRC NEG		/AC/ > /FSRC/
5379	031746			DD16:	LPERR			;SET UP THE LOOP ON ERROR ADDRESS.
	031746	104413			MOV	#3200,R4		;SET FIV, FIV AND FD
5380	031750	012704	003200		LDFPS	R4		
5381	031754	170104			MOV	#DD17,@#\$TMP2		
5382	031756	012737	031776	001236	MOV	#DDP3,R0		;SET ACO OPERAND
5383	031764	012700	033320		LDD	(R0),ACO		
5384	031770	172410			MOV	#DDP6,R0		;ESPC
5385	031772	012700	033350		ADDD	(R0),ACO		;TEST INSTRUCTION
5386	031776	172010		DD17:	STFPS	R5		;GET FPS
5387	032000	170205			MOV	#DDDATO,R0		;GET THE RESULT
5388	032002	012700	033260		STD	ACO,(R0)		
5389	032006	174010			MOV	#DDP7,R1		;IS IT CORRECT
5390	032010	012701	033360		MOV	#4,R2		
5391	032014	012702	000004		DD18:	CMP	(R0)+,(R1)+	
5392	032020	022021			BEQ	DD21		
5393	032022	001415			MOV	#DDDATO,R0		;FLOWS FAILURE
5394	032024	012700	033260		MOV	#DDP8,R1		;216,440,101
5395	032030	012701	033370		MOV	#4,R2		;GET GENERATED
5396	032034	012702	000004		DD19:	CMP	(R0)+,(R1)+	
5397	032040	022021			BEQ	DD20		
5398	032042	001402			JMP	@#DDER5		;DATA ERROR.
5399	032044	000137	032700	DD20:	SOB	R2,DD19		
5400	032050	077205			JMP	@#DDER6		
5401	032052	000137	032736					

5402	032056	077220		DD21:	SOB	R2,DD18		
5403	032060	020405			CMP	R4,R5		;EPS CORRECT?
5404	032062	001402			BEQ	DD22		
5405	032064	000137	032472		JMP	@DDERO		;BAD FPS
5406					:AC NEG	FSRC	POS	/FSRC/ > /AC/
5407	032070			DD22:				
	032070	104413			LPERR			;SET UP THE LOOP ON ERROR ADDRESS.
5408	032072	012704	003200		MOV	#3200,R4		;SET FIO,FIV, AND FD
5409	032076	170104			LDFPS	R4		
5410	032100	012737	032120	001236	MOV	#DD23,@\$TMP2		
5411	032106	012700	033350		MOV	#DDP6,R0		;SET ACO OPERAND
5412	032112	172410			LDD	(R0),ACO		
5413	032114	012700	033320		MOV	#DDP3,R0		;FSPC
5414	032120	172010		DD23:	ADDD	(R0),ACO		;TEST INSTRUCTION
5415	032122	170205			STFPS	R5		;GET FPS
5416	032124	012700	033260		MOV	#DDDATO,R0		;GET THE RESULT
5417	032130	174010			STD	ACO,(R0)		
5418	032132	012701	033360		MOV	#DDP7,R1		;IS IT CORRECT?
5419	032136	012702	000004		MOV	#4,R2		
5420	032142	022021		DD24:	CMP	(R0)+,(R1)+		
5421	032144	001415			BEQ	DD27		
5422	032146	012700	033260		MOV	#DDDATO,R0		;FLO,S FAILURE
5423	032152	012701	033370		MOV	#DDP8,R1		;CONSTANT (NOT 57)
5424	032156	012702	000004		MOV	#4,R2		;216,042,101
5425	032162	021011		DD25:	CMP	(R0),(R1)		
5426	032164	001402			BEQ	DD26		
5427	032166	000137	032774		JMP	@DDER7		;DATA ERROR.
5428	032172	077205		DD26:	SOB	R2,DD25		
5429	032174	000137	033032		JMP	@DDER8		
5430	032200	077220		DD27:	SOB	R2,DD24		
5431	032202	020405			CMP	R4,R5		;FPS CORRECT?
5432	032204	001402			BEQ	DD30		
5433	032206	000137	032472		JMP	@DDERO		;BAD FPS
5434					:ACO POS	FSRC	NEG	/AC/ < /FRSRC/
5435	032212			DD30:				
	032212	104413			LPERR			;SET UP THE LOOP ON ERROR ADDRESS.
5436	032214	012704	003200		MOV	#3200,R4		;SET FIO,FIV,AND FD
5437	032220	170104			LDFPS	R4		
5438	032222	012737	032242	001236	MOV	#DD31,@\$TMP2		
5439	032230	012700	033330		MOV	#DDP4,R0		;SET ACO OPERAND
5440	032234	172410			LDD	(R0),ACO		
5441	032236	012700	033340		MOV	#DDP5,R0		;FSPC
5442	032242	172010		DD31:	ADDD	(R0),ACO		;TEST INSTRUCTION
5443	032244	170205			STFPS	R5		;GET FPS
5444	032246	012700	033260		MOV	#DDDATO,R0		;GET THE RESULT
5445	032252	174010			STD	ACO,(R0)		
5446	032254	012701	033370		MOV	#DDP8,R1		;IS IT CORRECT
5447	032260	012702	000004		MOV	#4,R2		
5448	032264	022021		DD32:	CMP	(R0)+,(R1)+		
5449	032266	001415			BEQ	DD35		;ADD-SUB
5450	032270	012700	033260		MOV	#DDDATO,R0		;FLOWAS FAILURE
5451	032274	012701	033360		MOV	#DDP7,R1		;CON 216 N440 NOT 141
5452	032300	012702	000004		MOV	#4,R2		;GET GENERATED
5453	032304	022021		DD33:	CMP	(R0)+,(R1)+		;FOR THE ALLIGNMENT
5454	032306	001402			BEQ	DD34		;FLOWS?
5455	032310	000137	033070		JMP	@DDER9		;DATA ERROR, D
5456	032314	077205		DD34:	SOB	R2,DD33		

```

5457 032316 000137 033126          JMP      @#DDER10
5458 032322 077220          SOB      R2,DD32
5459 032324 052704 000010          BIS      #10,R4
5460 032330 020405          CMP      R4,R5          ;FPS CORRECT?
5461 032332 001402          BEQ      DD36
5462 032334 000137 032472          JMP      @#DDER0          ;BAD FPS
5463          ;ACO NEG          FSRC      POS      /FSRC/</AC/
5464 032340          DD36:          LPERR          ;SET UP THE LOOP ON ERROR ADDRESS.
          032340 104413          MOV      #3200,R4          ;SET FIO, FIV, AND FD
5465 032342 012704 003200          LDFPS      R4
5466 032346 170104          MOV      #DD37,@#$TMP2
5467 032350 012737 032370 001236          MOV      #DDP5,R0          ;SET ACO OPERAND
5468 032356 012700 033340          LDD      (R0),ACO
5469 032362 172410          MOV      #DDP4,R0          ;FSPC
5470 032364 012700 033330          DD37:  ADDD      (R0),ACO          ;TEST INSTRUCTION
5471 032370 172010          STFPS      R5          ;GET FPS
5472 032372 170205          MOV      #DDDAT0,R0          ;GET THE RESULT
5473 032374 012700 033260          STD      ACO,(R0)
5474 032400 174010          MOV      #DDP8,R1          ;IS IT CORRECT
5475 032402 012701 033370          MOV      #4,R2
5476 032406 012702 000004          DD38:  CMP      (R0)+,(R1)+
5477 032412 022021          BEQ      DD41
5478 032414 001415          MOV      #DDDAT0,R0          ;ADD SUB
5479 032416 012700 033260          MOV      #DDP7,R1          ;FLOWS FAILURES
5480 032422 012701 033360          MOV      #4,R2          ;GET 216,042,141
5481 032426 012702 000004          DD39:  CMP      (R0)+,(R1)+          ;FOR THE ALLIGNMENT
5482 032432 022021          BEQ      DD40          ;FLOWS?
5483 032434 001402          JMP      @#DDER11          ;DATA ERROR. D
5484 032436 000137 033164          DD40:  SOB      R2,DD39
5485 032442 077205          JMP      @#DDER12          ;BAD CONSTANT.D
5486 032444 000137 033222          DD41:  SOB      R2,DD38
5487 032450 077220          BIS      #10,R4
5488 032452 052704 000010          CMP      R4,R5          ;FPS CORRECT?
5489 032456 020405          BEQ      DD42
5490 032460 001402          JMP      @#DDER0          ;BAD FPS
5491 032462 000137 032472          DD42:  JMP      @#DDDONE
5492 032466 000137 033410          DDER0:  MOV      R4,@#$TMP4          ;FPS ERROR
5493 032472 010437 001242          MOV      R5,@#$TMP3
5494 032476 010537 001240          1$:      ERROR      +164
5495 032502 104164          JMP      @#DDDONE
5496 032504 000137 033410          DDER1:
5497 032510          MOV      #DDP1,@#$TMP3
          032510 012737 033300 001240          MOV      #DDP1,@#$TMP4
          032516 012737 033300 001242          MOV      #DDDAT0,@#$TMP5
          032524 012737 033260 001244          MOV      #DDP9,@#$TMP6
          032532 012737 033400 001246          1$:      ERROR      +165
          032540 104165          JMP      @#DDDONE
          032542 000137 033410          DDER2:
5498 032546          MOV      #DDP1,@#$TMP3
          032546 012737 033300 001240          MOV      #DDP1,@#$TMP4
          032554 012737 033300 001242          MOV      #DDDAT0,@#$TMP5
          032562 012737 033260 001244          MOV      #DDP9,@#$TMP6
          032570 012737 033400 001246          1$:      ERROR      +176
          032576 104176          JMP      @#DDDONE
5499 032600 000137 033410          DDER3:
          032604          MOV      #DDP1,@#$TMP3
          032604 012737 033300 001240

```

	032612	012737	033310	001242		MOV	#DDP2,@#STMP4
	032620	012737	033260	001244		MOV	#DDDATO,@#STMP5
	032626	012737	033270	001246		MOV	#DDPO,@#STMP6
	032634	104177			1\$:	ERROR	+177
	032636	000137	033410			JMP	@#DDDDONE
5500	032642				DDER4:		
	032642	012737	033310	001240		MOV	#DDP2,@#STMP3
	032650	012737	033300	001242		MOV	#DDP1,@#STMP4
	032656	012737	033260	001244		MOV	#DDDATO,@#STMP5
	032664	012737	033270	001246		MOV	#DDPO,@#STMP6
	032672	104200			1\$:	ERROR	+200
	032674	000137	033410			JMP	@#DDDDONE
5501	032700				DDER5:		
	032700	012737	033350	001240		MOV	#DDP6,@#STMP3
	032706	012737	033320	001242		MOV	#DDP3,@#STMP4
	032714	012737	033260	001244		MOV	#DDDATO,@#STMP5
	032722	012737	033360	001246		MOV	#DDP7,@#STMP6
	032730	104165			1\$:	ERROR	+165
	032732	000137	033410			JMP	@#DDDDONE
5502	032736				DDER6:		
	032736	012737	033350	001240		MOV	#DDP6,@#STMP3
	032744	012737	033320	001242		MOV	#DDP3,@#STMP4
	032752	012737	033260	001244		MOV	#DDDATO,@#STMP5
	032760	012737	033360	001246		MOV	#DDP7,@#STMP6
	032766	104201			1\$:	ERROR	+201
	032770	000137	033410			JMP	@#DDDDONE
5503	032774				DDER7:		
	032774	012737	033320	001240		MOV	#DDP3,@#STMP3
	033002	012737	033350	001242		MOV	#DDP6,@#STMP4
	033010	012737	033260	001244		MOV	#DDDATO,@#STMP5
	033016	012737	033360	001246		MOV	#DDP7,@#STMP6
	033024	104165			1\$:	ERROR	+165
	033026	000137	033410			JMP	@#DDDDONE
5504	033032				DDER8:		
	033032	012737	033320	001240		MOV	#DDP3,@#STMP3
	033040	012737	033350	001242		MOV	#DDP6,@#STMP4
	033046	012737	033260	001244		MOV	#DDDATO,@#STMP5
	033054	012737	033360	001246		MOV	#DDP7,@#STMP6
	033062	104202			1\$:	ERROR	+202
	033064	000137	033410			JMP	@#DDDDONE
5505	033070				DDER9:		
	033070	012737	033340	001240		MOV	#DDP5,@#STMP3
	033076	012737	033330	001242		MOV	#DDP4,@#STMP4
	033104	012737	033260	001244		MOV	#DDDATO,@#STMP5
	033112	012737	033370	001246		MOV	#DDP8,@#STMP6
	033120	104165			1\$:	ERROR	+165
	033122	000137	033410			JMP	@#DDDDONE
5506	033126				DDER10:		
	033126	012737	033340	001240		MOV	#DDP5,@#STMP3
	033134	012737	033330	001242		MOV	#DDP4,@#STMP4
	033142	012737	033260	001244		MOV	#DDDATO,@#STMP5
	033150	012737	033370	001246		MOV	#DDP8,@#STMP6
	033156	104203			1\$:	ERROR	+203
	033160	000137	033410			JMP	@#DDDDONE
5507	033164				DDER11:		
	033164	012737	033330	001240		MOV	#DDP4,@#STMP3
	033172	012737	033340	001242		MOV	#DDP5,@#STMP4

```

033200 012737 033260 001244      MOV   #DDDATO,@#STMP5
033206 012737 033370 001246      MOV   #DDP8,@#STMP6
033214 104165                      1$:  ERROR +165
033216 000137 033410                      JMP   @#DDDONE
5508 033222                      DDER12:
033222 012737 033330 001240      MOV   #DDP4,@#STMP3
033230 012737 033340 001242      MOV   #DDP5,@#STMP4
033236 012737 033260 001244      MOV   #DDDATO,@#STMP5
033244 012737 033370 001246      MOV   #DDP8,@#STMP6
033252 104204                      1$:  ERROR +204
033254 000137 033410                      JMP   @#DDDONE
5509 033260 000000      DDDATO: 0
5510 033262 000000      0
5511 033264 000000      0
5512 033266 000000      0
5513 033270 000000      DDP0:  0
5514 033272 000000      0
5515 033274 000000      0
5516 033276 000000      0
5517 033300 100200      DDP1: 100200      :-DDP2
5518 033302 000000      0
5519 033304 000000      0
5520 033306 000000      0
5521 033310 000200      DDP2:  200      :-DDP1
5522 033312 000000      0
5523 033314 000000      0
5524 033316 000000      0
5525 033320 001100      DDP3: 1100      :EXP=4
5526 033322 000000      0      :FRAC=...110...
5527 033324 000000      0
5528 033326 000000      0
5529 033330 000600      DDP4:  600      :EXP=3
5530 033332 000000      0      :FRAC=...100...
5531 033334 000000      0
5532 033336 000000      0
5533 033340 101100      DDP5: 101100      :-DDP3
5534 033342 000000      0
5535 033344 000000      0
5536 033346 000000      0
5537 033350 100600      DDP6: 100600      :-DDP4
5538 033352 000000      0
5539 033354 000000      0
5540 033356 000000      0
5541 033360 001000      DDP7:  1000      :DDP3+DDP6
5542 033362 000000      0
5543 033364 000000      0
5544 033366 000000      0
5545 033370 101000      DDP8: 101000      :DDP5+DDP4
5546 033372 000000      0
5547 033374 000000      0
5548 033376 000000      0
5549 033400 100400      DDP9: 100400      :DDP1+DDP1
5550 033402 000000      0
5551 033404 000000      0
5552 033406 000000      0
5553 033410 000005      DDDONE:  RESET
5561  ;:*****
  
```

```

:*TEST 35      SUBD TEST
:*
:* THIS IS A TEST OF THE SUBD INSTRUCTION.
:* BOTH A POSITIVE AND A NEGATIVE NUMBER
:* IS SUBTRACTED FROM IT SELF
:*
:*****
TST35: SCOPE
: USE POSITIVE OPERANDS
EE1:
LPERR                                ;SET UP THE LOOP ON ERROR ADDRESS.
MOV #3200,R4                          ;SET FIO, FIV, AND FD
LDFPS R4
MOV #EE2,@#STMP2
MOV #EEP1,R0                          ;SET ACO OPERAND
LDD (R0),ACO
MOV #EEP1,R0                          ;FSPC
SUBD (R0),ACO                         ;TEST INSTRUCTION
STFPS R5                              ;GET FPS
MOV #EEDATO,R0                       ;GET THE RESULT
STD ACO,(R0)
MOV #EEP0,R1                          ;IS IT CORRECT?
MOV #4,R2
EE2: CMP (R0)+,(R1)+
BEQ EE6
MOV #EEDATO,R0                       ;DID A BAD
MOV #EEP2,R1                          ;CONSTANT (NOT 57)
MOV #4,R2                              ;GET GENERATED
EE3: CMP (R0)+,(R1)+                  ;FOR THE ALLIGNMENT
BEQ EE5                               ;FLOWS?
JMP @#EEER1                           ;DATA ERROR.D
EE4: SOB R2,EE4
JMP @#EEER2                           ;BAD CONSTANT.D
EE5: SOB R2,EE3
EE6: BIS #4,R4
CMP R4,R5                             ;FPS CORRECT?
BEQ EE7
JMP @#EEERO                           ;BAD FPS
EE7: ;USE NEGATIVE OPERANDS
LPERR                                ;SET UP THE LOOP ON ERROR ADDRESS.
MOV #3200,R4                          ;SET FIO, FIV, AND FD
LDFPS R4
MOV #EE8,@#STMP2
MOV #EEP3,R0                          ;SET ACO OPERAND
LDD (R0),ACO
MOV #EEP3,R0                          ;FSPC
SUBD (R0),ACO                         ;TEST INSTRUCTION
STFPS R5                              ;GET FPS
MOV #EEDATO,R0                       ;GET THE RESULT
STD ACO,(R0)
MOV #EEP0,R1                          ;IS IT CORRECT?
MOV #4,R2
EE8: CMP (R0)+,(R1)+
BEQ EE12
JMP @#EEER0
EE9: SOB R2,EE9
MOV #EEDATO,R0                       ;DID A BAD
MOV #EEP4,R1                          ;CONSTANT (NOT 57)

```

```

5562 033412 000004
5563 033414
5564 033414 104413
5565 033416 012704 003200
5566 033422 170104
5567 033424 012737 033444 001236
5568 033432 012700 034124
5569 033436 172410
5570 033440 012700 034124
5571 033444 173010
5572 033446 170205
5573 033450 012700 034102
5574 033454 174010
5575 033456 012701 034112
5576 033462 012702 000004
5577 033466 022021
5578 033470 001415
5579 033472 012700 034102
5580 033476 012701 034134
5581 033502 012702 000004
5582 033506 022021
5583 033510 001402
5584 033512 000137 033712
5585 033516 077205
5586 033520 000137 033750
5587 033524 077220
5588 033526 052704 000004
5589 033532 020405
5590 033534 001402
5591 033536 000137 033674
5592 033542
5593 033542 104413
5594 033544 012704 003200
5595 033550 170104
5596 033552 012737 033572 001236
5597 033560 012700 034144
5598 033564 172410
5599 033566 012700 034144
5600 033572 173010
5601 033574 170205
5602 033576 012700 034102
5603 033602 174010
5604 033604 012701 034112
5605 033610 012702 000004
5606 033614 022021
5607 033616 001415
5608 033620 012700 034102
5609 033624 012701 034154

```

5609	033630	012702	000004		MOV	#4,R2		:GET GENERATED
5610	033634	022021		EE10:	CMP	(R0)+,(R1)+		:FOR THE ALLIGNMENT
5611	033636	001402			BEQ	EE11		:FLOWS?
5612	033640	000137	034006		JMP	@#EEER3		:DATA ERROR.D
5613	033644	077205		EE11:	SOB	R2,EE10		
5614	033646	000137	034044		JMP	@#EEER4		:BAD CONSTANT.D
5615	033652	077220		EE12:	SOB	R2,EE9		
5616	033654	052704	000004		BIS	#4,R4		
5617	033660	020405			CMP	R4,R5		:FPS CORRECT?
5618	033662	001402			BEQ	EE13		
5619	033664	000137	033674		JMP	@#EEERO		:BAD FPS.
5620	033670	000137	034164	EE13:	JMP	@#EEDONE		
5621	033674	010437	001242	EEERO:	MOV	R4,@#STMP4		:BAD FPS
5622	033700	010537	001240		MOV	R5,@#STMP3		
5623	033704	104205		1\$:	ERROR	+205		
5624	033706	000137	034164		JMP	@#EEDONE		
5625	033712			EEER1:				
	033712	012737	034124	001240	MOV	#EEP1,@#STMP3		
	033720	012737	034124	001242	MOV	#EEP1,@#STMP4		
	033726	012737	034102	001244	MOV	#EEDATO,@#STMP5		
	033734	012737	034112	001246	MOV	#EEO0,@#STMP6		
	033742	104206			1\$:	ERROR	+206	
	033744	000137	034164		JMP	@#EEDONE		
5626	033750			EEER2:				
	033750	012737	034124	001240	MOV	#EEP1,@#STMP3		
	033756	012737	034124	001242	MOV	#EEP1,@#STMP4		
	033764	012737	034102	001244	MOV	#EEDATO,@#STMP5		
	033772	012737	034112	001246	MOV	#EEO0,@#STMP6		
	034000	104207			1\$:	ERROR	+207	
	034002	000137	034164		JMP	@#EEDONE		
5627	034006			EEER3:				
	034006	012737	034144	001240	MOV	#EEP3,@#STMP3		
	034014	012737	034144	001242	MOV	#EEP3,@#STMP4		
	034022	012737	034102	001244	MOV	#EEDATO,@#STMP5		
	034030	012737	034112	001246	MOV	#EEO0,@#STMP6		
	034036	104206			1\$:	ERROR	+206	
	034040	000137	034164		JMP	@#EEDONE		
5628	034044			EEER4:				
	034044	012737	034144	001240	MOV	#EEP3,@#STMP3		
	034052	012737	034144	001242	MOV	#EEP3,@#STMP4		
	034060	012737	034102	001244	MOV	#EEDATO,@#STMP5		
	034066	012737	034112	001246	MOV	#EEO0,@#STMP6		
	034074	104207			1\$:	ERROR	+207	
	034076	000137	034164		JMP	@#EEDONE		
5629	034102	000000		EEDATO:	0			
5630	034104	000000			0			
5631	034106	000000			0			
5632	034110	000000			0			
5633	034112	000000		EEPO:	0			
5634	034114	000000			0			
5635	034116	000000		00000				
5636	034120	000000			0			
5637	034122	000000			0			
5638	034124	000200		EEP1:	200			
5639	034126	000000			0			
5640	034130	000000			0			
5641	034132	000000			0			

5642 034134 000400
 5643 034136 000000
 5644 034140 000000
 5645 034142 000000
 5646 034144 100200
 5647 034146 000000
 5648 034150 000000
 5649 034152 000000
 5650 034154 100400
 5651 034156 000000
 5652 034160 000000
 5653 034162 000000
 5654 034164 104412

EEP2: 400
 0
 0
 0
 EEP3: 100200
 0
 0
 0
 EEP4: 100400
 0
 0
 0
 FEDONE: RSETUP

;GO INITIALIZE THE FPS AND STACK; AND
 ;SEE IF THE USER HAS EXPRESSED
 ;THE DESIRE TO CHANGE THE SOFTWARE
 ;VIRTUAL CONSOLE SWITCH REGISTER (HAS
 ;THE USER TYPED CONTROL G?).

5664

 ;*TEST 36 NORMALIZE ALGORITHM TEST
 ;*
 ;* THIS IS A TEST OF THE NORMALIZE
 ;* FLOW ALGORITHM. TWO PATTERNS ARE USED,
 ;* FIRST THE MINIMUM SITUATION REQUIRING ONE
 ;* LEFT SHIFT AND THEN THE MAXIMUM SITUATION
 ;* REQUIRING 56 SHIFTS.
 ;*

5665 034166 000004
 5666 034170 104413
 5667 034172 012704 003200
 5668 034176 170104
 5669 034200 012737 034220 001236
 5670 034206 012700 034512
 5671 034212 172410
 5672 034214 012700 034522
 5673 034220 172010
 5674 034222 170205
 5675 034224 012700 034462
 5676 034230 174010
 5677 034232 012701 034532
 5678 034236 012702 000004
 5679 034242 022021
 5680 034244 001401
 5681 034246 000466
 5682 034250 077204
 5683 034252 020405
 5684 034254 001401
 5685 034256 000435
 5686
 5687
 5688 034260 104413
 5689 034262 012704 003200
 5690 034266 170104

TST36: SCOPE
 ;USE DATA PATTERNS THAT REQUIRE ONLY ONE LEFT SHIFT TO NORMALIZE
 FF1: LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
 MOV #3200,R4 ;SET F10, F1V, AND FD
 LDFPS R4
 MOV #FF2,@\$TMP2
 MOV #FFP2,R0 ;SET ACO OPERAND
 LDD (R0),ACO
 MOV #FFP3,R0 ;FSPC
 ADDD (R0),ACO ;TEST INSTRUCTION
 STFPS R5 ;GET FPS
 MOV #FFDATO,R0 ;GET THE RESULT
 STD ACO,(R0)
 MOV #FFP4,R1 ;IS IT CORRECT
 MOV #4,R2
 FF3: CMP (R0)+,(R1)+
 BEQ FF4
 BR FFER2 ;BAD DATA
 FF4: SOB R2,FF3
 CMP R4,R5 ;FPS CORRECT?
 BEQ FF5
 BR FFER0 ;BAD FPS
 ;USE DATA PATTERNS WHICH REQUIRE 56 LEFT SHIFTS TO NORMALIZE
 ;THE RESULT
 FF5: LPERR ;SET UP THE LOOP ON ERROR ADDRESS.
 MOV #3200,R4 ;SET F1U, F1V, AND FD
 LDFPS R4


```

5691 034270 012737 034310 001236      MOV    #FF5,@#STMP2
5692 034276 012700 034472      MOV    #FFP0,R0          ;SET ACO OPERAND
5693 034302 172410      LDD    (R0),ACO
5694 034304 012700 034502      MOV    #FFP1,R0          ;FSRC
5695 034310 172010      FF6:   ADDD   (R0),ACO      ;TEST INSTRUCTION
5696 034312 170205      STFPS  R5                ;GET FPS
5697 034314 012700 034462      MOV    #FFDATO,R0        ;GET THE RESULT
5698 034320 174010      STD    ACO,(R0)
5699 034322 012701 034532      MOV    #FFP4,R1          ;IS IT CORRECT
5700 034326 012702 000004      MOV    #4,R2
5701 034332 022021      FF7:   CMP    (R0)+,(R1)+
5702 034334 001401      BEQ    FF10
5703 034336 000413      BR     FFER1              ;BATA
5704 034340 077204      FF10: SOB    R2,FF7
5705 034342 020405      CMP    R4,R5              ;FPS CORRECT?
5706 034344 001401      BEQ    FF11
5707 034346 000401      BR     FFER0              ;BAD FPS
5708 034350 000474      FF11: BR     FFDONE
5709
5710 034352 010537 001240      FFER0: MOV    R5,@#STMP3
5711 034356 010437 001242      MOV    R4,@#STMP4
5712 034362 104164      1$:   ERROR +164
5713 034364 000466      BR     FFDONE
5714
5715 034366      FFER1: MOV    #FFP1,@#STMP3
      034366 012737 034502 001240      MOV    #FFP0,@#STMP4
      034374 012737 034472 001242      MOV    #FFDATO,@#STMP5
      034402 012737 034462 001244      MOV    #FFP4,@#STMP6
      034410 012737 034532 001246      1$:   ERROR +210
      034416 104210      JMP    @#FFDONE
      034420 000137 034542
5716
5717 034424      FFER2: MOV    #FFP3,@#STMP3
      034424 012737 034522 001240      MOV    #FFP2,@#STMP4
      034432 012737 034512 001242      MOV    #FFDATO,@#STMP5
      034440 012737 034462 001244      MOV    #FFP4,@#STMP6
      034446 012737 034532 001246      1$:   ERROR +210
      034454 104210      JMP    @#FFDONE
      034456 000137 034542
5718
5719
5720 034462 000000      FFDATO: 0
5721 034464 000000      0
5722 034466 000000      0
5723 034470 000000      C
5724
5725 034472 016000      FFP0: 16000
5726 034474 000000      0
5727 034476 000000      0
5728 034500 000001      1
5729 034502 116000      FFP1: 116000
5730 034504 000000      0
5731 034506 000000      0
5732 034510 000000      0
5733 034512 000500      FFP2: 500
5734 034514 000000      0
5735 034516 000000      0
  
```

5736 034520 000000
 5737 034522 100400
 5738 034524 000000
 5739 034526 000000
 5740 034530 000000
 5741 034532 000200
 5742 034534 000000
 5743 034536 000000
 5744 034540 000000
 5745
 5746 034542
 5747
 5748
 5749 034542
 5750
 5751
 5752
 5753

FFP3: 0
 100400
 0
 0
 0
 FFP4: 200 ;FFP4=FFP0+FFP1
 0 ; =FFP3+FFP4
 0
 0
 0
 FFDONE:
 TST37:

```

.SBTTL END OF PASS ROUTINE
:*****
:*INCREMENT THE PASS NUMBER ($PASS)
:*INDICATE END-OF-PROGRAM AFTER 1 PASSES THRU THE PROGRAM
:*IF SW12=1 INHIBIT TRACE TRAP
:*IF THERES A MONITOR GO TO IT
:*IF THERE ISN'T JUMP TO LOOP
$EOP:
SCOPE
CLR $STNM ;:ZERO THE TEST NUMBER
CLR $TIMES ;:ZERO THE NUMBER OF ITERATIONS
INC $PASS ;:INCREMENT THE PASS NUMBER
BIC #100000,$PASS ;:DON'T ALLOW A NEG. NUMBER
DEC (PC)+ ;:LOOP?
$EOPCT: .WORD 1
BGT $DOAGN ;:YES
MOV (PC)+,@(PC)+ ;:RESTORE COUNTER
$ENDCT: .WORD 1
TYPE ,65$ ;:TYPE ASCIZ STRING
BR 64$ ;:GET OVER THE ASCIZ
::65$: .ASCIZ <12><15>/END PASS #/
64$: MOV $PASS,-(SP) ;:SAVE $PASS FOR TYPEOUT
;:TYPE PASS NUMBER IN OCTAL
;:GO TYPE--OCTAL ASCII
;:TYPE 6 DIGITS
;:SUPPRESS LEADING ZEROS
;:TYPE ASCIZ STRING
;:GET OVER THE ASCIZ
::67$: .ASCIZ / TOTAL ERRORS SINCE LAST REPORT /
66$: MOV $ERTTL,-(SP) ;:SAVE $ERTTL FOR TYPEOUT
;:TOTAL NUMBER OF ERRORS IN OCTAL
;:GO TYPE--OCTAL ASCII
;:TYPE 6 DIGITS
;:SUPPRESS LEADING ZEROS
;:TYPE CARRIAGE RETURN, LINE FEED
;:CLEAR ERROR TOTAL
$GET42: MOV @#42,R0 ;:GET MONITOR ADDRESS
    
```

034542
 034542 000004
 034544 005067 144332
 034550 005067 144526
 034554 005267 144544
 034560 042767 100000 144536
 034566 005327
 034570 000001
 034572 003074
 034574 012737
 034576 000001
 034600 034570
 034602 104401 034610
 034606 000407
 034626
 034626 016746 144472
 034632 104403
 034634 006
 034635 000
 034636 104401 034644
 034642 000421
 034706
 034706 016746 144200
 034712 104403
 034714 006
 034715 000
 034716 104401 001313
 034722 005067 144164
 034726 013700 000042

```

034732 001414          BEQ    $DOAGN          ;;BRANCH IF NO MONITOR
034734 005046          CLR    -(SP)           ;;INSURE THE 'T' BIT IS CLEAR
034736 012746 034744  MOV    #SCLR.T, -(SP)  ;;SETUP FOR AN RTI OR RTT
034742 000426          BR     $RTRN          ;;GO DO AN RTI OR RTT TO LOAD THE PSW
                                ;;WITH A CLEARED 'T' BIT

034744          SCLR.T:
034744 013700 000042    MOV    @#42,R0        ;;INSURE R0 CONTAINS THE MONITORS
034750 001405          BEQ    $DOAGN          ;;RETURN ADDRESS
034752 000005          RESET          ;;CLEAR THE WORLD
034754 004710  $ENDAD: JSR    PC,(R0)  ;;GO TO MONITOR
034756 000240          NOP             ;;SAVE ROOM
034760 000240          NOP             ;;FOR
034762 000240          NOP             ;;ACT11
034764          $DOAGN:
034764 104400          TRAP          ;;PUSH OLD PSW AND PC ON STACK
034766 042716 000020    BIC    #20,(SP)      ;;CLEAR THE 'T' BIT
034772 032777 010000 144140 BIT    #BIT12,@SWR    ;;RUN WITH TRACE TRAP?
035000 001005          BNE    1$           ;;BR IF NO
035002 005167 000020    COM    $TBIT        ;;IS IT TIME FOR TRACE TRAP
035006 100402          BMI    1$           ;;BR IF NO
035010 052716 000020    BIS    #20,(SP)     ;;SET TRACE TRAP
035014 012746 035022  1$:   MOV    #SLOOP, -(SP)  ;;JUMP TO START OF TEST
035020 000C02  $RTRN: RTI          ;;RETURN--THIS IS CHANGED TO
                                ;;AN 'RTT' IF 'RTT' IS A LEGAL
                                ;;INSTRUCTION

035022          $LOOP:
035022 000137          JMP    @(PC)+        ;;RETURN
035024 004270  $RTNAD: .WORD  LOOP
035026 000000  $TBIT:  .WORD  0      ;;'T' BIT STATE INDICATOR
035030 377 277 000  $ENULL: .BYTE  -1,-1,0  ;;NULL CHARACTER STRING
                                .EVEN
    
```

5754
5755

SBTTL SCOPE HANDLER ROUTINE

```

*****
*THIS ROUTINE CONTROLS THE LOOPING OF SUBTESTS. IT WILL INCREMENT
*AND LOAD THE TEST NUMBER($TSTNM) INTO THE DISPLAY REG.(DISPLAY<7:0>)
*AND LOAD THE ERROR FLAG ($ERFLG) INTO DISPLAY<15:08>
*THE SWITCH OPTIONS PROVIDED BY THIS ROUTINE ARE:
*SW14=1      LOOP ON TEST
*SW11=1      INHIBIT ITERATIONS
*SW09=1      LOOP ON ERROR
*SW08=1      LOOP ON TEST IN SWR<7:0>
*CALL
*          SCOPE          ;;SCOPE=IOT
    
```

```

035034          $SCOPE:
035034 104406          CKSWR
035036 032777 040000 144074 1$:  BIT    #BIT14,@SWR    ;;TEST FOR CHANGE IN SOFT-SWR
035044 001114          BNE    $OVER        ;;LOOP ON PRESENT TEST?
                                ;;YES IF SW14=1
035046 000416  $XTSTR: BR     6$      ;;IF RUNNING ON THE 'XOR' TESTER CHANGE
                                ;;THIS INSTRUCTION TO A 'NOP' (NOP=240)
035050 013746 000004    MOV    @#ERRVEC, -(SP)  ;;SAVE THE CONTENTS OF THE ERROR VECTOR
035054 012737 035074 000004    MOV    #5$,@#ERRVEC   ;;SET FOR TIMEOUT
035062 005737 177060    TST    @#177060      ;;TIME OUT ON XOR?
035066 012637 000004    MOV    (SP)+,@#ERRVEC  ;;RESTORE THE ERROR VECTOR
035072 000463          BR     $SVLAD      ;;GO TO THE NEXT TEST
035074 022626  5$:   CMP    (SP)+,(SP)+  ;;CLEAR THE STACK AFTER A TIME OUT
    
```

```

035076 012637 000004      MOV    (SP)+,@#ERRVEC  ;;RESTORE THE ERROR VECTOR
035102 000423      BR     7$              ;;LOOP ON THE PRESENT TEST
035104      6$:;#####END OF CODE FOR THE XOR TESTER#####
035104 032777 000400 144026    BIT    #BIT08,@SWR     ;;LOOP ON SPEC. TEST?
035112 001404      BEQ   2$              ;;BR IF NO
035114 127767 144020 143760    CMPB  @SWR,$STNM      ;;ON THE RIGHT TEST?   SWR<7:0>
035122 001465      BEQ   $OVER          ;;BR IF YES
035124 105767 143753      2$:  TSTB  $ERFLG       ;;HAS AN ERROR OCCURRED?
035130 001421      BEQ   3$              ;;BR IF NO
035132 126767 143757 143743    CMPB  $ERMAX,$ERFLG  ;;MAX. ERRORS FOR THIS TEST OCCURRED?
035140 101015      BHI   3$              ;;BR IF NO
035142 032777 001000 143770    BIT    #BIT09,@SWR   ;;LOOP ON ERROR?
035150 001404      BEQ   4$              ;;BR IF NO
035152 016767 143732 143726    7$:  MOV    $LPERR,$LPADR ;;SET LOOP ADDRESS TO LAST SCOPE
035160 000446      BR     $OVER
035162 105067 143715      4$:  CLRB  $ERFLG       ;;ZERO THE ERROR FLAG
035166 005067 144110      CLR   $TIMES        ;;CLEAR THE NUMBER OF ITERATIONS TO MAKE
035172 000415      BR     1$            ;;ESCAPE TO THE NEXT TEST
035174 032777 004000 143736    3$:  BIT    #BIT11,@SWR   ;;INHIBIT ITERATIONS?
035202 001011      BNE   1$            ;;BR IF YES
035204 005767 144114      TST   $PASS         ;;IF FIRST PASS OF PROGRAM
035210 001406      BEQ   1$            ;;INHIBIT ITERATIONS
035212 005267 143666      INC   $ICNT         ;;INCREMENT ITERATION COUNT
035216 026767 144060 143660    CMP   $TIMES,$ICNT  ;;CHECK THE NUMBER OF ITERATIONS MADE
035224 002024      BGE   $OVER        ;;BR IF MORE ITERATION REQUIRED
035226 012767 000001 143650    1$:  MOV    #1,$ICNT     ;;REINITIALIZE THE ITERATION COUNTER
035234 016767 000052 144040      MOV   $MXCNT,$TIMES ;;SET NUMBER OF ITERATIONS TO DO
035242 105267 143634      $SVLAD: INCB  $STNM     ;;COUNT TEST NUMBERS
035246 116767 143630 144046    MOVB  $STNM,$TESTN  ;;SET TEST NUMBER IN APT MAILBOX
035254 011667 143626      MOV   (SP),$LPADR   ;;SAVE SCOPE LOOP ADDRESS
035260 011667 143624      MOV   (SP),$LPERR   ;;SAVE ERROR LOOP ADDRESS
035264 005067 144014      CLR   $ESCAPE      ;;CLEAR THE ESCAPE FROM ERROR ADDRESS
035270 112767 000001 143617    MOVB  #1,$ERMAX     ;;ONLY ALLOW ONE(1) ERROR ON NEXT TEST
035276 016777 143600 143636    $OVER: MOV   $STNM,@DISPLAY ;;DISPLAY TEST NUMBER
035304 016716 143576      MOV   $LPADR,(SP)  ;;FUDGE RETURN ADDRESS
035310 000002      RTI                ;;FIXES PS
035312 000001      $MXCNT: 1          ;;MAX. NUMBER OF ITERATIONS

```

5756
5757

```

.SBTTL  ERROR HANDLER ROUTINE
*****
*THIS ROUTINE WILL INCREMENT THE ERROR FLAG AND THE ERROR COUNT,
*SAVE THE ERROR ITEM NUMBER AND THE ADDRESS OF THE ERROR CALL
*AND GO TO ERTYPE ON ERROR
*THE SWITCH OPTIONS PROVIDED BY THIS ROUTINE ARE:
*SW15=1      HALT ON ERROR
*SW13=1      INHIBIT ERROR TYPEOUTS
*SW10=1      BELL ON ERROR
*SW09=1      LOOP ON ERROR
*CALL
*          ERROR  N      ;;ERROR=EMT AND N=ERROR ITEM NUMBER
$ERROR:

```

```

035314 104406      CKSWR                ;;TEST FOR CHANGE IN SOFT-SWR
035316 105267 143561      7$:  INCB  $ERFLG       ;;SET THE ERROR FLAG
035322 001775      BEQ   7$            ;;DON'T LET THE FLAG GO TO ZERO
035324 016777 143552 143610    MOV   $STNM,@DISPLAY ;;DISPLAY TEST NUMBER AND ERROR FLAG
035332 032777 002000 143600    BIT   #BIT10,@SWR   ;;BELL ON ERROR?
035340 001402      BEQ   1$            ;;NO - SKIP

```

```

035342 104401 001306          TYPE      ,SBELL          ;;RING BELL
035346 005267 143540          1$:      INC      $ERTTL      ;;COUNT THE NUMBER OF ERRORS
035352 011667 143540          MOV      (SP), $ERRPC    ;;GET ADDRESS OF ERROR INSTRUCTION
035356 162767 000002 143532    SUB      #2, $ERRPC
035364 117767 143526 143522    MOVB     @$ERRPC, $ITEMB  ;;STRIP AND SAVE THE ERROR ITEM CODE
035372 032777 020000 143540    BIT      #BIT13, @SWR    ;;SKIP TYPEOUT IF SET
035400 001004          BNE      20$            ;;SKIP TYPEOUTS
035402 004767 002174          JSR      PC, ERTYPE     ;;GO TO USER ERROR ROUTINE
035406 104401 001313          TYPE      , $CRLF
035412          20$:
035412 122767 000001 143716    CMPB     #APTENV, $ENV   ;;RUNNING IN APT MODE
035420 001007          BNE      2$            ;;NO, SKIP APT ERROR REPORT
035422 116767 143466 000004    MOVB     $ITEMB, 21$    ;;SET ITEM NUMBER AS ERROR NUMBER
035430 004767 001010          JSR      PC, $ATY4     ;;REPORT FATAL ERROR TO APT
035434          000          21$:      .BYTE      0
035435          000          .BYTE      0
035436 000777          22$:      BR      22$            ;;APT ERROR LOOP
035440 005777 143474          2$:      TST      @SWR        ;;HALT ON ERROR
035444 100002          BPL      3$            ;;SKIP IF CONTINUE
035446 000000          HALT
035450 104406          CKSWR
035452 032777 001000 143460    3$:      BIT      #BIT09, @SWR  ;;TEST FOR CHANGE IN SOFT-SWR
035460 001402          BEQ      4$            ;;LOOP ON ERROR SWITCH SET?
035462 016716 143422          MOV      $LPERR, (SP)  ;;BR IF NO
035466 005767 143612          4$:      TST      $ESCAPE    ;;FUDGE RETURN FOR LOOPING
035472 001402          BEQ      5$            ;;CHECK FOR AN ESCAPE ADDRESS
035474 016716 143604          MOV      $ESCAPE, (SP) ;;BR IF NONE
035500          5$:
035500 022737 034754 000042    CMP      # $ENDAD, @#42 ;;FUDGE RETURN ADDRESS FOR ESCAPE
035506 001001          BNE      6$            ;;ACT-11 AUTO-ACCEPT?
035510 000000          HALT                ;;BRANCH IF NO
035512          6$:
035512 032777 001000 143420    BIT      #BIT09, @SWR  ;;YES
035520 001013          BNE      ERM10
035522 011637 001162          MOV      (SP), @#$REGO ;SEE IF ERROR #377
035526 062737 177776 001162    ADD      #-2, @#$REGO
035534 122777 000377 143420    CMPB     #377, @#$REGO
035542 001002          BNE      ERM10
035544 062716 000002          ADD      #2, (SP)
035550 000002          ERM10: RTI

```

5758
5759

```

.SBTTL SAVE AND RESTORE R0-R5 ROUTINES
;*****
;*SAVE R0-R5
;*CALL:
;* SAVREG
;*UPON RETURN FROM $SAVREG THE STACK WILL LOOK LIKE:
;*
;*TOP---(+16)
;* +2---(+18)
;* +4---R5
;* +6---R4
;* +8---R3
; *+10---R2
; *+12---R1
; *+14---R0
$SAVREG:

```

035552

```

035552 010046      MOV      R0,-(SP)      ;;PUSH R0 ON STACK
035554 010146      MOV      R1,-(SP)      ;;PUSH R1 ON STACK
035556 010246      MOV      R2,-(SP)      ;;PUSH R2 ON STACK
035560 010346      MOV      R3,-(SP)      ;;PUSH R3 ON STACK
035562 010446      MOV      R4,-(SP)      ;;PUSH R4 ON STACK
035564 010546      MOV      R5,-(SP)      ;;PUSH R5 ON STACK
035566 016646 000022  MOV      22(SP),-(SP)  ;;SAVE PS OF MAIN FLOW
035572 016646 000022  MOV      22(SP),-(SP)  ;;SAVE PC OF MAIN FLOW
035576 016646 000022  MOV      22(SP),-(SP)  ;;SAVE PS OF CALL
035602 016646 000022  MOV      22(SP),-(SP)  ;;SAVE PC OF CALL
035606 000002      RTI

```

```

;*RESTORE R0-R5
;*CALL:

```

```

035610 012666 000022  $RESREG:
035610 012666 000022  MOV      (SP)+,22(SP)  ;;RESTORE PC OF CALL
035614 012666 000022  MOV      (SP)+,22(SP)  ;;RESTORE PS OF CALL
035620 012666 000022  MOV      (SP)+,22(SP)  ;;RESTORE PC OF MAIN FLOW
035624 012666 000022  MOV      (SP)+,22(SP)  ;;RESTORE PS OF MAIN FLOW
035630 012605      MOV      (SP)+,R5      ;;POP STACK INTO R5
035632 012604      MOV      (SP)+,R4      ;;POP STACK INTO R4
035634 012603      MOV      (SP)+,R3      ;;POP STACK INTO R3
035636 012602      MOV      (SP)+,R2      ;;POP STACK INTO R2
035640 012601      MOV      (SP)+,R1      ;;POP STACK INTO R1
035642 012600      MOV      (SP)+,R0      ;;POP STACK INTO R0
035644 000002      RTI

```

5760
5761

.SBTTL TYPE ROUTINE

```

*****
;*ROUTINE TO TYPE ASCIZ MESSAGE. MESSAGE MUST TERMINATE WITH A 0 BYTE.
;*THE ROUTINE WILL INSERT A NUMBER OF NULL CHARACTERS AFTER A LINE FEED.
;*NOTE1:      $NULL CONTAINS THE CHARACTER TO BE USED AS THE FILLER CHARACTER.
;*NOTE2:      $FILLS CONTAINS THE NUMBER OF FILLER CHARACTERS REQUIRED.
;*NOTE3:      $FILLC CONTAINS THE CHARACTER TO FILL AFTER.

```

```

;*CALL:
;*1) USING A TRAP INSTRUCTION
;*      TYPE      ,MESADR      ;;MESADR IS FIRST ADDRESS OF AN ASCIZ STRING
;*OR
;*      TYPE
;*      MESADR

```

```

035646 105767 143305  $TYPE: TSTB   $TPFLG      ;;IS THERE A TERMINAL?
035652 100002      BPL     1$              ;;BR IF YES
035654 000000      HALT                    ;;HALT HERE IF NO TERMINAL
035656 000430      BR      3$              ;;LEAVE
035660 010046      1$:  MOV     R0,-(SP)      ;;SAVE R0
035662 017600 000002  MOV     @2(SP),R0        ;;GET ADDRESS OF ASCIZ STRING
035666 122767 000001 143442  CMPB   #APTENV,$ENV      ;;RUNNING IN APT MODE
035674 001011      BNE     62$             ;;NO,GO CHECK FOR APT CONSOLE
035676 132767 000100 143433  BITB   #APTPOOL,$ENVM    ;;SPOOL MESSAGE TO APT
035704 001405      BEQ     62$             ;;NO,GO CHECK FOR CONSOLE
035706 010067 000004  MOV     R0,61$           ;;SETUP MESSAGE ADDRESS FOR APT
035712 004767 000516  JSR     PC,$ATY3         ;;SPOOL MESSAGE TO APT
035716 000000      .WORD   0              ;;MESSAGE ADDRESS
035720 132767 000040 143411 62$:  BITB   #APTCSUP,$ENVM    ;;APT CONSOLE SUPPRESSED
035726 001003      BNE     60$             ;;YES,SKIP TYPE OUT

```

```

035730 112046      2$:  MOVB  (R0)+,-(SP)  ;;PUSH CHARACTER TO BE TYPED ONTO STACK
035732 001005      BNE   4$             ;;BR IF IT ISN'T THE TERMINATOR
035734 005726      TST   (SP)+         ;;IF TERMINATOR POP IT OFF THE STACK
035736 012600      60$: MOV  (SP)+,R0   ;;RESTORE R0
035740 062716 000002  3$:  ADD  #2,(SP)     ;;ADJUST RETURN PC
035744 000002      RTI                    ;;RETURN
035746 122716 000011  4$:  CMPB  #HT,(SP)    ;;BRANCH IF <HT>
035752 001430      BEQ   8$             ;;BRANCH IF NOT <CRLF>
035754 122716 000200  CMPB  #CRLF,(SP)   ;;BRANCH IF NOT <CRLF>
035760 001006      BNE   5$             ;;POP <CR><LF> EQUIV
035762 005726      TST   (SP)+         ;;TYPE A CR AND LF
035764 104401      TYPE
035766 001313      $CRLF
035770 105067 000200  CLRB  $CHARCNT     ;;CLEAR CHARACTER COUNT
035774 000755      BR    2$             ;;GET NEXT CHARACTER
035776 004767 000056  5$:  JSR  PC,$TYPEC    ;;GO TYPE THIS CHARACTER
036002 126726 143150  6$:  CMPB  $FILLC,(SP)+ ;;IS IT TIME FOR FILLER CHARS.?
036006 001350      BNE  2$             ;;IF NO GO GET NEXT CHAR.
036010 016746 143140  MOV  $NULL,-(SP)   ;;GET # OF FILLER CHARS. NEEDED
                                ;;AND THE NULL CHAR.
036014 105366 000001  7$:  DECB  1(SP)       ;;DOES A NULL NEED TO BE TYPED?
036020 002770      BLT  6$             ;;BR IF NO--GO POP THE NULL OFF OF STACK
036022 004767 000032  JSR  PC,$TYPEC    ;;GO TYPE A NULL
036026 105367 000142  DECB  $CHARCNT     ;;DO NOT COUNT AS A COUNT
036032 000770      BR    7$           ;;LOOP
                                :HORIZONTAL TAB PROCESSOR
036034 112716 000040  8$:  MOVB  #' ,(SP)   ;;REPLACE TAB WITH SPACE
036040 004767 000014  9$:  JSR  PC,$TYPEC    ;;TYPE A SPACE
036044 132767 000007 000122 BITB  #7,$CHARCNT  ;;BRANCH IF NOT AT
036052 001372      BNE  9$             ;;TAB STOP
036054 005726      TST  (SP)+         ;;POP SPACE OFF STACK
036056 000724      BR    2$           ;;GET NEXT CHARACTER
036060 105777 143064  $TYPEC: TSTB @ $TPS  ;;WAIT UNTIL PRINTER IS READY
036064 100375      BPL  $TYPEC
036066 116677 000002 143056 MOVB  2(SP),@$TPB  ;;LOAD CHAR TO BE TYPED INTO DATA REG.
036074 105777 143044      TSTB @$TKS        ;;SEE IF KEYBOARD IS TALKING.
036100 100021      BPL  2$             ;;BRANCH IF IT ISN'T.
036102 017746 143040      MOV  @$TKB,-(SP)   ;;PUSH CHARACTER ONTO STACK.
036106 042716 177600      BIC  #177600,(SP) ;;BIT CLEAR TOP BYTE AND PARITY BIT.
036112 022726 000023      CMP  #23,(SP)+    ;;SEE IF THIS IS A ^S.
036116 001012      BNE  2$           ;;BRANCH TO CONTINUE IF IT ISN'T.
036120 105777 143020  3$:  TSTB @$TKS        ;;WAIT FOR ANOTHER INPUT.
036124 100375      BPL  3$           ;;BRANCH BACK IF NOT READY.
036126 017746 143014      MOV  @$TKB,-(SP)   ;;PUSH NEXT CHARACTER ON STACK.
036132 042716 177600      BIC  #177600,(SP) ;;BIT CLEAR TOP BYTE AND PARITY BIT.
036136 022726 000021      CMP  #21,(SP)+    ;;SEE IF THIS IS A ^Q.
036142 001366      BNE  3$           ;;BRANCH BACK FOR MORE WAIT IF NOT.
036144 122766 000015 000002  2$:  CMPB  #CR,2(SP)    ;;IS CHARACTER A CARRIAGE RETURN?
036152 001003      BNE  1$           ;;BRANCH IF NO
036154 105067 000014      CLRB  $CHARCNT    ;;YES--CLEAR CHARACTER COUNT
036160 000406      BR    $TYPEX      ;;EXIT
036162 122766 000012 000002  1$:  CMPB  #LF,2(SP)    ;;IS CHARACTER A LINE FEED?
036170 001402      BEQ  $TYPEX      ;;BRANCH IF YES
036172 105227      INCB (PC)+        ;;COUNT THE CHARACTER
036174 000000      $CHARCNT: .WORD  0 ;;CHARACTER COUNT STORAGE
036176 000207      $TYPEX: RTS      PC

```

5763

```

.SBTTL BINARY TO OCTAL (ASCII) AND TYPE
*****
*THIS ROUTINE IS USED TO CHANGE A 16-BIT BINARY NUMBER TO A 6-DIGIT
*OCTAL (ASCII) NUMBER AND TYPE IT.
*$TYPOS---ENTER HERE TO SETUP SUPPRESS ZEROS AND NUMBER OF DIGITS TO TYPE
*CALL:
*   MOV     NUM,-(SP)      ;;NUMBER TO BE TYPED
*   TYPOS   TYPOS         ;;CALL FOR TYPEOUT
*   .BYTE   N              ;;N=1 TO 6 FOR NUMBER OF DIGITS TO TYPE
*   .BYTE   M              ;;M=1 OR 0
*                               ;;1=TYPE LEADING ZEROS
*                               ;;0=SUPPRESS LEADING ZEROS
*$TYPON----ENTER HERE TO TYPE OUT WITH THE SAME PARAMETERS AS THE LAST
*$TYPOS OR $TYPOC
*CALL:
*   MOV     NUM,-(SP)      ;;NUMBER TO BE TYPED
*   TYPON   TYPON         ;;CALL FOR TYPEOUT
*$TYPOC---ENTER HERE FOR TYPEOUT OF A 16 BIT NUMBER
*CALL:
*   MOV     NUM,-(SP)      ;;NUMBER TO BE TYPED
*   TYPOC   TYPOC         ;;CALL FOR TYPEOUT
*$TYPOS: MOV     @ (SP),-(SP)  ;;PICKUP THE MODE
MOV     1(SP), $OFILL      ;;LOAD ZERO FILL SWITCH
MOV     (SP)+, $OMODE+1    ;;NUMBER OF DIGITS TO TYPE
ADD     #2, (SP)          ;;ADJUST RETURN ADDRESS
BR      $TYPON
*$TYPOC: MOV     #1, $OFILL  ;;SET THE ZERO FILL SWITCH
MOV     #6, $OMODE+1       ;;SET FOR SIX(6) DIGITS
*$TYPON: MOV     #5, $OCNT   ;;SET THE ITERATION COUNT
MOV     R3,-(SP)          ;;SAVE R3
MOV     R4,-(SP)          ;;SAVE R4
MOV     R5,-(SP)          ;;SAVE R5
MOV     $OMODE+1, R4      ;;GET THE NUMBER OF DIGITS TO TYPE
NEG     R4
ADD     #6, R4            ;;SUBTRACT IT FOR MAX. ALLOWED
MOV     R4, $OMODE        ;;SAVE IT FOR USE
MOV     $OFILL, R4        ;;GET THE ZERO FILL SWITCH
MOV     12(SP), R5        ;;PICKUP THE INPUT NUMBER
CLR     R3                ;;CLEAR THE OUTPUT WORD
1$:    ROL     R5           ;;ROTATE MSB INTO 'C'
BR      3$                ;;GO DO MSB
2$:    ROL     R5           ;;FORM THIS DIGIT
      ROL     R5
      ROL     R5
MOV     R5, R3
3$:    ROL     R3           ;;GET LSB OF THIS DIGIT
      DECB   $OMODE        ;;TYPE THIS DIGIT?
      BPL   7$            ;;BR IF NO
      BIC   #177770, R3   ;;GET RID OF JUNK
      BNE   4$            ;;TEST FOR 0
      TST  R4             ;;SUPPRESS THIS 0?
      BEQ  5$            ;;BR IF YES
4$:    INC     R4          ;;DON'T SUPPRESS ANYMORE 0'S
      BIS   #'0, R3       ;;MAKE THIS DIGIT ASCII
5$:    BIS   #' ,R3       ;;MAKE ASCII IF NOT ALREADY

```

036200	017646	000000	
036204	116667	000001	000211
036212	112667	000207	
036216	062716	000002	
036222	000406		
036224	112767	000001	000171
036232	112767	000006	000165
036240	112767	000005	000154
036246	010346		
036250	010446		
036252	010546		
036254	116704	000145	
036260	005404		
036262	062704	000006	
036266	110467	000132	
036272	116704	000125	
036276	016605	000012	
036302	005003		
036304	006105		1\$:
036306	000404		
036310	006105		2\$:
036312	006105		
036314	006105		
036316	010503		
036320	006103		3\$:
036322	105367	000076	
036326	100016		
036330	042703	177770	
036334	001002		
036336	005704		
036340	001403		
036342	005204		4\$:
036344	052703	000060	
036350	052703	000040	5\$:


```

036354 110367 000040          MOVB   R3,8$          ;;SAVE FOR TYPING
036360 104401 036420          TYPE   ,8$          ;;GO TYPE THIS DIGIT
036364 105367 000032      7$:  DECB   $OCNT          ;;COUNT BY 1
036370 003347          BGT    2$          ;;BR IF MORE TO DO
036372 002402          BLT    6$          ;;BR IF DONE
036374 005204          INC    R4          ;;INSURE LAST DIGIT ISN'T A BLANK
036376 000744          BR     2$          ;;GO DO THE LAST DIGIT
036400 012605      6$:  MOV    (SP)+,R5          ;;RESTORE R5
036402 012604          MOV    (SP)+,R4          ;;RESTORE R4
036404 012603          MOV    (SP)+,R3          ;;RESTORE R3
036406 016666 000002 000004  MOV    2(SP),4(SP)      ;;SET THE STACK FOR RETURNING
036414 012616          MOV    (SP)+,(SP)
036416 000002          RTI          ;;RETURN
036420      000          8$:  .BYTE  0          ;;STORAGE FOR ASCII DIGIT
036421      000          .BYTE  0          ;;TERMINATOR FOR TYPE ROUTINE
036422      000      $OCNT: .BYTE  0          ;;OCTAL DIGIT COUNTER
036423      000      $OFILL: .BYTE  0          ;;ZERO FILL SWITCH
036424 000000      $OMODE: .WORD  0          ;;NUMBER OF DIGITS TO TYPE
    
```

5764
5765

.SBTTL APT COMMUNICATIONS ROUTINE

```

*****
036426 112767 000001 000236 $ATY1: MOVB   #1,$FFLG          ;;TO REPORT FATAL ERROR
036434 112767 000001 000226 $ATY3: MOVB   #1,$MFLG          ;;TO TYPE A MESSAGE
036442 000403          BR     $ATYC
036444 112767 000001 000220 $ATY4: MOVB   #1,$FFLG          ;;TO ONLY REPORT FATAL ERROR
036452          $ATYC:
036452 010046          MOV    R0,-(SP)          ;;PUSH R0 ON STACK
036454 010146          MOV    R1,-(SP)          ;;PUSH R1 ON STACK
036456 105767 000206          TSTB   $MFLG          ;;SHOULD TYPE A MESSAGE?
036462 001450          BEQ    5$          ;;IF NOT: BR
036464 122767 000001 142644  CMPB   #APTENV,$ENV          ;;OPERATING UNDER APT?
036472 001031          BNE    3$          ;;IF NOT: BR
036474 132767 000100 142635  BITB   #APTSPOOL,$ENVM      ;;SHOULD SPOOL MESSAGES?
036502 001425          BEQ    3$          ;;IF NOT: BR
036504 017600 000004          MOV    @4(SP),R0          ;;GET MESSAGE ADDR.
036510 062766 000002 000004  ADD    #2,4(SP)          ;;BUMP RETURN ADDR.
036516 005767 142574      1$:  TST    $MSGTYPE          ;;SEE IF DONE W/ LAST XMISSION?
036522 001375          BNE    1$          ;;IF NOT: WAIT
036524 010067 142602          MOV    R0,$MSGAD          ;;PUT ADDR IN MAILBOX
036530 105720      2$:  TSTB   (R0)+          ;;FIND END OF MESSAGE
036532 001376          BNE    2$
036534 166700 142572          SUB    $MSGAD,R0          ;;SUB START OF MESSAGE
036540 006200          ASR    R0          ;;GET MESSAGE LNGTH IN WORDS
036542 010067 142566          MOV    R0,$SMSGLGT          ;;PUT LENGTH IN MAILBOX
036546 012767 000004 142542  MOV    #4,$MSGTYPE          ;;TELL APT TO TAKE MSG.
036554 000413          BR     5$
036556 017667 000004 000016 3$:  MOV    @4(SP),4$          ;;PUT MSG ADDR IN JSR LINKAGE
036564 062766 000002 000004  ADD    #2,4(SP)          ;;BUMP RETURN ADDRESS
036572 016746 141200          MOV    177776,-(SP)      ;;PUSH 177776 ON STACK
036576 004767 177044          JSR    PC,$TYPE          ;;CALL TYPE MACRO
036602 000000      4$:  .WORD  0
036604          5$:
036604 105767 000062      10$: TSTB   $FFLG          ;;SHOULD REPORT FATAL ERROR?
036610 001416          BEQ    12$          ;;IF NOT: BR
036612 005767 142520          TST    $ENV          ;;RUNNING UNDER APT?
036616 001413          BEQ    12$          ;;IF NOT: BR
036620 005767 142472      11$: TST    $MSGTYPE          ;;FINISHED LAST MESSAGE?
    
```

```

036624 001375          BNE      11$          ::IF NOT: WAIT
036626 017667 000004 142464  MOV     @4(SP), $FATAL ::GET ERROR #
036634 062766 000002 000004  ADD     #2, 4(SP)      ::BUMP RETURN ADDR.
036642 005267 142450          INC     $MSGTYPE      ::TELL APT TO TAKE ERROR
036646 105067 000020          12$:  CLRB   $FFLG      ::CLEAR FATAL FLAG
036652 105067 000013          CLRB   $LFLG      ::CLEAR LOG FLAG
036656 105067 000006          CLRB   $MFLG      ::CLEAR MESSAGE FLAG
036662 012601          MOV     (SP)+, R1     ::POP STACK INTO R1
036664 012600          MOV     (SP)+, R0     ::POP STACK INTO R0
036666 000207          RTS     PC          ::RETURN
036670          000          $MFLG: .BYTE 0      ::MESSG. FLAG
036671          000          $LFLG: .BYTE 0      ::LOG FLAG
036672          000          $FFLG: .BYTE 0      ::FATAL FLAG

```

```

000200
000001
000100
000040
APTSIZE=200
APTENV=001
APTSPOOL=100
APTCSUP=040

```

5766
5767

```

.SBTTL TTY INPUT ROUTINE
:*****
.ENABL LSB
:*****
*SOFTWARE SWITCH REGISTER CHANGE ROUTINE.
*ROUTINE IS ENTERED FROM THE TRAP HANDLER, AND WILL
*SERVICE THE TEST FOR CHANGE IN SOFTWARE SWITCH REGISTER TRAP CALL
*WHEN OPERATING IN TTY FLAG MODE.

```

```

036674 022767 000176 142236 $CKSWR: CMP     #SWREG, SWR    ::IS THE SOFT-SWR SELECTED?
036702 001074          BNE     15$          ::BRANCH IF NO
036704 105777 142234          TSTB   @TKS         ::CHAR THERE?
036710 100071          BPL     15$          ::IF NO, DON'T WAIT AROUND
036712 117746 142230          MOVB   @TKB, -(SP)  ::SAVE THE CHAR
036716 042716 177600          BIC    #^C177, (SP) ::STRIP-OFF THE ASCII
036722 022726 000007          CMP     #7, (SP)+   ::IS IT A CONTROL G?
036726 001062          BNE     15$          ::NO, RETURN TO USER
036730 126727 142200 000001  CMPB   $AUTOB, #1   ::ARE WE RUNNING IN AUTO-MODE?
036736 001456          BEQ     15$          ::BRANCH IF YES
036740 104401 037303          TYPE   , $CNTLG    ::ECHO THE CONTROL-G (^G)
036744 104401 037310          $GTSWR: TYPE , $MSWR ::TYPE CURRENT CONTENTS
036750 016746 141222          MOV     SWREG, -(SP) ::SAVE SWREG FOR TYPEOUT
036754 104402          TYPOC          ::GO TYPE--OCTAL ASCII(ALL DIGITS)
036756 104401 037321          TYPE   , $MNEW     ::PROMPT FOR NEW SWR
036762 005046          19$:  CLR     -(SP)   ::CLEAR COUNTER
036764 005046          CLR     -(SP)     ::THE NEW SWR
036766 105777 142152          7$:  TSTB   @TKS         ::CHAR THERE?
036772 100375          BPL     7$          ::IF NOT TRY AGAIN
036774 117746 142146          MOVB   @TKB, -(SP) ::PICK UP CHAR
037000 042716 177600          BIC    #^C177, (SP) ::MAKE IT 7-BIT ASCII
037004 021627 000025          9$:  CMP     (SP), #25  ::IS IT A CONTROL-U?
037010 001005          BNE     10$         ::BRANCH IF NOT
037012 104401 037276          TYPE   , $CNTLU    ::YES, ECHO CONTROL-U (^U)
037016 062706 000006          20$:  ADD     #6, SP   ::IGNORE PREVIOUS INPUT
037022 000757          BR     19$         ::LET'S TRY IT AGAIN
037024 021627 000015          10$:  CMP     (SP), #15  ::IS IT A <CR>?
037030 001022          BNE     16$         ::BRANCH IF NO
037032 005766 000004          TST     4(SP)      ::YES, IS IT THE FIRST CHAR?
037036 001403          BEQ     11$         ::BRANCH IF YES

```

```

037040 016677 000002 142072      MOV      2(SP),@SWR      ;;SAVE NEW SWR
037046 062706 000006          11$:    ADD      #6,SP          ;;CLEAR UP STACK
037052 104401 001313          14$:    TYPE     ,SCRFL      ;;ECHO <CR> AND <LF>
037056 126727 142053 000001      CMPB    $INTAG,#1      ;;RE-ENABLE TTY KBD INTERRUPTS?
037064 0C1003          BNE     15$            ;;BRANCH IF NOT
037066 012777 000100 142050      MOV      #100,@STKS    ;;RE-ENABLE TTY KBD INTERRUPTS
037074 000002          RTI                    ;;RETURN
037076 004767 176756          15$:    JSR      PC,$TYPEC    ;;ECHO CHAR
037102 021627 000060          16$:    CMP      (SP),#60     ;;CHAR < 0?
037106 002420          BLT     18$            ;;BRANCH IF YES
037110 021627 000067          CMP      (SP),#67     ;;CHAR > 7?
037114 003015          BGT     18$            ;;BRANCH IF YES
037116 042726 000060          BIC      #60,(SP)+    ;;STRIP-OFF ASCII
037122 0C5766 000002          TST     2(SP)         ;;IS THIS THE FIRST CHAR
037126 001403          BEQ     17$            ;;BRANCH IF YES
037130 006316          ASL     (SP)          ;;NO, SHIFT PRESENT
037132 006316          ASL     (SP)          ;;CHAR OVER TO MAKE
037134 006316          ASL     (SP)          ;;ROOM FOR NEW ONE.
037136 005266 000002          17$:    INC      2(SP)         ;;KEEP COUNT OF CHAR
037142 056616 177776          BIS     -2(SP),(SP)   ;;SET IN NEW CHAR
037146 000707          BR      7$            ;;GET THE NEXT ONE
037150 104401 001312          18$:    TYPE     ,SQUES     ;;TYPE ?<CR><LF>
037154 000720          BR      20$          ;;SIMULATE CONTROL-U
  
```

.DSABL LSB

*THIS ROUTINE WILL INPUT A SINGLE CHARACTER FROM THE TTY

*CALL:

```

*      RDCHR          ;;INPUT A SINGLE CHARACTER FROM THE TTY
*      RETURN HERE   ;;CHARACTER IS ON THE STACK
*                          ;;WITH PARITY BIT STRIPPED OFF
  
```

```

037156 011646          $RDCHR: MOV      (SP),-(SP)    ;;PUSH DOWN THE PC
037160 016666 000004 000002      MOV      4(SP),2(SP)  ;;SAVE THE PS
037166 105777 141752          1$:    TSTB    @STKS        ;;WAIT FOR
037172 100375          BPL     1$            ;;A CHARACTER
037174 117766 141746 000004      MOVB    @STKB,4(SP)   ;;READ THE TTY
037202 042766 177600 000004      BIC     #^C<177>,4(SP) ;;GET RID OF JUNK IF ANY
037210 026627 000004 000023      CMP     4(SP),#23    ;;IS IT A CONTROL-S?
037216 001013          BNE     3$            ;;BRANCH IF NO
037220 105777 141720          2$:    TSTB    @STKS        ;;WAIT FOR A CHARACTER
037224 100375          BPL     2$            ;;LOOP UNTIL ITS THERE
037226 117746 141714          MOVB    @STKB,-(SP)  ;;GET CHARACTER
037232 042716 177600          BIC     #^C177,(SP)  ;;MAKE IT 7-BIT ASCII
037236 022627 000021          CMP     (SP)+,#21    ;;IS IT A CONTROL-Q?
037242 001366          BNE     2$            ;;IF NOT DISCARD IT
037244 000750          BR      1$            ;;YES, RESUME
037246 026627 000004 000140          3$:    CMP     4(SP),#140  ;;IS IT UPPER CASE?
037254 002407          BLT     4$            ;;BRANCH IF YES
037256 026627 000004 000175          CMP     4(SP),#175  ;;IS IT A SPECIAL CHAR?
037264 003003          BGT     4$            ;;BRANCH IF YES
037266 042766 000040 000004          BIC     #40,4(SP)   ;;MAKE IT UPPER CASE
037274 000002          RTI                    ;;GO BACK TO USER
037276 136 125 015 $CNTLU: .ASCIZ /^U/<15><12> ;;CONTROL 'U'
037301 012 000          037303 136 107 015 $CNTLG: .ASCIZ /^G/<15><12> ;;CONTROL 'G'
037306 012 000          037310 015 012 123 $MSWR: .ASCIZ <15><12>/SWR = /
  
```

037313	127	122	040
037316	075	040	000
037321	040	040	116
037324	105	127	040
037327	075	040	000

\$MNEW: .ASCIZ / NEW = /

5768
5769

.SBTTL TRAP DECODER

```

*****
*THIS ROUTINE WILL PICKUP THE LOWER BYTE OF THE 'TRAP' INSTRUCTION
*AND USE IT TO INDEX THROUGH THE TRAP TABLE FOR THE STARTING ADDRESS
*OF THE DESIRED ROUTINE. THEN USING THE ADDRESS OBTAINED IT WILL
*GO TO THAT ROUTINE.

```

037332	010046		
037334	016600	000002	
037340	005740		
037342	111000		
037344	006300		
037346	016000	037366	
037352	000200		

```

$TRAP: MOV R0,-(SP)          ;;SAVE R0
        MOV 2(SP),R0        ;;GET TRAP ADDRESS
        TST -(R0)          ;;BACKUP BY 2
        MOVB (R0),R0        ;;GET RIGHT BYTE OF TRAP
        ASL R0              ;;POSITION FOR INDEXING
        MOV $TRPAD(R0),R0  ;;INDEX TO TABLE
        RTS R0              ;;GO TO ROUTINE

```

;;THIS IS USE TO HANDLE THE 'GETPRI' MACRO

037354	011646		
037356	016666	000004	000002
037364	000002		

```

$TRAP2: MOV (SP),-(SP)      ;;MOVE THE PC DOWN
         MOV 4(SP),2(SP)    ;;MOVE THE PSW DOWN
         RTI                ;;RESTORE THE PSW

```

.SBTTL TRAP TABLE

```

*THIS TABLE CONTAINS THE STARTING ADDRESSES OF THE ROUTINES CALLED
*BY THE 'TRAP' INSTRUCTION.

```

ROUTINE

037366	037354		
037370	035646		
037372	036224		
037374	036200		
037376	036240		
037400	036744		
037402	036674		
037404	037156		
037406	035552		
037410	035610		
5770	037412	040330	
5771	037414	040322	
5772		000030	
5773			
5774			

```

$TRPAD: .WORD $TRAP2
        $TYPE      ;;CALL=TYPE      TRAP+1(104401)  TTY TYPEOUT ROUTINE
        $TYPOC     ;;CALL=TYPOC     TRAP+2(104402)  TYPE OCTAL NUMBER (WITH LEADING ZEROS)
        $TYPOS     ;;CALL=TYPOS     TRAP+3(104403)  TYPE OCTAL NUMBER (NO LEADING ZEROS)
        $TYPON     ;;CALL=TYPON     TRAP+4(104404)  TYPE OCTAL NUMBER (AS PER LAST CALL)
        $GTSWR     ;;CALL=GTSWR     TRAP+5(104405)  GET SOFT-SWR SETTING
        $CKSWR     ;;CALL=CKSWR     TRAP+6(104406)  TEST FOR CHANGE IN SOFT-SWR
        $RDCHR     ;;CALL=RDCHR     TRAP+7(104407)  TTY TYPEIN CHARACTER ROUTINE
        $SAVREG    ;;CALL=SAVREG    TRAP+10(104410) SAVE R0-R5 ROUTINE
        $RESREG    ;;CALL=RESREG    TRAP+11(104411) RESTORE R0-R5 ROUTINE
        .RSET      ;;CALL=RSETUP    TRAP+12(104412) ROUTINE TO RESET STACK AND FPS
        .LPER      ;;CALL=LPER      TRAP+13(104413) ROUTINE TO SET LOOP ON ERROR ADDRESS

```

\$TERM=-.\$TRPAD

.SBTTL POWER DOWN AND UP ROUTINES

```

*****
POWER DOWN ROUTINE

```

037416	012737	037574	000024
037424	012737	000340	000026
037432	010046		
037434	010146		
037436	010246		
037440	010346		
037442	010446		
037444	010546		
037446	017746	141466	
037452	010667	000122	
037456	012737	037470	000024
037464	000000		

```

$PWRDN: MOV #SILLUP,@#PWRVEC ;;SET FOR FAST UP
        MOV #340,@#PWRVEC+2 ;;PRIO:7
        MOV R0,-(SP)        ;;PUSH R0 ON STACK
        MOV R1,-(SP)        ;;PUSH R1 ON STACK
        MOV R2,-(SP)        ;;PUSH R2 ON STACK
        MOV R3,-(SP)        ;;PUSH R3 ON STACK
        MOV R4,-(SP)        ;;PUSH R4 ON STACK
        MOV R5,-(SP)        ;;PUSH R5 ON STACK
        MOV @SWR,-(SP)      ;;PUSH @SWR ON STACK
        MOV SP,$SAVR6      ;;SAVE SP
        MOV #SPWRUP,@#PWRVEC ;;SET UP VECTOR
        HALT

```

037466 000776

BR .-2 ::HANG UP

:POWER UP ROUTINE

```

037470 012737 037574 000024 $PWRUP: MOV #SILLUP,@#PWRVEC ::SET FOR FAST DOWN
037476 016706 000076 MOV $SAVR6,SP ::GET SP
037502 005067 000072 CLR $SAVR6 ::WAIT LOOP FOR THE TTY
037506 005267 000066 1$: INC $SAVR6 ::WAIT FOR THE INC
037512 001375 BNE 1$ ::OF WORD
037514 012677 141420 MOV (SP)+,@SWR ::POP STACK INTO @SWR
037520 012605 MOV (SP)+,R5 ::POP STACK INTO R5
037522 012604 MOV (SP)+,R4 ::POP STACK INTO R4
037524 012603 MOV (SP)+,R3 ::POP STACK INTO R3
037526 012602 MOV (SP)+,R2 ::POP STACK INTO R2
037530 012601 MOV (SP)+,R1 ::POP STACK INTO R1
037532 012600 MOV (SP)+,R0 ::POP STACK INTO R0
037534 012737 037416 000024 MOV #SPWRDN,@#PWRVEC ::SET UP THE POWER DOWN VECTOR
037542 012737 000340 000026 MOV #340,@#PWRVEC+2 ::PRIO:7
037550 104401 TYPE ::REPORT THE POWER FAILURE
037552 040400 $PWRMG: .WORD POWERM ::POWER FAIL MESSAGE POINTER
037554 012716 MOV (PC)+,(SP) ::RESTART AT START
037556 003606 $PWRAD: .WORD START ::RESTART ADDRESS
037560 042766 000020 000002 BIC #20,2(SP) ::CLEAR 'T' BIT
037566 005067 175234 CLR $TBIT ::CLEAR THE 'T' BIT FLAG
037572 000002 RTI
037574 000000 $SILLUP: HALT ::THE POWER UP SEQUENCE WAS STARTED
037576 000776 BR .-2 :: BEFORE THE POWER DOWN WAS COMPLETE
037600 000000 $SAVR6: 0 ::PUT THE SP HERE

```

5775
5776
5777
5778

.SBTTL ERROR TYPE OUT ROUTINE

```

*****
*****
*THIS ROUTINE IS CALLED TO TYPE AN ERROR MESSAGE WHICH IS INCLUDED
*IN THE ERROR MESSAGE DATA TABLE. IT IS CALLED BY THE $ERROR ROUTINE
*OR BY FIRST SETTING $ITEMB EQUAL TO THE ERROR TABLE ITEM TO BE PRINTED
*OUT AND THEN EXECUTING A:
* JSR PC,ERTYPE
*

```

5779
5780
5781
5782
5783
5784
5785
5786
5787
5788
5789
5790
5791
5792
5793
5794
5795
5796
5797
5798
5799
5800
5801
5802
5803

```

ERTYPE: TYPE ;TYPE A CRLF
          .WORD $CRLF
5787 037606 113737 001102 001232 MOVB @#$STSTNM,@#STMP0
5788 037614 042737 177400 001232 BIC #177400,@#STMP0
5789 037622 013737 001116 001234 MOV @#$ERRPC,@#STMP1 ;GET PC OF CALL
5790 037630 010046 MOV R0,-(SP) ;SAVE R0
5792 037632 113700 001114 MOVB @#$ITEMB,R0 ;GET THE ITEM NUMBER.
5793 037636 042700 177400 BIC #177400,R0
5794 037642 001005 BNE 1$
5796 037644 013746 001116 MOV @#$ERRPC,-(SP) ;IF ZERO THEN JUST
5797 037650 104402 TYPOC ;PRINT THE PC
5798 037652 000137 040230 JMP @#ERT5
5800 037656 022700 000377 1$: CMP #377,R0
5801 037662 001005 BNE 20$
5802 037664 016600 000004 MOV 4(SP),R0
5803 037670 011000 MOV (R0),R0

```

```

5804 037672 062700 000400          ADD    #400,R0
5805 037676 005300          20$:  DEC    R0                ;OTHERWISE MAKE R0 AN
5806 037700 006300          ASL    R0                ;INDEX FOR THE TABLE.
5807 037702 006300          ASL    R0
5808 037704 006300          ASL    R0
5809 037706 062700 001442          ADD    #SERRTB,R0
5810
5811 037712 012037 037722          MOV    (R0)+,@#2$        ;PICK UP THE ADDRESS
5812 037716 001404          BEQ    3$                ;OF THE EM, ERROR MESSAGE
5813 037720 104401          TYPE
5814 037722 000000          2$:  .WORD 0
5815 037724 104401          TYPE
5816 037726 001313          .WORD $CRLF
5817
5818 037730 012037 037740          3$:  MOV    (R0)+,@#4$        ;GET THE DH,DATA HEADER
5819 037734 001404          BEQ    5$
5820 037736 104401          TYPE
5821 037740 000000          4$:  .WORD 0
5822 037742 104401          TYPE
5823 037744 001313          .WORD $CRLF
5824
5825 037746 010146          5$:  MOV    R1,-(SP)          ;SAVE R1,R2 AND R3
5826 037750 010246          MOV    R2,-(SP)
5827 037752 010346          MOV    R3,-(SP)
5828
5829 037754 012001          MOV    (R0)+,R1          ;GET THE ADDRESS OF THE
5830                                ;DATA TABLE.
5831 037756 001001          BNE    6$
5832 037760 000516          BR     ERT4              ;RETURN IF NO DATA.
5833
5834 037762 011000          6$:  MOV    (R0),R0          ;GET A POINTER TO THE DATA
5835                                ;FORMAT TABLE.
5836 037764 105710          ERT1: TSTB (R0)           ;FORMAT ZERO?
5837 037766 001003          BNE    7$
5838
5839 037770 013146          MOV    @(R1)+,-(SP)      ;FORMAT ZERO SO TYPE
5840 037772 104402          TYPOC ;AN OCTAL NUMBER.
5841 037774 000502          BR     ERT2
5842
5843 037776
5844 037776 122710 000002          7$:
5845 040002 001010          8$:  CMPB  #2,(R0)          ;FORMAT TWO?
5846                                BNE    9$
5847 040004 013102          MOV    @(R1)+,R2          ;FORMAT TWO SO TYPE TWO
5848 040006 012246          MOV    (R2)+,-(SP)      ;OCTAL NUMBERS.
5849 040010 104402          TYPOC
5850 040012 104401          TYPE
5851 040014 040450          .WORD SPACE
5852 040016 011246          MOV    (R2),-(SP)
5853 040020 104402          TYPOC
5854 040022 000467          BR     ERT2
5855
5856 040024 122710 000003          9$:  CMPB  #3,(R0)          ;FORMAT THREE?
5857 040030 001020          BNE    10$
5858
5859 040032 013102          MOV    @(R1)+,R2          ;FORMAT THREE SO TYPE
5860 040034 012246          MOV    (R2)+,-(SP)      ;FOUR OCTAL NUMBERS.
    
```

5861	040036	104402			TYPOC		
5862	040040	104401			TYPE		
5863	040042	040450			.WORD	SPACE	
5864	040044	012246			MOV	(R2)+,-(SP)	
5865	040046	104402			TYPOC		
5866	040050	104401			TYPE		
5867	040052	040450			.WORD	SPACE	
5868	040054	012246			MOV	(R2)+,-(SP)	
5869	040056	104402			TYPOC		
5870	040060	104401			TYPE		
5871	040062	040450			.WORD	SPACE	
5872	040064	011246			MOV	(R2)+,-(SP)	
5873	040066	104402			TYPOC		
5874	040070	000444			BR	ERT2	
5875							
5876	040072	122710	000004	10\$:	CMPB	#4,(R0)	:FORMAT FOUR?
5877	040076	001004			BNE	11\$	
5878							
5879	040100	013146			MOV	@(R1)+,-(SP)	:FORMAR FOUR SO TYPE
5880	040102	104403			TYPOS		:AN OCTAL NUMBER
5881	040104	016			.BYTE	16	:SUPPRESSING LEADING ZEROES.
5882	040105	000			.BYTE	0	
5883	040106	000435			BR	ERT2	
5884							
5885	040110	122710	000005	11\$:	CMPB	#5,(R0)	:FORMAT FIVE?
5886	040114	001005			BNE	13\$	
5887							
5888	040116	012137	040124		MOV	(R1)+,@#12\$:FORMAT FIVE SC TYPE AN
5889	040122	104401			TYPE		:ASCIZ STRING.
5890	040124	000000		12\$:	.WORD	0	
5891	040126	000427			BR	ERT3	
5892							
5893	040130	122710	000011	13\$:	CMPB	#11,(R0)	:FORMAT ELEVEN?
5894	040134	001005			BNE	15\$	
5895							

;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).

5951 040262 000137 034542 JMP @#\$EOP

5952
5953
5954
5955

.SBTTL CPU SPURIOUS TRAP TO 4 HANDLER

*THIS ROUTINE REPORTS UNEXPECTED CPU TRAPS TO VECTOR 4.

5956
5957
5958 040266 011637 001236
5959 040272 022626
5960 040274 104212
5961 040276 104412

CPSPUR: MOV (SP),@#\$TMP2 ;SAVE PC OF TRAP.
CMP (SP)+,(SP)+
1\$: ERROR +213
RSETUP

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).

5962 040300 000137 034542 JMP @#\$EOP

5963
5964
5965
5966

.SBTTL CPU SPURIOUS TRAP TO 10 HANDLER

*THIS ROUTINE REPORTS UNEXPECTED CPU TRAPS TO VECTOR 10.

5967
5968
5969 040304 011637 001236
5970 040310 022626
5971 040312 104213
5972 040314 104412

CPTWO: MOV (SP),@#\$TMP2 ;SAVE PC OF TRAP.
CMP (SP)+,(SP)+
1\$: ERROR +213
RSETUP

;GO INITIALIZE THE FPS AND STACK; AND
;SEE IF THE USER HAS EXPRESSED
;THE DESIRE TO CHANGE THE SOFTWARE
;VIRTUAL CONSOLE SWITCH REGISTER (HAS
;THE USER TYPED CONTROL G?).

5973 040316 000137 034542 JMP @#\$EOP

5974
5975
5976
5977
5978
5979

.SBTTL SET LOOP ON ERROR ADDRESS ROUTINE

5980
5981 040322 011637 001110
5982 040326 000002
5983
5984
5985

.LPER: MOV (SP),@#\$LPERR
RTI

.SBTTL FLAG RESET AND CONSOLE TEST ROUTINE

*THIS ROUTINE WILL BE CALLED AT THE END OF EACH TEST TO
*RESET THE STACK, CLEAR THE FPS AND SEE IF THE USER HAS TYPED
*CONTROL G ON THE TERMINAL. IF THE USER HAS TYPED CONTROL G AND
*THERE IS NO PHYSICAL CONSOLE SWITCH REGISTER THEN THE CONTENTS
*OF THE SOFTWARE SWITCH REGISTER WILL BE TYPED IN OCTAL ON THE
*TELETYPE AND THE USER CAN MODIFY IT.

5986
5987
5988
5989
5990
5991
5992
5993 040330 023727 001140 177570

RSET: CMP @#\$SWR,#177570 ;SEE IF THERE IS A PHYSICAL

```

5994                                     :CONSOLE SWITCH REGISTER.
5995 040336 001001                       BNE      1$      :BRANCH IF NO.
5996 040340 104406                       CKSWR                                     :OTHERWISE TYPE THE CONTENTS
5997                                     :OF THE PROGRAM VIRTUAL SWITCH REGISTER
5998                                     :AND GIVE THE USER A CHANCE TO
5999                                     :MODIFY IT.
6000 040342 012737 040234 000244 1$:    MOV      #FPSPUR,@#FPVECT
6001 040350 012737 040266 000004        MOV      #CPSPUR,@#ERRVECT
6002 040356 012737 040304 000010        MOV      #CPTWO,@#10
6003 040364 011600                       MOV      (SP),R0      :SAVE RETURN ADDRESS.
6004 040366 012706 001100               MOV      #STACK,SP   :RESET THE STACK POINTER.
6005 040372 005004                       CLR      R4          :CLEAR THE FPS.
6006 040374 170104                       LDFPS   R4
6007 040376 000110                       JMP      (R0)        :RETURN.
6008
6009                                     .NLIST BEX
6010
6011                                     ;SPECIAL MESSAGES:
6012
6013 040400      200      120      117 POWERM: .ASCIZ <CRLF>'POWER FAILURE. PROGRAM RESTARTING.'<CRLF>
6014 040445      000                                     NULL: .BYTE 0
6015 040446      011      000 $TAB: .ASCIZ <TAB>
6016 040450      040      040 000 SPACE: .ASCIZ ' '
6017 040453      200      120 103 LFIEX1: .ASCIZ <CRLF>'PC OF LAST FPP INSTRUCTION EXECUTED: '<TAB>
6018 040523      200      114 101 LFIEX2: .ASCIZ <CRLF>'LAST FPP INSTRUCTION EXECUTED: '<TAB>
6019 040565      200      106 114 FPSMS: .ASCIZ <CRLF>'FLOATING POINT STATUS REGISTER: '
6020 040631      200      106 105 FECMS: .ASCIZ <CRLF>'FEC: '
6021 040642      124      110 105 $THE: .ASCIZ 'THE '
6022 040647      011      040 111 NOOP1: .ASCIZ <TAB>' INSTRUCTION FAILED.'<CRLF>
6023 040676      105      111 124 NOOP15: .ASCII 'EITHER A BAD CONSTANT WAS GENERATED OR '
6024 040745      115      111 103 .ASCIZ 'MICROPROGRAM FLOW WENT '
6025 040774      200      106 122 NOOP2: .ASCIZ <CRLF>'FROM STATE '
6026 041011      124      117 040 NOOP3: .ASCIZ 'TO STATE '
6027 041023      200      111 116 NOOP4: .ASCIZ <CRLF>'INSTEAD OF '
6028 041040      200      124 110 NOOP5: .ASCIZ <CRLF>'THEREBY EXECUTING A '
6029 041066      011      040 111 NOOP6: .ASCIZ <TAB>' INSTEAD OF A '
6030 041106      011      040 111 NOOP7: .ASCIZ <TAB>' INSTRUCTION.'<CRLF>
6031 041126      040      040 124 NOOP10: .ASCII ' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'<TAB>
6032 041167      107      117 124 .ASCIZ 'GOT FPS. EXPECTED FPS.'<CRLF>
6033 041217      101      040 102 NOOP11: .ASCIZ 'A BAD CONSTANT MAY HAVE BEEN USED.'<CRLF>
6034 041263      011      114 104 LFPS1: .ASCIZ <TAB>'LDFPS'<TAB>'REG'
6035 041276      011      114 104 LD1: .ASCIZ <TAB>'LDD'<TAB>'(REG),A'<TAB>'//FSRC#0//'
6036 041326      011      114 104 LD2: .ASCIZ <TAB>'LDD'<TAB>'A,A'
6037 041337      011      123 124 STFS1: .ASCIZ <TAB>'STFPS'<TAB>'REG'
6038 041352      011      123 124 ST1: .ASCIZ <TAB>'STD'<TAB>'A,(REG)'
6039 041367      011      123 124 ST2: .ASCIZ <TAB>'STD'<TAB>'A,A'
6040 041400      011      103 106 CFCC1: .ASCIZ <TAB>'CFCC'
6041 041406      011      123 105 SETF1: .ASCIZ <TAB>'SETF'
6042 041414      011      123 105 SETD1: .ASCIZ <TAB>'SETD'
6043 041422      011      123 105 SETI1: .ASCIZ <TAB>'SETI'
6044 041430      011      123 105 SETL1: .ASCIZ <TAB>'SETL'
6045 041436      011      111 114 ILL1: .ASCIZ <TAB>'ILLEGAL FPP INSTRUCTION'
6046 041467      011      123 124 STST1: .ASCIZ <TAB>'STST'<TAB>'REG'
6047 041501      011      111 114 ILL2: .ASCIZ <TAB>'ILLEGAL FPP INSTRUCTION (FID=1)'
6048 041542      040      040 124 ILLMS: .ASCIZ ' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF TRAP.'<TAB>'FPS.'<CRLF>
6049 041610      105      130 120 MS1: .ASCIZ 'EXPECTED '
6050 041622      107      117 124 MS2: .ASCIZ 'GOT '
    
```

6051	041627	103	117	116	MS3:	.ASCIZ	'CONTENTS OF LOCATIONS '
6052	041656	040	124	110	MS4:	.ASCIZ	' THROUGH '
6053	041670	106	101	111	MS5:	.ASCIZ	'FAILURE IN THE MICROPROGRAM FLOW.'
6054	041732	103	117	116	MS6:	.ASCIZ	'CONTROL WENT '
6055	041750	106	122	117	MS7:	.ASCIZ	'FROM STATE '
6056	041764	040	124	117	MS10:	.ASCIZ	' TO STATE '
6057	041777	102	125	124	MS11:	.ASCIZ	'BUT SHOULD HAVE GONE'
6058	042024	103	117	116	MS12:	.ASCIZ	'CONTROL FLOW SHOULD HAVE GONE'
6059	042062	102	125	124	MS13:	.ASCIZ	'BUT DID NOT.'
6060	042077	040	040	124	MS14:	.ASCII	' TEST.<TAB>'PC OF CALL.<TAB>'PC OF ERROR.<TAB>
6061	042140	107	117	124		.ASCIZ	'GOT PC.<TAB>'EXPECTED PC.'
6062	042165	111	116	123	MS15:	.ASCIZ	'INSTRUCTION TESTED: '
6063	042212	040	117	122	MS16:	.ASCIZ	' OR '
6064	042217	124	105	123	MS17:	.ASCIZ	'TESTING ACCUMULATOR '
6065	042244	132	105	122	MNUM0:	.ASCIZ	'ZERO '
6066	042252	117	116	105	MNUM1:	.ASCIZ	'ONE '
6067	042257	124	127	117	MNUM2:	.ASCIZ	'TWO '
6068	042264	124	110	122	MNUM3:	.ASCIZ	'THREE '
6069	042273	106	117	125	MNUM4:	.ASCIZ	'FOUR '
6070	042301	106	111	126	MNUM5:	.ASCIZ	'FIVE '
6071	042307	040	040	124	MS20:	.ASCIZ	' TEST.<TAB>'PC OF CALL.<TAB>'PC OF ERROR.'
6072	042350	104	101	124	MS21:	.ASCIZ	'DATA (FLOATING POINT NUMBER): '
6073	042407	114	117	107	MS22:	.ASCIZ	'LOGICAL AND OF FAILING '
6074	042437	114	117	107	MS23:	.ASCIZ	'LOGICAL OR OF FAILING '
6075	042466	040	040	124	MS24:	.ASCII	' TEST.<TAB>'PC OF CALL.<TAB>'PC OF ERRORS.<TAB>
6076	042530	116	125	115		.ASCIZ	'NUMBER OF ERRORS(OCTAL).'
6077	042561	105	130	120	MS25:	.ASCIZ	'EXPECTED DATA IN '
6078	042603	107	117	124	MS26:	.ASCIZ	'GOT DATA IN '
6079	042620	200	101	103	MS27:	.ASCIZ	<CRLF>'AC0= '
6080	042627	200	101	103	MS30:	.ASCIZ	<CRLF>'AC1= '
6081	042636	200	101	103	MS31:	.ASCIZ	<CRLF>'AC2= '
6082	042645	200	101	103	MS32:	.ASCIZ	<CRLF>'AC3= '
6083	042654	200	101	103	MS33:	.ASCIZ	<CRLF>'AC4= '
6084	042663	200	101	103	MS34:	.ASCIZ	<CRLF>'AC5= '
6085	042672	123	105	124	MS35:	.ASCIZ	'SET '
6086	042677	103	114	105	MS36:	.ASCIZ	'CLEAR '
6087	042706	114	117	101	MS37:	.ASCIZ	'LOADED DATA: '
6088	042724	122	105	101	MS40:	.ASCIZ	'READ DATA: '
6089	042740	105	130	120	MS415:	.ASCIZ	'EXPECTED DATA: '
6090	042760	104	101	124	MS41:	.ASCIZ	'DATA IN (R0) FSRC: '
6091	043004	104	101	124	MS42:	.ASCIZ	'DATA IN AC0: '
6092	043022	107	117	124	MS43:	.ASCIZ	'GOT RESULT: '
6093	043037	105	130	120	MS44:	.ASCIZ	'EXPECTED RESULT: '

;ERROR MESSAGES:

6094							
6095							
6096							
6097							
6098	043061	114	104	106	EM1:	.ASCIZ	'LDFPS AND STFPS TEST FAILED.'
6099	043116	114	104	106	EM2:	.ASCIZ	'LDFPS AND STFPS TEST ERROR SUMMARY.'
6100	043162	103	106	103	EM3:	.ASCIZ	'CFCC TRANSFERED BAD DATA TO THE PSW.'
6101	043227	103	106	103	EM4:	.ASCIZ	'CFCC MODIFIED THE F'S REGISTER.'
6102	043267	125	116	105	EM5:	.ASCIZ	'UNEXPECTED FPP TRAP TO 244.'
6103	043323	125	116	105	EM6:	.ASCIZ	'UNEXPECTED CPU TRAP TO 4.'
6104	043355	125	116	105	EM7:	.ASCIZ	'UNEXPECTED CPU TRAP TO 10.'
6105		043267			EM10=EM5		
6106	043410	125	116	101	EM11:	.ASCIZ	'UNABLE TO DECODE FPP INSTRUCTION. TRAPPED TO 10.'
6107		000000			EM12=0		

6108		000000			EM13=0		
6109	043471	114	104	106	EM14:	.ASCII	'LDFPS R0 FAILED IN THE FSRC FLOWS.'
6110	043533	040	124	122		.ASCII	' TRAPPED TO 4.'
6111	043551	200	104	111		.ASCIZ	<CRLF>'DID NOT GO FROM STATE 400 TO 670.'
6112	043614	123	124	106	EM15:	.ASCII	'STFPS R1 FAILED IN THE FDST FLOWS.'
6113	043656	040	124	122		.ASCII	' TRAPPED TO 4.'
6114	043674	200	104	111		.ASCIZ	<CRLF>'DID NOT GO FROM STATE 634 TO 710.'
6115	043737	101	116	040	EM16:	.ASCIZ	'AN ILLEGAL FPP INSTRUCTION DID NOT TRAP.'
6116	044010	101	116	040	EM17:	.ASCII	'AN ILLEGAL FPP INSTRUCTION'
6117	044042	200	124	122		.ASCII	<CRLF>'TRAPPED TO 244, BUT FAILED TO SET '
6118	044105	124	110	105		.ASCII	'THE FPS CORRECTLY.'<CRLF>'EITHER A BAD CONSTANT '
6119	044156	127	101	123		.ASCIZ	'WAS GENERATED OR THE ALU LOGICAL OR FUNCTION FAILED.'
6120	044243	101	116	040	EM20:	.ASCII	'AN ILLEGAL FPP INSTRUCTION'
6121	044275	040	124	122		.ASCII	' TRAPPED TO 244, BUT A SUBSEQUENT '
6122	044337	040	123	124		.ASCII	' STST'<CRLF>
6123	044345	106	101	111		.ASCIZ	'FAILED TO PICK UP THE CORRECT FEC CODE = 2.'
6124	044421	123	124	123	EM21:	.ASCII	'STST R4 FAILED IN THE DESTINATION FLOWS.'
6125	044471	040	124	122		.ASCII	' TRAPPED TO 4.'<CRLF>
6126	044510	104	111	104		.ASCIZ	'DID NOT GO FROM STATE 636 TO 710.'
6127	044552	101	116	040	EM22:	.ASCII	'AN ILLEGAL FPP INSTRUCTION.'
6128	044605	127	111	124		.ASCIZ	'WITH INTERRUPTS DISABLED.'
6129		044552			EM23=EM22		
6130		044552			EM24=EM22		
6131	044637	123	117	125	EM25:	.ASCII	'SOURCE LOCATIONS MODIFIED BY, LDD.'
6132	044701	200	101	040		.ASCIZ	<CRLF>'A DATO WAS PERFORMED INSTEAD OF A DATI.'
6133	044752	114	104	104	EM26:	.ASCII	'LDD (R0),ACO FAILED.'<CRLF>
6134	044777	122	060	040		.ASCIZ	'R0 WAS MODIFIED.'
6135		044752			EM27=EM26		
6136	045020	124	110	105	EM30:	.ASCII	'THE PC WAS BAD AFTER '
6137	045046	101	116	040		.ASCIZ	'AN FPP INSTRUCTION.'
6138	045072	123	124	104	EM31:	.ASCII	'STD ACO, (R0) FAILED.'<CRLF>
6139	045117	122	060	040		.ASCIZ	'R0 WAS MODIFIED.'
6140		045072			EM32=EM31		
6141	045140	123	124	104	EM33:	.ASCII	'STD ACO, (R0) FAILED.'<CRLF>
6142	045165	117	125	124		.ASCIZ	'OUTPUT BAD.'
6143	045201	123	124	104	EM34:	.ASCII	'STD ACO, (R0) FAILED IN THE FDST FLOWS.'
6144	045247	200	124	110		.ASCIZ	<CRLF>'THE (BUT GR7) FORK FAILED.'
6145	045303	114	104	104	EM35:	.ASCII	'LDD (R0),ACO FAILED IN THE FSRC FLOWS.'
6146	045351	200	124	110		.ASCIZ	<CRLF>'THE (BUT GR7) FORK FAILED.'
6147	045405	123	124	104	EM36:	.ASCII	'STD ACO, (R0) FAILED IN THE FDST FLOWS.'
6148	045453	200	124	110		.ASCIZ	<CRLF>'THE (BUT FD) FORK FAILED.'
6149	045506	114	104	104	EM37:	.ASCII	'LDD (R0),ACO FAILED IN THE FSRC FLOWS.'
6150	045554	200	124	110		.ASCIZ	<CRLF>'THE (BUT FD) FORK FAILED.'
6151	045607	114	104	104	EM40:	.ASCII	'LDD (R0),ACO OR THE STD ACO, (R0) FAILED.'
6152	045657	200	102	101		.ASCIZ	<CRLF>'BAD DATA WAS DETECTED AFTER A SEQUENCE OF THE TWO INSTRUCTIONS.'
6153	045760	106	120	123	EM41:	.ASCII	'FPS BAD AFTER EXECUTION OF: '
6158	046015				EM42:		
	046015	114	104	104		.ASCII	/LDD (R0),ACO FAILED IN THE FSRC FLOWS./<CRLF>
	046064	124	110	105		.ASCIZ	/THE (BUT FSRC) FORK FAILED. TRAPPED TO 4./
6159	046136				EM43:		
	046136	123	124	104		.ASCII	/STD ACO, (R0) FAILED IN THE FDST FLOWS./<CRLF>
	046205	124	110	105		.ASCIZ	/THE (BUT FDST) FORK FAILED. TRAPPED TO 4./
6160	046257	106	120	120	EM44:	.ASCIZ	'FPP ACCUMULATORS DATA TEST FAILED.'
6161		046257			EM45=EM44		
6162	046322	106	120	120	EM46:	.ASCIZ	'FPP ACCUMULATORS DUAL ADDRESSING TEST FAILED.'
6167	046400				EM47:		
	046400	114	104	040		.ASCII	/LD ACT,ACO FAILED IN THE FSRC FLOWS./

	046444	124	110	105		.ASCIZ	/THE (BUT FSRC) FORK FAILED. TRAPPED TO 4./
6168	046516	114	104	040	EM50:	.ASCII	'LD AC1,ACO FAILED IN THE FSRC FLOWS.'
6169	046562	124	110	105		.ASCIZ	'THE (BUT FD) FORK FAILED.'
6170	046614	114	104	040	EM51:	.ASCIZ	'LD AC1,ACO TRANSFERRED BAD DATA.'
6180	046655				EM52:		
	046655	114	104	104		.ASCII	/LDD (R0)+,ACO FAILED IN THE FSRC FLOWS./
	046724	124	110	105		.ASCIZ	/THE (BUT FSRC) FORK FAILED. TRAPPED TO 4./
31	046776				EM53:		
	046776	114	104	104		.ASCII	/LDD (R0)+,ACO FAILED IN THE FSRC FLOWS./
	047045	200	122	060		.ASCII	<CRLF>'RO WAS BAD.'<CRLF>
	047062	105	111	124		.ASCII	'EITHER A BAD CONSTANT WAS GENERATED OR'<CRLF>
	047131	104	111	104		.ASCIZ	\DID NOT GO FROM STATE 627 TO 322.\
6182	047173				EM54:		
	047173	114	104	104		.ASCIZ	/LDD (R0)+,ACO TRANSFERRED BAD DATA./
6183	047237				EM55:		
	047237	114	104	104		.ASCII	/LDD -(R0),ACO FAILED IN THE FSRC FLOWS./
	047306	124	110	105		.ASCIZ	/THE (BUT FSRC) FORK FAILED. TRAPPED TO 4./
6184	047360				EM56:		
	047360	114	104	104		.ASCII	/LDD -(R0),ACO FAILED IN THE FSRC FLOWS./
	047427	200	122	060		.ASCII	<CRLF>'RO WAS BAD.'<CRLF>
	047444	105	111	124		.ASCII	'EITHER A BAD CONSTANT WAS GENERATED OR'<CRLF>
	047513	104	111	104		.ASCIZ	\DID NOT GO FROM STATE 627 TO 324.\
6185	047555				EM57:		
	047555	114	104	104		.ASCIZ	/LDD -(R0),ACO TRANSFERRED BAD DATA./
6186	047621				EM60:		
	047621	114	104	106		.ASCII	/LDF (R0)+,ACO FAILED IN THE FSRC FLOWS./
	047670	200	122	060		.ASCII	<CRLF>'RO WAS BAD.'<CRLF>
	047705	105	111	124		.ASCII	'EITHER A BAD CONSTANT WAS GENERATED OR'<CRLF>
	047754	104	111	104		.ASCIZ	\DID NOT GO FROM STATE 627 TO 322.\
6187	050016				EM61:		
	050016	114	104	106		.ASCIZ	/LDF (R0)+,ACO TRANSFERRED BAD DATA./
6188	050062	114	104	106	EM62:	.ASCII	'LDF (R0)+,ACO FAILED IN THE FSRC FLOWS.'
6189	050131	200	124	110		.ASCII	<CRLF>'THE (BUT FD) FORK FAILED.'<CRLF>
6190	050164	127	105	116		.ASCII	'WENT FROM STATE 441 TO 077.'<CRLF>
6191	050220	111	116	123		.ASCIZ	'INSTEAD OF FROM 441 TO 076.'
6192	050254	114	104	104	EM63:	.ASCII	'LDD #NUM,ACO FAILED IN THE FSRC FLOWS.'
6193	050322	200	124	110		.ASCII	<CRLF>'THE (BUT GR7) FORK FAILED.'<CRLF>
6194	050356	127	105	116		.ASCII	'WENT FROM STATE 207 TO 174.'<CRLF>
6195	050412	111	116	123		.ASCIZ	'INSTEAD OF FROM 207 TO 176.'
6196	050446	114	104	104	EM64:	.ASCII	'LDD #NUM,ACO FAILED IN THE FSRC FLOWS.'
6197	050514	200	101	040		.ASCIZ	<CRLF>'A BAD CONSTANT WAS USED WHEN THE PC WAS INCREMENTED.'
6198		050446			EM65=EM64		
6199	050602				EM66:		
	050602	114	104	104		.ASCIZ	/LDD #NUM,ACO TRANSFERRED BAD DATA./
6221	050645				EM67:		
	050645	114	104	104		.ASCII	'LDD @(R0)+,ACO FAILED IN THE FSRC FLOWS.'
	050715	200	124	110		.ASCII	<CRLF>'THE (BUT FSRC) FORK FAILED. TRAPPED TO 4.'
	050767	200	127	105		.ASCII	<CRLF>\WENT FROM STATE 627 TO EITHER 326 OR 326.\
	051041	200	111	116		.ASCIZ	<CRLF>\INSTEAD OF FROM 627 TO 323.\
6222	051076				EM70:		
	051076	114	104	104		.ASCII	'LDD @(R0)+,ACO FAILED IN THE FSRC FLOWS.'
	051146	200	124	110		.ASCIZ	<CRLF>'THE (BUT FSRC) FORK FAILED. TRAPPED TO 4.'
6223	051221				EM71:		
	051221	114	104	104		.ASCII	'LDD @(R0)+,ACO FAILED IN THE FSRC FLOWS.'
	051271	124	110	105		.ASCIZ	'THE (BUT FD) FORK FAILED.'
6224	051323				EM72:		
	051323	114	104	104		.ASCII	'LDD @(R0)+,ACO'<CRLF>

6225	051342	106	101	111		.ASCIZ	'FAILED TO INCREMENT RO BY 2.'
	051377				EM73:		
	051377	114	104	104		.ASCIZ	'LDD @-(RO)+,ACO LOADED BAD DATA.'
6226	051437				EM74:		
	051437	114	104	104		.ASCII	'LDD @-(RO),ACO FAILED IN THE FSRC FLOWS.'
	051507	200	124	110		.ASCII	<CRLF>'THE (BUT FSRC) FORK FAILED. TRAPPED TO 4.'
	051561	200	127	105		.ASCII	<CRLF>\WENT FROM STATE 627 TO EITHER 326 OR 326,\
	051633	200	111	116		.ASCIZ	<CRLF>\INSTEAD OF FROM 627 TO 325.\
6227	051670				EM75:		
	051670	114	104	104		.ASCII	'LDD @-(RO),ACO FAILED IN THE FSRC FLOWS.'
	051740	200	124	110		.ASCIZ	<CRLF>'THE (BUT FSRC) FORK FAILED. TRAPPED TO 4.'
6228	052013				EM76:		
	052013	114	104	104		.ASCII	'LDD @-(RO),ACO FAILED IN THE FSRC FLOWS.'
	052063	124	110	105		.ASCIZ	'THE (BUT FD) FORK FAILED.'
6229	052115				EM77:		
	052115	114	104	104		.ASCII	'LDD @-(RO),ACO'<CRLF>
	052134	106	101	111		.ASCIZ	'FAILED TO DECREMENT RO BY 2.'
6230	052171				EM100:		
	052171	114	104	104		.ASCIZ	'LDD @-(RO),ACO LOADED BAD DATA.'
6231	052231				EM101:		
	052231	114	104	104		.ASCII	'LDD NUM(RO),ACO FAILED IN THE FSRC FLOWS.'
	052302	200	124	110		.ASCIZ	<CRLF>'THE (BUT FSRC) FORK FAILED. TRAPPED TO 4.'
6232	052355				EM102:		
	052355	114	104	104		.ASCII	'LDD NUM(RO),ACO'<CRLF>
	052375	106	101	111		.ASCIZ	'FAILED TO AFFECT RO BY 2.'
6233	052427				EM103:		
	052427	114	104	104		.ASCII	'LDD NUM(RO),ACO FAILED IN THE FSRC FLOWS.'
	052500	124	110	105		.ASCIZ	'THE (BUT FD) FORK FAILED.'
6234	052532				EM104:		
	052532	114	104	104		.ASCIZ	'LDD NUM(RO),ACO LOADED BAD DATA.'
6235	052573				EM105:		
	052573	114	104	104		.ASCII	'LDD @NUM(RO),ACO FAILED IN THE FSRC FLOWS.'
	052645	200	124	110		.ASCIZ	<CRLF>'THE (BUT FSRC) FORK FAILED. TRAPPED TO 4.'
6236	052720				EM106:		
	052720	114	104	104		.ASCII	'LDD @NUM(RO),ACO'<CRLF>
	052741	106	101	111		.ASCIZ	'FAILED TO AFFECT RO BY 2.'
6237	052773				EM107:		
	052773	114	104	104		.ASCII	'LDD @NUM(RO),ACO FAILED IN THE FSRC FLOWS.'
	053045	124	110	105		.ASCIZ	'THE (BUT FD) FORK FAILED.'
6238	053077				EM110:		
	053077	114	104	104		.ASCIZ	'LDD @NUM(RO),ACO LOADED BAD DATA.'
6254	053141				EM111:		
	053141	114	104	104		.ASCII	/LDD AC7,ACO FAILED TO TRAP TO 244./
	053203	200	101	103		.ASCIZ	<CRLF>/AC7 IS AN ILLEGAL ACCUMULATOR./
6255	053141	053141			EM112=EM111		
6256	053243				EM113:		
	053243	114	104	104		.ASCII	/LDD AC6,ACO FAILED TO TRAP TO 244./
	053305	200	101	103		.ASCIZ	<CRLF>/AC6 IS AN ILLEGAL ACCUMULATOR./
6257	053243	053243			EM114=EM113		
6258	053141	053141			EM115=EM111		
6259	053243	053243			EM116=EM113		
6260	053345				EM117:		
	053345	125	123	105		.ASCII	'USE OF AN ILLEGAL ACCUMULATOR WITH FSRC MODE ZERO.'
	053427	200	124	122		.ASCIZ	<CRLF>'TRAPPED BUT FAILED TO SET FPS CORRECTLY.'
6261	053501				EM120:		
	053501	125	123	105		.ASCII	'USE OF AN ILLEGAL ACCUMULATOR WITH FSRC MODE ZERO.'
	053563	200	124	122		.ASCIZ	<CRLF>'TRAPPED BUT FAILED TO SET FEC CORRECTLY.'

6262	053635	123	124	040	EM121:	.ASCII	'ST ACO,AC1 FAILED IN THE FDST FLOWS.'
6263	053701	200	124	110		.ASCIZ	<CRLF>'THE (BUT FDST) FORK FAILED. TRAPPED TO 4.'
6264	053754	123	124	040	EM122:	.ASCII	'ST ACO,AC1 FAILED IN THE FDST FLOWS.'
6265	054020	200	124	110		.ASCIZ	<CRLF>'THE (BUT FD) FORK FAILED.'
6266	054053	123	124	040	EM123:	.ASCIZ	'ST ACO,AC1 TRANSFERRED BAD DATA.'
6267	054114				EM124:		
	054114	106	120	123		.ASCII	'FPS BAD AFTER LDD (R0),ACO.'
	054147	200	124	110		.ASCIZ	<CRLF>'THE (BUT EZBT Y8) FORK FAILED.'
6268	054207				EM125:		
	054207	106	120	123		.ASCII	'FPS BAD AFTER LDD (R0),ACO.'
	054242	200	124	110		.ASCIZ	<CRLF>'THE (BUT ENBT) FORK FAILED.'
6269	054277	114	104	104	EM126:	.ASCII	'LDD (R0),ACO TRAPPED TO 244.'
6270	054333	040	106	123		.ASCII	'FSRC= -0 AND FIUV= 0.'<CRLF>
6271	054362	124	110	105		.ASCII	'THE (BUT FIUV) FORK FAILED.'
6272	054415	200	127	105		.ASCII	<CRLF>'WENT FROM STATE 256 TO 354.'
6273	054451	200	111	116		.ASCIZ	<CRLF>'INSTEAD OF FROM 256 TO 254.'
6274	054506	114	104	104	EM127:	.ASCII	'LDD (R0),ACO FAILED TO TRAP TO 244.'
6275	054551	040	106	123		.ASCII	'FSRC= -0, FIUV= 1.'
6276	054574	200	124	110		.ASCII	<CRLF>'THE (BUT FIUV) FORK FAILED.'<CRLF>
6277	054630	127	105	116		.ASCII	'WENT FROM STATE 256 TO 254.'
6278	054663	200	111	116		.ASCIZ	<CRLF>'INSTEAD OF FROM 256 THE 354.'
6279	054721	114	104	104	EM130:	.ASCII	'LDD (R0),ACO TRAPPED TO 244.'
6280	054755	106	123	122		.ASCII	'FSRC= -0, FIUV= 1.'<CRLF>
6281	055000	102	125	124		.ASCIZ	'BUT FEC WAS BAD.'
6282	055021				EM131:		
	055021	114	104	103		.ASCIZ	/LDCFD (R0),ACO LOADED BAD DATA./
6283	055061				EM132:		
	055061	114	104	103		.ASCIZ	/LDCDF (R0),ACO LOADED BAD DATA./
6324	055121				EM133:		
	055121	101	104	104		.ASCIZ	/ADDD (R0),ACO WITH (R0)=ACO=0 /
6325	055160				EM134:		
	055160	101	104	104		.ASCIZ	/ADDF (R0),ACO WITH (R0)=ACO=0 /
6326	055217				EM135:		
	055217	123	125	102		.ASCIZ	/SUBD (R0),ACO WITH (R0)=ACO=0 /
6327	055256				EM136:		
	055256	123	125	102		.ASCIZ	/SUBF (R0),ACO WITH (R0)=ACO=0 /
6328		055121			EM137=EM133		
6329		055160			EM140=EM134		
6330		055217			EM141=EM135		
6331		055256			EM142=EM136		
6332	055315				EM143:		
	055315	101	104	104		.ASCIZ	/ADDD (R0),ACO WITH (R0)=0 /
6333	055350				EM144:		
	055350	123	125	102		.ASCIZ	/SUBD (R0),ACO WITH (R0)=0 /
6334		055315			EM145=EM143		
6335		055350			EM146=EM144		
6336	055403				EM147:		
	055403	123	125	102		.ASCIZ	/SUBD (R0),ACO WITH ACO=0 /
6337		055403			EM150=EM147		
6338		055403			EM151=EM147		
6339	055435				EM152:		
	055435	101	104	104		.ASCIZ	/ADDD (R0),ACO WITH ACO=0 /
6340		055435			EM153=EM152		
6341	055467				EM154:		
	055467	101	116	040		.ASCII	'AN OVERFLOW ERROR OCCURRED ON ADD'<CRLF>
	055531	103	101	125		.ASCII	'CAUSING A TRAP TO 244.'
	055557	200	050	102		.ASCII	<CRLF>'(BUT EZBT Y9 Y8) FORK IN STATE 420 OF OVER\UNDER FAILED.'

6342	055650	200	123	110	EM155:	.ASCIZ	<CRLF>'SHOULD HAVE GONE FROM STATE 420 TO 131.'
	055721					.ASCII	'AN UNDERFLOW ERROR OCCURRED ON ADD'<CRLF>
	055721	101	116	040		.ASCII	'CAUSING A TRAP TO 244.'
	055764	103	101	125		.ASCII	<CRLF>'(BUT EZBT Y9 Y8) FORK IN STATE 420 OF OVER\UNDER FAILED.'
	056012	200	050	102		.ASCII	<CRLF>'SHOULD HAVE GONE FROM STATE 420 TO 131.'
6343	056103	200	123	110	EM156:	.ASCIZ	<CRLF>'SHOULD HAVE GONE FROM STATE 420 TO 131.'
	056154					.ASCII	/ADDD (R0),ACO FAILED IN THE ROUND\TRUNK FLOWS./
	056154	101	104	104		.ASCII	<CRLF>'THE (BUT FD) FORK FAILED. WENT'
	056232	200	124	110		.ASCII	\FROM STATE 665 TO 113.\<CRLF>
	056271	106	122	117		.ASCII	\INSTEAD OF FROM 665 TO 313.\<CRLF>\WITH FT SET.\
	056320	111	116	123	EM157:	.ASCIZ	\INSTEAD OF FROM 665 TO 313.\<CRLF>\WITH FT SET.\
6344	056371					.ASCII	/ADDD (R0),ACO FAILED IN THE ROUND\TRUNK FLOWS./
	056371	101	104	104		.ASCII	<CRLF>'THE (BUT FD) FORK FAILED. WENT'
	056447	200	124	110		.ASCII	\FROM STATE 665 TO 313.\<CRLF>
	056506	106	122	117		.ASCII	\INSTEAD OF FROM 665 TO 113.\<CRLF>\WITH FT CLEAR.\
	056535	111	116	123	EM160:	.ASCIZ	\INSTEAD OF FROM 665 TO 113.\<CRLF>\WITH FT CLEAR.\
6345	056610					.ASCII	/ADDD (R0),ACO FAILED IN THE ROUND\TRUNK FLOWS./<CRLF>
	056610	101	104	104		.ASCII	'THE FLOATING CONSTANT WAS USED INSTEAD OF THE DOUBLE CONSTANT'<CRLF>
	056667	124	110	105		.ASCII	'IN THE ROUND ALGORITHM.'
	056765	111	116	040	EM161:	.ASCIZ	'IN THE ROUND ALGORITHM.'
6346	057015					.ASCII	/ADDF (R0),ACO FAILED IN THE ROUND\TRUNK FLOWS./<CRLF>
	057015	101	104	104		.ASCII	'THE DOUBLE CONSTANT WAS USED INSTEAD OF THE FLOATING CONSTANT'<CRLF>
	057074	124	110	105		.ASCII	'IN THE ROUND ALGORITHM.'
	057172	111	116	040	EM162:	.ASCIZ	'IN THE ROUND ALGORITHM.'
6347	057222					.ASCIZ	/ADDD (R0),ACO PRODUCED A BAD RESULT./
	057222	101	104	104	EM163:	.ASCIZ	/ADDD (R0),ACO PRODUCED A BAD RESULT./
6348	057267					.ASCIZ	/ADDF (R0),ACO PRODUCED A BAD RESULT./
	057267	101	104	104	EM164:	.ASCIZ	/ADDF (R0),ACO PRODUCED A BAD RESULT./
6349	057334					.ASCIZ	\THE FPS WAS BAD AFTER ADDD (R0),ACO.\
	057334	124	110	105	EM165:	.ASCIZ	\THE FPS WAS BAD AFTER ADDD (R0),ACO.\
6350	057401					.ASCIZ	\THE FPS WAS BAD AFTER ADDD (R0),ACO.\
	057401	124	110	105	EM166:	.ASCIZ	\THE FPS WAS BAD AFTER ADDD (R0),ACO.\
6351	057446					.ASCII	/ADDD (R0),ACO PRODUCED A BAD RESULT./<CRLF>
	057446	101	104	104		.ASCII	'PROBABLE ERROR IN THE ALIGN FLOWS.'
	057513	120	122	117	EM167:	.ASCIZ	'PROBABLE ERROR IN THE ALIGN FLOWS.'
6352	057556					.ASCII	/ADDD (R0),ACO FAILED IN THE ALIGN FLOWS./<CRLF>
	057556	101	104	104		.ASCII	\FLOW DID NOT FOLLOW THE PATH: STATE 476, TO 111, TO 014.\
	057627	106	114	117		.ASCII	\FLOW DID NOT FOLLOW THE PATH: STATE 476, TO 111, TO 014.\
	057717	200	101	040		.ASCII	<CRLF>\A BAD CONSTANT (NOT 57 DEC) \
	057754	127	101	123		.ASCIZ	'WAS USED IN THE ALIGN ALGORITHM.'
6353	060015				EM170:	.ASCIZ	'WAS USED IN THE ALIGN ALGORITHM.'
	060015	101	104	104		.ASCII	/ADDF (R0),ACO PRODUCED A BAD RESULT./<CRLF>
	060062	120	122	117		.ASCIZ	'PROBABLE ERROR IN THE ALIGN FLOWS.'
6354	060125				EM171:	.ASCIZ	'PROBABLE ERROR IN THE ALIGN FLOWS.'
	060125	101	104	104		.ASCII	/ADDF (R0),ACO FAILED IN THE ALIGN FLOWS./<CRLF>
	060176	106	114	117		.ASCII	\FLOW DID NOT FOLLOW THE PATH: STATE 476, TO 111, TO 014.\
	060266	200	101	040		.ASCII	<CRLF>\A BAD CONSTANT (NOT 25 DEC) \
	060323	127	101	123		.ASCIZ	'WAS USED IN THE ALIGN ALGORITHM.'
6355	060364				EM172:	.ASCIZ	'WAS USED IN THE ALIGN ALGORITHM.'
	060364	101	104	104		.ASCII	/ADDD (R0),ACO FAILED IN THE ALIGN FLOWS./<CRLF>
	060435	106	114	117		.ASCII	\FLOW DID NOT FOLLOW THE PATH: STATE 476, TO 011, TO 015.\
	060525	200	101	040		.ASCII	<CRLF>\A BAD CONSTANT (NOT 57 DEC) \
	060562	127	101	123		.ASCIZ	'WAS USED IN THE ALIGN ALGORITHM.'
6356	060623				EM173:	.ASCIZ	'WAS USED IN THE ALIGN ALGORITHM.'
	060623	101	104	104		.ASCII	/ADDD (R0),ACO FAILED IN THE ALIGN FLOWS./<CRLF>
	060674	106	114	117		.ASCII	\FLOW DID NOT FOLLOW THE PATH: STATE 476, TO 011, TO 215.\
	060764	200	101	040		.ASCII	<CRLF>\A BAD CONSTANT (NOT 57 DEC) \

6357	061021	127	101	123	EM174:	.ASCIZ	'WAS USED IN THE ALIGN ALGORITHM.'
	061062					.ASCII	/ADDF (R0),ACO FAILED IN THE ALIGN FLOWS./<CRLF>
	061133	106	114	117		.ASCII	\FLOW DID NOT FOLLOW THE PATH: STATE 476, TO 011, TO 015.\
	061223	200	101	040		.ASCII	<CRLF>\A BAD CONSTANT (NOT 25 DEC) \
6358	061260	127	101	123	EM175:	.ASCIZ	'WAS USED IN THE ALIGN ALGORITHM.'
	061321					.ASCII	/ADDF (R0),ACO FAILED IN THE ALIGN FLOWS./<CRLF>
	061372	106	114	117		.ASCII	\FLOW DID NOT FOLLOW THE PATH: STATE 476, TO 011, TO 215.\
	061462	200	101	040		.ASCII	<CRLF>\A BAD CONSTANT (NOT 25 DEC) \
6359	061517	127	101	123	EM176:	.ASCIZ	'WAS USED IN THE ALIGN ALGORITHM.'
	061560					.ASCII	'ADDD (R0),ACO FAILED IN THE ADD-SUB FLOWS.'<CRLF>
	061633	104	111	104		.ASCIZ	\DID NOT TAKE THE PATH: STATE 216, TO 442, TO 500.\
6360	061715				EM177:	.ASCII	'ADDD (R0),ACO FAILED IN THE ADD-SUB FLOWS.'<CRLF>
	061770	104	111	104		.ASCIZ	\DID NOT TAKE THE PATH: STATE 216, TO 042, TO 121.\
6361	062052				EM200:	.ASCII	'ADDD (R0),ACO FAILED IN THE ADD-SUB FLOWS.'<CRLF>
	062125	104	111	104		.ASCIZ	\DID NOT TAKE THE PATH: STATE 216, TO 440, TO 121.\
6362	062207				EM201:	.ASCII	'ADDD (R0),ACO FAILED IN THE ADD-SUB FLOWS.'<CRLF>
	062262	104	111	104		.ASCIZ	\DID NOT TAKE THE PATH: STATE 216, TO 440, TO 101.\
6363	062344				EM202:	.ASCII	'ADDD (R0),ACO FAILED IN THE ADD-SUB FLOWS.'<CRLF>
	062417	104	111	104		.ASCIZ	\DID NOT TAKE THE PATH: STATE 216, TO 042, TO 101.\
6364	062501				EM203:	.ASCII	'ADDD (R0),ACO FAILED IN THE ADD-SUB FLOWS.'<CRLF>
	062554	104	111	104		.ASCIZ	\DID NOT TAKE THE PATH: STATE 216, TO 440, TO 141.\
6365	062636				EM204:	.ASCII	'ADDD (R0),ACO FAILED IN THE ADD-SUB FLOWS.'<CRLF>
	062711	104	111	104		.ASCIZ	\DID NOT TAKE THE PATH: STATE 216, TO 042, TO 141.\
6366	062773				EM205:	.ASCIZ	\THE FPS WAS BAD AFTER SUBD (R0),ACO.\
6367	063040				EM206:	.ASCIZ	/SUBD (R0),ACO PRODUCED A BAD RESULT./
6368	063105	123	125	102	EM207:	.ASCII	'SUBD (R0),ACO PRODUCED A BAD RESULT.'
6369	063151	200	124	110		.ASCIZ	<CRLF>'THE XOR OF THE SIGN BIT FAILED IN STATE 024.'
6370	063227	101	104	104	EM210:	.ASCIZ	'ADDD (R0),ACO FAILED IN THE NORMALIZE FLOWS.'
6371		043267					EM211=EM5
6372		043323					EM212=EM6
6373		043355					EM213=EM7
6374							
6375							
6376							
							;DATA HEADERS
6377	063304	040	040	124	DH1:	.ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6378	063344	011	127	122		.ASCIZ	<TAB>'WROTE.'<TAB>'READ.'<TAB>'EXPECTED.'
6379	063374	040	040	124	DH2:	.ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6380	063434	101	116	104		.ASCIZ	'AND BAD DATA.'<TAB>'OR BAD DATA.'
6381	063467	040	040	124	DH3:	.ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6382	063527	011	122	105		.ASCIZ	<TAB>'READ PSW.'<TAB>'EXPECTED PSW.'
6383	063560	040	040	124	DH4:	.ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6384	063620	011	127	122		.ASCIZ	<TAB>'WROTE FPS.'<TAB>'FPS AFTER CFCC.'
6385	063654	040	040	124	DH5:	.ASCIZ	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF TRAP.'
6386		063654					DH6=DH5
6387		063654					DH7=DH5
6388		063654					DH10=DH5

6389	063654				DH11=DH5	
6390	000000				DH12=0	
6391	000000				DH13=0	
6392	063654				DH14=DH5	
6393	063654				DH15=DH5	
6394	063714	040	040	124	DH16: .ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6395	063754	011	117	120	.ASCIZ	<TAB>'OP CODE. FPS.'
6396	063774	040	040	124	DH17: .ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6397	064034	011	107	117	.ASCIZ	<TAB>'GOT FPS.'<TAB>'EXPECTED FPS.'
6398	064064	040	040	124	DH20: .ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF TRAP.'
6399	064123	011	120	103	.ASCIZ	<TAB>'PC OF STST.'<TAB>'READ FEC.'
6400	063654				DH21=DH5	
6401	064152	106	101	111	DH22: .ASCIZ	'FAILED TO CORRECTLY SET FPS.'
6402	064207	106	101	111	DH23: .ASCII	'FAILED TO CORRECTLY SET FEC TO 000002.'<CRLF>
6403	064256	040	040	124	.ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6404	064316	011	120	103	.ASCIZ	<TAB>'PC OF STST.'<TAB>'READ FEC.'
6405	064345	124	122	101	DH24: .ASCII	'TRAPPED TO 244. FLOW WENT FROM STATE 554 TO STATE 430.'
6406	064433	200	111	116	.ASCIZ	<CRLF>'INSTEAD OF FROM STATE 554 TO STATE 432.'
6407	064504	040	040	124	DH25: .ASCIZ	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'<TAB>
6408	064546	040	040	124	DH26: .ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6409	064606	011	107	117	.ASCIZ	<TAB>'GOT RO.'<TAB>'EXPECTED RO.'
6410	064546				DH27=DH26	
6411	000000				DH30=0	
6412	064546				DH31=DH26	
6413	064546				DH32=DH26	
6414	064634	040	040	124	DH33: .ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6415	064674	011	122	060	.ASCIZ	<TAB>'RO (TARGET LOCATIONS FOR OUTPUT).'
6416	064634				DH34=DH33	
6417	064634				DH35=DH33	
6418	064634				DH36=DH33	
6419	064634				DH37=DH33	
6420	064634				DH40=DH33	
6421	000000				DH41=0	
6422	064737	040	040	124	DH42: .ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF TRAP.'
6423	064776	011	122	060	.ASCIZ	<TAB>'RO (TARGET LOCATIONS FOR OUTPUT).'
6424	064737				DH43=DH42	
6425	000000				DH44=0	
6426	065041	105	122	122	DH45: .ASCIZ	'ERROR SUMMARY.'
6427	065060	040	040	124	DH46: .ASCIZ	' TEST.'<TAB>'CALL AT PC.'
6428	065041				DH47=DH45	
6429	065104	040	040	124	DH50: .ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6430	065144	011	127	111	.ASCIZ	<TAB>'WITH FD.'
6431	065104				DH51=DH50	
6432	063654				DH52=DH5	
6433	064546				DH53=DH26	
6434	065156	040	040	124	DH54: .ASCIZ	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6435	063654				DH55=DH5	
6436	064546				DH56=DH26	
6437	065156				DH57=DH54	
6438	064546				DH60=DH26	
6439	065156				DH61=DH54	
6440	065156				DH62=DH54	
6441	065156				DH63=DH54	
6442	065217	122	105	123	DH65: .ASCII	'RESULTING IN AN ODD ADDRESS TRAP TO 4.'
6443	065265	200			.ASCII	<CRLF>
6444	065266	040	040	124	DH64: .ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6445	065326	011	107	117	.ASCIZ	<TAB>'GOT PC.'<TAB>'EXPECTED PC.'

6446		065156				DH66=DH54	
6447		063654				DH67=DH5	
6448		063654				DH70=DH5	
6449		064504				DH71=DH25	
6450		064546				DH72=DH26	
6451		065156				DH73=DH54	
6452		063654				DH74=DH5	
6453		063654				DH75=DH5	
6454		064504				DH76=DH25	
6455		064546				DH77=DH26	
6456		065156				DH100=DH54	
6457		063654				DH101=DH5	
6458		064546				DH102=DH26	
6459		064504				DH103=DH25	
6460		065156				DH104=DH54	
6461		063654				DH105=DH5	
6462		064546				DH106=DH26	
6463		064504				DH107=DH25	
6464		065156				DH110=DH54	
6465		064504				DH111=DH25	
6466	065354	124	110	105		DH112: .ASCII	'THE (BUT FSRC) FORK FAILED.'<CRLF>
6467	065410	103	117	116		.ASCII	'CONTROL WENT FROM STATE 762 TO STATE 627.'
6468	065461	200	111	116		.ASCII	<CRLF>'INSTEAD OF FROM STATE 762 TO STATE 637.'<CRLF>
6469	065532	040	040	124		.ASCIZ	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6470		064504				DH113=DH25	
6471		065354				DH114=DH112	
6472	065573	124	110	105		DH115: .ASCII	'THE (BUT FSRC) FORK FAILED RESULTING IN AN ODD ADDRESS TRAP TO 4.'
6473	065674	200	103	117		.ASCII	<CRLF>'CONTROL WENT FROM STATE 762 TO STATE 627.'<CRLF>
6474	065747	111	116	123		.ASCII	'INSTEAD OF FROM STATE 762 TO STATE 627.'<CRLF>
6475	066017	040	040	124		.ASCIZ	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF TRAP.'
6476		065573				DH116=DH115	
6477		063774				DH117=DH17	
6478	066057	040	040	124		DH120: .ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6479	066117	011	107	117		.ASCIZ	<TAB>'GOT FEC.'<TAB>'EXPECTED FEC.'
6480		063654				DH121=DH5	
6481		065104				DH122=DH50	
6482		065104				DH123=DH50	
6483		063774				DH124=DH17	
6484		063774				DH125=DH17	
6485		063654				DH126=DH5	
6486		065156				DH127=DH54	
6487		066057				DH130=DH120	
6488		065156				DH131=DH54	
6489		065156				DH132=DH54	
6490	066147	106	101	111		DH133: .ASCII	'FAILED TO PRODUCE THE CORRECT RESULTS.'<CRLF>
6491	066216	040	040	124		.ASCIZ	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6492		066147				DH134=DH133	
6493		066147				DH135=DH133	
6494		066147				DH136=DH133	
6495	066257	120	122	117		DH137: .ASCII	'PRODUCED THE CORRECT RESULT BUT FAILED TO SET THE FPS CORRECTLY.'
6496	066357	040	040	124		.ASCII	' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6497	066417	011	107	117		.ASCIZ	<TAB>'GOT FPS.'<TAB>'EXPECTED FPS.'
6498		066257				DH140=DH137	
6499		066257				DH141=DH137	
6500		066257				DH142=DH137	
6501		066147				DH143=DH133	
6502		066147				DH144=DH133	

```

6503          066257          DH145=DH137
6504          066257          DH146=DH137
6505          065156          DH147=DH54
6506 066447    130          117 122 DH150: .ASCII 'XOR OF SIGN BIT FAILED.'<CRLF>
6507 066477    040          124   .ASCIIZ ' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF ERROR.'
6508          066257          DH151=DH137
6509          066147          DH152=DH133
6510          066257          DH153=DH137
6511 066540    040          124 DH154: .ASCIIZ ' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF TRAP.'
6512          066540          DH155=DH154
6513          065156          DH156=DH54
6514          065156          DH157=DH54
6515          065156          DH160=DH54
6516          065156          DH161=DH54
6517          065156          DH162=DH54
6518          065156          DH163=DH54
6519          063774          DH164=DH17
6520          063774          DH165=DH17
6521          065156          DH166=DH54
6522          065156          DH167=DH54
6523          065156          DH170=DH54
6524          065156          DH171=DH54
6525          065156          DH172=DH54
6526          065156          DH173=DH54
6527          065156          DH174=DH54
6528          065156          DH175=DH54
6529          065156          DH176=DH54
6530          065156          DH177=DH54
6531          065156          DH200=DH54
6532          065156          DH201=DH54
6533          065156          DH202=DH54
6534          065156          DH203=DH54
6535          065156          DH204=DH54
6536          063774          DH205=DH17
6537          065156          DH206=DH54
6538          065156          DH207=DH54
6539          065156          DH210=DH54
6540 066600    040          124 DH211: .ASCIIZ ' TEST.'<TAB>'PC OF CALL.'<TAB>'PC OF TRAP.'<TAB>'FEC.'
6541          063654          DH212=DH5
6542          063654          DH213=DH5
6543
6544
6545          ;DATA FORMATS:
6546
6547 066645    004          000 005 DF1: .BYTE 4,0,5,0,5,0,0,0
6548 066655    004          000 005 DF2: .BYTE 4,0,5,4,5,0,5,0
6549 066665    004          000 005 DF3: .BYTE 4,0,5,0,5,0,5,0
6550          066665          DF4=DF3
6551 066675    004          000 005 DF5: .BYTE 4,0,5,0,5,0,5,11,5,0,5,0
  
```

6553

066675

DF6=DF5

6555	066675				DF7=DF5	
6556	066675				DF10=DF5	
6557	066675				DF11=DF5	
6558	066711	005	011	005	DF12: .BYTE	5,11,5,5,5,4,5,4,5,5,4,5,4,5,11,5,11,5,5,4,0,5,0,5,0,0
6559	066743	005	011	005	DF13: .BYTE	5,11,5,5,5,4,0,5,0,5,0,0
6560	066675				DF14=DF6	
6561	066675				DF15=DF6	
6562	066757	004	000	005	DF16: .BYTE	4,0,5,0,5,0,0
6563	066665				DF17=DF3	
6564	066766	004	000	005	DF20: .BYTE	4,0,5,0,5,0,5,0
6565	066776	004	000	005	DF21: .BYTE	4,0,5,0
6566	067002	005	005	004	DF22: .BYTE	5,5,4,0,5,0,5,0,5,0
6567	067014	004	000	005	DF23: .BYTE	4,0,5,0,5,0,5,0
6568	067024	005	004	000	DF24: .BYTE	5,4,0,5,0,5,0
6569	067033	004	000	005	DF25: .BYTE	4,0,5,0,5,5,5,0,5,0,5,0,5,5,5,0,5,0,5,0
6570	067057	004	000	005	DF26: .BYTE	4,0,5,0,5,0,0,5,5,5,5,4,5,4,5,5,5,4,5,4
6571	067104	004	000	005	DF27: .BYTE	4,0,5,0,5,0,0,5,5,5,5,4,5,4,5,5
6572	067124	005	011	005	DF30: .BYTE	5,11,5,5,5,4,0,5,0,5,0,0
6573	067057				DF31=DF26	
6574	067104				DF32=DF27	
6575	067140	004	000	005	DF33: .BYTE	4,0,5,0,5,0,5,5,5,0,5,0,5,12,5,5,5,0,5,0,5,12
6576	067166	004	000	005	DF34: .BYTE	4,0,5,0,5,0,5,5,5,5,4,5,4,5,5,5,5,4,5,4
6577	067166				DF35=DF34	
6578	067166				DF36=DF34	
6579	067166				DF37=DF34	
6580	067212	004	000	005	DF40: .BYTE	4,0,5,0,5,0,5,5,5,0,5,0,5,3,5,5,5,0,5,0,5,3
6581	067240	011	005	005	DF41: .BYTE	11,5,5,5,4,0,5,0,5,0,5,0
6582	067254	004	000	005	DF42: .BYTE	4,0,5,0,5,0,5,5,5,5,4,5,4,11,4,5,5,5,5,4,5,4
6583	067254				DF43=DF42	
6584	067302	005	011	005	DF44: .BYTE	5,11,5,5,5,4,0,5,0,5,5,5,5,3,5,5,5,5,3
6585	067325	005	011	005	DF45: .BYTE	5,11,5,5,5,4,0,5,0,5,4,5,5,5,5,3,5,5,5,5,3
6586	067352	004	000	005	DF46: .BYTE	4,0,5,5,5,3,5,3,5,3,5,3,5,3,5,5,5,3,5,3,5,3,5,3,5,3
6587	067404	004	000	005	DF47: .BYTE	4,0,5,0,5,5,5,4,5,4,5,5
6588	067421	004	000	005	DF50: .BYTE	4,0,5,0,5,11,5,5,5,5,4,5,4,5,5,5,5,4,5,4
6589	067445	004	000	005	DF51: .BYTE	4,0,5,0,5,11,5,5,5,3,5,5,5,3
6590	067404				DF52=DF47	
6591	067463	004	000	005	DF53: .BYTE	4,0,5,0,5,0,0
6592	067472	004	000	005	DF54: .BYTE	4,0,5,0,5,5,5,5,3,5,5,5,5,3
6593	067404				DF55=DF47	
6594	067463				DF56=DF53	
6595	067472				DF57=DF54	
6596	067463				DF60=DF53	
6597	067472				DF61=DF54	
6598	067472				DF62=DF54	
6599	067472				DF63=DF54	
6600	067510	004	000	005	DF64: .BYTE	4,0,5,0,5,0,0
6601	067510				DF65=DF64	
6602	067472				DF66=DF54	
6603	066776				DF67=DF21	
6604	067517	004	000	005	DF70: .BYTE	4,0,5,0,5,5,5,5,4,5,4,5,5,5,5,4,5,4
6605	067517				DF71=DF70	
6606	067541	004	000	005	DF72: .BYTE	4,0,5,0,5,0,0
6607	067472				DF73=DF54	
6608	066776				DF74=DF21	
6609	067517				DF75=DF70	
6610	067517				DF76=DF70	
6611	067541				DF77=DF72	

6669	067665				DF171=DF161	
6670	067625				DF172=DF133	
6671	067625				DF173=DF133	
6672	067665				DF174=DF161	
6673	067665				DF175=DF161	
6674	067625				DF176=DF133	
6675	067625				DF177=DF133	
6676	067625				DF200=DF133	
6677	067625				DF201=DF133	
6678	067625				DF202=DF133	
6679	067625				DF203=DF133	
6680	067625				DF204=DF133	
6681	066665				DF205=DF3	
6682	067625				DF206=DF133	
6683	067625				DF207=DF133	
6684	067625				DF210=DF133	
6685	067711	004	000	005	DF211: .BYTE	4,0,5,0,5,0
6686	067711				DF212=DF211	
6687	067711				DF213=DF211	
6688						
6689					.EVEN	
6690					:DATA TABLES:	
6691						
6692	067720	001232	001234	040446	DT1: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6693	067734	001242	001244	000000	.WORD	\$TMP4,\$TMP5,0
6694	067742	001232	001234	040446	DT2: .WORD	\$TMP0,\$TMP1,\$TAB,AERFLG,\$TAB,\$TMP2,\$TAB,\$TMP3,0
6695	067764	001232	001234	040446	DT3: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6696	070000	040446	001242	000000	.WORD	\$TAB,\$TMP4,0
6697		067764			DT4=DT3	
6698	070006	001232	001234	040446	DT5: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,LF IEX1,\$TMP21,LF IEX2
6699	070024	001272	040565	001240	.WORD	\$TMP20,FPSMS,\$TMP3,FECMS,\$TMP4,0
6700	070040	001232	001234	040446	DT6: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,LF IEX1,\$TMP21,LF IEX2,\$TMP20,0
6701		070040			DT7=DT6	
6702		070040			DT10=DT6	
6703		070040			DT11=DT6	
6704	070062	040642	001252	040647	DT12: .WORD	\$THE,\$TMP10,NOOP1,NOOP15,NOOP2,\$TMP5
6705	070076	041011	001246	041023	.WORD	NOOP3,\$TMP6,NOOP4,NOOP2,\$TMP5,NOOP3,\$TMP7,NOOP5,\$TMP11
6706	070120	041066	001252	041106	.WORD	NOOP6,\$TMP10,NOOP7,NOOP10,\$TMP0,\$TMP1,\$TAB,\$TMP2
6707	070140	040446	001240	001242	.WORD	\$TAB,\$TMP3,\$TMP4,0
6708	070150	040642	001252	040647	DT13: .WORD	\$THE,\$TMP10,NOOP1,NOOP11,NOOP10,\$TMP0,\$TMP1,\$TAB
6709	070170	001236	040446	001240	.WORD	\$TMP2,\$TAB,\$TMP3,\$TMP4,0
6710		070040			DT14=DT6	
6711		070040			DT15=DT6	
6712	070202	001232	001234	040446	DT16: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP5,\$TMP3,0
6713		067764			DT17=DT3	
6714	070222	001232	001234	040446	DT20: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6715	070236	040446	001242	000000	.WORD	\$TAB,\$TMP4,0
6716	070244	001232	001234	040446	DT21: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,0
6717	070256	063467	001313		DT22: .WORD	DH3,\$CRLF
6718	070262	001232	001234	040446	.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6719	070276	040446	001242	000000	.WORD	\$TAB,\$TMP4,0
6720	070304	001232	001234	040446	DT23: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6721	070320	040446	001242	000000	.WORD	\$TAB,\$TMP4,0
6722	070326	041542			DT24: .WORD	ILLMS
6723	070330	001232	001234	040446	.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6724	070344	040446	001242	000000	.WORD	\$TAB,\$TMP4,0
6725	070352	001232	001234	040446	DT25: .WORD	\$TMP0,\$TMP1,\$TAB,\$CRLF,MS1,MS3,\$TMP3,MS4,\$TMP4,\$CRLF

6726	070376	001242	001313	041622		.WORD	\$TMP4,\$CRLF,MS2,MS3,\$TMP5,MS4,\$TMP6,\$CRLF,\$TMP5,0
6727	070422	001232	001234	040446	DT26:	.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3,\$TMP4,\$CRLF
6728	070442	041732	001313	041750		.WORD	MS6,\$CRLF,MS7,\$TMP5,MS10,\$TMP6,\$CRLF
6729	070460	041777	001313	041750		.WORD	MS11,\$CRLF,MS7,\$TMP5,MS10,\$TMP7,0
6730	070476	001232	001234	040446	DT27:	.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6731	070512	001242	001313	042024		.WORD	\$TMP4,\$CRLF,MS12,\$CRLF,MS7,\$TMP5,MS10,\$TMP7,\$CRLF,MS13,0
6732	070540	042165	001272	001313	DT30:	.WORD	MS15,\$TMP20,\$CRLF,MS14,\$CRLF
6733	070552	001232	001234	040446		.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6734	070566	001242	000000			.WORD	\$TMP4,0
6735		070422			DT31=DT26		
6736		070476			DT32=DT27		
6737	070572	001232	001234	040446	DT33:	.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6738	070606	001313	041610	041627		.WORD	\$CRLF,MS1,MS3,\$TMP4,MS4,\$TMP5,\$CRLF,\$TMP6,\$CRLF
6739	070630	041622	041627	001242		.WORD	MS2,MS3,\$TMP4,MS4,\$TMP5,\$CRLF,\$TMP4,0
6740	070650	001232	001234	040446	DT34:	.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6741	070664	001313	041732	001313		.WORD	\$CRLF,MS6,\$CRLF,MS7,\$TMP5,MS10,\$TMP6,\$CRLF
6742	070704	041777	001313	041750		.WORD	MS11,\$CRLF,MS7,\$TMP5,MS10,\$TMP7,0
6743		070650			DT35=DT34		
6744		070650			DT36=DT34		
6745		070650			DT37=DT34		
6746		070572			DT40=DT33		
6747	070722	001272	001313	063467	DT41:	.WORD	\$TMP20,\$CRLF,DH3,\$CRLF
6748	070732	001232	001234	040446		.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6749	070746	040446	001242	000000		.WORD	\$TAB,\$TMP4,0
6750	070754	001232	001234	040446	DT42:	.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6751	070770	001313	041732	001313		.WORD	\$CRLF,MS6,\$CRLF,MS7,\$TMP5,MS10,\$TMP6,\$TMP15,\$TMP10
6752	071012	001313	041777	001313		.WORD	\$CRLF,MS11,\$CRLF,MS7,\$TMP5,MS10,\$TMP7,0
6753		070754			DT43=DT42		
6754	071032	042217	001244	001313	DT44:	.WORD	MS17,\$TMP5,\$CRLF,MS20,\$CRLF,\$TMP0,\$TMP1,\$TAB,\$TMP2
6755	071054	001313	041610	042350		.WORD	\$CRLF,MS1,MS21,\$CRLF,\$TMP3,\$CRLF,MS2,MS21,\$CRLF,\$TMP4,0
6756	071102	042217	001244	001313	DT45:	.WORD	MS17,\$TMP5,\$CRLF,MS24,\$CRLF,\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB
6757	071126	001246	001313	042407		.WORD	\$TMP6,\$CRLF,MS22,MS21,\$CRLF,\$TMP3,\$CRLF
6758	071144	042437	042350	001313		.WORD	MS23,MS21,\$CRLF,\$TMP4,0
6759	071156	001232	001234	001313	DT46:	.WORD	\$TMP0,\$TMP1,\$CRLF,MS25,MS30,\$TMP2,MS31,\$TMP3
6760	071176	042645	001242	042654		.WORD	MS32,\$TMP4,MS33,\$TMP5,MS34,\$TMP6,\$CRLF,MS26
6761	071216	042627	001250	042636		.WORD	MS30,\$TMP7,MS31,\$TMP10
6762	071226	042645	001254	042654		.WORD	MS32,\$TMP11,MS33,\$TMP12,MS34,\$TMP13,0
6763	071244	001232	001234	040446	DT47:	.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$CRLF,MS12,MS7,\$TMP3,MS10
6764	071266	001242	001313	042062		.WORD	\$TMP4,\$CRLF,MS13,0
6765		070650			DT50=DT34		
6766	071276	001232	001234	040446	DT51:	.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6767	071312	001313	042561	042620		.WORD	\$CRLF,MS25,MS27,\$TMP4,\$CRLF,MS26,MS27,\$TMP5,0
6768		071244			DT52=DT47		
6769	071334	001232	001234	040446	DT53:	.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6770	071350	001242	000000			.WORD	\$TMP4,0
6771	071354	001232	001234	040446	DT54:	.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$CRLF,MS1,MS21,\$CRLF,\$TMP3
6772	071376	001313	041622	042350		.WORD	\$CRLF,MS2,MS21,\$CRLF,\$TMP3,0
6773		071244			DT55=DT47		
6774		071334			DT56=DT53		
6775		071354			DT57=DT54		
6776		071334			DT60=DT53		
6777		071354			DT61=DT54		
6778		071354			DT62=DT54		
6779		071354			DT63=DT54		
6780	071412	001232	001234	040446	DT64:	.WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3
6781	071426	001242	000000			.WORD	\$TMP4,0
6782		071412			DT65=DT64		

6783		071354			DT66=DT54	
6784		070244			DT67=DT21	
6785	071432	001232	001234	040446	DT70: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$CRLF,MS6,\$CRLF,MS7,\$TMP5
6786	071454	041764	001246	001313	.WORD	MS10,\$TMP6,\$CRLF,MS11,\$CRLF,MS7,\$TMP5,MS10,\$TMP7,0
6787		071432			DT71=DT70	
6788	071500	001232	001234	040446	DT72: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3,\$TMP4,0
6789		071354			DT73=DT54	
6790		070244			DT74=DT21	
6791		071432			DT75=DT70	
6792		071432			DT76=DT70	
6793		071500			DT77=DT72	
6794		071354			DT100=DT54	
6795		071432			DT101=DT70	
6796		071432			DT102=DT71	
6797		071432			DT103=DT70	
6798		071354			DT104=DT54	
6799		071432			DT105=DT70	
6800		071500			DT106=DT72	
6801		071432			DT107=DT70	
6802		071354			DT110=DT54	
6803	071520	001232	001234	040446	DT111: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,0
6804		071520			DT112=DT111	
6805		071520			DT113=DT111	
6806		071520			DT114=DT111	
6807		071520			DT115=DT111	
6808		071520			DT116=DT111	
6809		067764			DT117=DT3	
6810		067764			DT120=DT3	
6811		071244			DT121=DT47	
6812		070650			DT122=DT34	
6813		071276			DT123=DT51	
6814	071532	001232	001234	040446	DT124: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TAB,\$TMP3,\$TMP4,\$CRLF
6815	071552	041732	001313	041750	.WORD	MS6,\$CRLF,MS7,\$TMP5,MS10,\$TMP6,\$CRLF
6816	071570	041777	001313	041750	.WORD	MS11,\$CRLF,MS7,\$TMP5,MS10,\$TMP7,\$CRLF,MS37,\$CRLF,\$TMP10,0
6817		071532			DT125=DT124	
6818		071520			DT126=DT111	
6819		071520			DT127=DT111	
6820		067764			DT130=DT3	
6821	071616	001232	001234	040446	DT131: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$CRLF,MS37,\$CRLF,\$TMP3
6822	071636	001313	042724	001313	.WORD	\$CRLF,MS40,\$CRLF,\$TMP4,\$CRLF,MS415,\$CRLF,\$TMP5,0
6823		071616			DT132=DT131	
6824	071660	001232	001234	040446	DT133: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$CRLF,MS41,\$CRLF,\$TMP3
6825	071700	001313	043004	001313	.WORD	\$CRLF,MS42,\$CRLF,\$TMP4,\$CRLF,MS43,\$CRLF,\$TMP5
6826	071720	001313	043037	001313	.WORD	\$CRLF,MS44,\$CRLF,\$TMP6,0
6827		071660			DT134=DT133	
6828		071660			DT135=DT133	
6829		071660			DT136=DT133	
6830	071732	001232	001234	040446	DT137: .WORD	\$TMP0,\$TMP1,\$TAB,\$TMP2,\$TMP10,\$TAB,\$TMP11,0
6831		071732			DT140=DT137	
6832		071732			DT141=DT137	
6833		071732			DT142=DT137	
6834		071660			DT143=DT133	
6835		071660			DT144=DT133	
6836		071732			DT145=DT137	
6837		071732			DT146=DT137	
6838		071660			DT147=DT133	
6839		071660			DT150=DT133	

```

6840      071732      DT151=DT137
6841      071660      DT152=DT133
6842      071732      DT153=DT133
6843 071752 001232 001234 040446 DT154: .WORD $TMP0,$TMP1,$TAB,$TMP2,0
6844      071752      DT155=DT154
6845      071660      DT156=DT133
6846      071660      DT157=DT133
6847      071660      DT160=DT133
6848      071660      DT161=DT133
6849      071660      DT162=DT133
6850      071660      DT163=DT133
6851      067764      DT164=DT3
6852      067764      DT165=DT3
6853      071660      DT166=DT133
6854      071660      DT167=DT133
6855      071660      DT170=DT133
6856      071660      DT171=DT133
6857      071660      DT172=DT133
6858      071660      DT173=DT133
6859      071660      DT174=DT133
6860      071660      DT175=DT133
6861      071660      DT176=DT133
6862      071660      DT177=DT133
6863      071660      DT200=DT133
6864      071660      DT201=DT133
6865      071660      DT202=DT133
6866      071660      DT203=DT133
6867      071660      DT204=DT133
6868      067764      DT205=DT3
6869      071660      DT206=DT133
6870      071660      DT207=DT133
6871      071660      DT210=DT133
6872 071764 001232 001234 040446 DT211: .WORD $TMP0,$TMP1,$TAB,$TMP2,$TAB,$TMP3,0
6873 072002 001232 001234 040446 DT212: .WORD $TMP0,$TMP1,$TAB,$TMP2,0
6874      072002      DT213=DT212
6875
6876
6877
6878
6879      :12345
6880      000001      .END

```

AADATO	026222	ADDW12=	000000	A6	004512	BERR1	004742	CCP3	030010
AADONE	026322	ADDW13=	000000	A7	004536	BIT0	= 000001	CCP4	030020
AAERRO	025654	ADDW14=	000000	BBDATO	031264	BIT00	= 000001	CCP5	030030
AAERR1	025742	ADDW15=	000000	BBDONE	031414	BIT01	= 000002	CCP6	030040
AAERR2	025776	ADDW2 =	000000	BBERO	030752	BIT02	= 000004	CCP7	030050
AAERR3	026032	ADDW3 =	000000	BBER1	031012	BIT03	= 000010	CC1	026326
AAERR4	026042	ADDW4 =	000000	BBER10	030772	BIT04	= 000020	CC10	026542
AAERR5	026076	ADDW5 =	000000	BBER11	031026	BIT05	= 000040	CC11	026552
AAERR6	026132	ADDW6 =	000000	BBER2	031050	BIT06	= 000100	CC12	026560
AAERR7	026166	ADDW7 =	000000	BBER3	031066	BIT07	= 000200	CC13	026572
AAER10	025750	ADDW8 =	000000	BBER4	031122	BIT08	= 000400	CC14	026622
AAPATO	026232	ADDW9 =	000000	BBER40	031136	BIT09	= 001000	CC15	026646
AAPAT1	026242	ADEVCT=	000000	BBER5	031156	BIT1	= 000002	CC16	026666
AAPAT2	026252	ADEVVM =	000000	BBER6	031174	BIT10	= 002000	CC17	026676
AAPAT3	026262	ADONE	004654	BBER7	031230	BIT11	= 004000	CC18	026704
AAPAT4	026272	AENV =	000000	BBER8	031246	BIT12	= 010000	CC19	026716
AAPAT5	026302	AENVVM =	000000	BBPAT0	031274	BIT13	= 020000	CC2	026356
AAPAT6	026312	AERFLG	004544	BBPAT1	031304	BIT14	= 040000	CC20	026746
AA1	025274	AERR1	004546	BBPAT2	031314	BIT15	= 100000	CC21	026772
AA10	025410	AERR2	004560	BBPAT3	031324	BIT2	= 000004	CC22	027012
AA11	025440	AERR3	004612	BBPAT4	031334	BIT3	= 000010	CC23	027022
AA12	025442	AFATAL=	000000	BBPAT5	031344	BIT4	= 000020	CC24	027030
AA13	025460	AMADR1=	000000	BBPAT6	031354	BIT5	= 000040	CC25	027042
AA14	025500	AMADR2=	000000	BBP10	031374	BIT6	= 000100	CC26	027072
AA15	025520	AMADR3=	000000	BBP11	031404	BIT7	= 000200	CC27	027114
AA16	025526	AMADR4=	000000	BBP7	031364	BIT8	= 000400	CC28	027134
AA17	025532	AMAMS1=	000000	BB1	030114	BIT9	= 001000	CC29	027144
AA2	025332	AMAMS2=	000000	BB10	030270	BPTVEC=	000014	CC3	026400
AA20	025536	AMAMS3=	000000	BB11	030310	B1	004666	CC30	027152
AA21	025540	AMAMS4=	000000	BB12	030320	B2	004670	CC31	027164
AA22	025572	AMSGAD=	000000	BB13	030326	B3	004706	CC32	027214
AA23	025574	AMSGLG=	000000	BB14	030340	CCDATO	027750	CC33	027236
AA24	025614	AMSGTY=	000000	BB15	030370	CCDONE	030110	CC34	027256
AA25	025634	AMTYP1=	000000	BB16	030414	CCERO	027312	CC35	027266
AA26	025642	AMTYP2=	000000	BB17	030424	CCER1	027346	CC36	027274
AA27	025646	AMTYP3=	000000	BB2	030152	CCER10	027660	CC37	027306
AA3	025334	AMTYP4=	000000	BB20	030436	CCER11	027676	CC4	026420
AA4	025352	APASS =	000000	BB21	030466	CCER12	027714	CC5	026430
AA5	025372	APRIOR=	000000	BB22	030512	CCER13	027732	CC6	026436
AA6	025400	APTC SU=	000040	BB23	030532	CCER2	027404	CC7	026450
AA7	025406	APTENV=	000001	BB24	030542	CCER22	027420	CC8	026500
ABASE =	000000	APTSIZ=	000200	BB25	030550	CCER3	027442	CC9	026522
ACDW1 =	000000	APTSPO=	000100	BB26	030562	CCER4	027460	CDONE	005662
ACDW2 =	000000	ASWREG=	000000	BB27	030612	CCER44	027474	CERR1	005416
ACPUOP=	000000	ATESTN=	000000	BB3	030156	CCER5	027516	CERR2	005514
ACO	=%000000	AUNIT =	000000	BB30	030634	CCER50	027362	CERR3	005614
AC1	=%000001	AUSWR =	000000	BB31	030644	CCER55	027532	CERR4	005636
AC2	=%000002	AVECT1=	000000	BB32	030656	CCER6	027552	CFCC1	041400
AC3	=%000003	AVECT2=	000000	BB33	030706	CCER7	027606	CKSWR =	104406
AC4	=%000004	A05	004462	BB34	030730	CCER8	027624	CNT =	000214
AC5	=%000005	A1	004334	BB35	030740	CCER90	027330	CPC	005660
AC6	=%000006	A11	004334	BB4	030174	CCP0	027760	CPSPUR	040266
AC7	=%000007	A12	004350	BB5	030204	CCP1	027770	CPTWG	040304
ADDW0 =	000000	A2	004406	BB6	030216	CCP10	030060	CR	= 000015
ADDW1 =	000000	A3	004412	BB7	030246	CCP11	030070	CRLF =	000200
ADDW10=	000000	A4	004460	BDONE	004756	CCP12	030100	C1	004772
ADDW11=	000000	A5	004464	BERR	004712	CCP2	030000	C15	005020

C2	005040	DD24	032142	DF133	067625	DF23	067014	DH105	= 063654
C25	005054	DD25	032162	DF134	= 067625	DF24	067024	DH106	= 064546
C3	005076	DD26	032172	DF135	= 067625	DF25	067033	DH107	= 064504
C35	005126	DD27	032200	DF136	= 067625	DF26	067057	DH11	= 063654
C4	005150	DD3	031472	DF137	067651	DF27	067104	DH110	= 065156
C45	005162	DD30	032212	DF14	= 066675	DF3	066665	DH111	= 064504
C5	005204	DD31	032242	DF140	= 067651	DF30	067124	DH112	065354
C55	005232	DD32	032264	DF141	= 067651	DF31	= 067057	DH113	= 064504
C6	005252	DD33	032304	DF142	= 067651	DF32	= 067104	DH114	= 065354
C65	005266	DD34	032314	DF143	= 067625	DF33	067140	DH115	065573
C7	005310	DD35	032322	DF144	= 067625	DF34	067166	DH116	= 065573
C75	005340	DD36	032340	DF145	= 067651	DF35	= 067166	DH117	= 063774
C8	005362	DD37	032370	DF146	= 067651	DF36	= 067166	DH12	= 000000
C85	005374	DD38	032412	DF147	= 067625	DF37	= 067166	DH120	066057
DDDATO	033260	DD39	032432	DF15	= 066675	DF4	= 066665	DH121	= 063654
DDDONE	033410	DD4	031512	DF150	= 067625	DF40	067212	DH122	= 065104
DDERO	032472	DD40	032442	DF151	= 067651	DF41	067240	DH123	= 065104
DDER1	032510	DD41	032450	DF152	= 067625	DF42	067254	DH124	= 063774
DDER10	033126	DD42	032466	DF153	= 067651	DF43	= 067254	DH125	= 063774
DDER11	033164	DD5	031522	DF154	067661	DF44	067302	DH126	= 063654
DDER12	033222	DD6	031530	DF155	= 067661	DF45	067325	DH127	= 065156
DDER2	032546	DD7	031546	DF156	= 067625	DF46	067352	DH13	= 000000
DDER3	032604	DD8	031576	DF157	= 067625	DF47	067404	DH130	= 066057
DDER4	032642	DERR1	006004	DF16	066757	DF5	066675	DH131	= 065156
DDER5	032700	DERR2	006100	DF160	= 067625	DF50	067421	DH132	= 065156
DDER6	032736	DF1	066645	DF161	067665	DF51	067445	DH133	066147
DDER7	032774	DF10	= 066675	DF162	= 067625	DF52	= 067404	DH134	= 066147
DDER8	033032	DF100	= 067472	DF163	= 067665	DF53	067463	DH135	= 066147
DDER9	033070	DF101	= 067517	DF164	= 066665	DF54	067472	DH136	= 066147
DDISP =	177570	DF102	= 067541	DF165	= 066665	DF55	= 067404	DH137	066257
DDONE	006124	DF103	= 067517	DF166	= 067625	DF56	= 067463	DH14	= 063654
DDPO	033270	DF104	= 067472	DF167	= 067625	DF57	= 067472	DH140	= 066257
DDP1	033300	DF105	= 067517	DF17	= 066665	DF6	= 066675	DH141	= 066257
DDP2	033310	DF106	= 067541	DF170	= 067665	DF60	= 067463	DH142	= 066257
DDP3	033320	DF107	= 067517	DF171	= 067665	DF61	= 067472	DH143	= 066147
DDP4	033330	DF11	= 066675	DF172	= 067625	DF62	= 067472	DH144	= 066147
DDP5	033340	DF110	= 067472	DF173	= 067625	DF63	= 067472	DH145	= 066257
DDP6	033350	DF111	067550	DF174	= 067665	DF64	067510	DH146	= 066257
DDP7	033360	DF112	= 067550	DF175	= 067665	DF65	= 067510	DH147	= 065156
DDP8	033370	DF113	= 067550	DF176	= 067625	DF66	= 067472	DH15	= 063654
DDP9	033400	DF114	= 067550	DF177	= 067625	DF67	= 066776	DH150	066447
DD1	031420	DF115	= 067550	DF2	066655	DF7	= 066675	DH151	= 066257
DD10	031620	DF116	= 067550	DF20	066766	DF70	067517	DH152	= 066147
DD11	031630	DF117	= 066665	DF200	= 067625	DF71	= 067517	DH153	= 066257
DD12	031646	DF12	066711	DF201	= 067625	DF72	067541	DH154	066540
DD13	031676	DF120	= 066665	DF202	= 067625	DF73	= 067472	DH155	= 066540
DD14	031720	DF121	= 067404	DF203	= 067625	DF74	= 066776	DH156	= 065156
DD15	031730	DF122	= 067421	DF204	= 067625	DF75	= 067517	DH157	= 065156
DD16	031746	DF123	= 067445	DF205	= 066665	DF76	= 067517	DH16	063714
DD17	031776	DF124	067554	DF206	= 067625	DF77	= 067541	DH160	= 065156
DD18	032020	DF125	= 067554	DF207	= 067625	DH1	063304	DH161	= 065156
DD19	032040	DF126	= 067550	DF21	066776	DH10	= 063654	DH162	= 065156
DD2	031450	DF127	= 067550	DF210	= 067625	DH100	= 065156	DH163	= 065156
DD20	032050	DF13	066743	DF211	067711	DH101	= 063654	DH164	= 063774
DD21	032056	DF130	= 066665	DF212	= 067711	DH102	= 064546	DH165	= 063774
DD22	032070	DF131	067605	DF213	= 067711	DH103	= 064504	DH166	= 065156
DD23	032120	DF132	= 067605	DF22	067002	DH104	= 065156	DH167	= 065156

SYMBOL TABLE

DH17 = 063774
 DH170 = 065156
 DH171 = 065156
 DH172 = 065156
 DH173 = 065156
 DH174 = 065156
 DH175 = 065156
 DH176 = 065156
 DH177 = 065156
 DH2 = 063374
 DH20 = 064064
 DH200 = 065156
 DH201 = 065156
 DH202 = 065156
 DH203 = 065156
 DH204 = 065156
 DH205 = 063774
 DH206 = 065156
 DH207 = 065156
 DH21 = 063654
 DH210 = 065156
 DH211 = 066600
 DH212 = 063654
 DH213 = 063654
 DH22 = 064152
 DH23 = 064207
 DH24 = 064345
 DH25 = 064504
 DH26 = 064546
 DH27 = 064546
 DH3 = 063467
 DH30 = 000000
 DH31 = 064546
 DH32 = 064546
 DH33 = 064634
 DH34 = 064634
 DH35 = 064634
 DH36 = 064634
 DH37 = 064634
 DH4 = 063560
 DH40 = 064634
 DH41 = 000000
 DH42 = 064737
 DH43 = 064737
 DH44 = 000000
 DH45 = 065041
 DH46 = 065060
 DH47 = 065041
 DH5 = 063654
 DH50 = 065104
 DH51 = 065104
 DH52 = 063654
 DH53 = 064546
 DH54 = 065156
 DH55 = 063654
 DH56 = 064546
 DH57 = 065156

DH6 = 063654
 DH60 = 064546
 DH61 = 065156
 DH62 = 065156
 DH63 = 065156
 DH64 = 065266
 DH65 = 065217
 DH66 = 065156
 DH67 = 063654
 DH7 = 063654
 DH70 = 063654
 DH71 = 064504
 DH72 = 064546
 DH73 = 065156
 DH74 = 063654
 DH75 = 063654
 DH76 = 064504
 DH77 = 064546
 DISPLA = 001142
 DISPRE = 000174
 DPAT3 = 016432
 DSWR = 177570
 DT1 = 067720
 DT10 = 070040
 DT100 = 071354
 DT101 = 071432
 DT102 = 071432
 DT103 = 071432
 DT104 = 071354
 DT105 = 071432
 DT106 = 071500
 DT107 = 071432
 DT11 = 070040
 DT110 = 071354
 DT111 = 071520
 DT112 = 071520
 DT113 = 071520
 DT114 = 071520
 DT115 = 071520
 DT116 = 071520
 DT117 = 067764
 DT12 = 070062
 DT120 = 067764
 DT121 = 071244
 DT122 = 070650
 DT123 = 071276
 DT124 = 071532
 DT125 = 071532
 DT126 = 071520
 DT127 = 071520
 DT13 = 070150
 DT130 = 067764
 DT131 = 071616
 DT132 = 071616
 DT133 = 071660
 DT134 = 071660
 DT135 = 071660

DT136 = 071660
 DT137 = 071732
 DT14 = 070040
 DT140 = 071732
 DT141 = 071732
 DT142 = 071732
 DT143 = 071660
 DT144 = 071660
 DT145 = 071732
 DT146 = 071732
 DT147 = 071660
 DT15 = 070040
 DT150 = 071660
 DT151 = 071732
 DT152 = 071660
 DT153 = 071732
 DT154 = 071752
 DT155 = 071752
 DT156 = 071660
 DT157 = 071660
 DT16 = 070202
 DT160 = 071660
 DT161 = 071660
 DT162 = 071660
 DT163 = 071660
 DT164 = 067764
 DT165 = 067764
 DT166 = 071660
 DT167 = 071660
 DT17 = 067764
 DT170 = 071660
 DT171 = 071660
 DT172 = 071660
 DT173 = 071660
 DT174 = 071660
 DT175 = 071660
 DT176 = 071660
 DT177 = 071660
 DT2 = 067742
 DT20 = 070222
 DT200 = 071660
 DT201 = 071660
 DT202 = 071660
 DT203 = 071660
 DT204 = 071660
 DT205 = 067764
 DT206 = 071660
 DT207 = 071660
 DT21 = 070244
 DT210 = 071660
 DT211 = 071764
 DT212 = 072002
 DT213 = 072002
 DT22 = 070256
 DT23 = 070304
 DT24 = 070326
 DT25 = 070352

DT26 = 070422
 DT27 = 070476
 DT3 = 067764
 DT30 = 070540
 DT31 = 070422
 DT32 = 070476
 DT33 = 070572
 DT34 = 070650
 DT35 = 070650
 DT36 = 070650
 DT37 = 070650
 DT4 = 067764
 DT40 = 070572
 DT41 = 070722
 DT42 = 070754
 DT43 = 070754
 DT44 = 071032
 DT45 = 071102
 DT46 = 071156
 DT47 = 071244
 DT5 = 070006
 DT50 = 070650
 DT51 = 071276
 DT52 = 071244
 DT53 = 071334
 DT54 = 071354
 DT55 = 071244
 DT56 = 071334
 DT57 = 071354
 DT6 = 070040
 DT60 = 071334
 DT61 = 071354
 DT62 = 071354
 DT63 = 071354
 DT64 = 071412
 DT65 = 071412
 DT66 = 071354
 DT67 = 070244
 DT7 = 070040
 DT70 = 071432
 DT71 = 071432
 DT72 = 071500
 DT73 = 071354
 DT74 = 070244
 DT75 = 071432
 DT76 = 071432
 DT77 = 071500
 D1 = 005710
 D10 = 006112
 D2 = 005734
 D3 = 005736
 D4 = 005742
 D5 = 005754
 D6 = 005770
 D7 = 006000
 D8 = 006050
 D9 = 006062

EDONE = 006264
 EEDATO = 034102
 EEDONE = 034164
 EEERO = 033674
 EEER1 = 033712
 EEER2 = 033750
 EEER3 = 034006
 EEER4 = 034044
 EEP0 = 034112
 EEP1 = 034124
 EEP2 = 034134
 EEP3 = 034144
 EEP4 = 034154
 EERRO = 006202
 EERR1 = 006220
 EERR2 = 006234
 EE1 = 033414
 EE10 = 033634
 EE11 = 033644
 EE12 = 033652
 EE13 = 033670
 EE2 = 033444
 EE3 = 033466
 EE4 = 033506
 EE5 = 033516
 EE6 = 033524
 EE7 = 033542
 EE8 = 033572
 EE9 = 033614
 EMTVEC = 000030
 EM1 = 043061
 EM10 = 043267
 EM100 = 052171
 EM101 = 052231
 EM102 = 052355
 EM103 = 052427
 EM104 = 052532
 EM105 = 052573
 EM106 = 052720
 EM107 = 052773
 EM11 = 043410
 EM110 = 053077
 EM111 = 053141
 EM112 = 053141
 EM113 = 053243
 EM114 = 053243
 EM115 = 053141
 EM116 = 053243
 EM117 = 053345
 EM12 = 000000
 EM120 = 053501
 EM121 = 053635
 EM122 = 053754
 EM123 = 054053
 EM124 = 054114
 EM125 = 054207
 EM126 = 054277

EM127	054506	EM210	063227	ERRVEC=	000004	FF2	034220	GPAT02	014120
EM13	= 000000	EM211	= 043267	ERTYPE	037602	FF3	034242	GPAT03	014122
EM130	054721	EM212	= 043323	ERT1	037764	FF4	034250	GPAT10	014124
EM131	055021	EM213	= 043355	ERT2	040202	FF5	034260	GPAT11	014126
EM132	055061	EM22	044552	ERT3	040206	FF6	034310	GPAT12	014130
EM133	055121	EM23	= 044552	ERT4	040216	FF7	034332	GPAT13	014132
EM134	055160	EM24	= 044552	ERT5	040230	FPSMS	040565	GRESET	013650
EM135	055217	EM25	044637	E1	006140	FPSPUR	040234	GSETUP	013572
EM136	055256	EM26	044752	E2	006154	FPVECT=	000244	GSUM	014006
EM137	= 055121	EM27	= 044752	E3	006154	FXDAT0	010140	GS1	013622
EM14	043471	EM3	043162	E4	006156	FXDAT1	010142	GTSWR =	104405
EM140	= 055160	EM30	045020	FDATE0	010074	FXDAT2	010144	G1	011674
EM141	= 055217	EM31	045072	FDATE1	010076	FXDAT3	010146	G10	012172
EM142	= 055256	EM32	= 045072	FDATE2	010100	FXDAT4	010150	G11	012174
EM143	055315	EM33	045140	FDATE3	010102	FXDAT5	010152	G12	012262
EM144	055350	EM34	045201	FDATE4	010104	FXDAT6	010154	G13	012314
EM145	= 055315	EM35	045303	FDATE5	010106	FXDAT7	010156	G14	012316
EM146	= 055350	EM36	045405	FDATE6	010110	F1	006270	G15	012404
EM147	055403	EM37	045506	FDATE7	010112	F10	006502	G16	012436
EM15	043614	EM4	043227	FDATE00	010116	F11	006504	G17	012440
EM150	= 055403	EM40	045607	FDATE01	010120	F12	006522	G2	011726
EM151	= 055403	EM41	045760	FDATE02	010122	F13	006554	G20	012526
EM152	055435	EM42	046015	FDATE03	010124	F135	006534	G21	012560
EM153	= 055435	EM43	046136	FDATE04	010126	F14	006564	G22	012562
EM154	055467	EM44	046257	FDATE05	010130	F15	006574	G23	012650
EM155	055721	EM45	= 046257	FDATE06	010132	F16	006604	G24	012702
EM156	056154	EM46	046322	FDATE07	010134	F17	006614	G25	012704
EM157	056371	EM47	046400	FDONE	010160	F2	006322	G26	012772
EM16	043737	EM5	043267	FECMS	040631	F20	006624	G27	013024
EM160	056610	EM50	046516	FERR0	006666	F21	006634	G3	011730
EM161	057015	EM51	046614	FERR1	006724	F22	006644	G30	013026
EM162	057222	EM52	046655	FERR10	007504	F23	006662	G31	013114
EM163	057267	EM53	046776	FERR11	007540	F3	006342	G32	013146
EM164	057334	EM54	047173	FERR2	007022	F4	006344	G33	013150
EM165	057401	EM55	047237	FERR20	007560	F5	006362	G34	013236
EM166	057446	EM56	047360	FERR21	007676	F6	006436	G35	013270
EM167	057556	EM57	047555	FERR25	007726	F7	006462	G36	013272
EM17	044010	EM6	043323	FERR26	010044	GADR	014164	G37	013360
EM170	060015	EM60	047621	FERR3	007062	GAND0	014134	G4	012016
EM171	060125	EM61	050016	FERR4	007054	GAND1	014136	G40	013412
EM172	060364	EM62	050062	FERR5	007160	GAND2	014140	G41	013414
EM173	060623	EM63	050254	FERR6	007214	GAND3	014142	G42	013502
EM174	061062	EM64	050446	FERR7	007350	GCMP	013670	G43	013534
EM175	061321	EM65	= 050446	FERR8	007026	GDATE00	014154	G44	013536
EM176	061560	EM66	050602	FFDATE	034462	GDATE01	014156	G5	012050
EM177	061715	EM67	050645	FFDONE	034542	GDATE02	014160	G6	012052
EM2	043116	EM7	043355	FFERO	034352	GDATE03	014162	G7	012140
EM20	044243	EM70	051076	FFER1	034366	GDONE	014166	HADR	014716
EM200	062052	EM71	051221	FFER2	034424	GERR1	013716	HA1R	014772
EM201	062207	EM72	051323	FFP0	034472	GFLAG1	014110	HA1W	014722
EM202	062344	EM73	051377	FFP1	034502	GFLAG2	014112	HA2R	015002
EM203	062501	EM74	051437	FFP2	034512	GOR0	014144	HA2W	014732
EM204	062636	EM75	051670	FFP3	034522	GOR1	014146	HA3R	015012
EM205	062773	EM76	052013	FFP4	034532	GOR2	014150	HA3W	014742
EM206	063040	EM77	052115	FF1	034170	GOR3	014152	HA4R	015022
EM207	063105	ERM10	035550	FF10	034340	GPAT00	014114	HA4W	014752
EM21	044421	ERROR	= 104000	FF11	034350	GPAT01	014116	HA5R	015032

N9	017430	PERR13	020726	QERR22	021524	STFS1	041337	TERR1	011460
ODAT10	020510	PERR14	020744	QERR3	021552	STKLMT=	177774	TERR2	011500
ODAT11	020512	PERR15	020762	QERR4	021560	STST1	041467	TERR25	011514
ODAT12	020514	PERR16	020772	QPAT10	021634	ST1	041352	TERR3	011544
ODAT13	020516	PERR17	021000	QPAT11	021636	ST2	041367	TERR4	011526
ODAT00	020446	PERR2	021110	QPAT12	021640	SWR	001140	TKVEC =	000060
ODAT01	020450	PERR20	021026	QPAT13	021642	SWREG	000176	TPAT10	011570
ODAT02	020452	PERR21	021036	QPAT20	021644	SW0 =	000001	TPAT11	011572
ODAT03	020454	PERR22	021044	QPAT21	021646	SW00 =	000001	TPAT12	011574
ODONE	020520	PIRQ =	177772	QPAT22	021650	SW01 =	000002	TPAT13	011576
QERRO	020210	PIRQVE=	000240	QPAT23	021652	SW02 =	000004	TPAT20	011600
QERR1	020310	POWERM	040400	Q1	021200	SW03 =	000010	TPAT21	011602
QERR10	020242	PPAT10	021144	Q10	021336	SW04 =	000020	TPAT22	011604
QERR11	020254	PPAT11	021146	Q2	021222	SW05 =	000040	TPAT23	011606
QERR2	020344	PPAT12	021150	Q3 =	021224	SW06 =	000100	TPVEC =	000064
QERR20	020316	PPAT13	021152	Q4	021226	SW07 =	000200	TRAPVE=	000034
QERR3	020354	PROGNUM=	000001	Q5	021250	SW08 =	000400	TRTVEC=	000014
QERR4	020364	PRO =	000000	Q6	021272	SW09 =	001000	TST1	004270
QERR5	020374	PR1 =	000040	Q7	021302	SW1 =	000002	TST10	011024
QERR6	020420	PR2 =	000100	Q8	021314	SW10 =	002000	TST11	011632
OPAT10	020500	PR3 =	000140	Q9	021330	SW11 =	004000	TST12	014170
OPAT11	020502	PR4 =	000200	RDCHR =	104407	SW12 =	010000	TST13	015114
OPAT12	020504	PR5 =	000240	RESREG=	104411	SW13 =	020000	TST14	015650
OPAT13	020506	PR6 =	000300	RESVEC=	000010	SW14 =	040000	TST15	016144
OPAT20	020464	PR7 =	000340	RSETUP=	104412	SW15 =	100000	TST16	016436
OPAT21	020466	PS =	177776	R6 =	%000006	SW2 =	000004	TST17	016760
OPAT22	020470	PSW =	177776	R7 =	%000007	SW3 =	000010	TST2	004656
OPAT23	020472	PWRVEC=	000024	SADR	015622	SW4 =	000020	TST20	017310
OPAT24	020474	P1	020524	SAVREG=	104410	SW5 =	000040	TST21	020016
O1	020020	P2	020546	SCOPE =	000004	SW6 =	000100	TST22	020522
O10	020150	P3 =	020550	SDAT00	015636	SW7 =	000200	TST23	021176
O11	020160	P4	020552	SDAT01	015640	SW8 =	000400	TST24	021676
O12	020162	P5	020574	SDAT02	015642	SW9 =	001000	TST25	023012
O13	020176	P6	020616	SDAT03	015644	S1	015116	TST26	023570
O14	020206	P7	020626	SDONE	015646	S10	015264	TST27	024364
O2	020044	P8	020636	SERRO	015326	S11	015310	TST28	024760
O3	020046	QDAT10	021664	SERR1	015536	S12	015320	TST3	004760
O4	020050	QDAT11	021666	SERR10	015346	S2	015152	TST30	024770
O5	020066	QDAT12	021670	SERR15	015426	S3	015154	TST31	025272
O6	020076	QDAT13	021672	SERR2	015466	S4	015160	TST32	026324
O7	020106	QDAT00	021654	SERR20	015446	S5	015204	TST33	030112
O8	020122	QDAT01	021656	SERR3	015512	S6	015214	TST34	031416
O9	020134	QDAT02	021660	SERR4	015404	S7	015222	TST35	033412
PDAT10	021154	QDAT03	021662	SERR5	015570	S8	015256	TST36	034166
PDAT11	021156	QDONE	021674	SERR6	015500	S9	015260	TST37	034542
PDAT12	021160	QERRO	021342	SERR7	015524	TAB =	000011	TST4	005664
PDAT13	021162	QERR1	021606	SETD1	041414	TBITVE=	000014	TST5	006126
PDAT00	021164	QERR11	021352	SETF1	041406	TDAT10	011620	TST6	006266
PDAT01	021166	QERR12	021370	SETI1	041422	TDAT11	011622	TST7	010162
PDAT02	021170	QERR13	021406	SETL1	041430	TDAT12	011624	TYPE =	104401
PDAT03	021172	QERR14	021424	SPACE	040450	TDAT13	011626	TYPOC =	104402
PDONE	021174	QERR15	021442	SPAT10	015626	TDAT00	011610	TYPON =	104404
PERRO	020642	QERR16	021452	SPAT11	015630	TDAT01	011612	TYPOS =	104403
PERR1	021062	QERR17	021460	SPAT12	015632	TDAT02	011614	T1	011026
PERR10	020662	QERR2	021542	SPAT13	015634	TDAT03	011616	T10	011170
PERR11	020672	QERR20	021506	STACK =	001100	TDONE	011630	T105	011176
PERR12	020710	QERR21	021516	START	003606	TERR0	011376	T11	011200
								T12	011202

T13	011216	U14	022406	X1	023572	ZPAT01	025242	\$DDW8	001422
T14	011260	U15	022436	X10	023764	ZPAT02	025244	\$DDW9	001424
T15	011262	U16	022440	X11	024000	ZPAT03	025246	\$DEVCT	001326
T16	011264	U2	022010	X12	024034	ZPAT10	025250	\$DEVM	001374
T17	011302	U3	022042	X13	024060	ZPAT11	025252	\$DOAGN	034764
T2	011046	U4	022106	X14	024066	ZPAT12	025254	\$ENDAD	034754
T20	011342	U5	022140	X15	024102	ZPAT13	025256	\$ENDCT	034576
T21	011356	U6	022204	X16	024136	ZPAT20	025260	\$ENULL	035030
T22	011360	U7	022236	X17	024162	ZPAT21	025262	\$ENV	001336
T23	011372	WDAPO0	023556	X2	023626	ZPAT22	025264	\$ENVM	001337
T3	011114	WDAT01	023560	X20	024170	ZPAT23	025266	\$EOP	034542
T4	011116	WDAT02	023562	X21	024204	ZTMP1	025224	\$EOPCT	034570
T5	011120	WDAT03	023564	X3	023652	ZTMP2	025226	\$ERFLG	001103
T6	011144	WDONE	023566	X4	023660	Z1	025012	\$ERMAX	001115
T7	011160	WPAT00	023546	X5	023676	Z2	025034	\$ERROR	035314
UDONE	023012	WPAT01	023550	X6	023732	Z3	025060	\$ERRPC	001116
UERR0	022456	WPAT02	023552	X7	023756	Z4	025066	\$ERRTB	001442
UERR1	022502	WPAT03	023554	YDAT00	024726	Z5	025100	\$ERTTL	001112
UERR10	022510	WSETUP	023514	YDAT01	024730	Z6	025132	\$ESCAP	001304
UERR11	022552	W1	023014	YDAT02	024732	\$APTHD	003572	\$ETABL	001336
UERR2	022566	W10	023226	YDAT03	024734	\$ATYC	036452	\$ETEND	001442
UERR20	022574	W11	023254	YDONE	024766	\$ATY1	036426	\$FATAL	001320
UERR21	022636	W12	023304	YERR1	024566	\$ATY3	036434	\$FFLG	036672
UERR3	022652	W13	023330	YERR2	024630	\$ATY4	036444	\$FILLC	001156
UERR4	022702	W14	023344	YERR3	024672	\$AUTOB	001134	\$FILLS	001155
UFLAG	022776	W15	023372	YFLAG	024716	\$BASE	001372	\$GDADR	001120
UPAT00	022726	W16	023426	YPAT00	024736	\$BDADR	001122	\$GDDAT	001124
UPAT01	022730	W17	023452	YPAT01	024740	\$BDDAT	001126	\$GET42	034726
UPAT02	022732	W2	023044	YPAT02	024742	\$BELL	001306	\$GTSWR	036744
UPAT03	022734	W20	023466	YPAT03	024744	\$CDW1	001376	\$HD =	000003
UPAT10	022736	W3	023070	YPAT10	024746	\$CDW2	001400	\$HIBTS	003572
UPAT11	022740	W4	023106	YPAT11	024750	\$CHARC	036174	\$ICNT	001104
UPAT12	022742	W5	023136	YPAT12	024752	\$CKSWR	036674	\$ILLUP	037574
UPAT13	022744	W6	023172	YPAT13	024754	\$CLR.T	034744	\$INTAG	001135
UPAT20	022746	W7	023216	YPAT20	024756	\$CMTAG	001100	\$ITEMB	001114
UPAT21	022750	XAPT11	024344	YPAT21	024760	\$CM1 =	000024	\$LF	001314
UPAT22	022752	XDAT00	024322	YPAT22	024762	\$CM2 =	000050	\$LFLG	036671
UPAT23	022754	XDAT01	024324	YPAT23	024764	\$CM3 =	000024	\$LOOP	035022
UPAT30	022756	XDAT02	024326	YTMP1	024720	\$CM4 =	000024	\$LPADR	001106
UPAT31	022760	XDAT03	024330	YTMP2	024722	\$CNTLG	037303	\$LPERR	001110
UPAT32	022762	XDONE	024362	YTMP3	024724	\$CNTLU	037276	\$MADR1	001350
UPAT33	022764	XERR1	024206	Y1	024414	\$CPUOP	001344	\$MADR2	001354
UPAT40	022766	XERR2	024270	Y2	024436	\$CRLF	001313	\$MADR3	001360
UPAT41	022770	XERR3	024234	Y3	024462	\$DDW0	001402	\$MADR4	001364
UPAT42	022772	XERR4	024304	Y4	024500	\$DDW1	001404	\$MAIL	001316
UPAT43	022774	XPAT00	024332	Y5	024540	\$DDW10	001426	\$MAMS1	001346
UROM1	023004	XPAT01	024334	Y6	024542	\$DDW11	001430	\$MAMS2	001352
UROM2	023006	XPAT02	024336	Y7	024556	\$DDW12	001432	\$MAMS3	001356
UROM3	023010	XPAT03	024340	ZDAT00	025230	\$DDW13	001434	\$MAMS4	001362
UTMP1	023000	XPAT10	024342	ZDAT01	025232	\$DDW14	001436	\$MBADR	003574
UTMP2	023002	XPAT12	024346	ZDAT02	025234	\$DDW15	001440	\$MFLG	036670
U0	021714	XPAT13	024350	ZDAT03	025236	\$DDW2	001406	\$MNEW	037321
U1	021744	XPAT20	024352	ZDONE	025270	\$DDW3	001410	\$MSGAD	001332
U10	022302	XPAT21	024354	ZERR1	025134	\$DDW4	001412	\$MSGLG	001334
U11	022304	XPAT22	024356	ZERR2	025176	\$DDW5	001414	\$MSGTY	001316
U12	022336	XPAT23	024360	ZFLAG	025222	\$DDW6	001416	\$MSWR	037310
U13	022354	XTMP	024320	ZPAT00	025240	\$DDW7	001420	\$MTYP1	001347

\$MTYP2	001353	\$REG11	001204	\$SCOPE	035034	\$TMP13	001260	\$TRP	= 000014
\$MTYP3	001357	\$REG12	001206	\$SETUP=	000137	\$TMP14	001262	\$TRPAD	037366
\$MTYP4	001363	\$REG13	001210	\$STUP =	177777	\$TMP15	001264	\$TSTM	003576
\$MXCNT	035312	\$REG14	001212	\$SVLAD	035242	\$TMP16	001266	\$TSTNM	001102
\$NULL	001154	\$REG15	001214	\$SVPC =	003572	\$TMP17	001270	\$TYPE	035646
\$NWTST=	000001	\$REG16	001216	\$SWR =	177400	\$TMP2	001236	\$TYPEC	036060
\$OCNT	036422	\$REG17	001220	\$SWREG	001340	\$TMP20	001272	\$TYPEX	036176
\$OMODE	036424	\$REG2	001166	\$SWRMK=	000000	\$TMP21	001274	\$TYPOC	036224
\$OVER	035276	\$REG20	001222	\$SWRMS=	000200	\$TMP22	001276	\$TYPON	036240
\$PASS	001324	\$REG21	001224	\$TAB	040446	\$TMP23	001300	\$TYPOS	036200
\$PASTM	003600	\$REG22	001226	\$TBIT	035026	\$TMP3	001240	\$UNIT	001330
\$PRAD	037556	\$REG23	001230	\$TERM =	000030	\$TMP4	001242	\$UNITM	003602
\$PRDN	037416	\$REG3	001170	\$TESTN	001322	\$TMP5	001244	\$USWR	001342
\$PRMG	037552	\$REG4	001172	\$THE	040642	\$TMP6	001246	\$VECT1	001366
\$PRUP	037470	\$REG5	001174	\$TIMES	001302	\$TMP7	001250	\$VECT2	001370
\$QUES	001312	\$REG6	001176	\$TKB	001146	\$TN =	000037	\$XTSTR	035046
\$RDCHR	037156	\$REG7	001200	\$TKS	001144	\$TPB	001152	\$GET4=	000001
\$RDSZ =	000001	\$RESRE	035610	\$TMP0	001232	\$TPFLG	001157	\$OFILL	036423
\$REGAD	001160	\$RTNAD	035024	\$TMP1	001234	\$TPS	001150	.LPER	040322
\$REGO	001162	\$RTRN	035020	\$TMP10	001252	\$TRAP	037332	.RSET	040330
\$REG1	001164	\$SAVRE	035552	\$TMP11	001254	\$TRAP2	037354	.\$X =	003572
\$REG10	001202	\$SAVR6	037600	\$TMP12	001256				

. ABS. 072014 000
000000 001

ERRORS DETECTED: 0

VIRTUAL MEMORY USED: 57440 WORDS (225 PAGES)

DYNAMIC MEMORY: 20434 WORDS (78 PAGES)

ELAPSED TIME: 00:13:37

CKFPAA0,CKFPAA0/NL:TOC/CRF/-SP=CKFPAA0.MLB/ML,CKFPAA0.P11

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES
AADATO		026222	15-4571 15-4578 17-4600 17-4607 17-4612 17-4638 17-4645 17-4683 17-4689
AADONE		026322	17-4697 17-4703 17-4708 17-4714 #17-4718 17-4699 17-4705 17-4711 17-4717 #17-4750
AAERRO		025654	17-4653 17-4673 17-4685
AAERR1		025742	15-4563 #17-4657
AAERR2		025776	17-4584 #17-4680
AAERR3		026032	17-4586 #17-4686
AAERR4		026042	17-4616 #17-4692
AAERR5		026076	17-4618 #17-4694
AAERR6		026132	17-4620 #17-4700
AAERR7		026166	17-4649 #17-4706
AAER10		025750	17-4651 #17-4712
AAPATO		026232	#17-4681 17-4693 15-4564 17-4594 17-4628 17-4681 17-4687 17-4695 17-4701 17-4707 17-4713
AAPAT1		026242	#17-4722 15-4568 17-4597 17-4682 17-4688 17-4696 17-4702 #17-4726
AAPAT2		026252	15-4573 17-4606 17-4644 17-4680 17-4686 #17-4730
AAPAT3		026262	15-4577 17-4602 17-4692 17-4694 17-4700 #17-4734
AAPAT4		026272	17-4611 #17-4738
AAPAT5		026302	17-4632 17-4706 17-4712 #17-4742
AAPAT6		026312	17-4640 17-4709 17-4715 #17-4746
AA1		025274	#15-4560
AA10		025410	#17-4591
AA11		025440	17-4596 #17-4598
AA12		025442	#17-4600
AA13		025460	#17-4604 17-4621
AA14		025500	#17-4609 17-4619
AA15		025520	#17-4614 17-4617
AA16		025526	17-4615 #17-4617
AA17		025532	17-4610 #17-4619
AA2		025332	15-4567 #15-4569
AA20		025536	17-4605 #17-4621
AA21		025540	#17-4625
AA22		025572	17-4631 #17-4633
AA23		025574	#17-4635
AA24		025614	#17-4642 17-4652
AA25		025634	#17-4647 17-4650
AA26		025642	17-4648 #17-4650
AA27		025646	17-4643 #17-4652
AA3		025334	#15-4571
AA4		025352	#15-4575 17-4587
AA5		025372	#16-4581 17-4585
AA6		025400	17-4583 #17-4585
AA7		025406	15-4576 #17-4587
ABASE	=	000000	8-1126 8-1126
ACDW1	=	000000	8-1126 8-1126
ACDW2	=	000000	8-1126 8-1126
ACPUOP	=	000000	8-1126 8-1126
ACO	=	%000000	#7-1115 *11-1686 11-1725 *12-2055 *12-2061 12-2066 *12-2105 *12-2112 12-2125
			*12-2230 12-2239 *12-2273 12-2282 *12-2519 12-2519 *12-2519 12-2519 *12-2519
			12-2519 *12-2520 12-2520 *12-2520 12-2520 *12-2520 12-2520 *12-2521 12-2521
			*12-2521 12-2521 *12-2522 12-2522 *12-2522 12-2522 *12-2523 12-2523 *12-2523
			12-2523 *12-2524 12-2524 *12-2524 12-2524 *12-2524 12-2524 *12-2525 12-2525 *12-2525

REFERENCES

		*12-2526	12-2526	*12-2526	12-2526	*12-2527	12-2527	*12-2527	12-2527	*12-2528
		12-2528	*12-2528	12-2528	*12-2529	12-2529	*12-2529	12-2529	*12-2530	12-2530
		*12-2530	12-2530	*13-2667	13-2667	*13-2668	13-2668	*13-2669	13-2669	*13-2670
		13-2670	*13-2671	13-2671	*13-2677	13-2677	*13-2678	13-2678	*13-2679	13-2679
		*13-2680	13-2680	*13-2681	13-2681	*13-2692	13-2692	*13-2693	13-2693	*13-2694
		13-2694	*13-2695	13-2695	*13-2696	13-2696	*13-2764	*13-2774	13-2780	*13-2797
		*13-2804	13-2810	*13-2925	*13-2931	13-2936	*13-3024	*13-3030	13-3035	*13-3121
		*13-3134	13-3141	*13-3222	*13-3227	13-3241	*14-3326	*14-3333	14-3338	*14-3469
		*14-3477	14-3482	*14-3613	*14-3619	14-3623	*14-3734	*14-3742	14-3746	*14-3890
		*14-3896	*14-3912	*14-3919	*15-3933	*15-3939	*15-3951	*15-3956	*15-3982	*15-3984
		*15-4095	*15-4098	15-4102	*15-4123	*15-4128	15-4132	*15-4151	*15-4154	15-4158
		*15-4179	*15-4184	15-4188	*15-4238	*15-4241	15-4245	*15-4261	*15-4264	15-4268
		*15-4284	*15-4287	15-4291	*15-4307	*15-4310	15-4314	*15-4391	*15-4393	15-4397
		*15-4486	*15-4488	15-4492	*15-4566	*15-4569	15-4572	*17-4595	*17-4598	17-4601
		*17-4629	*17-4633	17-4639	*17-4768	*17-4770	17-4773	*17-4796	*17-4798	17-4801
		*17-4822	*17-4826	17-4830	*17-4851	*17-4855	17-4859	*17-4882	*17-4884	17-4887
		*17-4910	*17-4912	17-4915	*17-5066	*17-5068	17-5071	*17-5088	*17-5090	17-5093
		*17-5114	*17-5119	17-5123	*17-5137	*17-5141	17-5145	*17-5168	*17-5170	17-5173
		*17-5189	*17-5191	17-5194	*19-5311	*19-5313	19-5316	*19-5340	*19-5342	19-5345
		*19-5362	*19-5364	19-5367	*19-5384	*19-5386	19-5389	*19-5412	*19-5414	19-5417
		*19-5440	*19-5442	19-5445	*19-5469	*19-5471	19-5474	*19-5568	*19-5570	19-5573
		*19-5597	*19-5599	19-5602	*19-5671	*19-5673	19-5676	*19-5693	*19-5695	19-5698
AC1	=%000001	#7-1116	*12-2052	12-2061	*12-2102	12-2112	*12-2233	*12-2239	12-2244	*12-2276
		*12-2282	12-2296	*12-2521	12-2521	*12-2522	12-2522	*13-2667	*13-2677	13-2692
AC2	=%000002	#7-1117	*12-2523	12-2523	*12-2524	12-2524	*13-2668	*13-2678	13-2693	
AC3	=%000003	#7-1118	*12-2525	12-2525	*12-2526	12-2526	*13-2669	*13-2679	13-2694	
AC4	=%000004	#7-1119	*12-2527	12-2527	*12-2528	12-2528	*13-2670	*13-2680	13-2695	
AC5	=%000005	#7-1120	*12-2529	12-2529	*12-2530	12-2530	*13-2671	*13-2681	13-2696	
AC6	=%000006	#7-1121	13-2804							
AC7	=%000007	#7-1122	13-2774							
ADDW0	= 000000	8-1126	8-1126							
ADDW1	= 000000	8-1126	8-1126							
ADDW10	= 000000	8-1126	8-1126							
ADDW11	= 000000	8-1126	8-1126							
ADDW12	= 000000	8-1126	8-1126							
ADDW13	= 000000	8-1126	8-1126							
ADDW14	= 000000	8-1126	8-1126							
ADDW15	= 000000	8-1126	8-1126							
ADDW2	= 000000	8-1126	8-1126							
ADDW3	= 000000	8-1126	8-1126							
ADDW4	= 000000	8-1126	8-1126							
ADDW5	= 000000	8-1126	8-1126							
ADDW6	= 000000	8-1126	8-1126							
ADDW7	= 000000	8-1126	8-1126							
ADDW8	= 000000	8-1126	8-1126							
ADDW9	= 000000	8-1126	8-1126							
ADEVCT	= 000000	8-1126	8-1126							
ADEVN	= 000000	8-1126	8-1126							
ADONE	= 004654	9-1217	9-1221	9-1229	9-1237	9-1250	9-1263	#9-1269		
AENV	= 000000	8-1126	8-1126							
AENVN	= 000000	8-1126	8-1126							
AERFLG	= 004544	9-1167	9-1198	9-1204	9-1216	#9-1231	22-6694			

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES								
AERR1		004546	9-1170	#9-1234							
AERR2		004560	9-1171	#9-1240							
AERR3		004612	9-1175	#9-1253							
AFATAL	=	000000	8-1126	8-1126							
AMADR1	=	000000	8-1126	8-1126							
AMADR2	=	000000	8-1126	8-1126							
AMADR3	=	000000	8-1126	8-1126							
AMADR4	=	000000	8-1126	8-1126							
AMAMS1	=	000000	8-1126	8-1126							
AMAMS2	=	000000	8-1126	8-1126							
AMAMS3	=	000000	8-1126	8-1126							
AMAMS4	=	000000	8-1126	8-1126							
AMSGAD	=	000000	8-1126	8-1126							
AMSGLG	=	000000	8-1126	8-1126							
AMSGTY	=	000000	8-1126	8-1126							
AMTYP1	=	000000	8-1126	8-1126							
AMTYP2	=	000000	8-1126	8-1126							
AMTYP3	=	000000	8-1126	8-1126							
AMTYP4	=	000000	8-1126	8-1126							
APASS	=	000000	8-1126	8-1126							
APRIOR	=	000000	8-1126								
APTCSU	=	000040	19-5761	#19-5765							
APTENV	=	000001	19-5757	19-5761	19-5765	#19-5765					
APTSIZ	=	000200	9-1139	#19-5765							
APTSP0	=	000100	19-5761	19-5765	#19-5765						
ASWREG	=	000000	8-1126	8-1126							
ATESTN	=	000000	8-1126	8-1126							
AUNIT	=	000000	8-1126	8-1126							
AUSWR	=	000000	8-1126	8-1126							
AVECT1	=	000000	8-1126	8-1126							
AVECT2	=	000000	8-1126	8-1126							
A05		004462	9-1205	#9-1214							
A1		004334	#9-1179	9-1195	9-1208						
A11		004334	#9-1180	9-1240	9-1253						
A12		004350	#9-1185	9-1242	9-1255						
A2		004406	#9-1195	9-1214							
A3		004412	9-1193	#9-1198							
A4		004460	#9-1212								
A5		004464	9-1196	#9-1216							
A6		004512	9-1219	#9-1223							
A7		004536	9-1226	#9-1228							
BBDATO		031264	17-5070	17-5092	17-5098	17-5122	17-5144	17-5150	17-5172	17-5193	17-5217
			17-5226	17-5232	19-5243	#19-5252					
BBDONE		031414	17-5203	17-5208	17-5213	17-5219	17-5228	17-5234	19-5245	#19-5296	
BBERO		030752	17-5062	17-5081	17-5109	17-5182	17-5202	#17-5204			
BBER1		031012	17-5076	#17-5214							
BBER10		030772	17-5132	17-5161	#17-5209						
BBER11		031026	#17-5216	17-5222	19-5248	19-5251					
BBER2		031050	17-5103	#17-5220							
BBER3		031066	17-5105	#17-5223							
BBER4		031122	17-5128	#17-5229							
BBER40		031136	#17-5231	17-5237							

SYMBOL CROSS REFERENCE		REFERENCES							
SYMBOL	VALUE								
BBER5	031156	17-5155	#17-5235						
BBER6	031174	17-5157	#18-5239						
BBER7	031230	17-5178	#19-5246						
BBER8	031246	7-5199	#19-5249						
BBPAT0	031274	-5113	17-5124	17-5229	17-5230	#19-5256			
BBPAT1	031304	17-5067	17-5089	17-5118	17-5140	17-5169	17-5190	17-5216	17-5225 17-5231
		19-5242	19-5247	#19-5260					
BBPAT2	031314	17-5065	17-5072	17-5214	17-5215	#19-5264			
BBPAT3	031324	17-5136	17-5151	17-5235	18-5239	#19-5268			
BBPAT4	031334	17-5087	17-5099	17-5220	17-5223	#19-5272			
BBPAT5	031344	17-5167	19-5246	#19-5276					
BBPAT6	031354	17-5188	17-5195	19-5249	19-5250	#19-5280			
BBP10	031374	17-5094	17-5221	17-5224	#19-5288				
BBP11	031404	17-5174	#19-5292						
BBP7	031364	17-5146	17-5236	19-5241	#19-5284				
BB1	030114	#17-5059							
BB10	030270	#17-5096	17-5106						
BB11	030310	#17-5101	17-5104						
BB12	030320	17-5102	#17-5104						
BB13	030326	17-5097	#17-5106						
BB14	030340	17-5108	#17-5111						
BB15	030370	17-5112	#17-5119						
BB16	030414	#17-5126	17-5129						
BB17	030424	17-5127	#17-5129						
BB2	030152	17-5063	#17-5068						
BB20	030436	17-5131	#17-5134						
BB21	030466	17-5135	#17-5141						
BB22	030512	#17-5148	17-5158						
BB23	030532	#17-5153	17-5156						
BB24	030542	17-5154	#17-5156						
BB25	030550	17-5149	#17-5158						
BB26	030562	17-5160	#17-5163						
BB27	030612	17-5164	#17-5170						
BB3	030156	#17-5070							
BB30	030634	#17-5176	17-5179						
BB31	030644	17-5177	#17-5179						
BB32	030656	17-5181	#17-5184						
BB33	030706	17-5185	#17-5191						
BB34	030730	#17-5197	17-5200						
BB35	030740	17-5198	#17-5200						
BB4	030174	#17-5074	17-5077						
BB5	030204	17-5075	#17-5077						
BB6	030216	17-5080	#17-5083						
BB7	030246	17-5086	#17-5090						
BDONE	004756	9-1293	#11-1315						
BERR	004712	9-1290	#9-1295						
BERR1	004742	11-1302	#11-1309						
BIT0	= 000001	#7-1113							
BIT00	= 000001	#7-1113	7-1113						
BIT01	= 000002	#7-1113	7-1113						
BIT02	= 000004	#7-1113	7-1113						
BIT03	= 000010	#7-1113	7-1113						

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES										
BIT04	=	000020	#7-1113	7-1113									
BIT05	=	000040	#7-1113	7-1113									
BIT06	=	000100	#7-1113	7-1113									
BIT07	=	000200	#7-1113	7-1113									
BIT08	=	000400	#7-1113	7-1113	19-5755								
BIT09	=	001000	#7-1113	7-1113	19-5755	19-5757	19-5757						
BIT1	=	000002	#7-1113										
BIT10	=	002000	#7-1113	19-5757									
BIT11	=	004000	#7-1113	19-5755									
BIT12	=	010000	#7-1113	19-5753									
BIT13	=	020000	#7-1113	19-5757									
BIT14	=	040000	#7-1113	19-5755									
BIT15	=	100000	#7-1113										
BIT2	=	000004	#7-1113										
BIT3	=	000010	#7-1113										
BIT4	=	000020	#7-1113										
BIT5	=	000040	#7-1113										
BIT6	=	000100	#7-1113										
BIT7	=	000200	#7-1113										
BIT8	=	000400	#7-1113										
BIT9	=	001000	#7-1113										
BPTVEC	=	000014	#7-1113										
B1		004666	#9-1281	9-1292									
B2		004670	#9-1284	9-1297									
B3		004706	#9-1292	11-1307	11-1313								
CCDATO		027750	17-4772	17-4778	17-4800	17-4806	17-4829	17-4835	17-4858	17-4864	17-4886		
			17-4892	17-4914	17-4920	17-4944	17-4950	17-4959	17-4965	17-4971	17-4979		
			#17-4995										
CCDONE		030110	17-4932	17-4936	17-4940	17-4946	17-4952	17-4961	17-4967	17-4973	17-4982		
			#17-5044										
CCERO		027312	17-4789	17-4817	17-4903	17-4931	#17-4933						
CCER1		027346	17-4783	#17-4941									
CCER10		027660	17-4897	#17-4983									
CCER11		027676	17-4899	#17-4986									
CCER12		027714	17-4925	#17-4989									
CCER13		027732	17-4927	#17-4992									
CCER2		027404	17-4785	#17-4947									
CCER22		027420	#17-4949	17-4994									
CCER3		027442	17-4811	#17-4953									
CCER4		027460	17-4813	#17-4956									
CCER44		027474	#17-4958	17-4988									
CCER5		027516	17-4840	#17-4962									
CCER50		027362	#17-4943	17-4955	17-4985	17-4991							
CCER55		027532	#17-4964	17-4976									
CCER6		027552	17-4842	#17-4968									
CCER7		027606	17-4869	#17-4974									
CCER8		027624	17-4871	#17-4977									
CCER90		027330	17-4846	17-4875	#17-4937								
CCPO		027760	17-4767	17-4779	17-4795	17-4821	17-4881	17-4909	17-4943	17-4949	17-4958		
			17-4964	17-4970	17-4980	#17-4999							
CCP1		027770	17-4797	17-4807	17-4953	17-4956	#17-5003						
CCP10		030060	17-4860	17-4975	17-4978	#17-5031							

SYMBOL	CROSS REFERENCE	SYMBOL	VALUE	REFERENCES						
CCP11			030070	17-4888	17-4984	17-4987	#17-5035			
CCP12			030100	#17-5039						
CCP2			030000	17-4769	17-4774	17-4941	17-4942	17-4947	17-4948	#17-5007
CCP3			030010	17-4836	17-4850	17-4883	17-4893	17-4983	17-4986	#17-5011
CCP4			030020	17-4911	17-4916	17-4921	17-4989	17-4990	17-4992	17-4993 #17-5015
CCP5			030030	17-4854	17-4865	17-4974	17-4977	#17-5019		
CCP6			030040	17-4825	17-4831	17-4962	17-4963	17-4968	17-4969	#17-5023
CCP7			030050	17-4802	17-4954	17-4957	#17-5027			
CC1			026326	#17-4763						
CC10			026542	#17-4809	17-4812					
CC11			026552	17-4810	#17-4812					
CC12			026560	17-4805	#17-4814					
CC13			026572	17-4816	#17-4819					
CC14			026622	17-4820	#17-4826					
CC15			026646	#17-4833	17-4843					
CC16			026666	#17-4838	17-4841					
CC17			026676	17-4839	#17-4841					
CC18			026704	17-4834	#17-4843					
CC19			026716	17-4845	#17-4848					
CC2			026356	17-4766	#17-4770					
CC20			026746	17-4849	#17-4855					
CC21			026772	#17-4862	17-4872					
CC22			027012	#17-4867	17-4870					
CC23			027022	17-4868	#17-4870					
CC24			027030	17-4863	#17-4872					
CC25			027042	17-4874	#17-4877					
CC26			027072	17-4880	#17-4884					
CC27			027114	#17-4890	17-4900					
CC28			027134	#17-4895	17-4898					
CC29			027144	17-4896	#17-4898					
CC3			026400	#17-4776	17-4786					
CC30			027152	17-4891	#17-4900					
CC31			027164	17-4902	#17-4905					
CC32			027214	17-4908	#17-4912					
CC33			027236	#17-4918	17-4928					
CC34			027256	#17-4923	17-4926					
CC35			027266	17-4924	#17-4926					
CC36			027274	17-4919	#17-4928					
CC37			027306	17-4930	#17-4932					
CC4			026420	#17-4781	17-4784					
CC5			026430	17-4782	#17-4784					
CC6			026436	17-4777	#17-4786					
CC7			026450	17-4788	#17-4791					
CC8			026500	17-4794	#17-4798					
CC9			026522	#17-4804	17-4814					
CDONE			005662	11-1441	#11-1507					
CERR1			005416	11-1341	11-1382	11-1398	11-1439	#11-1444		
CERR2			005514	11-1354	11-1369	11-1411	11-1426	#11-1466		
CERR3			005614	11-1458	11-1464	11-1482	11-1488	#11-1491		
CERR4			005636	11-1447	11-1471	#11-1498				
CFCC1			041400	#20-6040						
CKSWR	=		104406	19-5755	19-5757	19-5757	#19-5769	20-5996		

SYMBOL CROSS REFERENCE

SYMBOL	VALUE	REFERENCES
DDONE	006124	11-1557 #11-1599
DDP0	033270	19-5346 19-5368 19-5499 19-5500 #19-5513
DDP1	033300	19-5310 19-5312 19-5341 19-5361 19-5497 19-5498 19-5498 19-5499
DDP2	033310	19-5500 #19-5517
DDP3	033320	19-5339 19-5363 19-5499 19-5500 #19-5521
DDP4	033330	19-5383 19-5413 19-5501 19-5502 19-5503 19-5504 #19-5525
DDP5	033340	19-5322 19-5439 19-5470 19-5505 19-5506 19-5507 19-5508 #19-5508 #19-5529
DDP6	033350	19-5441 19-5468 19-5505 19-5506 19-5507 19-5508 #19-5533
DDP7	033360	19-5385 19-5411 19-5501 19-5502 19-5503 19-5504 #19-5537
DDP8	033370	19-5390 19-5418 19-5451 19-5480 19-5501 19-5502 19-5503 19-5504 #19-5541
DDP9	033400	19-5395 19-5423 19-5446 19-5475 19-5505 19-5506 19-5507 19-5508 #19-5545
DD1	031420	19-5317 19-5497 19-5498 #19-5549
DD10	031620	#19-5306
DD11	031630	#19-5348 19-5351
DD12	031646	19-5349 #19-5351
DD13	031676	19-5354 #19-5357
DD14	031720	19-5360 #19-5364
DD15	031730	#19-5370 19-5373
DD16	031746	19-5371 #19-5373
DD17	031776	19-5376 #19-5379
DD18	032020	19-5382 #19-5386
DD19	032040	#19-5392 19-5402
DD2	031450	#19-5397 19-5400
DD20	032050	19-5309 #19-5313
DD21	032056	19-5398 #19-5400
DD22	032070	19-5393 #19-5402
DD23	032120	19-5404 #19-5407
DD24	032142	19-5410 #19-5414
DD25	032162	#19-5420 19-5430
DD26	032172	#19-5425 19-5428
DD27	032200	19-5426 #19-5428
DD3	031472	19-5421 #19-5430
DD30	032212	#19-5319 19-5329
DD31	032242	19-5432 #19-5435
DD32	032264	19-5438 #19-5442
DD33	032304	#19-5448 19-5458
DD34	032314	#19-5453 19-5456
DD35	032322	19-5454 #19-5456
DD36	032340	19-5449 #19-5458
DD37	032370	19-5461 #19-5464
DD38	032412	19-5467 #19-5471
DD39	032432	#19-5477 19-5487
DD4	031512	#19-5482 19-5485
DD40	032442	#19-5324 19-5327
DD41	032450	19-5483 #19-5485
DD42	032466	19-5478 #19-5487
DD5	031522	19-5490 #19-5492
DD6	031530	19-5325 #19-5327
DD7	031546	19-5320 #19-5329
DD8	031576	19-5332 #19-5335
DERR1	006004	19-5338 #19-5342
		11-1533 #11-1561

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES								
DFRR2		006100	11-1532	#11-1589							
DF1		066645	9-1132	#20-6547							
DF10	=	066675	9-1132	#22-6556							
DF100	=	067472	9-1132	#22-6612							
DF101	=	067517	9-1132	#22-6613							
DF102	=	067541	9-1132	#22-6614							
DF103	=	067517	9-1132	#22-6615							
DF104	=	067472	9-1132	#22-6616							
DF105	=	067517	9-1132	#22-6617							
DF106	=	067541	9-1132	#22-6618							
DF107	=	067517	9-1132	#22-6619							
DF11	=	066675	9-1132	#22-6557							
DF110	=	067472	9-1132	#22-6620							
DF111		067550	9-1132	#22-6621	22-6622	22-6623	22-6624	22-6625	22-6626	22-6634	22-6635
DF112	=	067550	9-1132	#22-6622							
DF113	=	067550	9-1132	#22-6623							
DF114	=	067550	9-1132	#22-6624							
DF115	=	067550	9-1132	#22-6625							
DF116	=	067550	9-1132	#22-6626							
DF117	=	066665	9-1132	#22-6627							
DF12		066711	9-1132	#22-6558							
DF120	=	066665	9-1132	#22-6628							
DF121	=	067404	9-1132	#22-6629							
DF122	=	067421	9-1132	#22-6630							
DF123	=	067445	9-1132	#22-6631							
DF124		067554	9-1132	#22-6632	22-6633						
DF125	=	067554	9-1132	#22-6633							
DF126	=	067550	9-1132	#22-6634							
DF127	=	067550	9-1132	#22-6635							
DF13		066743	9-1132	#22-6559							
DF130	=	066665	9-1132	#22-6636							
DF131		067605	9-1132	#22-6637	22-6638						
DF132	=	067605	9-1132	#22-6638							
DF133		067625	9-1132	#22-6639	22-6640	22-6641	22-6642	22-6647	22-6648	22-6651	22-6652
			22-6654	22-6658	22-6659	22-6660	22-6662	22-6666	22-6667	22-6670	22-6671
			22-6674	22-6675	22-6676	22-6677	22-6678	22-6679	22-6680	22-6682	22-6683
			22-6684								
DF134	=	067625	9-1132	#22-6640							
DF135	=	067625	9-1132	#22-6641							
DF136	=	067625	9-1132	#22-6642							
DF137		067651	9-1132	#22-6643	22-6644	22-6645	22-6646	22-6649	22-6650	22-6653	22-6655
DF14	=	066675	9-1132	#22-6560							
DF140	=	067651	9-1132	#22-6644							
DF141	=	067651	9-1132	#22-6645							
DF142	=	067651	9-1132	#22-6646							
DF143	=	067625	9-1132	#22-6647							
DF144	=	067625	9-1132	#22-6648							
DF145	=	067651	9-1132	#22-6649							
DF146	=	067651	9-1132	#22-6650							
DF147	=	067625	9-1132	#22-6651							
DF15	=	066675	9-1132	#22-6561							
DF150	=	067625	9-1132	#22-6652							

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES							
DF151	=	067651	9-1132	#22-6653						
DF152	=	067625	9-1132	#22-6654						
DF153	=	067651	9-1132	#22-6655						
DF154	=	067661	9-1132	#22-6656	22-6657					
DF155	=	067661	9-1132	#22-6657						
DF156	=	067625	9-1132	#22-6658						
DF157	=	067625	9-1132	#22-6659						
DF16	=	066757	9-1132	#22-6562						
DF160	=	067625	9-1132	#22-6660						
DF161	=	067665	9-1132	#22-6661	22-6663	22-6668	22-6669	22-6672	22-6673	
DF162	=	067625	9-1132	#22-6662						
DF163	=	067665	9-1132	#22-6663						
DF164	=	066665	9-1132	#22-6664						
DF165	=	066665	9-1132	#22-6665						
DF166	=	067625	9-1132	#22-6666						
DF167	=	067625	9-1132	#22-6667						
DF17	=	066665	9-1132	#22-6563						
DF170	=	067665	9-1132	#22-6668						
DF171	=	067665	9-1132	#22-6669						
DF172	=	067625	9-1132	#22-6670						
DF173	=	067625	9-1132	#22-6671						
DF174	=	067665	9-1132	#22-6672						
DF175	=	067665	9-1132	#22-6673						
DF176	=	067625	9-1132	#22-6674						
DF177	=	067625	9-1132	#22-6675						
DF2	=	066655	9-1132	#20-6548						
DF20	=	066766	9-1132	#22-6564						
DF200	=	067625	9-1132	#22-6676						
DF201	=	067625	9-1132	#22-6677						
DF202	=	067625	9-1132	#22-6678						
DF203	=	067625	9-1132	#22-6679						
DF204	=	067625	9-1132	#22-6680						
DF205	=	066665	9-1132	#22-6681						
DF206	=	067625	9-1132	#22-6682						
DF207	=	067625	9-1132	#22-6683						
DF21	=	066776	9-1132	#22-6565	22-6603	22-6608				
DF210	=	067625	9-1132	#22-6684						
DF211	=	067711	9-1132	#22-6685	22-6686	22-6687				
DF212	=	067711	9-1132	#22-6686						
DF213	=	067711	9-1132	#22-6687						
DF22	=	067002	9-1132	#22-6566						
DF23	=	067014	9-1132	#22-6567						
DF24	=	067024	9-1132	#22-6568						
DF25	=	067033	9-1132	#22-6569						
DF26	=	067057	9-1132	#22-6570	22-6573					
DF27	=	067104	9-1132	#22-6571	22-6574					
DF3	=	066665	9-1132	#20-6549	20-6550	22-6563	22-6627	22-6628	22-6636	22-6664
			22-6681							22-6665
DF30	=	067124	9-1132	#22-6572						
DF31	=	067057	9-1132	#22-6573						
DF32	=	067104	9-1132	#22-6574						
DF33	=	067140	9-1132	#22-6575						

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES								
DH110		= 065156	9-1132	#20-6464							
DH111		= 064504	9-1132	#20-6465							
DH112		065354	9-1132	#20-6466	20-6471						
DH113		= 064504	9-1132	#20-6470							
DH114		= 065354	9-1132	#20-6471							
DH115		065573	9-1132	#20-6472	20-6476						
DH116		= 065573	9-1132	#20-6476							
DH117		= 063774	9-1132	#20-6477							
DH12		= 000000	9-1132	#20-6390							
DH120		066057	9-1132	#20-6478	20-6487						
DH121		= 063654	9-1132	#20-6480							
DH122		= 065104	9-1132	#20-6481							
DH123		= 065104	9-1132	#20-6482							
DH124		= 063774	9-1132	#20-6483							
DH125		= 063774	9-1132	#20-6484							
DH126		= 063654	9-1132	#20-6485							
DH127		= 065156	9-1132	#20-6486							
DH13		= 000000	9-1132	#20-6391							
DH130		= 066057	9-1132	#20-6487							
DH131		= 065156	9-1132	#20-6488							
DH132		= 065156	9-1132	#20-6489							
DH133		066147	9-1132	#20-6490	20-6492	20-6493	20-6494	20-6501	20-6502	20-6509	
DH134		= 066147	9-1132	#20-6492							
DH135		= 066147	9-1132	#20-6493							
DH136		= 066147	9-1132	#20-6494							
DH137		066257	9-1132	#20-6495	20-6498	20-6499	20-6500	20-6503	20-6504	20-6508	20-6510
DH14		= 063654	9-1132	#20-6392							
DH140		= 066257	9-1132	#20-6498							
DH141		= 066257	9-1132	#20-6499							
DH142		= 066257	9-1132	#20-6500							
DH143		= 066147	9-1132	#20-6501							
DH144		= 066147	9-1132	#20-6502							
DH145		= 066257	9-1132	#20-6503							
DH146		= 066257	9-1132	#20-6504							
DH147		= 065156	9-1132	#20-6505							
DH15		= 063654	9-1132	#20-6393							
DH150		066447	9-1132	#20-6506							
DH151		= 066257	9-1132	#20-6508							
DH152		= 066147	9-1132	#20-6509							
DH153		= 066257	9-1132	#20-6510							
DH154		066540	9-1132	#20-6511	20-6512						
DH155		= 066540	9-1132	#20-6512							
DH156		= 065156	9-1132	#20-6513							
DH157		= 065156	9-1132	#20-6514							
DH16		063714	9-1132	#20-6394							
DH160		= 065156	9-1132	#20-6515							
DH161		= 065156	9-1132	#20-6516							
DH162		= 065156	9-1132	#20-6517							
DH163		= 065156	9-1132	#20-6518							
DH164		= 063774	9-1132	#20-6519							
DH165		= 063774	9-1132	#20-6520							
DH166		= 065156	9-1132	#20-6521							

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES										
DH167	=	065156	9-1132	#20-6522									
DH17		063774	9-1132	#20-6396	20-6477	20-6483	20-6484	20-6519	20-6520	20-6536			
DH170	=	065156	9-1132	#20-6523									
DH171	=	065156	9-1132	#20-6524									
DH172	=	065156	9-1132	#20-6525									
DH173	=	065156	9-1132	#20-6526									
DH174	=	065156	9-1132	#20-6527									
DH175	=	065156	9-1132	#20-6528									
DH176	=	065156	9-1132	#20-6529									
DH177	=	065156	9-1132	#20-6530									
DH2		063374	9-1132	#20-6379									
DH20		064064	9-1132	#20-6398									
DH200	=	065156	9-1132	#20-6531									
DH201	=	065156	9-1132	#20-6532									
DH202	=	065156	9-1132	#20-6533									
DH203	=	065156	9-1132	#20-6534									
DH204	=	065156	9-1132	#20-6535									
DH205	=	063774	9-1132	#20-6536									
DH206	=	065156	9-1132	#20-6537									
DH207	=	065156	9-1132	#20-6538									
DH21	=	063654	9-1132	#20-6400									
DH210	=	065156	9-1132	#20-6539									
DH211		066600	9-1132	#20-6540									
DH212	=	063654	9-1132	#20-6541									
DH213	=	063654	9-1132	#20-6542									
DH22		064152	9-1132	#20-6401									
DH23		064207	9-1132	#20-6402									
DH24		064345	9-1132	#20-6405									
DH25		064504	9-1132	#20-6407	20-6449	20-6454	20-6459	20-6463	20-6465	20-6470			
DH26		064546	9-1132	#20-6408	20-6410	20-6412	20-6413	20-6433	20-6436	20-6438	20-6450		
				20-6455	20-6458	20-6462							
DH27	=	064546	9-1132	#20-6410									
DH3		063467	9-1132	#20-6381	22-6717	22-6747							
DH30	=	000000	9-1132	#20-6411									
DH31	=	064546	9-1132	#20-6412									
DH32	=	064546	9-1132	#20-6413									
DH33		064634	9-1132	#20-6414	20-6416	20-6417	20-6418	20-6419	20-6420				
DH34	=	064634	9-1132	#20-6416									
DH35	=	064634	9-1132	#20-6417									
DH36	=	064634	9-1132	#20-6418									
DH37	=	064634	9-1132	#20-6419									
DH4		063560	9-1132	#20-6383									
DH40	=	064634	9-1132	#20-6420									
DH41	=	000000	9-1132	#20-6421									
DH42		064737	9-1132	#20-6422	20-6424								
DH43	=	064737	9-1132	#20-6424									
DH44	=	000000	9-1132	#20-6425									
DH45		065041	9-1132	#20-6426	20-6428								
DH46		065060	9-1132	#20-6427									
DH47	=	065041	9-1132	#20-6428									
DH5		063654	9-1132	#20-6385	20-6386	20-6387	20-6388	20-6389	20-6392	20-6393	20-6400		
				20-6432	20-6447	20-6448	20-6452	20-6453	20-6457	20-6461	20-6480		

SYMBOL	VALUE	REFERENCES								
DT171	= 071660	9-1132	#22-6856							
DT172	= 071660	9-1132	#22-6857							
DT173	= 071660	9-1132	#22-6858							
DT174	= 071660	9-1132	#22-6859							
DT175	= 071660	9-1132	#22-6860							
DT176	= 071660	9-1132	#22-6861							
DT177	= 071660	9-1132	#22-6862							
DT2	067742	9-1132	#22-6694							
DT20	070222	9-1132	#22-6714							
DT200	= 071660	9-1132	#22-6863							
DT201	= 071660	9-1132	#22-6864							
DT202	= 071660	9-1132	#22-6865							
DT203	= 071660	9-1132	#22-6866							
DT204	= 071660	9-1132	#22-6867							
DT205	= 067764	9-1132	#22-6868							
DT206	= 071660	9-1132	#22-6869							
DT207	= 071660	9-1132	#22-6870							
DT21	070244	9-1132	#22-6716	22-6784		22-6790				
DT210	= 071660	9-1132	#22-6871							
DT211	071764	9-1132	#22-6872							
DT212	072002	9-1132	#22-6873	22-6874						
DT213	= 072002	9-1132	#22-6874							
DT22	070256	9-1132	#22-6717							
DT23	070304	9-1132	#22-6720							
DT24	070326	9-1132	#22-6722							
DT25	070352	9-1132	#22-6725							
DT26	070422	9-1132	#22-6727	22-6735						
DT27	070476	9-1132	#22-6730	22-6736						
DT3	067764	9-1132	#22-6695	22-6697	22-6713	22-6809	22-6810	22-6820	22-6851	22-6852
		22-6868								
DT30	070540	9-1132	#22-6732							
DT31	= 070422	9-1132	#22-6735							
DT32	= 070476	9-1132	#22-6736							
DT33	070572	9-1132	#22-6737	22-6746						
DT34	070650	9-1132	#22-6740	22-6743	22-6744	22-6745	22-6765	22-6812		
DT35	= 070650	9-1132	#22-6743							
DT36	= 070650	9-1132	#22-6744							
DT37	= 070650	9-1132	#22-6745							
DT4	= 067764	9-1132	#22-6697							
DT40	= 070572	9-1132	#22-6746							
DT41	070722	9-1132	#22-6747							
DT42	070754	9-1132	#22-6750	22-6753						
DT43	= 070754	9-1132	#22-6753							
DT44	071032	9-1132	#22-6754							
DT45	071102	9-1132	#22-6756							
DT46	071156	9-1132	#22-6759							
DT47	071244	9-1132	#22-6763	22-6768	22-6773	22-6811				
DT5	070006	9-1132	#22-6698							
DT50	= 070650	9-1132	#22-6765							
DT51	071276	9-1132	#22-6766	22-6813						
DT52	= 071244	9-1132	#22-6768							
DT53	071334	9-1132	#22-6769	22-6774	22-6776					

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES	CREF						
DT54		071354	9-1132 #22-6771 22-6798 22-6802	22-6775	22-6777	22-6778	22-6779	22-6783	22-6789	22-6794
DT55	=	071244	9-1132 #22-6773							
DT56	=	071334	9-1132 #22-6774							
DT57	=	071354	9-1132 #22-6775							
DT6		070040	9-1132 #22-6700	22-6701	22-6702	22-6703	22-6710	22-6711		
DT60	=	071334	9-1132 #22-6776							
DT61	=	071354	9-1132 #22-6777							
DT62	=	071354	9-1132 #22-6778							
DT63	=	071354	9-1132 #22-6779							
DT64		071412	9-1132 #22-6780	22-6782						
DT65	=	071412	9-1132 #22-6782							
DT66	=	071354	9-1132 #22-6783							
DT67	=	070244	9-1132 #22-6784							
DT7	=	070040	9-1132 #22-6701							
DT70		071432	9-1132 #22-6785	22-6787	22-6791	22-6792	22-6795	22-6797	22-6799	22-6801
DT71	=	071432	9-1132 #22-6787	22-6796						
DT72		071500	9-1132 #22-6788	22-6793	22-6800					
DT73	=	071354	9-1132 #22-6789							
DT74	=	070244	9-1132 #22-6790							
DT75	=	071432	9-1132 #22-6791							
DT76	=	071432	9-1132 #22-6792							
DT77	=	071500	9-1132 #22-6793							
D1		005710	#11-1535 11-1553	11-1559						
D10		006112	11-1590 #11-1593							
D2		005734	11-1538 11-1540	#11-1541						
D3		005736	#11-1542 11-1561							
D4		005742	#11-1544							
D5		005754	#11-1550 11-1581	11-1587	11-1597					
D6		005770	11-1551 #11-1555							
D7		006000	11-1556 #11-1558							
D8		006050	#11-1575 11-1584	11-1589						
D9		006062	11-1580 #11-1583							
EDONE		006264	11-1627 11-1633	11-1639	#11-1652					
EEDATO		034102	19-5572 19-5578	19-5601	19-5607	19-5625	19-5626	19-5627	19-5628	#19-5629
EEDONE		034164	19-5620 19-5624	19-5625	19-5626	19-5627	19-5628	#19-5654		
EEERO		033674	19-5590 19-5619	#19-5621						
EEER1		033712	19-5583 #19-5625							
EEER2		033750	19-5585 #19-5626							
EEER3		034006	19-5612 #19-5627							
EEER4		034044	19-5614 #19-5628							
EEO		034112	19-5574 19-5603	19-5625	19-5626	19-5627	19-5628	#19-5633		
EEO1		034124	19-5567 19-5569	19-5625	19-5625	19-5626	19-5626	#19-5638		
EEO2		034134	19-5579 #19-5642							
EEO3		034144	19-5596 19-5598	19-5627	19-5627	19-5628	19-5628	#19-5646		
EEO4		034154	19-5608 #19-5650							
EERRO		006202	11-1622 #11-1629							
EERR1		006220	11-1626 #11-1635							
EERR2		006234	11-1611 #11-1641							
EE1		033414	#19-5563							
EE10		033634	#19-5610 19-5613							
EE11		033644	19-5611 #19-5613							

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES			
EE12		033652	19-5606	#19-5615		
EE13		033670	19-5618	#19-5620		
EE2		033444	19-5566	#19-5570		
EE3		033466	#19-5576	19-5586		
EE4		033506	#19-5581	19-5584		
EE5		033516	19-5582	#19-5584		
EE6		033524	19-5577	#19-5586		
EE7		033542	19-5589	#19-5592		
EE8		033572	19-5595	#19-5599		
EE9		033614	#19-5605	19-5615		
EMTVEC	=	000030	#7-1113	9-1139	9-1139	
EM1		043061	9-1132	#20-6098		
EM10	=	043267	9-1132	#20-6105		
EM100		052171	9-1132	#20-6230		
EM101		052231	9-1132	#20-6231		
EM102		052355	9-1132	#20-6232		
EM103		052427	9-1132	#20-6233		
EM104		052532	9-1132	#20-6234		
EM105		052573	9-1132	#20-6235		
EM106		052720	9-1132	#20-6236		
EM107		052773	9-1132	#20-6237		
EM11		043410	9-1132	#20-6106		
EM110		053077	9-1132	#20-6238		
EM111		053141	9-1132	#20-6254	20-6255	20-6258
EM112	=	053141	9-1132	#20-6255		
EM113		053243	9-1132	#20-6256	20-6257	20-6259
EM114	=	053243	9-1132	#20-6257		
EM115	=	053141	9-1132	#20-6258		
EM116	=	053243	9-1132	#20-6259		
EM117		053345	9-1132	#20-6260		
EM12	=	000000	9-1132	#20-6107		
EM120		053501	9-1132	#20-6261		
EM121		053635	9-1132	#20-6262		
EM122		053754	9-1132	#20-6264		
EM123		054053	9-1132	#20-6266		
EM124		054114	9-1132	#20-6267		
EM125		054207	9-1132	#20-6268		
EM126		054277	9-1132	#20-6269		
EM127		054506	9-1132	#20-6274		
EM13	=	000000	9-1132	#20-6108		
EM130		054721	9-1132	#20-6279		
EM131		055021	9-1132	#20-6282		
EM132		055061	9-1132	#20-6283		
EM133		055121	9-1132	#20-6324	20-6328	
EM134		055160	9-1132	#20-6325	20-6329	
EM135		055217	9-1132	#20-6326	20-6330	
EM136		055256	9-1132	#20-6327	20-6331	
EM137	=	055121	9-1132	#20-6328		
EM14		043471	9-1132	#20-6109		
EM140	=	055160	9-1132	#20-6329		
EM141	=	055217	9-1132	#20-6330		
EM142	=	055256	9-1132	#20-6331		

SYMBOL	VALUE	REFERENCES			
EM143	055315	9-1132	#20-6332	20-6334	
EM144	055350	9-1132	#20-6333	20-6335	
EM145	= 055315	9-1132	#20-6334		
EM146	= 055350	9-1132	#20-6335		
EM147	055403	9-1132	#20-6336	20-6337	20-6338
EM15	043614	9-1132	#20-6112		
EM150	= 055403	9-1132	#20-6337		
EM151	= 055403	9-1132	#20-6338		
EM152	055435	9-1132	#20-6339	20-6340	
EM153	= 055435	9-1132	#20-6340		
EM154	055467	9-1132	#20-6341		
EM155	055721	9-1132	#20-6342		
EM156	056154	9-1132	#20-6343		
EM157	056371	9-1132	#20-6344		
EM16	043737	9-1132	#20-6115		
EM160	056610	9-1132	#20-6345		
EM161	057015	9-1132	#20-6346		
EM162	057222	9-1132	#20-6347		
EM163	057267	9-1132	#20-6348		
EM164	057334	9-1132	#20-6349		
EM165	057401	9-1132	#20-6350		
EM166	057446	9-1132	#20-6351		
EM167	057556	9-1132	#20-6352		
EM17	044010	9-1132	#20-6116		
EM170	060015	9-1132	#20-6353		
EM171	060125	9-1132	#20-6354		
EM172	060364	9-1132	#20-6355		
EM173	060623	9-1132	#20-6356		
EM174	061062	9-1132	#20-6357		
EM175	061321	9-1132	#20-6358		
EM176	061560	9-1132	#20-6359		
EM177	061715	9-1132	#20-6360		
EM2	043116	9-1132	#20-6099		
EM20	044243	9-1132	#20-6120		
EM200	062052	9-1132	#20-6361		
EM201	062207	9-1132	#20-6362		
EM202	062344	9-1132	#20-6363		
EM203	062501	9-1132	#20-6364		
EM204	062636	9-1132	#20-6365		
EM205	062773	9-1132	#20-6366		
EM206	063040	9-1132	#20-6367		
EM207	063105	9-1132	#20-6368		
EM21	044421	9-1132	#20-6124		
EM210	063227	9-1132	#20-6370		
EM211	= 043267	9-1132	#20-6371		
EM212	= 043323	9-1132	#20-6372		
EM213	= 043355	9-1132	#20-6373		
EM22	044552	9-1132	#20-6127	20-6129	20-6130
EM23	= 044552	9-1132	#20-6129		
EM24	= 044552	9-1132	#20-6130		
EM25	044637	9-1132	#20-6131		
EM26	044752	9-1132	#20-6133	20-6135	

SYMBOL	VALUE	REFERENCES								
EM27	= 044752	9-1132	#20-6135							
EM3	043162	9-1132	#20-6100							
EM30	045020	9-1132	#20-6136							
EM31	045072	9-1132	#20-6138	20-6140						
EM32	= 045072	9-1132	#20-6140							
EM33	045140	9-1132	#20-6141							
EM34	045201	9-1132	#20-6143							
EM35	045303	9-1132	#20-6145							
EM36	045405	9-1132	#20-6147							
EM37	045506	9-1132	#20-6149							
EM4	043227	9-1132	#20-6101							
EM40	045607	9-1132	#20-6151							
EM41	045760	9-1132	#20-6153							
EM42	046015	9-1132	#20-6158							
EM43	046136	9-1132	#20-6159							
EM44	046257	9-1132	#20-6160	20-6161						
EM45	= 046257	9-1132	#20-6161							
EM46	046322	9-1132	#20-6162							
EM47	046400	9-1132	#20-6167							
EM5	043267	9-1132	#20-6102	20-6105	20-6371					
EM50	046516	9-1132	#20-6168							
EM51	046614	9-1132	#20-6170							
EM52	046655	9-1132	#20-6180							
EM53	046776	9-1132	#20-6181							
EM54	047173	9-1132	#20-6182							
EM55	047237	9-1132	#20-6183							
EM56	047360	9-1132	#20-6184							
EM57	047555	9-1132	#20-6185							
EM6	043323	9-1132	#20-6103	20-6372						
EM60	047621	9-1132	#20-6186							
EM61	050016	9-1132	#20-6187							
EM62	050062	9-1132	#20-6188							
EM63	050254	9-1132	#20-6192							
EM64	050446	9-1132	#20-6196	20-6198						
EM65	= 050446	9-1132	#20-6198							
EM66	050602	9-1132	#20-6199							
EM67	050645	9-1132	#20-6221							
EM7	043355	9-1132	#20-6104	20-6373						
EM70	051076	9-1132	#20-6222							
EM71	051221	9-1132	#20-6223							
EM72	051323	9-1132	#20-6224							
EM73	051377	9-1132	#20-6225							
EM74	051437	9-1132	#20-6226							
EM75	051670	9-1132	#20-6227							
EM76	052013	9-1132	#20-6228							
EM77	052115	9-1132	#20-6229							
ERM10	035550	19-5757	19-5757	#19-5757						
ERROR	= 104000	#7-1113	9-1212	9-1236	9-1249	9-1262	9-1267	11-1306	11-1312	11-1495
		11-1502	11-1548	11-1572	11-1586	11-1596	11-1632	11-1638	11-1650	11-1784
		11-1803	11-1807	11-1817	11-1839	11-1843	11-1851	11-1866	11-1882	11-1897
		11-1912	11-1920	11-1926	11-1945	11-1955	12-1964	12-1983	12-1993	12-2001
		12-2161	12-2168	12-2176	12-2188	12-2332	12-2339	12-2346	12-2357	12-2590

SYMBOL CROSS REFERENCE

SYMBOL	VALUE	REFERENCES
		13-2725 13-2850 13-2856 13-2862 13-2865 13-2869 13-2872 13-2884 13-2895
		13-2968 13-2975 13-2984 13-3066 13-3073 13-3082 13-3164 13-3171 13-3183
		13-3264 14-3275 14-3282 14-3293 14-3397 14-3405 14-3411 14-3423 14-3430
		14-3540 14-3548 14-3555 14-3567 14-3574 14-3676 14-3686 14-3693 14-3701
		14-3808 14-3818 14-3828 14-3835 15-3989 15-3998 15-4016 15-4031 15-4047
		15-4109 15-4117 15-4137 15-4145 15-4165 15-4173 15-4195 15-4203 15-4332
		15-4338 15-4346 15-4351 15-4427 15-4435 15-4441 15-4515 15-4521 17-4672
		17-4676 17-4684 17-4690 17-4698 17-4704 17-4710 17-4716 17-4935 17-4939
		17-4945 17-4951 17-4960 17-4966 17-4972 17-4981 17-5206 17-5211 17-5218
		17-5227 17-5233 19-5244 19-5495 19-5497 19-5498 19-5499 19-5500 19-5501
		19-5502 19-5503 19-5504 19-5505 19-5506 19-5507 19-5508 19-5623 19-5625
		19-5626 19-5627 19-5628 19-5712 19-5715 19-5717 20-5949 20-5960 20-5971
ERRVEC	= 000004	#7-1113 9-1139 9-1139 9-1139 9-1175 9-1189 11-1532 11-1682 11-1721
		12-2058 12-2236 13-2771 13-2801 13-2929 13-3028 13-3225 14-3330 14-3473
		14-3615 14-3736 19-5755 19-5755 19-5755 19-5755 20-6001
		9-1228 12-2609 19-5757 #19-5785
ERTYPE	037602	
ERT1	037764	#19-5836 20-5924
ERT2	040202	19-5841 19-5854 19-5874 19-5883 20-5912 #20-5916
ERT3	040206	19-5891 20-5900 #20-5921
ERT4	040216	19-5832 20-5923 #20-5926
ERT5	040230	19-5798 #20-5931
E1	006140	#11-1613
E2	006154	#11-1616
E3	006154	11-1615 #11-1617
E4	006156	#11-1618 11-1641
FDAT10	010074	11-1674 11-1698 11-1782 11-1783 11-1792 #12-2004
FDAT11	010076	#12-2005
FDAT12	010100	#12-2006
FDAT13	010102	11-1939 #12-2007
FDAT14	010104	11-1681 11-1690 11-1787 11-1797 11-1932 #12-2008
FDAT15	010106	11-1948 #12-2009
FDAT16	010110	#12-2010
FDAT17	010112	#12-2011
FDAT00	010116	11-1716 11-1737 11-1828 11-1848 #12-2013
FDAT01	010120	#12-2014
FDAT02	010122	#12-2015
FDAT03	010124	12-1977 #12-2016
FDAT04	010126	11-1720 11-1729 11-1823 11-1833 11-1917 12-1969 #12-2017
FDAT05	010130	11-1854 11-1869 12-1986 #12-2018
FDAT06	010132	11-1885 11-1900 #12-2019
FDAT07	010134	11-1849 11-1918 #12-2020
FDONE	010160	11-1777 11-1785 11-1804 11-1808 11-1818 11-1840 11-1844 11-1852 11-1867
		11-1883 11-1898 11-1913 11-1921 11-1927 11-1946 12-1957 12-1965 12-1984
		12-1994 12-2002 #12-2032
FECMS	040631	#20-6020 22-6699
FERRO	006666	11-1703 #11-1779
FERR1	006724	11-1692 #11-1787
FERR10	007504	11-1758 11-1770 11-1873 11-1904 #11-1915
FERR11	007540	11-1709 11-1776 #11-1923
FERR2	007022	11-1696 #11-1810
FERR20	007560	11-1682 #11-1929
FERR21	007676	11-1937 #12-1959

SYMBOL CROSS REFERENCE

SYMBOL	VALUE	REFERENCES
FERR25	007726	11-1721 #12-1967
FERR26	010044	12-1975 #12-1996
FERR3	007062	11-1731 #11-1823
FERR4	007054	11-1735 #11-1820
FERR5	007160	11-1742 11-1746 11-1750 11-1754 #11-1846
FERR6	007214	11-1762 #11-1854
FERR7	007350	11-1766 #11-1885
FER2	007026	#11-1812 11-1821
FFDATO	034462	19-5675 19-5697 19-5715 19-5717 #19-5720
FFDONE	034542	19-5708 19-5713 19-5715 19-5717 #19-5746
FFERO	034352	19-5685 19-5707 #19-5710
FFER1	034366	19-5703 #19-5715
FFER2	034424	19-5681 #19-5717
FFP0	034472	19-5692 19-5715 #19-5725
FFP1	034502	19-5694 19-5715 #19-5729
FFP2	034512	19-5670 19-5717 #19-5733
FFP3	034522	19-5672 19-5717 #19-5737
FFP4	034532	19-5677 19-5699 19-5715 19-5717 #19-5741
FF1	034170	#19-5666
FF10	034340	19-5702 #19-5704
FF11	034350	19-5706 #19-5708
FF2	034220	19-5669 #19-5673
FF3	034242	#19-5679 19-5682
FF4	034250	19-5680 #19-5682
FF5	034260	19-5684 #19-5688
FF6	034310	19-5691 #19-5695
FF7	034332	#19-5701 19-5704
FPSMS	040565	#20-6019 22-6699
FPSPUR	040234	9-1186 11-1563 11-1643 13-2824 13-2843 15-3995 15-4037 17-4661 #20-5943
FPVECT =	000244	20-6000 #7-1107 9-1170 9-1186 11-1533 11-1611 13-2766 13-2799 14-3885 15-3978
		15-4563 17-5062 20-6000
FXDAT0	010140	11-1675 11-1699 11-1738 11-1780 11-1781 11-1850 #12-2022
FXDAT1	010142	#12-2023
FXDAT2	010144	#12-2024
FXDAT3	010146	#12-2025
FXDAT4	010150	11-1919 #12-2026
FXDAT5	010152	#12-2027
FXDAT6	010154	#12-2028
FXDAT7	010156	#12-2029
F1	006270	#11-1669
F10	006502	11-1712 #11-1725 12-1974
F11	006504	#11-1726 11-1820
F12	006522	11-1730 #11-1733
F13	006554	11-1741 #11-1744
F135	006534	11-1734 #11-1737
F14	006564	11-1745 #11-1748
F15	006574	11-1749 #11-1752
F16	006604	11-1753 #11-1756
F17	006614	11-1757 #11-1760
F2	006322	#11-1678 11-1679
F20	006624	11-1761 #11-1764

SYMBOL CROSS REFERENCE

SYMBOL	VALUE	REFERENCES
F21	006634	11-1765 #11-1768
F22	006644	11-1769 #11-1772
F23	006662	11-1775 #11-1777
F3	006342	11-1670 #11-1686
F4	006344	#11-1687 11-1810 11-1936
F5	006362	11-1691 #11-1694
F6	006436	11-1708 #11-1711
F7	006462	#11-1717 11-1718
GADR	014164	12-2572 12-2591 12-2606 12-2610 #13-2643
GANDO	014134	12-2580 12-2604 #13-2628
GAND1	014136	#13-2629
GAND2	014140	#13-2630
GAND3	014142	#13-2631
GCMP	013670	12-2519 12-2520 12-2521 12-2522 12-2523 12-2524 12-2525 12-2526 12-2527
		12-2528 12-2529 12-2530 #12-2562
GDATA0	014154	12-2519 12-2520 12-2521 12-2522 12-2523 12-2524 12-2525 12-2526 12-2527
		12-2528 12-2529 12-2530 12-2549 12-2555 12-2562 12-2589 #13-2638
GDATA01	014156	#13-2639
GDATA02	014160	#13-2640
GDATA03	014162	#13-2641
GDONE	014166	12-2532 #13-2645
GERR1	013716	12-2567 #12-2572
GFLAG1	014110	12-2519 12-2519 12-2520 12-2520 12-2521 12-2521 12-2522 12-2522 12-2523
		12-2523 12-2524 12-2524 12-2525 12-2525 12-2526 12-2526 12-2527 12-2527
		12-2528 12-2528 12-2529 12-2529 12-2530 12-2530 12-2535 #13-2615
GFLAG2	014112	12-2587 12-2595 12-2603 #13-2616
GNS =	*****	7-1125 7-1125 9-1140 19-5753 19-5753 19-5769 19-5769 19-5769 19-5769 19-5769 19-5769 19-5769 19-5769 19-5770 19-5770 19-5771 19-5771
GORO	014144	12-2574 12-2605 #13-2633
GOR1	014146	#13-2634
GOR2	014150	#13-2635
GOR3	014152	#13-2636
GPAT00	014114	12-2519 12-2521 12-2523 12-2525 12-2527 12-2529 12-2545 #13-2618
GPAT01	014116	#13-2619
GPAT02	014120	#13-2620
GPAT03	014122	#13-2621
GPAT10	014124	12-2520 12-2522 12-2524 12-2526 12-2528 12-2530 12-2540 #13-2623
GPAT11	014126	#13-2624
GPAT12	014130	#13-2625
GPAT13	014132	#13-2626
GRESET	013650	12-2519 12-2520 12-2521 12-2522 12-2523 12-2524 12-2525 12-2526 12-2527
		12-2528 12-2529 12-2530 #12-2555
GSETUP	013572	12-2519 12-2520 12-2521 12-2522 12-2523 12-2524 12-2525 12-2526 12-2527
		12-2528 12-2529 12-2530 #12-2535
GSUM	014006	12-2519 12-2520 12-2521 12-2522 12-2523 12-2524 12-2525 12-2526 12-2527
		12-2528 12-2529 12-2530 #12-2595
GS1	013622	#12-2545 12-2559
GTSWR =	104405	9-1140 #19-5769
G1	011674	12-2519 #12-2519 12-2519
G10	012172	12-2521 #12-2521
G11	012174	12-2521 #12-2521

SYMBOL CROSS REFERENCE

SYMBOL	VALUE	REFERENCES
G12	012262	12-2522 #12-2522 12-2522
G13	012314	12-2522 #12-2522
G14	012316	12-2522 #12-2522
G15	012404	12-2523 #12-2523 12-2523
G16	012436	12-2523 #12-2523
G17	012440	12-2523 #12-2523
G2	011726	12-2519 #12-2519
G20	012526	12-2524 #12-2524 12-2524
G21	012560	12-2524 #12-2524
G22	012562	12-2524 #12-2524
G23	012650	12-2525 #12-2525 12-2525
G24	012702	12-2525 #12-2525
G25	012704	12-2525 #12-2525
G26	012772	12-2526 #12-2526 12-2526
G27	013024	12-2526 #12-2526
G3	011730	12-2519 #12-2519
G30	013026	12-2526 #12-2526
G31	013114	12-2527 #12-2527 12-2527
G32	013146	12-2527 #12-2527
G33	013150	12-2527 #12-2527
G34	013236	12-2528 #12-2528 12-2528
G35	013270	12-2528 #12-2528
G36	013272	12-2528 #12-2528
G37	013360	12-2529 #12-2529 12-2529
G4	012016	12-2520 #12-2520 12-2520
G40	013412	12-2529 #12-2529
G41	013414	12-2529 #12-2529
G42	013502	12-2530 #12-2530 12-2530
G43	013534	12-2530 #12-2530
G44	013536	12-2530 #12-2530
G5	012050	12-2520 #12-2520
G6	012052	12-2520 #12-2520
G7	012140	12-2521 #12-2521 12-2521
HADR	014716	13-2700 13-2708 #13-2729
HA1R	014772	13-2692 13-2702 13-2711
HA1W	014722	13-2658 13-2667 13-2677 #13-2738 13-2701 13-2719 #13-2732
HA2R	015002	13-2693 #13-2739
HA2W	014732	13-2668 13-2678 #13-2733
HA3R	015012	13-2694 #13-2740
HA3W	014742	13-2669 13-2679 #13-2734
HA4R	015022	13-2695 #13-2741
HA4W	014752	13-2670 13-2680 #13-2735
HA5R	015032	13-2696 #13-2742
HA5W	014762	13-2671 13-2681 #13-2736
HCLR	014646	13-2664 13-2691 #13-2711
HCLR1	014656	#13-2713 13-2714
HCMP	014610	13-2675 13-2677 13-2678 13-2679 13-2680 13-2681 #13-2700
HCMP1	014630	#13-2704 13-2707
HCMP2	014640	13-2705 #13-2707
HDAT1	015042	13-2659 #13-2744
HDAT2	015052	#13-2745
HDAT3	015062	#13-2746

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES
HDATA4		015072	#13-2747
HDATA5		015102	#13-2748
HDONE		015112	13-2685 13-2726 #13-2750
HERROR		014664	13-2706 #13-2718
HFLAG		014720	13-2657 13-2683 13-2687 #13-2730
HSTD		014532	13-2673 13-2677 13-2678 13-2679 13-2680 13-2681 #13-2691
HT	=	000011	#7-1113 19-5761 19-5761
H1		014174	#13-2657
H10		014436	#13-2680 13-2680
H11		014470	#13-2681 13-2681
H12		014522	13-2684 #13-2687
H2		014214	#13-2661 13-2662
H3		014224	#13-2666 13-2688
H4		014276	#13-2673
H5		014320	#13-2677 13-2677
H6		014352	#13-2678 13-2678
H7		014404	#13-2679 13-2679
IDAT10		011012	12-2045 12-2051 12-2069 12-2096 12-2101 12-2130 12-2166 #12-2207
IDAT11		011014	#12-2208
IDAT12		011016	12-2127 #12-2209
IDAT13		011020	12-2128 #12-2210
IDAT00		011002	12-2065 12-2068 12-2124 12-2129 12-2167 #12-2202
IDAT01		011004	#12-2203
IDAT02		011006	12-2074 12-2079 12-2135 #12-2204
IDAT03		011010	12-2138 #12-2205
IDONE		011022	12-2144 12-2162 12-2169 12-2177 12-2189 #12-2212
IERR0		010562	12-2058 #12-2147
IERR1		010644	12-2083 12-2137 #12-2165
IERR2		010664	12-2087 #12-2172
IERR25		010706	#12-2175 12-2181
IERR3		010736	12-2119 #12-2184
IERR4		010712	12-2140 #12-2178
ILLMS		041542	#20-6048 22-6722
ILL1		041436	#20-6045
ILL2		041501	#20-6047
IOTVEC	=	000020	#7-1113 9-1139 9-1139
IPAT10		010762	12-2046 12-2095 #12-2192
IPAT11		010764	#12-2193
IPAT12		010766	12-2135 #12-2194
IPAT13		010770	12-2138 #12-2195
IPAT20		010772	12-2054 12-2104 #12-2197
IPAT21		010774	#12-2198
IPAT22		010776	#12-2199
IPAT23		011000	#12-2200
I1		010166	#12-2043
I10		010350	12-2077 #12-2086
I105		010356	12-2072 #12-2089
I106		010352	12-2085 #12-2087
I11		010360	#12-2093
I12		010362	#12-2095
I13		010376	#12-2098 12-2099
I14		010440	12-2108 #12-2112 12-2185

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES						
I15		010442	#12-2113	12-2151					
I16		010444	#12-2114	12-2153					
I17		010462	12-2118	#12-2121					
I2		010204	#12-2048	12-2049					
I20		010522	#12-2132	12-2142					
I21		010536	#12-2137	12-2139					
I22		010542	12-2136	#12-2138					
I23		010556	12-2133	#12-2142					
I3		010252	12-2059	#12-2061					
I4		010254	#12-2062	12-2147					
I5		010256	#12-2063	12-2149					
I6		010302	#12-2071	12-2089					
I7		010316	#12-2076	12-2086					
JBUF0		016102	13-2938	#13-2987					
JBUF1		016104	#13-2988						
JBUF2		016106	#13-2989						
JBUF3		016110	#13-2990						
JDAT10		016112	13-2927	13-2942	13-2950	13-2974	13-2982	#13-2992	
JDAT11		016114	#13-2993						
JDAT12		016116	#13-2994						
JDAT13		016120	#13-2995						
JDAT00		016122	13-2935	13-2943	13-2983	#13-2997			
JDAT0		016132	13-2924	#13-3002					
JDAT01		016124	#13-2998						
JDAT02		016126	#13-2999						
JDAT03		016130	#13-3000						
JDAT1		016134	#13-3003						
JDAT2		016136	#13-3004						
JDAT3		016140	#13-3005						
JDONE		016142	13-2954	13-2969	13-2976	13-2985	#13-3008		
JERRO		015762	13-2929	#13-2958					
JERR1		016030	13-2940	13-2952	#13-2971				
JERR2		016054	13-2947	#13-2980					
J1		015654	#13-2921						
J10		016002	13-2959	13-2961	#13-2964				
J2		015700	#13-2931	13-2972	13-2981				
J3		015702	#13-2932	13-2958					
J4		015704	#13-2933	13-2960					
J5		015740	#13-2945	13-2948					
J6		015746	13-2946	#13-2948					
J7		015760	13-2951	#13-2954					
KBUF0		016404	13-3026	13-3037	13-3049	#13-3090			
KBUF1		016406	#13-3091						
KBUF2		016410	#13-3092						
KBUF3		016412	#13-3093						
KDAT10		016374	13-3041	13-3072	13-3080	#13-3085			
KDAT11		016376	#13-3086						
KDAT12		016400	#13-3087						
KDAT13		016402	#13-3088						
KDAT00		016414	13-3034	13-3042	13-3081	#13-3095			
KDAT01		016416	#13-3096						
KDAT02		016420	#13-3097						

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES
KDAT03		016422	#13-3098
KDONE		016434	13-3053 13-3067 13-3074 13-3083 #13-3105
KERR0		016256	13-3028 #13-3057
KERR1		016322	13-3039 13-3051 #13-3069
KERR2		016346	13-3046 #13-3078
KPATO		016424	13-3023 #13-3100
KPAT1		016426	#13-3101
KPAT2		016430	#13-3102
K1		016150	#13-3020
K10		016276	13-3058 13-3060 #13-3063
K2		016174	#13-3030 13-3070 13-3079
K3		016176	#13-3031 13-3057
K4		016200	#13-3032 13-3059
K5		016234	#13-3044 13-3047
K6		016242	13-3045 #13-3047
K7		016254	13-3050 #13-3053
LDAT10		016734	13-3123 13-3130 13-3149 13-3169 13-3181 #13-3196
LDAT11		016736	#13-3197
LDAT12		016740	13-3143 13-3147 13-3163 #13-3198
LDAT13		016742	13-3148 #13-3199
LDAT00		016746	13-3140 13-3150 13-3170 13-3175 #13-3201
LDAT01		016750	13-3182 #13-3202
LDAT02		016752	#13-3203
LDAT03		016754	#13-3204
LDONE		016756	13-3158 13-3165 13-3172 13-3184 #13-3206
LD1		041276	#20-6035
LD2		041326	#20-6036
LERR1		016570	13-3145 #13-3160
LERR2		016642	13-3155 #13-3174
LERR3		016614	#13-3167 13-3178
LF	= 000012		#7-1113 19-5761 19-5761
LF IEX1		040453	#20-6017 22-6698 22-6700
LF IEX2		040523	#20-6018 22-6698 22-6700
LFPS1		041263	#20-6034
LOOP		004270	#9-1142 19-5753
LPAT10		016712	13-3120 #13-3186
LPAT11		016714	#13-3187
LPAT12		016716	#13-3188
LPAT13		016720	#13-3189
LPAT20		016722	13-3124 13-3174 #13-3191
LPAT21		016724	#13-3192
LPAT22		016726	#13-3193
LPAT23		016730	#13-3194
LPERR	= 104413		9-1168 9-1278 11-1326 11-1343 11-1356 11-1371 11-1384 11-1400 11-1413 11-1428 11-1530 11-1610 11-1669 11-1711 12-2041 12-2093 12-2221 12-2264 12-2519 12-2520 12-2521 12-2522 12-2523 12-2524 12-2525 12-2526 12-2527 12-2528 12-2529 12-2530 13-2655 13-2761 13-2793 13-2919 13-3018 13-3115 14-3886 14-3907 15-3929 15-3947 15-3976 15-4091 15-4119 15-4147 15-4175 15-4233 15-4256 15-4279 15-4302 15-4387 15-4482 15-4560 17-4591 17-4625 17-4763 17-4791 17-4819 17-4848 17-4877 17-4905 17-5059 17-5083 17-5111 17-5134 17-5163 17-5184 19-5306 19-5335 19-5357 19-5379 19-5407 19-5435 19-5464 19-5563 19-5592 19-5666 19-5688 #19-5771

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES
L1		016442	#13-3117
L2		016502	#13-3134 13-3161 13-3168 13-3180
L3		016504	#13-3135
L4		016506	#13-3137
L5		016556	#13-3153 13-3156
L6		016564	13-3154 #13-3156
MDAT00		017276	13-3240 13-3243 13-3253 13-3263 14-3280 #14-3306
MDAT01		017300	#14-3307
MDAT02		017302	#14-3308
MDAT03		017304	#14-3309
MDONE		017306	13-3251 13-3265 14-3276 14-3283 14-3294 #14-3311
MERRO		017132	13-3236 #13-3267
MERR1		017170	13-3246 13-3257 #14-3278
MERR2		017104	#13-3260
MERR3		017216	13-3225 #14-3285
MNUMBE	=	000213	#7-856 9-1130
MNUM0		042244	12-2519 12-2520 #20-6065
MNUM1		042252	12-2521 12-2522 #20-6066
MNUM2		042257	12-2523 12-2524 #20-6067
MNUM3		042264	12-2525 12-2526 #20-6068
MNUM4		042273	12-2527 12-2528 #20-6069
MNUM5		042301	12-2529 12-2530 #20-6070
MPAT10		017256	13-3221 #14-3296
MPAT11		017260	#14-3297
MPAT12		017262	#14-3298
MPAT13		017264	#14-3299
MPAT20		017266	13-3262 14-3281 #14-3301
MPAT21		017270	#14-3302
MPAT22		017272	#14-3303
MPAT23		017274	#14-3304
MS1		041610	#20-6049 22-6725 22-6738 22-6755 22-6771
MS10		041764	#20-6056 22-6728 22-6729 22-6731 22-6741 22-6742 22-6751 22-6752 22-6763
			22-6786 22-6786 22-6815 22-6816
MS11		041777	#20-6057 22-6729 22-6742 22-6752 22-6786 22-6816
MS12		042024	#20-6058 22-6731 22-6763
MS13		042062	#20-6059 22-6731 22-6764
MS14		042077	#20-6060 22-6732
MS15		042165	#20-6062 22-6732
MS16		042212	12-1961 12-1997 #20-6063
MS17		042217	#20-6064 22-6754 22-6756
MS2		041622	#20-6050 22-6726 22-6739 22-6755 22-6772
MS20		042307	#20-6071 22-6754
MS21		042350	#20-6072 22-6755 22-6755 22-6757 22-6758 22-6771 22-6772
MS22		042407	#20-6073 22-6757
MS23		042437	#20-6074 22-6758
MS24		042466	#20-6075 22-6756
MS25		042561	#20-6077 22-6759 22-6767
MS26		042603	#20-6078 22-6760 22-6767
MS27		042620	#20-6079 22-6767 22-6767
MS3		041627	#20-6051 22-6725 22-6726 22-6738 22-6739
MS30		042627	#20-6080 22-6759 22-6761
MS31		042636	#20-6081 22-6759 22-6761

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES	CREF
MS32		042645	#20-6082	22-6760 22-6762
MS33		042654	#20-6083	22-6760 22-6762
MS34		042663	#20-6084	22-6760 22-6762
MS35		042672	12-2060	12-2238 #20-6085
MS36		042677	12-2109	12-2280 #20-6086
MS37		042706	#20-6087	22-6816 22-6821
MS4		041656	#20-6052	22-6725 22-6726 22-6738 22-6739
MS40		042724	#20-6088	22-6822
MS41		042760	#20-6090	22-6824
MS415		042740	#20-6089	22-6822
MS42		043004	#20-6091	22-6825
MS43		043022	#20-6092	22-6825
MS44		043037	#20-6093	22-6826
MS5		041670	#20-6053	
MS6		041732	#20-6054	22-6728 22-6741 22-6751 22-6785 22-6815
MS7		041750	#20-6055	22-6728 22-6729 22-6731 22-6741 22-6742 22-6751 22-6752 22-6763
			22-6785 22-6786 22-6815 22-6816	
M1		016762	#13-3218	
M15		017002	#13-3227	13-3261 14-3274 14-3279 14-3291
M2		017006	#13-3230	13-3267 14-3290
M3		017010	#13-3231	
M4		017012	#13-3232	
M5		017046	13-3245	#13-3247
M6		017052	#13-3248	13-3250
M7		017062	13-3249	#13-3253
M8		017072	#13-3255	13-3258
M9		017102	13-3256	#13-3258
NDATIO		020004	14-3372	14-3429 14-3439 #14-3449
NDATI1		020006	#14-3450	
NDATI2		020010	#14-3451	
NDATI3		020012	#14-3452	
NDATO0		017742	14-3337	14-3354 14-3361 14-3371 14-3428 #14-3433
NDATO1		017744	#14-3434	
NDATO2		017746	#14-3435	
NDATO3		017750	#14-3436	
NDONE		020014	14-3377	14-3398 14-3406 14-3412 14-3424 14-3431 #14-3454
NERRO		017504	14-3330	#14-3385
NERR1		017604	14-3345	#14-3407
NERR10		017536	14-3386	#14-3394
NERR11		017550	14-3391	#14-3400
NERR2		017640	14-3349	#14-3413
NERR20		017612	#14-3408	14-3414 14-3416 14-3418
NERR3		017650	14-3359	#14-3415
NERR4		017660	14-3367	#14-3417
NERR5		017670	14-3369	#14-3420
NERR6		017714	14-3379	#14-3426
NOOP1		040647	#20-6022	22-6704 22-6708
NOOP10		041126	#20-6031	22-6706 22-6708
NOOP11		041217	#20-6033	22-6708
NOOP15		040676	#20-6023	22-6704
NOOP2		040774	#20-6025	22-6704 22-6705
NOOP3		041011	#20-6026	22-6705 22-6705

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES
NOOP4		041023	#20-6027 22-6705
NOOP5		041040	#20-6028 22-6705
NOOP6		041066	#20-6029 22-6706
NOOP7		041106	#20-6030 22-6706
NPAT10		017774	14-3325 #14-3444
NPAT11		017776	#14-3445
NPAT12		020000	#14-3446
NPAT13		020002	#14-3447
NPAT20		017762	14-3328 14-3340 14-3343 14-3347 14-3351 14-3362 14-3390 14-3421 #14-3439
NPAT21		017764	#14-3440
NPAT22		017766	#14-3441
NPAT23		017770	#14-3442
NULL		040445	11-1929 12-1967 #20-6014
N1		017312	#14-3322
N10		017444	#14-3364 14-3366
N11		017454	14-3352 14-3365 #14-3369
N12		017456	14-3341 #14-3371
N13		017472	#14-3374 14-3376
N14		017502	14-3375 #14-3379
N2		017336	#14-3333 14-3410 14-3422 14-3427
N3		017340	#14-3334 14-3387
N4		017342	#14-3335 14-3385
N5		017360	#14-3343
N6		017370	14-3344 #14-3347
N7		017400	14-3348 #14-3351
N8		017416	#14-3356 14-3358
N9		017430	14-3357 #14-3361
ODAT10		020510	14-3515 14-3573 14-3583 #14-3594
ODAT11		020512	#14-3595
ODAT12		020514	#14-3596
ODAT13		020516	#14-3597
ODAT00		020446	14-3481 14-3504 14-3514 14-3572 #14-3577
ODAT01		020450	14-3497 #14-3578
ODAT02		020452	#14-3579
ODAT03		020454	#14-3580
ODONE		020520	14-3520 14-3541 14-3549 14-3556 14-3568 14-3575 #14-3599
OERRO		020210	14-3473 #14-3528
OERR1		020310	14-3489 14-3534 #14-3551
OERR10		020242	14-3529 #14-3537
OERR11		020254	#14-3543
OERR2		020344	14-3493 #14-3557
OERR20		020316	#14-3552 14-3558 14-3560 14-3562
OERR3		020354	14-3502 #14-3559
OERR4		020364	14-3510 #14-3561
OERR5		020374	14-3512 #14-3564
OERR6		020420	14-3522 #14-3570
OPAT10		020500	14-3468 #14-3589
OPAT11		020502	#14-3590
OPAT12		020504	#14-3591
OPAT13		020506	#14-3592
OPAT20		020464	14-3484 14-3565 #14-3583
OPAT21		020466	14-3471 14-3487 14-3491 14-3495 14-3505 14-3533 #14-3584

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES							
PR3	=	000140	#7-1113							
PR4	=	000200	#7-1113							
PR5	=	000240	#7-1113							
PR6	=	000300	#7-1113							
PR7	=	000340	#7-1113							
PS	=	177776	#7-1113	7-1113						
PSW	=	177776	#7-1113	9-1287						
PWRVEC	=	000024	#7-1113	9-1139	9-1139	19-5774	19-5774	19-5774	19-5774	19-5774
P1		020524	#14-3609							
P2		020546	#14-3619	14-3620	14-3682	14-3690	14-3697			
P3	=	020550	#14-3620	14-3643	14-3778					
P4		020552	#14-3622	14-3645						
P5		020574	#14-3627	14-3629						
P6		020616	14-3628	#14-3635						
P7		020626	#14-3637	14-3640						
P8		020636	14-3638	#14-3640						
QDAT10		021664	14-3750	14-3833	14-3843	#14-3853				
QDAT11		021666	#14-3854							
QDAT12		021670	#14-3855							
QDAT13		021672	#14-3856							
QDAT00		021654	14-3745	14-3749	14-3760	14-3768	14-3834	#14-3848		
QDAT01		021656	#14-3849							
QDAT02		021660	#14-3850							
QDAT03		021662	#14-3851							
QDONE		021674	14-3758	14-3809	14-3819	14-3829	14-3836	#14-3858		
QERRO		021342	14-3736	#14-3778						
QERR1		021606	14-3772	#14-3831						
QERR11		021352	#14-3781							
QERR12		021370	14-3782	#14-3785						
QERR13		021406	14-3786	#14-3789						
QERR14		021424	14-3790	#14-3793						
QERR15		021442	14-3794	#14-3798						
QERR16		021452	14-3799	#14-3802						
QERR17		021460	14-3784	14-3788	14-3792	14-3796	#14-3804			
QERR2		021542	14-3765	#14-3821						
QERR20		021506	14-3800	#14-3811						
QERR21		021516	14-3757	#14-3814						
QERR22		021524	14-3813	#14-3815						
QERR3		021552	14-3774	#14-3823						
QERR4		021560	14-3822	#14-3825						
QPAT10		021634	14-3733	#14-3838						
QPAT11		021636	#14-3839							
QPAT12		021640	#14-3840							
QPAT13		021642	#14-3841							
QPAT20		021644	14-3740	14-3755	14-3767	14-3781	14-3785	14-3789	14-3793	14-3798
			#14-3843							
QPAT21		021646	#14-3844							
QPAT22		021650	#14-3845							
QPAT23		021652	#14-3846							
Q1		021200	#14-3730							
Q10		021336	14-3771	#14-3773						
Q2		021222	#14-3742	14-3743	14-3814	14-3827	14-3832			

SYMBOL	VALUE	REFERENCES
Q3	= 021224	#14-3743
Q4	021226	#14-3745
Q5	021250	#14-3751 14-3753
Q6	021272	14-3752 #14-3760
Q7	021302	#14-3762 14-3764
Q8	021314	14-3763 #14-3767
Q9	021330	#14-3770 14-3773
RDCHR	= 104407	#19-5769
RESREG	= 104411	#19-5769
RESVEC	= 000010	#7-1113 9-1139 9-1139 9-1139
RSETUP	= 104412	9-1269 11-1315 11-1507 11-1599 11-1652 12-2032 12-2212 12-2380 13-2645
		13-2750 13-2910 13-3008 13-3105 13-3206 14-3311 14-3454 14-3599 14-3719
		14-3858 15-4223 15-4373 15-4469 15-4548 17-4750 17-5044 17-5207 17-5212
		19-5296 19-5654 #19-5770 20-5950 20-5961 20-5972
R6	=%000006	#7-1113 *9-1139 *9-1139 9-1139
R7	=%000007	#7-1113
SADR	015622	13-2826 13-2839 13-2844 13-2851 13-2857 #13-2898
SAVREG	= 104410	#19-5769
SCOPE	= 000004	#7-1113 9-1166 9-1277 11-1325 11-1529 11-1609 11-1667 12-2040 12-2220
		12-2517 13-2654 13-2760 13-2918 13-3017 13-3114 13-3216 14-3320 14-3463
		14-3607 14-3728 14-3876 15-4090 15-4232 15-4382 15-4478 15-4559 17-4761
		17-5057 19-5304 19-5561 19-5664 19-5753
SDAT00	015636	13-2779 13-2782 13-2809 13-2812 #13-2905
SDAT01	015640	#13-2906
SDAT02	015642	#13-2907
SDAT03	015644	#13-2908
SDONE	015646	13-2844 13-2863 13-2866 13-2870 13-2873 13-2885 13-2896 #13-2910
SERRO	015326	13-2766 #13-2822
SERR1	015536	13-2771 #13-2876
SERR10	015346	#13-2828 13-2845
SERR15	015426	13-2833 #13-2848
SERR2	015466	13-2787 #13-2861
SERR20	015446	13-2838 #13-2854
SERR3	015512	13-2790 #13-2868
SERR4	015404	13-2799 #13-2841
SERR5	015570	13-2801 #13-2887
SERR6	015500	13-2817 #13-2864
SERR7	015524	13-2819 #13-2871
SETD1	041414	11-1358 11-1456 #20-6042
SETF1	041406	11-1329 11-1480 #20-6041
SETI1	041422	11-1386 11-1486 #20-6043
SETL1	041430	11-1415 11-1462 #20-6044
SPACE	040450	19-5851 19-5863 19-5867 19-5871 20-5910 #20-6016
SPAT10	015626	13-2763 13-2783 13-2796 13-2813 #13-2900
SPAT11	015630	#13-2901
SPAT12	015632	#13-2902
SPAT13	015634	#13-2903
STACK	= 001100	#7-1113 9-1139 20-6004
START	003606	7-1125 #9-1139 19-5774
STFS1	041337	#20-6037
STKLMT	= 177774	#7-1113
STST1	041467	#20-6046

SYMBOL	VALUE	REFERENCES								
ST1	041352	#20-6038								
ST2	041367	#20-6039								
SWR	001140	#8-1126	9-1139	*9-1139	9-1139	*9-1139	*9-1139	9-1140	9-1218	9-1220
		12-2598	12-2600	19-5753	19-5755	19-5755	19-5755	19-5755	19-5755	19-5757
		19-5757	19-5757	19-5757	19-5757	19-5767	19-5767	19-5774	19-5774	20-5993
SWREG	000176	#7-1125	9-1139	9-1140	19-5767	19-5767				
SW0	= 000001	#7-1113								
SW00	= 000001	#7-1113	7-1113							
SW01	= 000002	#7-1113	7-1113							
SW02	= 000004	#7-1113	7-1113							
SW03	= 000010	#7-1113	7-1113							
SW04	= 000020	#7-1113	7-1113							
SW05	= 000040	#7-1113	7-1113							
SW06	= 000100	#7-1113	7-1113							
SW07	= 000200	#7-1113	7-1113							
SW08	= 000400	#7-1113	7-1113							
SW09	= 001000	#7-1113	7-1113							
SW1	= 000002	#7-1113								
SW10	= 002000	#7-1113								
SW11	= 004000	#7-1113								
SW12	= 010000	#7-1113								
SW13	= 020000	#7-1113	9-1218	12-2598						
SW14	= 040000	#7-1113								
SW15	= 100000	#7-1113								
SW2	= 000004	#7-1113								
SW3	= 000010	#7-1113								
SW4	= 000020	#7-1113								
SW5	= 000040	#7-1113								
SW6	= 000100	#7-1113								
SW7	= 000200	#7-1113	9-1220	12-2600						
SW8	= 000400	#7-1113								
SW9	= 001000	#7-1113								
S1	015116	#13-2761								
S10	015264	#13-2807								
S11	015310	#13-2815	13-2818							
S12	015320	13-2816	#13-2818							
S2	015152	#13-2774	13-2861	13-2868						
S3	015154	#13-2775	13-2822	13-2876						
S4	015160	#13-2777	13-2878							
S5	015204	#13-2785	13-2788							
S6	015214	13-2786	#13-2788							
S7	015222	#13-2793	13-2826							
S8	015256	#13-2804	13-2864	13-2871	13-2887					
S9	015260	#13-2805	13-2841	13-2889						
TAB	= 000011	#7-1110	20-6015	20-6017	20-6018	20-6022	20-6029	20-6030	20-6031	20-6031
		20-6031	20-6034	20-6034	20-6035	20-6035	20-6035	20-6036	20-6036	20-6037
		20-6037	20-6038	20-6038	20-6039	20-6039	20-6040	20-6041	20-6042	20-6043
		20-6044	20-6045	20-6046	20-6046	20-6047	20-6048	20-6048	20-6048	20-6060
		20-6060	20-6060	20-6061	20-6071	20-6071	20-6075	20-6075	20-6075	20-6377
		20-6377	20-6378	20-6378	20-6378	20-6379	20-6379	20-6380	20-6381	20-6381
		20-6382	20-6382	20-6383	20-6383	20-6384	20-6384	20-6385	20-6385	20-6394
		20-6394	20-6395	20-6396	20-6396	20-6397	20-6397	20-6398	20-6398	20-6399

SYMBOL CROSS REFERENCE
SYMBOL VALUE

REFERENCES

SYMBOL	VALUE	REFERENCES	20-6403	20-6404	20-6407	20-6407	20-6407	20-6408
		20-6399	20-6403	20-6404	20-6407	20-6407	20-6407	20-6408
		20-6408	20-6409	20-6414	20-6415	20-6422	20-6422	20-6423
		20-6427	20-6429	20-6430	20-6434	20-6434	20-6444	20-6445
		20-6445	20-6469	20-6475	20-6475	20-6478	20-6478	20-6479
		20-6491	20-6491	20-6496	20-6496	20-6497	20-6497	20-6511
		20-6511	20-6540	20-6540	20-6540			
		#7-1113	9-1139	9-1139				
TBITVE	= 000014	12-2224	12-2229	12-2247	12-2267	12-2272	12-2301	12-2337 #12-2375
TDAT10	011620	#12-2376						
TDAT11	011622	12-2298	#12-2377					
TDAT12	011624	12-2299	#12-2378					
TDAT13	011626	12-2243	12-2246	12-2295	12-2300	12-2338	#12-2370	
TDAT00	011610	#12-2371						
TDAT01	011612	12-2252	12-2306	#12-2372				
TDAT02	011614	12-2309	#12-2373					
TDAT03	011616	12-2314	12-2333	12-2340	12-2347	12-2358	#12-2380	
TDONE	011630	12-2236	#12-2318					
TERRO	011376	12-2256	12-2308	#12-2336				
TERR1	011460	12-2258	#12-2343					
TERR2	011500	#12-2345	12-2350					
TERR25	011514	12-2290	#12-2353					
TERR3	011544	12-2311	#12-2348					
TERR4	011526	#7-1113						
TKVEC	= 000060	12-2223	12-2266	#12-2360				
TPAT10	011570	#12-2361						
TPAT11	011572	12-2306	#12-2362					
TPAT12	011574	12-2309	#12-2363					
TPAT13	011576	12-2232	12-2275	#12-2365				
TPAT20	011600	#12-2366						
TPAT21	011602	#12-2367						
TPAT22	011604	#12-2368						
TPAT23	011606	#7-1113						
TPVEC	= 000064	#7-1113	9-1139	9-1139				
TRAPVE	= 000034	#7-1113						
TRTVEC	= 000014	#7-1113						
TST1	004270	#9-1166						
TST10	011024	#12-2220						
TST11	011632	#12-2517						
TST12	014170	#13-2654						
TST13	015114	#13-2760						
TST14	015650	#13-2918						
TST15	016144	#13-3017						
TST16	016436	#13-3114						
TST17	016760	#13-3216						
TST2	004656	#9-1277						
TST20	017310	#14-3320						
TST21	020016	#14-3463						
TST22	020522	#14-3607						
TST23	021176	#14-3728						
TST24	021676	#14-3876						
TST25	023012	#15-4090						
TST26	023570	#15-4232						
TST27	024364	#15-4382						

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES										
TST3		004760	#11-1325										
TST30		024770	#15-4478										
TST31		025272	#15-4559										
TST32		026324	#17-4761										
TST33		030112	#17-5057										
TST34		031416	#19-5304										
TST35		033412	#19-5561										
TST36		034166	#19-5664										
TST37		034542	#19-5749										
TST4		005664	#11-1529										
TST5		006126	#11-1609										
TST6		006266	#11-1667										
TST7		010162	#12-2040										
TYPE	=	104401	9-1140	19-5753	19-5753	19-5753	19-5757	19-5757	19-5761	19-5763	19-5767		
			19-5767	19-5767	19-5767	19-5767	19-5767	#19-5769	19-5774	19-5785	19-5813		
			19-5815	19-5820	19-5822	19-5850	19-5862	19-5866	19-5870	19-5889	20-5898		
			20-5909	20-5916	20-5926								
TYPOC	=	104402	19-5767	#19-5769	19-5797	19-5840	19-5849	19-5853	19-5861	19-5865	19-5869		
			19-5873	20-5908									
TYPON	=	104404	#19-5769										
TYPOS	=	104403	19-5753	19-5753	#19-5769	19-5880							
T1		011026	#12-2221										
T10		011170	12-2255	#12-2257									
T105		011176	12-2250	#12-2260									
T11		011200	#12-2264										
T12		011202	#12-2266										
T13		011216	#12-2269	12-2270									
T14		011260	12-2279	#12-2282									
T15		011262	#12-2283	12-2322	12-2354								
T16		011264	#12-2284	12-2324									
T17		011302	12-2289	#12-2292									
T2		011046	#12-2226	12-2227									
T20		011342	#12-2303	12-2313									
T21		011356	#12-2308	12-2310									
T22		011360	12-2307	#12-2309									
T23		011372	12-2304	#12-2313									
T3		011114	12-2237	#12-2239									
T4		011116	#12-2240	12-2318									
T5		011120	#12-2241	12-2320									
T6		011144	#12-2249	12-2260									
T7		011160	#12-2254	12-2257									
UDONE		023012	15-3990	15-3999	15-4017	15-4032	15-4043	15-4048	#15-4080				
UERR0		022456	14-3885	#15-3993									
UERR1		022502	14-3905	15-3964	#15-4003								
UERR10		022510	#15-4005	15-4019									
UERR11		022552	#15-4014										
UERR2		022566	15-3928	15-3946	#15-4018								
UERR20		022574	15-4004	#15-4020									
UERR21		022636	#15-4029										
UERR3		022652	15-3978	#15-4035									
UERR4		022702	15-4042	#15-4044									
UFLAG		022776	14-3877	15-3965	15-3972	#15-4074							

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES							
UPAT00		022726	14-3878	14-3889	14-3911	15-3932	15-3950	15-3968	15-3981	#15-4049
UPAT01		022730	#15-4050							
UPAT02		022732	#15-4051							
UPAT03		022734	#15-4052							
UPAT10		022736	14-3895	#15-4054						
UPAT11		022740	#15-4055							
UPAT12		022742	#15-4056							
UPAT13		022744	#15-4057							
UPAT20		022746	14-3917	#15-4059						
UPAT21		022750	#15-4060							
UPAT22		022752	#15-4061							
UPAT23		022754	#15-4062							
UPAT30		022756	15-3937	#15-4064						
UPAT31		022760	#15-4065							
UPAT32		022762	#15-4066							
UPAT33		022764	#15-4067							
UPAT40		022766	15-3955	15-3983	#15-4069					
UPAT41		022770	#15-4070							
UPAT42		022772	#15-4071							
UPAT43		022774	#15-4072							
UROM1		023004	14-3891	14-3913	15-3934	15-3952	15-4020	#15-4077		
UROM2		023006	14-3892	14-3914	15-3935	15-3953	15-4021	#15-4078		
UROM3		023010	14-3893	14-3915	15-3936	15-3954	15-4006	#15-4079		
UTMP1		023000	14-3883	14-3891	15-3952	15-3973	#15-4075			
UTMP2		023002	14-3884	14-3913	15-3934	15-3974	#15-4076			
U0		021714	#14-3880	14-3881						
U1		021744	#14-3886	15-3975						
U10		022302	#15-3956	15-3959						
U11		022304	#15-3957	15-3993						
U12		022336	15-3963	#15-3965						
U13		022354	#15-3970	15-3971						
U14		022406	15-3966	#15-3976						
U15		022436	#15-3984	15-3987	15-4044					
U16		022440	#15-3985	15-4035						
U2		022010	#14-3896	14-3898						
U3		022042	14-3904	#14-3907						
U4		022106	#14-3919	14-3921						
U5		022140	15-3927	#15-3929						
U6		022204	#15-3939	15-3941						
U7		022236	15-3945	#15-3947						
WDAPO0		023556	#15-4218							
WDAT01		023560	#15-4219							
WDAT02		023562	#15-4220							
WDAT03		023564	#15-4221							
WDONE		023566	15-4110	15-4118	15-4138	15-4146	15-4166	15-4174	15-4196	15-4199
			#15-4223							
WPAT00		023546	15-4094	15-4097	15-4101	15-4103	15-4122	15-4127	15-4131	15-4133
			15-4153	15-4157	15-4159	15-4178	15-4183	15-4187	15-4189	15-4208
			15-4210	15-4211	#15-4213					15-4209
WPAT01		023550	#15-4214							
WPAT02		023552	#15-4215							
WPAT03		023554	#15-4216							

SYMBOL	CROSS REFERENCE	VALUE	REFERENCES							
WSETUP		023514	15-4108	15-4164	15-4194	#15-4208				
W1		023014	#15-4091							
W10		023226	15-4136	#15-4139						
W11		023254	15-4141	#15-4147						
W12		023304	15-4152	#15-4154						
W13		023330	#15-4161	15-4167						
W14		023344	15-4162	#15-4167						
W15		023372	15-4169	#15-4175						
W16		023426	15-4180	#15-4184						
W17		023452	#15-4191	15-4197						
W2		023044	15-4096	#15-4098						
W20		023466	15-4192	#15-4197						
W3		023070	#15-4105	15-4111						
W4		023106	15-4106	#15-4111						
W5		023136	15-4113	#15-4119						
W6		023172	15-4124	#15-4128						
W7		023216	#15-4135	15-4139						
XAPT11		024344	#15-4365							
XDAT00		024322	15-4244	15-4267	15-4290	15-4313	15-4331	15-4336	#15-4354	
XDAT01		024324	#15-4355							
XDAT02		024326	#15-4356							
XDAT03		024330	#15-4357							
XDONE		024362	15-4325	15-4333	15-4339	15-4347	15-4352	#15-4373		
XERR1		024206	15-4250	15-4273	#15-4329					
XERR2		024270	15-4255	15-4278	#15-4343					
XERR3		024234	15-4296	15-4319	#15-4334					
XERR4		024304	15-4301	15-4324	#15-4348					
XPAT00		024332	15-4236	15-4246	15-4282	15-4292	#15-4359			
XPAT01		024334	#15-4360							
XPAT02		024336	#15-4361							
XPAT03		024340	#15-4362							
XPAT10		024342	15-4240	15-4263	15-4286	15-4309	15-4329	15-4334	#15-4364	
XPAT12		024346	#15-4366							
XPAT13		024350	#15-4367							
XPAT20		024352	15-4259	15-4269	15-4305	15-4315	#15-4368			
XPAT21		024354	#15-4369							
XPAT22		024356	#15-4370							
XPAT23		024360	#15-4371							
XTMP		024320	15-4237	15-4260	15-4283	15-4306	15-4330	15-4335	15-4337	#15-4353
X1		023572	#15-4233							
X10		023764	15-4272	#15-4274						
X11		024000	15-4277	#15-4279						
X12		024034	15-4285	#15-4287						
X13		024060	#15-4294	15-4297						
X14		024066	15-4295	#15-4297						
X15		024102	15-4300	#15-4302						
X16		024136	15-4308	#15-4310						
X17		024162	#15-4317	15-4320						
X2		023626	15-4239	#15-4241						
X20		024170	15-4318	#15-4320						
X21		024204	15-4323	#15-4325						
X3		023652	#15-4248	15-4251						

SYMBOL	VALUE	REFERENCES
X4	023660	15-4249 #15-4251
X5	023676	15-4254 #15-4256
X6	023732	15-4262 #15-4264
X7	023756	#15-4271 15-4274
YDAT00	024726	15-4396 15-4416 15-4425 15-4433 #15-4449
YDAT01	024730	#15-4450
YDAT02	024732	#15-4451
YDAT03	024734	#15-4452
YDONE	024766	15-4413 15-4428 15-4436 15-4442 #15-4469
YERR1	024566	15-4418 #15-4421
YERR2	024630	15-4420 #15-4429
YERR3	024672	15-4405 #15-4437
YFLAG	024716	15-4383 15-4406 15-4408 #15-4444
YPAT00	024736	15-4384 15-4410 #15-4454
YPAT01	024740	#15-4455
YPAT02	024742	#15-4456
YPAT03	024744	#15-4457
YPAT10	024746	15-4385 15-4409 #15-4459
YPAT11	024750	#15-4460
YPAT12	024752	#15-4461
YPAT13	024754	#15-4462
YPAT20	024756	15-4390 15-4424 15-4432 #15-4464
YPAT21	024760	#15-4465
YPAT22	024762	#15-4466
YPAT23	024764	#15-4467
YTMP1	024720	15-4384 15-4392 15-4409 15-4415 15-4423 15-4431 #15-4445
YTMP2	024722	15-4385 15-4399 15-4410 15-4426 15-4434 #15-4446
YTMP3	024724	15-4386 15-4403 15-4411 15-4440 #15-4447
Y1	024414	#15-4387 15-4412
Y2	024436	#15-4393 15-4422 15-4430 15-4438
Y3	024462	#15-4400 15-4402
Y4	024500	15-4404 #15-4406
Y5	024540	15-4407 #15-4413
Y6	024542	15-4401 #15-4414
Y7	024556	#15-4417 15-4419
ZDAT00	025230	15-4491 15-4513 #15-4528
ZDAT01	025232	#15-4529
ZDAT02	025234	#15-4530
ZDAT03	025236	#15-4531
ZDONE	025270	15-4508 15-4516 15-4522 #15-4548
ZERR1	025134	15-4497 #15-4509
ZERR2	025176	15-4501 #15-4517
ZFLAG	025222	*15-4479 15-4502 15-4504 #15-4524
ZPAT00	025240	15-4480 #15-4533
ZPAT01	025242	#15-4534
ZPAT02	025244	#15-4535
ZPAT03	025246	#15-4536
ZPAT10	025250	15-4505 #15-4538
ZPAT11	025252	#15-4539
ZPAT12	025254	#15-4540
ZPAT13	025256	#15-4541
ZPAT20	025260	15-4485 15-4512 #15-4543

SYMBOL	VALUE	REFERENCES								
\$CPUOP	001344	#8-1126								
\$CRLF	001313	#8-1126	19-5753	19-5757	19-5757	19-5757	19-5761	19-5761	19-5761	19-5767
		19-5786	19-5816	19-5823	20-5927	22-6717	22-6725	22-6725	22-6726	22-6726
		22-6727	22-6728	22-6728	22-6729	22-6731	22-6731	22-6731	22-6732	22-6732
		22-6738	22-6738	22-6738	22-6739	22-6741	22-6741	22-6741	22-6742	22-6747
		22-6747	22-6751	22-6751	22-6752	22-6752	22-6754	22-6754	22-6755	22-6755
		22-6755	22-6755	22-6756	22-6756	22-6757	22-6757	22-6757	22-6758	22-6759
		22-6760	22-6763	22-6764	22-6767	22-6767	22-6771	22-6771	22-6772	22-6772
		22-6785	22-6785	22-6786	22-6786	22-6814	22-6815	22-6815	22-6816	22-6816
		22-6816	22-6821	22-6821	22-6822	22-6822	22-6822	22-6822	22-6824	22-6824
		22-6825	22-6825	22-6825	22-6825	22-6826	22-6826			
\$DDW0	001402	#8-1126								
\$DDW1	001404	#8-1126								
\$DDW10	001426	#8-1126								
\$DDW11	001430	#8-1126								
\$DDW12	001432	#8-1126								
\$DDW13	001434	#8-1126								
\$DDW14	001436	#8-1126								
\$DDW15	001440	#8-1126								
\$DDW2	001406	#8-1126								
\$DDW3	001410	#8-1126								
\$DDW4	001412	#8-1126								
\$DDW5	001414	#8-1126								
\$DDW6	001416	#8-1126								
\$DDW7	001420	#8-1126								
\$DDW8	001422	#8-1126								
\$DDW9	001424	#8-1126								
\$DEVCT	001326	#8-1126								
\$DEVM	001374	#8-1126								
\$DOAGN	034764	19-5753	19-5753	19-5753	#19-5753					
\$ENDAD	034754	9-1135	9-1140	#19-5753	19-5757					
\$ENDCT	034576	9-1139	#19-5753							
\$ENULL	035030	#19-5753								
\$ENV	001336	#8-1126	9-1140	19-5757	19-5761	19-5765	19-5765			
\$ENVM	001337	#8-1126	9-1139	19-5761	19-5761	19-5765				
\$EOP	034542	#19-5753	20-5951	20-5962	20-5973					
\$EOPCT	034570	*9-1139	#19-5753	19-5753						
\$ERFLG	001103	#8-1126	19-5755	19-5755	19-5755	*19-5755	19-5755	19-5755	*19-5757	19-5757
		19-5757								
\$ERMAX	001115	#8-1126	*9-1139	19-5755	*19-5755	19-5755	19-5755			
\$ERROR	035314	9-1139	#19-5757							
\$ERRPC	001116	#8-1126	9-1226	12-2607	*19-5757	*19-5757	19-5757	19-5757	19-5757	19-5789
		19-5796								
\$ERRTB	001442	#9-1126	19-5809							
\$ERTTL	001112	#8-1126	19-5753	*19-5753	*19-5757	19-5757	19-5757			
\$ESCAP	001304	#8-1126	*9-1139	*19-5755	19-5757	19-5757	19-5757	19-5757		
\$ETABL	001336	#8-1126								
\$ETEND	001442	#8-1126	9-1136							
\$FATAL	001320	#8-1126	*19-5765							
\$FFLG	036672	*19-5765	*19-5765	19-5765	*19-5765	#19-5765				
\$FILLC	001156	#8-1126	19-5761	19-5761	19-5761					
\$FILLS	001155	#8-1126	19-5761	19-5761						

SYMBOL CROSS REFERENCE

SYMBOL	VALUE	REFERENCES								
\$GDADR	001120	#8-1126								
\$GDDAT	001124	#8-1126								
\$GET42	034726	#19-5753								
\$GTSWR	036744	#19-5767	19-5769	19-5769						
\$HD	= 000003	7-1104	7-1104	7-1104						
\$HIBTS	003572	#9-1136								
\$ICNT	001104	#8-1126	*19-5755	19-5755	*19-5755	19-5755	19-5755			
\$ILLUP	037574	19-5774	19-5774	#19-5774						
\$INTAG	001135	#8-1126	19-5767	19-5767	19-5767					
\$ITEMB	001114	#8-1126	9-1227	12-2608	*19-5757	19-5757	19-5757	19-5757	19-5792	
\$LF	001314	#8-1126	19-5757	19-5757	19-5761	19-5761				
\$LFLG	036671	*19-5765	#19-5765							
\$LOOP	035022	19-5753	#19-5753							
\$LPADR	001106	#8-1126	*9-1139	*19-5755	*19-5755	19-5755	19-5755	19-5755		
\$LPERR	001110	#8-1126	*9-1139	19-5755	*19-5755	19-5755	19-5755	19-5757	20-5981	
\$MADR1	001350	#8-1126								
\$MADR2	001354	#8-1126								
\$MADR3	001360	#8-1126								
\$MADR4	001364	#8-1126								
\$MAIL	001316	#8-1126	9-1136	9-1136	9-1139	9-1140	19-5755	19-5757	19-5761	
\$MAMS1	001346	#8-1126								
\$MAMS2	001352	#8-1126								
\$MAMS3	001356	#8-1126								
\$MAMS4	001362	#8-1126								
\$MBADR	003574	#9-1136								
\$MFLG	036670	*19-5765	19-5765	*19-5765	#19-5765					
\$MNEW	037321	19-5767	#19-5767							
\$MSGAD	001332	#8-1126	*19-5765	19-5765						
\$MSGLG	001334	#8-1126	*19-5765							
\$MSGTY	001316	#8-1126	19-5765	*19-5765	19-5765	*19-5765				
\$MSWR	037310	19-5767	#19-5767							
\$MTYP1	001347	#8-1126								
\$MTYP2	001353	#8-1126								
\$MTYP3	001357	#8-1126								
\$MTYP4	001363	#8-1126								
\$MXCNT	035312	19-5755	19-5755	19-5755	#19-5755					
\$NULL	001154	#8-1126	19-5761	19-5761	19-5761					
\$NWTST	= 000001	#9-1166	9-1166	#9-1166	9-1166	#9-1277	9-1277	#9-1277	9-1277	#11-1325
		11-1325	#11-1325	11-1325	#11-1529	11-1529	#11-1529	11-1529	#11-1609	11-1609
		#11-1609	11-1609	#11-1667	11-1667	#11-1667	11-1667	#12-2040	12-2040	#12-2040
		12-2040	#12-2220	12-2220	#12-2220	12-2220	#12-2517	12-2517	#12-2517	12-2517
		#13-2654	13-2654	#13-2654	13-2654	#13-2760	13-2760	#13-2760	13-2760	#13-2918
		13-2918	#13-2918	13-2918	#13-3017	13-3017	#13-3017	13-3017	#13-3114	13-3114
		#13-3114	13-3114	#13-3216	13-3216	#13-3216	13-3216	#14-3320	14-3320	#14-3320
		14-3320	#14-3463	14-3463	#14-3463	14-3463	#14-3607	14-3607	#14-3607	14-3607
		#14-3728	14-3728	#14-3728	14-3728	#14-3876	14-3876	#14-3876	14-3876	#15-4090
		15-4090	#15-4090	15-4090	#15-4232	15-4232	#15-4232	15-4232	#15-4382	15-4382
		#15-4382	15-4382	#15-4478	15-4478	#15-4478	15-4478	#15-4559	15-4559	#15-4559
		15-4559	#17-4761	17-4761	#17-4761	17-4761	#17-5057	17-5057	#17-5057	17-5057
		#19-5304	19-5304	#19-5304	19-5304	#19-5561	19-5561	#19-5561	19-5561	#19-5664
		19-5664	#19-5664	19-5664						
\$OCNT	036422	*19-5763	*19-5763	#19-5763						

SYMBOL CROSS REFERENCE		REFERENCES									
SYMBOL	VALUE										
\$OMODE	036424	*19-5763	*19-5763	19-5763	*19-5763	*19-5763	#19-5763				
\$OVER	035276	19-5755	19-5755	19-5755	19-5755	#19-5755					
\$PASS	001324	#8-1126	*9-1139	*19-5753	*19-5753	19-5753	19-5753	19-5753	19-5755	19-5755	
\$PASTM	003600	19-5755	#9-1136								
\$PWRAD	037556	#19-5774									
\$PWRDN	037416	9-1139	#19-5774	19-5774							
\$PWRMG	037552	#19-5774									
\$PWRUP	037470	19-5774	#19-5774								
\$QUES	001312	#8-1126	19-5757	19-5757	19-5761	19-5761	19-5767				
\$RDCHR	037156	#19-5767	19-5769	19-5769							
\$RDDEC	= *****	19-5769									
\$RDLIN	= *****	19-5769									
\$RDOCT	= *****	19-5769									
\$RDSZ	= 000001	#19-5767	19-5767								
\$REGAD	001160	#8-1126									
\$REGO	001162	#8-1126	19-5757	19-5757	19-5757						
\$REG1	001164	#8-1126									
\$REG10	001202	#8-1126									
\$REG11	001204	#8-1126									
\$REG12	001206	#8-1126									
\$REG13	001210	#8-1126									
\$REG14	001212	#8-1126									
\$REG15	001214	#8-1126									
\$REG16	001216	#8-1126									
\$REG17	001220	#8-1126									
\$REG2	001166	#8-1126									
\$REG20	001222	#8-1126									
\$REG21	001224	#8-1126									
\$REG22	001226	#8-1126									
\$REG23	001230	#8-1126									
\$REG3	001170	#8-1126									
\$REG4	001172	#8-1126									
\$REG5	001174	#8-1126									
\$REG6	001176	#8-1126									
\$REG7	001200	#8-1126									
\$RESRE	035610	#19-5759	19-5769								
\$RTNAD	035024	#19-5753									
\$RTRN	035020	9-1139	*9-1139	*9-1139	19-5753	#19-5753					
\$R2A	= *****	19-5769									
\$SAVRE	035552	#19-5759	19-5769	19-5769							
\$SAVR6	037600	*19-5774	19-5774	*19-5774	*19-5774	#19-5774					
\$SCOPE	035034	9-1139	#19-5755								
\$SETUP	= 000137	#7-1123	7-1123	#7-1123	7-1123	#7-1123	7-1123	#7-1123	7-1123	#7-1123	
		7-1123	#7-1123	7-1123	#7-1123	9-1139	9-1139	9-1139	9-1139	9-1139	
		9-1139	9-1139	9-1139	9-1139	9-1139	9-1139	9-1139	9-1140	9-1140	
		9-1140	19-5753	19-5753	19-5755	19-5757	19-5757	19-5757	19-5757	19-5767	
		19-5767	19-5774								
\$STUP	= 177777	#7-1123	#7-1123	7-1123	#7-1123	#7-1123	7-1123	#7-1123	#7-1123	7-1123	
		#7-1123	#7-1123	7-1123	#7-1123	#7-1123	7-1123	#7-1123	#7-1123	7-1123	
\$SVLAD	035242	19-5755	#19-5755								
\$SVPC	= 003572	#9-1135	9-1135								

SYMBOL CROSS REFERENCE

SYMBOL	VALUE	REFERENCES								
\$SWR	= 177400	7-1104	#7-1104	#7-1108	8-1126	8-1126	8-1126	9-1139	9-1139	9-1139
		9-1139	9-1139	9-1166	9-1277	11-1325	11-1529	11-1609	11-1667	12-2040
		12-2220	12-2517	13-2654	13-2760	13-2918	13-3017	13-3114	13-3216	14-3320
		14-3463	14-3607	14-3728	14-3876	15-4090	15-4232	15-4382	15-4478	15-4559
		17-4761	17-5057	19-5304	19-5561	19-5664	19-5753	19-5753	19-5753	19-5753
		19-5753	19-5755	19-5755	19-5755	19-5755	19-5755	19-5755	19-5755	19-5755
		19-5755	19-5755	19-5755	19-5755	19-5755	19-5755	19-5755	19-5755	19-5755
		19-5755	19-5755	19-5755	19-5757	19-5757	19-5757	19-5757	19-5757	19-5757
		19-5757	19-5757	19-5757	19-5757	19-5757	19-5774			
\$SWREG	001340	#8-1126	9-1139							
\$SWRMK	= 000000	19-5755	19-5755	19-5755	19-5755	19-5755	19-5755	19-5755	19-5755	19-5755
		19-5755								
\$SWRMS	= 000200	#7-1109								
\$TAB	040446	20-5917	#20-6015	22-6692	22-6692	22-6694	22-6694	22-6694	22-6695	22-6695
		22-6696	22-6698	22-6700	22-6706	22-6707	22-6708	22-6709	22-6712	22-6712
		22-6714	22-6714	22-6715	22-6716	22-6718	22-6718	22-6719	22-6720	22-6720
		22-6721	22-6723	22-6723	22-6724	22-6725	22-6727	22-6727	22-6730	22-6730
		22-6733	22-6733	22-6737	22-6737	22-6740	22-6740	22-6748	22-6748	22-6749
		22-6750	22-6750	22-6754	22-6756	22-6756	22-6763	22-6766	22-6766	22-6769
		22-6769	22-6771	22-6780	22-6780	22-6785	22-6788	22-6788	22-6803	22-6814
		22-6814	22-6821	22-6824	22-6830	22-6830	22-6843	22-6872	22-6872	22-6873
\$TBIT	035026	*9-1139	*19-5753	19-5753	19-5753	#19-5753	*19-5774			
\$TERM	= 000030	#19-5772								
\$TESTN	001322	#8-1126	*19-5755							
\$THE	040642	#20-6021	22-6704	22-6708						
\$TIMES	001302	#8-1126	*9-1139	*19-5753	*19-5755	19-5755	*19-5755	19-5755	19-5755	
\$TKB	001146	#8-1126	19-5761	19-5761	19-5767	19-5767	19-5767	19-5767	19-5767	19-5767
\$TKS	001144	#8-1126	19-5761	19-5761	19-5767	19-5767	19-5767	19-5767	19-5767	19-5767
		19-5767								
\$TMP0	001232	#8-1126	19-5787	19-5788	22-6692	22-6694	22-6695	22-6698	22-6700	22-6706
		22-6708	22-6712	22-6714	22-6716	22-6718	22-6720	22-6723	22-6725	22-6727
		22-6730	22-6733	22-6737	22-6740	22-6748	22-6750	22-6754	22-6756	22-6759
		22-6763	22-6766	22-6769	22-6771	22-6780	22-6785	22-6788	22-6803	22-6814
		22-6821	22-6824	22-6830	22-6843	22-6872	22-6873			
\$TMP1	001234	#8-1126	19-5789	22-6692	22-6694	22-6695	22-6698	22-6700	22-6706	22-6708
		22-6712	22-6714	22-6716	22-6718	22-6720	22-6723	22-6725	22-6727	22-6730
		22-6733	22-6737	22-6740	22-6748	22-6750	22-6754	22-6756	22-6759	22-6763
		22-6766	22-6769	22-6771	22-6780	22-6785	22-6788	22-6803	22-6814	22-6821
		22-6824	22-6830	22-6843	22-6872	22-6873				
\$TMP10	001252	#8-1126	11-1329	11-1358	11-1386	11-1415	11-1930	12-1963	12-1968	12-1999
		14-3897	14-3920	15-3940	15-3958	22-6704	22-6706	22-6708	22-6751	22-6761
		22-6816	22-6830							
\$TMP11	001254	#8-1126	11-1456	11-1462	11-1480	11-1486	22-6705	22-6762	22-6830	
\$TMP12	001256	#8-1126	22-6762							
\$TMP13	001260	#8-1126	22-6762							
\$TMP14	001262	#8-1126								
\$TMP15	001264	#8-1126	11-1929	12-1961	12-1967	12-1997	22-6751			
\$TMP16	001266	#8-1126								
\$TMP17	001270	#8-1126								
\$TMP2	001236	#8-1126	9-1208	9-1224	9-1234	9-1247	9-1260	9-1265	9-1297	11-1333
		11-1347	11-1362	11-1374	11-1390	11-1403	11-1418	11-1431	11-1540	11-1594
		11-1615	11-1646	11-1670	11-1712	11-1931	12-1970	12-2059	12-2108	12-2157

		12-2185	12-2237	12-2279	12-2328	12-2354	12-2519	12-2520	12-2521	12-2522
		12-2523	12-2524	12-2525	12-2526	12-2527	12-2528	12-2529	12-2530	13-2720
		13-2828	13-2861	13-2864	13-2868	13-2871	13-2882	13-2893	13-2966	13-2972
		13-2981	13-3065	13-3070	13-3079	13-3161	13-3168	13-3180	13-3261	14-3274
		14-3279	14-3291	14-3395	14-3400	14-3410	14-3422	14-3427	14-3538	14-3554
		14-3566	14-3571	14-3674	14-3679	14-3682	14-3690	14-3697	14-3806	14-3811
		14-3814	14-3827	14-3832	14-3898	14-3921	15-3941	15-3959	15-3987	15-3996
		15-4044	15-4096	15-4124	15-4152	15-4180	15-4239	15-4262	15-4285	15-4308
		15-4422	15-4430	15-4438	15-4510	15-4518	15-4567	17-4596	17-4631	17-4657
		17-4670	17-4674	17-4766	17-4794	17-4820	17-4849	17-4880	17-4908	17-5063
		17-5086	17-5112	17-5135	17-5164	17-5185	19-5309	19-5338	19-5360	19-5382
		19-5410	19-5438	19-5467	19-5566	19-5595	19-5669	19-5691	20-5943	20-5958
		20-5969	22-6692	22-6694	22-6695	22-6698	22-6700	22-6706	22-6709	22-6712
		22-6714	22-6716	22-6718	22-6720	22-6723	22-6727	22-6730	22-6733	22-6737
		22-6740	22-6748	22-6750	22-6754	22-6756	22-6759	22-6763	22-6766	22-6769
		22-6771	22-6780	22-6785	22-6788	22-6803	22-6814	22-6821	22-6824	22-6830
		22-6843	22-6872	22-6873						
\$TMP20	001272	#8-1126	22-6699	22-6700	22-6732	22-6747				
\$TMP21	001274	#8-1126	22-6698	22-6700						
\$TMP22	001276	#8-1126								
\$TMP23	001300	#8-1126								
\$TMP3	001240	#8-1126	9-1209	9-1225	11-1304	11-1310	11-1492	11-1499	11-1547	11-1570
		11-1584	11-1630	11-1636	11-1649	11-1780	11-1788	11-1816	11-1824	11-1847
		11-1862	11-1877	11-1893	11-1908	11-1916	11-1924	11-1932	12-1969	12-2060
		12-2109	12-2158	12-2186	12-2238	12-2280	12-2330	12-2355	12-2588	12-2604
		13-2849	13-2855	13-2964	13-2973	13-2982	13-3063	13-3071	13-3080	13-3162
		13-3169	13-3181	13-3262	14-3273	14-3280	14-3289	14-3420	14-3428	14-3543
		14-3564	14-3572	14-3684	14-3691	14-3816	14-3833	15-4014	15-4029	15-4046
		15-4116	15-4144	15-4172	15-4202	15-4208	15-4329	15-4334	15-4344	15-4349
		15-4423	15-4431	15-4439	15-4511	15-4519	17-4682	17-4688	17-4696	17-4702
		17-4706	17-4712	17-4934	17-4938	17-4941	17-4947	17-4953	17-4956	17-4962
		17-4968	17-4974	17-4977	17-4983	17-4986	17-4989	17-4992	17-5205	17-5210
		17-5216	17-5225	17-5231	19-5242	19-5494	19-5497	19-5498	19-5499	19-5500
		19-5501	19-5502	19-5503	19-5504	19-5505	19-5506	19-5507	19-5508	19-5622
		19-5625	19-5626	19-5627	19-5628	19-5710	19-5715	19-5717	20-5946	22-6692
		22-6694	22-6695	22-6699	22-6707	22-6709	22-6712	22-6714	22-6718	22-6720
		22-6723	22-6725	22-6727	22-6730	22-6733	22-6737	22-6740	22-6748	22-6750
		22-6755	22-6757	22-6759	22-6763	22-6766	22-6769	22-6771	22-6772	22-6780
		22-6788	22-6814	22-6821	22-6824	22-6872				
\$TMP4	001242	#8-1126	9-1210	11-1305	11-1311	11-1493	11-1500	11-1571	11-1585	11-1631
		11-1637	11-1781	11-1787	11-1812	11-1823	11-1848	11-1917	11-1925	12-2159
		12-2166	12-2187	12-2331	12-2337	12-2356	12-2589	12-2605	13-2848	13-2854
		13-2965	13-2974	13-2983	13-3064	13-3072	13-3081	13-3163	13-3170	13-3182
		13-3263	14-3269	14-3281	14-3290	14-3421	14-3429	14-3552	14-3565	14-3573
		14-3685	14-3692	14-3817	14-3834	15-4015	15-4030	15-4045	15-4115	15-4143
		15-4171	15-4201	15-4209	15-4330	15-4335	15-4345	15-4350	15-4424	15-4432
		15-4440	15-4512	15-4520	17-4681	17-4687	17-4695	17-4701	17-4707	17-4713
		17-4933	17-4937	17-4943	17-4949	17-4958	17-4964	17-4970	17-4980	17-5204
		17-5209	17-5214	17-5220	17-5223	17-5229	17-5235	18-5239	19-5246	19-5249
		19-5493	19-5497	19-5498	19-5499	19-5500	19-5501	19-5502	19-5503	19-5504
		19-5505	19-5506	19-5507	19-5508	19-5621	19-5625	19-5626	19-5627	19-5628
		19-5711	19-5715	19-5717	20-5948	22-6693	22-6696	22-6699	22-6707	22-6709

SYMBOL CROSS REFERENCE
SYMBOL VALUE

REFERENCES

		22-6715	22-6719	22-6721	22-6724	22-6725	22-6726	22-6727	22-6731	22-6734
		22-6738	22-6739	22-6739	22-6749	22-6755	22-6758	22-6760	22-6764	22-6767
		22-6770	22-6781	22-6788	22-6814	22-6822	22-6825			
\$TMP5	001244	#8-1126	9-1211	11-1327	11-1539	11-1782	11-1789	11-1825	11-1849	11-1863
		11-1878	11-1894	11-1909	11-1918	11-1934	12-1971	12-2167	12-2172	12-2178
		12-2338	12-2345	12-2519	12-2520	12-2521	12-2522	12-2523	12-2524	12-2525
		12-2526	12-2527	12-2528	12-2529	12-2530	14-3402	14-3408	14-3545	14-3672
		14-3698	14-3804	14-3825	15-4005	15-4020	15-4211	15-4331	15-4336	15-4425
		15-4433	15-4513	17-4683	17-4689	17-4697	17-4703	17-4708	17-4714	17-4944
		17-4950	17-4959	17-4965	17-4971	17-4979	17-5217	17-5226	17-5232	19-5243
		19-5497	19-5498	19-5499	19-5500	19-5501	19-5502	19-5503	19-5504	19-5505
		19-5506	19-5507	19-5508	19-5625	19-5626	19-5627	19-5628	19-5715	19-5717
		22-6693	22-6704	22-6705	22-6712	22-6726	22-6726	22-6728	22-6729	22-6731
		22-6738	22-6739	22-6741	22-6742	22-6751	22-6752	22-6754	22-6756	22-6760
		22-6767	22-6785	22-6786	22-6815	22-6816	22-6822	22-6825		
\$TMP6	001246	#8-1126	11-1457	11-1463	11-1481	11-1487	11-1783	11-1794	11-1799	11-1830
		11-1835	11-1850	11-1864	11-1879	11-1895	11-1910	11-1919	11-1943	11-1953
		12-1962	12-1981	12-1991	12-1998	12-2173	12-2179	12-2343	12-2348	12-2603
		14-3404	14-3407	14-3413	14-3415	14-3417	14-3547	14-3551	14-3557	14-3559
		14-3561	14-3649	14-3653	14-3657	14-3661	14-3665	14-3670	14-3700	14-3783
		14-3787	14-3791	14-3795	14-3802	14-3821	14-3823	15-4013	15-4028	15-4210
		15-4337	15-4426	15-4434	15-4514	17-4680	17-4686	17-4692	17-4694	17-4700
		17-4709	17-4715	17-4942	17-4948	17-4954	17-4957	17-4963	17-4969	17-4975
		17-4978	17-4984	17-4987	17-4990	17-4993	17-5215	17-5221	17-5224	17-5230
		17-5236	19-5241	19-5247	19-5250	19-5497	19-5498	19-5499	19-5500	19-5501
		19-5502	19-5503	19-5504	19-5505	19-5506	19-5507	19-5508	19-5625	19-5626
		19-5627	19-5628	19-5715	19-5717	22-6705	22-6726	22-6728	22-6738	22-6741
		22-6751	22-6757	22-6760	22-6786	22-6815	22-6826			
\$TMP7	001250	#8-1126	11-1328	11-1357	11-1385	11-1414	11-1790	11-1826	11-1865	11-1880
		11-1896	11-1911	11-1933	12-1972	12-2174	12-2180	12-2344	12-2349	14-3403
		14-3409	14-3546	14-3553	14-3673	14-3699	14-3805	14-3826	15-4007	15-4022
		22-6705	22-6729	22-6731	22-6742	22-6752	22-6761	22-6786	22-6816	
\$TN	= 000037	7-1104	#7-1104	9-1166	9-1166	#9-1166	9-1277	9-1277	#9-1277	11-1325
		11-1325	#11-1325	11-1529	11-1529	#11-1529	11-1609	11-1609	#11-1609	11-1667
		11-1667	#11-1667	12-2040	12-2040	#12-2040	12-2220	12-2220	#12-2220	12-2517
		12-2517	#12-2517	13-2654	13-2654	#13-2654	13-2760	13-2760	#13-2760	13-2918
		13-2918	#13-2918	13-3017	13-3017	#13-3017	13-3114	13-3114	#13-3114	13-3216
		13-3216	#13-3216	14-3320	14-3320	#14-3320	14-3463	14-3463	#14-3463	14-3607
		14-3607	#14-3607	14-3728	14-3728	#14-3728	14-3876	14-3876	#14-3876	15-4090
		15-4090	#15-4090	15-4232	15-4232	#15-4232	15-4382	15-4382	#15-4382	15-4478
		15-4478	#15-4478	15-4559	15-4559	#15-4559	17-4761	17-4761	#17-4761	17-5057
		17-5057	#17-5057	19-5304	19-5304	#19-5304	19-5561	19-5561	#19-5561	19-5664
		19-5664	#19-5664	19-5749						
\$TPB	001152	#8-1126	19-5761	19-5761	19-5761					
\$TPFLG	001157	#8-1126	19-5761	19-5761	19-5761					
\$TPS	001150	#8-1126	19-5761	19-5761	19-5761					
\$TRAP	037332	9-1139	#19-5769							
\$TRAP2	037354	#19-5769	19-5769							
\$TRP	= 000014	#19-5769	19-5769	19-5769	19-5769	19-5769	#19-5769	19-5769	19-5769	19-5769
		19-5769	#19-5769	19-5769	19-5769	19-5769	19-5769	#19-5769	19-5769	19-5769
		19-5769	19-5769	#19-5769	19-5769	19-5769	19-5769	19-5769	#19-5769	19-5769
		19-5769	19-5769	19-5769	#19-5769	19-5769	19-5769	19-5769	19-5769	#19-5769

MACRO NAME	REFERENCES
.\$PTY	#7-1102 19-5765
.\$CATC	#7-1099 7-1125
.\$CMTA	#7-1099 #7-1126
.\$EOP	#7-1100 19-5753
.\$ERRO	#7-1100 #19-5757
.\$POWE	#7-1101 #19-5774
.\$READ	#7-1102 19-5767
.\$SAVE	#7-1100 19-5759
.\$SCOP	#7-1100 #19-5755
.\$STRAP	#7-1101 #19-5769
.\$TYPD	#7-1101
.\$TYPE	#7-1100 #19-5761
.\$TYPO	#7-1100 #19-5763