

GC23-0002-0
File No. S370-36

Systems

**OS/VS2 MVS
System Programming Library:
JES2**

JES2 Release 4.0

IBM

First Edition (May 1976)

This edition corresponds to JES2 Release 4.0 for OS/VS2 MVS and to all subsequent releases until otherwise indicated in new editions or technical newsletters.

Changes are continually made to the information in IBM system publications. Before using this publication in connection with the operation of IBM systems, refer to the *IBM System/370 Bibliography*, GC20-0001, to find out which editions are applicable and current.

Requests for additional copies of this manual and for other IBM publications should be made to your IBM representative or to the IBM branch office serving your locality.

A form for reader's comments is provided at the back of this publication. If the form has been removed, comments may be addressed to: IBM Corporation, Programming Publications, Department 4F1, 18100 Frederick Pike, Gaithersburg, Maryland 20760. Comments become the property of the IBM Corporation.

© International Business Machines Corporation 1976

Preface

This publication provides information for system programmers who are to install the job entry subsystem JES2 Release 4.0 (JES2 Release 4.0 is associated with the ID VS2.03.803.) This information formerly was found in the JES2 sections of *OS/VS2 System Programming Library: System Generation Reference*, *OS/VS2 System Programming Library: Initialization and Tuning Guide*, and *OS/VS2 System Programming Library: Job Management*.

This manual consists of seven chapters that include information about the installation and initialization of JES2, JES2 processing, remote job entry supported by JES2, and factors that affect JES2 performance.

Chapter 1, "Introduction to JES2," briefly describes the job entry subsystem. It also provides short descriptions of JES2 generation and initialization, RMT generation, and JES2 processing.

Chapter 2, "Installing JES2," provides information needed to install JES2. This chapter discusses the programming requirements for JES2 and RMT generations and includes information about the generating system, the distribution libraries, and the required spool data sets. The processing of a JES2 generation is also described. (RMT parameters and the execution of an RMT generation are described in Chapter 5.)

Chapter 3, "JES2 Initialization," describes the JES2 initialization procedure. The chapter includes the meaning and use of each of the initialization parameters and the rules for coding the parameters. It also contains descriptions of starting and restarting JES2.

Chapter 4, "JES2 Processing," discusses how you can affect JES2 processing by means of the JES2 initialization parameters and the JES2 operator commands. The chapter describes configuration, job submission and queuing, conversion and execution, and output.

Chapter 5, "Remote Job Entry," contains information about remote devices supported by JES2, the RMT generation procedure (including the RMT parameters and the execution of an RMT generation), and the operation of a remote station.

Chapter 6, "Miscellaneous JES2 Facilities," describes automatic command processing, the JES2 patching facility, the flow for time-sharing and started tasks, and the multi-access spool configuration.

Chapter 7, "JES2 Performance," discusses factors affecting JES2 performance, operator control of the batch job workload, a comparison of HASP II Version 4.0 and JES2 performance factors, and changing the JES2 "nonswappable" property to "privileged."

Related Publications

The following manuals should be available for reference when you are using this publication.

Operator's Library: OS/VS2 JES2 Commands, GC23-0007

Operator's Library: OS/VS2 System Commands, GC38-0229

Operator's Library: OS/VS2 Remote Terminals (JES2), GC38-0225

OS/VS2 MVS JES2 Logic, SY24-6000

OS/VS2 JCL, GC28-0692

OS/VS2 IBM 3540 Programmer's Reference, GC24-5111

OS/VS2 Conversion Notebook, GC28-0689
OS/VS2 System Programming Library: Storage Estimates, GC28-0604
OS/VS2 System Programming Library: System Generation Reference, GC26-3792
OS/VS2 System Programming Library: Data Management, GC26-3830
OS/VS2 System Programming Library: Job Management, GC28-0627
OS/VS2 MVS System Programming Library: VTAM, GC28-0688
OS/VS Message Library: VS2 System Messages, GC38-1002
OS/VS Message Library: VS2 System Codes, GC38-1008
OS/VS Utilities, GC35-0005
OS/VS2 System Programming Library: System Management Facilities (SMF),
GC28-0706
OS/VS-DOS/VS-VM/370 Assembler Language, GC33-4010
IBM System/3 MRJE/WS Support Reference Manual, GC21-7621
IBM 3800 Printing Subsystem Programmer's Guide, GC26-3846

Contents

Chapter 1. Introduction to JES2	1
Chapter 2. Installing JES2	3
Overview	3
Requirements for JES2 and RMT Generation	3
The Generating System	4
The Distribution Libraries	4
Defining the Data Sets for Generation	5
SYS1.HASPSRC	5
Requirements for Specification	5
SYS1.HASPOBJ	6
Requirements for Specification	6
SYS1.HASPCKPT	6
Requirements for Specification	6
SYS1.HASPACE	8
Requirements for Specification	8
Procedures for Installing JES2	9
Changing JES2 Program Source Modules	9
JES2 Update Control Cards	9
Processing	10
Output	11
Modifying JES2	11
Chapter 3. JES2 Initialization	13
How to Control JES2 Initialization	13
Creating an Initialization Data Set	14
Updating the JES2 Procedure	19
Specifying the Initialization Options	22
How JES2 Performs Initialization	25
Starting JES2 for the First Time	25
Starting JES2 in a Multi-Access Spool Configuration	26
Restarting JES2 after an Orderly Shutdown	26
Restarting JES2 after a System Failure	27
How to Correct Initialization Errors	28
Initialization Error Messages	28
Alternate Subsystem Options with JES2	30
Initialization Parameter Descriptions	31
&BSPACE (Console Backspace Character)	32
&BSVBOPT (2780 End of Media Punch Recognition Option)	33
&BUFSIZE (JES2 Buffer Size)	33
&CCOMCHR (Local Operator Command Identifier)	33
&CHKPT (JES2 Checkpoint Volume ID)	34
&CKPTIME (JES2 Checkpoint Interval)	34
&DEBUG (JES2 Debug Option)	34
&DELAYTM (Transmission Delay Time)	35
DESTID (Route Code Name)	35
&DMNDSET (Demand Setup Option)	36
&ESTIME (Default Estimated Execution Time)	36
&ESTLNCT (Default Estimated Print Output)	36
&ESTPUN (Default Estimated Punch Output)	36
Innnn (Logical Initiator)	37
INTRDR (Internal Readers)	38
&JCOPYLM (Maximum Job Output Copies)	39
&LINECT (Lines Per Page Limit)	39
LINEenn (RJE Lines)	40
LOGON1 (Identification of JES2 to VTAM)	41
&MAXCLAS (Maximum Job Classes)	42
&MAXDORM (Maximum Dormancy)	42
&MAXJOBS (Maximum Jobs in Job Queue)	42
&MAXPART (Maximum Logical Initiators)	42
&MINDORM (Minimum Dormancy)	43
&MINHOLD (Minimum Queue Control Interval)	43
&MINJOES (Free JOE Count)	43
&MLBFSIZ (MULTI-LEAVING Buffer Size)	44
&MSGID (Message ID Option)	44
&NIPFCB (Forms Control Buffer Image for Nonimpact (3800) Printers)	44
&NIPUCS (Character Arrangement Table for Nonimpact (3800) Printers)	45
&NOPRCCW (Printer Channel Program Limit)	45
&NOPUCCW (Punch Channel Program Limit)	45

&NUMACE (Automatic Command Limit)	45
&NUMBUF (JES2 I/O Buffer Count)	46
&NUMCLAS (Printer/Punch SYSOUT Class Limit)	47
&NUMCMBS (Number of JES2 Console Message Buffers)	47
&NUMDA (JES2 Spool Volume Limit)	47
&NUMINRS (Number of Internal Readers)	48
&NUMJOES (Number of Job Output Elements)	48
&NUMLNES (Number of Teleprocessing Lines)	48
&NUMPRTS (Local Printers Used by JES2)	48
&NUMPUNS (Local Punches Used by JES2)	49
&NUMRDRS (Local Card Readers Used by JES2)	49
&NUMRJE (Number of Remote Terminal Definitions)	49
&NUMSMFB (JES2 SMF Buffer Count)	50
&NUMTGV (Number of Track Groups per Volume)	50
&NUMTPBF (Number of JES2 Teleprocessing Buffers)	50
&OUTPOPT (Option for Exceeding Estimated Job Output)	51
&OUTXS (Message Interval for Exceeding Estimated Output)	51
&PRIDCT (Local Printer Separator Page Line Count)	51
&PRIHIGH (Selection of Upper Priority Limit)	52
&PRILOW (Selection of Lower Priority Limit)	52
PRINTERnn (Local Printer)	52
&PRIOOPT (JES2 /*PRIORITY Control Statement Support Option)	55
&PRIRATE (Priority Increment Interval)	55
&PRTBOPT (Local Printer Double Buffering Option)	55
&PRTFCH (Forms Control Buffer Image for Impact Printers)	56
&PRTRANS (Print Line Translation Option)	56
&PRTUCS (Print Chain/Train Image for Impact Printers)	56
&PRTYOPT (JOB Card PRTY Parameter Support Option)	56
&PUNBOPT (Local Punch Double Buffering Option)	56
PUNCHnn (Local Card Punch)	57
&RCOMCHR (Instream Command Identifier)	58
&RDROPSL (Logon Conversion Parameter Field)	59
&RDROPST (Started Task Conversion Parameter Field)	59
&RDROPSU (Batch Job Conversion Parameter Field)	59
READERnn (Local Card Reader)	61
&RECINCR (Record Alternation)	63
&RJOB OPT (JOB Card Scan Option)	63
RMTnnn (BSC Remote Terminal)	64
RMTnnn (SNA Remote Terminal)	67
Rnnn.PRm (Remote Printer)	70
Rnnn.PUm (Remote Card Punch)	72
Rnnn.RDm (Remote Card Reader)	73
&RPRBOPT (Remote Printer Double Buffering Option)	75
&RPRI(n) (Job Execution Selection Priority)	75
&RPRT(n) (Job Execution Time Priority Categories)	76
&RPS (Rotation Position Sensing Support Option)	76
&RPUBOPT (Remote Punch Double Buffering Option)	76
&SID (System ID)	77
Sn (System ID in a Multi-Access Spool Configuration)	77
&SPOLMSG (Remote Terminal Spool Message Record Count)	77
&SPOOL (Spool Volume ID)	78
&STC, &TSU, &x (Job Class)	78
STCMCLAS (Message Class for Started Tasks)	81
&STDFORM (Default Forms ID)	82
&SYNCTOL (Synchronization Tolerance)	82
&TCELSIZ (Track Cell Size)	82
&TGWARN (Threshold Spool Utilization)	83
&TIMEOPT (Execution Time Monitoring Option)	83
&TIMEXS (Exceeded Execution Time Message Interval)	83
&TPBFSIZ (Teleprocessing Buffer Size)	83
&TPIDCT (Remote Printer Separator Page Line Count)	84
TSUMCLAS (TSO Message Class)	84
&WAITIME (Remote Terminal Function Interval)	85
&WARNTIM (Lock-Out Warning Time)	85
\$\$x (SYSOUT Class)	85
&XBATCH (Execution Batch Scheduling Option)	86
&XBATCHN (Execution Batch Scheduling Procedure Prefix)	86
&XLIN(n) (Output Selection Priority Category)	86
&XPRI(n) (Output Selection Priority)	87

Chapter 4. JES2 Processing	89
Configuration	89
Local Device Configuration	89
Internal Reader	89
Remote Line and Device Configuration	90
Spool Configuration	90
Starting and Stopping JES2	91
Controlling Job Submission and Queuing	91
Submitting Jobs	91
Local Device Submission	91
Remote Job Submission	91
The Internal Reader Facility	91
Controlling Job Queuing	93
The JES2 Queue	93
Job Class	94
JES2 Job Scheduling Priority	95
Priority Aging	97
Scanning the JOB Statement Accounting Field	97
Controlling Conversion and Execution	99
JCL Conversion	99
Converter Parameters	99
Procedure Library Selection	99
Execution Control	100
The Initiator Cataloged Procedure	100
Job Monitoring	100
Entering Commands in the Job Stream	101
Execution Batch Scheduling	101
Submitting Input to an Execution Batch Processing Program	102
Execution Batch Scheduling Operations	103
Preparing for Execution Batch Scheduling	104
Controlling System Output	105
Queuing Output	106
Output Class Assignment	107
System Message Classes	108
JES2 Output Selection	108
Setup Characteristics	108
Demand Setup	109
Assumed Data Set Characteristics	109
Operation for Printers	110
Output Routing	110
Processing Held Data Sets	111
External Writers	111
3540 Diskette Writers	112
Output Separation	112
The JES2 Print Separator	112
The JES2 Punch Separator Card	112
Print Chain Alias for 1403 and 3211 Printers	113
3211 Indexing	113
Chapter 5. Remote Job Entry	115
Overview	115
RMT Generation	118
Specifying RMT Parameters	118
RMT Parameters	119
RMT Control Cards	119
RMT Update Control Cards	120
RMT Update Cards	120
RMT Parameter Descriptions	121
RMT Parameters for the System/360 Model 20 BSC RTP Program	121
RMT Parameters for the 2922 Remote Work Station RTP Program	125
RMT Parameters for the System/360 (Except Model 20) and System/370 BSC RTP Program	126
RMT Parameters for the 1130 RTP Program	131
RMT Parameters for the 1130 Loader Program	134
RMT Parameters for the System/3 RTP Program	135
RMT Generation under a Production Batch System	141
Procedures for Generating RTP Programs	141
Processing	142
Completion Codes	142
Output	142
System/3 96-Column Card Output	142
Input Deck for an RMT Generation	143
Starting and Stopping Remote Job Entry	143

Altering the Sequence of Operations from a Remote Terminal	145
Options for Disconnecting Remote Lines	145
SMF Accounting Record	146
Chapter 6. Miscellaneous JES2 Facilities	147
Automatic Command Processing	147
Writing a Day's Work Scheduler	147
Limiting Considerations	148
The JES2 Patching Facility	148
Rules for Coding Patching Statements	149
Format of the JES2 Patching Facility Statements	149
AMASPZAP Patch Statement Formats	151
JES2 PTF Map	152
Time-Sharing Logon and Started Task Flow	153
Multi-Access Spool	153
Configuration	154
Starting the Multi-Access Spool Configuration	155
Job Submission and Queuing	156
Output	157
RJE	157
TSO	157
SMF	157
Chapter 7. JES2 Performance	159
JES2 Performance Factors	159
&BUFSIZE Parameter	159
&NOPRCCW Parameter	159
&NUMJOES Parameter	159
&NUMCMBS Parameter	160
Primary JES2 Spool Volume	160
Page Alignment of JES2 Control Sections	160
Allocation of Sufficient Spool Space	160
Division of Tracks	160
Selection of Spool Devices	161
Use of Unblocked Records for SYSIN and SYSOUT Data Sets	162
Held Internal Readers in JES2	162
How the Operator Can Control the Batch Job Work Load	162
Comparison of HASP II Version 4.0 and JES2 Performance Factors	163
Fixed Storage	163
Region Size	164
Checkpoint Records	164
Spool I/O	164
Changing JES2 Property from Nonswappable to Privileged	164
Questions from JES2 Users	165
Glossary	169
Index	171

Figures

Figure 1-1. JES2 I/O Relationships	1
Figure 2-1. Contents of SYS1.HASPSRC	5
Figure 2-2. Storage Devices for JES2 Data Sets	5
Figure 2-3. Contents of SYS1.HASPOBJ	6
Figure 2-4. Defining JES2 Data Sets	7
Figure 2-5. Sample Batch JES2 Generation Jobs with Update Deck	10
Figure 3-1. The JES2 Initialization Parameters and Their Functions	15
Figure 3-2. Example of a JES2 Initialization Data Set	20
Figure 3-3. The Basic JES2 Procedure	21
Figure 3-4. The Distributed HASPPARM Initialization Data Set	22
Figure 3-5. Example of an Updated JES2 Procedure	23
Figure 3-6. The JES2 Initialization Options	24
Figure 4-1. The RDR Procedure	92
Figure 4-2. JOB Statement Accounting Field Scan Exit	97
Figure 4-3. Selected JES2 Job Control Table Fields	98
Figure 4-4. Entering Commands in the Job Stream	101
Figure 4-5. Relationship of SYSOUT Specification to Number of Job Output Elements	107
Figure 4-6. Sample JCL for TSO-Submitted Job	111
Figure 5-1. RTP Program Identification Cards	120
Figure 5-2. Input Deck for a Batch RMT Generation	141
Figure 5-3. Input Deck for an RMT Generation	143
Figure 6-1. Patch Name to CSECT Reference	150
Figure 6-2. Two-System Shared JES2 Configuration	153
Figure 7-1. JES2 Commands Useful in Controlling the Batch Job Work Load	164

CHAPTER 1. INTRODUCTION TO JES2

JES2 is a job entry subsystem, provided with MVS, that is generally compatible with HASP II. JES2 serves as the point of entry for all jobs and produces all hard copy job output. To accomplish these functions, JES2 controls local and remote job entry devices and output devices. A special job entry source, the internal reader facility, allows MVS to submit system jobs: started tasks and time-sharing logons. Tape and disk input are also supported through the internal reader facility. See Figure 1-1 for input/output relationships to the job entry subsystem and MVS.

An output interface allows MVS to retrieve output for TSO terminals and allows a special output facility—the external writer—to process output to tape, disk, and installation-written writer routines. The output interface also supports an output facility to the 3540 diskette writer (see *OS/VS2 IBM 3540 Programmer's Reference*).

While the job is in MVS, the JES2 job queue residing in pageable storage maintains a record for the job. Job-related system records plus records related to job input and output are maintained on external spool volumes.

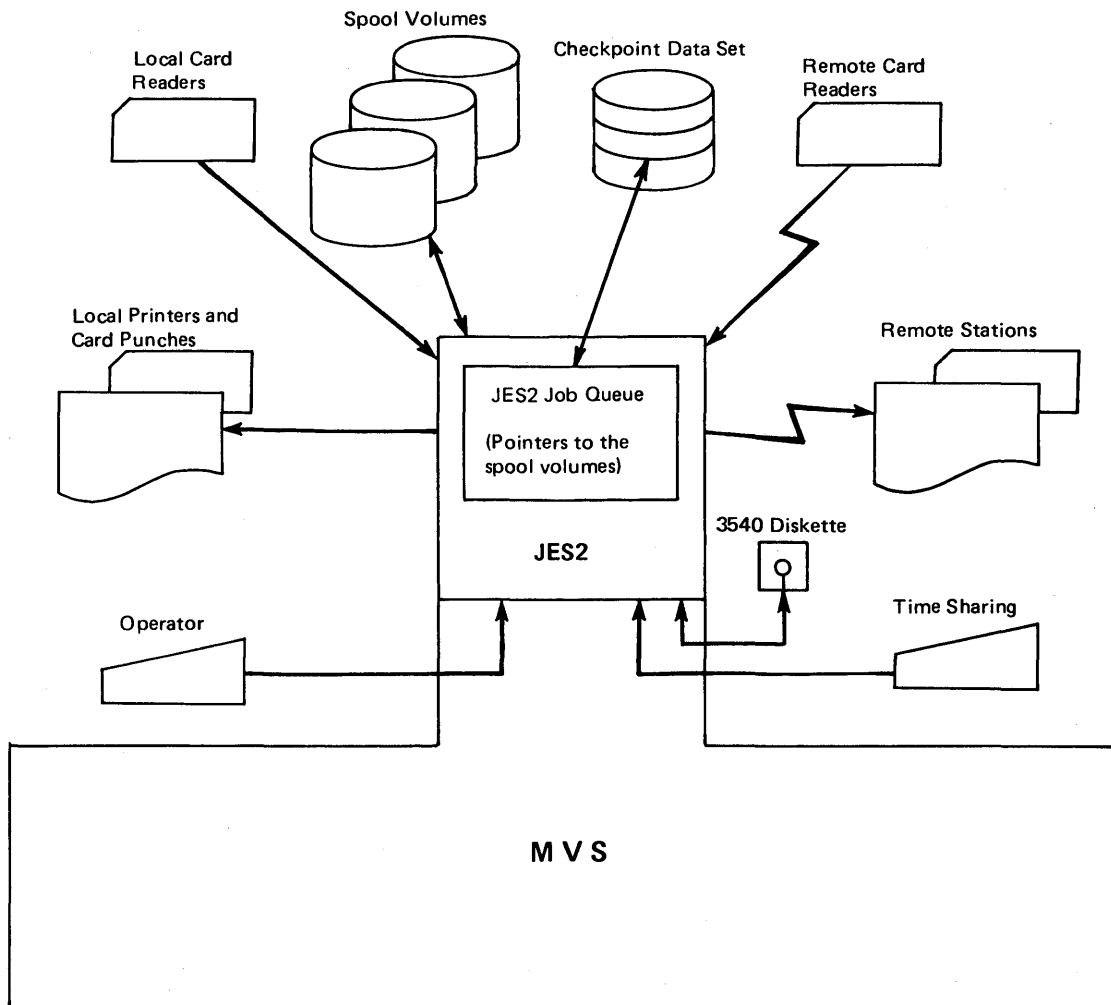


Figure 1-1. JES2 I/O Relationships

JES2 Processing: By means of RMT generation and JES2 initialization, you can define and control the configuration of job entry sources and job output destinations. JES2 provides centralized control of job input, queuing, and output, so that all jobs are controlled in the same manner whether submitted from local or remote job entry devices, or through the internal reader facility.

JES2 Generation: The JES2 generation procedure, which is the process of installing JES2, has two parts. The first part, JES2GEN, may be performed while Stage II of system generation is in progress. It consists of assembling the job entry subsystem from source modules that optionally have been updated to include any user modifications. During the second part, JES2BLD, the assembled object modules are link-edited into the MVS system control program.

Before you attempt to install JES2 programs, you should be familiar with the information about JES2 programs in this chapter and in the chapters "Remote Job Entry" and "JES2 Initialization."

RMT Generation: In addition to installing JES2, you may also generate one or more JES2 MULTI-LEAVING remote terminal processor (RTP) programs. The RTP programs allow jobs to be submitted from a remote terminal to the job entry subsystem in the central computer for processing.

JES2 Initialization: Initialization is JES2's means of readying itself for processing. JES2 performs an initialization the first time it is started and every time it is restarted after a normal shutdown or after a system failure. By specifying a set of initialization parameters, you indicate which of the JES2 functions and devices are to be initialized; the initialization parameters define the functions and device characteristics JES2 uses during its execution.

CHAPTER 2. INSTALLING JES2

The process of installing JES2 is referred to as JES2 generation. JES2 generation consists of creating the JES2 source library (SYS1.HASPSRC), assembling the JES2 source modules into the JES2 object library (SYS1.HASPOBJ), and link-editing the assembled object modules into the MVS load module libraries (SYS1.LINKLIB and SYS1.LPALIB).

Once JES2 has been installed, partial JES2 generations may be performed for minor changes. Instead of all of the JES2 modules being reassembled, only those modules to be modified are reassembled and link-edited.

After the JES2 generation, you can perform an RMT generation to generate JES2 MULTI-LEAVING remote terminal processor (RTP) programs for job entry from remote terminals. The RTP programs are punched as self-loading object decks. The RTP programs that can be generated are:

- System/360 and System/370 binary synchronous communication (BSC) RTP program
- System/360 Model 20 BSC RTP program (including the 2922 RTP program)
- 1130 RTP program
- 1130 loader program
- System/3 RTP program

This chapter describes the procedures required for JES2 and RMT generation (for example, those for allocating space and cataloging) and the spool data sets required for job processing after generation. It also contains detailed information about executing programs to install JES2. For a description of the RMT parameters and the processing involved in an RMT generation, refer to Chapter 5.

Overview

Installing JES2 requires a generating system to “drive” the JES2 generation process and perform the other jobs that must be done before job processing can begin. In addition, the following are required:

1. The distribution libraries must be copied from the PID distribution library tapes to direct-access storage.
2. The data sets that are required to contain the source and object modules that are used during processing must be defined.
3. If changes are to be applied to the source code, these changes are specified in update control statements.
4. Execute the programs to install JES2.

The following sections give detailed information that applies to both JES2 and RMT generation for the first two steps. Information about the last two steps for JES2 generation is also contained in the following sections. Further information about RMT generation is included in Chapter 5.

Requirements for JES2 and RMT Generation

JES2 and RMT generations require an MVS system control program for use as the generating system and four distribution libraries.

The Generating System

For the first JES2 generation, a starter system that is provided by IBM must be used. The starter system is a minimum MVS system control program that contains all of the programs and procedures required for JES2 and RMT generations. After the first JES2 generation using the starter system, an existing VS2 system control program of a current release can be used for subsequent JES2 and RMT generations.

The Distribution Libraries

The distribution libraries are distributed by IBM as unloaded partitioned data sets on magnetic tape. They contain all of the macro definitions and components necessary to install a system control program as well as to install the job entry subsystem and generate RTP programs.

The contents of the distribution libraries must be copied to direct-access volumes prior to the JES2 and RMT generations. These volumes must be mounted during the JES2 and RMT generations. Refer to *OS/VS2 System Programming Library: System Generation Reference* for information about copying the distribution libraries to direct-access volumes.

Four of the distribution libraries are required for JES2 and RMT generations: SYS1.AMODGEN, SYS1.AMACLIB, SYS1.AOSH1, and SYS1.AOSH2. SYS1.AMODGEN and SYS1.AMACLIB contain macro definitions and components that are used during JES2 and RMT generation. SYS1.AOSH1 and SYS1.AOSH2 contain the following:

SYS1.AOSH1: This distribution library contains the following utility programs:

JESIIGEN A utility program that uses the library SYS1.AOSH2 and a data set containing user source modifications, if any, as input to create the library SYS1.HASPSRC. SYS1.HASPSRC then contains the JES2 and RTP program source modules.

REMOTGEN A utility program that acts as a monitor linking to other remote terminal utility programs and to the assembler during an RMT generation.

GENRMT A utility program that reads the card input stream during RMT generation for the RTP program identification, selects the appropriate standard option list for the RTP program to be generated, prints the parameter default values, and updates the source modules with the changes read from the RMT parameters.

LETRRIP This utility program is an 1130 post-processor that creates an 1130 object-deck image on the SYSPUNCH data set.

SYS3CNVT This utility program is a System/3 post-processor that produces an object-deck image on the SYSPUNCH data set.

SYS1.AOSH2: This distribution library has two members. One member contains all of the JES2 and RTP program source modules in a form suitable as input to the JESIIGEN utility program. The other member contains any maintenance updates to these source modules, also in a form suitable as input to JESIIGEN.

Defining the Data Sets for Generation

Before JES2 can be installed and RTP programs can be generated, space must be allocated to the two data sets that are used during JES2 and RMT generations, and they must be cataloged in the master catalog of the generating system. Before JES2 can be initialized, at least one spool data set must have space allocated for it. Although spool data sets are not required for a JES2 generation, space can be allocated at the same time the required data sets are defined.

This section gives information about the required data sets, SYS1.HASPSRC and SYS1.HASPOBJ, the data set or sets used for spooling, SYS1.HASPACE, and the data set used for the two checkpoint records of JES2, SYS1.HASPCCKPT. The space allocations that are given for the data sets are recommended when full volume allocation is not used.

SYS1.HASPSRC

SYS1.HASPSRC is a partitioned data set that contains JES2 and RTP program source modules. Figure 2-1 lists the contents of SYS1.HASPSRC after the contents of the SYS1.AOSH2 distribution library have been placed into it.

Requirements for Specification

Location: This data set must be on a direct-access volume. The volume that contains this data set can be on any of the storage devices listed in Figure 2-2.

	Member Names	Description
SYS1.HASPSRC	\$\$POST thru \$XMPOST	JES2 Macros
	HASPACCT	Accounting Routine
	HASPCOMM	Command Processor
	HASPCON	Console Support
	HASPDOG	Control Block Documentation
	HASPINIT	Initialization Routine
	HASPMISC	Miscellaneous Routines
	HASPNUC	JES2 Nucleus
	HASPPRPU	Print/Punch Processor
	HASPRDR	Input Processor
	HASPRTAM	Remote Support
	HASPSSEM	Subsystem Support Module
	HASPXEQ	Execution Processors
	HRTPB360	System/360 and M20 BSC Remote Program
	HRTPLDAD	1130 Loader Program
	HRTPOPTS	RMTGEN Standard Option Lists
	HRTPSYS3	System/3 Remote Program
HRTPL130	1130 Remote Program	
NULL	JES2 Macro	

Figure 2-1. Contents of SYS1.HASPSRC

2305 Model 1 Fixed Head Storage
2305 Model 2 Fixed Head Storage
2314/2319 Direct Access Storage Facility
3330/3333 Model 1 Disk Storage and Control
3330/3333 Model 11 Disk Storage and Control
3340/3344 Direct Access Storage Facility
3350 Direct Access Storage

Figure 2-2. Storage Devices for JES2 Data Sets

Space Allocation: Space allocation for this data set is:

SPACE=(1680,(4000,200,10))

The following DCB subparameters must be specified:

RECFM=FB,LRECL=80,BLKSIZE=1680

Cataloging: This data set must be cataloged in the master catalog of the generating system.

Refer to Figure 2-4 for an example of defining this data set.

SYS1.HASPOBJ

SYS1.HASPOBJ is a partitioned data set that contains object modules that have been assembled from the source modules in SYS1.HASPSRC. Figure 2-3 lists the contents of SYS1.HASPOBJ after the JES2 object modules have been assembled into it.

Requirements for Specification

Location: This data set must be on a direct-access volume. The volume that contains this data set can be on any of the storage devices listed in Figure 2-2.

Space Allocation: Space allocation for this data set is:

SPACE=(400,(500,100,10))

The following DCB subparameters must be specified:

RECFM=FB,LRECL=80,BLKSIZE=400

Cataloging: This data set must be cataloged in the master catalog of the generating system.

Refer to Figure 2-4 for an example of defining this data set.

SYS1.HASPCKPT

SYS1.HASPCKPT is used for the two checkpoint records of JES2.

Requirements for Specification

Name Convention: The data set must be named SYS1.HASPCKPT and must exist on the checkpoint volume whose volume serial number is specified by the JES2 initialization parameter &CHKPT. If &CHKPT is not specified, SPOOL1 or the value of the JES2 initialization parameter &SPOOL is used for the volume serial number. The JES2 initialization parameters (&SPOOL and &CHKPT) are described in Chapter 3.

	Member Names	Description
SYS1.HASPOBJ	HASPACCT	Accounting Routine
	HASPCOMM	Command Processor
	HASPCON	Console Support
	HASPINIT	Initialization Routine
	HASPMISC	Miscellaneous Routines
	HASPNUC	JES2 Nucleus
	HASPPRPU	Print/Punch Processor
	HASPRDR	Input Processor
	HASPRTAM	Remote Support
	HASPSSTM	Subsystem Support Module
	HASPXEQ	Execution Processors

Figure 2-3. Contents of SYS1.HASPOBJ

```

//ALLOCATE JOB      ( . . ),'PREPARE FOR JES2GEN',MSGLEVEL=1
//ALLOCAT EXEC     PGM=IEFBR14
//HASPSRC DD       DSN=SYS1.HASPSRC,UNIT=SYSDA,VOL=SER=JES2,
//                DISP=(NEW,CATLG),SPACE=(1680,(3600,200,10)),
//                DCB=(RECFM=FB,LRECL=80,BLKSIZE=1680)
//HASPOBJ DD       DSN=SYS1.HASPOBJ,UNIT=SYSDA,VOL=SER=JES2,
//                DISP=(NEW,CATLG),SPACE=(400,(400,100,10)),
//                DCB=(RECFM=FB,LRECL=80,BLKSIZE=400)
//SPOOL1  DD       DSN=SYS1.HASPACE,UNIT=3330,VOLUME=SER=SPOOL1,
//                DISP=(NEW,KEEP),SPACE=(ABSTR,(7642,2)),
//                LABEL=EXPDT=99366
//SPOOL2  DD       DSN=SYS1.HASPACE,UNIT=2314,VOLUME=SER=SPOOL2,
//                DISP=(NEW,KEEP),SPACE=(ABSTR,(3998,2)),
//                LABEL=EXPDT=99366
//CHKPT   DD       DSN=SYS1.HASCKPT,UNIT=3330,VOLUME=SER=CHKPT,
//                DISP=(NEW,KEEP),SPACE=(ABSTR,(42,2)),LABEL=EXPDT=99366
/*

```

Figure 2-4. Defining JES2 Data Sets

Location: The checkpoint volume may reside on any of the direct-access devices listed in Figure 2-2. All shared JES2 systems must have at least one channel path to the device.

The checkpoint data set is used frequently and is therefore important to throughput in shared JES2 systems. This should be considered when choosing other data sets for allocation on the same volume. It is strongly recommended that the RESERVE macro not be used for any other data set on the checkpoint volume. If necessary, the RESERVE macro should be used infrequently and for short periods of time. Serious degradation of shared JES2 throughput may result if this recommendation is ignored.

Space Allocation: The checkpoint data set should be allocated as a single extent within one cylinder. JES2 uses only the first extent. Space allocation should be:

SPACE=(ABSTR,(primary quantity,address))

ABSTR

specifies that the data set is to be placed at a specific location on the volume.

primary quantity

specifies the number of tracks to be allocated to the data set.

address

specifies the track number of the first track to be allocated.

The first checkpoint record requires one or more tracks sufficient to hold the following number of bytes:

$$400+3(\&NUMRJE+1)+(3(\&NUMRJE)+7)/8+\&NUMDA((\&NUMTGV+7)/8)$$

The second checkpoint record requires one or more tracks that can hold the following number of bytes:

$$100+32*\&NUMJOES$$

The number of tracks for each record must be determined independently for each record (from the formulas and track capacity of the device type) and added to give the total requirement.

Refer to Figure 2-4 for an example of defining this data set.

SYS1.HASPACE

SYS1.HASPACE is the name of one or more data sets used for queuing JCL internal text, for queuing input data, and for saving job output and system messages for later output to printers and punches.

Requirements for Specification

Naming Conventions: One or more volumes may be designated as spool volumes. The first five characters of the volume serial number of each volume defined must be SPOOL or be identical to the first five characters specified in the JES2 initialization parameter &SPOOL. The sixth character can be any character that is valid in volume serial numbers. One volume must be designated as the primary spool volume. Its volume serial number must be SPOOL1 or agree with the six characters specified in the &SPOOL parameter.

Location: Spool volumes may reside on any combination of direct-access devices. JES2 utilizes space from each spool volume ensuring balanced use of all allocated space.

It is strongly recommended that each spool volume be entirely devoted to JES2 usage. To allocate other frequently used data sets on a spool volume would degrade the efficiency of JES2's direct-access allocation algorithm.

For shared JES2 systems, all spool volumes must reside on devices that have at least one channel path to each JES2 system in the multi-access spool environment.

Space Allocation: Each spool volume must contain a data set named SYS1.HASPACE. JES2 uses only the first extent of this data set for spooling space. If more than one extent is allocated, only the first extent is used. Spool data sets must be allocated as single extent data sets. Use the following specification for allocating space for the spool data sets:

SPACE=(ABSTR,(primary quantity,address))

ABSTR

specifies that the data set is to be placed at a specific location on the volume.

primary quantity

specifies the number of tracks to be allocated to the data set.

address

specifies the track number of the first track to be allocated.

To allocate a spool volume, specify both *primary quantity* and *address* as integral multiples of the number of tracks per track group. For example, specify SPACE=(ABSTR,(1000,16)) if the number of tracks per group is 8.

If other data sets must be allocated space on a spool volume, SYS1.HASPACE should be allocated so that it contains no dead space. The following text illustrates how to do this.

The unit of direct-access space allocation for JES2 is the track group. The number of tracks in a track group is obtained by dividing the total number of tracks on a volume by the value specified in the JES2 initialization parameter &NUMTGV (the number of track groups per volume). The number of tracks for a 2314 volume is 4000 (regardless of the size the SYS1.HASPACE data set). If the value of &NUMTGV is set to 500, the number of tracks per track group is 4000/500 or 8 tracks per track group. JES2 uses only those track groups that fall completely within the SYS1.HASPACE space allocation.

Refer to Figure 2-4 for an example of defining this data set.

Procedures for Installing JES2

The following is a list of procedures that should be followed to install JES2.

1. On the console typewriter, enter the command

```
$p rdr n
```

where *n* is the identification number of the card reader.

2. Enter the command

```
s jes2gen
```

3. The following messages will be written on the console typewriter:

```
$HASP373 JES2GEN STARTED  
GENIN ALLOCATED TO xxx
```

where *xxx* is the unit address of the card reader.

4. Ready the JES2 update card deck and place it in the card reader.
5. The following message is written on the console typewriter:

```
$HASP900 ENTER CARDS, UPDATE, OR END
```

If the response “cards” is used, the first card in the deck must be an “UPDATE” control card. If the response “update” is used, the card deck should begin with the first IEBUPDTE control card. If there are no source updates to apply, the response should be “end”.

Note: *There are currently no generation options supported.*

7. When JES2GEN and Stage II of system generation have been completed, the object modules from SYS1.HASPOBJ can be link-edited into SYS1.LINKLIB and SYS1.LPALIB by entering the following command:

```
s jes2bld,linkvol=volser,lpavol=volser
```

where *volser* is the volume serial numbers of the volumes containing SYS1.LINKLIB and SYS1.LPALIB, respectively. If these values are not specified, the system residence volume is assumed.

Changing JES2 Program Source Modules

If changes are to be made to the JES2 program source modules, you must specify these changes in control statements. This section discusses the rules for coding the control cards.

JES2 Update Control Cards

Source modules in SYS1.HASPSRC may be updated by cards punched according to formats acceptable to the IEBUPDTE utility program. This method is used to apply your own modifications to JES2. Updates are placed immediately following a card with UPDATE punched in columns 1 through 6.

All IEBUPDTE control cards, except the ./ALIAS statement, can be used to update JES2 source modules when using the JESIIGEN utility program. The ./NUMBER statement is accepted, but it is ignored. The ./ADD, ./CHANGE, ./DELETE, ./ENDUP, ./REPL, and ./REPRO statements are accepted, but only the NAME, SEQ1, and SEQ2 keywords are interpreted, where appropriate. Other keywords are ignored and may be omitted.

The update cards immediately following the control cards replace existing source card images in SYS1.HASPSRC (if columns 73 through 80 match an existing card image in the named module) or are inserted between existing source card images, according to

ascending collating sequence based on columns 73 through 80. Cards that are blank in columns 73 through 80 are inserted immediately following the last modification card image that is in ascending collating sequence. Update cards that do not maintain an ascending collating sequence or are not blank will terminate the JES2 generation with an update error.

All modifications that apply to one source module must be integrated, in ascending sequence number order, into a single deck, beginning with an IEBUPDTE function statement (usually a CHANGE statement) naming the module. If more than one module is updated, the decks must be placed together so that the module names on the function statement cards are in ascending collating sequence in the same order as the source modules listed in Figure 2-1.

The last update card must be followed by a ./ENDUP control card, a /* delimiter card, or a machine-generated end-of-file. Figure 2-5 shows a composite deck of JES2 source updates in correct order.

The format of IEBUPDTE control cards is detailed in *OS/VS Utilities*.

Processing

The JES2 generation jobs are executed in a sequential order using a single initiator. The job control language required to execute the programs is a cataloged procedure in the generating system's SYS1.PROCLIB. During JES2 generation, the following occurs:

1. The JESIIGEN utility program is executed. This utility program reads in source modules from the SYS1.AOSH2 distribution library and places them in the SYS1.HASPSRC data set. It then reads the JES2 update cards, if any, and applies the changes to the source modules in SYS1.HASPSRC.

Columns 1		73	80
//HASPGEN	JOB ...		
//GEN	EXEC HASPGEN		
//HASPGEN.OPTIONS DD *			
UPDATE	(END if no source updates follow)		
./	CHANGE NAME=HASPMISC		
.	.		
.	(modifications to module HASPMISC)		nnnnnnnn
.	.		
./	CHANGE NAME=HASPRTAM		
.	.		
.	(modifications to module HASPRTAM)		nnnnnnnn
.	.		
./	ENDUP		
/*			
//HASPNUC	JOB ...		
//NUC	EXEC HASPASM,MODULE=HASPNUC		
//HASPINIT	JOB ...		
//UNIT	EXEC HASPASM,MODULE=HASPINIT		

Figure 2-5. Sample Batch JES2 Generation Jobs with Update Deck

2. The source code in SYS1.HASPSRC is assembled. The object modules from these assemblies are placed in the SYS1.HASPOBJ data set.
3. The object modules from SYS1.HASPOBJ are link-edited into either SYS1.LINKLIB or SYS1.LPALIB.

The success of the generation process is determined, and a completion code is returned as follows:

Decimal Completion Code	Meaning
0	No errors, were detected and all members of the SYS1.HASPSRC data set were successfully constructed.
24	An unrecoverable error, which prohibited the successful construction of the SYS1.HASPSRC data set, was detected. An accompanying message gives further indication of the error. This completion code without any message indicates a JES2 parameter error (for example, the END card was omitted).

Refer to *OS/VS Message Library: VS2 System Codes* and *OS/VS Message Library: VS2 System Messages* for a more detailed discussion of the completion codes and messages that are returned by the system.

Output

The output from the JES2 generation is the job entry subsystem. In addition, the JESIIGEN utility prints an information listing. Also produced is a listing of each assembly and link-edit.

Modifying JES2

A partial JES2 generation may be done under a production batch system if only a small number of modules need to be modified (a complete JES2 generation may also be done using this method). Execution of a partial JES2 generation invokes only the JESIIGEN utility, which performs the source updating. This utility merges member HASPPTF (located in SYS1.AOSH2) into SYS1.HASPSRC before any assemblies are done. You must specify the modules that are to be reassembled and link-edited using JES2 cataloged procedures. Figure 2-5 shows an example of the jobs that need to be executed.

If source modules are updated from a previous generation using update cards, the updated module must be reassembled. When you are not sure whether a reassembly is necessary—for example, if a source module in SYS1.HASPSRC other than one of the twelve assembly modules is updated—then all twelve modules must be reassembled.

HASPD0C is not an executable JES2 module; rather, it is a documentation module of all JES2 control blocks. Therefore, it should be reassembled periodically to provide current control block documentation.

To perform a partial JES2 generation, do the following:

1. Mount the volumes containing the SYS1.AOSH1 and SYS1.AOSH2 distribution libraries and the SYS1.HASPSRC and SYS1.HASPOBJ data sets.
2. Scratch the SYS1.HASPSRC data set and reallocate it.
3. Place the JES2 update deck, if any, in the card reader and execute the HASPGEN procedure.

4. Execute the `HASPASM` procedure to reassemble the modules into `SYS1.HASPOBJ` (see Figure 2-5). If all of the modules are to be reassembled, `SYS1.HASPOBJ` should be scratched and space should be reallocated prior to executing the assemblies.
5. Execute the `HASPLNK` or `HASPLPA` procedures (or both) to link-edit the modules into either `SYS1.LINKLIB` or `SYS1.LPALIB`.

CHAPTER 3. JES2 INITIALIZATION

JES2 initialization is the series of operations JES2 performs each time it is started in order to ready itself for job processing. During each initialization, JES2:

- Loads the JES2 routines and initializes buffer queues
- Locates and initializes all external devices and spool volumes
- Validates a multi-access spool configuration
- Initializes internal readers and logical initiators
- Initializes internal tables and the subsystem interface

The way JES2 initializes depends upon a set of initialization options that are processed when JES2 is started and a set of initialization parameters (defined as a data set in the JES2 procedure) that JES2 reads during its execution. The initialization *options* define how JES2 will perform initialization by specifying:

- JES2 cold start or warm start
- The data set containing the initialization parameters
- A printout of the initialization data set
- Forced formatting of the spool volumes
- Automatic or operator-controlled start of JES2 processing

The initialization *parameters* define which of the JES2 functions and device defaults are to be overridden. The parameters specify:

- Logical initiator characteristics
- Internal reader characteristics
- Local and remote device characteristics
- Default job and SYSOUT class characteristics
- Multi-access spool control parameters
- Changes to certain JES2 default parameter values

You control how JES2 schedules jobs by the way you specify these options and parameters during JES2 initialization. Furthermore, you can respecify these options and parameters to reflect changes in the system's configuration and workload each time JES2 is started.

This chapter explains how to specify the options and parameters and how JES2 performs initialization under different starting conditions.

How to Control JES2 Initialization

JES2 initialization is performed after JES2 is started and before JES2 begins to process jobs. To control how JES2 initializes, you can do three things:

- Create a data set containing the initialization parameters
- Update the JES2 procedure to include definitions of the initialization data set and (optionally) other procedure libraries
- Specify the initialization options

Directions for these steps are contained in the following sections.

Creating an Initialization Data Set

An initialization data set contains the initialization parameters and, optionally, JES2 control statements and operator commands. All of the parameters, control statements, and commands are coded on punched cards and entered as a data set into a system library by one of the IBM utility programs, such as IEBUPDTE.

The initialization parameters allow you to specify the functions and device characteristics JES2 uses during its execution. The parameters and their functions are summarized in Figure 3-1 and they are fully described at the end of this chapter. HASP users will recognize many of these parameters as former HASP generation parameters. Users of versions of JES2 previous to JES2 Release 4.0 will recognize that all JES2 generation parameters have been moved to initialization or have been eliminated. The purpose of moving these parameters from the generation process to the initialization process is to give the installation more flexibility in controlling the system.

The RMTnnn initialization parameters may not be required for local single system configurations. However, if you have specified RMT generations for remote terminals, you will have to code the RMTnnn initialization parameters to initialize these terminals. If you choose not to specify the parameters for local devices and JES2 functions, JES2 provides default values. For instance, for local devices, JES2 checks all the unit control blocks (UCBs) built during system generation and, when initialization is completed, starts all physically connected devices that are ready. By specifying initialization parameters for all local devices, you can choose, for example, to drain the devices you will not want to use right away.

For a multi-access spool configuration, you must define an initialization data set for each system in the configuration. Each data set must include the system identifiers (specified by the Sn initialization parameter) of all systems in the configuration. In addition, the initialization data set for each system should be set up so that each unit-record device name is assigned to only one physical device in the multi-access spool configuration. For example, if three readers are generated for a configuration of three systems, they should be initialized as READER1, READER2, and READER3 among the data sets and not as READER1 in each system's data set. Then the readers can easily be reassigned in subsequent system initializations. (A device that is not to be attached to a particular system can be forced into an undefined status by assigning it a nonexistent unit address, such as UNIT=FFF.)

In addition to the initialization parameters, an initialization data set can also contain:

- Patch and AMASPZAP statements
- JES2 operator commands
- JES2 initialization control statements

The operator commands and the Patch, AMASPZAP, and initialization control statements can be mixed among the initialization parameters without any special coding requirements.

Patch and AMASPZAP statements can be used to make minor and temporary modifications to the JES2 source code for the duration of an IPL by directly replacing the changed code. Directions for using these statements are provided in Chapter 6. JES2 processes the Patch and AMASPZAP statements as they are read within the initialization data set.

JES2 Initialization Parameters	
Parameter	Function
&BSPACE	specifies the character that will be interpreted as the machine-defined backspace character, X'16'.
&BSVBOPT	specifies whether to recognize an EM (end of media) punch in cards transmitted nontransparently by a 2780.
&BUFSIZE	specifies the size, in bytes, of each JES2 buffer.
&CCOMCHR	specifies the character that will be used to identify JES2 commands from local consoles.
&CHKPT	specifies the serial number of the volume containing the JES2 checkpoint data set SYS1.HASPCKPT.
&CKPTIME	specifies, in seconds, the interval at which certain checkpoints of JES2 information will be taken for warm start.
&DEBUG	specifies whether debugging information is to be gathered by JES2 during its operation.
&DELAYTM	specifies, in microseconds, the delay time RTAM is to apply when transmitting to certain System/360 Model 20s and 2922s.
DESTID	specifies a user-defined name for a JES2 route code.
&DMNDSET	specifies whether inline printer setup will be allowed for data sets whose SYSOUT class matches the job message class.
&ESTIME	specifies, in minutes, the default estimated execution time for a job.
&ESTLNCT	specifies, in thousands of lines, the default estimated print line output for a job.
&ESTPUN	specifies, in number of cards, the default estimated punch card output for a job.
Innnn	specifies the characteristics of a JES2 logical initiator.
INTRDR	specifies the characteristics of the internal readers.
&JCOPYLM	specifies the maximum number of job output copies that can be requested by means of a JOB or /*JOBPARM card.
&LINECT	specifies the maximum number of lines of a job's printed output to be printed per page.
LINEenn	specifies the characteristics of a teleprocessing line for a BSC or SNA remote work station.
LOGON1	identifies JES2 as an application program to VTAM.
&MAXCLAS	specifies the maximum number of job classes that may be handled by a JES2 logical initiator.
&MAXDORM	specifies, in hundredths of a second, the maximum time a member of a multi-access spool configuration may refrain from attempting to access the shared queues.
&MAXJOBS	specifies the maximum number of jobs that can be in the JES2 job queue at a given time.
&MAXPART	specifies the number of JES2 logical initiators to be defined.

Figure 3-1 (Part 1 of 4). The JES2 Initialization Parameters and Their Functions

JES2 Initialization Parameters	
Parameter	Function
&MINDORM	specifies, in hundredths of a second, the minimum time a member of a multi-access spool configuration must wait after releasing control of the shared queues before again attempting to access them.
&MINHOLD	specifies, in hundredths of a second, the minimum time a member of a multi-access spool configuration must maintain control of the shared queues after accessing them.
&MINJOES	specifies the minimum number of job output elements that are to be reserved for use in satisfying \$I commands.
&MLBFSIZ	specifies, in bytes, the size of each JES2 MULTI-LEAVING buffer.
&MSGID	specifies whether the 8-character message identifier (HASPnnnb) is included with each JES2 operator message.
&NIPFCB	specifies the name of the forms control buffer image that JES2 initially loads into every 3800 printer.
&NIPUCS	specifies the name of the character arrangement table that JES2 initially loads into every 3800 printer.
&NOPRCCW	specifies the maximum number of channel command words per channel program for local impact printers.
&NOPUCCW	specifies the maximum number of channel command words per channel program for local punches.
&NUMACE	specifies the number of automatic commands that can be concurrently active in JES2.
&NUMBUF	specifies the number of JES2 buffers to be created.
&NUMCLAS	specifies the maximum number of classes for which a printer or punch may be simultaneously started.
&NUMCMBS	specifies the number of JES2 console message buffers to be created.
&NUMDA	specifies the maximum number of direct-access volumes that can be mounted concurrently as spool volumes.
&NUMINRS	specifies the number of internal readers to be supported.
&NUMJOES	specifies the number of job output elements to be generated for printers and punches.
&NUMLNES	specifies the number of communication lines to be defined.
&NUMPRTS	specifies the maximum number of local printers that JES2 can use.
&NUMPUNS	specifies the maximum number of local punches that JES2 can use.
&NUMRDRS	specifies the maximum number of local card readers that JES2 can use.
&NUMRJE	specifies the number of remote terminal definitions JES2 will use.
&NUMSMFB	specifies the number of SMF buffers to be provided in JES2.
&NUMTGV	specifies the number of track groups into which each spool volume is divided.
&NUMTPBF	specifies the number of buffers to be provided for RJE.
&OUTPOPT	specifies the action to be taken when a job exceeds its estimated print or punch output.
&OUTXS	specifies, in number of print lines or punched cards, the interval at which "line/card exceeded" messages will be issued.

Figure 3-1 (Part 2 of 4). The JES2 Initialization Parameters and Their Functions

JES2 Initialization Parameters	
Parameter	Function
&PRIDCT	specifies the number of lines to appear on each JES2 job separator page for local printers.
&PRIHIGH	specifies the upper priority limit to be associated with the JES2 priority aging feature.
&PRILOW	specifies the lower priority limit to be associated with the JES2 priority aging feature.
PRINTERnn	specifies the characteristics of a local printer.
&PRIOOPT	specifies whether the JES2 /*PRIORITY control statement is supported.
&PRIRATE	specifies the number of time periods into which a 24-hour day is to be divided for use in incrementing a job's priority by the JES2 priority aging feature.
&PRTBOPT	specifies whether double buffering is to be used for local printers.
&PRTFCB	specifies the forms buffer image or carriage control tape that JES2 initially assumes is mounted on every impact printer.
&PRTRANS	specifies whether print lines destined to printers other than 3211 or 3800 printers are to be translated.
&PRTUCS	specifies the name of the print chain or print train that JES2 initially assumes is mounted on every impact printer.
&PRTYOPT	specifies whether the priority specification on the JOB statement is supported.
&PUNBOPT	specifies whether double buffering is to be used for local card punches.
PUNCHnn	specifies the characteristics of a local card punch.
&RCOMCHR	specifies the character that will be used to identify JES2 commands from a local or remote card reader.
&RDROPSL	specifies a parameter field to be passed to the OS/VS2 converter for TSO logons.
&RDROPST	specifies a parameter field to be passed to the OS/VS2 converter for console-started tasks.
&RDROPSU	specifies a parameter field to be passed to the OS/VS2 converter for batch (background) jobs.
READERnn	specifies the characteristics of a local card reader.
&RECINCR	specifies the record alternation value to be used in spool record allocation.
&RJOB OPT	specifies the type of scan that JES2 is to perform on JOB cards.
RMTnnn	specifies the characteristics of a BSC or SNA remote terminal.
Rnnn.PRm	specifies the characteristics of a remote printer.
Rnnn.PUm	specifies the characteristics of a remote punch.
Rnnn.RDm	specifies the characteristics of a remote card reader.
&RPRBOPT	specifies whether double buffering is to be used for remote printers.
&RPRI(n)	specifies the job scheduling priority to be associated with the corresponding &RPRT(n) parameter.
&RPRT(n)	specifies the execution time to be associated with the corresponding &RPRI(n) parameter.

Figure 3-1 (Part 3 of 4). The JES2 Initialization Parameters and Their Functions

JES2 Initialization Parameters	
Parameter	Function
&RPS	specifies whether rotational position sensing (RPS) is to be included in channel programs directed to direct-access devices with the RPS feature.
&RPUBOPT	specifies whether double buffering is to be used for remote card punches.
&SID	specifies a system ID to be used in place of the ID provided by SMF.
Sn	specifies the characteristics of a member of a multi-access spool configuration.
&SPOLMSG	specifies the number of spool records to be reserved for operator messages and JES2 messages for each remote terminal.
&SPOOL	specifies the volume serial number of the primary JES2 spool volume.
&STC,&TSU,&x	specifies the characteristics of a job class.
STCMCLAS	specifies the message class for all started tasks.
&STDFORM	specifies the default output forms ID and the default initial printer and card punch setup.
&SYNCTOL	specifies, in seconds, the time interval a member of a multi-access spool configuration may remain dormant before another member of the configuration will consider it inactive.
&TCELSIZ	specifies the number of spool records in a track cell.
&TGWARN	specifies the threshold percentage use of spool space that causes JES2 to issue a spool utilization message.
&TIMEOPT	specifies whether JES2 should monitor jobs for the elapse of estimated execution time.
&TIMEXS	specifies, in minutes, the interval at which JES2 will issue messages relating to the elapse of a job's estimated execution time.
&TPBFSIZ	specifies, in bytes, the size of each JES2 teleprocessing buffer.
&TPIDCT	specifies the number of lines to appear on each JES2 job separator page for remote printers.
TSUMCLAS	specifies the message class for all time-sharing foreground jobs.
&WAITIME	specifies, in seconds, how long RTAM should wait after processing an input stream or a job's output stream to allow the remote operator to alter the normal sequence of RJE operations.
&WARNTIM	specifies, in hundredths of a second, the time interval from the first denied request for access to the shared queues of a member of a multi-access spool configuration to the time that configuration will assume the member controlling the queues to be down.
\$\$x	specifies the characteristics of a SYSOUT class.
&XBATCH	specifies whether the JES2 execution batch scheduling feature is to be activated.
&XBATCHN	specifies the first five characters of the name of each OS/VS2 procedure that JES2 will start to activate an execution batch scheduling monitor program.
&XLIN(n)	specifies the output record counts to be associated with the corresponding &XPRI(n) parameter.
&XPRI(n)	specifies the output processing priority of a job to be associated with the corresponding &XLIN(n) parameter.

Figure 3-1 (Part 4 of 4). The JES2 Initialization Parameters and Their Functions

JES2 operator commands can be used to control the initial status of devices. For instance, operator commands can be used to start RJE lines during initialization. (RJE lines, unlike other devices, cannot be started automatically by an initialization parameter.) Or, the \$VS operator command can be used to enter VS commands such as those to VARY devices on and off line before JES2 starts processing. JES2 operator commands are described in the *Operator's Library: OS/VS2 JES2 Commands*.

The number of operator commands you can specify in an initialization data set is essentially unlimited. During initialization, JES2 stores the operator commands in temporary message buffers. Then, when initialization is completed, JES2 processes the commands. If the number of commands entered is greater than the number of buffers (the &NUMCMBS parameter indicates the number of buffers to be created), the commands entered after all the buffers have been used are ignored.

To ensure that operator commands are completely processed before JES2 starts processing jobs, you should use the REQ initialization option which lets the operator start JES2 processing. Or, the \$\$ command can be included as the last operator command in the initialization data set to eliminate the need for operator intervention.

JES2 initialization control statements can be used to format the listing of the data set when it is printed during initialization. There are three of these control statements:

NOLIST, which tells JES2 to stop or discontinue listing of the data set from this point on

LIST, which tells JES2 to resume listing of the data set from this point on

*, which tells JES2 this is a comment statement

LIST and NOLIST provide a convenient way to protect portions of your data set (such as passwords) during printout of the data set. Comment (*) statements can be used to provide spacing and headings within the data set. All three types of statements are processed at the point where they occur in the data set. They are ignored if you specify the NOLIST initialization option.

The operator commands and the Patch, AMASPZAP, and initialization control statements can be mixed among the initialization parameters without any special coding requirements. Figure 3-2 shows an example of an initialization data set that contains operator commands and initialization control statements. (The initialization parameters are described later in this chapter.)

After you have coded your data set, it should be transferred to a direct-access volume by using one of the IBM utility programs, such as IEBUPDTE. The data set should be entered as a member of a blocked system library such as SYS1.PROCLIB or as a member of a blocked user library. This member must then be defined in the JES2 procedure so that when JES2 is executed, it can locate and read the initialization data set. Directions for updating the JES2 procedure are contained in the following section.

Updating the JES2 Procedure

The basic JES2 procedure (Figure 3-3) provided with the MVS system contains an EXEC statement and three data definition (DD) statements named PROC00, HASPLIST, and HASPPARM. PROC00 defines a default procedure library to be used for converting the JCL of user jobs, time-sharing logons, and system tasks. HASPLIST defines what is normally a dummy output data set. HASPPARM defines a member in SYS1.PARMLIB that contains a null initialization data set (see Figure 3-4).

```

*
*           SAMPLE JES2 PARAMETER LIBRARY LISTING
*
&CHKPT=IPLVOL
READER1     UNIT=00C
READER2     UNIT=00B,PRIOLIM=9,CLASS=X,AUTH=7,3,PRLCL 7,AUTH=PRDEST=3,PRLCL
&NUMPRTS=4
PRINTER1    UNIT=002,CLASS=AJH,UCS=P11
PRINTER2    UNIT=00E,CLASS=AJH,UCS=PN,AUTO
PRINTER3    UNIT=00F,CLASS=A,ROUTECD=3,UCS=HN
PRINTER4    UNIT=018,CLASS=NI,MARK,NOBURST,DSPLTCEL
PUNCH1      UNIT=00D,PAUSE
1 INTRDR     PRIOLIM=9,AUTH=7
  I1         CLASS=AFJKE           INITIATOR 1
  I2         CLASS=BCDEF          INITIATOR 2
  I3         CLASS=DEFGH          INITIATOR 3
  I4         CLASS=XKH            INITIATOR 4
  I5         CLASS=JKEBF          INITIATOR 5
  I6         DRAIN                SPARE INITIATOR
  I7         DRAIN                SPARE INITIATOR
  I8         DRAIN                SPARE INITIATOR
&STC        NOJOURN,NOLOG,NOOUTPUT  STARTED TASK DEFINITIONS
&TSU        CONVPARM=00014400005030E00011
&S          PROCLIB=03,HOLD        SYSTEM PROGRAMMER CLASS
&X          PERFORM=3,XBATCH       EXECUTION BATCHING CLASS
$$H         HOLD                   SYSOUT CLASS HELD FOR OUTPUT PROCESS
$$N         TRKCEL
$$X         DUMMY                   THROWAWAY CLASS
*
*           RJE INITIALIZATION PARAMETERS
*
LINE1       UNIT=040,FDUPLEX,TRANSP
LINE2       UNIT=041,TRANSP,PASSWORD=SECRET
LINE3       UNIT=042,TRANSP,PASSWORD=SECRET
LINE4       UNIT=043,TRANSP,PASSWORD=SECRET
LINE5       UNIT=044,TRANSP,PASSWORD=SECRET
LINE6       UNIT=SNA
LINE7       UNIT=SNA,PASSWORD=LINE4PW
2 RMT1      3780,LINE=1,NUMPU=1,TRANSP,ABUFEX,COMP
  R1.PR1    PRWIDTH=144
  RMT2      2922,NUMPU=1,CONSOLE,MULTI,TRANSP
  R2.PR1    PRWIDTH=132,AUTO
  RMT3      S370,NUMPR=2,CONSOLE,MULTI,TRANSP
  R3.PR1    PRWIDTH=150,FCBLOAD
  R3.PR2    PRWIDTH=132
  RMT4      1130,CONSOLE,MULTI,NUMPU=1
  R4.PR1    AUTO
  R4.PU1    DRAIN
  RMT5      SYSTEM3,NUMRD=3,NUMPU=2,CONSOLE,MULTI
  R5.PR1    PRWIDTH=132,AUTO
  RMT6      2780,NUMPU=1,TRANSP,MRF,TABS
  R6.PR1    PRWIDTH=144
  RMT7      LUTYPE1,ROUTECD=10,BUFSIZE=512,DISCNVT=8000,NUMPU=1,COMP
  RMT8      LUTYPE1,LINE=6,BUFSIZE=256,NUMPU=1
3 NOLIST
  *
  *           REMOTE PASSWORDS
  *

```

- 1 All JES2 internal readers are defined by one INTRDR parameter.
- 2 Parameters that specify remote devices do not have to follow their associated RMTnnn parameters; they may be put anywhere in the card deck.
- 3 Shaded area will not appear on a printout.

Figure 3-2 (Part 1 of 2). Example of a JES2 Initialization Data Set

```

4 RMT1      PASSWORD=CHICAGO
  RMT2      PASSWORD=BOARDWLK
  RMT3      PASSWORD=ALBANY
  RMT4      PASSWORD=LACKLSTR
  RMT5      PASSWORD=KALAMAZO
  RMT6      PASSWORD=UNIQUE
LIST
*
*           JES2 PARAMETER OVERRIDES
*
&NUMBUF=40
&TCELSIZ=6
&NIPUCS=GF12
TSUMCLAS=H
*
*           MULTI-ACCESS SPOOL CONFIGURATION PARAMETERS
*
5 S1        SID=L158
  S2        SID=K168
*
*           OPERATOR COMMANDS
*
$$ LNE1
$$ LNE2
$$ LNE3
$$ LNE4
$$ LNE5
6 $VS,'V(234,235,236,237),OFFLINE'
*
*           END OF JES2 PARAMETER LIBRARY LISTING
*

```

-
- 4 Parameters can be coded more than once to incorporate additional subparameters. (When the same subparameter is repeated for a parameter, the value specified last is the one that is used.)
- 5 Assuming this initialization data set is for a system whose SMF identifier is L158. Both of these parameters must also be included in the initialization data set for the system whose identifier is K168.
- 6 An operator command is used to ensure that these devices are varied offline regardless of their initial status.
-

Figure 3-2 (Part 2 of 2). Example of a JES2 Initialization Data Set

```

//JES2      PROC MEMBER=JES2PARM
//IEFPROC   EXEC PGM=HASJES20,DPRTY=(15,15),TIME=1440
//PROCO0    DD DSN=SYS1.PROCLIB,DISP=SHR
//HASPPARM  DD DSN=SYS1.PARMLIB(&MEMBER),DISP=SHR
//HASPLIST  DD DDNAME=IEFRDTER

```

Figure 3-3. The Basic JES2 Procedure


```

//JES2      PROC      M=JES2PARM,N=SYS1,L=LINKLIB,U=3330-1,V=SG3002
//*
//*****
//*
//*              EXAMPLE OF AN UPDATED JES2 PROCEDURE
//*
//*      M=MEMBER IN SYS1.PARMLIB CONTAINING INIT DECK
//*      N=1ST INDEX OF DSNNAME CONTAINING HASJES20 LOAD MODULE
//*      L=2ND INDEX OF DSNNAME CONTAINING HASJES20 LOAD MODULE
//*      U=UNITNAME CONTAINING JES2 INITIALIZATION PARAMETERS
//*      V=VOLUME SERIAL NUMBER CONTAINING THE JES2 LOAD MODULE
//*
//*      EXAMPLES:
//*
//*      S JES2              START STANDARD JES2 PROCEDURE
//*      S JES2,00E          PRODUCES A LISTING OF INIT PARMS
//*      S JES2, N=ALT,U=00C  STARTS AN ALTERNATE JES2
//*                          INIT PARMS READ IN FROM CARDS
//*      S JES2,00F,M=BATCHPRM  LISTS AND USES ALTERNATE INIT PARMS
//*      S JES2              STARTS STANDARD JES2 PROC
//*      ---FOLLOWED BY---    (IN RESPONSE TO $HASP426)
//*      R XX,NOREQ,HASPPARM=SECSHIFT  USED FOR SECOND SHIFT
//*      S JES2,M=SECSHIFT    SAME RESULTS AS ABOVE
//*      S JES2,M=TSUPARMS    USED DURING TIME-SHARING HOURS
//*
//*      S JES2,00E,N=HASP,U=00C,PARAM=(COLD,NOREQ)
//*                          STARTS AN ALTERNATE VERSION OF JES2
//*                          INIT PARAMETERS ARE ON CARDS
//*                          INIT OPTIONS ARE COLD,NOREQ
//*
//*****
//*
//IEFPROC   EXEC      PGM=HASJES20, TIME=1440,DPRTY=(15,15)
//STEPLIB   DD        UNIT=3330-1,VOL=SER=&V,DISP=SHR,DSN=&N..&L
//PROC00    DD        DSN=SYS1.PROCLIB,DISP=SHR
//PROC01    DD        DSN=SYS1.USERLIB,DISP=SHR
//PROC02    DD        DSN=SYS1.USERLIB,DISP=SHR
//          DD        DSN=SYS1.PROCLIB,DISP=SHR
//BATCH     DD        DSN=SYS1.PARMLIB(BATCHPRM),DISP=SHR
//SECSHIFT  DD        DSN=SYS1.PARMLIB(SECSHIFT),DISP=SHR
//HASPPARM  DD        DSN=SYS1.PARMLIB(&M),DISP=SHR,VOL=SER=&V,UNIT=&U
//HASPLIST  DD        DDNAME=IEFRDER      EFFECTIVE WHEN "S JES2,00E"

```

Figure 3-5. Example of an Updated JES2 Procedure

If the options are specified on the EXEC statement, JES2 suppresses the SPECIFY OPTIONS WTOR and completes initialization without operator intervention. The EXEC statement in the JES2 procedure in Figure 3-5 shows how the options can be coded as parameters.

After it has accepted the options, JES2 reads the specified initialization data set. When initialization is completed, JES2 is ready to start processing jobs. JES2 will start processing automatically if you specified the NOREQ option. Otherwise, it issues the following message to request the operator to issue the \$\$ command to start JES2 processing:

\$HASP400 ENTER REQUESTS

The operator can also respond to this message with other commands to change the initial status of initialized devices before JES2 starts to process.

Initialization Options

Option	Explanation
{ <u>FORMAT</u> } { <u>NOFMT</u> }	<p>FORMAT specifies that JES2 is to format all existing spool volumes. If unformatted spool volumes are added, JES2 automatically formats them whether FORMAT is specified or not. When FORMAT is specified, JES2 will automatically be cold started.</p> <p><i>Note:</i> The FORMAT option is denied if this is a multi-access spool configuration and JES2 is processing in one or more of the other systems.</p> <p><i>Default:</i> NOFMT specifies that JES2 is not to format existing spool volumes unless JES2 determines that formatting is required.</p>
{ <u>COLD</u> } { <u>WARM</u> }	<p>COLD specifies that JES2 is to be cold started. All jobs in the system are purged and all job data on the spool volumes is scratched.</p> <p><i>Note:</i> The COLD option is denied if this is a multi-access spool configuration and JES2 is processing in one or more of the other systems.</p> <p><i>Default:</i> WARM specifies that JES2 is to be warm-started. JES2 continues processing jobs from where they were stopped.</p> <p><i>Note:</i> If the system to be warm-started is in a multi-access spool configuration with any other active systems, only this system is warm-started. If there are no other active systems, JES2 requests the operator to verify that no other systems are active and, when verified, proceeds to warm start all jobs.</p>
{ <u>NOREQ</u> } { <u>REQ</u> }	<p>NOREQ specifies that the \$HASP400 ENTER REQUESTS message is to be suppressed and that JES2 is to automatically start processing when initialization is completed.</p> <p><i>Default:</i> REQ specifies that the \$HASP400 ENTER REQUESTS message is to be written at the console. This message allows the operator to start JES2 processing with the \$\$ command.</p>
{ <u>NOLIST</u> } { <u>LIST</u> }	<p>NOLIST specifies that JES2 is not to print the contents of the initialization data set or any error flags that occur during initialization. If NOLIST is specified, any LIST control statements in the initialization data set are ignored.</p> <p><i>Default:</i> LIST specifies that JES2 is to print all the statements in the initialization data set and any error flags that occur during initialization. (JES2 prints these statements if a printer is defined for that purpose when JES2 is started.) LIST does not print any statements that follow a NOLIST control statement in the initialization data set.</p>
{ HASPPARM=ddname <u>HASPPARM=HASPPARM</u> }	<p>ddname specifies the name of the data definition (DD) statement that defines the data set containing the initialization parameters that JES2 is to use for this initialization.</p> <p><i>Default:</i> HASPPARM specifies that JES2 is to initialize using the initialization parameters in the data set defined by the HASPPARM DD statement in the JES2 procedure.</p>
{ <u>NONE</u> U N null }	<p>NONE, U, N, or the null character specifies that JES2 is to use all the default initialization options.</p>

Figure 3-6. The JES2 Initialization Options

How JES2 Performs Initialization

JES2 performs an initialization the first time it is started (as part of the IPL procedure) and every time it is restarted after a normal system shutdown or after a system failure. In a multi-access spool configuration, JES2 must be started and initialized in each system in the configuration. The way JES2 performs initialization during these start situations is described below.

Starting JES2 for the First Time

JES2 is automatically started by the JES2 procedure (refer to Figure 3-3) in SYS1.PROCLIB. The START JES2 command is automatically placed in MSTRJCL during system generation. If the user wants the option of manually starting JES2, the MSTRJCL should be changed as follows using AMASPZAP:

NAME	MSTRJCL	(SYS1.LINKLIB)
VER	0320	616140E2, E3C1D9E3, 40D1C5E2F2
REP	0320	61614040, 40404040, 4040404040

It is necessary to write blanks (X'40's) to overlay the characters "START" of the //START JES2 command, making it a null card. When MSTRJCL is changed, JES2 parameters can then be entered on an operator-issued START command that must be issued before MVS processing can occur.

As soon as JES2 is started, it issues the SPECIFY OPTIONS WTOR. The operator should specify the COLD (or FORMAT) option. If COLD (or FORMAT) is not specified, JES2 will issue the following messages:

```
$HASP434 WARM START DENIED—INVALID CHECKPOINT RECORD
$HASP420 PERM I/O ERROR READING JES2 CKPT
$HASP428 CORRECT THE ABOVE PROBLEMS AND RESTART JES2
```

You will have to restart JES2 and then specify COLD (or FORMAT) in response to the SPECIFY OPTIONS WTOR.

JES2 initializes its functions and devices according to the default values of the initialization parameters (since HASPPARM points to a null initialization data set). When initialization is completed, JES2 can start processing jobs. Your first job can be the utility programs that create your initialization data set and update the JES2 procedure. Before you can use your data set, you must stop and restart JES2 with the name of the data set specified as an initialization option. The way to do this is described in the section, "Restarting JES2 after an Orderly Shutdown."

Note: If the primary JES2 spool volume (specified by the &SPOOL initialization parameter) is not mounted and ready when JES2 is started, JES2 will inform the operator that the spool volume must be mounted and will then terminate. The volume cannot be mounted, however, because processing a MOUNT command requires the as-yet-uninitialized JES2. The only thing the operator can do is to ready the spool volume and IPL again. A way to avoid this situation is to include in the VATLSTnn parmlib member an entry specifying the required spool volume without suppressing the mount option. VATLST processing will then request that the volume be mounted during the IPL process. An example would be:

```
SPOOL1,0,2,330
```

See OS/VS2 System Programming Library: Initialization and Tuning Guide for more information about VATLST.

Starting JES2 in a Multi-Access Spool Configuration

Whenever JES2 is started, it checks whether JES2 has already been started in another system that was generated with the current system as a multi-access spool configuration. JES2 determines this by reading the JES2 checkpoint record (SYS1.HASPCCKPT) and checking the last time stamp recorded by each system. If a time stamp for any system is less than the time-of-day (TOD) clock plus the time interval specified by the JES2 initialization parameter &SYNCTOL, JES2 is assumed to be processing in the associated system. In such a case, JES2 rejects the COLD (or FORMAT) option and requests the current system to perform a WARM start.

If all time stamps are older than the TOD clock plus the &SYNCTOL interval, JES2 is assumed not to be operating in any other system. Therefore, the current system can either be cold started or warm started following an orderly shutdown or a system failure. A warm start reallocates the spool volumes that were in use in order to recover any direct-access space that might have been lost during a system failure.

Restarting JES2 after an Orderly Shutdown

JES2 can be stopped and restarted in a system at any time by operator commands. This capability allows you to (1) quiesce job processing in preparation for an orderly system shutdown and (2) restart JES2 to perform an initialization with a different initialization data set.

For both situations, the operator first issues the \$p command to drain the JES2 queues. When all JES2 logical initiators, printers, and punches complete their current activities and become inactive, JES2 notifies the operator with the following message:

```
$HASPO99 ALL AVAILABLE FUNCTIONS COMPLETE
```

The operator can then enter the \$p JES2 command which stops JES2 and removes it from the system. When halting the system at end-of-day or end-of-work shift, the operator should also enter the HALT EOD command. When the system is reloaded, JES2 is automatically started. (The operator can, of course, specify a different initialization data set as an initialization option at that time by responding with HASPPARM=ddname when JES2 issues its SPECIFY OPTIONS message.) When JES2 completes initialization, it either begins to process jobs automatically or waits for the operator to enter the \$\$ command in response to the ENTER REQUESTS message.

If the operator does not halt the system after stopping JES2, JES2 can be restarted with the S JES2 command. As part of this START command, the initialization options can be specified as parameters. For example,

```
S JES2,PARM='WARM,HASPPARM=RJE,NOREQ'
```

When the options are specified on the START command this way, the SPECIFY OPTIONS WTOR is suppressed just as it is when the options are specified as parameters on the EXEC statement within the JES2 procedure.

The START command can also be used to specify a printer address for the HASPLIST DD statement in the JES2 procedure. For example,

```
S JES2,00E
```

If you specify both a printer address and initialization options, the printer address must be specified first:

```
S JES2,00E,PARM='WARM'
```

You may also use the START command to start JES2 manually at IPL. (Use an AMASPZAP statement to remove the start command for JES2 that is contained in the MSTRJCL member of SYS1.LINKLIB.)

Restarting JES2 after a System Failure

JES2 is automatically restarted in an MVS system whenever that system is re-IPLed following a system failure. The WARM initialization option allows you to warm start JES2 and continue job processing from the point of the last checkpoint before the system failure.

During a warm-start initialization, JES2 reads through its job queues and handles each job according to its status:

1. Jobs in input readers are lost and must be reentered.
2. Jobs in output (print/punch) are restarted at the last JES2 checkpoint.
3. Jobs waiting for JES2 functions remain on the JES2 queues.
4. Jobs in execution are either requeued for warm-start processing or are queued for output processing: If a job in execution was journaled, its JES2 job control table (JCT) is updated to indicate warm-start and the job is queued for reexecution. If a job in execution has no journal, it is tested to determine whether RESTART was indicated for the job. If RESTART was indicated, the job's JES2 JCT is updated to remove any warm-start indications, and the job is queued for reexecution. If RESTART was not indicated, the job is queued for output processing.

Following JES2 warm-start processing, jobs queued for reexecution are again selected by initiators. A non-journaled job that was requeued because RESTART was indicated is handled as a new job. A journaled job that indicates warm-start processing receives special attention from an initiator.

The initiator/terminator purges existing job tables and messages for the job, and then checks whether the job is authorized for warm-start processing:

- The job must have a valid restart definition (RD=) code in the RD parameter on its JOB card.
- The operator must authorize the job to be restarted. (Each eligible job is presented to the operator asking whether the job is to be restarted.)

If either of these two authorizations is not made, the job is tested to determine whether RESTART was indicated. If it was indicated, the job's JES2 JCT is updated to remove any warm-start indications, and the job is queued for reexecution as a new job. If RESTART was not indicated, the job is queued for output processing. Authorized jobs are queued again for reexecution.

Jobs can be presented to the system for warm start at any time in any order. This allows important jobs and system functions to be executed ahead of less important jobs scheduled for execution or termination. New jobs can be presented to the system and processed according to their priority ahead of lower-priority warm start jobs.

When JES2 is warm started, all spool volumes (and the checkpoint data set, if different) that were up during the last execution of JES2 must be present and available, although it is not necessary that they be mounted on the same drives. If all the spool volumes are not up, JES2 notifies the operator. If you add a new spool volume, JES2 adds it to the list of spool volumes; if it is unformatted, JES2 automatically formats it.

During warm-start initialization, JES2 lists the activity in process for each job at the time JES2 was stopped. Then, when the ENTER REQUESTS message is issued (unless the NOREQ initialization option was specified), the operator can enter requests to modify or delete each activity. This message also allows the operator to examine the status of output devices (such as UCS and FCB settings) to determine what action to take prior to restarting the output process, to change the status of logical initiators and devices, and to

modify the status of jobs on the JES2 queues. (Note that the status and activity of each device reverts to the specifications of the initialization parameters. If you specify NOREQ, JES2 begins processing each job according to the specifications of the initialization parameters as soon as resources to process each job become available.)

How to Correct Initialization Errors

During JES2 initialization, two kinds of errors can occur. The first can occur when JES2 cannot open the data set containing the initialization parameters. This happens, for instance, when a DD statement is named in the HASPPARM=ddname initialization option, but the named DD statement is not defined in the JES2 procedure. JES2 acknowledges the error with the following messages:

```
$HASP450 OPEN FAILED FOR JES2 PARAMETER LIBRARY
$HASP441 REPLY Y OR N TO CONTINUE INITIALIZATION
```

The second message allows the operator to stop JES2 and restart it with a correctly defined data set.

The second error can occur when JES2 encounters a user error in the statements in the initialization data set. JES2 flags each statement in error and reads the next one in the data set. If the data set is printed out (see Figure 3-6 for a description of the LIST option), each statement that is in error has an error flag printed beside it. These error flags and their explanations follow.

Initialization Error Messages

CONTINUATION CARD EXPECTED

The statement ahead of this one was not a complete one and JES2 is expecting a continuation card for it. For example, a previous statement of "I8 DRAIN," followed by an end of file would cause JES2 to expect more subparameters for this statement.

DATA OR FORMAT ERROR

This parameter was specified incorrectly and JES2 cannot classify the error; for example, specifying B instead of &B as a job class parameter.

ILLEGAL DECIMAL VALUE

A decimal value is required for this parameter. The value specified contains one or more non-decimal symbols. For example, &NUMBUF=1A2 instead of &NUMBUF=102.

ILLEGAL keyword VALUE

The value you specified for this subparameter keyword does not meet the required value range or specifications. For example, ROUTECDE=300 instead of ROUTECDE=100.

ILLEGAL SUBSCRIPT

The parameter subscript falls outside the valid subscript range.

INVALID CHARACTER VALUE

The value specified for this parameter contains one or more invalid characters. For example, STCMCLAS=% instead of STCMCLAS=H.

INVALID DEVICE NAME

The number you specified for this device exceeds the maximum number of devices supported by JES2.

INVALID HASPPARM STATEMENT

You specified this parameter incorrectly and JES2 cannot classify the error. For example, READR1 instead of READER1.

INVALID INITIATOR NUMBER

The number you specified for this logical initiator either exceeds the maximum number JES2 allows or it contains an invalid character.

INVALID KEYWORD keyword

This subparameter keyword is misspelled or is not valid for this parameter.

INVALID PARAMETER VALUE

The value you specified for a subparameter exceeds the range limit. For example, PRIOINC=16 when the maximum allowed is 15.

Note: When a parameter statement contains an error, JES2 ignores the entire statement and uses instead all the default values assigned for that parameter. The one exception to this is a parameter statement that contains a subparameter that exceeds its range limit. When this error occurs, JES2 honors all values specified up to the error, writes the error flag (INVALID PARAMETER VALUE), and ignores the remainder of the statement by assuming default values.

INVALID REMOTE NUMBER

The number specified for this remote exceeds the maximum number of remotes supported by JES2.

INVALID ROUTE CODE

The remote number specified in a subparameter exceeds the maximum number of remotes supported by JES2.

INVALID SYSTEM NUMBER

The system number specified exceeds the maximum number of members that JES2 supports in a multi-access spool configuration.

LIMITS ARE nnn,nnnnnnnnnn

The number specified for this parameter falls outside the indicated range.

VERIFICATION ERROR

The VERIFY statement data does not match the data at the specified location.

When all parameter statements have been read, if any statements with errors were encountered, JES2 issues the following messages:

\$HASP451 ERROR ON JES2 PARAMETER LIBRARY

\$HASP441 REPLY Y OR N TO CONTINUE INITIALIZATION

The operator's reply should be based on a careful examination of the parameter card error messages. If the reply is 'N', JES2 issues the following message:

SHASP428 CORRECT THE ABOVE PROBLEMS AND RESTART JES2.

Alternate Subsystem Options with JES2

MVS allows more than one subsystem to operate at a time as long as one subsystem is designated as the primary subsystem and others are identified as secondary subsystems. The system-generated primary job entry subsystem must be started and completely initialized before initiators can start and processing can occur. Secondary JES2s can be useful in testing user modifications while the primary JES2 is being used for production. The SCHEDULR system generation macro must name all subsystems that are allowed or a procedure (for example, the procedure described below) may be used to add subsystem names after the system generation process.

It is therefore possible to run more than one JES2 at a time with certain restrictions applying to the secondary JES2: the secondary JES2 cannot interface with TSO or started tasks. When running more than one JES2 at a time, it is necessary to assign (by the &CCOMCHR initialization parameter) a unique operator command character to each JES2 and to have a unique spool direct access device (by means of the &SPOOL initialization parameter) for each JES2. Also, the keyword "JES2" must be used as the parameter to stop whatever subsystem is running regardless of the name on the START command; for example:

S JES2	START JES2	
SP JES2	STOP JES2	(default &CCOMCHR)
START JSS4	START JSS4	
/P JES2	STOP JSS4	(&CCOMCHR=)

If an alternate subsystem support module (HASPSSSM) is to be used, it must be linked into SYS1.LPALIB under an alternate name (for example, TESTSSSM). The initialization deck for the subsystem using this module must contain a statement that names the alternate HASPSSSM. This statement takes the form HASPSSSM=altname (for example, HASPSSSM=TESTSSSM).

Before initializing with an alternate subsystem support module, however, the installation must specify the CLPA option as a system parameter during MVS initialization (see IEASYSxx under "Descriptions of Individual PARMLIB Members" in *OS/VS2 System Programming Library: Initialization and Tuning Guide*).

If the alternate subsystem is placed in a library other than SYS1.LINKLIB, the data set name must be added to the IEAAPFxx member in SYS1.PARMLIB (see the description of IEAAPFxx in *OS/VS2 System Programming Library: Initialization and Tuning Guide*).

In place of the primary job entry subsystem, an alternate subsystem can be executed as the primary subsystem. This alternate subsystem must be in SYS1.PROCLIB and named on the START command.

If the user specifies no secondary subsystem during system generation, or wants to change a previously-specified secondary subsystem, the JES2 subsystem names table must be changed. For example, assuming JES2 is the primary subsystem and the desired alternate JESA and HASP are the desired alternates, the required AMASPZAP statements are:

NAME	IEEVIPL	IEFJESNM	(SYS1.LINKLIB)
VER	0000	D1C5E2F2,D4E2E3D9	
REP	0000	D1C5E2F2,D4E2E3D9,D1C5E2C1,C8C1E2D7	

JES2 MASTER JES2 HASP

To run with
 a load module
 name other
 than HASJES20,
 the program
 properties table
 must be updated
 SYS1.LPALIB

IEFSDP60 IEFSDPPT

The JES2 initialization parameter &CCOMCHR affects the identification assigned to JES2-initiated messages to the operator. Normally JES2-initiated messages are tagged with a "\$" at the beginning of the text. However, the "\$" character is taken from the value of &CCOMCHR; therefore a different specification of this value for each subsystem allows the origin of the message to be identified.

The example given below shows steps that might be used to install an alternate (or secondary) subsystem.

1. Run all assemblies and place the object modules into ALT.OBJLIB.
2. Link-edit all modules except HASPSSSM and HASPDOG into ALT.LINKLIB as HASJES20.
3. Link-edit HASPSSSM into SYS1.LINKLIB as HASPSALT.
4. Add the data set name ALT.LINKLIB to IEAAPF00.
5. Re-IPL MVS specifying CLPA,APF=00 in response to message IEA101A (CLPA is needed only once after link-editing HASPSALT).
6. Specify options to the primary JES2 system when it enters initialization.
7. Issue an S JESA,N=ALT,U=00C command once the primary system is active and after the sample procedure JESA (see below) is added to SYS1.PROCLIB.

The secondary (ALT) has the following initialization deck:

```
&SPOOL=ALTJES
HASPSSSM=HASPSALT
&CCOMCHR=/
```

Specification of U=00C indicates that the initialization deck described above is to be read from the card reader at address 00C.

The following is a sample procedure, JESA:

```
//JESA      PROC  M=JES2PARM,U=3330,L=LINKLIB,N=SYS1,V=SYSRES
//IEFPROC   EXEC  PGM=HASPJES20,DPTRY=(15,15),TIME=1440
//STEPLIB   DD    UNIT=3330,VOL=SER=&V,DISP=SHR,DSN=&N.&L
//PROC00    DD    DSN=SYS1.PROCLIB,DISP=SHR
//HASPPARM  DD    DSN=SYS1.PARMLIB(&M),DISP=SHR,UNIT= &U,
//           VOL=SER=&V
//HASPLIST  DD    DDNAME=IEFRDER
```

To execute the above procedure and obtain a listing of the initialization deck for secondary subsystem JESA on 00E:

```
S JESA,00E,N=ALT,U=00C
```

Initialization Parameter Descriptions

This section describes the JES2 initialization parameters, their functions, formats, and default values. The parameters are described in alphabetical order (excluding the first characters if & or \$). The following conventions are used in the parameter descriptions:

- Numbers and uppercase letters must be coded exactly as shown.
- Lowercase letters represent variables for which you must substitute specific information or specific values.

- Paired parameter values or paired subparameters (for example, HOLD/NOHOLD) indicate that you may choose one or the other. If you specify neither, the underlined one will be used as the default value.

The following syntax rules apply to the coding of most of the parameters. (Exceptions are contained within the parameter descriptions.) Refer to Figure 3-2 for examples of coded parameters.

- A parameter is separated from its subparameters by at least one blank; subparameters are separated from each other by commas.
- Any columns between 1 and 71 can contain data; column 72 is used for continuation; columns 73-80 are ignored.
- Parameter statements can be continued on successive cards; continuation is indicated by a comma followed by a blank. (If the last subparameter on a card is not followed by a comma and column 72 is not blank, then the next card is considered to contain only comments.)
- Subparameters cannot contain embedded blanks. The first blank terminates the parameter statement and the rest of the card is considered to contain comments.
- Only one parameter can be coded per card although several subparameters can be coded on the same card.
- Leading zeros cannot be used in parameter values (except as noted for specific parameters). This is especially true for device names: `READER01` is an error; `READER1` is correct.
- A parameter deck is terminated by an end of file or any card that contains a `/*` in columns 1 and 2.
- Character specifications, unless otherwise noted, can include any alphanumeric or national characters or the period(`.`).

Parameter cards can be put in the card deck in any order. Subparameters may also be specified in any order. Once a parameter or subparameter is specified, that value is used until that parameter or subparameter is specified again. That is, if the same parameter occurs more than once, or if the same subparameter occurs more than once for a parameter, JES2 uses the value from the last one it reads.

&BSPACE (Console Backspace Character)

&BSPACE=nn

The **&BSPACE** parameter specifies the character that will be interpreted as the machine-defined backspace character `X'16'`. `nn` is the two-digit hexadecimal representation of the EBCDIC character that will be interpreted as the machine-defined backspace character `X'16'`. When the character specified by this parameter is entered from any operator console, it is removed from the command text along with the previously entered character (if any). Characters following the backspace character are shifted left to replace the removed backspace characters.

This backspace function applies to all commands entered by means of operator command input sources, regardless of their position in the text of the data entered. This function does not apply to a JES2 card reader or remote work station sources.

Note: *The character selected for the backspace function must be chosen with caution because it eliminates the use of that character (except as a backspace operation) in all commands and replies to WTORS.*

Default: The EBCDIC character ‘␣’ (X'5F') is used for backspace command entry on operator consoles.

&BSVBOPT (2780 End of Media Punch Recognition Option)

&BSVBOPT=YES/NO

The &BSVBOPT parameter provides the option of recognizing an EM (end of media) punch in card images transmitted nontransparently by the 2780 Data Transmission Terminal.

Default: NO

&BUFSIZE (JES2 Buffer Size)

&BUFSIZE=nnnn

The &BUFSIZE parameter specifies the size, a decimal number of bytes, of each JES2 buffer. If the value specified is not a multiple of 8, it is rounded up automatically.

Each JES2 buffer is allocated to virtual storage, so the input/output block (IOB), which is 88 bytes, and the data area (the number of bytes in &BUFSIZE) are always contained in one 4K page. The maximum value, 4008, allows three records per track on a 3330.

Lower Limit: 600

Upper Limit: 4008

Default: 1960, which is the maximum size that allows two buffers per page of virtual storage and good utilization of 2314 and 3330 track capacities (three or six records per track, respectively).

Note: The maximum value, 4008, and the default value, 1960, are dependent on the current JES2 control block definitions. The value selected for &BUFSIZE must be at least the greater of 600 or $(368 + \&NUMDA * ((\&NUMTGV + 7) / 8 + 3) / 4 * 4 + 7) / 8 * 8$, where the number 368 is dependent on the current JES2 control block definitions.

&CCOMCHR (Local Operator Command Identifier)

&CCOMCHR=c

The &CCOMCHR parameter specifies the character that will be used to identify JES2 commands from local consoles. If a command from a local console begins with the character specified for &CCOMCHR, JES2 assumes that the command is a JES2 command and attempts to process it.

The value you specify should be a special character that is not used as the first character of any command of any other subsystem that may be operated concurrently with JES2. The character should be one of the following:

¢	.	<	(
¬		&	!
\$	*)	;
+	-	/	%
-	>	?	:
#	@	=	”

Notes:

1. The specification must not be the character specified for the &BSPACE parameter.

2. If this parameter is changed to a character other than its default (\$), the commands will vary from their documented format in Operator's Library: OS/VS2 JES2 Commands and the messages will vary from the format in OS/VS Message Library: VS2 Messages.

Default: \$

&CHKPT (JES2 Checkpoint Volume ID)

&CHKPT=cccccc

The &CHKPT parameter specifies the volume serial number of the volume that contains the JES2 checkpoint data set, SYS1.HASPCKPT. (Space for this data set is allocated at JES2 generation as described in Chapter 2.) The value you specify for &CHKPT should be from one to six characters that define a valid volume serial number. When this parameter is specified as a volume serial number other than SPOOL1 (the default for &SPOOL), certain messages will vary from their documentation in *OS/VS Message Library: VS2 System Messages*.

Note: The checkpoint data set is frequently referred to, especially in multi-access spool configurations. Therefore, only low-usage data sets (if any) should be allocated on the same volume as the checkpoint data set. Otherwise, JES2 performance could be seriously degraded.

Default: The volume serial number specified in the &SPOOL parameter.

&CKPTIME (JES2 Checkpoint Interval)

CKPTIME=nnn

The &CKPTIME parameter specifies, in seconds, the interval at which certain checkpoints of JES2 information are taken for warm start. (Checkpoints are taken, for example, when a job changes its status in the JES2 job queue.) The time interval specified is a maximum checkpoint time for a non-shared JES2 system (that is a single-member configuration). For JES2 systems sharing pool and checkpoint volumes, the time interval specified is used for print/punch checkpoints only. For these systems, a value of 120 or greater is recommended.

Lower Limit: 10

Upper Limit: 300 (5 minutes)

Default: 60 (1 minute)

&DEBUG (JES2 Debug Option)

&DEBUG=YES/NO

The &DEBUG parameter provides the option for JES2 to record certain JES2 events and to monitor certain JES2 activities. Selection of this option will degrade JES2 performance.

Note: The information recorded as the result of selecting this option can only be made available through a dump of the JES2 memory. For more information about a JES2 dump, refer to the description of diagnostic aids in OS/VS2 MVS JES2 Logic.

Default: NO

&DELAYTM (Transmission Delay Time)

&DELAYTM=nnnn

The &DELAYTM parameter specifies, in microseconds, the delay time to be applied by RTAM when transmitting to either a MULTI-LEAVING System/360 Model 20, submodel 2, 4, or 6, or to a 2922 remote terminal over a high-speed (19,200 baud or greater) teleprocessing line. This delay time avoids the possibility of certain line errors.

If data-overflow line errors occur at the work station when the default value is used, the value should be increased.

Lower Limit: 1

Upper Limit: 9999

Default: 100

DESTID (Route Code Name)

**DESTID NAME=ccccccc
DEST=Rnnn/Unnn/LOCAL**

The DESTID parameter specifies a user-defined name for a JES2 route code. JES2 route codes normally are of the form Rnnn for remote workstations (for example, R4 indicates SYSOUT data for remote 4), Unnn for special routed local printer or punch devices (for example, U1 indicates SYSOUT data for local printer or punch with route code of 1), or LOCAL for normal printer or punch devices with route code of 0. The user may refer to these JES2-defined routings in the DEST operand of the JCL data definition (DD) statement for /*OUTPUT, for SYSOUT data sets, in dynamic allocation of SYSOUT, or in the TSO OUTPUT command. The operators also refer to the JES2-defined routings in many JES2 operator commands. By assigning DESTID names to be equivalent to these routings, the users and operators may refer to the names in lieu of the names provided by JES2.

NAME=ccccccc

specifies the name, 1 to 8 alphanumeric characters (first character alphabetic), that the users and operators may use to refer to the JES2-defined destinations. The characters in the name must not match an acceptable name that could be used in the DEST parameter. You should therefore refrain from using names of the form Xnnn (where X is any alphabetic character and nnn is a numeric value), RMnnn, or RMTnnn.

DEST=Rnnn

specifies the identification of the remote work station (*nnn*) the user or operator desires when the name is used. If the remote work station devices are pooled with another remote, the destination refers to the pool of remotes. The *nnn* values range from 1 to the maximum work station number defined to the system (refer to the description of &NUMRJE).

DEST=Unnn

specifies the special routing number to be associated with the name. The *nnn* values range from 1 to 255 and correspond to the settings specified in the local reader, printer, and punch route code settings.

DEST=LOCAL

specifies that the name may be used to refer to normal local printer and punch devices; that is, printer and punch devices that are to receive normally routed output.

&DMNDSET (Demand Setup Option)

&DMNDSET=YES/NO

The &DMNDSET parameter specifies whether inline printer setup will be allowed for data sets whose SYSOUT class matches the job message class.

If the default value is not used, all SYSOUT data sets that are not specified for special processing in any other way (for example, HOLD) and whose class matches the job's message class, are printed on one printer with appropriate setup messages to the operator as the data sets are printed.

If &DMNDSET=NO is specified or if the SYSOUT class does not match the message class, separate class work queues are created for each unique setup required. Thus, data sets can be printed simultaneously on all printers available.

Default: NO

&ESTIME (Default Estimated Execution Time)

&ESTIME=nnnn

The &ESTIME parameter specifies, in minutes, the default estimated execution time for a job. This value is used if you do not specify a value for estimated execution time in the accounting field of the JOB card or on a /*JOBPARM control card.

Lower Limit: 1

Upper Limit: 1440 (24 hours)

Default: 2

&ESTLNCT (Default Estimated Print Output)

&ESTLNCT=nnnn

The &ESTLNCT parameter specifies, in thousands of lines, the default estimated print line count for a job. This value is used if you do not specify a value for the estimated print line count in the accounting field of the JOB card or on a /*JOBPARM control card.

Lower Limit: 0

Upper Limit: 9999

Default: 2

&ESTPUN (Default Estimated Punch Output)

&ESTPUN=nnnnnnn

The &ESTPUN parameter specifies, in number of cards, the default estimated punched card output for a job. This value is used if you do not specify a value for the estimated card count in the accounting field of the JOB card or on a /*JOBPARM control card.

Lower Limit: 0

Upper Limit: 9999999

Default: 100

Innnn (Logical Initiator) Innnn CLASS= $c_1 \dots c_n$
 DRAIN/START
 NAME=cc

The Innnn parameter specifies the characteristics of one logical initiator. Initiators are numbered consecutively (I1-I1332) for the number of initiators specified by the &MAXPART parameter. Initiator characteristics are specified by the following subparameters.

CLASS= $c_1 \dots c_n$

specifies the job classes (in order of their priority) from which this initiator will schedule jobs. You can specify any number of job classes (A-Z,0-9) up to 36. Those in excess of the number specified by the &MAXCLAS parameter are ignored.

Default: If not specified, JES2 assigns job classes in the following manner:

For Logical Initiator	Default Classes Are
I1	A
I2	BA
I3	CBA
.	.
.	.
.	.
I26	ZYX ... CBA
I27	OZYX ... CBA
I28	10ZYX ... CBA
.	.
.	.
.	.
I36	987 ... CBA
I37	987 ... CBA
.	.
.	.
.	.
I99	987 ... CBA

Note: When &MAXCLAS specifies a number less than 36, JES2 determines the default job classes as shown above, but recognizes only the number of them allowed by the &MAXCLAS value. For instance, when I8 is assigned default classes HGFEDCBA, but &MAXCLASS=5, JES2 recognizes only the first five (HGFED) job classes as default classes for I8.

DRAIN/START

DRAIN specifies that this initiator will be started by operator command.

Default: START specifies that this initiator is to be started automatically when JES2 starts processing.

NAME=cc

specifies a unique name that the operator can use to refer to this initiator. cc may be 1 or 2 characters (A-Z,0-9).

Default: nnnn of the Innnn specification. (Beyond I99, you must specify a name.)

INTRDR (Internal Readers)

INTRDR AUTH=n
CLASS=c
HOLD/NOHOLD
PRIOINC=nn
PRIOLIM=nn

The INTRDR parameter specifies the characteristics of *all* JES2 internal readers defined by the &NUMINRS parameter. An internal reader is a special SYSOUT data set that other programs can use to submit jobs, control statements, and commands to JES2. External readers (for example, RDR) and time-sharing users use the internal readers to submit jobs from direct access devices or tapes. Internal readers are treated like physical input devices. Internal reader characteristics are specified by the following subparameters.

AUTH=n

specifies the command authority number for internal readers. This number authorizes certain JES2 commands to be submitted through an internal reader. *n* is a number from 0-7 defining the kind of commands that can be entered:

- 7 – display only
- 6 – system authority
- 5 – device authority
- 4 – system and device authority
- 3 – job authority
- 2 – system and job authority
- 1 – device and job authority
- 0 – system, device, and job authority

This command authority can be changed at any time by the operator.

Note: The numbers defining these command authorities are intentionally opposite to the numbers of the command authorities defined for the \$T operator command.

Default: 0

CLASS=c

specifies the default job class to be assigned to all jobs submitted through an internal reader that do not specify a job class in the CLASS operand of their JOB statements. *c* can be any character A-Z,0-9.

Default: A

HOLD/NOHOLD

HOLD specifies that all jobs submitted through an internal reader are to be held after JCL conversion until they are released for execution by the operator.

Because all internal readers are treated as a single facility, if one internal reader is held, all internal readers are held. This can be particularly troublesome if TSO users are submitting jobs and the central operator has held the internal readers. This can be overcome by several operating techniques:

- All jobs submitted through an internal reader can be assigned a class and that class can be held by means of a JES2 parameter library entry or the \$HQn operator command.
- Jobs submitted through the internal reader can use the TYPRUN=HOLD parameter on the JOB card.
- Jobs submitted through an internal reader can be individually held with the \$HJ operator command.

Default: NOHOLD, which specifies that jobs submitted through an internal reader are to be queued as usual.

PRIOINC=nn

specifies a number (0-15) to be *added* to the selection priorities of all jobs submitted through internal readers. If the total of this number and a job's priority exceeds the value specified by PRIOLIM, JES2 assumes the priority specified by PRIOLIM.

Default: 0

PRIOLIM=nn

specifies the maximum priority level (0-15) that can be assigned to jobs submitted through an internal reader. If a job's priority (with or without the increment specified by PRIOINC) exceeds this level, it will be reduced to this level.

Default: 15

**&JCOPYLM (Maximum
Job Output Copies)**

&JCOPYLM=nnn

The &JCOPYLM parameter specifies the maximum number of job output copies that can be requested in the accounting field of the JOB card or on a /*JOBPARM control card. If the number of copies requested is greater than the value of &JCOPYLM, the request is reduced to the value of &JCOPYLM. No error message is produced.

The setting of this parameter does not affect requests for multiple copies of data sets through a /*OUTPUT control card.

Lower Limit: 1

Upper Limit: 255

Default: 3

**&LINECT (Lines Per
Page Limit)**

&LINECT=nnn

The &LINECT parameter specifies the maximum number of lines to be printed per page of a job's printed output. This value is used if you do not specify a value for line count in the accounting field of the JOB card or on a /*JOBPARM control card.

&LINECT=0 causes automatic page overflow (normally standard in JES2) to be suppressed unless overridden by the JOB card accounting parameter or a /*JOBPARM control card specification.

If a print data set is generated without any ejects (that is, no skips to any channel in the carriage tape), and if 0 is specified in this parameter, the JOB card accounting field, or a /*JOBPARM control card, the data set is treated as one page when forward-spaced, backspaced, interrupted, or warm started while printing.

Lower Limit: 0

Upper Limit: 255

Default: 61

Note: When using standard forms (14 7/8 X 11), a 3800 printer will not print more than 60 lines per page at 6 lines per inch or 80 lines per page at 8 lines per inch.

LINEnnn (RJE Lines)

LINEnnn CODEB/CODEA
FDUPLEX/HDUPLEX
HISPEED/LOWSPEED
IFACEB/IFACEA
NOADISC/ADISCON
PASSWORD=ccccccc
TRANSP/NOTRANSP
UNIT=cau/SNA
USASCII/EBCDIC

The LINEnnn parameter specifies the characteristics of one teleprocessing line or logical line (for SNA RJE terminals) to be used during remote job entry. This parameter should be specified for each teleprocessing line. Lines are numbered consecutively (LINE1–LINE255) for the number of lines specified by the &NUMLNES parameter. Line characteristics are specified by the following subparameters.

Note: If UNIT=SNA is specified, all other LINEnnn subparameters, except PASSWORD, are ignored.

CODEB/CODEA

CODEB specifies code B for this line. Code B refers to the second code in a BSC adapter that has the Dual Code feature. If the Dual Code feature is not present, CODEB should not be specified.

Default: CODEA which specifies code A for this line; Code A refers to the first code in a BSC adapter that has the Dual Code feature.

FDUPLEX/HDUPLEX

FDUPLEX specifies that this is a duplex line.

Default: HDUPLEX, which specifies that this is a half-duplex line.

HISPEED/LOWSPEED

HISPEED specifies that this is a high-speed (greater than 9600 bits per second) line.

Default: LOWSPEED, which specifies that this is a low-speed line.

IFACEB/IFACEA

IFACEB specifies interface B for this line. Interface B refers to the second interface in a BSC adapter that has the Dual Communications Interface feature. If the adapter for this line does not have the Dual Communications Interface feature, IFACEB should not be specified.

Default: IFACEA, which specifies interface A for this line; Interface A refers to the first interface in a BSC Adapter that has the Dual Communications Interface feature.

NOADISC/ADISCON

NOADISC specifies that this line is not to be automatically disconnected from a terminal when the local modem disconnects.

Default: ADISCON, which specifies that this line is automatically disconnected when the local modem disconnects.

PASSWORD=cccccccc

specifies a security password (1-8 alphanumeric characters) to prevent unauthorized terminals from using this line. (This password may be used in the connection request from remote terminals.)

Default: No password.

TRANSP/NOTRANSP

TRANSP specifies that the Text Transparency feature of the BSC Adapter is present on this line.

Default: NOTRANS, which specifies that the Text Transparency feature of the BSC Adapter is not present on this line.

UNIT=cau/SNA

specifies the unit address of this teleprocessing line (cau), or defines this teleprocessing line as a logical line (SNA).

Default: If not specified, JES2 assigns the first available BSC line address.

Notes:

1. The same unit address may be specified for more than one line to allow use of different interfaces or codes available in a single BSC Adapter. JES2 will allow only one of these lines to be started by the operator at any one time.
2. If UNIT=SNA is specified, all other LINE_{nnn} subparameters, except PASSWORD, are ignored.

USASCII/EBCDIC

USASCII specifies that the BSC Adapter is configured for ASCII line-control characters. When USASCII is specified, this line must be used with a 2770, 2780, or 3780 ASCII terminal.

Default: EBCDIC, which specifies that the BSC Adapter is configured for EBCDIC line-control characters.

LOGON1 (Identification of JES2 to VTAM)

LOGON1 APPLID=cccccccc
PASSWORD=cccccccc

The LOGON1 parameter identifies JES2 as an application program to VTAM. Both of the subparameters for this parameter are optional.

APPLID=cccccccc

specifies the name, one to eight characters, that the installation has assigned to JES2. This name must match the name defined to VTAM (see *OS/VS2 MVS System Programming Library: VTAM* for more information about VTAM definition).

Default: JES2

PASSWORD=cccccccc

specifies the password, one to eight alphanumeric characters, presented to VTAM. (Passwords with fewer than eight characters are padded with blanks.) This password must have been associated with the above APPLID at VTAM system definition.

Default: No password is used.

&MAXCLAS (Maximum Job Classes)

&MAXCLAS=nn

The &MAXCLAS parameter specifies the maximum number of job classes that may be specified through the JES2 operator command \$TInn. Because there are 36 unique job classes, the maximum value that can be specified is 36.

Lower Limit: 1

Upper Limit: 36

Default: 8

&MAXDORM (Maximum Dormancy)

&MAXDORM=nnnn

The &MAXDORM parameter specifies, in hundredths of a second, the maximum time a member of a multi-access spool configuration may refrain from attempting to gain control of the shared queues.

When processors are active in JES2, this parameter has little meaning because, of necessity, control of the shared queues is frequently requested. However, when JES2 is idle, this parameter ensures that JES2 periodically looks at the shared queues for work for which it is eligible and which another member of the configuration may have placed there.

Note: If the value specified for &MAXDORM is too small, excessive system time could be expended in unnecessary attempts to reacquire the queue. However, if the value specified is too large, the start of certain functions and the responses to certain display commands may be delayed.

Lower Limit: 100

Upper Limit: 6000

Default: 500 (5 seconds)

&MAXJOBS (Maximum Jobs in Job Queue)

&MAXJOBS=nnnn

The &MAXJOBS parameter specifies the maximum number of jobs that can be in the JES2 job queue at any given time.

Lower Limit: 10

Upper Limit: 8000

Default: 100

&MAXPART (Maximum Logical Initiators)

&MAXPART=nnnn

The &MAXPART parameter specifies the number of JES2 logical (batch) initiators to be defined. If this number is greater than 99, the user must provide a unique ID for each initiator after the first 99 by means of the Innnn parameter.

Lower Limit: 1

Upper Limit: 1332

Default: 3

Note: *If the IPL parameter MAXUSER is specified as less than 1335, the upper limit of &MAXPART, 1332, is reduced automatically to 3 less than the value of MAXUSER. For information about MAXUSER, refer to OS/VS2 System Programming Library: Initialization and Tuning Guide under the IEASYSxxx PARMLIB member description.*

&MINDORM (Minimum Dormancy)

&MINDORM=nnnn

The &MINDORM parameter specifies, in hundredths of a second, the minimum time a member of a multi-access spool configuration must wait after releasing control of the shared queues before again attempting to gain control of them.

This parameter is used to prevent one member of a multi-access spool configuration from monopolizing control of the shared queues.

Lower Limit: 0

Upper Limit: 3000

Default: 100 (1 second)

&MINHOLD (Minimum Queue Control Interval)

&MINHOLD=nnnnnnnn

The &MINHOLD parameter specifies, in hundredths of a second, the minimum length of time a member of a multi-access spool configuration must maintain control of the shared queues after gaining control of them.

This parameter is provided to minimize the thrashing that could occur with the shared queues in a purely contention environment (one in which all members of the configuration specify &MINHOLD=0).

Note: *Setting this parameter to a high value will tend to immobilize other members of the configuration.*

Lower Limit: 0

Upper Limit: 99999999

Default: 100 (1 second)

&MINJOES (Free JOE Count)

&MINJOES=nnnn

The &MINJOES parameter specifies the minimum number of free job output elements (JOES). When the free count drops below this value, no new work is added to the in-storage queues until the termination of a print or punch activity raises the free count.

If the free job output element count is allowed to go to 0 by means of operator use of the \$I command in a congested system, output devices may become interlocked waiting for resources.

Note: JES2 reduces the value specified for &MINJOES, if necessary, so that the value is at least 2 less than the value specified for the &NUMJOES parameter.

Lower Limit: 2

Upper Limit: 4998

Default: &NUMJOES/5

&MLBFSIZ (MULTI-LEAVING Buffer Size)

&MLBFSIZ=nnnn

The &MLBFSIZ parameter specifies the size, in bytes, of each JES2 MULTI-LEAVING buffer. The specification for this parameter must be a positive even integer.

Satisfactory support of one device of each type (reader, printer, punch, console) on 8K terminal CPUs is based on the assumption that &MLBFSIZ is 400 or less. If the supported terminals include any 8K CPUs, it is recommended that &MLBFSIZ not be increased above 400, even if support of a nonprogrammable terminal requires increasing the value specified in the &TPBFSIZ parameter to 516.

Note: &MLBFSIZ must be a multiple of 2. If not, it is automatically rounded up. If the value specified is greater than that specified for &TPBFSIZ, &TPBFSIZ is rounded up.

Lower Limit: 128

Upper Limit: 3976 (dependent upon JES2 macro expansions)

Default: 400

&MSGID (Message ID Option)

&MSGID=YES/NO

The &MSGID parameter specifies whether or not the eight-character message identifier (HASPnnn**b**) should be appended to the beginning of each JES2 operator message.

Note: If the default value is not used, the operator messages produced by JES2 will vary from their documentation in OS/VS Message Library: VS2 System Messages.

Default: YES

&NIPFCB (Forms Control Buffer Image for Nonimpact (3800) Printers)

&NIPFCB=cccc

The &NIPFCB parameter specifies the name of both the forms control buffer image that JES2 initially loads into every 3800 printer and the installation's default FCB for data sets that do not explicitly request an FCB. &NIPFCB is a one- to four-character name that is valid in SYS1.IMAGELIB. The FCB identifier can be modified for an individual printer by means of the PRINTERnn parameter or the set (\$T) operator command.

Default: If this parameter is not coded or if it is coded as &NIPFCB=, (that is, cccc is one or more blanks), the 3800 printer constructs an FCB based on the forms size.

&NIPUCS (Character Arrangement Table for Nonimpact (3800) Printers) **&NIPUCS=cccc**

The &NIPUCS parameter specifies the name of both the character arrangement table that JES2 initially loads into every 3800 printer and the installation's default character arrangement table that is loaded into the printer for data sets that do not specify a character arrangement table. &NIPUCS is a one- to four-character name that is valid in SYS1.IMAGELIB. The character arrangement table can be changed for an individual printer by means of the PRINTERnn parameter or the set (\$T) operator command.

Default: GF10

&NOPRCCW (Printer Channel Program Limit) **&NOPRCCW=nnn**

The &NOPRCCW parameter specifies the maximum number of channel command words to be used per channel program area for local impact printers. The recommended value for this parameter can be determined by the following formula:

$$\text{\&NOPRCCW} = \text{\&BUFSIZE} \div \text{average print line length}$$

The average length of the print line should be estimated with an allowance for truncation of trailing blanks by JES2.

Note: This value is ignored for 3800 printers. JES2 was a CCW area that has a fixed size for 3800 printers.

Lower Limit: 1

Upper Limit: 255

Default: &BUFSIZE ÷ 80

&NOPUCCW (Punch Channel Program Limit) **&NOPUCCW=nnn**

The &NOPUCCW parameter specifies the maximum number of channel command words to be used per channel program area for local punches. The recommended value for this parameter can be determined by the following formula:

$$\text{\&NOPUCCW} = \text{\&BUFSIZE} \div \text{average card length}$$

The average card length should be estimated with an allowance for truncation of trailing blanks by JES2.

Note: If a 3525 is interpreting (FUNC=I on the DD card), the &NOPUCCW must be at least 2.

Lower Limit: 1

Upper Limit: 255

Default: &BUFSIZE ÷ 80

&NUMACE (Automatic Command Limit) **&NUMACE=nnnn**

The &NUMACE parameter specifies the number of automatic commands that can be concurrently active in JES2. The value should be large enough to permit operators to

leave a JES2 dynamic display in each "out of line" area of all graphic display consoles as well as one on each printer console controlled by MVS.

For additional information, see the description of the \$TA command in *Operator's Library: OS/VS2 JES2 Commands*.

Lower Limit: 2

Upper Limit: 9999

Default: 20

**&NUMBUF (JES2 I/O
Buffer Count)**

&NUMBUF=nnnn

The &NUMBUF parameter specifies the number of I/O buffers to be included in the JES2 load module. The value specified should reflect the total number of buffers required for proper operation of JES2.

Because all JES2 buffers are maintained in a dynamic pool until required by an active function, the appropriate number of buffers should be based on the predicted simultaneity of the various functions required at the installation. The following list indicates the number of buffers required for each logical function. (A defined function that is inactive requires no buffers.)

- 6 for normal system processing
- 5 for each local reader
- 4 for each internal reader
- 4 for each remote reader
- 1 for each remote punch (2 if &RPUBOPT=YES)
- 1 for each local punch (2 if &PUNBOPT=YES)
- 1 for each remote printer (2 if &RPUBOPT=YES)
- 2 for each local printer with DSPLSNGL specified (1 if &PRTBOPT=NO)
- 2 × &TCELSIZ for each local printer with DSPLTCEL specified (&TCELSIZ if &PRTBOPT=NO)

Lower Limit: 15

Upper Limit: 2000

Default: $20 + 4 \times \&NUMRDRS + (\&NUMPRTS - n_1) \times n_2 + n_1 \times n_2 \times \&TCELSIZ + \&NUMPUNS \times n_3 + \&NUMLNES \times (3 + n_4 + n_5)$

where:

- n_1 = number of local printers with DSPLTCEL specified
- n_2 = 2 if &PRTBOPT=YES
1 if &PRTBOPT=NO
- n_3 = 2 if &PUNBOPT=YES
1 if &PUNBOPT=NO
- n_4 = 2 if &RPRBOPT=YES
1 if &RPRBOPT=NO
- n_5 = 2 if &RPUBOPT=YES
1 if &RPUBOPT=NO

**&NUMCLAS (Printer/
Punch SYSOUT Class
Limit)**

&NUMCLAS=nn

The &NUMCLAS parameter specifies the maximum number of classes for which a printer or a punch may be simultaneously started.

Lower Limit: 1

Upper Limit: 36

Default: 8

**&NUMCMBS (Number of
JES2 Console Message
Buffers)**

&NUMCMBS=nnn

The &NUMCMBS parameter specifies the number of console message buffers to be provided for JES2. The number of buffers specified should be sufficient to accommodate all outstanding operator requests and still allow message processing to continue.

Message buffers are allocated from the Common Storage Area so you should be careful in determining this number. When RJE is used, more message buffers are usually needed. This is especially true with console support for MULTI-LEAVING terminals. Also, specifying too few message buffers can cause serious system degradation.

During periods of high console activity, when no message buffers are available, certain noncritical JES2 messages are discarded to avoid delaying the associated process. These noncritical messages include certain RJE-oriented messages, excession messages (for execution time, lines, cards), and certain I/O error messages on JES2-controlled devices.

For a MULTI-LEAVING terminal console, if more messages are queued than the number of buffers specified in this parameter, the excess messages are spooled and later printed. Normal message processing resumes after the terminal accepts those messages that were queued prior to reaching the &NUMCMBS limit.

Lower Limit: 3

Upper Limit: 999

Default: 15

**&NUMDA (JES2 Spool
Volume Limit)**

&NUMDA=nn

The &NUMDA parameter specifies the maximum number of direct-access volumes that can be mounted concurrently as spool volumes. All direct-access devices supported in OS/VS2 are eligible for use as spooling devices. Specifying a large number for &NUMDA may require increasing the value of &BUFSIZE.

Refer to the information on the &NUMTGV parameter for related information.

Lower Limit: 1

Upper Limit: 36

Default: 2

&NUMINRS (Number of Internal Readers)

&NUMINRS=nnn

The &NUMINRS parameter specifies the number of internal readers to be part of JES2.

Lower Limit: 0

Upper Limit: 255

Default: 2

&NUMJOES (Number of Job Output Elements)

&NUMJOES=nnnn

The &NUMJOES parameter specifies the number of job output elements to be generated. Although a value as small as 10 will be accepted, performance is degraded if a value smaller than the default is specified.

One job output element is required for:

- Each unique SYSOUT class that appears in a job that is queued for output
- Each active printer or punch
- Each interrupted or restarted job that is not currently active on a printer or punch
- Each unique combination of Forms ID, UCS ID, and FCB ID for all jobs currently queued for output
- Each job that was interrupted by a system failure while being printed or punched and has not yet been restarted on an output device.

Specifying too small a value results in jobs waiting for in-storage queuing in order to complete active print or punch work.

Lower Limit: 10

Upper Limit: 5000

Default: 10 times the total number of local and remote printers and card punches.

&NUMLNES (Number of Teleprocessing Lines)

&NUMLNES=nnn

The &NUMLNES parameter specifies the largest teleprocessing line identification number; thus, the number of line definitions to be used by JES2. This value includes the number of lines defined as logical lines for SNA RJE terminals.

Lower Limit: 0

Upper Limit: 255

Default: 0

&NUMPRTS (Local Printers Used by JES2)

&NUMPRTS=nn

The &NUMPRTS parameter specifies the maximum number of local printers JES2 can use to print job output.

If more printers are specified during system generation than are specified in this parameter, a message is written to the operator. JES2 initialization continues normally, but only the printers specified or those with the lowest unit addresses are used.

Lower Limit: 0

Upper Limit: 99

Default: 2

**&NUMPUNS (Local
Punches Used by JES2)**

&NUMPUNS=nn

The &NUMPUNS parameter specifies the maximum number of local punches JES2 can use to punch job output. JES2 supports 2520, 2540, and 3525 card punches.

If more punches are specified during system generation than are specified in this parameter, a message is written to the operator. JES2 initialization continues normally, but only the punches specified or those with the lowest unit addresses are used.

Lower Limit: 0

Upper Limit: 99

Default: 1

**&NUMRDRS (Local Card
Readers Used by JES2)**

&NUMRDRS=nn

The &NUMRDRS parameter specifies the maximum number of local card readers JES2 can use to read jobs. JES2 supports 2501, 2540, and 3505 card readers.

If more card readers are specified during system generation than are specified in this parameter, a message is written to the operator. JES2 initialization continues normally, but only the card readers specified or those with the lowest unit addresses are used.

Lower Limit: 0

Upper Limit: 99

Default: 1

**&NUMRJE (Number of
Remote Terminal
Definitions)**

&NUMRJE=nnn

The &NUMRJE parameter specifies the number of remote terminal definitions to be used by JES2.

Lower Limit: 0

Upper Limit: 255

Default: The value specified for the &NUMLNES parameter.

&NUMSMFB (JES2 SMF Buffer Count)

&NUMSMFB=nnn

The **&NUMSMFB** parameter specifies the number of system management facility (SMF) buffers to be generated by JES2.

If the value specified is less than 2, JES2 neither produces SMF records nor takes the SMF exit, IEFUJP.

Lower Limit: 0

Upper Limit: 255

Default: 5

&NUMTGV (Number of Track Groups per Volume)

&NUMTGV=nnnnn

The **&NUMTGV** parameter specifies the number of units (track groups) into which each spool volume is divided for JES2 allocation purposes. The specification must be an integer no greater than the number of tracks on the spool device with the fewest tracks.

You should decide upon the number of tracks required in a track group and then divide by that number the total number of tracks (except alternate tracks) on a typical spool device at your installation. For example, to obtain a track group size of 10 tracks on a 2314, you would specify a value of 400 in this parameter. If, at some time, your installation uses a 3330 as a spool device, the track group size for the 3330 would automatically become 19 tracks.

For each spool volume found during initialization, JES2 calculates the number of tracks per group by dividing the total number of tracks on the volume by the value specified in this parameter. It then marks as unavailable for JES2 spooling all track groups that lie partially or wholly outside the first extent of data set SYS1.HASPACE on that volume.

Specifying a large value in this parameter may require specifying a large value in the **&BUFSIZE** parameter.

Lower Limit: 100

Upper Limit: 29120

Default: 400

Note: *The upper limit is dependent upon the current JES2 control block definitions.*

&NUMTPBF (Number of JES2 Teleprocessing Buffers)

&NUMTPBF=nnnn

The **&NUMTPBF** parameter specifies the number of teleprocessing buffers to be generated for RJE by JES2. This value includes the buffers required for remote terminals supported as logical units.

Each signed-on JES2 MULTI-LEAVING terminal requires at least two JES2 teleprocessing buffers. The minimum requirement for SNA is three buffers plus two buffers for every SNA RJE terminal. All other signed-on terminals require at least one buffer each.

If a MULTI-LEAVING terminal has more than one output function running concurrently, additional buffers can be used to increase performance. It is recommended that this value be made liberally large (for example, 5*&NUMLNES) in systems that support MULTI-LEAVING terminals. For additional information, refer to the &TPBFSIZ and &MLBFSIZ parameters.

Lower Limit: 0

Upper Limit: 2000

Default: The value specified for the &NUMLNES parameter.

&OUTPOPT (Option for Exceeding Estimated Job Output)

&OUTPOPT=0/1/2

The &OUTPOPT parameter specifies the action to be taken when a job exceeds its estimated print lines or punched cards of output. Regardless of the specification for this parameter, exceeding estimated output causes messages to be written to the operator. (Refer to the &OUTXS parameter for additional information.)

0
allows the job to continue execution.

1
causes the job to be canceled without a dump.

2
causes the job to be canceled with a dump. If 2 is specified, you should use SYSUDUMP or SYSABEND DD cards if a storage dump is desired when estimated output is exceeded.

Note: *If 1 or 2 is specified, the job will not be canceled if the job step task is normally or abnormally terminating at the time the estimated output is exceeded.*

Default: 0

&OUTXS (Message Interval for Exceeding Estimated Output)

&OUTXS=nnnnnnn

The &OUTXS parameter specifies the interval, in print lines or punched cards, at which messages will be written to inform the operator that a job's print line count or punch card count has been exceeded.

The first message for exceeding estimated print line or punched card output is written to the operator when the job's estimated print line or punched card count, respectively, has been exceeded.

Lower Limit: 500

Upper Limit: 9999999

Default: 2000

&PRIDCT (Local Printer Separator Page Line Count)

&PRIDCT=nnn

The &PRIDCT parameter specifies the number of print lines to appear on each JES2 job separator page for local printers. If the specification is 0, no separator pages are produced.

If the specification is 30 or greater, the first 29 lines are used to produce a block-lettered job name, job number, and SYSOUT class.

The equivalent parameter for remote terminal printers is &TPIDCT.

Note: A 3800 printer will not print more than 60 lines per page at 6 lines per inch or 80 lines per page at 8 lines per inch.

Lower Limit: 0

Upper Limit: 255

Default: 61

&PRIHIGH (Selection of Upper Priority Limit)

&PRIHIGH=nn

The &PRIHIGH parameter specifies the upper priority limit to be associated with the JES2 priority aging feature. A job will not be priority-aged if its priority is (or becomes) greater than or equal to the value specified in this parameter.

Lower Limit: 0

Upper Limit: 15

Default: 10

&PRILOW (Selection of Lower Priority Limit)

&PRILOW=nn

The &PRILOW parameter specifies the lower priority limit to be associated with the JES2 priority aging feature. A job will not be priority-aged unless its priority is initially equal to or greater than this value. (Refer to the &PRIRATE and &PRIHIGH parameters for additional information.)

Lower Limit: 0

Upper Limit: 15

Default: 5

PRINTERnn (Local Printer)

PRINTERnn **BURST/NOBURST**
CLASS=c₁ . . . c_n
DRAIN/START
DSPLTCEL/DSPLSNGL
FCB=cccc
FORMS=cccc
MARK/NOMARK
NOSEP/SEP
OPERATOR/AUTO
PAUSE/NOPAUSE
ROUTECD=nnn
UCS=cccc
UNIT=cau

The `PRINTERnn` parameter specifies the characteristics of one local printer. Printers are numbered consecutively (`PRINTER1-PRINTER99`) for the number of printers specified by the `&NUMPRTS` parameter. Printer characteristics are defined by the following subparameters.

BURST/NOBURST

`BURST` specifies that the printed output from a 3800 printer is to be burst into separate sheets.

Default: `NOBURST`, which specifies that the printed output from a 3800 printer is to be in continuous, fanfold mode.

CLASS=c₁ . . . c_n

specifies the output classes, in priority sequence, to be processed initially by this printer. You can specify any number of classes (A-Z,0-9) up to the number of classes specified by the `&NUMCLAS` parameter.

Default: `AJ`

DRAIN/START

`DRAIN` specifies that this printer is to be started by operator command.

Default: `START`, which specifies that this printer (if it is ready) is to be automatically started when JES2 starts processing.

DSPLTCEL/DSPLSNGL

`DSPLTCEL` specifies that an entire track cell is to be despoiled in one operation for data sets that belong to a `SYSOUT` class that has the track-cell characteristic (see the description of `$$x`). The number of records in the track cell is governed by the `&TCELSIZ` parameter.

Note: Specifying `DSPLTCEL` and double buffering (`&PRTBOPT=YES`) indicates double track-cell buffering.

Default: `DSPLSNGL`, which specifies that spool records are to be despoiled one record per despooling operation.

FCB=cccc

specifies for impact printers the forms control buffer image or the carriage control tape that is to be initially mounted on this printer. For the 3800, a nonimpact printer, `cccc` specifies the name of both the FCB image that JES2 initially loads into the printer and the installation's default FCB image for data sets not specifying an FCB.

For all printers, `cccc` is the forms control buffer (FCB) identifier (1 to 4 alphanumeric characters) that resides in `SYS1.IMAGELIB`. (Refer to *OS/VS2 System Programming Library: Data Management* for information on how to add impact printer FCBs to `SYS1.IMAGELIB`. For information about the 3800, refer to *IBM 3800 Printing Subsystem Programmer's Guide*.)

Default: For impact printers, the identifier specified by the `&PRTFCB` parameter; for the 3800, the identifier specified by the `&NIPFCB` parameter.

FORMS=cccc

specifies the forms identifier (1 to 4 alphanumeric characters) of the forms that are to be loaded initially in this printer.

Default: The forms identifier specified by the &STDFORM parameter.

MARK/NOMARK

MARK specifies for a 3800 printer that there is marking on the edge of the separator page.

Default: NOMARK, which specifies for a 3800 printer that there is no marking on the edge of the separator page.

NOSEP/SEP

NOSEP specifies that separator pages are not to be initially provided between data set groups. (Separator pages can be specified later by the \$T operator command.)

Default: SEP, which specifies that separator pages are to be initially provided between data set groups.

Note: If a zero number of print lines was specified for the &PRIDCT parameter, separator pages will not be produced even if SEP is specified.

OPERATOR/AUTO

OPERATOR specifies that this printer is to operate initially in operator-controlled (forms) mode.

Default: AUTO, which specifies that this printer is to operate initially in automatic (demand) forms mode.

PAUSE/NOPAUSE

PAUSE specifies that this printer is to pause between data set groups.

Default: NOPAUSE, which specifies that this printer is not to pause between data set groups.

ROUTECD=nnn

specifies the internal route code to be assigned to this printer. A route code indicates that this printer is to be eligible for special print routing. *nnn* may be 0 or any value between 1 and 255.

Note: Route codes for local devices should be used cautiously. Once a printer has been assigned a route code, it will only be considered as an available output device for a job that requests printed output via the ROUTE control statement, the DEST keyword on the OUTPUT control statement, or by operator command.

Default: 0, which indicates no special routing.

UCS=cccc

specifies for impact printers the print train (or print chain) that is mounted on this printer. *cccc* is the identifier (1 to 4 characters) of a universal character set (UCS) image that resides in SYS1.IMAGELIB. (Refer to *OS/VS2 System Programming Library: Data Management* for information on how to add a UCS image to SYS1.IMAGELIB.)

For 3800 printers, *cccc* specifies both the character arrangement table that JES2 initially loads into the printer and the installation's default character arrangement table for data sets not specifying any character arrangement table. (Refer to *IBM 3800 Printing Subsystem Programmer's Guide* for information about the IBM-supplied character arrangement tables and the addition of other character arrangement tables to SYS1.IMAGELIB.)

If you specify an invalid identifier, JES2 bypasses this loading procedure and issues a setup message so the operator can specify a valid image.

Note: This subparameter is only valid for a 3211, a 1403 printer that has the UCS feature, or a 3800 printer. If you specify UCS=0 (or if a zero value was specified for the &PRTUCS parameter), JES2 will not load the UCS buffer.

Default: For impact printers, the identifier specified by the &PRTUCS parameter; for the 3800 printer, the identifier specified by the &NIPUCS parameter.

UNIT=cau

specifies the unit address of this printer.

Default: If not specified, JES2 assigns the first available printer address that is not already assigned.

**&PRIOOPT (JES2
/*PRIORITY Control
Statement Support Option)**

&PRIOOPT=YES/NO

The &PRIOOPT parameter specifies whether the JES2 /*PRIORITY control statement is to be supported (YES) or ignored (NO).

Default: YES

**&PRIRATE (Priority
Increment Interval)**

&PRIRATE=n_{nnn}

The &PRIRATE parameter specifies the number of time periods into which a 24-hour day is to be divided for use in incrementing a job's priority by the JES2 priority aging feature. For example, if 3 is specified, a job's priority is incremented by 1 for every 8 hours it remains in the system. However, a job's priority is not incremented unless it is at least equal to the value specified in the &PRILOW parameter; nor will a job's priority be incremented above the value specified in the &PRIHIGH parameter. If 0 is specified, the values specified in the &PRILOW and &PRIHIGH parameters are ignored.

If a job's priority is specified on a /*PRIORITY control card, the job is priority-aged if its priority is eligible.

Refer to the &RPRT(n), &RPRI(n), &XLIN(n), and &XPRI(n) parameters for additional information.

Lower Limit: 0

Upper Limit: 1440 (that is, the job's priority is incremented once every minute)

Default: 0

**&PRTBOPT (Local
Printer Double Buffering
Option)**

&PRTBOPT=YES/NO

The &PRTBOPT parameter specifies whether or not double buffering is to be used for local printers. If NO is specified, single buffering is used.

Default: YES

&PRTFCB (Forms Control Buffer Image for Impact Printers)

&PRTFCB=cccc

The &PRTFCB parameter specifies the name of the forms control buffer image or the carriage control tape that JES2 initially assumes is mounted on every impact printer. &PRTFCB is a one- to four-character name that is valid in SYS1.IMAGELIB. The forms control buffer (FCB) identifier can be modified for each printer by means of the PRINTERnn parameter or the set (\$T) command.

Default: 6

&PRTRANS (Print Line Translation Option)

&PRTRANS=YES/NO

The &PRTRANS parameter specifies whether or not to translate lines of print not directed to 3211 printers. If the default value is used, each line to be printed by a local 1403 or any remote printer is first translated. Translation changes lowercase letters to uppercase and characters that are invalid on a PN train to blanks. If any print train is to be used on a JES2-controlled local 1403 or on a remote printer that has characters not equivalent to those on a PN train, NO must be specified. If all printers are 3211s (not 1403s or remote printers), this parameter should be specified as NO.

Note: 3800 printers are handled in the same way as 3211 printers.

Default: YES

&PRTUCS (Print Chain/Train Image for Impact Printers)

&PRTUCS=cccc

The &PRTUCS parameter specifies the name of the print chain or print train that JES2 initially assumes is mounted on every impact printer. &PRTUCS is a one- to four-character name that is valid in SYS1.IMAGELIB. The UCS identifier can be modified for each printer by means of the PRINTERnn parameter or the set (\$T) command.

If 0 is specified, JES2 bypasses the UCS loading procedure until a job that requires a specific UCS image is processed. If an invalid specification is encountered, the UCS loading procedure is bypassed and a setup message is issued to allow specification of a valid image.

Provisions for supporting other types of print chains are described in *OS/VS2 System Programming Library: Data Management*.

Default: 0

&PRTYOPT (JOB Card PRTY Parameter Support Option)

&PRTYOPT=YES/NO

The &PRTYOPT parameter specifies whether the priority specification (PRTY=) on the JOB statement is to be supported (YES) or ignored (NO).

Default: NO

&PUNBOPT (Local Punch Double Buffering Option)

&PUNBOPT=YES/NO

The &PUNBOPT parameter specifies whether or not double buffering is to be used for local card punches. If NO is specified, then single buffering is used.

Default: NO

PUNCHnn (Local Card Punch)¹	PUNCHnn	CLASS=c₁ . . . c_n <u>DRAIN/START</u> FORMS=cccc <u>NOSEP/SEP</u> <u>OPERATOR/AUTO</u> <u>PAUSE/NOPAUSE</u> ROUTECD=nnn UNIT=cau
---	----------------	--

The PUNCHnn parameter specifies the characteristics of one local card punch. Punches are numbered consecutively (PUNCH1-PUNCH99) for the number of punches specified by the &NUPUNS parameter. Punch characteristics are specified by the following subparameters.

CLASS=c₁ . . . c_n

specifies, in priority sequence, the output classes to be processed initially by this card punch. You can specify any number of classes (A-Z,0-9) up to the maximum number of classes specified by the &NUMCLAS parameter.

Default: BK

DRAIN/START

DRAIN specifies that this card punch is to be started by operator command.

Default: START, which specifies that this card punch (if it is ready) is to be automatically started when JES2 starts processing.

FORMS=cccc

specifies the forms identifier (1 to 4 alphanumeric characters) of the forms that are to be loaded initially in this punch.

Default: The forms identifier specified by the &STDFORM parameter.

NOSEP/SEP

NOSEP specifies that separator cards are not to be initially provided between data set groups. (Separator cards can be specified later by the \$T operator command.)

Default: SEP, which specifies that separator cards are to be initially provided between data set groups.

OPERATOR/AUTO

OPERATOR specifies that this card punch is to operate initially in operator-controlled (forms) mode.

¹The dual reader/punch feature is supported by JES2 as shown in the following example. Assume that a 3525 with the read feature has a unit address of 013. In the JES2 initialization data set, the following two items appear:

```
READER2 UNIT=013,DRAIN
PUNCH1 UNIT=013
```

When JES2 is started, the reader will be drained and the punch feature will be activated. If the operator later wishes to read data from the 3525, he can drain punch 1 and start reader 2 with operator commands.

Default: AUTO, which specifies that this card punch is operate initially in automatic (demand) forms mode.

PAUSE/NOPAUSE

PAUSE specifies that this card punch is to pause between data set groups.

Default: NOPAUSE, which specifies that this card punch is not to pause between data set groups.

ROUTECD=nnn

specifies the internal route code to be assigned to this card punch. A route code indicates that this card punch is to be eligible for special punch routing. *nnn* may be 0 or any value between 1 and 255.

Note: *Route codes for local devices should be used cautiously. Once a card punch has been assigned a route code, it will only be considered as an available output device for a job that requests punched output via the DEST keyword on the OUTPUT control statement, the ROUTE control statement, or by operator command.*

Default: 0, which means no route code is to be assigned.

UNIT=cau

specifies the unit address of this card punch.

Default: If not specified, JES2 assigns the first available card punch address that is not already assigned.

&RCOMCHR (Instream Command Identifier)

&RCOMCHR=c

The &RCOMCHR parameter specifies the character that will be used to identify all JES2 operator commands entered from a local or remote card reader. If a JES2 control card is read (/ * in columns 1 and 2) that contains this character in column 3, JES2 assumes that the card is a JES2 command statement and attempts to process the command.

The specification should be one of the following characters:

ç	<	(
+		&
!	\$	*
)	;	-
-	/	%
-	>	?
:	#	@
=		”

If this parameter is changed to other than its default value, the command control statement will vary from the format given in *OS/VS2 JCL*.

Note: *This character may be the same as that specified for the &BSPACE or &CCOMCHR parameters.*

Default: \$

&RDROPSL (LOGON Conversion Parameter Field)

&RDROPSL=character string

The **&RDROPSL** parameter specifies a 20-character parameter field to be passed to the OS/VS2 converter for TSO LOGONs (foreground jobs). For a description of the parameter field refer to the **&RDROPSU** parameter.

The value of this parameter may be overridden by the **&TSU** parameter.

Default: 00014400000030E00000

&RDROPST (Started Task Conversion Parameter Field)

&RDROPST=character string

The **&RDROPST** parameter specifies a 20-character parameter field to be passed to the OS/VS2 converter for console-started tasks. For a description of the parameter field, refer to the **&RDROPSU** parameter. The value of this parameter may be overridden by the **&STC** parameter.

character string

specifies a 20-character parameter field.

Default: 00000100000000E00000

&RDROPSU (Batch Job Conversion Parameter Field)

&RDROPSU=character string

The **&RDROPSU** parameter specifies a 20-character parameter field to be passed to the OS/VS2 converter for batch (background) jobs.

The form of this specification is:

bppmmmmssccrlaaaef

where:

b

is a numeric character 0, 1, 2, or 3, that indicates whether an account number is required and whether a programmer name is required. The following chart shows the meaning of each character:

Character	Accounting Information Required	Programmer Name Required
0	No	No
1	No	Yes
2	Yes	No
3	Yes	Yes

Note: This character is always reset to 0 by JES2 for TSO LOGONs and for console-started tasks.

pp

are currently unused. Code two zeros to maintain positioning within the parameter field.

mmmmss

are six numeric characters indicating the default for the maximum time that each job step may run. The first four characters indicate minutes, the last two indicate seconds. The value specified is subject to the limits described for the **TIME** parameter in *OS/VS2 JCL*.

ccc

three numeric characters indicating the default for the region size (specified as a number of 1024-byte blocks) assigned to each job step. This region size is assigned when no region size is specified in the JOB and EXEC statements and the job step is to be run with ADDRSPC=VIRT.

r

is a numeric character 0, 1, 2, or 3, that specifies the disposition of commands read from the input stream. The character has the following meanings:

- 0 The OS/VS2 converter passes the command to the command scheduling routine to be executed.
- 1 The OS/VS2 converter displays the command (by means of a WTO macro instruction), and passes it to the command scheduling routine to be executed.
- 2 The OS/VS2 converter displays the command (by means of a WTO macro instruction), asks the operator whether the command should be executed (by means of a WTOR macro instruction), and passes the command to the command scheduling routine if the operator replies yes.
- 3 The OS/VS2 converter ignores the command and treats it as a no-operation.

l

is a numeric character 0 or 1 that specifies the bypass label processing option. The character has the following meanings:

- 0 The bypass label processing parameter in the label field of a DD statement is to be ignored; the label parameter is processed as no label.
- 1 Bypass label processing is not to be ignored; the label parameter is processed as it appears.

aaaa

are four hexadecimal numbers from 0000 to E000 indicating which operator command groups are to be executed. (For a list of the operator command groups, refer to *Operator's Library: OS/VS2 JES2 Commands.*)

Bit settings are as follows:

Byte	Bits	Bit Settings	Meaning
0	0	1	Group 1 commands
	1	1	Group 2 commands
	2	1	Group 3 commands
	3-7	00000	Reserved
1	0-7	00000000	Reserved

ef

are two numeric characters that specify a message level value for use when the MSGLEVEL parameter is not specified on a JOB statement. If a MSGLEVEL parameter is not specified, JCL and allocation/termination messages are recorded in the system message data set according to the value specified in this parameter. The characters have the following meanings:

e

specifies the kinds of JCL listed. The character can be 0, 1, or 2, meaning:

- 0 JOB statement only

- 1 Input statement, cataloged procedure statements, and symbolic parameter substitution values
- 2 Input statements only, including stream procedures

f

specifies the kinds of allocation/termination messages listed. The character can be 0 or 1, meaning:

- 0 No messages are to be listed, except in the case of an abnormal termination. (In that event, all messages are listed.)
- 1 All messages are listed.

The value of this parameter may be overridden by individual job class by the &x parameters at JES2 initialization.

Default: 00000300012820E00001

READERnn (Local Card Reader)¹

```
READERnn AUTH=n
          CLASS=c
          DRAIN/AUTO
          HOLD/NOHOLD
          MSGCLASS=c
          PRDEST=nnn
          PRIOINC=nn
          PRIOLIM=nn
          PRLCL/PRRMT
          PUDEST=nnn
          PULCL/PURMT
          UNIT=cau
```

The **READERnn** parameter specifies the characteristics of one local card reader. Readers are numbered consecutively (**READER1-READER99**) for the number of card readers specified by the **&NUMRDRS** parameter. Reader characteristics are specified by the following subparameters.

AUTH=n

specifies the command authority number for this card reader. This number authorizes certain JES2 commands to be entered at this card reader. *n* is a number from 0-7 defining the kind of commands that can be entered.

- | | |
|---------------------------------|---------------------------------------|
| 7 – display only | 3 – job authority |
| 6 – system authority | 2 – system and job authority |
| 5 – device authority | 1 – device and job authority |
| 4 – system and device authority | 0 – system, device, and job authority |

This command authority can be changed at any time by the operator.

¹The dual reader/punch feature is supported by JES2 as shown in the following example. Assume that a 3525 with the read feature has a unit address of 013. In the JES2 initialization data set, the following two items appear:

```
READER2 UNIT=013,DRAIN
PUNCH1 UNIT=013
```

When JES2 is started, the reader will be drained and the punch feature will be activated. If the operator later wishes to read data from the 3525, he can drain punch 1 and start reader 2 with operator commands.

Note: The numbers defining these command authorities are intentionally opposite to the numbers of the command authorities defined by the \$T operator command.

Default: 0

CLASS=c

specifies the default job class to be assigned to all jobs entered at this card reader that do not specify a job class in the CLASS operand of their JOB statements. c can be any class (A-Z,0-9).

Default: A

DRAIN/AUTO

DRAIN specifies that this card reader is to be started by operator command.

Default: AUTO, which specifies that this card reader (if it is ready) is to be started automatically when JES2 starts processing.

HOLD/NOHOLD

HOLD specifies that all jobs entered at this card reader are to be held after JCL conversion until they are released for execution by the operator.

Default: NOHOLD, which specifies that all jobs entered at this card reader are to be queued as usual.

MSGCLASS=c

specifies the default message class to be assigned to jobs entered at this card reader that do not specify a MSGCLASS operand in their JOB statements. c can be any class (A-Z,0-9).

Default: A

PRDEST=nnn

specifies the default printer destination for the print output from all jobs that are entered at this card reader that do not have a ROUTE statement or DEST parameter. nnn can be 0 or it can be a route code (1-255) of a local printer as specified by the PRINTERnn parameter or of a remote printer as specified by the RMTnnn parameter. If the route code is of a local printer, the PRLCL option must be specified.

Default: 0, which specifies that job output will be printed at any available local printer that was not assigned a route code by the PRINTERnn initialization parameter.

PRIOINC=nn

specifies a number (0-15) to be added to the selection priority of each job entered at this card reader. If the total of this number and a job's priority exceeds the priority level specified by PRIOLIM (described below), JES2 uses the priority level specified by PRIOLIM.

Default: 0

PRIOLIM=nn

specifies the maximum priority level (0-15) that can be assigned to jobs entered at this card reader. If a job's priority (with or without the increment specified by PRIOINC) exceeds this level, it is reduced to this level.

Default: 15

PRLCL/PRRMT

PRLCL specifies that the route code specified by PRDEST is that of a local printer.

Default: PRRMT, which specifies that the remote code is that of a remote printer.

PUDEST=nnn

specifies the default card punch destination for the punch output from jobs entered at this card reader that do not have a ROUTE statement or DEST parameter. *nnn* can be 0 or it can be a route code (1-255) of a local card punch, as specified by the PUNCHnn parameter or of a remote card punch as specified by the RMTnnn parameter. If the route code is of a local punch, the PULCL option must be specified.

Default: 0, which specifies that job output will be printed at any available local card punch that was not assigned a route code by the PUNCHnn initialization parameter.

PULCL/PURMT

PULCL specifies that the route code specified by PUDEST is that of a local card punch.

Default: PURMT, which specifies that the route code is that of a remote card punch.

UNIT=cau

specifies the unit address of this card reader.

Default: If not specified, JES2 assigns the first available card reader address that is not already assigned.

**&RECINCR (Record
Alternation)**

&RECINCR=n

The &RECINCR parameter specifies the increment to be added to a spool record address to determine the address of the next record to be allocated on a track. It is also used to determine the addresses of all records in a track cell.

The default setting of 2 indicates that records will be allocated in an alternating fashion to reduce rotational delay. For example, if &BUFSIZE is set to 1960 on a 3330 (6 records per track), the default setting of &RECINCR will cause records to be allocated in the sequence: 1, 3, 5, 2, 4, 6.

Note: Specifying a value other than the default value will affect the efficiency of the spool allocation algorithm.

Lower Limit: 1

Upper Limit: 8

Default: 2

**&RJOB OPT (JOB Card
Scan Option)**

&RJOB OPT=n

The &RJOB OPT parameter specifies what type of scan should be performed on JOB cards that are processed by the JES2 input processor and whether an illegal JOB card is to prevent execution of the associated job. The allowable specifications for *n* have the following meanings:

Value	Scan JES2 Parameters	Terminate on JES2 Parameter Error	Terminate on OS/VS2 Format Error
0	Yes	Yes	Yes
1	Yes	Yes	No
2	Yes	No	Yes
3	Yes	No	No
4	No	-	Yes
5	No	-	No

The JOB card parameters CLASS, MSGCLASS, and TYPRUN are always scanned. The only other JES2 JOB card parameters scanned are those included in the JOB card accounting field as defined in the description of the Accounting Information parameter in *OS/VS2 JCL*.

If the value specified for this parameter is 0 or 1, the JOB card must have an accounting field subparameter and the first two JES2-defined parameters must be present.

A JES2 parameter error is any violation of the requirements of the JES2 JOB card parameters. An MVS format error is any error which prevents JES2 from continuing the scan of the JOB card as defined in Chapter 4.

Default: 2

RMTnnn (BSC Remote Terminal)

RMTnnn terminal type
ABUFEX/NOABUFEX
BUFEX/NOBUFEX
COMP/NOCOMP
CONSOLE/NOCON
 DISCONTV=*n*
FIXED/VARIABLE
 LINE=*nnn*
MRF/NOMRF
MULTI/HARDWARE
 NUMPR=*n*
 NUMPU=*n*
 NUMRD=*n*
 PASSWORD=*ccccccc*
 ROUTECDE=*nnn*
TABS/NOTABS
TRANSP/NOTRANSP
UNBLOCK/BLOCKED
 WAITIME=*nn*

The RMTnnn parameter specifies the characteristics of one remote terminal. The descriptions given below apply to the characteristics of a BSC (binary synchronous communication) remote terminal. (For a description of the SNA remote terminal, see "RMTnnn (SNA Remote Terminal).")

RMTnnn should be specified for each remote terminal. If not specified, JES2 assumes this is a basic 2770 terminal with no features. Remote terminals are numbered consecutively (RMT1-RMT255) for the number of remote terminals specified by the &NUMRJE parameter.

If a remote terminal has attached devices, use the following initialization parameters to describe their characteristics.

Rnnn.PRM—specifies remote printer characteristics

Rnnn.PUM—specifies remote card punch characteristics

Rnnn.RDM—specifies remote card reader characteristics

JES2 associates attached devices to a remote terminal by correlating the *nnn* in the above parameters to the *nnn* in an RMTnnn parameter.

BSC remote terminal characteristics are specified by the following subparameters.

terminal type

is one of the following to specify the type of terminal or CPU at this remote location:

2770

2789

3780

2922

M20-2

M20-4

M20-5

M20-6

S/360

S/370

1130

System/3

Default: 2770

ABUFEX/NOABUFEX

ABUFEX specifies that this (2770) terminal has the additional buffer expansion feature. ABUFEX can be specified even when BUFEX has not been specified for this terminal.

Default: NOABUFEX, which specifies that this terminal does not have the additional buffer expansion feature.

BUFEX/NOBUFEX

BUFEX specifies that this (2770) terminal has the buffer expansion feature.

Default: NOBUFEX, which specifies that this terminal does not have the buffer expansion feature.

COMP/NOCOMP

COMP specifies that this (2770 or 3780) terminal has the compression/expansion feature.

Default: NOCOMP, which specifies that this terminal does not have the compression/expansion feature.

CONSOLE/NOCON

CONSOLE specifies that this MULTI-LEAVING terminal has an operator console or that it is simulating a console as specified by the &PRTCONS RMT generation parameter.

Default: NOCON, which specifies that this terminal has no operator console.

DISCINTV=nnnn

specifies the interval (in seconds) after which, if there is no successful text transmission in either direction, this terminal will be disconnected from the processing unit. Error recovery tries and idle time are not counted as successful text transmission. *nnnn* may be from 1 to 8192 seconds; JES2 rounds this value to the next highest multiple of 30.

Default: 0, which indicates that this terminal is not to be disconnected.

FIXED/VARIABLE

FIXED specifies a fixed data record length for this terminal.

Default: VARIABLE, which specifies a variable data record length.

LINE=nnn

specifies the number of the teleprocessing line that is connected (and dedicated) to this terminal. (The number of this line can not exceed the number of lines specified in the &NUMLNES parameter.)

Default: If no line number is specified, JES2 assumes this is a nondedicated (SIGNON) line.

MRF/NOMRF

MRF specifies that this 2780 terminal has the multiple record feature.

Default: NOMRF, which specifies that this terminal does not have the multiple record feature.

MULTI/HARDWARE

MULTI specifies that this terminal will use the BSC (binary synchronous communication) MULTI-LEAVING interfaces.

Default: HARDWARE, which specifies that this terminal will not use the BSC MULTI-LEAVING interfaces.

NUMPR=n

specifies the number (1-7) of printers at this remote terminal. Use the Rnnn.PRm initialization parameter to specify the characteristics of each printer.

Default: 1 (If 0 is specified, 1 is assumed.)

NUMPU=n

specifies the number (0-7) of card punches at this terminal. Use the Rnnn.PUm initialization parameter to specify the characteristics of each card punch.

Default: 0

NUMRD=n

specifies the number (1-7) of card readers at this remote terminal. Use the Rnnn.RDm initialization parameter to specify the characteristics of each reader.

Default: 1 (If 0 is specified, 1 is assumed.)

PASSWORD=ccccccc

specifies a security password (1-8 characters) to prevent unauthorized terminals from using this remote terminal's resources.

Default: No password.

ROUTECD=nnn

specifies the route code to be assigned to this terminal and its associated printers, punches, and readers. *nnn* may be any number from 1-999.

Default: If a route code is not specified, JES2 assigns the number of this terminal (RMTnnn) as its route code.

TABS/NOTABS

TABS specifies that this (2770, 2780, or 3780) terminal has the horizontal format control feature.

Default: NOTABS, which specifies that this terminal does not have the horizontal format control feature.

TRANSP/NOTRANS

TRANSP specifies that this terminal has the text transparency feature. To be effective, the TRANSP subparameter must also be specified for the line (LINEnnn initialization parameter) connected to this terminal.

Default: NOTRANS, which specifies that this terminal does not have the text transparency feature.

UNBLOCK/BLOCKED

UNBLOCK specifies an unblocked data record format for this terminal.

Default: BLOCKED, which specifies a blocked data record format.

WAITIME=n

specifies the length of time, from 1 to 30 seconds, that RTAM should wait at the completion of the processing of any input stream, or printed or punched output stream to allow the operator to enter an input stream at this remote terminal. *n* is a value greater than 0.

Default: The value specified for the &WAITIME initialization parameter.

RMTnnn (SNA Remote Terminal)

RMTnnn terminal type
BUFSIZE=nnnn
COMP/NOCOMP
DISCINTV=nnnn
FIXED/VARIABLE
LINE=nnn
NUMPR=n
NUMPU=n
NUMRD=n
PASSWORD=ccccccc
ROUTECD=nnn
WAITIME=nn

The RMTnnn parameter specifies the characteristics of one remote terminal. The descriptions given below apply to the characteristics of an SNA (systems network architecture) remote terminal. (For a description of the BSC remote terminal, see "RMTnnn (BSC Remote Terminal).")

RMTnnn should be specified for each remote terminal. If not specified, JES2 assumes that this is a basic 2770 terminal with no features. Remote terminals are numbered consecutively (RMT1-RMT255) for the number of remote terminals specified by the &NUMRJE parameter.

If a remote terminal has attached devices, use the following initialization parameters to describe their characteristics.

Rnnn.PRM – specifies remote printer characteristics

Rnnn.PUM – specifies remote card punch characteristics

Rnnn.RDM – specifies remote card reader characteristics

JES2 associates attached devices to a remote terminal by correlating the *nnn* in the above parameters to the *nnn* in an RMTnnn parameter.

SNA remote terminal characteristics are specified by the following subparameters.

terminal type

specifies the type of terminal or CPU at this remote location. This subparameter must be specified as LUTYPE1 to indicate that this remote terminal is an SNA terminal (for example, a 3770 terminal or a System/32 workstation) that can be accessed only by means of a logical line (that is, a line defined by a LINEnnn parameter with the UNIT=SNA subparameter).

Default: 2770

BUFSIZE=nnnn

specifies the largest request unit that can be sent to or received from this SNA terminal. *nnnn* must be in the range of 256 to the value specified for &TPBFSIZ.

Default: 256

COMP/NOCOMP

specifies that this terminal has the compression/expansion feature. All SNA terminals have this feature; but the default value, NOCOMP, can be used.

Default: NOCOMP, which specifies that the terminal will not use the compression/expansion feature.

DISCINTV=nnnn

specifies the interval (in seconds) after which, if there is no successful text transmission in either direction, JES2 terminates the session between the remote terminal and the processing unit. Error recovery tries and idle time are not counted as successful text transmission. *nnnn* may be from 1 to 8192 seconds. JES2 rounds this value to the next highest multiple of 30.

Default: 0, which indicates that the session is not to be terminated and the terminal is not to be disconnected.

FIXED/VARIABLE

FIXED specifies a fixed data record length for this terminal.

Default: VARIABLE, which specifies a variable data record length.

LINE=nnn

specifies the number of a logical line that is connected (and dedicated) to this terminal. (The number of this line cannot exceed the number of lines specified in the &NUMLNES parameter.) This line must be defined by a LINEenn parameter with the UNIT=SNA subparameter specified.

Default: If no line number is specified, JES2 assumes that this terminal is a nondedicated terminal, and can use any nondedicated line.

NUMPR=n

specifies number of printers at this terminal. SNA terminals can support only one printer and one printer data stream. Use the Rnnn.PRm parameter to specify the characteristics of this printer.

Default: 1

NUMPU=n

specifies the number (0 or 1) of card punches at this terminal. SNA terminals can support only one punch data stream. Use the Rnnn.PUm initialization parameter to specify the characteristics of the card punch.

Default: 0

NUMRD=n

specifies the number (0 or 1) of card readers at this remote terminal. SNA terminals can support only one reader data stream. Use the Rnnn.RDm initialization parameter to specify the characteristics of the reader.

Default: 1

PASSWORD=ccccccc

specifies a security password (1-8 alphanumeric or national characters) to prevent unauthorized terminals from using this remote terminal's resources.

Default: No password.

ROUTECD=nnn

specifies the route code to be assigned to this terminal and its associated printers, punches, and readers. *nnn* may be any number from 1-999.

Default: If a route code is not specified, JES2 assigns the number of this terminal (RMTnnn) as its route code.

WAITIME=nn

specifies the length of time, 1 to 30 seconds, that RTAM should wait at the completion of the processing of any input stream, printed output stream, or punched output stream to allow the operator to enter an input stream at this remote terminal.

Default: The value specified for the &WAITIME initialization parameter.

Rnnn.PRm (Remote Printer)

Rnnn.PRm AUTO/OPERATOR
CLASS=c₁ . . . c_n
DRAIN/START
FCB=cccc
FCBLOAD/NOFCBLOD
FORMS=cccc
NOSEP/SEP
NOSUSPND/SUSPEND
PRWIDTH=nnn
ROUTECD=nnn
UCS=cccc

The Rnnn.PRm parameter specifies the characteristics of one printer at a remote terminal. *nnn* is the number of a remote terminal as specified in the RMTnnn, parameter and *m* is the number of this printer. Printers are numbered consecutively (Rnnn.PR1 to Rnnn.PR7) for the number of printers specified (NUMPR=*n* in the RMTnnn parameter) for this remote terminal. For example, if there are three printers attached to remote terminal number 28, the printers are numbered R28.PR1, R28.PR2, and R28.PR3.

Characteristics for remote printers are specified by the following subparameters.

AUTO/OPERATOR

AUTO specifies that this printer is initially to operate in automatic (demand) forms mode when JES2 starts processing.

Note: Except for SNA terminals, printers connected to terminals without MULTI-LEAVING support should be operated in operator-controlled mode.

Default: OPERATOR, which specifies that this printer is initially to operate in operator-controlled (forms) mode.

CLASS=c₁ . . . c_n

specifies the output classes, in priority sequence, to be processed by this printer. You can specify any number of classes (A-Z,0-9) up to the maximum number of classes specified by the &NUMCLAS parameter.

Default: AJ

DRAIN/START

DRAIN specifies that this printer is to be started by operator command.

Default: START, which specifies that this if it is ready) is to be automatically started when JES2 starts processing.

FCB=cccc

specifies the forms buffer image or the carriage control tape that is to be initially mounted on this printer. *cccc* is the forms control buffer (FCB) identifier (1 to 4 alphanumeric characters) that resides in SYS1.IMAGELIB. (Refer to *OS/VS2 System Programming Library: Data Management* for information on how to add FCBs to SYS1.IMAGELIB.)

Default: The identifier specified by the &PRTFCB parameter.

FCBLOAD/NOFCBLOD

FCBLOAD specifies that FCB support is to be provided for this printer.

Note: *FCBLOAD* is effective only if this is a 3211 printer attached to a S/360 or S/370 (not including M/20) CPU which has the text transparency feature (*TRANSP* specified for both the *LINEnnn* and the *RMTnnn* parameters), or if this printer is an SNA terminal (*FCBLOAD* for an SNA terminal uses only one stop per channel for a maximum of twelve stops). Also, the length of FCB images that can be used for this printer cannot exceed the line length specified for this printer (*PRWIDTH*) minus 2.

Default: *NOFCBLOD*, which specifies that no FCB support is to be provided for this printer.

FORMS=cccc

specifies the forms identifier (1 to 4 alphanumeric characters) of the forms that are to be loaded initially in this printer.

Default: If no value is specified, JES2 uses the forms identifier specified by the *&STDFORM* parameter.

NOSEP/SEP

NOSEP specifies that separator pages are not to be provided initially between data set groups. (Separator pages can be specified later by operator command.) *NOSEP* also suppresses printing of operator messages.

Default: *SEP*, which specifies that separator pages are to be provided initially between data set groups.

Note: *If a zero number of print lines was specified by the &TPIDCT parameter, separator pages will not be produced even if SEP is specified.*

NOSUSPND/SUSPEND

NOSUSPND specifies that this printer is not to use the printer interrupt feature. This feature allows the remote operator to interrupt printing to transmit jobs or JES2 commands to JES2.

Default: *SUSPEND*, which specifies that this printer is to use the printer interrupt feature.

Note: *This parameter is ignored for printers that are connected to terminals without MULTI-LEAVING support, including SNA terminals.*

PRWIDTH=nnn

specifies the maximum number of characters to be printed on one line.

Note: *This value must not exceed the printer width you specified during RMT generation of this MULTI-LEAVING terminal (with the &PRTSIZE parameter for Mod 20, S/360, and S/370 terminals and via the &PRFOTLW parameter for 1130 terminals).*

Default: 120

ROUTECD=nnn

specifies the route code, 1 to 255, to be assigned to this printer. The route code specified may be that of any remote terminal defined to JES2 by means of an *RMTnnn* initialization parameter.

Default: JES2 assigns the route code of the remote terminal to which the printer is attached. (See the description of the *RMTnnn* parameter for more information about the route code.)

UCS=cccc

specifies the print train (or print chain) that is initially mounted on this printer.

Default: The identifier specified by the &PRTUCS parameter.

Rnnn.PUm (Remote Card Punch)

Rnnn.PUm AUTO/OPERATOR
 CLASS=c₁ . . . c_n
 DRAIN/START
 FORMS=cccc
 NOSEP/SEP
 NOSUSPND/SUSPEND
 ROUTECD=nnn

The Rnn.PUm parameter specifies the characteristics of one card punch at a remote terminal. *nnn* is the number of a remote terminal as specified in the RMTnnn parameter and *m* is the number of this card punch. Card punches are numbered consecutively (Rnnn.PU1 to Rnnn.PU7) for the number of card punches specified (NUMPU=*n* in the RMTnnn parameter) for this remote terminal. For example, if there are two punches attached to remote terminal number 14, the punches are numbered R14.PU1 and R14.PU2.

Characteristics for remote punches are specified by the following subparameters.

AUTO/OPERATOR

AUTO specifies that this card punch is to initially operate in automatic (demand) forms mode when JES2 starts processing.

Note: Except for SNA terminals, punches connected to terminals without MULTI-LEAVING support must be operated in operator-controlled mode.

Default: OPERATOR, which specifies that this punch is initially to operate in operator-controlled (forms) mode.

CLASS=c₁ . . . c_n

specifies the output classes, in priority sequence, to be processed initially by this card punch. You can specify any number of classes (A-Z,0-9) up to the maximum number of classes specified by the &NUMCLAS parameter.

Default: BK

DRAIN/START

DRAIN specifies that this card punch is to be started by operator command.

Default: START, which specifies that this punch (if it is ready) is to be automatically started when JES2 starts processing.

FORMS=cccc

specifies the forms identifier (1 to 4 alphanumeric characters) of the forms that are to be loaded initially in this card punch.

Default: JES2 uses the identifier specified by the &STDFORM parameter.

NOSEP/SEP

NOSEP specifies that separator cards are not to be provided initially between data set groups. (Separator cards can be specified later by operator command.)

Default: SEP, which specifies that separator cards are to be provided initially between data set groups.

NOSUSPND/SUSPEND

NOSUSPND specifies that this card punch is not to use the punch interrupt feature. This feature allows the remote terminal operator to interrupt punching to transmit jobs or JES2 commands to JES2.

Default: SUSPEND, which specifies that this card punch is to use the punch interrupt feature.

Note: This parameter is ignored for punches that are attached to terminals without MULTI-LEAVING support, including SNA terminals.

ROUTECD=nnn

specifies the route code, 1 to 255, to be assigned to this punch. The route code specified may be that of any remote terminal defined to JES2 by means of the RMTnnn initialization parameter.

Default: JES2 assigns the route code of the remote terminal to which the punch is attached. (See the description of the RMTnnn parameter for more information about the route code.)

Rnnn.RDm (Remote Card Reader)

Rnnn.RDm CLASS=c
DRAIN/START
HOLD/NOHOLD
MSGCLASS=c
PRDEST=nnn
PRIOINC=nn
PRIOLIM=nn
PRLCL/PRRMT
PUDEST=nnn
PULCL/PURMT

The Rnnn.RDm parameter specifies the characteristics of one card reader at a remote terminal. *nnn* is the number of the remote terminal as specified in the RMTnnn parameter and *m* is the number of this reader. Readers are numbered consecutively (Rnnn.RD1 to Rnnn.RD7) for the number of readers (NUMRD=*n* in the RMTnnn parameter) specified for this remote terminal. For example, if there are three card readers attached to remote terminal 2, the readers are numbered R2.RD1, R2.RD2, and R2.RD3.

Characteristics for remote readers are specified by the following subparameters.

CLASS=c

specifies the job class to be assigned to all jobs entered at this card reader that do not specify a job class in the CLASS operand of their JOB statements. *c* can be any class A-Z,0-9.

Default: A

DRAIN/START

DRAIN specifies that this card reader is to be started by operator command.

Default: START, which specifies that this card reader is to start automatically when JES2 starts processing.

HOLD/NOHOLD

HOLD specifies that all jobs entered at this card reader are to be held after JCL conversion until they are released for execution by the operator.

Default: NOHOLD, which specifies that jobs entered at this card reader are to be queued as usual.

MSGCLASS=c

specifies the message class to be assigned to jobs entered at this card reader that do not specify a MSGCLASS operand in their JOB statements. *c* can be any class (A-Z,0-9).

Default: A

PRDEST=nnn

specifies the printer destination for the printed output from all jobs that are entered at this card reader that do not have a ROUTE statement or DEST parameter. *nnn* can be 0 or it can be a route code (1-255) of a local printer or a remote printer as specified by the PRINTERnn or RMTnn parameter, respectively. If the route code is of a local printer, then the PRLCL option must be specified. When 0 is specified, job output is printed at any available local printer that was not assigned a route code by the PRINTERnn parameter.

Default: The route code (ROUTECD) specified in the RMTnnn parameter for this remote terminal.

PRIINC=nn

specifies a number (0 to 15) to be added to the selection priority of each job entered at this card reader. If the total of this number and a job's priority exceeds the priority level specified by PRIOLIM, JES2 uses the priority level specified by PRIOLIM.

Default: 0

PRIOLIM=nn

specifies the maximum priority level (0 to 15) that can be assigned to jobs entered at this card reader. If a job's priority (with or without the increment specified by PRIINC) exceeds this level, it is reduced to this level.

Default: 15

PRLCL/PRRMT

PRLCL specifies that the route code specified by PRDEST is that of a local printer.

Default: PRRMT, which specifies that the route code is that of a remote printer.

PUDEST=nnn

specifies the card punch destination for the punched output from jobs entered at this card reader that do not have a ROUTE statement or a DEST parameter. *nnn* can be 0 or it can be a route code (1-255) of a local card punch or a remote card punch as specified by the PUNCHnn or RMTnnn parameter, respectively. If the route code is of a local card punch, the PULCL option must be specified. When 0 is specified, job output is printed at any available local card punch that was not assigned a route code by the PUNCHnn parameter.

Default: PUDEST=0

PULCL/PURMT

PULCL specifies that the route code specified by PUDEST is that of a local card punch.

Default: PURMT, which specifies that the route code is that of a remote card punch.

&RPRBOPT (Remote Printer Double Buffering Option)

&RPRBOPT=YES/NO

The &RPRBOPT parameter specifies whether or not double buffering is to be used for remote printers. If NO is specified, single buffering is used.

Note: The specification refers to JES2 regular I/O buffers, not to JES2 teleprocessing buffers.

Default: NO

&RPRI(n) (Job Execution Selection Priority)

&RPRI(n)=nn

The &RPRI(n) parameter specifies job scheduling priorities that are associated with execution times as specified in a corresponding &RPRT(n) parameter. If these parameters are not specified, the following values are used as default values:

&RPRI(1)=9
&RPRI(2)=8
&RPRI(3)=7
&RPRI(4)=6
&RPRI(5)=5
&RPRI(6)=4
&RPRI(7)=3
&RPRI(8)=2
&RPRI(9)=1

If a /*PRIORITY control card is not supplied with a job or if PRTY is not specified on the JOB card, the priority of that job is determined as follows:

The queuing priority is computed as:

$$\text{priority} = (\&RPRI(n) + \&XPRI(m)) \div 2$$

The subscript n is the smallest number for which:

$$t \leq \&RPRT(n)$$

The subscript m is the smallest number for which:

$$o \leq \&XLIN(m)$$

where:

t

is the estimated execution time, taken from the accounting field of the JOB card or from the /*JOBPARM control card.

o

is the sum of the estimated output lines and cards, taken from the accounting field of the JOB card or from the /*JOBPARM control card.

Refer to the &RPRT(n) and the &XPRI(n) parameters for additional information.

Lower Limit: 0

Upper Limit: 15

Default: Refer to the list of default values given above.

**&RPRT(n) (Job Execution
Time Priority Categories)**

&RPRT(n)=nnnnnn

The &RPRT(n) parameter specifies execution times that are to be associated with job scheduling priorities as specified in a corresponding &RPRI(n) parameter. If these parameters are not specified, the following are used as default values:

&RPRT(1)=2
&RPRT(2)=5
&RPRT(3)=15
&RPRT(4)=279620
&RPRT(5)=279620
&RPRT(6)=279620
&RPRT(7)=279620
&RPRT(8)=279620
&RPRT(9)=279620

If a /*PRIORITY control card is specified for a job, these values are not used.

Refer to the &RPRI(n) and &XPRI(n) parameters for additional information.

Lower Limit: 1

Upper Limit: 279620 (that is, approximately X'FFFFFF'/60)

Default: Refer to the list of default values given above.

**&RPS (Rotation Position
Sensing Support Option)**

&RPS=YES/NO

The &RPS parameter specifies whether or not to include rotational position sensing for JES2 channel programs directed to direct-access devices with the rotational position sensing feature.

JES2 operates with any supported direct-access device or combination of devices, regardless of the specification of this parameter.

Default: YES

**&RPUBOPT (Remote
Punch Double
Buffering Option)**

&RPUBOPT=YES/NO

The &RPUBOPT parameter specifies whether or not double buffering is to be used for remote card punches. If NO is specified, single buffering is used.

Note: The specification refers to JES2 regular I/O buffers, not to JES2 teleprocessing buffers.

Default: NO

&SID (System ID)**&SID=cccc**

The &SID parameter specifies a four-character alphanumeric system ID to be used in place of that provided by SMF. This parameter may be required to warm-start JES2 on a system with a different SMF-defined system ID, or to warm start JES2 on the same system following an IPL with different SMF specifications. In any case, for a JES2 warm start, this specification must match that last used in starting JES2.

Default: The SMF-provided system ID.

Sn (System ID in a Multi-Access Spool Configuration)**Sn SID=ccc**

The Sn parameter is required to identify each system in a multi-access spool configuration. The initialization data set for each system must contain the Sn parameters of all the systems in the configuration. That is, if there are three systems (K158, L158, L168) in the configuration, the initialization data set for each system would contain the following parameters:

```
S1  SID=K158
S2  SID=L158
S3  SID=L168
```

Systems are numbered consecutively from one to seven (S1-S7). The system identifier is specified by the following subparameter.

SID=cccc

specifies the system identifier. *cccc* is the four-character alphanumeric name that was generated as the system management facility (SMF) system ID for this system.

Default: For a single system configuration, the system identifier for S1 defaults to the generated SMF system ID. For multi-access spool configurations, the system IDs must be specified for each system and no default is permitted.

&SPOLMSG (Remote Terminal Spool Message Record Count)**&SPOLMSG=nnn**

The &SPOLMSG parameter specifies the number of physical records (in the first extent of SYS1.HASPACE on the primary spool volume) to be reserved for operator messages and JES2 messages for each JES2 remote terminal. Total space reserved is &SPOLMSG*&NUMRJE. Each physical record is capable of holding one or more messages for a single remote terminal. Messages are held if they are directed to:

- Any terminal not signed on, or
- Any signed-on computer terminal that is not a MULTI-LEAVING terminal with a console

Space for each terminal is separate from that of other terminals. Each message to a terminal (except to a MULTI-LEAVING remote terminal with a console) is held until it can be printed or until JES2 is cold-started. If a message is to be held and the terminal's space is filled, the oldest held messages for that terminal are discarded without operator notification.

Only the \$DMR command can generate messages to a terminal that is not signed on. For signed-on terminals, messages are generated for job-on-reader, by the \$DMR command, and as responses to commands from the terminal.

Lower Limit: 0

Upper Limit: 254

Default: (4096 ÷ &BUFSIZE) X 6

**&SPOOL (Spool
Volume ID)**

&SPOOL=cccccc

The &SPOOL parameter specifies the volume serial number of the primary spool volume. Any six characters that define a valid volume serial number may be used. (This is a change from HASP where you specified only the first five characters of the primary spool volume ID.)

When you define the spool volumes, the first five characters of the volume serial number of each volume must be identical to the first five characters specified in this parameter. The sixth character can be any character that is valid in a volume serial number, including a blank.

One volume must be designated as the primary spool volume. All six characters of its volume serial number must agree with the six characters specified in this parameter.

Note: If a value other than SPOOL1 is specified, certain messages will vary from their documentation in OS/VS Message Library: VS2 System Messages.

Default: SPOOL1

**&STC, &TSU, &x
(Job Class)**

{ &STC &TSU &x }	CONVPARM=bppmmmmssccclaaaef
	COPY/ <u>NOCOPY</u>
	HOLD/ <u>NOHOLD</u>
	NOJOURN/ <u>JOURNAL</u>
	NOLOG/ <u>LOG</u>
	NOOUTPUT/ <u>OUTPUT</u>
	NOTYPE6/ <u>TYPE6</u>
	NOTYPE26/ <u>TYPE26</u>
	NOUJP/ <u>IEFUJP</u>
	NOUSO/ <u>IEFUSO</u>
	PERFORM=nnn
	PROCLIB=nn
	RESTART/ <u>NORESTR</u>
	SCAN/ <u>NOSCAN</u>
	XBATCH/ <u>NOXBATCH</u>

The &STC,&TSU, and &x parameters specify the characteristics to be associated with one job class. Job classes are specified as follows:

- &STC—defines the job class for started tasks
- &TSU—defines the job class for time sharing users
- &x—defines any batch class (A-Z,0-9)

Job class characteristics are specified by the following subparameters.

CONVPARM=bppmmmmssccclaaaef

specifies the default parameters to be used by the OS/VS2 Converter to process jobs in this job class. The parameters are specified by 20 hexadecimal characters. For a description of the parameters, refer to the &RDROPSU parameter.

Default: If the CONVPARM subparameter is not specified, the converter uses the parameters specified in the following parameters:

&RDROPSL, for the time-sharing user job class
&RDROPST, for the started task job class
&RDROPSU, for background job classes

COPY/NOCOPY

COPY specifies that jobs in this job class are to be queued for output processing as though TYPRUN=COPY was specified on the JOB statement for these jobs.

Default: NOCOPY, which specifies that jobs in this job class are to be queued as usual. NOCOPY will be ignored if the TYPRUN=COPY parameter is specified on the JOB statement for a job.

HOLD/NOHOLD

HOLD specifies that jobs in this job class are to be held until a RELEASE command is issued by the operator.

Default: NOHOLD, which specifies that jobs in this job class are to be queued as usual. NOHOLD will be ignored if the TYPRUN=HOLD parameter is specified on the JOB statement for a job (or if the job is held for other reasons).

NOJOURN/JOURNAL

NOJOURN specifies that information for the job journal is not to be processed for a job in this job class unless:

RD=R or RD=RNC is specified on the JOB card.

No RD parameter appears on the job card, but RD=R or RD=RNC is specified on any of the EXEC cards for the job.

Note that the job journal contains checkpoint/restart information. Jobs that are not recorded in the job journal cannot be automatically restarted or warm-started.

Default: JOURNAL, which specifies that information for the job journal is to be processed for this job class.

NOLOG/LOG

NOLOG specifies that the JES2 job log is not to be printed for this job class. The JES2 job log contains the user's console messages and replies to WTORs issued during the processing of the job. When NOLOG is specified, JES2 statistics information, normally printed with the job, is also suppressed.

Default: LOG, which specifies that the job log is to be printed for this job class. Even when LOG is specified, the job log may be suppressed, for individual jobs by using a parameter in the accounting field of the JOB card or via a parameter on a JOBPARM control card.

NOOUTPUT/OUTPUT

NOOUTPUT specifies that no SYSOUT data is to be written for jobs executed in this job class.

Default: OUTPUT, which specifies that SYSOUT data is to be written for jobs executed in this job class.

NOTYPE6/TYPE6

NOTYPE6 specifies that JES2 is not to produce type 6 SMF (external writer) records for jobs in this job class. Type 6 SMF records are written for each group of job-related data sets and each spin-off data set that is processed. Type 6 records are described in *OS/VS2 System Programming Library: System Management Facilities (SMF)*.

Default: TYPE6, which specifies that JES2 is to produce type 6 SMF records for this job class. When type 6 records are to be produced, the &NUMSMFB parameter must specify two or more SMF buffers.

Note: Specifying TYPE6 has no effect for the &STC parameter which assumes the NOTYPE6 option.

NOTYPE26/TYPE26

NOTYPE26 specifies that JES2 is not to produce type 26 (job summary) SMF records for jobs in this job class. Type 26 records are described in *OS/VS2 System Programming Library: System Management Facilities (SMF)*.

Default: TYPE26, which specifies that JES2 is to produce type 26 SMF records for jobs in this job class. When type 26 records are to be produced, the &NUMSMFB parameter must specify two or more SMF buffers.

Note: Specifying TYPE26 has no effect on the &STC parameter, which assumes the NOTYPE26 option.

NOUJP/IEFUJP

NOUJP specifies that the IEFUJP exit is not to be taken when a job is purged. IEFUJP receives control when a job is ready to be purged from the system; that is, after the job has been terminated and all the SYSOUT output that pertains to the job has been processed.

Default: IEFUJP, which specifies that the IEFUJP exit is to be taken when a job is purged.

Note: Specifying IEFUJP has no effect on the &STC parameter, which assumes the NOUJP option.

NOUSO/IEFUSO

NOUSO specifies that the IEFUSO user exit is not to be taken when the SYSOUT limit is reached for a job in this job class. The SYSOUT limit, which is specified by the OUTLIM parameter on the JOB card, defines the maximum number of physical records to be written to the associated SYSOUT data set. When the OUTLIM value is exceeded, JES2 normally calls the IEFUSO SMF exit routine to either increase the SYSOUT limit or to terminate the job. When NOUSO is specified and OUTLIM is exceeded, JES2 abnormally terminates the job.

Default: IEFUSO, which specifies that the IEFUSO user exit is to be taken when the SYSOUT limit is reached for a job in this job class.

Note: IEFUSO has no effect on the &STC parameter which assumes the NOUSO option.

PERFORM=nnn

specifies the performance group number for this job class when a performance group number is not specified on the JOB or EXEC control statement for a job of this job class. Any decimal number from 0-255 can be specified.

Default: 0, which indicates that no performance group processing will be performed by JES2 and causes the Workload Manager to assign a default value (1 for background jobs and 2 for foreground jobs) and issue an error message.

PROCLIB=nn

specifies the default procedure library number which is to be used for this job class. It allows you to specify different procedure libraries for different job classes. In the JES2 procedure, one DD statement must be named PROC00. If you specify additional procedure libraries (01-99) at that time, you may associate these libraries to a job class by replacing the nn of this subparameter with the appropriate procedure library number.

Note: All cataloged procedure libraries to be used by jobs, time-sharing users, or system tasks must be defined in the JES2 procedure.

Default: 00

RESTART/NORESTR

RESTART specifies that JES2 is to queue for reexecution from the beginning any job of this job class that was executed before a system re-IPL and JES2 warm start, unless the job can be restarted from a step or checkpoint by the system.

If JOURNAL is specified, jobs in this job class can normally be restarted from a step or checkpoint. If RESTART and NOJOURN are both specified, JES2 always attempts to restart interrupted jobs in this class from the beginning. If RESTART is specified together with JOURNAL, JES2 restarts interrupted jobs from the beginning only if the system is unable to restart the job from a step or checkpoint.

Specifying RESTART=Y or RESTART=N on the /*JOBPARM control statement for a particular job overrides the job class RESTART subparameter.

Default: NORESTR, which specifies that JES2 is not to take special action to restart jobs in this class that were being executed before a system re-IPL and JES2 warm start.

SCAN/NOSCAN

SCAN specifies that jobs in this job class are to be queued for output processing immediately after JCL conversion as though TYPRUN=SCAN was specified on the JOB statement for these jobs.

Default: NOSCAN, which specifies that jobs in this job class are to be queued as usual. NOSCAN will be ignored if the TYPRUN=SCAN parameter is specified on the JOB statement for a job.

XBATCH/NOXBATCH

XBATCH specifies that the Execution Batch Scheduling feature is to be associated with this job class. (This feature is described for JES2 in the chapter "JES2 Processing.")

Default: NOXBATCH, which specifies that the Execution Batch Scheduling feature is not to be associated with this job class.

STCMCLAS (Message Class for Started Tasks)

STCMCLAS=c

The STCMCLAS parameter specifies the message class for all started tasks. All job control statements and system messages will be assigned to this class. The specification can be any valid message class (A-Z,0-9).

Default: A

&STDFORM (Default Forms ID)

&STDFORM=cccc

The &STDFORM parameter specifies an identifier, four alphanumeric characters, that is used as a forms ID when a forms ID is not specified. It also specifies the default initial setup of all printers and punches at JES2 initialization.

Default: STD.

&SYNCTOL (Synchronization Tolerance)

&SYNCTOL=nnn

The &SYNCTOL parameter specifies, in seconds, the time interval that must elapse before one JES2 system in a multi-access spool configuration is assumed to be not operating. This parameter allows for imprecise synchronization of TOD clocks (caused by human intervention) in a multi-access spool environment.

Actions such as a cold start, warm start, or \$ESYS operator command are rejected unless the time stamps of affected systems in the shared checkpoint record are less than the current time minus this parameter.

Lower Limit: 0

Upper Limit: 300 (5 minutes)

Default: 120 (2 minutes)

&TCELSIZ (Track Cell Size)

&TCELSIZ=nnn

The &TCELSIZ parameter specifies the size of a track cell in terms of spool buffers; that is, &TCELSIZ specifies the number of direct access spool records to be logically ordered on a spool track and the number of records to be despoiled in one operation during print processing.

Note: A data set uses the track-cell method only if the SYSOUT class of the data set has the TRKCEL characteristic (refer to the description of the \$\$x initialization parameter). Similarly, track cells, rather than single buffers, are despoiled during print processing only if the printer is defined with the DSPLTCEL characteristic (refer to the description of the PRINTERnn initialization parameter).

If &TCELSIZ is greater than the number of records on a track of a spool volume, the entire track is considered a track cell. If &TCELSIZ is less than or equal to the number of records on a track of a spool volume, the track is divided into as many track cells as will fit evenly.

The records remaining after this division, if any, are used as follows:

- If the number of remaining records is greater than or equal to one-half the &TCELSIZ value, the records are available to any data set (with or without the track-cell characteristic).
- If the number of remaining records is less than one-half the &TCELSIZ value, the records are available only for data sets without the track-cell characteristic.

Lower Limit: 1

Upper Limit: 127

Default: 3

**&TGWARN (Threshold
Spool Utilization)**

&TGWARN=nnn

The &TGWARN parameter specifies the threshold percentage use of spool space that causes the message \$HASPO93 xxx% SPOOL UTILIZATION to be issued by JES2. A value of 0 indicates that every use of spool space will be reported, and a value of 101 indicates that no message will be issued.

Lower Limit: 0

Upper Limit: 101

Default: 80

**&TIMEOPT (Execution
Time Monitoring Option)**

&TIMEOPT=YES/NO

The &TIMEOPT parameter specifies whether or not to support the elapsed time job monitor feature of JES2.

If YES is specified, the operator is informed when a job's estimated execution time is exceeded and notified periodically thereafter.

Refer to the &ESTIME and &TIMEXS parameters for additional information.

Default: NO

**&TIMEXS (Exceeded
Execution Time Message
Interval)**

&TIMEXS=nn

The &TIMEXS parameter specifies, in minutes, the interval at which messages will be written to inform the operator that a job's execution time is exceeded. The first message is written to the operator when the job's estimated time has been exceeded.

If the &TIMEOPT parameter is specified as NO, this parameter is ignored.

Lower Limit: 1

Upper Limit: 30

Default: 1

**&TPBFSIZ (Teleprocess-
ing Buffer Size)**

&TPBFSIZ=nnnn

The &TPBFSIZ parameter specifies, in bytes, the size of the JES2 teleprocessing buffers. The value specified must be a multiple of 8 and be greater than or equal to the value specified for &MLBFSIZ. If it is not, it is automatically rounded up without notice.

When SNA RJE terminals are supported, this value is increased, if necessary, without notice to the largest &BUFSIZE value specified for an SNA remote terminal.

The following table gives minimum values required to support various non-programmable terminals.

Minimum &TPBFSIZ	Terminal Type, Features
264	2770 with buffer expansion
400	2780
516	2770 with buffer expansion and additional buffer expansion
516	3780
256	LUTYPE1

Note: If necessary, the value specified for &TPBFSIZ will be increased without notice to the appropriate minimum value indicated in the table above if RMTnnn initialization parameters are specified for the above terminal types with the indicated features.

Lower Limit: 128

Upper Limit: 3976 (dependent on the JES2 macro expansions)

Default: 400

**&TPIDCT (Remote
Printer Separator Page
Line Count)**

&TPIDCT=nnn

The &TPIDCT parameter specifies the number of print lines that are to appear on each JES2 job separator page for printed output for remote terminal printers. If the specification is 30 or greater, the first 29 lines are used to produce a block-lettered job name, job number, and SYSOUT class.

The equivalent parameter for local terminal printers is &PRIDCT.

Lower Limit: 0

Upper Limit: 255

Default: 6

**TSUMCLAS (TSO
Message Class)**

TSUMCLAS=c

The TSUMCLAS parameter specifies the message class for all time-sharing foreground jobs. It also specifies the default message class for all background jobs submitted from a time-sharing session. The specification can be any valid message class (A-Z,0-9).

Default: A

**&WAITIME (Remote
Terminal Function
Interval)**

&WAITIME=nn

The &WAITIME parameter specifies, in seconds, the length of time that JES2 should wait at the completion of the processing of any input stream, printed output stream, or punched output stream, to allow the operator to alter the normal sequence of RJE operations. For example, the operator may want to transmit another job to JES2 after a previous job has finished printing, rather than wait until all queued output has finished processing.

Lower Limit: 1

Upper Limit: 30

Default: 1

**&WARNTIM (Lock-Out
Warning Time)**

&WARNTIM=nnnnn

The &WARNTIM parameter specifies, in hundredths of a second, the time interval from the first denied request for access to the shared queues of a member of a multi-access spool configuration to the time that that configuration will assume the member controlling the queues to be down. When this situation occurs, JES2 issues the HASP260 message, indicating a lock-out situation, and resets the timer interval to the &WARNTIM value.

Lower Limit: 500 (5 seconds)

Upper Limit: 15000 (2 1/2 minutes)

Default: 1000 (10 seconds)

\$\$x (SYSOUT Class)

**\$\$x DUMMY/SYSOUT
 HOLD/NOHOLD
 PUNCH/PRINT
 TRKCEL/NOTRKCEL**

This parameter specifies the SYSOUT class characteristics for one output class. *x* can be any one of the 36 (A-Z,0-9) possible output classes.

DUMMY/SYSOUT

DUMMY specifies that JES2 is to process this output class as a dummy data set (like a DD DUMMY statement).

Default: SYSOUT specifies that JES2 is to process this output class as SYSOUT.

HOLD/NOHOLD

HOLD specifies that data sets specifying this SYSOUT class are to be eligible to be held for TSO SYSOUT processing. The class specified on the MSGCLASS parameter should be either the same class or another class that is also defined with \$\$x HOLD.

Note: The only other way to specify that a data set is to be held is by specifying the HOLD=YES parameter on the data definition (DD) control statement that defines the SYSOUT data set. In this case, the data set will be held even though NOHOLD is specified for this subparameter.

Default: NOHOLD, which specifies that these data sets are not to be held for TSO user processing.

PUNCH/PRINT

PUNCH specifies that this output class is normally to be punched.

Default: PRINT, which specifies that this output class is normally to be printed. For classes B and K, the default is PUNCH.

Note: Any class may be specified for either print or punch. The purpose of this subparameter is to define the installation's standard for output classes so that appropriate print and punch accounting can be maintained.

TRKCEL/NOTRKCEL

TRKCEL specifies that physical records of each data set of this SYSOUT class are to be specially grouped on the spool volume(s), and are to be written to and read from the spool volume in blocks. (Refer to the &TCELSIZ initialization parameter for additional information.)

Default: NOTRKCEL, which specifies that physical records are to be written and read individually.

&XBATCH (Execution Batch Scheduling Option)

&XBATCH=YES/NO

The &XBATCH parameter specifies whether or not to support the JES2 execution batch scheduling feature.

Default: NO

&XBATCHN (Execution Batch Scheduling Procedure Prefix)

&XBATCHN=cccc

The &XBATCHN parameter specifies the first five characters of the name of each MVS program or procedure to be started internally by JES2 when required to execute a user job under the execution batch scheduling feature. The specification must be a five-character alphanumeric name whose first character is alphabetic or national.

If the &BATCH parameter is specified, JES2 rejects all user-submitted jobs whose job names begin with the five characters specified in this parameter.

Default: \$\$\$\$\$

&XLIN(n) (Output Selection Priority Category)

&XLIN(n)=nnnnnnnn

The &XLIN(n) parameter specifies the output record counts that are associated with the priorities as specified in the &XPRI(n) parameter. If this parameter is not specified, the following are used as default values:

&XLIN(1)=2000
&XLIN(2)=5000
&XLIN(3)=15000
&XLIN(4)=16777215
&XLIN(5)=16777215
&XLIN(6)=16777215
&XLIN(7)=16777215
&XLIN(8)=16777215
&XLIN(9)=16777215

If a /*PRIORITY control card is specified, these values are not used.

Refer to the &RPRT(n) and &XPRI(n) parameters for additional information.

Lower Limit: 1

Upper Limit: 16777215 (that is, X'FFFFFF')

Default: Refer to the list of default values given above.

&XPRI(n) (Output Selection Priority)

&XPRI(n)=nn

The &XPRI(n) parameter specifies the output selection priority for the output interval specified by the corresponding &XLIN(n) parameter.

If you do not supply a /*PRIORITY control card with your job, the job scheduling priority is recomputed after execution, based on the actual number of print and punch records it produced. If the job produced p print lines and c punched cards, its output priority will become &XPRI(n), where n is the smallest number for which:

$$p + c \leq \&XLIN(n)$$

If this parameter is not specified, the following are used as default values:

&XPRI(1)=9

&XPRI(2)=8

&XPRI(3)=7

&XPRI(4)=6

&XPRI(5)=5

&XPRI(6)=4

&XPRI(7)=3

&XPRI(8)=2

&XPRI(9)=1

Refer to the &RPRT(n) and &XLIN(n) parameters for additional information.

Lower Limit: 0

Upper Limit: 15

Default: Refer to the list of default values given above.

CHAPTER 4. JES2 PROCESSING

By means of JES2 and RMT generation and JES2 initialization, you can define and control the configuration of job entry sources and job output destinations. You can also indicate how JES2 is to control certain aspects of job input, queuing, and output.

This chapter describes the aspects of JES2 processing that you can affect by means of generation and initialization parameters and operator commands. For specific information about coding generation and initialization parameters, refer to Chapters 2 and 3. For information about the operator commands, see *Operator's Library: OS/VS2 JES2 Commands*.

Configuration

During JES2 initialization, the system programmer can specify the configuration of JES2 local devices, the JES2 internal reader facility, the JES2 remote lines and devices, and the JES2 spool volumes.

Local Device Configuration

Local devices are card readers, printers, and card punches attached to the MVS system that are used for reading jobs and writing output.

During JES2 initialization, the system programmer specifies the number of readers, printers and punches to be controlled by JES2 with the &NUMRDRS, &NUMPRTS and &NUMPUNS parameters.

The system programmer can identify the devices that are to be used by JES2 with the READERnn, PRINTERnn and PUNCHnn parameters. The system programmer can also specify JES2 processing parameters to be associated with each device and indicate whether the device is to be considered active or inactive upon completion of JES2 initialization. An active device is dynamically allocated during JES2 initialization, and processing on that device begins as soon as work is available. An inactive device must be activated by the operator with the JES2 START command (\$S).

If, during JES2 initialization, the system programmer does not identify as many devices (with the READERnn, PRINTERnn, and PUNCHnn parameters) as were specified (with the &NUMRDRS, &NUMPRTS, and &NUMPUNS parameters). JES2 selects devices and dynamically allocates them. Devices are selected according to lowest device address for each type of device (reader, printer, punch), until the number specified (in &NUMRDRS, &NUMPRTS, and &NUMPUNS, respectively) is obtained or no devices of that type remain. For a device to be selected, it must be physically attached to the system. For devices not identified to JES2 during JES2 initialization, default parameters or parameters established during JES2 initialization are used.

During JES2 processing, devices can be activated with the JES2 START command (\$S) and deactivated with the JES2 STOP command (\$P).

Internal Reader

The internal reader facility is defined with the INTRDR parameter. During JES2 initialization, the maximum number of job streams that can be simultaneously entered through the internal reader facility is specified (&NUMINRS). To JES2 it appears that this number of devices is attached. Actually, there is one internal reader facility. Refer to "The Internal Reader Facility" in the section describing job submission.

The maximum specified by the &NUMNRS parameter does not apply to the system internal readers associated with the time-sharing LOGONs (TSUINRDR) and started tasks (STCINRDR).

Remote Line and Device Configuration

JES2 supports both SNA (systems network architecture) and BSC (binary synchronous communication) RJE terminals. Configuring these devices consists of defining remote station facilities, teleprocessing lines, and, for SNA terminals (for example, a 3770 or a System/32 work station), logical lines. The remote facility can range from one remote terminal (for example, a 2770 or 3780) to a remote work station consisting of a computer operating many devices.

During JES2 initialization, the system programmer:

- Specifies the maximum number of teleprocessing lines (including logical lines for SNA terminals) supported by JES2 (with the &NUMLNES parameter).
- Specifies the maximum number of remote stations supported by JES2 (with the &NUMRJE parameter).
- Identifies and specifies characteristics for each line, remote station, and remote device (with the LINEnnn, RMTnnn, Rnnn.RDm, Rnnn.PRm, and Rnnn.PUm parameters).

Physical and logical (SNA) teleprocessing lines are either dedicated (permanently attached) to a remote station or nondedicated. A line is dedicated if the line number is specified in the RMTnnn parameter that describes the remote station. Any line not designated by any RMTnnn parameter is a nondedicated line, and may be used by any station. JES2, however, does not support multiple remote stations active on the same line.

The remote station operator can control the remote station and the remote station devices, jobs submitted through the remote station, or data routed to it. This control can be effected through the remote console or the remote card reader. Each remote station is considered an extension of the local JES2 facility. For more detailed information about remote devices controlled by JES2, refer to Chapter 5.

Spool Configuration

JES2 uses the SYS1.HASPACE data set on each volume identified as a spool volume to store all job input, job output, JES2 control blocks, and system data such as the job journal. Spool volumes are identified to JES2 by volume serial number. A six-character name identifying the primary spool volume is specified in the &SPOOL parameter during JES2 initialization.

Each volume with a volume serial number matching the first five characters of the &SPOOL parameter is considered a spool volume by JES2 and is searched for a SYS1.HASPACE data set. The maximum number of volumes that can be used as spool volumes is specified during JES2 initialization with the &NUMDA parameter.

The system programmer specifies the manner in which the tracks of the volumes are allocated and subdivided into physical records by specifying the &NUMTGV and &BUFSIZE parameters.

The tracks are also subdivided into *track cells*, which are sets of JES2 buffers (physical records) grouped together on a spool volume in a logical order. The system programmer indicates the number of records in each track cell by specifying the &TCELSIZ parameter during initialization. If the track-cell method is used for despooling data, each track cell that is to be sent to a printer, rather than each record, can be taken from the spool volume in one operation; thus, it is not necessary to have a separate operation for each record.

For further discussion of the JES2 spool volumes, refer to Chapter 7.

JES2 also requires one SYS1.HASPKPT data set on a direct-access volume to store a copy of the JES2 queue and other information needed for warm start. This data set may be on the primary spool volume or on another volume as specified by the &CHKPT parameter during JES2 initialization. See Chapter 2 for a description of how to allocate this data set and the SYS1.HASPACE data sets.

Starting and Stopping JES2

JES2 and the parameters that define its operation are selected during job entry subsystem initialization. Initialization of MVS and of the job entry subsystem JES2 are two distinct processes. Basically this means that those processes associated with initialization (cold start, warm start) are specified separately for MVS (reloading the LPA, clearing the VIO data sets) and for JES2 (initializing the job queues). Although for any given IPL it is possible to cold-start one (MVS or JES2) and warm-start the other, the usual procedure is a warm start for both. A detailed description of the process and options for an IPL generally, and for starting and stopping JES2 particularly, is located in Chapter 3.

Controlling Job Submission and Queuing

Jobs are submitted through the job entry subsystem and queued in priority order. The system programmer can use various parameters and facilities to control input streams, to control the specification of job classes and generation of priorities for jobs, to hold or release jobs, to set the default performance group for a job, and to change these specifications by changing entries in the JES2 job control table using the JES2 JOB statement accounting field scan exit.

Submitting Jobs

Jobs are submitted to JES2 in three ways:

- Through card readers allocated to JES2
- Through RJE devices allocated to JES2
- Through a JES2 internal reader facility

Local Device Submission

Local card readers can be supported via the JES2 automatic starting facility by specifying AUTO on the READERnn JES2 initialization parameter. Job streams can then be entered simply by readying the card reader. No other operator action is necessary. The card reader is deactivated and deallocated from JES2 with the JES2 stop (\$P) command.

Remote Job Submission

The RJE support is described separately in Chapter 5. JES2 processes remote jobs no differently than it processes those received from local card readers or the internal reader facility.

The Internal Reader Facility

An internal reader job stream is identified to JES2 by the fact that an output data set specifying a special user writer (INTRDR) has been allocated dynamically or by means of SYSOUT=(x,INTRDR) coded on a DD card. JES2 recognizes such data sets and places them in the input stream, thus allowing jobs and system tasks to enter jobs in the input stream.

A job entered through an internal reader begins with a //JOB statement and ends with the next //JOB statement, a /*EOF statement, or the closing of the internal reader data set. Abnormal closing or closing after a WRITE error causes deletion of the last job. A /*DEL statement may be used to explicitly delete the last job.

The class to which the internal reader data set is allocated (for example, class X if `SYSOUT=(X,INTRDR)` is specified) becomes the message class for the submitted job unless the `JOB` statement contains a `MSGCLASS` parameter. If the internal reader data set is dynamically allocated without a class specified, the message class of the submitting job or TSO user is used. Two exceptions to this are time-sharing logons and started tasks. These are assigned the `TSUMCLASS` and `STCMCLASS` JES2 initialization parameter values. The `DEST` parameter, if specified for the internal reader allocation, becomes the default print data destination for all jobs submitted through that internal reader.

JES2 provides the capability of receiving multiple jobs simultaneously through the internal reader facility. The system uses it to pass started tasks, TSO logon, and TSO background jobs to JES2. Also, job streams can be read from tape and disk (any QSAM-supported device) and submitted through the internal reader using the RDR procedure, and any job executed in MVS can use the internal reader facility to pass a job stream to JES2.

Controlling the Internal Reader Facility: Although the internal reader facility appears to JES2 as multiple input devices (maximum specified in the `&NUMINRS` parameter during JES2 initialization), the facility is controlled as one entity. The number (`&NUMINRS`) of internal readers is the number of jobs that can be received simultaneously through this facility.

Characteristics of the facility are specified during JES2 initialization as subparameters of the `INTRDR` parameter.

Using the RDR Procedure: The procedure supplied by IBM for using the internal reader facility to read jobs from tape or disk is named RDR. The starter system provides the RDR procedure in `SYS1.PROCLIB` to allow the operator to start JES2 generation (see Figure 4-1). Basically the same procedure can be used to read a jobstream from any QSAM-supported device. The operator uses the RDR procedure as follows:

- To read a job stream from the second file of a tape named `JOBTAP` on device 180:
`RDR,180,JOBTAP,LABEL=2,DSN=JOBS`
- To read a job stream from a cataloged library of jobs:
`RDR,3330,DSN=PRODUCTN(PAYROLL)`
- To read a job stream starting with a specific job on a tape named `JOBTAP`, the operator must submit a job to JES2:

```
//READJOBx JOB      ...
//                EXEC  RDR
//IEFRDER  DD      DSN=JOBS,VOL=SER=JOBTAP,
//                UNIT=3400,DISP=OLD
//SYSIN    DD      *
//                EDIT  START=JOBx
/*
```

```
//IEFPROC  EXEC  PGM = IEBEDIT
//SYSUT1   DD    DDNAME = IEFRDER
//IEFRDER  DD    DSN = NULLFILE,DISP = OLD
//SYSUT2   DD    SYSOUT = (A,INTRDR)
//SYSPRINT DD    SYSOUT = A
//SYSIN    DD    DUMMY
```

Figure 4-1. The RDR Procedure

The system programmer can define internal readers on EXEC statements in such a manner that they are started conditionally. This allows the formation of a set of dependent jobs that can be executed without operator intervention. For example:

- To submit JOBB and JOBC if the first four steps of JOBA are completed successfully.

```
//JOBA      JOB      ...
//STEP1     EXEC     ...
--
--
--
--
//STEP5     EXEC     RDR,COND=(8,LE)
//IEFRDER   DD       DSN=JOBS(JOBB),DISP=SHR
//          DD       DSN=JOBS(JOBC),DISP=SHR
```

- To submit JOBB if JOBA terminates normally, JOBC if it terminates abnormally, and JOBD in either case.

```
//JOBA      JOB      ...
//STEP1     EXEC     ...
--
--
--
//STEPN     EXEC     RDR
//IEFRDER   DD       DSN=JOBS(JOBB),DISP=SHR
//STEPN1    EXEC     RDR,COND=ONLY
//IEFRDER   DD       DSN=JOBS(JOBC),DISP=SHR
//STEPN2    EXEC     RDR,COND=EVEN
//IEFRDER   DD       DSN=JOBS(JOBD),DISP=SHR
```

User-written procedures and programs can further exploit the internal reader facility to select particular jobs, to generate special job streams, and to allow operator submission of production job streams.

Controlling Job Queuing

In JES2, jobs are queued by priority sequence and, when ready for execution, within individual classes. The system programmer can control job selection through determining job class and priority.

The JES2 Queue

A job received by JES2 is queued in job priority order on the JES2 queue residing in the JES2 address space in main storage. A job is considered received by JES2 when it has been totally read in and the JES2 control blocks placed on the spool.

The queue entry for each job contains the job name, job priority, a flag to indicate the job is held, pointers to JES2 control blocks on the spool, and the JES2 process (JCL conversion, execution, output processing, purging) for which the job is next eligible. Jobs are selected in priority order for each JES2 process. Logically, the one JES2 job queue has queues for each process, plus 38 (one for each class) within the execution process.

A job which is held is not removed from the queue; instead it is made ineligible to be selected for any JES2 processing. A job can be held at any time. Thus a job in execution that is held by the operator, is not eligible for output processing until released. The

holding of a job that is read for execution can occur by job, by class, or by holding all jobs.

Job Class

There are 38 classes of jobs possible under JES2. Two are used by the system: STC for started task control, and TSU for time-sharing logon. The other 36 classes, A-Z and 0-9, are for normal jobs and can be used to help control the job mix.

The job class is specified on the JOB statement (CLASS=jobclass). If not specified, a class based on the particular device through which the job is entered into JES2 is assigned. All jobs entered through the internal reader facility are considered to be entered through a device described by the INTRDR parameter.

There are no absolute rules for assigning job classes, and some experimentation is necessary. Generally, jobs of similar characteristics and identical processing requirements should be assigned to the same class. For example, if several jobs are time-dependent and are executed in nonpageable dynamic storage, it may not be desirable to tie up all of nonpageable dynamic storage by having these jobs running concurrently. These jobs may all be assigned to class B (or C or D—class names have no inherent meaning); then, if only one initiator is started that can handle class B jobs, there will never be more than one of these jobs in execution at once.

Suppose the following assignments are made:

Class B = jobs that are time dependent
Class C = jobs with high CPU requirements
Class D = jobs with high I/O requirements

The system programmer can specify initiator parameters such as:

I1 CLASS=BCD
I2 CLASS=CDB
I3 CLASS=DCB

If the three initiators are processing jobs with the same priority and all necessary resources (for example, I/O devices and data sets) are available, then three jobs, one from each of the three different classes, run concurrently. If a job within one of the classes has higher priority than the others in the class, it will be initiated first.

During JES2 initialization, the system programmer can assign job characteristics to jobs queued in each class. Characteristics that can be assigned are:

- A default performance group for each job.
- JCL conversion parameters.
- Whether a JES2 job log is to be produced for jobs in this class. The JES2 job log is a list of all messages and replies issued by, or on behalf of, a job.
- Whether a system journal is to be saved for jobs in this class. If it is not saved, the overhead is avoided but the job may not be automatically restarted in case of job failure or system restart.
- Whether this class is reserved for the execution batch scheduling facility. (See "Execution Batch Scheduling".)
- Whether output is suppressed for jobs in this class (for example, started tasks).
- The procedure library (PROCnn) definition.
- SMF options.
- Whether the jobs in this class are to be held.

- Whether the jobs in this class are to be copied to message class output or converted but not executed.
- Whether the job is restartable, in the event of a JES2 warm start.

The system programmer should assign separate job classes to jobs that are to be assigned separate characteristics, and to jobs that have different execution characteristics such as:

- Rate of CPU to I/O processing
- Use of special devices
- Number of devices used
- Use of real storage

JES2 Job Scheduling Priority

Job priority is determined through use of the `/*PRIORITY` statement, the `PRTY` keyword on the `JOB` statement, or by an algorithm that uses programmer-supplied or initialization job characteristic data.

In addition an increment can be added to the priority and a priority limit enforced, depending on the device through which the job entered JES2. Those parameters are associated with the input device during JES2 initialization.

Specifying Priority: Priority may be specified on the `/*PRIORITY` statement. If specified, it must immediately precede the `JOB` statement, or the input stream is flushed until another `JOB` or `PRIORITY` statement is found. Priority may also be specified through use of the `PRTY` keyword in the `JOB` statement.

Calculating Priority: When the scheduling priority is not specified on the `/*PRIORITY` statement or the `JOB` statement, priority is calculated using estimated execution time and the estimated number of output lines and cards. These values can be supplied through the `JOBPARM` statement, the accounting information on the `JOB` card, or the JES2 initialization parameters (`&ESTIME`, `&ESTLNCT`, `&ESTPUN`).

To calculate priority, these estimates are used in conjunction with four JES2 initialization parameters, each of which is supplied (or assumed by default) as a table of values. These are the `&XLIN(m)`, `&RPRT(n)`, `&RPRI(n)`, `&XPRI(m)` parameters. The default values for these tables are used for the examples of priority calculation that follow. The default values are:

For <code>&XLIN</code> :	<code>&XLIN(m)</code>	<code>m</code>
(<code>&XLIN</code> values are estimates of the number of output lines and cards for a job.)	2000	1
	5000	2
	15000	3
	$2^{2^4}-1$	4
	⋮	⋮
	$2^{2^4}-1$	9

For <code>&RPRT</code> :	<code>&RPRT(n)</code>	<code>n</code>
(<code>&RPRT</code> values are estimates of the number of minutes a job will take to run.)	2	1
	5	2
	15	3
	$(2^{2^4}-1)/60$	4
	⋮	⋮
	$(2^{2^4}-1)/60$	9

For both &XPRI and &RPRI:	m or n	&XPRI(m) or &RPRI(n)
(The <i>m</i> and <i>n</i> values are determined from the &XLIN and &RPRT tables. Note that the &XPRI and &RPRI tables can have two different sets of values. The values described here are the default values.)	1	9
	2	8
	3	7
	⋮	⋮
	9	1

Priority is calculated by using the values specified for &XLIN and &RPRT to determine *m* and *n* from the table. These *m* and *n* values are then used with the &XPRI and &XRPRI tables to determine values for &XPRI(*m*) and &RPRI(*n*). Priority is then calculated as:

$$\text{PRIORITY} = [\&XPRI(m) + \&RPRI(n)] \div 2$$

The following examples illustrate the use of the various parameters in this calculation.

Example 1. The programmer estimates 2000 lines plus cards, 2 minutes execution time.

From &XLIN, 2000 lines implies *m*=1
 From &RPRT, 2 minutes implies *n*=1
 From &XPRI, *m*=1 implies &XPRI=9
 From &RPRI, *n*=1 implies &RPRI=9

Therefore PRIORITY = (9 + 9) ÷ 2 = 9

Example 2. The programmer estimates 4000 lines plus cards, 15 minutes execution time.

From &XLIN, 4000 lines implies *m*=2
 From &RPRT, 15 minutes implies *n*=3
 From &XPRI, *m*=2 implies &XPRI=8
 From &RPRI, *n*=3 implies &RPRI=7

Therefore PRIORITY = (8 + 7) ÷ 2 = 7. (The fraction is ignored; only the integer value is used.)

Example 3. The programmer estimates 15,000 lines plus cards, 10 minutes execution time.

From &XLIN, 15,000 lines implies *m*=3
 From &RPRT, 10 minutes implies *n*=3
 From &XPRI, *m*=3 implies &XPRI=7
 From &RPRI, *n*=3 implies &RPRI=7

Therefore PRIORITY = (7 + 7) ÷ 2 = 7

If priority is computed for the job during input, it is recomputed for output. Output priority is based on the count of lines and cards (&XLIN) actually produced during job execution. The execution time parameter &RPRT is ignored.

The system programmer, by specifying other values for the tables during JES2 initialization, can more closely control priority specification. Values specified on the JOBPARM statement supercede those in the account field of the JOB statement. During JES2 initialization, the &RJOB OPT parameter can be specified to ignore the account field on the JOB card.

Priority Aging

The priority of a job can be increased as a function of the length of time that it has been in the system. The **&PRIHIGH**, **&PRILOW**, and **&PRIRATE** JES2 initialization parameters specify respectively a limit above which there is no incrementing, a limit below which there is no incrementing, and an integer representing the number of times that the priority is incremented in a 24-hour period and subject to the upper limit. The default of 0 for the **&PRIRATE** parameter specifies no priority aging.

The **&PRIRATE** parameter specifies whether the feature is used and, if so, how many times in a 24-hour period the priority is incremented. For example, **&PRIRATE=48** specifies a priority increment of one unit every 30 minutes. The **&PRIHIGH** parameter specifies the upper limit; a priority lower than the value of the **&PRILOW** parameter specifies that the job is not subject to priority aging.

Scanning the JOB Statement Accounting Field

During JES2 initialization the **&RJOB OPT** parameter is specified to determine whether JES2 is to scan the accounting field of the JOB statement, and to set the conditions under which JCL errors detected by scanning cause job termination prior to JCL conversion. Figure 4-2 describes the **&RJOB OPT** options.

The account field is considered valid if its format is that specified for JES2. For a description of the JES2 format for the accounting field, see the accounting field parameter in *OS/VS2 JCL*.

The JCL scan is not exhaustive; only JOB, DD *, and DD DATA statements are scanned. Job termination on a JCL error at this point does not guarantee that all JCL errors have been found. If the job is not terminated on a JCL error at this point in the process, it can still fail during JCL conversion when all JCL is scanned.

Job Statement Accounting Field Scan Exit: A routine can be written that allows the installation to control a job by modifying data in the JES2 job control table (JCT) immediately following the scan of the user's JOB statement. Figure 4-3 shows selected fields from the JCT.

The name of the CSECT must be HASPRSCN and must replace the existing CSECT of that name in the HASJES20 load module. This routine receives control from JES2 with registers set as follows:

- R0 A binary number giving the length (in bytes) of the accounting field
- R1 Address of the accounting field from the JOB card
- R2 Address of the SMF job management record (as defined in the description of the MVS Common Exit Parameter Area, *OS/VS System Management Facilities*)
- R8 Base Register
- R10 Address of the (JES2) JCT
- R13 Save area (18 words)
- R14 Return address

&RJOB OPT	Scan Account Field	Terminate if Account Field Invalid	Terminate if JCL Invalid
0	Yes	Yes ¹	Yes
1	Yes	Yes ¹	No
2	Yes	No	Yes
3	Yes	No	No
4	No	-	Yes
5	No	-	No

¹ If these values are indicated, the first two subfields of the account field (pano and room) are required.

Figure 4-2. Job Statement Accounting Field Scan Exit

Field name in JCT	Length (bytes)	Notes	Field
JCTSMFLG	1		SMF Flags:
	-		bit 0-1 Reserved
	1,2		2 If set, IEFUSO exit not taken
	-		3-4 Reserved
	1,2		5 If set, no Type 6 SMF records produced
	1,2		6 If set, IEFUJP exit not taken
	1,2		7 If set, no Type 26 SMF record produced
JCTJOBFL	1		Job Flags:
	-		bit 0 Background job
	-		1 TSO (foreground) job
	-		2 Started task
	1,2		3 No job journaling
	1,2		4 No output
	1,2,3		5 TYPRUN=SCAN
	2,3		6 TYPRUN=COPY
	1,2,8		7 Job restartable
JCTJBOPT	1		Job Options:
	-		bit 0 /*PRIORITY card was read, value in Priority field (JCTIPRIO)
	-		1 /*SETUP card was read
	1,2,4		2 TYPRUN=HOLD was specified
	1,2,6,8		3 No job log for this job
	1,2		4 Execution batch job
	-		5 This job was read through an internal reader
	-		6 The job was rerun
	-		7 Reserved
JCTJOBID	8	-	JES2 JOB identifier
JCTJNAME	8	3	Job name
JCTPNAME	20	3	Programmer name
JCTMCLAS	1	1,4	Message class
JCTJCLAS	1	1,4	Job class
JCTIPRIO	1	1,5	Priority
JCTROUTE	2	-	Route code of input device
JCTINDEV	8	-	Input device name
JCTACCTN	4	1,6	Account number (for HASP compatability)
JCTROOMN	4	1,6,8	Room number
JCTETIME	4	1,6,8	Estimated real time job will run
JCTESTLN	4	1,6,8	Estimated count of output lines (in thousands)
JCTESTPU	4	1,6,8	Estimated number of output cards punched
JCTFORMS	4	1,6,8	Job Forms
JCTCPYCT	1	1,6,8	Job copy count (binary)
JCTLINCT	1	1,6,8	Lines per page (binary)
JCTPROUT	2	1,7	Default print routing (binary)
JCTPUOUT	2	1,7	Default punch routing (binary)
			0 Any local device
			1-999 Remote devices
			1001-1999 Specific local devices
JCTPROCN	8	1,2,8	Procedure DD name

Notes:

1. Can be modified by installation routine.
2. Preset from \$x initialization parameter according to job class.
3. Preset from JOB statement.
4. From JOB statement, if specified; otherwise according to input device as established at JES2 initialization (for example, in READERnn).
5. Preset from /*PRIORITY statement or an "".
6. The HASPRSCN routine is used by JES2 to scan the account field of the JOB statement. If the HASPRSCN routine is replaced by an installation-written routine, the accounting field is empty.
7. Preset according to an input device initialization parameter (for example, READERnn). If not set at initialization, the job input source value (LOCAL or RMTnnn) is used. Can be modified by a ROUTE statement after the scan exit.
8. Can be modified by a JOBPARM statement after the scan exit.

Figure 4-3. Selected JES2 Job Control Table Fields

Registers 3-14 must be restored when control is returned to JES2. The save area addressed by R13 can be used to store registers. There are no return codes necessary.

Programming Notes: Parameters of the JOBPARM statement or ROUTE statement can override changes made with this routine. Otherwise the change is effective for the duration of the job.

Data placed in the user identification field of the SMF record at this time is available to the programmer at all SMF exits.

If system services that have implied waits (for example, a WTO command for the SMF WTM) are used by this routine, severe system degradation may occur.

Because this routine runs under the JES2 task, if abnormal termination occurs, JES2 must be restarted.

Controlling Conversion and Execution

The converter converts the JCL for a job, logon, or started task into internal text. The job is then available for execution, which occurs as soon as an initiator eligible to process the job is available.

JCL Conversion

Unless it is held, a job is eligible for JCL conversion as soon as it is placed on the queue. The converter, invoked separately for each job, receives the converter parameters and a pointer to a procedure library from JES2.

Converter Parameters

If default values are not established by the initialization parameters &RDROPSU, &RDROPST, and &RDROPSL, the converter parameters are specified for each class on the CONVPARM subparameter of the &STC, &TSU, or &X parameters during JES2 initialization. Converter parameters specify default values such as execution time estimate and JCL and allocation MSGLEVEL options. Command disposition and authority and the bypass label options are specified. The specific parameters are described in Chapter 3.

Procedure Library Selection

The JES2 Procedure is located in SYS1.PROCLIB. It defines job-related procedure libraries such as:

```
//PROC00 DD ...  
//PROC01 DD ...  
.  
.  
.  
//PROCnn DD ...  
//anyname DD ...
```

The programmer can specify any of the libraries included in the JES2 procedure on the JOBPARM statement by specifying the library data definition name. If multiple data sets are required they must be specified as concatenations in the JES2 Cataloged Procedure.

If there is no procedure specification on the JOBPARM statement, class-related initialization parameters can specify the library as PROCnn. If the procedure is not specified, or specified, but not found, PROC00 is used.

Execution Control

Execution is controlled by controlling the initiators and the jobs on the queue (see “Controlling Job Queuing”), as well as by monitoring the job and issuing commands.

JES2 associates one logical initiator residing in JES2 with each system initiator interfacing with JES2. The maximum number of logical initiators is specified during JES2 initialization (&MAXPART parameter). The number of active logical initiators, subject to the maximum, is controlled by the operator (\$S Innnn). The operator can also associate with logical initiators the order in which the classes are selected by JES2.

Classes are associated with each initiator during JES2 initialization or dynamically by the operator. During execution, the initiator selects non-held jobs in priority order within their class, and the non-held class in the order specified for that initiator. That is, the lowest priority job in the first non-empty class is selected ahead of the highest priority job of the next class—assuming neither job nor class is held.

The Initiator Cataloged Procedure

One initiator cataloged procedure (INIT) must be contained in SYS1.PROCLIB for use by JES2 in creating job address spaces into which a system initiator is initialized. JES2 uses the START command (system command) to create one system initiator for each active JES2 logical initiator. The number of active initiators must be controlled by starting and stopping JES2 logical initiators.

The standard initiator cataloged procedure supplied by IBM is named INIT. The procedure is:

```
&//IEFPROC&EXEC&PGM=IEFIIC,DPRTY=12
```

Job Monitoring

A job can be monitored by elapsed (wall clock) time, execution time, and by output in terms of lines and cards.

During JES2 initialization, the &TIMEOPT parameter can be specified to cause JES2 to write a message to the operator when the elapsed time specified on the JOBPARM statement is exceeded, and an additional message at each interval specified by the &TIMEXS parameter. The system programmer can use the SMF accounting exit to enforce these values, if the time was placed in the SMF user ID field during the JCL scan exit. The SMF exits are described in *OS/VS2 System Programming Library: System Management Facilities (SMF)*.

Execution time can be specified on either the EXEC statement or the JOB statement, or in the converter (CONVPARM) parameters. If the time is exceeded, the SMF exit is entered and the job can be canceled or continued.

The &OUTXS JES2 initialization parameter is used to specify the total number of printed lines and punched cards that a job can produce before action is taken by JES2. The &OUTPOPT parameter specifies the action that is taken. The job can be allowed to continue after a message is written to the operator, or the job can be canceled with or without a dump.

The installation can specify SMF output limiting by class, with the &x, &STC, and &TSU JES2 initialization parameters. Output (OUTLIM DD) can be monitored for each data set by SMF.

Entering Commands in the Job Stream

JES2 commands and standard system commands are accepted at different points in a job stream, with different types of control. A job stream is defined as the set of jobs submitted between the physical start of a reader and physical end-of-file, or between the opening and closing of an internal reader data set. Refer to Figure 4-4 for a pictorial representation of the following paragraphs.

JES2 commands are accepted in the job stream only if they are in front of the first //JOB statement of a job stream. The commands that are accepted from any given device are controlled by a command authority associated with the device (\$T command). The command authority allows various combinations of display and system, job, or device control commands to be entered. JES2 commands are in the form /*\$command.

System commands in the form /*\$VS, 'systemcommand' are accepted in front of the JOB statement, subject to the same authority described for JES2 commands.

JES2 commands found in the job stream between the first JOB statement and EOF are ignored.

System commands (//system cmd) that appear in the job stream after the first JOB statement are executed in the converter. Whether they are issued is controlled by the converter using the converter parameters. System commands appearing before the first JOB statement are ignored.

Execution Batch Scheduling

Execution batch scheduling is an extension of normal job scheduling that may improve system performance. It is the process of gathering pseudo-jobs, called execution batch jobs, into a single input stream for processing by an execution batch processing program. The execution batch jobs are submitted to JES2 one at a time; they may have different input sources and different print and punch output routing. Execution batch scheduling collects these numerous related batch jobs into a single data stream and passes them as a SYSIN data set to the user-written execution batch processing program. This reduces the overhead associated with setting up for and processing numerous individual jobs or job steps. Another advantage is that individual accounting for all but type 4 and 5 records is available.

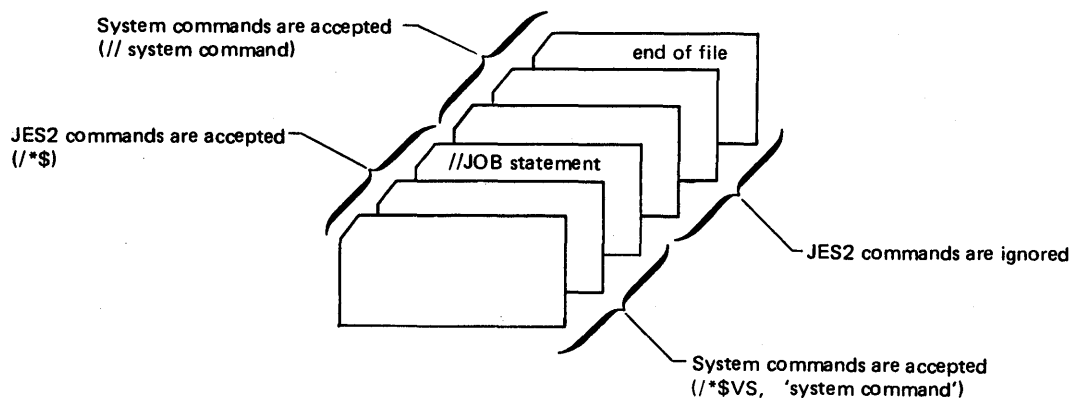


Figure 4-4. Entering Commands in the Job Stream

The processing programs to be used with the execution batch scheduling feature may cover a wide variety of application areas such as:

- Compile-and-go debugging compilers
- File inquiry programs
- Hardware or software system emulators

It is desirable that the program process jobs or transactions of relatively short duration. If not, the saving in job management overhead between successive jobs may not be a large enough percentage of total job execution time to justify use of this feature.

At JES2 initialization, the installation defines the job class or classes that are to be dedicated to execution batch scheduling. One class or group of classes is assigned to each type of execution batch processing program. Subsequently, the batch user identifies the program requested by the class stated on the JOB statement.

JES2 can support more than one execution batch processing program to process various kinds of batch jobs. Each execution batch processing program must be associated with at least one JES2 initiator. The system initiators request a job, and JES2 decides which job is to be processed.

To determine which jobs are to be processed by an execution batch processing program, JES2 recognizes jobs assigned to eligible classes. Instead of sending these jobs directly to an initiator, JES2 invokes an appropriate procedure from PROCLIB to initiate the execution batch processing program. The job as submitted is now considered part of the input data of the execution batch processing program.

For example, consider an order entry system that requires an inventory update and an invoice for each order. With standard processing, the normal procedure would be to batch all orders and submit them as a data stream at the end of the day to an order entry system.

However, this causes delay. Alternatively, the installation can periodically batch together orders received during a certain time period and run the job several times a day. By using the execution batch scheduling facility, orders can be processed as if the order processing program were scheduled for every order, but without the overhead of scheduling the order program for the runs.

The order entry program would become an execution batch processing program. The orders themselves would be submitted as execution batch jobs by taking the order data that would have been submitted in batch, and putting a system JOB statement in front of it. In an order entry program accustomed to reading batch jobs at the end of the day, the only programming changes would be (1) to use the ddname SYSIN for the input stream (this may be accomplished by JCL in PROCLIB), (2) to recognize the null statement as an order separator or establish other defined terminators, and (3) to ignore all other JCL (//) cards. The program would have to print all related information for each order before processing the next order, to distinguish one from another. JES2 automatically schedules the order entry program when it is needed and concatenates all orders into the input stream data regardless of where they originate.

***Submitting Input to an
Execution Batch
Processing Program***

A representative input stream follows:

```
// JOB  
JES2 control statements  
input
```

To submit data to an execution batch processing program, follow these rules:

- The first statement of each job must be a standard JOB statement that includes a CLASS=job class parameter. The job class identifies which program is to receive the input. The installation associates job classes with an execution batch facility by means of the procedure library. It associates job classes with initiators at initialization. The accounting field is interpreted by JES2 as it is for normal jobs.
- All JES2 control statements are effective with batching jobs except /*OUTPUT, which is ignored.
- No other JCL is used. All other statements are input to the execution batch processing program. These can be read as if they had been placed in a DD DATA data set and the execution batch program had been invoked by standard JCL. If the execution batch program requires it, each transaction can be terminated by a statement with \$\$ in columns 1 and 2.

In the order entry system example mentioned earlier, code the following:

```
//JOBxx      JOB          (INVO1,667),CLASS=X
/*ROUTE     PRINT        RMT47
order 1
order 2
```

The /*ROUTE statement causes the invoice to be printed at the remote location.

Execution Batch Scheduling Operations

Special actions take place when JES2 recognizes input for an execution batch program. If the execution batch program is not already active, JES2 submits an internal job which uses JCL from SYS1.PROCLIB to invoke the execution batch processing program when an initiator capable of processing it becomes available. JES2 control cards are converted to JCL comment statements. The entire input, plus a JCL null statement added by JES2, is allocated to the execution batch processing program as an input data set with the ddname of SYSIN.

If the execution batch program is already active and simply waiting for another job, JES2 makes the input data set allocation as above, and processing begins immediately without any use of job management.

The end of input can be detected by the execution batch program when it reads the JCL null statement added by JES2. After writing any remaining SYSOUT data for the completed job, the execution batch program attempts to read ahead in its input file for another transaction. JES2 detects this condition, temporarily forces the execution batch program into a wait state, and performs job termination actions for the execution batch job (flushes output buffers, releases input spool space, queues the job for printing, and so forth). The execution batch program remains active in the MVS address space.

When an execution batch program is waiting, JES2 job selection is altered. Instead of scanning for all classes eligible for execution in that address space, JES2 first tries to start an execution batch job which may be processed by that execution batch program. If successful, processing can begin immediately.

If no jobs of the same execution batch class are available for execution, all other job classes of the address space are scanned in order. If a job is found, JES2 internally cancels the execution batch processing program and normal scheduling, using job management, takes place.

If no jobs of the other classes are found, the address space and execution batch processing program remain idle, awaiting availability of a job in any of its classes. If a job becomes

available in the class of the execution batch program still in the address space, processing begins immediately.

If an execution batch program ends (ABEND or normal return to MVS), JES2 detects this as a nonbatch termination in the address space. Job management is used to reinvoke the execution batch program when another job for its class is selected.

The operator command \$P I or \$P In causes JES2 to cancel an execution batch processing program when it becomes idle and delete the address space.

In summary, an execution batch processing program must have certain characteristics:

- It must read all user input from a single sequential data set.
- It must recognize a standard OS JOB statement, or its own control statement, to determine the beginning of a job.
- It must recognize a standard OS NULL JCL statement (// followed by 70 blanks), or its own control statement, to determine the end of a job.
- To ensure system integrity, it should *not* use dynamic allocation of SYSOUT data sets.

The execution batch processing program receives an end-of-file condition when a card with \$\$ in columns 1 and 2 is read while processing a job. The program may continue to the next logical subfile by simply resetting appropriate bits in I/O control blocks and continuing reading, or by closing and reopening the data set to continue reading starting with the card following the \$\$ card.

Preparing for Execution Batch Scheduling

The batching feature is activated in JES2 by setting the &XBATCH=YES parameter during JES2 initialization. Job classes are reserved for execution batch jobs with the \$\$x initialization parameter. The &XBATCHN JES2 initialization parameter may be set to define the first five characters of the procedure name that contains the JCL necessary to execute an execution batch program. (See Chapter 3 for a description of this parameter.)

Each batch class should be associated with one execution batch program. Each batch class should be made eligible for execution in the MVS address space by setting the Innnn initialization parameter or by using the \$T In operator command.

For each combination of batch class and initiator, there must be a procedure in SYS1.PROCLIB named *nnnnnid*, where:

- *nnnnn* are the five characters assigned to &XBATCHN.
- *c* is the particular batch job class set in \$\$x.
- *id* is the 1- or 2-character initiator identification, corresponding to *nnnn* of the Innnn parameter.

These procedures call the execution batch program for each class and define all data sets other than the user input data set.

The procedures may be single step, or may have preliminary steps before the single step that invokes the execution batch program (step name GO). The execution batch program invoked by this step must read its input from a SYSIN, or the procedure must refer to DDNAME=SYSIN on a DD statement used for input by the processing program.

If a given batch class is eligible (the Innnn initialization parameter or \$T In operator command defines eligible classes) for execution by more than one initiator, the requirement for a separate procedure name for each address space/class combination may be satisfied by alias names of a single procedure or by separate procedures that specify different work fields.

The following example shows the internal job that JES2 generates to initially load a program to process batch class X jobs for Init=3, assuming the default setting for \$XBATCHN.

```
//$$$$X3 JOB          1,SYS,MSGLEVEL=1
//FAKE EXEC          $$$$$X3
//GO.SYSIN DD        DATA,DCB=BUFNO=1
//
```

The following is an example of a procedure that might be used for a simple file inquiry program that reads inquiry input from SYSIN, checks a file, and prints responses to SYSPRINT.

```
//$$$$X3 PROC
//GO EXEC          PGM=FINDPART
//SYSPRINT DD      SYSOUT=A
//PARTFILE DD      DSN=PARTFILE.MASTER,DISP=SHR
//SYSUDUMP DD      SYSOUT=A
```

The following JCL is for the order entry system example.

```
//$$$$X3 PROC
//MDSE EXEC        PGM=ORDERIN
//MESSAGE DD       SYSOUT=M
//INVOICE DD       SYSOUT=(P,,INVC)
//INVTRY DD        DSN=MSTRINVT,DISP=SHR
//ORDERS DD        DSN=ORDERS,DISP=MOD
```

- //MESSAGE: The installation might identify class M as a punch class. This will allow the submitter of the execution batch job to route the invoices and messages separately, as shown in the example in “Submitting Input to an Execution Batch Processing Program”.
- //INVOICE: Defines the specially prepared output.
- //INVTRY: Uses a master inventory list as a base; it is updated as the orders are received.
- //ORDERS: Accumulates the day’s orders. ORDERS has a disposition of MOD because the execution batch processing program is periodically started and stopped during the day.
- SYSOUT data sets: The messages and invoices.
- SYSIN data sets: The DD DATA input is every execution batch job that is processed by the execution batch processing program.

Controlling System Output

JES2 provides:

- Queuing levels beyond the simple output class queuing provided by the output writer.
- The ability to specify print train and either carriage tape name or forms control buffers for sysout directed to 3211 and 1403 printers plus support of the 3525 print and interpret features for sysout data sets.
- The ability to specify all options and features of the 3800 Printing Subsystem for sysout data sets directed to the 3800.
- Features that minimize operator interaction because of forms, carriage tape, and print train loading for impact printers, and forms, overlay frames, and burster loading for the 3800, a nonimpact printer.

- An external writer facility that, although it can be used for writing any sysout data, is specifically intended for writing to devices other than printers and punches and for controlling all output written by installation-written writers.

Queuing Output

The job output elements (JOEs) are created during output processing, or during execution in the case of spinoff, by JES2. Each JOE represents a unit of work to JES2, and is placed in a job output table (JOT) in order of output priority. If the priority was calculated originally, it has now been recalculated with the actual number of lines and cards. See "Calculating Priority."

The JES2 print/punch processor and the external writer can select only data sets for which JOEs have been constructed. Varying the number of JOEs, (&NUMJOES JES2 initialization parameter) influences the way output is processed. By specifying a large number of JOEs, the print/punch processors are given a large number of output data sets from which to choose. This minimizes the setup changes in JES2-controlled printers and punches by providing a series of data sets of the same class for the external writers. However, a given data set may wait a long time for a printer with the specified setup, for an available device destination, or for an available external writer to dequeue its class. This long wait may fill spool space, since most of a job's output-related spool space is freed only when all output data sets have been processed. Specifying many JOEs improves utilization of output devices but slows throughput for a specific job.

Specifying few JOEs reduces the number of jobs with output eligible for printing while processing the entire job output more nearly together. This specification may minimize the turnaround of a particular job at the expense of operational efficiency.

A job output element that does not yet describe a unit of work is said to be "free." The &MINJOES parameter specifies the number of JOEs that must be left to be used when the \$I command interrupts an output data set or when a printer is started. When the building of JOEs for a job would drop the number available below the specified minimum, the job or spinoff data is forced to wait until JOEs are available.

JES2 queues output data by combinations of data set characteristics such as output class, forms, print train, forms control buffer name, forms overlay frame, and burst specification. (Data sets are also queued by installation writer name and by destination, as discussed in "External Writers" below.) These characteristics are obtained from the SYSOUT DD STATEMENT or the JES2 OUTPUT statement. With the exception of held data sets and spinoff data sets, the output of a job, started task, or time-sharing user that has identical characteristics is queued together in a data set group pointed to by a job output element (JOE). (This queuing can be altered by the demand setup option.) Each held and spinoff data set is queued separately and constitutes a "group" of one data set. Each data set group is considered a processing entity with a set of processing characteristics. JES2 selects work by data set groups and, if the separator option is specified, delimits each group with separator pages or cards.

Figure 4-5 represents how one JOE can represent one of several SYSOUT data sets.

JOEs built for job-related output are duplicated according to the number of job copies requested on the /*JOBPARM statement. This allows the number of copies being processed for any job to be governed by the devices available for output.

1 - SYSOUT=(A,,4PLY),UCS=PN	
2 - SYSOUT=C,UCS=PN	Total of seven JOEs
3 - SYSOUT=A	built
4 - SYSOUT=B	
5 - SYSOUT=A,FLASH=FL01	
5 - SYSOUT=A,FLASH=FL01,MODIFY=CM03	
6 - SYSOUT=C,FCB=STD3,UCS=GF10	
6 - SYSOUT=C,CHARS=(GF10,FM10),FCB=STD3	
7 - SYSOUT=C,CHARS=(GF10,FM10),FCB=STD3,UCS=PN	
3 - SYSOUT=A	

1 - SYSOUT=A	
1 - SYSOUT=A	Total of three JOEs
.	built
.	
2 - SYSOUT=B	
1 - SYSOUT=A	
2 - SYSOUT=B	
.	
.	
3 - SYSOUT=(A,,2PLY),FCB=8LPI	
.	
.	
1 - SYSOUT=A	

Figure 4-5. Relationship of SYSOUT Specification to Number of Job Output Elements

Output Class Assignment

Output from a problem program is assigned to an output class that is processed by JES2. A maximum of 36 sysout classes can be named by specifying SYSOUT=x on the DD statement, where x is any single letter (A-Z) or digit (0-9). The names have no inherent meaning; they are simply used to group output of similar characteristics. During JES2 initialization, the fact that a class is designated as containing print or punch data is used for limiting output and job accounting only and has no bearing on the actual device to which the class is assigned.

JES2 print/punch processors and external writers are assigned to process only designated classes of output. These classes can initially be assigned to JES2 devices during JES2 initialization, to external writers in the external writer cataloged procedure, or as parameters of the JES2 set (\$T) command or system START command, respectively.

If output is assigned to a class for which no writer is started, it remains on the queue indefinitely.

The system programmer should assign output classes in a manner that distinguishes types of output and results in the most efficient use of devices. JES2 automatically balances output scheduling which makes the assignment of classes less important than in MVT. However, classes should be assigned with the following characteristics:

- Data to be processed by standard JES2 writers should be distinguished from that to be processed by external writers.
- Data placed on different devices and data placed on similar devices but with different characteristics should be in separate classes. It is not necessary, however, to use classes to separate data with different punch interpretation UCS and FCB requirements if the data is processed by a JES2 writer, since JES2 handles these parameters automatically. Class should be separate if an external writer is used to print this data.

- Classes should be assigned to give different priority to different types of data such as that to be printed on a different work shift.
- Classes need not be specified to give priority to short data sets, since JES2 priority calculation can be used for that purpose.

System Message Classes

System messages generated during the execution of a program must also be routed to an output device; if messages must appear with their program output, they should be assigned to the same message class as the output. To guarantee that the messages and data appear together, all data sets for the job must be described to JES2 in a single job output element (JOE).

The user may also specify during JES2 initialization (by means of the &DMNDSET parameter) that all job output of the same class and for the same destination as its system messages (MSGCLASS), JCL statement images, and job log (if any) be placed in a single JOE. This keeps the data sets together on output listings but can cause operational inefficiencies (see "Demand Setup" below).

The message class is assigned as a parameter of the JOB statement. Its format is MSGCLASS=x, where x is any single letter (A-Z) or digit (0-9). If no message class is specified, the class specified for TSUMCLAS, STCMCLAS, or the device through which the job was read is used.

JES2 Output Selection

When assigning such things as priority, classes, and forms requirements for data sets, the system programmer should balance the choices against the criteria used by JES2 to select the output data set to be processed.

Setup Characteristics

As established during JES2 initialization and altered by the operator, each JES2 controlled printer and punch possesses setup characteristics and a setup mode—manual or automatic. Setup characteristics for impact printers (for example, the 1403 and 3211) and punches are class, destination, forms, print train, and either carriage control tape or forms control buffer. (For a 1403 printer, JES2 uses the FCB parameter as the carriage control tape name. The operator is requested to mount carriage tapes by this name in a manner similar to mounting forms.) For the 3800 printer, setup characteristics are class, destination, forms, forms overlay frame, and burster specification.

Setup characteristics determine the data set groups that are eligible for processing on this device. Each locally attached printer and punch possesses either a destination of LOCAL or a specific device-name destination. If the device possesses a specific destination name, it is eligible to process only data sets specifically routed to it by JCL or the operator. Each remotely attached printer and punch possesses a destination that is the name of the work station to which it is attached or the installation-assigned name of a remote pool of devices. Remote devices are eligible to receive only that output directed to them by JCL or the operator.

Setup mode determines the manner in which data sets are selected, automatically or manually.

Automatic Mode: Automatic mode is specified either at JES2 initialization (PRINTERnn parameter) or by the operator (\$T F=AUTOM command). In automatic mode, JES2 issues a setup message to request that the operator change the setup for the device when all data sets with setup characteristics matching the device have been selected.

When a device is available for output, JES2 selects job output elements according to the following:

1. The setup priority
 - First choice is between JOEs with setup requirements exactly matching those currently on the device.
 - Second choice is a JOE specifying a setup not currently being processed by any output device.
 - Third choice is a JOE specifying the standard forms setup as described by the &STDFORM initialization parameter.
 - Fourth choice is a JOE specifying a setup currently being used by another device, provided that that device is not set up by the operator.
2. When the setup has been selected, the first class specified for this device by the operator, or during JES2 initialization, is chosen.
3. When setup and class are selected, the highest output priority JOE with these characteristics is chosen.

Some implications of the setup algorithm are:

- If an output device has been set up explicitly by the operator (\$T command), JES2 does not set up another device to process data specifying that setup—unless the explicit setup is the same as that for standard forms. This is true no matter how many devices are idle. The operator, however, may set up another device to handle the output.
- Output matching an existing device setup and class is processed before output with no active setup, regardless of relative priority of the jobs producing the output.
- Output with setup requirements not loaded on any device is preferred over output with the setup loaded on a device that is busy.
- Installations should ensure that class and setup conflicts do not cause data to be overlooked. Commands are provided to determine output backlog.

Manual Mode: In manual setup mode (operator controlled), only data set groups with characteristics matching the setup of the device are selected. Manual mode printers do not request a new setup when there is no more work in the queue. The printer becomes idle.

Demand Setup

For those installations wanting data sets that have the same SYSOUT class as the job message class to appear together on the output listing, regardless of setup requirements, a demand setup option (&DMNDSET=YES) can be specified during JES2 initialization. The output data sets of the job, possibly with several different setup requirements, are then placed in the same data set group. The message data set is the first one in the group, and its characteristics are used for scheduling the entire group.

The operator is requested by JES2 to set up the device as different setup requirements become necessary. Responding to demand setup requests is identical to responding to automatic setup requests.

Assumed Data Set Characteristics

Characteristics are assumed for any data set if they are not specified on the SYSOUT DD statement or the JES2 /*OUTPUT statement. Any FCB or UCS image that is specified as the default image by the installation is used to print any data set that does not specify an FCB or UCS parameter. JES2 uses the name **** when requesting from the operator a default FCB or UCS image. The operator satisfies this request by mounting any image specified as a default. If one or more of the parameters (FCB,UCS, form) is not specified, then any default image satisfies it.

The form used for all data sets not specifying a form is identified during JES2 initialization (&STDFORM). This is the standard form for both printers and punches.

Operation for Printers

An installation generally has one or more printers (and/or punches) in manual setup (operator-controlled) mode for processing output that requires the most common combination (standard setup) of form, print train, and carriage control (and forms overlay and burster setting for the 3800 printer). The remaining printers are in automatic mode. Initially each printer is assigned setup characteristics and a set of output classes from which to select data sets.

For each printer, data set groups are dequeued that have characteristics matching the printer setup characteristics. As automatic-mode printers exhaust the queue of data sets specifying their current setup, a data set group with a different set of characteristics is chosen, and the operator is notified (message HASP190) to change the setup.

An operator can respond to a request for a new setup change from a device in automatic mode by doing one of the following:

- Execute the request and then issue the \$\$ command to the device.
- Allow the use of the setup only for the data set group that requested it, by issuing the \$P command, followed by the \$\$ command. The \$P command causes the device to become idle after printing the current data set group.
- Force an alternate setup on this data set group by issuing the \$T command, followed by the \$\$ command. The device must be set up, however, and the \$T and \$\$ commands must be repeated for each data set in the group. Header and trailer pages are considered data sets for this sequence.
- Cause the selection of an alternate data set group by holding (\$H command) the job and then issuing the \$I or \$E command, which causes the data set group to be requeued in a held state. The held group must be released later by the operator.
- Delete the data set group by issuing the \$C command to the device. Another data set group is then selected for the setup on this device, or another setup is requested.

The operator can also change characteristics of a device in manual mode or change the mode of the device if the device is idle.

Output Routing

A user can route output to a specific local or remote device, to a remote job entry station, or to a pool of remote job entry stations. The user can route a specific data set by means of the DEST parameter on the DD statement, a specific data set or group of data sets by means of the /*OUTPUT statement, or the entire print/punch output for the job by means of the /*ROUTE statement. DEST cannot be used to route output for a specific device.

If the destination for a data set is specifically stated on the /*OUTPUT statement, or by the DEST parameter, it is used. For data sets with no destination specified, the destination on the /*ROUTE statement or a default destination is used. The default print and punch destination may be specified on the reader from which the job was received. If not, the default destination becomes the location (LOCAL or RMTnnn) from which the job was received.

The system programmer may specify a destination number (printer or punch) for each local and remote device and for each remote station during JES2 initialization. If a destination number is specified for any device, that device is eligible to receive only data which is specifically routed to it.

Destination names are of the form PRINTER n or PRINTR nn , PUNCH n , RMT nn , or LOCAL. LOCAL indicates any device attached by a channel to the CPU. The n or nn is a numeric destination ID assigned to the device or remote station during initialization. The form PRINTER n must be used if the installation has fewer than ten printers; the form PRINTR nn must be used if ten or more printers are specified during JES2 initialization.

By assigning the same destination ID to a group of remote stations or a group of devices, the system programmer can create a remote pool or device pool.

Processing Held Data Sets

A data set is explicitly held by the HOLD parameter of a DD statement or by specifying HOLD during dynamic allocation or deallocation.

A data set can also be implicitly held if it is in a class that is held and the job's MSGCLASS is also a held class. Since for a data set to be implicitly held, both the class in which it is written and its MSGCLASS must be held classes (the \$\$x JES2 initialization parameter is used to specify held classes), a programmer can control the holding of data sets using only the MSGCLASS parameter.

For the job described in Figure 4-6, assume that output classes A and M are defined as held at JES2 initialization; then:

- Because MSGCLASS=A is specified, the SYSUT2 and SYSPRINT data will be held.
- SYSUDUMP will not be held.
- If the MSGCLASS were changed to C, none of the data would be held.
- If this JCL is submitted through TSO, it can be held with MSGCLASS=A. The same JCL can be submitted from an RJE terminal with MSGCLASS=C and the output will be printed at the RJE station.

A held data set is queued in a special queue. Job output elements are not built for a held data set.

Held data sets are released either from a time-sharing terminal or by the operator's output command (\$O). *Only held data sets can be retrieved with the TSO OUTPUT command.*

External Writers

After output is described by job output elements and queued in priority order in the job output table, the output can be written by a JES2 print/punch processor or an external writer. An external writer can be IBM-supplied external writer processor, or a user-written writer named on the SYSOUT DD statement. The operator starts an external writer in a private address space, and the data is written using QSAM.

For details on the external writer, see *OS/VS2 System Programming Library: Job Management*.

```
//TSOUSER  JOB      name,MSGLEVEL = 1,MSGCLASS = A
//STEP     EXEC     PGM = IEBGENER
//SYSPRINT DD      SYSOUT = A
//SYSUDUMP DD      SYSOUT = D
//SYSUT1   DD      DSN = USERA.DSN1.ASM,DISP = OLD
//SYSUT2   DD      SYSOUT = M,DCB = (RECFM = F,LRECL = 80,BLKSIZE = 80)
//SYSIN    DD      DUMMY
```

Figure 4-6. Sample JCL for TSO-Submitted Job

Writers

When SYSOUT data sets are to be written on 3540 diskettes, the 3540 diskette writer program must be used. See *OS/VS2 IBM 3540 Programmer's Reference* for details.

Separation

The JES2 writer writes separation records prior to writing the output of each job. These separation records make it easy to identify and separate the various job outputs that are written contiguously on the same printer or card punch device.

For data processed by a JES2 writer, the JES2 separator pages are written before and after the writing of the output represented by one JOE.

The JES2 Print Separator

JES2 START JOB and END JOB separator pages consist of one-half page of blocked letters specifying the job name, job ID and output class; plus a single line of information duplicated as specified by each installation. All alphanumeric and all national characters are represented in blocked letter format. (The user specifies the total number of lines on the separator page. If less than thirty lines are specified, no blocked letters will appear.) The operator may request separator lines or cards via issuing a \$T device, S=Y command. This function may be deleted by issuing a \$T device, S=N command. The default status is "S=Y" unless specified by an initialization option.

The duplicated information lines contain data such as:

- Output class
- Keyword START, CONT, or END
- Job ID (job number)
- Job name
- Programmer's name from JOB card
- Room number from JOB card
- Time this page was printed (hh.mm.ss AM/PM)
- Date this page was printed
- Device name
- System ID

The JES2 Punch Separator Card

Each job's punched output is optionally preceded by an identification card. To make the card easy to identify, it has an 11-punch and a 12-punch in all 80 columns. To make the room number and job number easy to read, each digit is extended over ten columns. Alphabetic characters are converted to digits as follows:

Alphabetic Characters	Numeric Punch
A or J	1
B, K or S	2
C, L, or T	3
D, M, or U	4
E, N, or V	5
F, O, or W	6
G, P, or X	7
H, Q, or Y	8
I, R, or Z	9

Print Chain Alias for 1403 and 3211 Printers

The system assigns an alias for each installation-standard chain not actually defined on a given 1403 or 3211 printer. This alias provides JES2 with flexibility in scheduling printers for SYSOUT data sets. For example, a request for the 1403 TN train would be assigned the T11 train, if the data set were printed on a 3211. The assigned aliases, which follow the naming conventions currently used in SYS1.IMAGELIB, are:

Image	Alias
CS1AN	UCS1A11
UCS1HN	UCS1H11
UCS1PN	UCS1P11
UCS1TN	UCS1T11
UCS2A11	UCS2AN
UCS2H11	UCS2HN
UCS2P11	UCS2PN, UCS2RN, UCS2QN
UCS2T11	UCS2TN

The image and aliases are included in SYS1.IMAGELIB at system generation. (See the DATAMGT macro in *OS/VS2 System Programming Library: System Generation Reference*.)

Some trains, such as SN and G11, do not have aliases because they have no equivalent train on another printer. An installation can assign an alias, if it so chooses. (See *OS/VS Linkage Editor and Loader* for details about the ALIAS statement.) If an alias is supplied, JES2 uses it. If an alias is not supplied, an installation-defined SYSOUT class or a printer routing code (specified by the DEST parameter) should be used to assign the data set to the correct printer. If a SYSOUT class or a printer routing code is not used, and JES2 is directed to print a data set on a printer for which the proper image is not supplied, JES2 notifies the operator. The operator can then print the data set with a valid train or redirect the data set to the proper printer by using the \$E command.

If an installation defines a new train, it can supply an alias for that train, using the linkage editor ALIAS statement, when including the image in SYS1.IMAGELIB.

3211 Indexing

JES2 supports 3211 indexing through the INDEX parameter on the /*OUTPUT card and the extended FCB image. With the extended FCB image, JES2 supplies two special FCBs: FCB26 for 6 lines per inch (lpi) and FCB28 for 8lpi (specified as FCB=6 and FCB=8, respectively). These FCBs contain a channel 1 indication in position 1, a special index flag in the third byte, and the number of lpi in the fourth byte of the image. The special index flag in the third byte of FCB26 and FCB28 contains X'80' plus a binary index value, in the range of 1 to 32 (if not specified, 1 is assumed). The index value sets the left-hand margin (1 indicates flush-left position; other values cause indentation of the print line by n-1 positions).

If any other FCB images are to be used by JES2, they must specify channel 1 in position 1; otherwise JES2 incorrectly positions the forms in the printer. (STD1 and STD2 do not specify channel 1 in position 1 and therefore must not be specified, unless altered, for JES2.) If the third byte of any other FCB image contains a data character (specifying the number of lpi) other than X'80', JES2 uses that specification and supplies an index value of 1.

CHAPTER 5. REMOTE JOB ENTRY

The remote job entry (RJE) support of JES2 allows remote facilities to use the job entry subsystem. JES2 processes remote jobs no differently than it does those received from local readers, printers, and punches.

This chapter describes the characteristics of the remote devices supported by JES2 and the RMT generation for generating remote terminal processor (RTP) programs (including the parameters used and the processing of the generation). Some aspects of remote operations are also included in this chapter; for example, starting remote job entry and disconnecting remote lines.

Overview

Remote job entry is the ability to submit jobs and receive system output at remote facilities as if the jobs had been submitted at a local facility. JES2 supports both SNA (systems network architecture) and BSC (binary synchronous communication) remote stations as RJE facilities. The remote facilities may be attached to JES2 by synchronous data link control (SDLC) or by a (point-to-point) BSC communication link. The remote facility becomes a logical extension of the local computer facility and is expected by JES2 to be under the control of a person called a remote operator.

There are two types of remote job entry stations. The first type is the *remote terminal*, that does not have a CPU. A remote terminal, for example, a 2780 or 2770, can be used for entering jobs into and receiving data from JES2. The second type is a *remote work station* that does have a CPU. A processor, for example, System/3 or System/370, executes a JES2 generated program that allows the processor to send jobs to and receive data from JES2. Also part of the work station are printers, punches, card readers, and a console. A remote work station is established by a JES2 program, RMTGEN, during system generation or later. See "RMT Generation" below for a description of the procedure and parameters used. A *remote station* is a composite term for a remote terminal and a remote work station.

Reading, printing, and punching between the CPU and the remote terminal take place one action at a time. For example, it is either transmitting print data or transmitting punch data or reading an input stream. The remote operator may influence the order of these events. A discussion of how this is done is presented later in this section under, "Altering the Sequence of Operations from a Remote Terminal."

SNA RJE Considerations: Remote job entry stations that use the facilities of an SNA network gain access to JES2 through VTAM. During VTAM system definition, these RJE stations (for example, the 3770 terminals and the System/32 workstation) are defined to VTAM as logical units (LUs) and physical units (PUs) by means of the VTAM LU and PU definition statements, respectively. The installation must decide at VTAM system definition how to tailor the JES2/VTAM support for its SNA stations, because the parameters of the LU and PU statements affect not only how JES2 operates, but also how the remote operator uses the station.

Some of the LU parameters affect both the logon syntax and the handling of logon requests. For example, the installation can specify an interpret table (with the LOGTAB parameter) to use in assigning an alias for the JES2 application ID, or specify a table to use in generating a logon sequence (with the USSTAB parameter). The SSCPFM parameter allows the installation to specify whether the terminal supports formatted or

unformatted system services. Other LU parameters affect the VTAM session with JES2. For a description of what these parameters specify and how to code the LU definition statement, refer to *OS/VS2 MVS System Programming Library: VTAM*.

The DISCNT parameter of the PU definition statement affects the disconnecting of the teleprocessing link. *OS/VS2 System Programming Library: VTAM* also describes this definition statement.

Note: *JES2 is concerned only with the RJE lines, which are the logical connections between JES2 and VTAM. The teleprocessing links (the physical connections) are transparent to JES2; they are managed exclusively by VTAM and the NCP.*

During the JES2 initialization procedure, the system programmer defines other characteristics of the SNA RJE stations and their JES2/VTAM support. The initialization parameter &NUMLINES includes the number of logical lines defined to JES2; &NUMTPBF includes the number of buffers required for stations supported by VTAM; and &TPBFSIZ includes the largest buffer specified for SNA stations. The initialization parameter LOGON1 identifies JES2 as an application program to VTAM.

The system programmer also defines the remote stations and the lines that the stations use. Each SNA RJE station is defined by means of an RMTnnn initialization parameter with the subparameter LUTYPE1. LUTYPE1 indicates to JES2 that it can communicate with the station only through a logical line. A logical line is defined by a LINEnnn initialization parameter with the subparameter UNIT=SNA specified.

The system programmer does not specify the CONSOLE subparameter with the RMTnnn parameter because all SNA RJE stations support console input and output. JES2 messages to the remote operator are sent to the console only between the times when data sets are outbound and when no inbound data sets are being transmitted. This timing arrangement is used so that console messages do not become interspersed in printed output when the console printer is not a separate printer in the station. When a separate console printer is available, all messages to the operator are routed to that printer.

BSC RJE Considerations: Communication between the local CPU and BSC remote work stations uses a JES2 facility called MULTI-LEAVING that allows multiple print and punch streams to be transmitted at the same time and multiple console messages and input streams to be received by JES2. With MULTI-LEAVING, you can have several operations going simultaneously. Operators at remote terminals and at work stations that have no console can enter commands into the input stream in the normal manner. Command replies will be scheduled back to the remote station for printing on a remote printer.

JES2 provides remote station MULTI-LEAVING support for the following programmable work stations:

IBM System/360 Model 20, Submodels 2, 4, 5, and 6 and the 2922 with the following selectable options:

- 1403 Printer
- 1442 Card Read Punch
- 2152 Printer-Keyboard
- 2203 Printer
- 2501 Card Reader

2520 Card Read Punch
2560 Multi-Function Card Machine

IBM System/360 Models 22 and up and System/370 Models 115, 125, 135, 145, 155, 158, 165, 168, and 195 with the following selectable options:

1052 Printer-Keyboard
1403 Printer
1442 Card Read Punch
1443 Printer
2501 Card Reader
2520 Card Read Punch
2540 Card Read Punch
3203 Printer
3210/3215 Console Printer-Keyboard (supported as a 1052)
3211 Printer
3504 Card Reader (supported as a 2501)
3505 Card Reader (supported as a 2501)
3525 Card Punch (supported as a 1442)
5203 Printer
5313 Console for the Model 125 (requires 1052 compatibility feature).

(Note: System/370 RMS support is not provided.)

IBM 1130 System with the following selectable options:

1132 Printer
1403 Printer
1442 Card Read Punch
1442 Card Punch
2501 Card Reader
Standard Printer-Keyboard

IBM System/3 Model 10 with the following selectable options:

1442 Card Read Punch
5203 Printer
5424 Multi-Function Card Unit
5471 Printer-Keyboard
5475 Data Entry Keyboard

For Both SNA and BSC RJE Stations: Remote lines can be configured as dedicated or nondedicated. This configuration is established during initialization when the remote stations are specified. If the station parameter, **RMTnnn**, designates a line number, the line is dedicated to that station. If two or more **RMTnnn** parameters specify the same line, the stations corresponding to those parameters must contend for use of that line. Lines that are not pointed to by a station parameter at initialization are nondedicated lines and are eligible to be dynamically connected to any nondedicated station.

Remote stations that are not physically connected to the CPU, that is, stations that must be connected via dial facilities, normally do not specify a dedicated line so that the station may be connected to any available nondedicated line. There are other reasons for specifying a line as nondedicated even if the line is physically connected to a remote station:

- For BSC remote stations, a sign-on card is not required for connecting stations to dedicated lines, and is ignored, since the station is considered active when the line is started. Therefore, line and station password authorization is only enforced for nondedicated lines and stations. (SNA stations never use the sign-on card.)
- For both SNA and BSC stations, one physically connected station can be initialized as multiple nondedicated stations for use by different groups or at different times. The period of use of each such logical station would be defined by sign-on and sign-off (LOGON and LOGOFF for SNA RJE stations). Data routed to the logical station will only be transmitted while that logical station is signed on.
- For both SNA and BSC stations, if remote stations are initialized as nondedicated, one remote station can be used as backup for an inoperable station by being signed on with the inoperable station's ID.
- For BSC stations, a station attached to a dedicated line is considered active whenever the line is active. Line activation is under control of the central operator. The central operator is not aware of station usage in this case. (He is aware of station usage when nondedicated stations are signed on and off by the console). Also, JES2 allocates resources for remote lines while they are active, which is only between sign-on and sign-off for nondedicated lines.

One advantage in specifying lines as dedicated for a BSC remote station is that the station can be used without signing on the station, a manual process at all remote terminals.

It is possible to configure lines and stations that must be connected by dial facilities as dedicated. However, there can be only one station ID and set of station characteristics associated with the dedicated line.

An installation can also establish a relationship between stations and nondedicated lines by means of line passwords. A line password, defined by the LINE n nn initialization parameter, guarantees a user or group of users the use of a particular line and prevents unauthorized remote operators from using that line to gain access to JES2.

RMT Generation

RMT generation is the JES2 procedure for generating MULTI-LEAVING remote terminal processor (RTP) programs for remote job entry from programmable remote workstations. These programs allow MULTI-LEAVING workstations (see the list of workstations above) to operate as remote workstations with JES2. RMT generation requires other procedures for its processing; for example, procedures for allocating space and cataloging. It also requires certain spool data sets for job processing after generation. These procedures and data sets, also required by JES2 generation, are described in Chapter 2.

The following sections describe the RMT parameters used and the processing involved in an RMT generation.

Specifying RMT Parameters

If RTP programs are to be generated, parameters that define those programs must also be specified. Additionally, if changes are to be made to the RTP program source modules, these changes must be specified in control statements.

For an RMT generation, the input deck contains one or more RTP program descriptions. Each terminal program to be generated is described by card entries in the following order:

1. JES2 remote terminal processor program identification
2. RMT generation parameter cards
3. \$.UPDATE control card (optional)
4. Update cards if \$.UPDATE is specified
5. \$.RMTEND end of RMT generation description

RMT Parameters

Each parameter is coded, beginning in column 1, in the format

parameter=value

parameter represents a valid option specified in the appropriate RTP program options section (see "RMT Parameter Descriptions").

value represents a character string of up to seventeen characters.

The parameter cannot have embedded blanks. Comments can be included in a parameter statement but they must be separated from the value by one or more blanks.

RMT generation parameters may appear in any order after the RTP program identification card. If the same parameter occurs more than once in the input deck, the last occurrence determines the parameter value.

RMT Control Cards

The general format for RMT control cards is:

Columns	Field	Description
1-2	\$.	Control card identification
3-71	<i>operands</i>	Variable length, separated by a comma and containing no embedded blanks (the last operand must be followed by a blank).
73-80	<i>ignored</i>	

The first card in the RMT generation input deck is a JES2 remote terminal processor program identification card. It serves two functions:

- Selects the appropriate standard options group and source member from SYS1.HASPSRC
- Sets the remote terminal identification number

The card format is:

\$.name,n

name is the name of the RTP program to be generated (see Figure 5-1).

n is a terminal number, one to three digits, that specifies the remote sign-on number (the first digit cannot be 0). This number must be followed by a blank.

There are two additional RMT control cards:

- \$.UPDATE, which sets the update mode and causes the cards following this card to be used to modify the RTP program source modules for the current generation description
- \$.RMTEND, which is required to signal the end of the RMT generation description

JES2 Remote Terminal Processor Program for	Terminal Program Identification Card (First Card of Each Remote Description)
System/360 Model 20, 2922	\$.RMTM20, <i>n</i>
System/360 (other than Model 20) or System/370	\$.RMT360, <i>n</i>
1130 Loader	\$.RTPLOAD, <i>n</i>
1130	\$.RTP1130, <i>n</i>
System/3	\$.RMTSYS3, <i>n</i>

where *n*=remote sign-on number

Figure 5-1. RTP Program Identification Cards

RMT Update Control Cards

The update control cards may be used only during an update run, after a \$.UPDATE CARD. The format of an update control card is:

```
./ DELETE SEQ1=serial1,SEQ2=serial2
```

The symbols ./ are in columns 1 and 2. One or more blanks must precede and follow the word DELETE. There are no blanks between *serial1* and *serial2*; *serial1* indicates the starting card serial number, and *serial2* indicates the ending card serial number.

The DELETE card is used to delete one or more source card images from the source code of the described RTP program (see "RMT Control Cards") as the source code is being prepared for the assembler. The DELETE card may be mixed with insertion and replacement update cards containing new source statements for the assembler (see "RMT Update Cards" below). When a DELETE control card is specified, the source card images for the RTP program, starting with the serial number specified in SEQ1 through and including the serial number specified in SEQ2, are omitted from the assembler input source. ENDUP terminates the remote terminal program description. It may be replaced by \$.RMTEND, which also serves this function.

RMT Update Cards

Update cards are assembly language source cards in the format described in *OS/VS-DOS/VS-VM/370 Assembler Language*. Each card may be serialized in columns 73 through 80 or may have blanks in columns 73 through 80. Cards with blank serial numbers are inserted in the source deck after the last serialized input card or, if following a DELETE control card, in place of the deleted source cards. All serialized input, including DELETE control cards, must have the serial numbers in ascending order.

RMT Parameter Descriptions

The following subsections describe the parameters for each of five different types of RMT generations: System/360 (models other than Model 20) and System/370 binary synchronous communication (BSC) remote terminal processor program, System/360 Model 20 binary synchronous communication (BSC) remote terminal processor program (including the 2922), 1130 remote terminal processor program, 1130 loader program, and System/3 remote terminal processor program.

Refer to the overview at the beginning of this chapter for the devices that are supported in each type of remote workstation.

The following conventions are used in this manual to describe the RMT parameters:

- The RMT parameters for each RTP program are discussed in alphanumeric order; the first character is ignored if it is & or \$.
- Letters and numbers in bold type must be coded as shown.
- Lowercase letters in italics represent variables for which you must substitute specific information or specific values.
- If an alternative item is underlined, it is the default value. This value will be used automatically if the parameter is not specified.

RMT Parameters for the System/360 Model 20 BSC RTP Program

This section describes the parameters used to specify the machine configuration and programming options required in the assembly of the System/360 Model 20 BSC remote terminal processor program for JES2 MULTI-LEAVING remote job entry.

Parameter	Value	Explanation
&CCT=	<i>number</i> <u>4</u>	is an integer from 3 to 31 that specifies, for all text compression (except trailing blank compression), the minimum number of characters to be compressed. A duplicate character string of fewer than the number specified is treated as a string of nonduplicate characters for compression purposes. If a small value is specified, efficiency of communication line usage is increased at the expense of the compute time that is required for compression. If the &CMPTYPE parameter is specified as 1, this parameter is ignored.
&CMPTYPE=	<u>1</u> <u>2</u> 3	specifies the type of compression to be applied to all data transmitted from the Model 20 to JES2. 1 specifies trailing blank compression 2 specifies compression of leading, embedded, and trailing blanks 3 specifies compression of all duplicate character strings If this parameter is specified as 1, the &CCT parameter is ignored.
&CORESIZ=	<i>number</i> <u>8</u>	is an integer from 8 to 32 that specifies the size of Model 20 main storage in 1K bytes (1K bytes equals 1024 bytes).

Parameter	Value	Explanation
&CORESIZ= (continued)		This parameter must never be greater than the actual storage size of the object machine. Warning: It is possible to specify combinations of parameters such that the resulting workstation program is too large for the available storage (&CORESIZ=255). Such a program will fail to load into the object machine.
&ERRMSGN=	<i>number</i> <u>10</u>	is a value greater than or equal to 8 that specifies the number of 4-byte entries to be assembled in the Model 20 RTP program as an error message log table.
&LINESPD=	<i>number</i> <u>2000</u>	is an integer that specifies the speed, in bits per second, of the communication line to be used between the Model 20 and JES2.
&MLBFSIZ=	<i>number</i> <u>400</u>	specifies the size, in bytes, of each JES2 MULTI-LEAVING buffer. This value must match the &MLBFSIZ initialization parameter value used by the JES2 program operating with the controlling MVS system. The parameter &MLBFSIZ is further described in Chapter 3.
&NUMBUFS=	<i>number</i> <u>8</u>	specifies the number of teleprocessing buffers to be constructed by the Model 20 RTP program. The specification must be an integer no less than: $2X+1$ where: X = 1, if either a 2520 or a 2560 is to be used as both a reader and a punch X = 0, if a 2520 or a 2560 is not to be used as both a reader and a punch The length of each buffer is the value specified in the &MLBFSIZ parameter plus 5 bytes (rounded upward to the next fullword). If this parameter specifies more buffers than can be built in available storage, the RTP program will build as many buffers as it can. It is recommended that at least two buffers be provided for each output device and for the communication adapter.
&NUMTANK=	<i>number</i> <u>8</u>	is an integer greater than or equal to 2 that specifies the number of decompression buffers to be assembled in the Model 20 RTP program. It is recommended that at least two buffers be provided for each printer and punch. The length of each decompression buffer is the value specified in the &PRTSIZE parameter plus 6.

Parameter	Value	Explanation
&NUMTANK= (continued)		For an 8K Model 20, specifying this parameter greater than 8 may cause the RTP program to assemble more than X'1F00' bytes (8K - 256). If this occurs, the resultant program will fail to load.
&PDEV(1)=	<i>devtype</i> <u>2203</u>	specifies the device type for the Model 20 printer. The specification must be either 1403 or 2203.
&PRTCONS=	<u>0</u> 1 2	<p>specifies the usage of the printer as an output console. This parameter is dependent upon the specifications given during JES2 initialization that pertain to the handling of messages for the remote.</p> <p>If JES2 is informed, by means of the RMT<i>nnn</i> parameter at JES2 initialization, that the remote has a console, &PRTCONS should be specified as one of following:</p> <ul style="list-style-type: none"> 0 specifies that error logging and display will be suppressed and operator messages that are created while the remote is online to JES2 will be discarded. 1 specifies that the printer will be used as an output console when sufficient operator messages from JES2 have been queued for output at the remote. If the printer is busy with job stream output, that output will be interrupted for the printing of operator messages from JES2 and from the remote error log. When the console queue is empty, job stream output will continue. 2 specifies that the printer will be used as an output console but will not interrupt the printing of jobs. Operator messages received from JES2 while jobs are being printed will be discarded. <p>If JES2 is informed, by means of the RMT<i>nnn</i> parameter at JES2 initialization, that the remote does not have a console, and if JES2 does not have message spooling capability (as determined by the JES2 initialization parameter &SPOLMSG), &PRTCONS should be specified as follows:</p> <ul style="list-style-type: none"> 0 specifies that error logging and display will be suppressed (JES2 will not return operator messages to the workstation). 1 or 2 specifies that error log messages will be displayed when the printer is free to print them and no job's printed output will be interrupted. <p>If JES2 is informed, by means of the RMT<i>nnn</i> parameter at JES2 initialization, that the remote does not have a console and if JES2 has message spooling capability (as determined by the JES2 initialization parameter &SPOLMSG), &PRTCONS should be specified as if the remote did not have a console and</p>

Parameter	Value	Explanation								
&PRTCONS= (continued)		<p>JES2 did not have message spooling capability (the second specification, above). The definitions are the same but with an additional capability in that operator messages queued for the remote by JES2, transmitted to the remote when the printer is free, and set to receive messages (via the \$STR.PR1 command) are printed.</p> <p>If &WDEV(1) is not specified as 0, this parameter should be set to 0.</p> <p>Regardless of the settings of &WDEV(1) and this parameter, error messages resulting from loggable errors detected by the remote will be discarded when the errors occur at a rate that is faster than the output device can display them.</p> <p>Refer to the &SPOLMSG and &WDEV(1) parameters for additional information.</p>								
&PRTSIZE=	<i>number</i> <u>120</u>	<p>specifies the length, in bytes, of the text portion of each decompression buffer. Each buffer must be long enough to hold a maximum-length output record for either the printer, the punch, or the operator console. The specification must be an integer that is the largest of 80 (if &UDEV(1) is not 0), 120 (if &WDEV(1) is not 0), or the line width of the printer.</p>								
&RADR(1)	<i>unitadr</i> <u>1</u>	<p>specifies the unit address of the Model 20 card reader. The specification must correspond to the specification for the &RDEV(1) parameter as follows:</p> <table border="1"> <thead> <tr> <th>&RDEV(1)</th> <th>&RADR(1)</th> </tr> </thead> <tbody> <tr> <td>2501</td> <td>1</td> </tr> <tr> <td>2520</td> <td>2</td> </tr> <tr> <td>2560</td> <td>2</td> </tr> </tbody> </table> <p>This parameter should not be altered when generating a 2922 work station program.</p>	&RDEV(1)	&RADR(1)	2501	1	2520	2	2560	2
&RDEV(1)	&RADR(1)									
2501	1									
2520	2									
2560	2									
&RDEV(1)=	<i>devtype</i> <u>2501</u>	<p>specifies the device type for the Model 20 card reader. The specification must be either 2501, 2520, or 2560.</p> <p>This parameter should not be altered when generating a 2922 work station program.</p> <p>Refer to the &RADR(1) parameter for additional information.</p>								
&SUBMOD=	<i>submodel</i> <u>2</u>	<p>specifies the submodel number of the Model 20 for the specified remote terminal. The specification must be a valid System/360 Model 20 submodel number.</p> <p>This parameter should not be altered when generating a 2922 work station program.</p>								

Parameter	Value	Explanation										
&UADR(1)=	<i>unitadr</i> <u>3</u>	specifies the unit address of the Model 20 card punch. The specification must correspond to the specification of &UDEV(1) as follows: <table border="1"> <thead> <tr> <th>&UDEV(1)</th> <th>&UADR(1)</th> </tr> </thead> <tbody> <tr> <td>1442</td> <td>3</td> </tr> <tr> <td>2520</td> <td>2</td> </tr> <tr> <td>2560</td> <td>2</td> </tr> <tr> <td>0</td> <td>not present</td> </tr> </tbody> </table>	&UDEV(1)	&UADR(1)	1442	3	2520	2	2560	2	0	not present
&UDEV(1)	&UADR(1)											
1442	3											
2520	2											
2560	2											
0	not present											
&UDEV(1)=	<i>devtype</i> <u>1442</u>	specifies the device type for the Model 20 card punch. The specification must be either 1442, 2520, 2560, or 0. Specify 0 when the Model 20 does not include a card punch. Specify &UDEV(1)=0 for the 2922, unless the RPQ punch is included (in which case &UDEV(1) should not be altered). Refer to the &UADR(1) parameter for additional information.										
&WDEV(1)=	<i>devtype</i> <u>0</u>	specifies the device type for Model 20 console. The specification must be either 2152, if a console is present, or 0, if a console is not present. If a console is present, console support should be indicated for this remote terminal at JES2 initialization.										
&WTOSIZE=	<i>number</i> <u>120</u>	is an integer less than or equal to 120 that specifies the maximum length, in bytes, of a JES2 operator command to be transmitted from the Model 20 to the central computer. If &WDEV(1) is specified as 0, this parameter is ignored.										
&XPARENT=	<u>NO</u> <u>YES</u>	specifies the inclusion or exclusion of support for the text transparency feature. If the binary synchronous communication adapters at both the Model 20 and the central computer have the text transparency feature, YES should be used; otherwise, NO should be specified.										

**RMT Parameters for the
2922 Remote Work
Station RTP Program**

This section describes the parameters used to specify the machine configuration and program options required in the assembly of the 2922 remote terminal processor program for JES2 MULTI-LEAVING remote job entry.

To install a 2922 RTP program, the parameters and procedures for the System/360 Model 20 BSC should be used, subject to the following specific parameter setting:

&LINESPD=xxx where xxx is the actual line speed used.

&PDEV(1)=1403

&PRTSIZE=132

&UDEV(1)=0

&WDEV(1)=2152, if the optional typewriter console is installed.
 &XPARENT=NO, if the optional text transparency feature is not installed.

The default values should be used for the following parameters:

&CORESIZ=
 &RADR(1)=
 &RDEV(1)=
 &SUBMOD=
 &UADR(1)=

The remaining Model 20 BSC parameters may be allowed to default or may be changed.

RMT Parameters for the System/360 (Except Model 20) and System 370 BSC RTP Program

This section describes the parameters used to specify the machine configuration and program options required in the assembly of the System/360 and System/370 BSC remote terminal processor program for JES2 MULTI-LEAVING remote job entry.

Parameter	Value	Explanation
&ADAPT=	<i>unitadr</i> <u>020</u>	specifies the unit address of the binary synchronous communication adapter used by the System/360 or System/370 remote terminal to communicate with JES2 at the central computer. The specification must be a valid unit address.
&CCT=	<i>number</i> <u>4</u>	is an integer from 3 to 31 that specifies, for all text compression (except trailing blank compression), the minimum number of characters to be compressed. A duplicate character string of fewer than the number specified is treated as a string of non-duplicate characters for compression purposes. If a small value is specified, efficiency of communication line usage is increased at the expense of the compute time that is required for compression. If the &CMPTYPE parameter is specified as 1, this parameter is ignored.
&CMPTYPE=	<u>1</u> <u>2</u> <u>3</u>	specifies the type of compression to be applied to all data transmitted from the System/360 or System/370 remote terminal to JES2. 1 specifies trailing blank compression 2 specifies compression of leading, embedded, and trailing blanks 3 specifies compression of all duplicate character strings If this parameter is specified as 1, the &CCT parameter is ignored.
&CORESIZ=	<i>number</i> <u>8</u>	is an integer from 8 to 32 that specifies the size of main storage for the System/360 or System/370 remote terminal in 1K bytes (1K byte equals 1024 bytes). If the System/360 or System/370 remote

Parameter	Value	Explanation
&CORESIZ= (continued)		terminal is larger than 32K bytes, this parameter must be specified as 32.
&ERRMSGN=	<i>number</i> <u>10</u>	is a value greater than or equal to 8 that specifies the number of 4-byte entries to be assembled as an error message log table in the System/360 or System/370 remote terminal.
&LINESPD=	<i>number</i> <u>2000</u>	is an integer that specifies the speed, in bits per second, of the communication line to be used between the System/360 or System/370 remote terminal and JES2.
&MACHINE=	<i>model</i> <u>30</u>	specifies the model number of the System/360 or System/370 to be used as a JES2 remote terminal. The specification must be a valid number for a System/360 or System/370 that includes the standard instruction set and the decimal instruction set.
&MLBFSIZ=	<i>number</i> <u>400</u>	specifies the size, in bytes, of each JES2 MULTI-LEAVING buffer. This value must match the &MLBFSIZ initialization parameter value used by the JES2 program operating with the controlling MVS system. The parameter &MLBFSIZ is further described in Chapter 3.
&NUMBUFS=	<i>number</i> <u>8</u>	specifies the number of teleprocessing buffers to be constructed by the System/360 or System/370 remote terminal program. The specification must be an integer no less than: $2X+1$ where: X = n, the number of 2520 or 1442 units to be used as both readers and punches X = 0, if neither a 2520 nor a 1442 is to be used as both a reader and a punch The length of each buffer is the value specified in the &MLBFSIZ parameter plus 5 bytes (rounded upward to the next fullword). If this parameter specifies more buffers than can be built in available storage, the RTP program will build as many buffers as it can. It is recommended that at least two buffers be provided for each output device and for the communication adapter.
&NUMTANK=	<i>number</i> <u>5</u>	specifies the number of decompression buffers to be assembled in the System/360 or System/370 RTP program. The specification must be an integer

Parameter	Value	Explanation
&NUMTANK= (continued)		<p>greater than zero and not less than 2(number of 2540 punches attached).</p> <p>The length of each decompression buffer is the value specified in the &PRTSIZE plus 6.</p> <p>It is recommended that at least two decompression buffers be provided for each printer and each punch (three buffers for a 2540 punch).</p>
&PADR(<i>n</i>)=	<i>unitadr</i>	<p>specifies the unit address of each remote terminal printer defined by the &PDEV(<i>n</i>) parameter. The <i>n</i> is a sequential number (1-7) that you code to identify each device being specified.</p> <p>For each &PDEV(<i>n</i>) parameter that is not specified as 0, the corresponding parameter &PADR(<i>n</i>) must specify the device's three-character hexadecimal unit address.</p> <p>All devices at the remote terminal workstation must be on separate non-shared subchannels (that is, all I/O devices must be capable of running simultaneously).</p> <p>If this parameter is not specified, the following values are used as defaults:</p> <p style="margin-left: 40px;"> &PADR(1)=00E &PADR(2)=00F &PADR(3)=FFF &PADR(4)=FFF &PADR(5)=FFF &PADR(6)=FFF &PADR(7)=FFF </p>
&PDEV(<i>n</i>)=	<i>devtype</i>	<p>specifies the existence and device type of each remote terminal printer. The specification must be either 1403, 1443, 3211, 3203, 5203, or 0. A specification of 0 indicates that the associated printer does not exist. The <i>n</i> is a sequential number (1-7) that you code to identify each device being specified.</p> <p>If this parameter is not specified, the following values are used as defaults:</p> <p style="margin-left: 40px;"> &PDEV(1)=1403 &PDEV(2)=0 &PDEV(3)=0 &PDEV(4)=0 &PDEV(5)=0 &PDEV(6)=0 &PDEV(7)=0 </p> <p>&PDEV(1) must not be specified as 0</p> <p>If &PDEV(<i>n</i>+1) is specified as a device type, &PDEV(<i>n</i>) must be specified as a device type.</p>

Parameter	Value	Explanation
&PDEV(<i>n</i>)= (continued)		<p>If &PDEV(<i>n</i>) is specified as a device type, &UDEV(8-<i>n</i>) must be specified as 0.</p> <p>If more than one printer is specified, more than one printer should also be specified in the RMT<i>nnn</i> parameter at JES2 initialization.</p>
&PRTSIZE=	<i>number</i> <u>132</u>	<p>specifies the length, in bytes, of the text portion of each decompression buffer. Each buffer must be long enough to hold a maximum-length output record for either a printer, a punch, or the operator console. The specification must be an integer that is the larger of 120 or the line width of the widest printer.</p>
&RADR(<i>n</i>)=	<i>unitadr</i>	<p>specifies the unit address of each remote terminal card reader defined by the &RDEV(<i>n</i>) parameter. The <i>n</i> is a sequential number (1-7) that you code to identify each device being specified.</p> <p>For each &RDEV(<i>n</i>) parameter that is not specified as 0, a corresponding parameter &RADR(<i>n</i>) must specify the device's three-character hexadecimal unit address.</p> <p>All devices at the remote terminal workstation must be on separate nonshared subchannels (that is, all I/O devices must be capable of running simultaneously).</p> <p>If this parameter is not specified, the following values are used as defaults:</p> <p style="padding-left: 40px;"> &RADR(1)=00C &RADR(2)=FFF &RADR(3)=FFF &RADR(4)=FFF &RADR(5)=FFF &RADR(6)=FFF &RADR(7)=FFF </p>
&RDEV(<i>n</i>)=	<i>devtype</i>	<p>specifies the existence and device type of each remote terminal card reader. Each specification must be either 1442, 2501, 2520, 2540, or 0. A specification of 0 indicates that the associated remote terminal card reader does not exist. The <i>n</i> is a sequential number (1-7) that you code to identify each device being specified.</p> <p>If this parameter is not specified, the following values are used as defaults:</p> <p style="padding-left: 40px;"> &RDEV(1)=2540 &RDEV(2)=0 &RDEV(3)=0 &RDEV(4)=0 &RDEV(5)=0 &RDEV(6)=0 &RDEV(7)=0 </p>

Parameter	Value	Explanation
&RDEV(<i>n</i>)= (continued)		<p>&RDEV(1) must not be specified as 0.</p> <p>If &RDEV(<i>n</i>+1) is specified as a device type, &RDEV(<i>n</i>) must be specified as a device type.</p> <p>If more than one reader is specified, more than one reader should also be specified in the RMTnnn parameter at JES2 initialization.</p>
&UADR(<i>n</i>)=	<i>unitadr</i>	<p>specifies the unit address of each remote terminal punch defined by the &UDEV(<i>n</i>) parameter. The <i>n</i> is a sequential number (1-7) that you code to identify each device being specified.</p> <p>For each &UDEV(<i>n</i>) parameter that is not specified as 0, the corresponding parameter &UADR(<i>n</i>) must specify the device's three-character hexadecimal unit address.</p> <p>All devices at the remote terminal workstation must be on separate nonshared subchannels (that is, all I/O devices must be capable of running simultaneously).</p> <p>If this parameter is not specified, the following values are used as defaults:</p> <p style="margin-left: 40px;">&UADR(1)=00D &UADR(2)=FFF &UADR(3)=FFF &UADR(4)=FFF &UADR(5)=FFF &UADR(6)=FFF &UADR(7)=FFF</p>
&UDEV(<i>n</i>)=	<i>devtype</i>	<p>specifies the existence and device type of each remote terminal punch. The specification must be either 1442, 2520, 2540, or 0. A specification of 0 indicates that the associated punch does not exist. The <i>n</i> is a sequential number (1-7) that you code to identify each device being specified.</p> <p>If this parameter is not specified, the following are used as defaults:</p> <p style="margin-left: 40px;">&UDEV(1)=2540 &UDEV(2)=0 &UDEV(3)=0 &UDEV(4)=0 &UDEV(5)=0 &UDEV(6)=0 &UDEV(7)=0</p> <p>If &UDEV(<i>n</i>+1) is specified as a device type, &UDEV(<i>n</i>) must be specified as a device type.</p> <p>If &UDEV(<i>n</i>) is specified as a device type, &PDEV(8-<i>n</i>) must be specified as 0.</p>

Parameter	Value	Explanation
&UDEV(<i>n</i>)= (continued)		If more than one punch is specified, more than one punch should also be specified in the RMT <i>nnn</i> parameter at JES2 initialization.
&WADR(1)=	<i>unitadr</i> <u>01F</u>	specifies the unit address of the 1052 or 1052-compatible operator console on the System/360 or System/370 remote terminal. The specification must be a three-character hexadecimal unit address.
&WTOSIZE=	<i>number</i> <u>120</u>	is an integer less than or equal to 120 that specifies the maximum length, in bytes, of a JES2 operator command to be transmitted from the System/360 or System/370 remote terminal to JES2.
&XPARENT=	<u>NO</u> <u>YES</u>	specifies the inclusion or exclusion of support for the text transparency feature. If the binary synchronous communication adapters at both the System/360 or System/370 remote terminal and the central computer have the text transparency feature, the default value should be used; otherwise, NO should be specified.

RMT Parameters for the 1130 RTP Program

This section describes the parameters used to specify the machine configuration and program options required in the assembly of the 1130 remote terminal processor program for JES2 MULTI-LEAVING remote job entry.

Parameter	Value	Explanation															
&CLOCK=	<u>0</u> <u>1</u>	specifies the type of communication adapter clocking available on the 1130. 0 specifies that data set clocking is being used, and 1 specifies internal 1130 clocking.															
		The rate of insertion of the synchronous idle sequence in the transmitted data is determined by the &CLOCK, &LINESPD, and &TRANPRN parameters. The relationship of these parameters to the insertion rate is:															
		<table border="1"> <thead> <tr> <th>&CLOCK</th> <th>&TRANPRN</th> <th>Insertion Rate</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>Every &LINESPD/8 characters</td> </tr> <tr> <td>0</td> <td>1</td> <td>Every &LINESPD/8 characters</td> </tr> <tr> <td>1</td> <td>0</td> <td>Every 70 characters</td> </tr> <tr> <td>1</td> <td>1</td> <td>Every &LINESPD/8 characters</td> </tr> </tbody> </table>	&CLOCK	&TRANPRN	Insertion Rate	0	0	Every &LINESPD/8 characters	0	1	Every &LINESPD/8 characters	1	0	Every 70 characters	1	1	Every &LINESPD/8 characters
&CLOCK	&TRANPRN	Insertion Rate															
0	0	Every &LINESPD/8 characters															
0	1	Every &LINESPD/8 characters															
1	0	Every 70 characters															
1	1	Every &LINESPD/8 characters															
		The equation used for the insertion rate is: $(\&LINESPD/8)T$ where T is 1.00 second, which is the nominal 2701 time value.															
&CMPTYPE=	<u>0</u> <u>1</u> <u>2</u>	specifies the type of compression to be applied to all data transmitted to JES2.															

Parameter	Value	Explanation
&CMPTYPE= (continued)		<p>0 specifies no compression of duplicate characters and no truncation of trailing blanks.</p> <p>1 specifies trailing blank truncation.</p> <p>2 specifies full compression, trailing blank truncation and encoding of duplicate characters.</p> <p>The process of compressing input data offers optimum performance with respect to efficient line utilization. However, factors such as line speed, CPU availability, buffer size, line turnaround time, and nature of the data to be compressed contribute to the overall operation of the RTP program. Since compression and truncation require considerable CPU time, you may decide, on the basis of the other variables, to respecify the compression technique.</p>
&DELAY=	<i>number</i> <u>3</u>	<p>specifies the number of time intervals that the RTP program will delay in transmitting a "handshaking" sequence (DLE-ACK0) to the central computer. The machine program timer clock is used to measure the delay and is assumed to be set to a minimal value of 0.35 seconds.</p> <p>The purpose of the delay when "handshaking" is to minimize CPU processing at the central computer when no data is being transmitted.</p> <p>Using the default value results in a delay of 1.05 seconds, assuming a timer interval of 0.35 seconds.</p> <p>The value of this parameter must not be set to such a large increment that the delay will be greater than the time-out period of the central computer's 2701/2703.</p>
&FULLIST=	<u>0</u> <u>1</u>	<p>specifies the type of assembly listing produced by the OS/VS assembler during RMT generation.</p> <p>0 specifies that the assembly listing will be produced according to the PRINT NOGEN stipulation of the assembler, and</p> <p>1 specifies that the listing will be produced according to the PRINT GEN stipulation.</p> <p>Since most of the code in the RTP1130 and RTPLOAD programs is created by macro instructions, the specification of 0 will, essentially, produce a source listing (cross-referenced) without the 1130 assembled instructions.</p>
&LINESPD=	<i>number</i> <u>2000</u>	<p>is an integer that specifies the speed, in bits per second, of the communication line to be used between the 1130 and central computer. The value should correspond to the selected setting of the baud rate switch on the 1130 SCA control panel: 1200, 2000,</p> <p>The rate of insertion of the synchronous idle sequence (DLE-SYN or SYN-SYN) in the transmitted data is</p>

Parameter	Value	Explanation
&LINESPD= (continued)		determined by the &CLOCK, &LINESPD, and &TRANPRN parameters. Refer to the &CLOCK parameter for the relationship of these parameters.
&MACHSIZ=	<i>number</i> <u>8192</u>	<p>specifies the amount of 1130 storage to be used by the RTP program. The value is specified in 1130 words.</p> <p>The value specifies the number of words, starting at location 0, that are available to the RTP programs (RTPBOOT, RTPLOAD, and RTP1130). The value specified may be less than the actual available storage but must not be greater.</p> <p>The same parameter must be defined for the assembly of the 1130 loader program and should have the same value.</p>
&MLBFSIZ=	<i>number</i> <u>400</u>	<p>specifies the size, in bytes, of each JES2 MULTI-LEAVING buffer. This value must match the &MLBFSIZ initialization parameter value used by the JES2 program operating with the controlling MVS system.</p> <p>The parameter &MLBFSIZ is further described in Chapter 3.</p>
&PN1442=	<u>0</u> <u>1</u>	<p>specifies the inclusion or exclusion of support for the 1442 punch in the RTP program.</p> <p>0 specifies that support is not to be included, and 1 specifies that support for punched card output produced by jobs at the central computer is to be included.</p> <p>Refer to the &RD1442 parameter for information about the reader function of the 1442.</p>
&PRFOTLW=	<u>120</u> <u>132</u>	<p>specifies the line width of the 1403 printer.</p> <p>The specification of the line width for all printers on a remote terminal is a JES2 installation requirement.</p>
&PR1132=	<u>0</u> <u>1</u>	<p>specifies the inclusion or exclusion of the support for the 1132 printer in the RTP program.</p> <p>0 specifies that support is not to be included, and 1 specifies that support for printing job output using the 1132 is to be included.</p>
&PR1403	<u>0</u> <u>1</u>	<p>specifies the inclusion or exclusion of the support for the 1403 printer in the RTP program, where:</p> <p>0 specifies that support is not to be included, and 1 specifies that support is to be included.</p>
&RD1442=	<u>0</u> <u>1</u>	specifies the inclusion or exclusion of the support for a 1442 card reader in the RTP program.

Parameter	Value	Explanation
&RD1442= (continued)		0 specifies that support is not to be included, and 1 specifies that support is to be included.
&RD2501=	<u>0</u> 1	specifies the inclusion or exclusion of the support for the 2501 card reader in the RTP program. 0 specifies that support is not to be included, and 1 specifies that support is to be included
&RTPLORG=	<i>number</i>	defines the location in 1130 storage of the RTPLOAD program, which is used to load the 1130 RTP program. If this parameter is not specified, the default value is: 2(&MACHSIZ – 1024) The RTPLOAD program must reside in an area of storage that is available between the beginning of the buffer pool and the end of main storage, as defined in the &MACHSIZ parameter, minus the length of the RTPLOAD program. The default value of this parameter allows 1024 words for the RTPLOAD program. Assuming &MACHSIZ=8192, the default value is 14336. This value is twice the actual 1130 storage address because the value is used in an ORG operation and must be in terms of bytes, not 1130 words.
&TRANPRN=	0 <u>1</u>	specifies the simulation of the binary synchronous transparency feature. 0 specifies that no simulation will occur. In this case, data containing transparent characters cannot be properly processed by the RTP program. 1 specifies that simulation will occur in the same manner as the 2701 SDA-II adapter that is equipped with the transparency feature. If 0 is specified, the conversion of card code data is monitored and all BSC control characters are converted to hexadecimal 0. This prevents mispunched data from causing an infinite error retry if the central computer does not have transparency. If 1 is specified, the RTP program will communicate only with a 2703 or with a 2701 adapter that has the text transparency feature.

RMT Parameters for the 1130 Loader Program

This section describes the parameters used to specify the machine size, loader origin, and assembly list option that are used in the assembly of RTPLOAD, the 1130 loader program, that loads the 1130 remote terminal processor program.

RMT generation produces the object decks for the RTPLOAD and RTP1130 programs. The bootstrap loader program (RTPBOOT) cannot be produced on System/360 or System/370 and must be keypunched as indicated in the RTP section of *OS/V52 MVS JES2 Logic*.

Parameter	Value	Explanation
&FULLIST=	0	specifies the type of assembly listing produced by the OS/VS assembler during the RMT generation.
	<u>1</u>	<p>0 specifies that the assembly listing will be produced according to the PRINT NOGEN stipulation of the assembler, and</p> <p>1 specifies that the listing will be produced according to the PRINT GEN stipulation.</p> <p>Since most of the code in the RTP1130 and RTPLOAD programs is created by macro instructions, the specification of 0 will, essentially, produce a source listing (cross-referenced) without the 1130 assembled instructions.</p>
&MACHSIZ=	<i>number</i>	specifies the amount of 1130 main storage to be used by the RTP program. The value is specified in 1130 words.
	<u>8192</u>	<p>The value specifies the number of words, starting at location 0, that are available to the RTP programs (RTPBOOT, RTPLOAD, and RTP1130). The value specified may be less than the actual available storage but must not be greater.</p> <p>The same parameter must be defined for the assembly of the 1130 RTP program and should have the same value.</p>
&RTPLORG=	<i>number</i>	defines the location in 1130 main storage of the RTPLOAD program, which is used to load the 1130 RTP program. If this parameter is not specified, the default value is:
	<u>2(&MACHSIZ – 1024)</u>	<p>The RTPLOAD program must reside in an area of storage that is available between the beginning of the buffer pool and the end of main storage, as defined in the &MACHSIZ parameter, minus the length of the RTPLOAD program. The default value of this parameter allows 1024 words for the RTPLOAD program.</p> <p>Assuming &MACHSIZ=8192, the default value is 14336. This value is twice the actual 1130 storage address because the value is used in an ORG operation and must be in terms of bytes, not 1130 words.</p>

RMT Parameters for the System/3 RTP Program

This section describes the parameters used to specify the machine configuration and programming options in the assembly of the System/3 remote terminal processor program for JES2 MULTI-LEAVING remote job entry.

Parameter	Value	Explanation
&COMP=	0	specifies the type of compression to be applied to all data transmitted to the central computer.
	1	
	<u>2</u>	

Parameter	Value	Explanation												
&COMP= (continued)		<p>0 specifies that no compression of duplicate characters and no truncation of trailing blanks is performed.</p> <p>1 specifies that trailing blanks are truncated.</p> <p>2 specifies that compression takes place after truncation. Strings of from two to thirty-one blanks are compressed to a single byte; strings of from three to thirty-one duplicate characters are compressed to two bytes.</p>												
&DEBUG=	<u>0</u> 1	<p>specifies the inclusion or exclusion of certain validity tests and a main storage dump program in the RTP program.</p> <p>0 specifies that support is not to be included.</p> <p>1 specifies that support is to be included.</p>												
&DIAL=	<i>number</i> <u>null string</u>	<p>specifies the telephone number to be used during JES2 initialization. The values specified will be included on the /*SIGNON card that it assembled into the RTP program and will be preceded by the keyword DIAL (unless the default values are used). Each specification is a string of up to eight decimal digits. If the telephone number is eight or fewer digits, it should be specified in the &DIAL parameter. If the telephone number is more than eight digits, the left-most eight digits are specified in the &DIAL parameter and the remaining digits are specified in the &DIAL1 parameter.</p>												
&DIAL1=	<i>number</i> <u>null string</u>													
&MACHSIZ=	<i>number</i> <u>8192</u>	<p>specifies the size of System/3 main storage. The value specified must be the appropriate specification for the System/3 main storage size, specified as follows:</p> <table border="1"> <thead> <tr> <th>Value</th> <th>Main Storage Size</th> </tr> </thead> <tbody> <tr> <td>8192</td> <td>8K</td> </tr> <tr> <td>12288</td> <td>12K</td> </tr> <tr> <td>16384</td> <td>16K</td> </tr> <tr> <td>24576</td> <td>24K</td> </tr> <tr> <td>32768</td> <td>32K</td> </tr> </tbody> </table>	Value	Main Storage Size	8192	8K	12288	12K	16384	16K	24576	24K	32768	32K
Value	Main Storage Size													
8192	8K													
12288	12K													
16384	16K													
24576	24K													
32768	32K													
&MLBFSIZ=	<i>number</i> <u>400</u>	<p>specifies the size, in bytes, of each JES2 MULTI-LEAVING buffer. This value must match the &MLBFSIZ initialization parameter value used by the JES2 program operating with the controlling MVS system.</p> <p>The parameter &MLBFSIZ is further described in Chapter 3.</p>												
&PASSWD=	<i>character-string</i> <u>null string</u>	<p>specifies the password that is to be used during the sign-on process. The value specified will be included in the /*SIGNON card that is assembled into the System/3 RTP program. The specification must be a character string of from one to eight characters. If you want blanks, let the parameter default.</p>												

Parameter	Value	Explanation
&PC(n)=	<i>number</i>	<p>specifies skip information for the 5203 or 1403 printer. The <i>n</i> is a number from 1 to 12 that specifies the channel. The value specified in this parameter determines the print line number to which paper will be skipped when the RTP program simulates the 1403 command "Skip to Channel <i>n</i>." A specification of 0 causes no forms movement.</p> <p>If this parameter is not specified, the following values are used as defaults:</p> <p style="margin-left: 40px;"> &PC(1)=1 &PC(2)=0 &PC(3)=0 &PC(4)=0 &PC(5)=0 &PC(6)=0 &PC(7)=0 &PC(8)=0 &PC(9)=0 &PC(10)=0 &PC(11)=0 &PC(12)=&S3FORML-5 </p>
&PRTCONS=	0 1 <u>2</u>	<p>specifies utilization of the 5203 or 1403 printer as an operator's console.</p> <p>0 specifies that the printer will not be used as an operator's output console.</p> <p>1 specifies that the RTP program will attempt to hold operator messages from JES2 until a job has completed printing. However, if two or more MULTI-LEAVING buffers contain JES2 operator messages, the printer will eject a page (skip to channel 1), print the JES2 operator messages, eject another page, and resume printing the job.</p> <p>2 specifies that the RTP program will throw away all operator messages while the printer is printing a job. While the printer is dormant, it will print any received messages.</p> <p>Regardless of the setting of this parameter, messages temporarily saved on a direct-access volume for a remote terminal will be printed to the terminal as a job. Thus, they will always appear on the printer, even if another console exists.</p> <p>If this parameter is specified greater than 0, MULTI-LEAVING console support should be specified in the <i>RMTnnn</i> parameter at JES2 initialization.</p> <p>If &S35471=1, the value of &PRTCONS is ignored and assumed to be 0.</p>
&S3BSCA=	<u>1</u> 2	<p>specifies the number of the System/3 BSC adapter to be used for RJE communication.</p>

Parameter	Value	Explanation
&S3BSCA= (continued)	1	1 specifies the first BSCA.
	2	2 specifies the second BSCA.
		The assembled System/3 RTP program uses the adapter specified in this parameter, only.
&S3CMDS=	<u>0</u>	specifies the inclusion or exclusion of a command facility and of commands to assist the System/3 operator.
	1	0 specifies support is not to be included. 1 specifies that support is to be included.
		The commands that are available with this facility are detailed in <i>Operator's Library: OS/VS2 Remote Terminals (JES2)</i> .
&S3FORML=	<i>number</i> <u>66</u>	is an integer greater than or equal to 6 that specifies the number of print lines on a page for the continuous forms used on the 5203 or 1403 printer.
&S3NPUNS=	<u>1</u>	specifies the maximum number of jobs that can be punched simultaneously at the System/3 remote terminal.
	2	
	3	A value of 3 allows simultaneous operation of both 5424 hoppers and the 1442 hopper as punches.
		If this parameter is specified greater than 1, additional punches should also be specified in the <i>RMTnnn</i> parameter at JES2 initialization.
&S3NRDRS=	<u>1</u>	specifies the maximum number of jobs that can read simultaneously from the System/3 remote terminal.
	2	
	3	A value of 3 allows simultaneous operation of both 5424 and 1442 hoppers as card readers.
		If this parameter is specified greater than 1, additional card readers should also be specified in the <i>RMTnnn</i> parameter at JES2 initialization.
&S3OBJDK=	<u>0</u>	specifies the inclusion or exclusion of the facility to punch OS/VS2 object decks.
	1	0 specifies support is not to be included. 1 specifies support is to be included.
		If this facility is to be included, the text transparency feature should be present.
		If 1 is specified, each card of an OS/VS2 object deck will be expanded and punched into two 96-column cards. These cards will be recognized when read by the System/3 RTP program. For each two 96-column cards read, one OS/VS2 object deck card image will be transmitted.

Parameter	Value	Explanation
&S3SIP=	<u>0</u> 1	specifies usage of those bytes of System/3 main storage between X'100' and X'1FF'. 0 specifies that the RTP program will use the bytes. 1 specifies that the bytes will be used by the System/3 card system initialization program.
&S3TRACE=	<i>number</i> <u>10</u>	is an integer greater than 1 that specifies the number of 4-byte entries in the RTP program's internal error message table.
&S3XPAR=	<u>0</u> 1	specifies the presence or absence of the EBCDIC text transparency feature. 0 specifies that the EBCDIC text transparency feature is not present. 1 specifies that both the central computer's communications adapter and the System/3 BSCA have the EBCDIC text transparency feature.
&S31442=	<u>0</u> 1	specifies inclusion or exclusion of support for the 1442 card reader/punch. 0 specifies that support is not to be included. 1 specifies that support is to be included.
&S35424=	<u>0</u> <u>1</u>	specifies inclusion or exclusion of support for the 5424 multi-function card unit. 0 specifies that support is not to be included. 1 specifies that support is to be included. If this parameter is specified as 0, &S31442 must be specified as 1.
&S35471=	<u>0</u> 1	specifies inclusion or exclusion of support for the 5471 printer-keyboard for use as an operator's input/output console. 0 specifies that support is not to be included. 1 specifies that support is to be included. If console support is desired, MULTI-LEAVING console support must be specified in the RMT <i>nnn</i> parameter at JES2 initialization. Regardless of the specification of this parameter, messages from JES2 can print on the printer. Refer to the &PRTCONS parameter in this section and to the &SPOLMSG parameter in Chapter 3 for additional information.
&S35475=	<u>0</u> 1	specifies inclusion or exclusion of support for the 5475 data entry keyboard on the System/3 for use as an operator's console. 0 specifies that support is not to be included. 1 specifies that support is to be included.

Parameter	Value	Explanation
&S35475= (continued)		<p>If console support is desired, MULTI-LEAVING console support must be specified in the RMTnnn parameter at JES2 initialization.</p> <p>If &S35471=1, this parameter is ignored.</p>
&S396COL=	<u>0</u> 1	<p>specifies inclusion or exclusion of support for the load-mode punch option.</p> <p>0 specifies that support is not to be included. 1 specifies that support is to be included.</p> <p>If this parameter is specified, the resultant System/3 RTP program will be capable of receiving the punched output of a System/3 RMT generation.</p>

RMT Generation under a Production Batch System

An RMT generation may be executed as part of a batch job stream. Figure 5-2 shows a sample job stream for a batch RMT generation.

RTP program modules usually write messages to the SYSPRINT data set using record format FBM with a record length of 121. The data set may be changed to SYSLIST by including a SYSLIST DD statement in the RMTGEN step. This will cause the listings from the REMOTGEN utility and assembler to be placed on separate data sets. For example:

```
//GENJOB JOB ...
//STEP EXEC RMTGEN
//RMTGEN.SYSLIST DD SYSOUT=A
//RMTGEN.OPTIONS DD *
.
.
.
/*
```

Procedures for Generating RTP Programs

Input to an RMT generation is read from the card reader after the JES2 parameters have been processed. If the JES2 parameter &BSCCPU is specified to include programmable RJE support, the following WTOR message is issued:

*m*PLACE RMTGEN OPTIONS IN UNIT *xxx* AND REPLY 'GO' OR REPLY 'CANCEL'

where *xxx* is the unit address of the card reader.

You should make sure that the specified card reader is not being used for any other function (a JES2 card reader, for example). You should clear any cards remaining in the card reader, load the card reader with the RMT parameters, and reply "go." If no RMT generations are being performed, reply "cancel."

```
//RMTGENJB JOB (0000,0000),'GEN REMOTE PROGRAMS',
// MSGLEVEL=1
//RMTGEN EXEC RMTGEN
//RMTGEN.OPTIONS DD *
$.RMTM20,2
&RDEV(1)=2560
&RADR(1)=2
&UDEV(1)=2560
&UADR(1)=2
&WDEV(1)=2152
&NUMTANK=5
$.RMTEND
$.RMT360,3
&CMPTYPE=3
&PDEV(2)=1403
&ADAPT=030
&WADR(1)=009
&NUMTANK=7
&CORESIZ=16
$.RMTEND
```

Figure 5-2. Input Deck for a Batch RMT Generation

Processing

An RMT generation begins by executing the REMOTGEN utility program. This utility acts as a monitor and links to the various RMT utility programs that generate the remote terminal load decks as follows:

1. The GENRMT utility program is invoked to read the OPTIONS data set for the remote terminal program identification, to select the appropriate standard options list for the desired RTP program, and to print the default values to the SYSPRINT data set.
2. The GENRMT utility program reads the overriding options from the OPTIONS data set and changes the current values.
3. When \$.UPDATE or \$.RMTEND is encountered in the input deck, the remote terminal program source module is copied to a temporary data set by the GENRMT utility program. During this transfer, the options (as specified in the RMT parameters) are used to update the source module. If \$.UPDATE is specified, the update cards are used to modify the source module.
4. After the source module is updated, the assembler is invoked by the REMOTGEN utility program to assemble the RTP programs in the temporary data set and, except for 1130 and System/3 programs, punch the self-loading object decks to the SYSPUNCH data set. The 1130 and System/3 assemblies write the object decks to a temporary data set.
5. On return from the assembler, if the program is for the 1130 or System/3, the REMOTGEN utility program invokes a postprocessor (LETRRIP or SYS3CNVT, respectively) that creates a load-deck image on the SYSPUNCH data set. The output of this is one of the following:
 - The RTPLOAD or RTP1130 load deck for the 1130
 - A complete load deck for the System/3 without the 5424 Multi-Function Card Unit
 - A deck to be further processed for the System/3 with the 5424 Multi-Function Card Unit (see "Output" below)

This procedure is repeated for each RTP program to be generated.

Completion Codes

During both the JES2 and RMT generations, the success of the generation process is determined and a completion code is returned. Refer to *OS/VS Message Library: VS2 System Codes* and *OS/VS Message Library: VS2 System Messages* for a discussion of the completion codes that are returned by the system.

Output

The output from an RMT generation is a card deck for each RMT program generated. In addition, the GENRMT utility prints an information listing, the RMT parameter default values, and the parameter values you specified. Also, a listing of each assembly is produced.

All listings produced by the GENRMT utility and the assembler have the remote terminal sign-on identification number at the top of each page. With the exception of loader bootstrap cards, all object deck cards have the identification number punched in columns 74 through 76.

System/3 96-Column Card Output

The REMOTGEN utility invokes the postprocessor SYS3CVNT to produce the System/3 object-deck image on the SYSPUNCH data set. The cards created are 80-column cards which, if routed (by use of a /*ROUTE card or the \$R operator command) to a System/3

remote terminal utilizing the System/3 starter system, are punched as 96-column System/3 load mode cards. They may also be punched locally or remotely as 80-column cards (with the punched output of other RMT generations) and later be separated and routed to a System/3 starter system, as the punched output of an 80/80 card-to-punch job. The utilities IEBTPCH or IEBGENER may be used for this. (Refer to *Operator's Library: OS/VS2 Remote Terminals (JES2)* for a description of the System/3 starter program and to *OS/VS Utilities* for a description of the utility programs.)

System/3 96-column load mode cards must be punched in order to use the output of an RMT generation on a System/3 if the System/3 configuration includes a 5424 Multi-Function Card Unit and the RMT parameter \$S35424 was specified as 1. The 80-column cards are loadable on a System/3 only if a 1442 card reader is attached and the RMT parameter &S35424 was specified as 0.

Instead of the System/3 starter system, any JES2 System/3 remote terminal processor program generated with &S396COL=1 specified may be used to punch RMT generation output that is routed to a System/3.

Input Deck for an RMT Generation

Figure 5-3 illustrates the generation of RTP programs for a System/360 Model 20 work station and for a System/360 (other than a Model 20) or System/370 work station.

Starting and Stopping Remote Job Entry

Because teleprocessing lines are never considered active at JES2 initialization, each line must be activated by means of a JES2 start command (\$S). This command can be issued by the operator, entered through a command stream (for example, through the JES2 initialization deck), entered into a job stream, or entered through the automatic command processor. A line is dynamically allocated when activated. A line can be deactivated and deallocated using the operator's JES2 stop command (\$P).

A remote device is considered active when its remote station becomes active provided that the device is specified for automatic start (by the START subparameter in the Rnnn.RDm, Rnnn.PRm, or Rnnn.PUm initialization parameters). Otherwise, the device is considered inactive and must be started either by the remote or local operator command.

Column 1
\$.RMTM20,2
&RDEV(1)=2560
&RADR(1)=2
&UDEV(1)=2560
&UADR(1)=2
&WDEV(1)=2152
&NUMTANK=5
\$.RMTEND
\$.RMT360,3
&CMPTYPE=3
&PDEV(2)=1403
&ADAPT=030
&WADR(1)=009
&NUMTANK=7
&CORESIZ=16
\$.RMTEND

Figure 5-3. Input Deck for an RMT Generation

For BSC Stations: The first action taken at the nondedicated remote station is the submission of a sign-on statement. (Sign-on is ignored for dedicated lines.) The format of this statement must be:

Column	Description
1	/*SIGNON
16	REMOTEnn or RMTnnn
25	password1
73	password2

REMOTEnnn (RMTnnn) defines the remote station requesting sign-on. *The numbers must be left justified with no leading zeros.*

password1 defines the password established at initialization or changed by the operator for that line. If the line has a password, then *password1* is required. To establish *password1*, set the LINEenn JES2 initialization parameter. This password can be changed or invoked by the operator with the \$T command.

password2 defines the password established at initialization that is assigned to each terminal. If the terminal has a password, then *password2* is required. To establish *password2*, set the RMTnnn JES2 initialization parameter. The password ensures that the station signing on is a valid station.

A sign-off statement is submitted to terminate BSC job stream processing. The format of this statement is:

Column	Description
1	/*SIGNOFF

For SNA RJE Stations: The operator should issue \$\$ LGN1 to start the JES2/VTAM interface and to allow JES2 to begin processing logons from the stations. The \$\$ LGN1 command should be issued after VTAM has been started. (When VTAM has been started, both the network controllers or communication links needed to establish a path to the remote station and the physical unit and logical unit associated with the station must be activated.) To allow an SNA remote station to log on, the operator must also issue a \$\$ LNE to activate a line to VTAM for the SNA RJE station.

The SNA RJE stations use the logon command to request a session with JES2. When the operator issues LOGON, VTAM notifies JES2 that a logon has been received, and passes to JES2 the data sent with the logon command. If the data is acceptable, JES2 establishes a session with the logical unit associated with the remote station.

The syntax of the logon command for each logical unit (LU) is established at JES2 initialization and VTAM system definition; for example, the "password" included in the data sent with LOGON may or may not be required. The operator must be told what syntax to use. The default VTAM syntax is:

```
LOGON APPLID(JES2) LOGMODE(name) DATA(RMTnnn,password1,password2)
```

JES2 is the name that identifies JES2 as an application program.

LOGMODE(name) indicates a mode table entry that helps JES2 determine some of the characteristics of the session with an SNA ASCII terminal.

DATA specifies the remote station and any valid passwords.

password1 authorizes the use of the SNA line associated with it;

password2 authorizes the use of the SNA remote terminal associated with it.

SNA remote stations can use the SIGNOFF statement or the logoff command to end SNA RJE processing. (\$P LGN1 is used to stop the JES2/VTAM interface.) The logoff command, however, has some options that are not provided by the SIGNOFF statement. As with the LOGON command, the installation defines the syntax of LOGOFF at JES2 initialization and VTAM system definition. The default syntax is:

```
LOGOFF TYPE(COND/UNCOND)
```

TYPE indicates whether a conditional or unconditional logoff is requested. COND indicates that the SESSION will be disconnected at the end of any current data transmission, and UNCOND indicates that the SESSION will be disconnected immediately regardless of the data transmission.

For more information about LOGON and LOGOFF, refer to *OS/VS2 MVS System Programming Library: VTAM*. For a description of \$S LGN1, \$P LGN1, and \$S LNEn, refer to *Operator's Library: OS/VS2 JES2 Commands*.

Altering the Sequence of Operations from a Remote Terminal

Two JES2 options are provided to allow the remote terminal operator to control the sequence of operations at the remote terminal.

During JES2 initialization, the system programmer can specify a delay time, using the &WAITIME parameter, which takes effect between printing and punching the output of each job. This delay gives the operator the opportunity to ready the card reader and change the terminal status to transmit data. JES2 senses this condition and reads the input stream before resuming printing or punching.

When each BSC printer or punch is defined at JES2 initialization, using the Rnnn.PRm or Rnnn.PUm parameters, the suspend mode of operation can be specified or negated. If the suspend mode is in effect, the remote operator can alter the sequence of operations by stopping the output device. When the device is again readied by the operator, JES2 simulates an interruption by flushing its current I/O buffers and printing the remote separator page, if any. JES2 then determines whether the remote card reader is ready. If so, the input is read. If not, the highest priority output is selected. This can be resumption of the current operation or another data set. The delay must be sufficiently long for the terminal to notify JES2 of the stopped device state. The time depends on the terminal type. If suspend mode is not in effect, the current operation is resumed after the device is readied again.

For SNA printer or punch devices, JES2 ignores the subparameter for suspend mode in the Rnnn.PRm and Rnnn.PUm parameters. Operations will not be suspended automatically on a time interval. The operator can suspend a data stream that is being sent to the remote terminal; for example, by issuing the \$I command.

Options for Disconnecting Remote Lines

At JES2 initialization, the system programmer can use the LINEnn statement to choose whether each line for BSC RJE stations is to have the abortive disconnect feature. If the feature is selected, a line is automatically disconnected by simulating a \$E command sequence when the transmission control unit detects a not-ready data set. If the feature is not selected, the line will remain active and wait for the data set to be made ready or for operator action. The conditions under which a transmission control unit may detect a not-ready data set are dependent on line configurations.

For both SNA and BSC stations, the system programmer can also cause JES2 to automatically disconnect an inactive station by coding a non-zero value into the DISCINTV parameter of RMTnnn at JES2 initialization. When this amount of time has elapsed with no data sent or received on the line, JES2 will disconnect the line by simulating a \$E command sequence.

SMF Accounting Record

SMF accounting records, types 47, 48, and 49, contain information useful for tracking the use of both SNA and BSC remote stations.

- Type 47 indicates whenever a line is started or a station signs on.
- Type 48 indicates whenever a line is stopped or a station signs off. It also contains statistical information.
- Type 49 indicates whenever a station uses the wrong password when trying to sign on.

CHAPTER 6. MISCELLANEOUS JES2 FACILITIES

The JES2 patching facility, PTF map, automatic command processing, the flow for time-sharing and started tasks, and the multi-access spool are described in this chapter.

Automatic Command Processing

The operator may specify from the console or through a local reader that certain commands or strings of commands take effect automatically at specific times or at regular intervals. The procedures for using the following commands to do this are in *Operator's Library: OS/VS2 JES2 Commands*.

- Start Automatic (\$SA): Starts automatic command processing.
- Set Automatic (\$TA): Displays, specifies, or modifies the strings of commands (the "automatic command elements"). This command can also selectively cancel selected commands.
- Cancel Automatic (\$CA): Cancels all previously entered automatic commands.
- Halt Automatic (\$ZA): Stops all automatic command processing until it is restarted.

Typical reasons for using automatic command processing are to provide periodic status displays and to cause the operator to do no more work than necessary for common, preset routines or schedules. For example, if it is normal at the installation to do one specific kind of processing at 8 a.m., and another 9 a.m. every morning, it is possible to preset automatic command processing to issue the operator commands that would ordinarily be necessary at those times.

Writing a Day's Work Scheduler

Establish the use of automatic command processing with the &NUMACE parameter at initialization. Enter the commands with the \$T operator command or write a program to put cards through an internal reader.

The following statements represent sample cards placed in the initialization deck:

- (1) \$TA,T=10.30,'\$SSLNE1,LNE2,LNE3'
- (2) \$TA,T=12.30,'\$I1,ABC;TI2,XBC;L=A'
- (3) \$TA,T=16.15,'\$PLNE1,LNE3;DMR1-9, "PLEASE SIGN OFF ASAP"'
- (4) \$TA,T=16.45,'\$ELNE1,LNE2,LNE3'

These four statements mean the following:

- (1) Start the three remote job entry lines.
- (2) Modify these initiators.
- (3) Prepare to stop the remote job entry lines and give a warning to users who are using the system.
- (4) Halt the remote job entry lines.

The sample cards show various times of the day set aside for routine processing.

A common source of these commands may be a user-written program for scheduling the day's work. This program can use the internal reader to get the commands into the subsystem. In writing this program, observe the following considerations:

- When more than one command is to be executed at approximately the same time, you should combine them into one command text entry.

- The responses to the command within the text will normally be directed to the in-line messages area and to any consoles receiving MCS route code 1 unless you use the L=caa operand as described in *Operator's Library: OS/VS2 JES2 Commands*.
- Multiple commands with responses to out-of-line area on graphic consoles will normally be overlaid too rapidly for the operator to view. Avoid this kind of command sequencing.
- The authority of the internal reader determines which of your command entered through it will be valid. See *Operator's Library: OS/VS2 JES2 Commands* for discussion of command authority as it pertains to automatic command processing.
- The day's work scheduler program should limit the number of automatic command entries to a value that does not overload the system consoles or leave insufficient resources for status displays.
- An entire automatic command processing entry must fit on an 80-column card image.

Limiting Considerations

When automatic command processing is active, commands entered at system speed (rather than at operator speed) may congest the system. In turn, system responses to the commands may flood the console with the response messages.

If the installation is experiencing difficulty either with congesting the system or flooding the console with messages, re-evaluate the mix of commands submitted with automatic command processing and try some changes.

Automatic command processing may also terminate itself prematurely under the following conditions:

- The operator enters the \$ZA command to halt automatic command processing and then lets 24 hours or more elapse without restarting it.
- The operator specifies a start time for automatic command processing that is either before midnight of the current day or more than 24 hours later than the current moment.
- The system becomes so congested that the automatic commands are delayed approximately five minutes.

Make sure the operator fully understands the procedures for using automatic command processing. They are fully outlined in *Operator's Library: OS/VS2 JES2 Commands*.

The JES2 Patching Facility

The JES2 patching facility makes temporary patches to any module in JES2 or to any absolute storage address in the address space into which JES2 is loaded. Because these patches are valid only until a module is reloaded, they must be applied every time that JES2 is started. These patches are applied at the time JES2 is initialized. The patching facility statements are submitted to the JES2 initialization data set.

Modules that are marked refreshable should not be patched because refreshing nullifies the effect of the patch. Since pages in the Pageable Link Pack Area (PLPA) are not paged out, any patches applied to modules residing in this area will not be effective after the page in which the patch was made has been paged in. For this reason, modules in SYS1.LPALIB data set (for example, HASPSSSM) must be "fixed" by an entry in the SYS1.PARMLIB fixed list before patches are applied by the JES2 patching facility.

The JES2 patching facility in the JES2 initialization data set can be specified in either the JES2 patching format or in the AMASPZAP format. All patches in the JES2 patching format should appear before any AMASPZAP format patches. These two methods for patching are explained in the following sections.

Rules for Coding Patching Statements

The following conventions are used in the parameter descriptions:

- Uppercase letters must be coded exactly as shown.
- Lowercase letters represent variables for which you must substitute specific information or specific values.

The following syntax rules apply to the coding of the parameters.

- The size of a patching facility statement is 71 bytes.
- The statements cannot be continued on successive cards.
- The statements may begin in any column, but the operation name must precede the parameters.
- A statement beginning with an asterisk is a comment statement.
- There must be at least one blank between the specified operation name and the first parameter.
- All parameters must be separated by at least one blank space.

Format of the JES2 Patching Facility Statements

The format of the JES2 patch statement is as follows:

operation csect address data comments

operation

defines the operation to be performed as follows:

REPLACE

REP

R

The data on the statement replaces the data at the location specified by the *csect* and *address* parameters.

VERIFY

VER

V

The data on the statement will be compared with the data at the location specified by the *csect* and *address* parameters. If the data does not compare, an error message is displayed in the parameter library list data set; subsequent REP operations are still performed. (Note: A verify request will not prevent subsequent REP operations from being performed.)

BASE

B

The base, the offset used to adjust address values that are to be specified in any subsequent VER and REP statements, is to be modified. This offset is initialized to a value which is based upon the distributed CSECT and assembly module relationships of JES2; the BASE statement need only be used if this relationship is modified locally. The *data* parameter on the BASE statement is ignored and may be omitted.

csect

specifies the control section (or control block) in which the data to be verified or modified is resident. If an asterisk (*) is coded, the CSECT in effect on the previous JES2 patch statement is used. Figure 6-1 contains a list of the names that can be coded and CSECTs to which these names refer. Note that the patch statement name is the CSECT name with the first four characters (always HASP) omitted.

address

specifies the hexadecimal address of the data to be verified and/or modified. This address does not have to be aligned in any way and can consist of one to six digits (with or without leading zeros). The address should be taken directly from a JES2 assembler listing containing the referenced CSECT. If an asterisk (*) is coded, the address is interpreted as 1 greater than the last address reference on the previous JES2 patch statement.

data

specifies the bytes of data that are to be verified or modified at the specified location. The number of bytes of data defined must be specified as a multiple of two hexadecimal digits. If desired, the data within the parameter may be separated by commas (never blanks). If all the data will not fit into one patch statement (71 bytes), a second patch statement must be used.

If the data specifies a location within a JES2 CSECT, as specified at assembly time, the JES2 patch processing routine relocates this data by the base location of the CSECT if indicated. This relocation is indicated by following the data to be relocated with the name of the CSECT (abbreviated as in *csect* above) enclosed in parentheses. The address specified in the *data* should be taken directly from a JES2 assembly listing containing the referenced CSECT. The data to be relocated should contain at least six hexadecimal digits (three bytes), and, if more than six digits are specified only the last eight digits (four bytes) are considered in the relocation process. If an asterisk (*) is coded instead of a CSECT name, the CSECT in effect for the location of the current patch statement is used.

comments

follow the last required parameter and its blank delimiter; the rest of the control statement space can be used for comments.

JES2 Patch Name	AMASPZAP Patch Name	CSECT Referenced
ABS	HASPABS	Absolute Storage Location
ACCT	HASPACCT	HASPACCT
COMA	HASPCOMA	HASPCOMA
COMM	HASPCOMM	HASPCOMM
CON	HASPCON	HASPCON
INIT	HASPINIT	HASPINIT
MISC	HASPMISC	HASPMISC
NUC	HASPNUC	HASPNUC
PRPU	HASPPRPU	HASPPRPU
RDR	HASPRDR	HASPRDR
RDRO	HASPRDRO	HASPRDRO
RSCN	HASPRSCN	HASPRSCN
RTAM	HASPRTAM	HASPRTAM
SSSM	HASPSSSM	HASPSSSM
SSVT	HASPSSVT	Subsystem Vector Table
XEQ	HASPXEQ	HASPXEQ

Figure 6-1. Patch Name to CSECT Reference

The following are examples of JES2 Patching facility statements:

```

*
*           CORRECT PROGRAMMING ERROR IN HASPRDR
*
VER RDR      1E2 41E00001          VERIFY INSTRUCTION
REP *        1E2 4590B258          BAL TO PATCH SPACE
VER NUC      258 B258,B25A,B25C,B25E,B260  VERIFY PATCH SPACE
REP *        258 41202000          ADD INSTRUCTION
REP *        *   41E00001          REPLACE INSTRUCTION
REP *        *   07F9              RETURN
*
*           CORRECT BAD ADDRESS CONSTANT IN HASPPRPU
*
VER PRPU     32E 58F0C65C          VERIFY INSTRUCTION
REP *        330 B264              MODIFY DISPLACEMENT
VER NUC      264 B264,B266          VERIFY PATCH SPACE
REP *        264 00000520 (PRPU)    ADDRESS CONSTANT
*
*           MODIFY BLOCK CHARACTER TABLE TO SLASH
*           THE LETTER Z (POSITION 26) AND THE NUMBER ZERO
*           (POSITION 27) ON OUTPUT SEPARATORS.
*           -A TABLE ENTRY IS 24 BYTES LONG-
*
BASE PRPU    3580      BASE ON TABLE BLOCKA IN HASPPRPU
VER *        270 FFF0FFF0060000C0018003000600  SLASH
REP *        27A                                1FC01FC0  Z
*
VER *        288 3FC07FE0C030C030C030C030      SLASH
REP *        288 3FC07FE0C0F0C1B0C330C630      NUMBER
REP *        *   CC30D830F030E0307FE03FC0      ZERO
*
*           CHANGE MODEL Pddb IN HASPRDR
*           TO USE DEFAULT UCS OF P11
*
BASE RDR     0C98      BASE ON MODEL Pddb AT RPDBMODL
VER *        20 5C5C5C5C      CHANGE '*****'
REP *        20 D7F1F140      TO 'P11'

```

AMASPZAP Patch Statement Formats

Two statements are required for defining an AMASPZAP patch. Their formats are the same as the formats of the control statements for the OS/VS2 AMASPZAP service aid. The first statement defines what module you want to change; the second statement defines what change you want made to the module.

The first statement indicates the control section that is to be the object of subsequent operations. The format of this section is as follows:

NAME member csect comments

NAME

specifies a keyword that must be coded.

member

specifies the member name on the AMASPZAP control statement. This field is ignored on an AMASPZAP patch statement, but must be provided for compatibility with the AMASPZAP control statement.

csect

specifies the control section (or control block) in which the data to be verified or modified is resident. While this field is optional on the AMASPZAP control statement, it is required on the AMASPZAP patch statement. Figure 6-1 contains a list of the possible CSECTs which can be coded.

comments

following the last required parameter and its blank delimiter, the rest of the control statement space can be used for comments.

The second statement is used to indicate what operation is to be performed. The format of this section is as follows:

operation offset data comments

operation

specifies the operation to be performed as follows:

REP

The data on the statement replaces the data at the offset into the CSECT specified on the previous NAME statement.

VERIFY**VER**

The data on the statement is compared with the data at the offset into the CSECT specified on the previous NAME statement. If the data does not compare, an error message is displayed in the parameter library list data set.

BASE

The base used to adjust offset values that are to be specified in any subsequent VERIFY and REP statements is to be modified. This statement should be used when the offsets given in the VERIFY and REP statements for a CSECT are to be obtained from an assembly listing in which the starting address of the CSECT is not location zero. The *data* parameter on the BASE statement is ignored and may be omitted.

offset

specifies the hexadecimal displacement of the data to be verified or modified in the specified CSECT. This displacement does not have to be aligned in any way and can consist of two, four, or six digits.

data

specifies the bytes of data that are to be verified or modified at the specified location. As with the offset parameter, the number of bytes of data defined must be specified as a multiple of two hexadecimal digits. If desired, the data within the parameter may be separated by commas (never blanks), but the number of digits between commas must also be a multiple of 2. If all the data will not fit into one AMASPZAP statement (71 bytes), another AMASPZAP statement must be used.

comments

follow the last required parameter and its blank delimiter, the rest of the control statement space can be used for comments.

JES2 PTF Map

During initialization, JES2 constructs a PTF map. With this map, the user can identify from a dump which APAR fixes have been applied to the system. The map consists of 128 bits. When a PTF is generated, the corresponding APARs are assigned to unique bits. Part of the fix for an APAR is code that turns on the map bit that represents that APAR.

Time-Sharing Logon and Started Task Flow

Time-sharing logon and started system tasks appear to JES2 as special forms of jobs that are received from designated internal readers. These jobs are queued in special job classes (TSU and STC) and are assigned a message class that is set during JES2 initialization (TSUMCLAS and STCMCLAS). They are presented to the converter with parameters (\$RDROPSU or &RDROPST) established during JES2 initialization.

The time-sharing message class (TSUMCLAS) becomes the output class for all dynamically allocated SYSOUT data sets for which a class is not specified, and becomes the message class for all submitted jobs with no MSGCLASS parameter in the JOB statement.

Time-sharing users can dynamically allocate data sets, dynamically deallocate them (spinoff), and print them at the time-sharing terminal (OUTPUT command).

Multi-Access Spool

Previous sections have described JES2 functions on a single system (uniprocessor, MP158, or MP168) operating under a single copy of the MVS control program. It is also possible to operate from two to seven such systems (each a uniprocessor or MP) as members of a multi-access spool configuration, as shown in Figure 6-2.

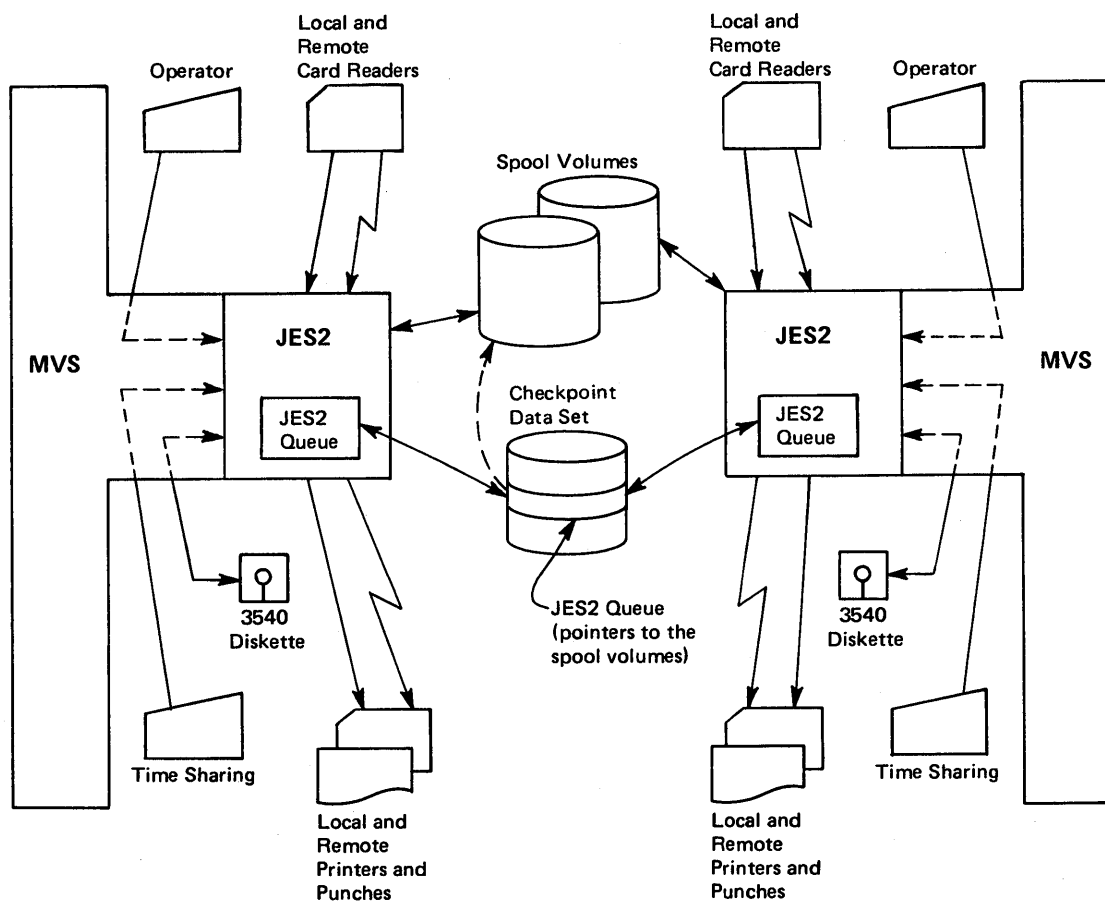


Figure 6-2. Two-System Shared JES2 Configuration

The operation of each system in the configuration is independent and includes all functions previously described for single JES2 systems. That is, each JES2 system can read jobs from local and remote card readers, schedule jobs for conversion and execution under MVS initiators, print and punch results at local and remote output devices, and communicate with operators and time-sharing users. However, all spool volumes and the volume containing the SYS1.HASPCKPT data set are used by all system in the configuration.

The systems logically share a common JES2 queue. The workload may be balanced among systems by allowing jobs to be executed on whatever system has an idle initiator with the correct class, and print or punch on whatever system has an idle device with the correct class, routing, setup, and other requirements.

Because all systems are functionally the same, if one system in the configuration fails, the others may continue processing from the common queue. Only work in process on the failed system is interrupted; this work may be recovered by a warm start of the failed system while other systems continue processing, or, as explained later, by operator command on one of the other systems.

Shared DASD hardware features (two channel switch, two channel switch additional, and string switching) are used to access data on all spool and checkpoint volumes. A copy of the JES2 queue and other status information (for example, spool space allocation maps) is written to the SYS1.HASPCKPT data set for possible warm start, as with a single JES2 system. This information is available to all systems, one at a time, as needed. RESERVE/RELEASE channel commands are used to prevent simultaneous referencing and updating of information kept in the SYS1.HASPCKPT data set.

Each system in the configuration must have at least one channel path to each spool and checkpoint volume, and these devices must be specified as SHARED during MVS system generation. It is recommended that each CPU of an MP158 system in the configuration have a channel path to each shared volume.

Configuration

To use the multi-access spool feature, the initialization parameters &SPOOL and &CHKPT must specify the same volumes for all systems in the configuration. To make the common spool and checkpoint data compatible, all systems must also specify the same values for the &BUFSIZE, &NUMDA, &NUMTGV, &MAXJOBS, &MINJOES, &NUMJOES, &TCELSIZ, &RECINCR, &NUMRJE, and &SPOLMSG initialization parameters. Because the default values calculated for &NUMJOES, &NUMRJE, &MINJOES, and &SPOLMSG are configuration dependent, an inconsistency may inadvertently be introduced if these parameters are not specified explicitly at initialization.

For operational consistency, it is recommended that the &TGWARN, &XBATCH, and &XBATCHN initialization parameters be specified the same in all systems of the configuration.

It is also recommended that local unit record devices and RJE lines be given unique JES2 device names over the whole configuration. The &NUMLNES, &NUMPRTS, &NUMPUNS, and &NUMRDRS initialization parameters of each JES2 system should be specified as the total number of each type of device in the configuration. This allows all devices to be attached to one system (with appropriate manual switching) if other systems are not operational.

Similarly, the LINE_{nn}, PRINTER_{nn}, PUNCH_n, and READER_n initialization parameters should be set so that a device has the same name no matter which system it is attached to. For example, if a 3211 printer is one of four local printers on a two-system configuration, it could be initialized as:

```
PRINTER4 UNIT=102
```

for one system and:

```
PRINTER4 UNIT=302
```

for the other, if it were attached to different channels on the two systems.

A local unit record device or RJE line can only be attached to one system at any instant. JES2 initialization detects devices that are not online and places them in a DRAINED state. Later, the device may be activated by entering the \$P device and VARY OFFLINE commands on the system to which it is attached, performing hardware switching, then entering the VARY ONLINE and \$\$ device commands on the new system. The \$\$ command will fail if no hardware path exists.

The &NUMRJE initialization parameter must be the same in all systems of the configuration, as previously described. This parameter represents the total number of RJE lines known to the entire configuration. Each RJE line must have a unique name, no matter which system it is attached to. Therefore, the RMT_{nnn}, R_{nnn}.RD_m, R_{nnn}.PR_m, and R_{nnn}.PU_m initialization parameters should be specified the same in all JES2 systems of a multi-access spool configuration.

Starting the Multi-Access Spool Configuration

Before the configuration is started, the TOD clocks on each system should be carefully synchronized with a single time source. Because this synchronization is externally performed and subject to error, the initialization parameter &SYNCTOL is provided to specify the maximum error (in seconds) which JES2 should assume. If the synchronization error is actually greater than &SYNCTOL, then JES2 will not be able to detect certain illegal operator actions (for example, performing cold start with other systems active). On the other hand, certain legal operator actions (for example, warm start after system failure) may be disallowed if attempted before &SYNCTOL seconds have elapsed since system failure.

The members of the configuration are specified by the S_n initialization parameters. For example:

```
S1 SID=K158  
S2 SID=L168
```

defines a two-system configuration where K158 and L168 are the SMF system IDs set during IPL of the systems. One system must initially do a cold JES2 start with no other systems active and must define all members of the configuration. Other members join operation by warm start and must also specify identical S_n parameters. A cold start is required to change or add members of the configuration. If only one or no S_n parameter is specified, JES2 operates as a single system.

There are three types of warm starts:

- If a warm start is specified by the operator and JES2 detects that no other members of the configuration are active, after operator confirmation a total configuration warm start is performed. New spool volumes may be added, all in-process work is recovered, and all unused spool space is accounted for, as in single system operation.

- A warm start is performed when warm start is specified and other members of the configuration are active. The warm-starting system joins the active configuration and recovers only work in-process on the system at the time of a failure, if any. No spool volumes may be added.
- Restart for another system is performed when a system has failed and cannot be immediately warm-started. The operator enters the \$ESYS command on any active member of the configuration. In-process work on the specified system is recovered and made available for selection by other members of the configuration, subject to system affinity for execution restart as discussed later under "Job Submission and Queuing."

The algorithm for using the common JES2 queues and other information in the SYS1.HASPCPKPT data set is determined by the &MINHOLD, &MINDORM, and &MAXDORM initialization parameters. These need not be the same for all systems in the configuration and should be set according to characteristics such as the number of members in the configuration relative CPU speeds, and response requirements. See Chapter 3 for details.

Job Submission and Queuing

In a multi-access spool configuration, jobs enter the common queue from any input source (local or remote) attached to any system in the configuration. Unless special actions are taken, jobs are eligible for execution in any system in the configuration, selected by priority and the classes of idle initiators as in single-system operation. Started tasks and TSO users are an exception: they are executed only in the system in which they are entered. However, job queue entries also contain a system affinity for up to seven systems on the maximum configuration and may contain an independent mode affinity.

Individual jobs may be given affinity to one or more systems (less than the total configuration) and may be given affinity for independent mode by the SYSAFF= keyword on the /*JOBPARM card. Any input device (local or remote) may be set by the \$T command to give system and/or independent mode affinities to all jobs read from that device. The /*JOBPARM card overrides the input device default.

If a job's affinity is to specific systems in the configuration or to independent mode, the job can be selected only by the system specified and only if the mode of the system (independent or not) matches that of the job.

System affinity may be useful for special processing requirements (for example, emulation) not available on all system of the configuration. Independent mode may be useful for testing new components with selected jobs while in a shared configuration.

The display commands (\$DA, \$DN, \$DQ, \$DJ) indicate (by SMF system ID) the system in which a job is active or the system(s) eligible to process a queued job. The \$T J and \$T ALL commands permit affinities of jobs or all jobs with given affinity to be changed. The \$T SYS command allows a system to be placed in independent mode. The \$L SYS command displays the states of all systems in the configuration.

If a system fails and jobs in execution are recovered and requeued for automatic restart either by a warm start or the \$ E SYS command, those jobs are given affinity only to the failed system. If the failed system is unavailable, the operator may change affinity with the \$T J or \$T ALL commands to attempt restart on another system.

Priority aging is done only by the lowest numbered active system in the configuration.

Duplicate job name protection extends to all systems; that is, if a job name matches another active in execution anywhere in the configuration, the job is temporarily delayed. See the TSO section that follows.

Output

Printed and punched output processing differs very little from single-system operation. System affinity does not apply to selection of work from the JOEs.

Output work is selected by eligible devices, no matter to which system in the configuration devices are attached. Selection criteria are output class, routing (local or remote number), and set up just as in single systems. The automatic setup algorithm, which prevents the same special forms from being requested for more than one local printer, operates for all local printers in the configuration.

The \$CJ command entered from any system in the configuration cancels a job active on an input or output device attached to another system.

RJE

Configuration for RJE lines was discussed previously (see "Remote Line and Device Configuration" in Chapter 4).

JES2 ensures that the same remote terminal number cannot sign on more than one line anywhere in the configuration at any given time. For dedicated lines, the user must ensure this uniqueness by proper setting of line and remote initialization parameters as previously described.

The remote operator message queue operates across the entire configuration. That is, any remote operator can send messages to any other remote (even if attached to different systems) and any central operator can send a message to any remote.

TSO

TSO user IDs are job names to JES2 and, in a multi-access spool configuration, the duplicate job name protection extends across the configuration. A TSO logon is rejected if a user of the same ID is logged on elsewhere in the configuration.

Jobs submitted by TSO users may be executed anywhere in the configuration, subject to affinities as previously discussed. However, held output data sets are accessible by the TSO OUTPUT command by the submitting user regardless of where logged on or where the job executed. Messages produced by NOTIFY are also returned to wherever the TSO user is logged on or to where the job was submitted from, if the user is no longer logged on.

SMF

The SMF type 26 record contains system IDs indicating which systems in the configuration performed each major function of processing for a job: input, conversion, execution, post-execution, breaking into output elements, and purging.

The SMF type 6 records contain the ID of the system that processed each element of output work.

CHAPTER 7. JES2 PERFORMANCE

This chapter describes four aspects of JES2 performance:

- Factors affecting JES2 performance
- How the operator can control the batch job work load
- Comparison between HASP II Version 4.0 and JES2 performance factors
- Changing the JES2 property “nonswappable” to “privileged”

For related information, such as discussion of job output elements (JOEs) and the use of job classes under JES2, refer to Chapter 4. Additional information on JES2 output facilities, the external writer and JES2/HASP differences is discussed in Chapter 4 of the *OS/VS2 Conversion Notebook*.

JES2 Performance Factors

JES2 performance depends on the careful specification of at least four initialization parameters (&BUFSIZE, &NOPRCCW, &NUMJOES, and &NUMCMBS), page alignment of JES2 CSECTs, the allocation of sufficient spool space, selection of the spool device(s), and using unblocked records for SYSIN and SYSOUT data sets.

&BUFSIZE Parameter

This parameter specifies the size in bytes of each JES2 buffer. The two recommended values of &BUFSIZE are a compromise between best performance and optimum device utilization:

- Value of 1960 for spool volumes on 2314. This value becomes a half page. (A full page wastes spool space and will likely increase seek time significantly.)
- Value of 4008 for spool volumes on 3330. This value becomes a full page, which allows three records per 3330 track.

Note: The 2305 fixed head device is not recommended for holding buffers.

Avoid reducing the buffer size below 1960, since the CPU time to print the buffers will increase. Larger &BUFSIZE values increase performance by requiring increased blocksize. However, avoid increasing buffer size excessively, since buffers are not allowed to cross page boundaries. A value of 4008 is the maximum.

&NOPRCCW Parameter

This parameter specifies the maximum number of channel command words per channel program for local impact printers. The value should be so chosen that all print lines in a spool buffer can on average be printed with a single channel command. You can compute this value from the formula:

$$\&NOPRCCW = \&BUFSIZE \div \text{average line length}$$

Estimate the average line length, allowing for truncation of trailing blanks by JES2.

If the value is too small, the CPU time for printing increases. If, on the other hand, the value is grossly overspecified, the size of the address space increases, requiring more page space and potentially more page faults.

&NUMJOES Parameter

This parameter specifies the number of job output elements (JOEs) to be generated for the queuing of work for printers and punches. If the value is set too small, jobs wait a considerable time to be eligible for printing or punching. If the value is set too large, the

size of the address spaces increases (because job output elements are in virtual storage), and the CPU time and the number of page faults needed to search the elements will increase. The default value is 10 times the maximum number of printers and punches, both local and remote. This value should keep printers and punches busy without tying up too much virtual storage. As a rough approximation, you can determine the starting value as 2N JOEs per job, where N is the number of output classes per job. (For further discussion of the factors affecting the number of job output elements, see Chapters 3 and 4.)

&NUMCMBS Parameter

This parameter specifies the number of message buffers for JES2. A value of 24 can serve as a starting value. If it proves too small, it can be increased in multiples of 24. If the value is too small, the system is slowed because console messages must wait for buffers. If the value is too large, too much common service area (CSA) virtual storage becomes allocated and is thus unavailable for other uses. As a rough approximation, estimate the value for &NUMCMBS as:

$\cong 2$ times &MAXPART + the number of typically active readers (local, remote, and internal)
+ the number of typically active printers and punches (local and remote).

Primary JES2 Spool Volume

If the primary JES2 spool volume (&SPOOL JES2 initialization parameter) is not mounted and ready when JES2 is started, a message is issued to request mounting the volume, and JES2 is terminated. Because the requested MOUNT command processing requires that JES2 be already initialized, the mounting operation is not possible unless the operator makes the spool volume ready and reloads the system. To avoid this situation, you should include an entry (that specifies the required spool without suppressing the mount option) in the VATLSTnn member of SYS1.PARMLIB. VATLST processing will then request volume mounting as part of the IPL process.

Page Alignment of JES2 Control Sections

Alignment of the HASPINIT CSECT on a page boundary is no longer mandatory, although it is recommended. The alignment is handled through the linkage editor. Further improvement is possible by aligning the other JES2 modules so that CSECTs do not cross page boundaries. By this process, page faults can be minimized during JES2 execution.

Allocation of Sufficient Spool Space

JES2 allocates spool space for a job by dividing each spool volume into *track groups*. A track group is a group of DASD tracks whose size is indirectly specified by the &NUMTGV parameter. (The &NUMTGV parameter specifies the number of track groups per volume, from which JES2 calculates the track group size). JES2 allocates to a job one track group at a time. When a given track group is exhausted, the next track group that is allocated is the closest one to the last one used. Seek time is therefore minimized.

As a rough approximation, you can compute spool space by noting that a 2314 pack can hold approximately 200,000 lines of output, plus normal input. A 3330 pack can contain approximately 700,000 lines of output, plus normal input. (These figures assume that an output line contains 120 non-blank characters.) If sufficient spool space is not allocated, performance will degrade, since jobs will periodically have to wait for spool space.

Division of Tracks

The tracks on a spool volume are divided into *track cells*, which are sets of JES2 buffers, or track records, grouped together in a logical order on a spool volume. The initialization parameter &TCELSIZ indicates the number of records in each track cell. When used in despooling, each track cell that is to be sent to a printer, rather than each record, can be taken from the spool volume in one operation.

To use this track-cell method, however, you must specify the track-cell characteristic for the data set involved by means of the `$$$x` initialization parameter. You must also specify this characteristic for the printer by means of the `PRINTERnn` parameter. Both the 3800, a nonimpact printer, and impact printers can have the track-cell characteristic.

The track-cell method of despooling can affect the efficiency of both the system and the printers. The buffers for a printer with the track-cell characteristic, as well as the channel program used to send the data from the buffers to the printer, are fixed in real storage. This storage is not used for anything but sending output to the printer; thus, the amount of paging necessary in the system's operations is reduced. (The size of this fixed storage area depends on the size of each buffer specified in the `&BUFSIZE` initialization parameter.)

High-speed printers like the 3800 operate more efficiently with the track-cell method because they do not have to wait while a channel program is constructed to send output to the printer. With the track-cell method, the print processor constructs the channel program at the same time as the despooling of a track cell; thus, when the printer finishes an operation, the print processor can send the next track cell immediately and start constructing the channel program for the next track cell.

Spool contention may also be reduced for printers when the track-cell method is used. When several print processors are taking records from the same spool volume, each print processor removes a track cell, rather than one record at a time. This method reduces both the number of times each print processor must get access to a spool volume and the amount of arm movement needed to remove the records that the print processor needs.

Specification of `&TCELSIZ` can potentially leave short track cells at the end of each track. These track cells will be allocated to data sets of a `SYSOUT` class that does not have the track-cell characteristic (`NOTRKCEL` was specified on the `$$$x` parameter). For data sets with the track-cell characteristic (`TRKCEL` was specified), however, these short track cells will only be used if the number of records in the cell is at least half the value specified for `&TCELSIZ`. If it is not, these track cells may be wasted within that job's track group.

If the short cells are allocated to a track-cell data set, performance varies during print processing because the number of records eligible to be despoiled changes dynamically. Specification of `&TCELSIZ` ideally should divide evenly into the number of records on all spool devices.

When choosing a value for `&TCELSIZ`, note that during print processing the value specified for `&TCELSIZ` is also the number of JES2 buffers that will be fixed into real storage (twice as many are fixed when `&PRTBOPT=YES` is specified); these pages will not be available to the rest of the system for the duration of the output. These buffers would normally be fixed by the MVS I/O supervisor during print processing; however, to reduce the overhead of constantly fixing and freeing these pages, JES2 leaves them fixed.

Selection of Spool Devices

The three types of JES2 spool volumes are the primary spool volume, secondary spool volume, and checkpoint spool volume. The primary spool volume contains:

- JES2 control blocks
- Job input and output data
- Spool message queue records (for remote terminals)

The secondary spool volume contains:

- JES2 control blocks
- Job input and output data

The checkpoint spool volume contains the checkpoint records (which were formerly located on the primary spool volume). These records are in the data set SYS1.HASPCKPT.

When selecting devices for spools, consider that the volume(s) which contain job input and output data should preferably go on one or more 3330s. This device type has reasonable speed, rotational position sensing and good capacity. For best performance it is desirable to dedicate spool volumes (that is, don't share a volume with paging data sets or other non-spool data sets), so that JES2 can do ordered seeks. If there is more than one spool device, they should be put on separate channels. The channel need not be dedicated, however, since JES2 channel utilization is low.

Because the checkpoint records are in a separate data set, the space allocation for spooling can be evenly spread across the primary and secondary spool volumes. This space is defined as the first extent of SYS1.HASPACE on each of the spool volumes. Note that this space on the primary spool volume must be sufficient to provide for the spool message queue records. The &BUFSIZE parameter defines the length of each record. The spool message queue record area is calculated as &SPOLMSG × &NUMRJE.

The checkpoint data set, SYS1.HASPCKPT, should be located on a high speed direct access device with low activity to improve performance. The JES2 initialization parameter, &CHKPT, indicates the volume serial number of the checkpoint volume. The checkpoint data set should be allocated as a single extent within one cylinder. JES2 uses only the first extent. For further information about space allocation refer to the description of SYS1.HASPCKPT in Chapter 2.

Use of Unblocked Records for SYSIN and SYSOUT Data Sets

If the installation is using BSAM, it may be undesirable to specify that SYSIN and SYSOUT data sets be blocked. Otherwise, the SAM Compatibility Interface will increase overhead by unnecessarily deblocking and blocking sets.

Held Internal Readers in JES2

All internal readers are treated as a single facility. Thus, if one internal reader is held, all are held. This can be particularly troublesome if TSO users are submitting jobs and the network operator has held the internal readers. This can be overcome by one of these operating techniques:

- All jobs submitted through an internal reader can be assigned a class and that class can be held by means of a JES2 parameter library entry or the \$HQn operator command.
- Jobs submitted through an internal reader can use the TYPRUN=HOLD parameter or the TYPRUN=JCLHOLD parameter on the JOB card.
- Jobs submitted through an internal reader can be individually held with the \$H J operator command.

How the Operator Can Control the Batch Job Work Load

It may be a good idea to always have more batch jobs initiated and more time sharing users logged on than the number of address spaces that will fit together in real storage. The purpose of such over-initiation is to allow the system resources manager (SRM) a

varied mixture of swapped-out jobs to choose from whenever any resource becomes under-utilized. On the other hand, when a resource becomes a bottleneck, the SRM can remedy the problem by swapping out the heavy resource-using job(s).

From the resource management point of view, swapping an address space out of real storage is an ideal control mechanism, since the associated job immediately stops using the three main system resources—CPU, real storage, and I/O paths. The only resource a swapped-out address space continues to hold is allocated auxiliary storage. Thus, it may be more practical to cause some jobs to be selected, initiated, and swapped out, rather than to have them remain unselected on the job queue.

You may feel that over-initiation may cause less important jobs to compete with and slow up the progress of the more important jobs. However, this concern is addressed by the SRM's Workload Manager, which tries to ensure that individual jobs are processed according to the jobs' PERFORM parameter and related parameters in the IPS.

The operator can ensure that the system resource manager has a sufficient number and variety of jobs to keep the system busy by varying the number of logical initiators and the classes from which they dequeue jobs. The JES2 commands that provide this control are: start initiator, stop initiator, set initiator, and halt initiator (\$s Inn, \$p Inn, \$t Inn, and \$z Inn).

Each logical initiator controls the selection of one job at a time. The maximum number of logical initiators is specified by the &MAXPART parameter. During JES2 initialization, the Innnn-sublist parameter assigns classes to logical initiators. Each initiator is given a status of started or "drained" that is, stopped.

JES2 indirectly causes an address space to be created for each active logical initiator. The operator may activate logical initiators and cause additional batch job address spaces to be created by means of the JES2 Start Initiator command, \$S Inn. The maximum number of logical initiators is limited by the &MAXPART parameter. In a similar manner, the operator may "drain" logical initiators and cause termination of their address spaces by issuing the JES2 Stop Initiator command, \$p Inn.

The operator can deactivate a logical initiator, but not terminate the address space (which will be swapped out), by issuing the halt initiator command, \$Z Inn. Some time is saved, since the address space need not later be recreated through the start initiator command, \$S Inn.

The four commands useful in controlling batch job workload are summarized in Figure 7-1. For syntax information regarding the \$T, \$S, \$P, and \$Z commands, refer to *Operator's Library: OS/VS2 JES2 Commands*.

Comparison of HASP II Version 4.0 and JES2 Performance Factors

JES2 performance factors in MVS are compared with similar factors in HASP II Version 4.0 under VS2 Release 1.

Fixed Storage

HASP II Version 4.0 fixes a minimum of three pages to satisfy EXCP requirements of VS2 Release 1. It also fixes space for commonly used control blocks.

Desired Function	JES2 Operator Command
Control the number of batch jobs that are executable at the same time by assigning classes from which these jobs can be selected.	Set Initiator: \$T Inn
Activate logical initiators and cause creation of additional batch job address spaces.	Start Initiator: \$S Inn
Stop ("drain") logical initiators and cause termination of batch job address spaces.	Stop Initiator: \$P Inn
Inactivate a logical initiator, without terminating the address space.	Halt Initiator: \$Z Inn
<i>Note:</i> The initiator identifier nn represents a one-character or two-character ID. Some examples are 1, 2, cd.	

Figure 7-1. JES2 Commands Useful in Controlling the Batch Job Work Load

JES2 fixes two pages of its load module, and additionally obtains storage from fixed subpool storage for JES2's event control block (ECB) and for the SRB/IOSB needed for RELEASE of the checkpoint volume. Pages are also fixed for I/O.

Region Size

A large part of JES2 is common with HASP II Version 4.0. Changes in the size from the HASP region are not expected to introduce noticeable performance changes.

Checkpoint Records

Checkpoint records are not compatible between HASP II Version 4.0 and JES2. Therefore neither HASP II Version 4.0 nor JES2 can be warm-started from the other's spool pack.

Spool I/O

HASP II Version 4.0 uses pseudodevices to process SYSIN and SYSOUT data sets. A cross-region POST is issued for I/O when a buffer is full. Spool I/O is organized to minimize seek time.

In JES2, spool I/O is from the job's address space. Pseudodevices are not needed. No cross-region POST is needed. Task switching time is reduced. Spool I/O also minimizes seek time if the secondary spool volume is not shared with non-spool data sets.

Changing JES2 Property from Nonswappable to Privileged

In the generated system, JES2 is automatically marked *nonswappable* in the program properties table. Under the following conditions you may improve performance by changing the JES2 attribute from *nonswappable* to *privileged*.

You should consider this modification only if your installation's job stream has *both* these traits:

1. Batch jobs only, *and*
2. Extended periods during which jobs are neither read in, scheduled, nor written out.

Do not make JES2 *privileged* if you plan to do any remote processing, either conversational or remote batch.

By making JES2 privileged, you can cause the system to swap out JES2, if no JES2 activity has occurred in a 10-second interval. Such swap-out would permit swap-in of a job step awaiting real storage availability.

The disadvantage of this modification is a short delay to swap in JES2 when it is needed; that is, during Job Select, or when the operator issues a JES2 command, a START command, or a MOUNT command, or when an internal reader is allocated.

The method by which you can modify entries in the program properties table is described in *OS/VS2 System Programming Library: Job Management*.

Questions from JES2 Users

The following questions have been asked by JES2 users.

Does JES2 support FCB loading for System/360 or System/370 remote stations?

If FCB loading capability is indicated for a remote printer through the JES2 Rnnn.PRM initialization parameter, the same FCB image that would have been loaded locally is transmitted to the remote station. If the related printer is 3211, the image is loaded as received by the remote station. If the related printer is a 3203 or 5203, the FCB image is stripped of its indexing byte before loading. UCS loading, using a stand-alone utility, remains the responsibility of the remote operator.

Can user-written output writers be invoked in MVS?

In MVS JES2 spools all SYSOUT data. The OS/MVT writer has been modified to operate in MVS, and is called an external writer. IBM supplies a procedure, XWTR, which the operator can invoke to start the external writer. All of the documented interfaces for user-written output writers for OS/MVT and OS/VS2 Release 1 still apply to MVS. The external writer requests spooled data sets from JES2, based upon various selection criteria, by means of a formal subsystem interface. User-written separator routine interfaces for the External Writer also remain the same for MVS as with previous OS releases. (Note that JES2 will not process data sets that specified a user-written writer name except by the external writer facility.)

Will the current HASP MULTI-LEAVING work station programs operate correctly with JES2?

Yes, but with some limitations. The HASP Versions 3.1 and 4.0 work station programs can be used with JES2 as a transition aid. The Version 3 System/3 program will operate unpredictably if punch jobs with 4-digit job numbers are sent to it. The Version 3 and 4 System/360 and System/370 programs will operate unpredictably if an FCB image is sent to them. All Version 3 and 4 work station programs will operate unpredictably when the new disconnect control record is sent to them at the end of a session. It is strongly recommended that all work station programs be regenerated from JES2 libraries to realize the benefits of new feature support and to insure that the latest maintenance level is obtained.

Can JES2-supplied MULTI-LEAVING workstation programs be used with prior versions of HASP?

Yes. But certain new functions (for example, signoff control record and FCB support) partly implemented in JES2 are not supported in prior versions of HASP.

Does JES2 support the 3781 punch?

Yes, the JES2 RMTnnn initialization parameter can be used to define a 3780 terminal. Then, if a 3781 punch is attached to the terminal, the NUMPU subparameter should be set to 1.

Should the user specify blocked SYSOUT data?

No, JES2 automatically blocks SYSOUT data. The user should specify DCB parameters on the DD card if the executing program requires them. BLKSIZE, RECFM, and LRECL should indicate unblocked records where possible.

What remote terminal support is currently available for the System/3?

The System/3 MULTI-LEAVING Remote Job Entry Work Station (MRJE/WS) program feature operates under the Model 6 System or Model 10 Disk System (with or without the Dual Programming Feature). MRJE/WS communicates with HASP (Version 3.1 or 4.0) or JES2 over point-to-point (switched or non-switched) communication lines via the BSC Adapter. MRJE/WS supports full MULTI-LEAVING of reader, console input, console output, printer, and punch data streams. A minimum program partition of 8.25K is required.

A variety of physical devices can be assigned to the logical processors, including disk and tape input and output. Individual input and output files need not be defined at program load time, but can be dynamically allocated as required during a session. Individual printer and punch data sets can be directed to tape or disk; or an entire stream can be directed to disk, which facilitates DPF operation and may reduce line connect time.

Hardware configuration and system operation are described in the *IBM System/3 MRJE/WS Support Reference Manual*.

How can you pool remote output devices with JES2?

JES2 supports logical pooling for remote output devices so that the output devices can be used more efficiently. For example, an installation has two or more remote stations physically located in the same vicinity and the user wants to be able to submit jobs through any of them and not be concerned with which one receives the output. Remote work stations 45 and 71 can be pooled by specifying the following JES2 initialization parameter:

```
RMT71 ROUTECDE=45
```

The output routine code of 45 now applies to both stations. Output is returned to either, and the operator at either station can control devices and job output at both stations.

Responses to operator commands are made to the remote station that enters the command unless the response is spooled (message spooling). Spooled responses, like other print data sets, are routed to either station.

GLOSSARY

This glossary defines JES2 terms and other data processing and communication terms used in this publication. For definitions of terms not included in this glossary, see *IBM Data Processing Glossary*, GC20-1699.

IBM is grateful to the American National Standards Institute (ANSI) for permission to reprint its definitions from the *American National Standard Vocabulary for Information Processing* (copyright © 1970 by American National Standards Institute, Inc.), which was prepared by Subcommittee X3K5 on Terminology and Glossary of American National Standards Committee X3. A complete commentary taken from ANSI is identified by an asterisk (*) that appears between the term and the beginning of the commentary; a single definition taken from ANSI is identified by an asterisk after the item number for that definition.

A

address space. The complete range of addresses that is available to a programmer.

allocate. To assign a resource for use in performing a specific task.

automatic mode. The mode of operation in which the setup and selection of jobs on a printer is controlled by JES2 rather than by the operator through the use of operator commands.

B

batch processing. (1) *Pertaining to the technique of executing a set of computer programs such that each is completed before the next program of the set is started. (2) *Pertaining to the sequential input of computer programs or data. (3) *Loosely, the execution of computer programs serially. (4) Under TSO, the processing of one job step in a region, so called because jobs are submitted in a group or batch.

binary synchronous communication (BSC). Communication using binary synchronous transmission.

binary synchronous transmission. Data transmission in which synchronization of characters is controlled by timing signals generated at the sending and receiving stations.

BSC. Binary synchronous communication.

burst. *To separate continuous-form paper into discrete sheets.

C

cataloged data set. A data set that is represented in an index, or hierarchy of indexes, in the system catalog; the indexes provide the means for locating the data set.

cataloged procedure. A set of job control statements that has been placed in a library and that can be retrieved by name.

checkpoint. (1) *A place in a routine where a check, or a recording of data for restart purposes, is performed. (2) A point

at which information about the status of a job and the system can be recorded so that the job step can be restarted later.

cold start. (1) The initialization procedure that causes an operating system to commence operation. (2) Synonymous with initial program load.

D

deallocate. To release a resource that is assigned to a specific task.

dedicated. Pertaining to the assignment of a system resource – a device, a program, or a whole system – to one application or purpose.

dynamic allocation. Assignment of system resources to a program at the time the program is executed rather than at the time it is loaded into main storage.

E

external writer. In OS/VS2, a program that supports the ability to write SYSOUT data in ways and to devices not supported by the job entry subsystem.

F

FCB. Forms control buffer.

forms control buffer (FCB). A buffer that is used to store vertical formatting information for printing, each position corresponding to a line on the form.

H

HASP. Houston automatic spooling program. A computer program that provides supplementary job management, data management, and task management functions such as control of job flow, ordering of tasks, and spooling. See also JES2.

I

impact printer. *A printer in which printing is the result of mechanical impact.

initial program load (IPL). Synonym for cold start.

J

JES2. A functional extension of the HASP II program that receives jobs into the system and processes all output data produced by the job.

job class. Any one of a number of job categories that can be defined. With the classification of jobs and direction of initiator/terminators to initiate specific classes of jobs, it is possible to control the mixture of jobs that are performed concurrently.

job entry subsystem (JES). A system facility for spooling, job queueing, and managing the scheduler work area. See also JES2.

job output element (JOE). Information that describes a unit of work for the HASP or JES2 output processor and represents that unit of work for queuing purposes.

JOE. Job output element.

L

logical unit (LU). The combination of programming and hardware of a teleprocessing subsystem that comprises a terminal.

logoff. (1) The procedure by which a user ends a terminal session. (2) In VTAM, a request that a terminal be disconnected from a VTAM application program.

logon. (1) The procedure by which a user begins a terminal session. (2) In VTAM, a request that a terminal be connected to a VTAM application program.

M

multi-access spool configuration. Two to seven systems sharing the JES2 input, job, and output queues through the use of shared DASD.

P

patch. *To modify a routine in a rough or expedient way.

physical unit (PU). (1) The control unit or cluster controller of an SNA terminal. (2) The part of the control unit or cluster controller that fulfills the role of a physical unit as defined by systems network architecture.

PTF. Program temporary fix.

R

remote job entry (RJE). Submission of job control statements and data from a remote terminal, causing the jobs described to be scheduled and executed as though encountered in the input stream.

remote station. *Data terminal equipment for communicating with a data processing system from a location that is time, space, or electrically distant.

remote terminal. (1) A terminal attached to a system through a data link. (2) In telephony, a terminal attached through a trunk or tieline.

Remote Terminal Access Method (RTAM). A facility that controls operations between the job entry subsystem (JES2 or JES3) and remote terminals.

RJE. Remote job entry.

RMT generation. Generation of remote work stations for remote job entry.

routing. The assignment of the communications path by which a message or telephone call will reach its destination.

routing code. A code assigned to an operator message and used, in systems with multiple console support (MCS), to route the message to the proper console.

RTAM. Remote Terminal Access Method.

RTP. Remote terminal processor.

S

SDLC. Synchronous data link control.

session. (1) The period of time during which a user of a terminal can communicate with an interactive system; usually, the elapsed time from when a terminal is logged on to the system until it is logged off the system. (2) The period of time during which programs or devices can communicate with each other.

setup. The preparation of a computing system to perform a job or job step. Setup is usually performed by an operator and often involves performing routine functions, such as mounting tape reels and loading card decks.

SMF. System management facilities.

SNA. Systems network architecture.

spooling. The reading and writing of input and output streams on auxiliary storage devices, concurrently with job execution, in a format convenient for later processing or output operations.

synchronous data link control (SDLC). A discipline for managing synchronous, transparent, serial-by-bit information transfer over a communication channel. Transmission exchanges may be duplex or half-duplex over switched or nonswitched data links. The communication channel configuration may be point-to-point, multipoint, or loop.

system control programming. IBM-supplied programming that is fundamental to the operation and maintenance of the system. It serves as an interface with program products and user programs and is available without additional charge.

system management facilities (SMF). An optional control program feature of OS/360 and OS/VS that provides the means for gathering and recording information that can be used to evaluate system usage.

system restart. A restart that allows reuse of previously initialized input and output work queues. Synonymous with warm start.

system network architecture (SNA). The total description of the logical structure, formats, protocols, and operational sequences for transmitting information units through the communication system.

T

Time sharing option (TSO). An option of MVT and OS/VS2 that provides conversational time sharing from remote terminals.

TSO. Time sharing option.

U

UCS. Universal character set.

Universal character set (UCS). A printer feature that permits the use of a variety of character arrays.

V

Virtual Telecommunications Access Method (VTAM). A set of programs that control communication between terminals and application programs running under DOS/VS, OS/VS1, and OS/VS2.

VTAM. Virtual Telecommunications Access Method.

W

warm start. Synonym for system restart.

INDEX

- &ADAPT, RMT parameter 126
- &BSPACE, initialization parameter 32
- &BSVBOPT, initialization parameter 33
- &BUFSIZE
 - as performance factor 159
 - initialization parameter 33
- &CCOMCHR, initialization parameter 31,33
- &CCT, RMT parameter
 - for Model 20 121
 - for other than Model 20 126
- &CHKPT, initialization parameter 34
- &CKPTIME, initialization parameter 34
- &CLOCK, RMT parameter 131
- &CMPTYPE, RMT parameter
 - for Model 20 121
 - for other than Model 20 126
 - for 1130 RTP program 131
- &COMP, RMT parameter 135
- &CORESIZ, RMT parameter
 - for Model 20 121
 - for other than Model 20 126
 - for 2922 RTP program 126
- &DEBUG
 - initialization parameter 34
 - RMT parameter 136
- &DELAY, RMT parameter 132
- &DELAYTM, initialization parameter 35
- &DIAL, RMT parameter 136
- &DIAL1, RMT parameter 136
- &DMNDSSET, initialization parameter 36
- &ERRMSGN, RMT parameter
 - for Model 20 122
 - for other than Model 20 127
- &ESTIME, initialization parameter 36
- &ESTLNCT, initialization parameter 36
- &ESTPUN, initialization parameter 36
- &FULLIST, RMT parameter
 - for 1130 loader program 135
 - for 1130 RTP program 132
- &JCOPYLM, initialization parameter 39
- &LINECT, initialization parameter 39
- &LINESPD, RMT parameter
 - for Model 20 122
 - for other than Model 20 127
 - for 1130 RTP program 132
 - for 2922 RTP program 125
- &MACHINE, RMT parameter 127
- &MACHSIZ, RMT parameter
 - for System/3 RTP program 136
 - for 1130 loader program 135
 - for 1130 RTP program 133
- &MAXCLAS, initialization parameter 42
- &MAXDORM, initialization parameter 42
- &MAXJOBS, initialization parameter 42
- &MAXPART, initialization parameter 42
- &MINDORM, initialization parameter 43
- &MINHOLD, initialization parameter 43
- &MINJOES, initialization parameter 43
- &MLBFSIZ
 - initialization parameter 44
 - RMT parameter
 - for Model 20 122
 - for other than Model 20 127
 - for System/3 RTP program 136
 - for 1130 RTP program 133
- &MSGID, initialization parameter 44
- &NIPFCB, initialization parameter 44
- &NIPUCS, initialization parameter 45
- &NOPRCCW
 - as a performance factor 159
 - initialization parameter 45
- &NOPUCCW, initialization parameter 45
- &NUMACE, initialization parameter 45
- &NUMBUF, initialization parameter 46
- &NUMBUFS, RMT parameter
 - for Model 20 122
 - for other than Model 20 127
- &NUMCLAS, initialization parameter 47
- &NUMCMBS
 - as a performance factor 160
 - initialization parameter 47
- &NUMDA, initialization parameter 47
- &NUMINRS, initialization parameter 48
- &NUMJOES
 - as a performance factor 159
 - initialization parameter 48
- &NUMLNES, initialization parameter 48
- &NUMPRTS, initialization parameter 48
- &NUMPUNS, initialization parameter 49
- &NUMRDRS, initialization parameter 49
- &NUMRJE, initialization parameter 49
- &NUMSMFB, initialization parameter 50
- &NUMTANK, RMT parameter
 - for Model 20 122
 - for other than Model 20 127
- &NUMTGV, initialization parameter 50
- &NUMTPBF, initialization parameter 50
- &OUTPOPT, initialization parameter 51
- &OUTXS, initialization parameter 51
- &PADR(n), RMT parameter 128
- &PASSWD, RMT parameter 136
- &PC(n), RMT parameter 137
- &PDEV(n), RMT parameter
 - for Model 20 123
 - for other than Model 20 128
 - for 2922 RTP program 125
- &PN1442, RMT parameter 133
- &PRFOTLW, RMT parameter 133
- &PRIDCT, initialization parameter 51
- &PRIHIGH, initialization parameter 52
- &PRILOW, initialization parameter 52
- &PRIOOPT, initialization parameter 55
- &PRIRATE, initialization parameter 55
- &PRTBOPT, initialization parameter 55
- &PRTCONS, RMT parameter
 - for Model 20 123
 - for System/3 RTP program 137
- &PRTFCB, initialization parameter 56
- &PRTRANS, initialization parameter 56
- &PRTSIZE, RMT parameter
 - for Model 20 124
 - for other than Model 20 129
 - for 2922 RTP program 125
- &PRTUCS, initialization parameter 56
- &PRTYOPT, initialization parameter 56
- &PR1132, RMT parameter 133
- &PR1403, RMT parameter 133
- &PUNBOPT, initialization parameter 56
- &RADR(n), RMT parameter
 - for Model 20 124
 - for other than Model 20 129
 - for 2922 RTP program 126
- &RCOMCHR, initialization parameter 58
- &RDEV(n), RMT parameter
 - for Model 20 124
 - for other than Model 20 129
 - for 2922 RTP program 126

&RDROPSL, initialization parameter 59
 &RDROPST, initialization parameter 59
 &RDROPSU, initialization parameter 59
 &RD1442, RMT parameter 133
 &RD2501, RMT parameter 134
 &RECINCR, initialization parameter 63
 &RJOB OPT, initialization parameter 63
 &RPRBOPT, initialization parameter 75
 &RPRI(n), initialization parameter 75
 &RPRT(n), initialization parameter 76
 &RPS, initialization parameter 76
 &RPUBOPT, initialization parameter 76
 &RTPLORG, RMT parameter
 for 1130 loader program 135
 for 1130 RTP program 134
 &SID, initialization parameter 77
 &SPOLMSG, initialization parameter 77
 &SPOOL, initialization parameter 30,78
 &STC, initialization parameter 78
 &STDFORM, initialization parameter 82
 &SUBMOD, RMT parameter
 for Model 20 124
 for 2922 RTP program 126
 &SYNCTOL, initialization parameter 82
 &S3BSCA, RMT parameter 137
 &S3CMDS, RMT parameter 138
 &S3FORML, RMT parameter 138
 &S3NPUNS, RMT parameter 138
 &S3NRDRS, RMT parameter 138
 &S3OBJDK, RMT parameter 138
 &S3SIP, RMT parameter 139
 &S3TRACE, RMT parameter 139
 &S3XPAR, RMT parameter 139
 &S31442, RMT parameter 139
 &S35424, RMT parameter 139
 &S35471, RMT parameter 139
 &S35475, RMT parameter 139
 &S396COL, RMT parameter 140
 &TCELSIZ, initialization parameter 82
 &TGWARN, initialization parameter 83
 &TIMEOPT, initialization parameter 83
 &TIMEXS, initialization parameter 83
 &TPBFSIZ, initialization parameter 83
 &TPIDCT, initialization parameter 84
 &TRANPRN, RMT parameter 134
 &TSU, initialization parameter 78
 &UADR(n), RMT parameter
 for Model 20 125
 for other than Model 20 130
 for 2922 RTP program 126
 &UDEV(n), RMT parameter
 for Model 20 125
 for other than Model 20 130
 for 2922 RTP program 125
 &WADR(1), RMT parameter 131
 &WAITIME, initialization parameter 84
 &WARNTIM, initialization parameter 85
 &WDEV(1), RMT parameter
 for Model 20 125
 for 2922 RTP program 126
 &WTOSIZE, RMT parameter
 for Model 20 125
 for other than Model 20 131
 &x, initialization parameter 78
 &XBATCH, initialization parameter 86
 &XBATCHN, initialization parameter 86
 &XLIN(n), initialization parameter 86
 &XPARENT, RMT parameter
 for Model 20 125
 for other than Model 20 131
 for 2922 RTP program 126
 &XPRI(n), initialization parameter 87

\$\$x, initialization parameter 85
 account field scan
 description of 97
 exit from 97
 address space, definition of 169
 allocation, definition of 169
 alternate subsystem, example of 31
 AMASPZAP patching statement 14,151
 APAR fixes, identifying applied 152
 ASCII line control characters 41
 automatic commands
 example of processing 147
 limit considerations for 148
 processing of 147-148
 specifying number of active 45
 use in scheduling day's work 147
 automatic mode
 (see also setup mode)
 definition of 169
 description of 108
 printers/punches in 110
 specifying for local card punch 57
 specifying for local card reader 62
 specifying for local printer 54
 specifying for remote card punch 72
 specifying for remote printer 70
 backspace character, specifying 32
 BASE patching statement 149,152
 batch class
 associated with execution batch program 104
 defining 78-81
 batch job
 conversion parameter field for 59
 operator control of work load 162
 sample of generation 10
 batch processing 169
 batch scheduling (see execution batch scheduling)
 binary synchronous communication (BSC) 169
 binary synchronous transmission 169
 BSC remote station
 (see also remote station)
 specifying characteristics of 64-67
 buffering, specifying double
 local card punch 56
 local printer 55
 remote card punch 76
 remote printer 75
 buffers, specifying
 for JES2 33
 number of console message 47
 number of I/O 46
 number of SMF 50
 number of teleprocessing 50
 number required 46
 size of MULTI-LEAVING 44,122
 burst, definition of 169
 burster-trimmer-stacker option 53
 card punch
 local
 (see also local device)
 numbering of 57
 specifying characteristics of 57
 specifying maximum number of 49

remote
 identifying forms for 72
 numbering of 72
 specifying characteristics of 72

card reader
 local
 (see also local device)
 default printer destination for jobs entered at 62
 default punch destination for jobs entered at 63
 numbering of 61
 specifying characteristics of 61
 specifying maximum number of 49

remote
 default printer destination for jobs entered at 74
 default punch destination for jobs entered at 74
 numbering of 73
 specifying characteristics of 73

carriage control tape, specifying
 for local printer 53
 for remote printer 70
 initial 56

cataloged data set, definition of 169

cataloged procedure, definition of 169

channel command words, specifying
 maximum number for local card punches 45
 maximum number for local printers 45

character arrangement table, specifying 45,54

checkpoint
 definition of 169
 intervals for 34

checkpoint data set
 recommendation for 34
 specifying volume containing 34

cold start
 definition of 169
 specifying 24

comment statement 19

completion codes
 for JES2 generation 11
 for RMT generation 142

compression/expansion feature, specifying
 for BSC remote station 65
 for SNA remote station 68

configuration
 internal reader 89
 local device 89
 multi-access spool 154
 remote device 90
 spool 90

console message buffers
 caution in determining number of 47
 number of 47

conversion
 controlling 99
 JCL 99
 parameters 99

conversion parameter field, specifying
 for batch job 59
 for shared task 59
 for TSO logon 59

deallocation, definition of 169

dedication
 definition of 169
 line 90

delay time, specifying 35

demand setup 36,109

DESTID, initialization parameter 35

direct-access volumes, as spool volumes 47

disconnection, remote line 145

distribution libraries
 description of 4
 required 4
 SYS1.AMACLIB 4
 SYS1.AMODGEN 4
 SYS1.AOSH1 4
 SYS1.AOSH2 4
 use in generation 4

double buffering, specifying
 for local card punch 56
 for local printer 55
 for remote card punch 76
 for remote printer 75

dynamic allocation, definition of 169

error flags, description of 28-29

execution
 control 100
 time
 associated with priority 75
 issuing message for exceeding 83
 monitoring 83
 specifying estimation of 36

execution batch scheduling
 associated with job class 81
 description of 101-105
 examples of 105
 job classes for 102
 operations 103
 preparing for 104
 programs used with 102
 specifying 86
 specifying prefix for 86
 submitting input for 102

external writer
 definition of 169
 description of 1,111

FCB
 definition of 169
 for 3211 printer 113
 loading 165
 specifying for local impact printer 53
 specifying for remote printer 70
 specifying for 3800 printer 53
 specifying initial for impact printers 56
 specifying initial for 3800 printers 44

forms control buffer (see FCB)

generating system, use of 4

generation, JES2
 defining data sets for 5-8
 SYS1.HASPACE 8
 SYS1.HASPCKPT 6
 SYS1.HASPOBJ 6
 SYS1.HASPSRC 5
 description of 3-12
 example of input deck for 10
 preparing for 3-4

generation, RMT (see RMT generation)

GENRMT utility program
 description of 4
 use of 142

HASP
 comparison with JES2 performance factors 163-164
 checkpoint records 164
 fixed storage 163
 region size 164
 spool I/O 164
 definition of 169
 former generation parameters 14
 MULTI-LEAVING workstation programs under JES2 165
 HASPDOC, description of 11
 HASPGEN procedure 11

impact printer
 definition of 169
 specifying FCB for 53,70
 specifying print chain for 54,56
 indexing, 3211 printer 113
 initial program load, definition of 169
 initialization 13-87
 controlling 13-23
 data set
 contents of 14
 creating 14
 example of 20-21
 for multi-access spool configuration 14
 description of 2,13
 errors
 correction of 28-29
 values used in case of 29
 occurrence of 25
 options
 format of 22
 specifying 22
 using default 24
 parameters
 (*see also* specific parameter names)
 affecting SNA remote stations 115-116
 conventions used in describing 31-32
 defining data set containing 14
 descriptions of 32-87
 list of 15-18
 initiator, logical
 cataloged procedure 100
 in controlling execution 100
 specifying characteristics of 37
 Innnn, initialization parameter 37
 installing JES2 3-12
 procedures for 9
 internal reader
 configuration 89
 controlling 92
 description of 1,38
 entering job through 91
 held 162
 maximum number of simultaneous job streams in 89
 overcoming held 38
 procedure for using 92
 specifying characteristics of 38
 specifying number of 48
 starting 45
 INTRDR, initialization parameter 38
 I/O buffers, specifying number 46
 I/O relationships, illustration of 1

definition of 169
 generation (*see* generation, JES2)
 HASP MULTI-LEAVING workstations under 165
 identifying to VTAM 41
 initialization (*see* initialization, JES2)
 modifying 11
 MULTI-LEAVING workstation programs under HASP 165.
 nonswappable to privileged 164
 option for monitoring 34
 password for 41
 procedures
 basic 21
 contents of 19
 example of updated 23
 updating 19
 processing 89-113
 specifying characteristics of 13-87
 JES2GEN 9
 job class
 assigning 94
 batch 78
 characteristics of jobs in 94
 definition of 169
 example of assigning 94
 for started tasks 78
 for time-sharing tasks 78
 journal, processing for 79
 log, processing for 79
 number of 94
 parameters for specifying processing in 78
 queuing jobs in 79,81
 specifying characteristics of 78-81
 specifying number of 42
 STC 94
 TSU 94
 job control table (JCT)
 selected fields of 98
 use in accounting field scan 97
 job entry subsystem
 (*see also* JES)
 definition of 169
 primary 30
 job journal, processing for job class 79
 job log, printing for job class 79
 job monitoring 83,100
 job output (*see* output)
 job output copies, specifying number of 39
 job output element (JOE)
 definition of 169
 description of 106
 minimum number of free 43
 number to be generated 48
 required for 48
 job queuing
 by priority 93
 controlling 93
 in multi-access spool configuration 156
 maximum number of jobs in 42
 of held jobs 93
 queue entry 93
 JOB statement
 accounting field scan 63,97
 exit from scan of 97
 support for PRTY parameter on 56
 job submission
 in multi-access spool configuration 156
 multiple 92
 through internal reader 91
 through local devices 91
 through RJE devices 91
 jobs, specifying number of 42
 JOE (*see* job output element)

JCT (*see* job control table)
 JESIIGEN, description of 4,10
 JES2
 application ID for 41
 buffer, specifying size of 33

LETRRIP, description of 4
line
configuration 90
dedicated 66,90,117
nondedicated 117
options for disconnecting 145
passwords for 144
specifying characteristics for BSC remote station 40
specifying characteristics for SNA remote station 40
specifying largest ID number for 48
LINEnn, initialization parameter 40
LIST control statement 19
local device
(see also card punch, card reader, printer)
configuration 89
specifying number of 48-49,89
submitting job through 91
logical initiator
cataloged procedure 100
in controlling execution 100
maximum number defined 42
specifying characteristics of 37
logical line, defining 40
(see also line)
logical unit (LU), definition of 170
logoff
definition of 170
type for SNA remote station 145
LOGOFF command, description of 145
logon, definition of 170
LOGON command, description of 144
LOGON1, initialization parameter 41
LU definition statement, affecting SNA remote station 115-116

manual mode
(see also setup mode)
description of 108-109
printers/punches in 110
specifying
for local card punch 57
for local card reader 62
for local printer 54
for remote card punch 72
for remote printer 47
message buffers, specifying number 47
message class 81,84,108
message ID, specifying 44
messages
number of records reserved for 77
specifying identifier of 44
MSTRJCL, changing 25
multi-access spool configuration
configuration of 154
defining initialization data sets for 14
definition of 170
general description of 153-154
identifying system in 77
job queuing in 156
job submission in 156
lock-out warning time in 85
maximum dormancy in 42
minimum dormancy in 43
minimum queue control interval in 43
output in 157
providing balanced work load among systems 43
recommendation for specifying parameters for 154
remote job entry in 157
SMF in 157
starting 26,155
synchronization tolerance in 82
TSO in 157

MULTI-LEAVING
HASP workstation programs under JES2 165
JES2 workstation programs under HASP 165
RJE workstations supported by JES2 116-117
specifying buffer size 90

NOLIST control statement 19
nonimpact printer (see 3800 printer)

operator commands
entering in job stream 101
identifying in JES2 initialization 33,58
in controlling initial status of devices 19
number of 19
stopping and restarting JES2 19
operator-controlled mode (see manual mode)
output
class assignment 107
class considerations 107
controlling system 105
demand setup 109
destination 110-111
estimated punched card 36
exceeding estimated 51
from JES2 generation 11
from RMT generation 142
held data sets 111
message for exceeded 51
multi-access spool configuration 157
printer/punch operation for 110
queuing 106
routing 110
selection 108
separation 112
setup characteristics of 108
setup defaults used 109
specifying SYSOUT class characteristics for System/3 96-column card 143
using print/punch processor in 106
output writers
discussion of 106
user-written 165

password
specifying for line 41,144
specifying for remote terminal 66
use in RJE 118

patching
CSECT references in 150
definition of 170
description of 148-152
statements for
AMASPZAP 151
description of 14,149
examples of 151
format of 149
rules for coding 149
performance, factors in 159-162
&BUFSIZE parameter 159
&NOPRCCW parameter 159
&NUMCMBS parameter 160
&NUMJOES parameter 159
held internal readers 162
page alignment of control sections 160
primary JES2 spool volume 160
selection of spool devices 161

sufficient allocation of spool space 160
 use of unblocked records for SYSIN and SYSOUT data sets 162
 physical unit (PU), definition of 170
 primary spool volume
 as performance factor 160
 specifying serial number of 78
 print chain
 alias for 1403 and 3211 printers 113
 specifying for local impact printer 54
 specifying for remote impact printer 72
 specifying initial for impact printers 56
 print lines
 maximum number per page 39
 specifying estimation of output 36
 translation of 56
 print train
 alias for 1403 and 3211 printers 113
 specifying for local impact printer 54
 specifying for remote impact printer 72
 specifying initial for impact printers 56
 printer
 local
 numbering of 52
 specifying characteristics of 52
 specifying maximum number of 48
 remote
 numbering of 70
 specifying characteristics of 70
 specifying forms identifier for 82
 PRINTERnn, initialization parameter 52
 priority
 associated with execution time 75
 associated with processing intervals 87
 calculating 95
 job scheduling 95
 output record count associated with 86
 specifying 95
 for jobs entered at local card reader 62
 for jobs entered at remote card reader 74
 for priority aging 52
 priority aging
 limits of 97
 specifying intervals for 55
 specifying priority for 52
 PRIORITY control statement, support for 55
 procedure library, selection 99
 processing
 JES2 2,89-113
 JES2 generation 10
 RMT generation 142
 production batch system, RMT generation 141
 program source modules, changing 9
 IEBUPDTE control cards for 9
 PRTY parameter
 support for 56
 using in job scheduling 95
 PTF
 definition of 170
 map, description of 152
 PU definition statement, affecting SNA remote station 115-116
 punch (*see* card punch)
 punched card output, specifying estimation of 36
 PUNCHnn, initialization parameter 57

 queuing
 job
 by priority 93
 controlling 93
 description of 91
 multi-access spool configuration 156

 of held jobs 93
 queue entry in 93
 output 106

 RDR procedure 92
 reader (*see* card reader)
 READERnn, initialization parameter 61
 record alternation, specifying 63
 remote card punch (*see* card punch)
 remote card reader (*see* card reader)
 remote device 166
 (*see also* card punch, card reader, printer)
 remote job entry (RJE)
 altering sequence of operations 84
 BSC considerations for 116
 configuration of devices 90
 dedicated lines for 117
 definition of 170
 description of 115-146
 in multi-access spool configuration 157
 MULTI-LEAVING workstations supported 116-117
 overview of 115-118
 SNA considerations for 115-116
 specifying line characteristics 40
 specifying number of buffers for 50
 starting 143
 stopping 143
 submitting job through 91
 remote line (*see* line)
 remote printer (*see* printer)
 remote station
 (*see also* BSC remote station, SNA remote station)
 altering the sequence of operations from 145
 components of 90
 control of 90
 definition of 115,170
 numbering of 64
 specifying
 characteristics of BSC 64-67
 characteristics of SNA 67-69
 dedicated line for 66,69
 initialization parameters for 14
 number of card punches at 66,69
 number of card readers at 66,69
 number of definitions for 49
 number of printers at 66,69
 tracking the use of 146
 remote terminal, definition of 115,170
 remote terminal access method (RTAM), definition of 170
 remote terminal processor (RTP) programs
 description of 3
 list of 3
 parameters for 121-140
 procedures for generating 141
 REMOTGEN utility program, description of 4,142
 REPLACE patching statement 149,152
 request unit, specifying for SNA remote station 68
 restarting JES2
 after a system failure 27
 after an orderly shutdown 26
 RJE (*see* remote job entry)
 RMT generation
 completion codes 142
 control cards for 119
 definition of 170
 description of 2,118
 example of input deck for 143
 input deck for 143
 output from 142
 parameters
 (*see also* specific parameter names)
 conventions used in specifying 121

- descriptions of 121-140
 - for the System/3 RTP program 135-140
 - for the System/360 (except Model 20) and System/370 RTP program 126-131
 - for the System/360 Model 20 RTP program 121-125
 - for the 1130 loader program 134-135
 - for the 1130 RTP program 131-134
 - for the 2922 remote work station RTP program 125-126
- specifying 118
- preparing for 3-8
- processing 142
- under a production batch system 141
- update cards 120
- update control cards 120
- RMTnnn, initialization parameter 14,64
- Rnnn.PRm, initialization parameter 70
- Rnnn.PUm, initialization parameter 72
- Rnnn.RDm, initialization parameter 73
- rotational position sensing (RPS), specifying 76
- route code
 - caution in use of 54,58
 - definition of 170
 - specifying
 - for BSC remote station 67
 - for local card punch 58
 - for local printer 54
 - for remote card punch 73
 - for remote printer 71
 - for SNA remote station 69
 - symbolic name for 35
- routing
 - definition of 170
 - output 110
- RPS, specifying 76
- RTAM, definition of 170
- RTP programs (*see* remote terminal processor programs)

- scanning JOB statement, specifying option for 63
- SDLC, definition of 170
- separation
 - print separator 112
 - print separator card 112
- separator page
 - marking for 3800 printer 54
 - number of lines on
 - for local printer 51
 - for remote printer 84
- session, definition of 170
- setup
 - changes in characteristics 110
 - characteristics 108
 - definition of 170
- setup mode
 - (*see also* automatic mode, manual mode)
 - automatic 108-109
 - manual 108-109
- SIGNOFF statement, description of 144
- SIGNON statement, description of 144
- SMF
 - account records for remote stations 146
 - definition of 170
 - in multi-access spool configuration 157
 - number of buffers 50
 - producing type 6 records for job class 80
 - producing type 26 records for job class 80
 - replacing ID for 77
- Sn, initialization parameter 77
- SNA, definition of 170
- SNA remote station
 - (*see also* remote station)
 - compression/expansion feature for 68
 - gaining access to JES2 115-116
 - largest request unit for 68
 - line for 69
 - messages to console 116
 - number of card punches at 69
 - number of card readers at 69
 - number of printers at 69
 - numbering of 67
 - password for 69
 - specifying characteristics of 67-69
 - starting 144
 - stopping 145
 - terminating session for 68
- spool
 - allocation 160
 - configuration 90
 - contention, reducing 160-161
 - devices, selection of 161
 - threshold percentage message for 83
- spool volumes
 - division of 91
 - identification of 90
 - number of 47
- spooling, definition of 170
- SPZAP (*see* AMASPZAP patching statement)
- START command, examples of 30
- started task
 - conversion parameter field for 59
 - defining job class for 78-81
 - discussion of 153
 - specifying message class for 81
- starting JES2
 - after a system failure 27
 - after an orderly shutdown 26
 - discussion of 91
 - for the first time 25
 - in a multi-access spool configuration 26,155
- STCMCLAS, initialization parameter 81
- stopping JES2 91
- subsystems, more than one JES2
 - primary 30
 - restrictions for 30
 - secondary 30
- SUPERZAP (*see* AMASPZAP patching statement)
- suspend mode
 - for BSC remote stations 145
 - for SNA remote stations 145
- synchronous data link control (SDLC), definition of 170
- SYSOUT class
 - matching message class 36
 - maximum number for printer or punch 47
 - specifying for output 107
- SYSOUT data 166
- system control programming
 - definition of 170
 - use of 4
- system management facilities (*see* SMF)
- system restart, definition of 170
- System/3
 - as remote station 117,166
 - RMT parameters for RTP program 135-140
 - 96-column card output 142
- System/360
 - Model 20
 - as remote station 116
 - RMT parameters for RTP program 121-125
 - Model 22
 - as remote station 117
 - RMT parameters for RTP program 126-131
- System/370
 - models as remote stations 117
 - RMT parameters for RTP program 126-131
- systems network architecture (SNA), definition of 170
- SYS1.AOSH1, contents of 4

SYS1.AOSH2, contents of 4
 SYS1.HASPACE
 description of 8
 JES2 use of 90
 location of 8
 requirements for specification of 8
 SYS1.HASPCCKPT
 (see also checkpoint data set)
 as requirement for JES2 91
 contents of 7
 description of 6-7
 location of 7
 requirements for specification of 6
 space allocation for 7
 specifying volume containing 34
 SYS1.HASPOBJ
 cataloging 6
 contents of 6
 description of 6
 requirements for specification of 6
 space allocation for 6
 SYS1.HASPSRC
 cataloging 6
 contents of 5
 creating 3
 defining 7
 description of 5-6
 requirements for specification of 5
 space allocation for 6
 updating source modules in 9-10
 SYS3CNVT, description of 4

teleprocessing buffers
 minimum requirement for BSC 50
 minimum requirement for SNA 50
 specifying 50,83
 teleprocessing line, specifying characteristics of 40
 time-sharing option (TSO), definition of 170
 time-sharing tasks
 defining job class for 78-81
 logon for 59,153
 specifying message class for 84
 track cell
 description of 90,160-161
 method
 description of 160-161
 performance considerations 160-161
 requirements for 82
 specifying
 characteristic for local printer 53
 characteristic for SYSOUT class 86
 size of 82
 track groups, number per volume 50
 tracks, subdividing 91,160-161
 TSO logon, conversion parameter field for 59
 TSUMCLAS, initialization parameter 84

UCS, definition of 170
 universal character set (UCS), definition of 170
 update cards 19
 update control cards
 JES2
 description of 9-10
 rules for 9-10
 use of 9-10
 RMT 120
 utility programs, in required distribution libraries
 GENRMT 4
 JESIIGEN 4

LETRRIP 4
 REMOTGEN 4
 SYS3CNVT 4

VERIFY patching statement 149,152
 virtual telecommunications access method (see VTAM)
 VTAM
 definition of 170
 LU definition statement for 115-116
 PU definition statement for 115-116
 support for SNA remote stations 115-116

warm start
 authorization for 27
 definition of 170
 for journaled jobs 27
 for non-journaled jobs 27
 requeuing jobs for 27
 requirements for 27
 specifying 24

1130
 as remote station 117
 RMT parameters for loader program 131-134
 RMT parameters for RTP program 134-135
 1403 printer, print chain alias for 113
 3211 printer
 indexing for 113
 print chain alias for 113
 3540, writer 112
 3780, support for 166
 3800 printer
 burster option for 53
 improving efficiency of 160-161
 marking separator page for 54
 specifying FCB for 44,53

IBM CORPORATION
NEW YORK, N.Y. 10017
U.S.A. ONLY

IBM

**International Business Machines Corporation
Data Processing Division
1133 Westchester Avenue, White Plains, New York 10604
(U.S.A. only)**

**IBM World Trade Corporation
821 United Nations Plaza, New York, New York 10017
(International)**

GC23-0002-0

This manual is part of a library that serves as a reference source for systems analysts, programmers, and operators of IBM systems. This form may be used to communicate your views about this publication. They will be sent to the author's department for whatever review and action, if any, is deemed appropriate.

IBM shall have the nonexclusive right, in its discretion, to use and distribute all submitted information, in any form, for any and all purposes, without obligation of any kind to the submitter. Your interest is appreciated.

Note: Copies of IBM publications are not stocked at the location to which this form is addressed. Please direct any requests for copies of publications, or for assistance in using your IBM system, to your IBM representative or to the IBM branch office serving your locality.

How did you use this publication?

- | | | | |
|--------------------------|-------------------------------------|--------------------------|------------------------|
| <input type="checkbox"/> | As an introduction | <input type="checkbox"/> | As a text (student) |
| <input type="checkbox"/> | As a reference manual | <input type="checkbox"/> | As a text (instructor) |
| <input type="checkbox"/> | For another purpose (explain) _____ | | |

Is there anything you especially like or dislike about the organization, presentation, or writing in this manual? Helpful comments include general usefulness of the book; possible additions, deletions, and clarifications; specific errors and omissions.

Page Number:

Comment:

Cut or Fold Along Line

What is your occupation? _____

Newsletter number of latest Technical Newsletter (if any) concerning this publication: _____

If you wish a reply, give your name and address:

IBM branch office serving you _____

Thank you for your cooperation. No postage stamp necessary if mailed in the U.S.A. (Elsewhere, an IBM office or representative will be happy to forward your comments.)

Reader's Comment Form


Cut or Fold Along Line

Fold

Fold

First Class
Permit 40
Armonk
New York

Business Reply Mail
No postage stamp necessary if mailed in the U.S.A.

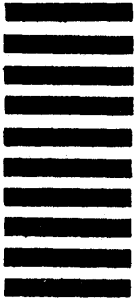

Postage will be paid by:

**International Business Machines Corporation
Department 4F1
18100 Frederick Pike
Gaithersburg, Maryland 20760**

Fold

Fold



**International Business Machines Corporation
Data Processing Division
1133 Westchester Avenue, White Plains, New York 10604
(U.S.A. only)**

**IBM World Trade Corporation
821 United Nations Plaza, New York, New York 10017
(International)**

IBM Corp. 1109 Lincoln St. Armonk, NY 10504